


PART	DISCRIPTION	QUANTITY
Α	Diffuser	1
В	Fixture pan	1

HARDWARE CONTENTS

Note:Not shown to size

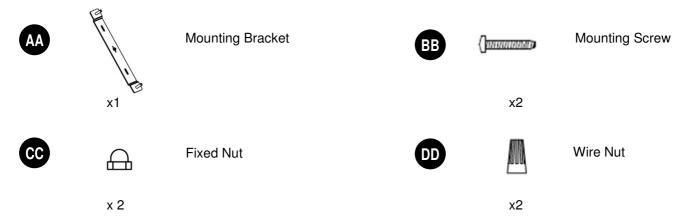

Parameter:

Model.:	3702
Rated voltage	AC 120V,60Hz
Rated power	LED 24W

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

- Do not attempt to install this product while it is plugged in.
- For INDOOR USE ONLY.
- The distance of the Bluetooth speaker connection should be less than 16.4 ft.
- This lamp can not dimming.

Warning: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING

- Consult a qualified electrician if you are not certain about the installation process. Always install wiring connections in accordance with local code, ordinances and the National Electric Code.
- •Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

Caution:

This device complies with Part 15 of the FCC. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.

MPE Reminding

To satisfy FCC RF exposure requirements, a separation distance of 20 cm or more should be maintained between the antenna of this device and persons during device operation.

To ensure compliance, operations at closer than this distance is not recommended.


PREPARATION

Before beginning to assemble or install lighting fixture, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble, install or operate the fixture.


- Estimated Assembly Time: 20 40 minutes (Installation time will vary depending on skill level and existing wiring conditions.)
- •Tools Required for Assembly (not included): Phillips screwdriver, flatheadscrewdriver.
- Helpful Items (not included): step ladder.
- NOTE: This fixture must be installed on the ceiling.

INSTALLATION INSTRUCTIONS


 Turn OFF power to work area at main circuit breaker or fuse box. WARNING: Do not rely on wall switch alone to turn off power.

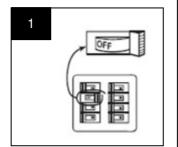


5. Attach the fixture pan (B) to mounting bracket (AA) by using fixed nut(CC).

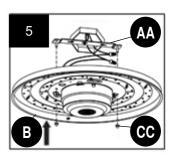


2. Detach the preassembled diffuser (A) from the fixture pan (B) by turning the diffusercounterclockwise.

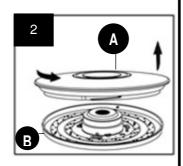

 Attach mounting bracket(AA) to outlet box (not included) with the two mounting screws (BB).

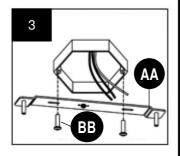


4. Connect ground wire on the mounting bracket. Connect white wire from the outlet box to the white wire from the fixture pan (B) and the black wire from the outlet box to the black wire from the fixture

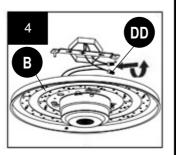


pan (B). Secure connections with wire nuts (DD), then cover wire nuts (DD) with electrical tape (not included). Carefully tuck wires back into outlet box.

Carefully turn the diffuser clockwise until it locks into place.

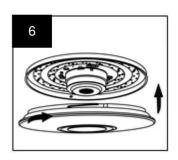

DEBUGGING INSTRUCTION

- 1. The lamphas 2 modes: the full bright mode and the night light mode.
- 2. The full bright mode: turn ON the switch.
- 3. The night light mode: turn ON-OFF-ON in 3 seconds.
- 4. The Bluetooth speaker is always on standby in two modes.

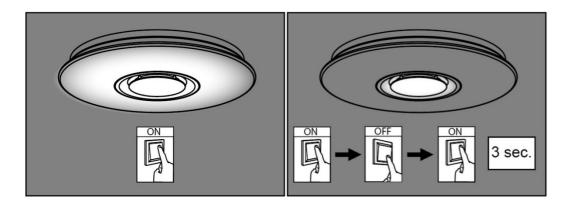

BLUETOOTH SPEAKER INSTRUCTION

Please open the Bluetooth speaker in the following steps:

- 1. Turn on the switch.
- 2. Turn on the Bluetooth on the device, then click the search for available devices.
- 3. Select the "3702 speaker" in the list of available devices, thenconnect.
- 4. After a successful connection, you can use the Bluetooth speaker to play music orradio on your device.
- 5. After playing, open the Bluetooth settings on yourdevice, select "3702 speaker" in the devices list, select disconnect.

NOTE: One Bluetooth speaker can only connect one device.

CARE AND MAINTENANCE

CAUTION:

- •Turn OFF all power to circuit at main circuit breaker or fuse box. DO NOT rely on wall switch alone to turn off power.
- Clean surfaces with a mild, non-abrasive cleaner.
- Total fixture wattage: 24watts; do not attempt to replace the LEDs.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
PROBLÈME	CAUSE POSSIBLE	MESURE CORRECTIVE
PROBLEMA	CAUSA POSIBLE	ACCIÓN CORRECTIVA
Light will not come ON.	 No power to light. There may be a poor connection between the light and supply wires inside the junction box. 	 Check that the circuit/fuse is on and the wall switch is in on position. Check supply wire connections.
Turn on the light is the nightlight mode.	There may be connection problem in the switch.	Check the switch.
Can not into the night light mode.	1. Method error.	After turning on the switch in the first time, turn off and then turn on the switch in three seconds.
Can not connect to the Bluetooth speaker.	 The Bluetooth speaker is connecting with other phone. The Bluetooth feature of the device is broken. The device is too far from the light. 	 Disconnect with other device. Check the device's Bluetooth. Get closer.
There is no sound after connecting.	The device's volume is too small	Turn up the volume of the device.
The speaker has a obvious distortion when playing, and the lamp has a obvious vibration.	The lamp is not installed well.	Check every part of the lamp is fixed.

5-YEAR LIMITED WARRANTY

If this product fails due to a defect in materials or workmanship within five (5) years from the date of purchase, return it along with proof of date of purchase and it will be replaced with the same or comparable model free of charge.

This warranty is void if damage or defect has resulted from accident, abuse, misuse or faulty repair. This warranty gives you specific legal rights and you may have other rights that vary from state to state.

IN NO EVENT WILL LIABILITY EXTEND TO ANY CONSEQUENTIAL, SPECIAL, INCIDENTAL OR INDIRECT DAMAGES OF ANY KIND ARISING OUT OF THE USE OR MISUSE OF THIS PRODUCT. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU

PART	DESCRIPTION	
AA	Mounting Bracket	
BB	Mounting Screw	
CC	Fixed Nut	
DD	Wire Nut	

