

Operation Instruction:

In panel of transmitter , it has 2 buttons. Signification of buttons is: ON, OFF.

1.The general function of buttons:

- a. ON : Press the transmitter key “ON” can turn into active the receiver.
- b.OFF: Press the transmitter key “OFF” can turn into active the receiver.

2.Specification:

Electrical rating: 25VAC 5A resistive, 125VAC 600W Tungsten

Control distance: 60 feet

3.Installation:

- 1, One receiver supplied with transmitter.
- 2, Plug receiver into 3-wire outlet, make sure that the red indicator is lit, then plug the lights or device to be switched into receiver.
- 3, The device must be mounted in a vertical position with the receptacle facing downwards and not reaching the ground level.

4.Battery replacement:

- 1, Move the battery cover from back of transmitter.
- 2, Replace with type CR2032 3V battery.
- 3, Note polarity.
- 4, Dispose of old battery properly.

Caution :

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.