

## **Instruction manual for YLT-6, YLT-6C**

YLT-6, YLT-6C is a set of remote control switch for indoor/outdoor use.

YLT-6 is a receiver and YLT-6C is a transmitter.

### **Specification:**

Electrical rating: 120Vac 60Hz 15A resistive

120Vac 60Hz 8A tungsten

Control distance: 60 feet

### **Installation:**

- 1, One receiver supplied with transmitter.
- 2, Plug receiver into 3-wire outlet, make sure that the red indicator is lit, then plug the lights or device to be switched into receiver.
- 3, The device must be mounted in a vertical position with the receptacle facing downwards and not reaching the ground level.
- 4, Red indicator light is lit when the receiver is "OFF". Yellow indicator light is lit when the receiver is "ON"

### **Operation:**

Press the "ON" button on the transmitter to turn the receiver "ON".

Press the "OFF" button on the receiver to turn the receiver "OFF".

### **Battery replacement:**

- 1, Move the battery cover from back of transmitter.
- 2, Replace with type 23A 12V battery.
- 3, Note polarity.
- 4, Dispose of old battery properly.

### **Notice:**

**Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**