NOKIA CONNECTING PEOPLE



Quick Start Guide

Welcome to the Nokia 6102 phone!

Thank you for purchasing the Nokia 6102 phone. This Quick Start Guide will help you get started with your new device quickly and easily. It is highly recommended that you review the User Guide for detailed information and safety instructions. Use this guide to:

- 🔰 Get familiar with your Nokia 6102 phone
- Install the SIM card
- Install and charge the battery
- > Take pictures and send a multimedia message
- Send an audio message
- Customize ring tones with MP3s



All screen images are simulated.

9240532 Printed in Mexico

Check it out!

(1) Camera lens Lens for taking pictures. (2) Camera release key = Camera release key Press and hold to quickly take pictures. П **③** Infrared Infrared Use to exchange data with other compatible Nokia phones or your compatible PC. (on side) 4 Mini display View the clock and caller ID without opening your phone. (5) Main display 6 Left and right selection keys Press to access the option shown above the key. 7 Integrated speakerphone When the phone is open, press the right selection key during a call and talk handsfree. (8) Volume key In the open or closed position, press up to increase the volume or down to decrease the volume. (9) 4-way navigation key with center selection key (8 Activate camera View your contacts 🖾 Compose a message (1)Diew the calendar 🔟 Talk and End keys 🛛 👢 • Press the Talk key to make a call or to answer an incoming call. Press the End key to end a call, or press and hold to return to the idle screen. (1) Power key (1) Press and hold to turn phone on or off.

Install the SIM card.



Your Nokia 6102 phone uses a convenient SIM card, which holds information about your wireless service and stores contact information. That means you can transfer your service and contacts to your phone simply by inserting your SIM card!

Insert the SIM card

- 1. With the back of the phone facing you, push down the release button on the back cover.
- 2. Slide the cover off in the direction shown (fig. 2.1).
- After removing the battery, open the SIM card holder by pressing the release button and lifting the holder up (fig. 2.2).
- 4. Insert the SIM card with the metal contacts facing down and the beveled edge pointing towards the top of the phone (fig. 2.3).
- 5. Close the SIM card holder.



fig. 2.1





Insert and charge the battery.

The Nokia BL-4C battery is inserted under the back cover. A fully charged battery has up to 4 hours of talk time and up to 350 hours of standby time.

Insert and charge the battery

- 1. Turn the phone off and remove the back cover.
- 2. Insert the battery, gold-colored contact end first, into the battery slot. Then push down on the other end of the battery to snap into place (fig. 3.1).
- 3. Replace the back cover by setting the cover on the phone with the cover tabs aligned with the slots in the phone, then slide the cover toward the top of the phone until it is securely in place.
- 4. Plug the Nokia AC-3 charger into a standard AC wall outlet.
- Connect the charger cable to the bottom of the Nokia 6102 phone.
 Note: If you would like to use a charger from an earlier Nokia phone, you will need the Nokia CA-44 charger adapter (fig. 3.2). You can purchase this from your wireless service provider.

Tip! Allow the battery to fully charge before using your Nokia 6102 phone.

6. After your phone is fully charged, turn it on. You will be prompted to set the time and date.

Recharge the battery

Recharging time is approximately 90 minutes while the phone is in standby mode. While charging is in progress, the battery charge indicator scrolls on the phone display. It stops scrolling when the battery is fully charged.





fig. 3.2 Nokia CA-44 Charger Adapter

Charger

Send an audio message.

Personalize your multimedia messages in a spontaneous and creative way by sending audio messages. An audio message is easy to record and send, and it eliminates cumbersome voicemail systems.

Send an audio message

- 1. From the Start screen, press the center selection key to open the *Menu*. ()
- 2. Scroll and select Audio message (fig. 4.1). (🔲) (📃)
- 3. Press Select to begin recording your audio message (fig. 4.2). (📃)
- 4. When you are finished recording, press *Select* (fig. 4.3). () *Message ready for use* displays.
- 5. Select Send. (📜)
- 7. Enter the phone number, or select *Find* to locate it in your phone book (fig. 4.4).
- Select OK. () Message being sent is displayed.

Note: Only devices that offer compatible multimedia message or email features can receive and display multimedia messages. Content appearance may vary. Some images and ring tones can not be forwarded.











D Take a picture.

The Nokia 6102 phone gives you the power to communicate visually. Use the integrated camera to snap still images or capture full-motion video clips with sound. See it all richly displayed on the high color, high contrast screen.

Take a picture

- 1. From the Start screen, select the center selection key to open the *Menu*. ())
- 2. Scroll to and select Media (fig. 5.1). (🔟) (🔟)
- 3. Select Camera (fig. 5.2). (💌)
- Aim the viewfinder at your subject and select *Capture*. () You will hear a "snap" as the camera takes the picture and saves it to the *Images* folder in the Gallery.

Tip! You can also access the camera in just one click by pressing the Camera release key. (\blacksquare)

Send a picture via multimedia messaging

- 1. After taking a picture, select *Send* (fig. 5.3). () *Object added* displays.
- 2. Type your message, then select Send. (💌)
- 3. Select a sending option, such as To phone number. (\fbox) (\fbox)
- 4. Type in the phone number or select Find. (📜)
- 5. Select OK. Message being sent displays (fig. 5.4). (间)



fig. 5.1



fig. 5.3



 


fig. 5.4

5 Listen to the radio.

There's never a dull moment with the Nokia 6102 phone. Now you can listen to the radio while you work or while you wait. Connect a headset (sold separately) and digitally tune-in using up to 20 preset stations.

Listen to the radio

- 1. Attach a headset accessory. A headset icon (\square) appears in the center of the phone display to indicate the connection.
- With the headset plugged in, listen to tunes using the earphones or via the loudspeaker by selecting *Options*. (
)
- 3. From the Start screen, press the center selection key to open the *Menu*. ()
- 4. Scroll to and select Media. (🔲) (🔲)
- 5. Scroll to and select *Radio* (fig. 6.1). (()) You will hear sound immediately.
- 6. You can navigate the radio by using the arrows at the bottom of



fig. 6.1





the frequency display (fig. 6.2).

Scroll right, then press the center selection key to go to preset stations or seek new radio stations. (\square) (\square)

Save a radio preset

- 1. While listening to the station you want to save, select Options. (\checkmark)
- 2. Scroll to and select Save channel (fig. 6.3). (🔟) (🔟)
- 3. Enter a station nickname using the keypad number keys and select *OK* (fig. 6.4). () *Channel saved* appears.

Instant enjoyment.

Get the most out of everyday with the Nokia 6102 phone. It's designed for helping you enjoy the moment with audio messaging, camera and video recorder, and infinite customization options. To learn more about other great features, important safety information, and enhancements of your Nokia 6102 phone, review the Nokia 6102 User Guide or visit www.nokiausa.com.

Copyright © 2005 Nokia. All rights reserved. Nokia, Nokia Connecting People, and Nokia 6102 are trademarks or registered trademarks of Nokia Corporation. Other company and product names mentioned herein may be trademarks or trade names of their respective owners. Many features are network dependent and require network support. Some networks have limitations that affect how you can use the phone features. Contact your service provider about feature support and availability. All screens are simulated. N2426





Turn off







