

USER MANUAL

TRANSMITTER CODE LEARNING The system has a four-transmitter memory capacity. Entering a fifth transmitter will eliminate the first one entered. To replace lost transmitters, enter new transmitters twice to eliminate all old codes.

To enter a transmitter into memory:

1. Enter vehicle and close door. Be sure interior lights are off.
2. Put system into Valet mode,
3. Within 5 seconds after entering Valet, turn ignition key to ACCY, OFF, ACCY, OFF, ACCY
Leave in the ACCY position. You should hear one long siren chirp that indicates the system is in the transmitter code-learning mode.
4. Press the **LOCK** button of the new transmitter. The system will learn all channels of the new transmitter. You should hear one long siren chirp that indicates the system learned the code.
5. Turn the ignition key OFF to exit the routine. Two long siren chirps will signal successful exit.
Remove the system from Valet mode using Transmitter, Valet switch, or Pulse code.



FCC ID : ELVNTLC

This device complies with FCC Rules Part 15 Operation is subject to the following two conditions (1) This device may not cause harmful interference and (2) this device must accept any interference that may be received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.