

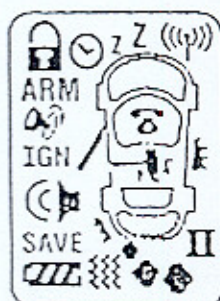 
# User Manual

## Plus CA-RFLCD2 Remote Control Transmitters

The LCD screen on the 2-way remote control displays graphic icons. It provides visual information on any trigger of the sensors and around the clock surveillance of your vehicle, as well as displaying the present status of the system.


 
 
 
 
 

 

 
 
 



 



2-Way LCU Remote



LCD Display Icons

### LCD Remote Icons

 Door Lock Vehicles Doors are Locked	 Warn Array Shock Sensor Triggered (Zone 1)
 Door Unlock Vehicles Doors are Unlocked	 Shock Sensor Shock Sensor Triggered (Zone 4)
 Armed Mode Security System Is Armed	 Power Save Mode Saves The Battery Power when Transmitter is not In Use
 Valet Mode Security System is in Valet Mode	 Vibrate Mode Vibrates when Security System is Triggered
 Remote Transmission Transmitting a Signal	 Low Battery Replace the Transmitter Battery
 In-Range Indicator You are within Remote Control Range	 Ignition Trigger On Ignition Switch (Zone 5)
 Door Triggered Doors are Opened (Zone 3)	 Driver Paging / Lost and Found Someone is Paging you from the Vehicle
 Trunk/Hood Triggered Trunk/Hood are Open (Zone 2)	 System Trigger/Panic Alerts that the System has been Triggered
 Second Vehicle Communicate with a Second Vehicle's Security System	



# User Manual

## Plus CA-RFLCD2 Remote Control Transmitters

Transmitter Button	System Function	Remark
🔒	Lock Doors & Arms System	
🔒 - 🔒	Arm and Delete the 2-Stage Shock Sensor	Press Twice within 3 Seconds
🔒 - 🔒	Arm System and Hidden Alarm Function	Press within 3 Seconds. For 1-Way Transmitter Press * - 🔒
🔒 + 🔒	Silent Arming/Disarming	Ignition In "OFF" Position
🔒 + 🔒	Active Anti-Car Jacking Mode	Ignition In "ON" Position. Press and Hold for 2 Seconds
🔓	Unlock Doors & Disarm System	
🔓 - 🔓	Two Step Door Unlock and Disarm System	Press Twice within 3 Seconds
🔓	Trunk Release - Channel 2	Press and Hold for 2 Seconds. For 1-Way Transmitter Press *
🔓 - 🔓	Passive Arming Bypass	While the System is "Disarmed". For 1-Way Transmitter Press * - *
🔒 + 🔓	Channel 3 Timer Control Output	For 1-Way Transmitter Press 🔒 + *
*	Car Locator	For 1-Way Transmitter Press ((←
*	Panic Function	Press and Hold for 3 Seconds. For 1-Way Transmitter Press ((← for 3 Seconds

**FCC Caution :** To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example - use only shielded interface cables when connecting to computer or peripheral devices).

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.