

**Instructions for Air Flo™ Wireless Controller — Item # 80503**

Thank you for purchasing the NYKO Air Flo™ Wireless controller for the PlayStation®2, PlayStation® or PSOne™ entertainment consoles. This controller provides unparalleled comfort in wireless gaming without sacrificing control or accuracy. Please take note of the CARE AND MAINTENANCE guidelines to ensure long life and problem-free performance.


**FEATURES**

- Adjustable Air Flo™ hand cooling technology eliminates perspiration and fatigue during game play
- 8 selectable wireless channels for multi-player wireless gaming
- Dual analog control sticks
- Vented and rubberized comfort grips for control and comfort
- 8-way directional pad
- Long range RF wireless technology ensures lag-free response with no line-of-sight interference
- Automatic Sleep Mode saves battery life when the controller is not in use
- Detachable D-pad joystick and rubber feet for arcade-style play
- Pressure sensitive buttons

**QUICKSTART GUIDE**

1. Remove battery compartment lid on the back of the Controller.
  2. The detachable joystick stores in the bottom of the battery compartment for safe keeping. If you wish to use the joystick, remove it before inserting the batteries.
  3. Insert 4 "AA" batteries as shown by the diagram printed in the compartment.
- NOTE:** A battery ribbon is provided to aid in the removal of the batteries. As you insert the batteries, fold the ribbon over each layer for easy replacement later.
4. Replace the battery compartment lid.
  5. Set the Wireless Channel by rotating the CHANNEL knob to any position from 1 to 8.

**NOTE:** If you have multiple Air Flo Wireless controllers, you will need to select a different channel number for each Controller.

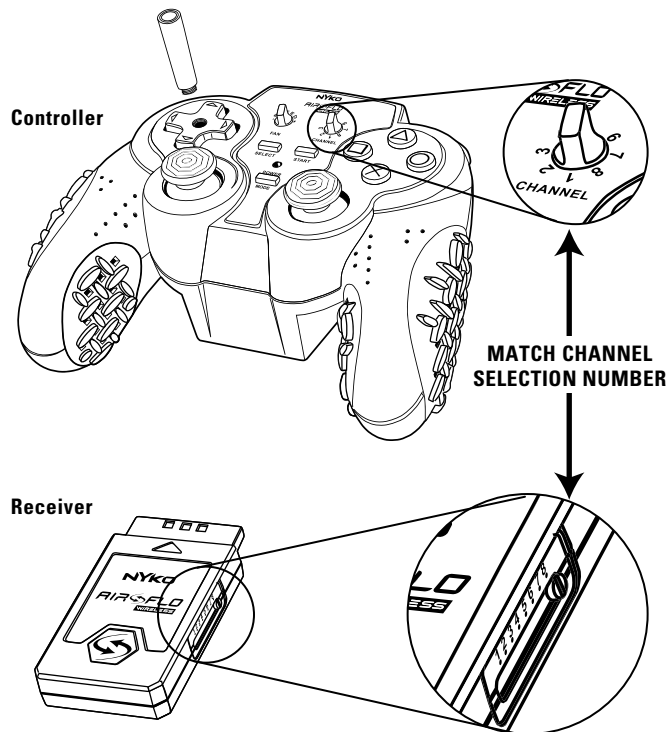

**CONTROLLER/RECEIVER**  
Channel Selection

6. Set the slide switch on the side of the Receiver to match the Channel number you have selected on the Controller.
7. Insert the Receiver into an open controller slot on the PlayStation console.
8. Turn the PlayStation ON.
9. Turn on the Air Flo Wireless controller by pressing the green POWER button.

**USING THE AIR FLO FEATURE**

The Air Flo Wireless controller provides the latest advances in our award winning Air Flo technology. While earlier Air Flo models provide two modes of Air Flo fan speed, this model provides a variable speed FAN control knob that allows you to set a custom cooling level.

To activate the hand cooling feature, simply turn the FAN knob clockwise. The SPEED of the fan increases gradually as you turn the knob. Set the cooling level to the desired level.

To turn the fan OFF, simply turn the FAN knob all the way counter-clockwise.

**USING THE DETACHABLE JOYSTICK**

The Air Flo Wireless controller provides a detachable joystick, which can screw into the D-pad in order to simulate an arcade stick game pad. This configuration can be very useful when playing certain types of games.

There is a special cavity provided for storage of the joystick when not in use, located at the bottom of the battery compartment of the Air Flo Wireless controller. The batteries will need to be removed in order to access the storage space. When replacing batteries, fold the battery ribbon around the battery layers to ensure quick, easy access to the joystick storage space.

When attaching the joystick, make sure the screw threads are correctly aligned to avoid damage. Never screw the stick into place too tightly. Doing so may cause the joystick to get stuck and risk damage during removal.

**WARNING: THIS ITEM INCLUDES SMALL PARTS THAT MAY POSE A CHOKING HAZARD IF PLACED IN THE MOUTH OR SWALLOWED. NEVER PLACE THE JOYSTICK IN YOUR MOUTH. KEEP SMALL PARTS AWAY FROM CHILDREN.**

**FCC Advisory**

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or move the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a different circuit from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NYKO**<sup>®</sup>  
INNOVATION FIRST

For product information and technical support:  
[www.nyko.com](http://www.nyko.com)

PlayStation® is a registered trademark and PSOne™ is a trademark of Sony Computer Entertainment Inc. NYKO® and Air Flo™ are trademarks of NYKO Technologies, Inc. ©2004 NYKO Technologies, Inc. All Rights Reserved.

**TROUBLESHOOTING**

- Make sure the CHANNEL selected on the Controller matches the CHANNEL selection on the Receiver.
- Set the CHANNEL numbers before turning game console ON.
- If the Controller does not respond well, try selecting a different CHANNEL number on the Controller and the Receiver.
- Make sure that the batteries have sufficient charge to power the unit.
- Make sure that the batteries are placed into the battery compartment in the proper orientation.
- Make sure that the Receiver is fully inserted into the controller port.
- Make sure that the LED light above the green POWER button is ON. If LED light is not lit, press the POWER/MODE button to turn the unit ON.

**CARE AND MAINTENANCE**

Please review the following guidelines to ensure optimal performance from the Air Flo Wireless controller. Failure to follow these guidelines may cause damage to the controller not covered by your NYKO Warranty.

- Do not expose this controller to extreme conditions, including direct sunlight or excessive heat and humidity.
- Protect the controller from exposure to liquids or small objects of any kind.
- Be careful when using the various rotary knobs on the controller. These are delicate parts and should not be forced beyond their limits or tampered with.
- Never use chemicals to clean the controller. If cleaning is necessary, unplug the controller and use a slightly damp cloth to clean the affected area.
- When not in use, store the Receiver and other small parts included with this item in a safe place to avoid loss or damage.
- When not in use, store the removable joystick in its special cavity in the battery compartment to avoid loss or damage.
- Stop use if the controller performs abnormally.

**NYKO Product Limited Warranty**

This NYKO product is warranted to the original purchaser for the normal intended use for a period of ninety (90) days from the date of purchase. If a defect covered under this warranty occurs, NYKO will replace or repair the product or its defective parts, at its option, at no charge. Warranty does not apply to defects resulting from modification or misuse of this product. The product can be returned to the place of purchase accompanied with proof of purchase or shipped to: NYKO Technologies Inc., P.O. Box 46697, Los Angeles, CA 90064, with freight charges prepaid. Please allow 3-4 weeks for processing.

**NYKO**<sup>®</sup>  
INNOVATION FIRST



for/pour PlayStation®2  
PlayStation® and PSOne™

**INSTRUCTIONS**  
AND WARRANTY INFORMATION

Item# 80503  
R80503-E09-0401