


| | | | |
|--|--|-------------------|--------------|
|  <small>A Phoenix Mecano Company</small> | Issue department: Bedding Division | Time: 2018-08-10 | |
| | ProductFunction instruction | Founder: Kyle | |
| CB0920 | | No: CB0920 | |
| | | | version: 1.1 |
| | | Page 1 of 4 | |


CB0920 Function instruction

1. Elctrical configuration diagram:



RF2406


FCC: PCU-RF2406
IC:21319-RF2406

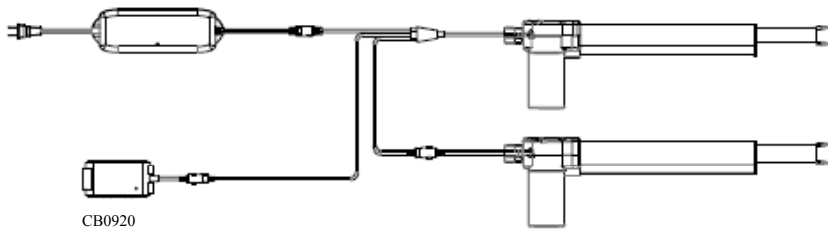

FCC: PCU-CB0920
IC:21319-CB0920

2. Function Picture



| | | | |
|--|--|-------------------|------------|
|  <small>A Phoenix Mecano Company</small> | Issue department: Bedding Division | Time: | 2018-08-10 |
| | ProductFunction instruction | Founder: | Kyle |
| CB0920 | | No: CB0920 | |
| | version: | 1.1 | |
| | Page 2 of 4 | | |

3. Process of test

3.1 Pairing

Pairing method:

3.1.1 Power-on pair:

The main control box is powered and the indicator light is always on. The remote control is paired with the main control box;

3.1.2 Double click on the pair button pair code:

In the working mode, the main control box double-clicks the code button, the blue indicator lights up, and the remote controller is paired with the main control box.;

Pairing method:

1. 1. The control box enters the code mode, the blue light is always on, and if it is not on, repeat step 1;
2. Simultaneously press and hold the remote control's HEAD UP and HEAD DOWN
3. The control box blue light flashes and enters Bluetooth pairing mode.;
4. At this time, any button of the remote control is operated, and the control box has an action, that is, the pairing is successful.。

3.2 FLAT

Press and release the FLAT button on remote, the head and foot actuators moves to lower position(when the actuator is free, can turn off the vibration motor and turn off the indicator light when press once), stop when press any buton; ;

3.3 Head Motor


Press head up and maintain, head lift stretches out;

Press head down and maintain, head lift retracts;

3.4 Foot Motor

Press foot up and maintain, head lift stretches out;

Press foot down and maintain, head lift retracts;

| | | | |
|---|--|-------------------|------------|
|  <p>OKIN REFINED A Phoenix Mecano Company</p> | Issue department: Bedding Division | Time: | 2018-08-10 |
| | ProductFunction instruction | Founder: | Kyle |
| | | No: CB0920 | |
| | CB0920 | version: | 1.1 |
| Page 3 of 4 | | | |


3.5 Head & Foot Up

Press head&foot up and maintain, two lifts stretches out;

3.6 Bluetooth Pairing Control Test

When the blue light of the control box is flashing, the pairing operation is performed:

1. Open the jerome's app and pass the gear in the upper right corner;
2. Click "connect to bed" to jump to the device list.
3. In the device list interface, pull down and refresh, see the device name is "OKIN-0xxxxx", click to connect;
4. The pairing prompt will pop up on the IOS device, and click "pairing". After the pairing is completed, return to the main interface to realize the operation control.

| | | | |
|---|--|-------------------|------------|
|  | Issue department: Bedding Division | Time: | 2018-08-10 |
| | ProductFunction instruction | Founder: | Kyle |
| CB0920 | | No: CB0920 | |
| | version: | 1.1 | |
| | Page 4 of 4 | | |

FCC warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.

ISED RSS Warning:

This device complies with Innovation,Science and Economic Development Canada licenceexempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

ISED RF exposure statement:

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. Le rayonnement de la classe b repecte ISED fixaient un environnement non contrôlés.Installation et mise en œuvre de ce matériel devrait avec échangeur distance minimale entre 20 cm ton corps.Lanceurs ou ne peuvent pas coexister cette antenne ou capteurs avec d'autres.