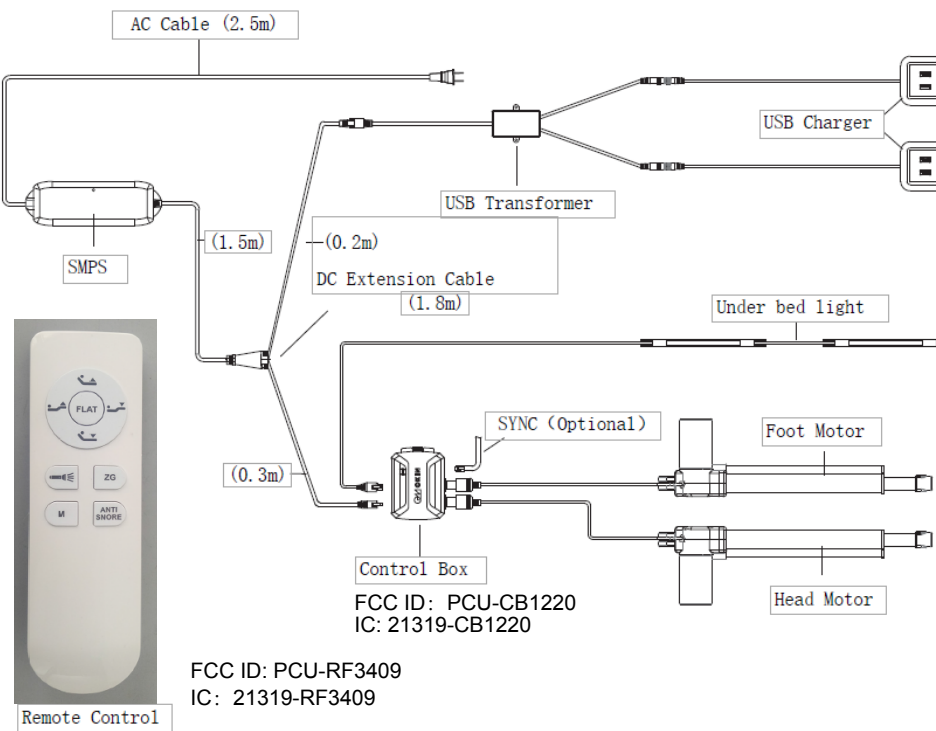

 A Phoenix Mecano Company	Issue department: Bedding Division	Date:	2018-11-09
	<b>ProductFunction</b> <b>instruction</b>	Author:	Kyle
<b>CB1220</b>		<b>No: CB1220</b>	
	Version:	1.1	
Page 1 of 4			

## CB1220 Function instruction

### 1. Electrical configuration diagram:



 <small>A Phoenix Mecano Company</small>	Issue department: Bedding Division	Date:	2018-11-09
	<b>ProductFunction instruction</b>	Author:	Kyle
<b>CB1220</b>		<b>No: CB1220</b>	
	Version:	1.1	
	Page 1 of 4		


## 2. Function Picture



## 3. Process of test

### 3.1. HEAD MOTOR

Connect to head actuator, control by remote single:

 <small>A Phoenix Mecano Company</small>	Issue department: Bedding Division	Date:	2018-11-09
	<b>ProductFunction</b> <b>instruction</b>	Author:	Kyle
<b>CB1220</b>		<b>No: CB1220</b>	
	Version:	1.1	
	Page 2 of 4		

Click head up button on the remote, head actuator moves out, stop when released;  
Click headdown button, head actuator moves in, stop when released;  
This function takes effect only by pressing the corresponding button on the remote.

### 3.2. FOOTMOTOR

Connect to foot actuator, control by remote single:  
Click foot up button, foot actuator moves out, stop when released;  
Click foot down button, foot actuator moves in, stop when released;  
This function takes effect only by pressing the corresponding button on the remote.

### 3.3. SYNC port

Connect with the same other Control box or Other accessories;

### 3.4. Power LED& PAIRING LED

Power supply for control box, PAIRING LED of control box is blue, POWER LED is green.

### 3.5. Power


Connect to the 29V DC;

### 3.6. RESET button

Press and hold the RESET button, the Head, Foot actuators will move to lower position.

### 3.7. Pair Function

Double click RESET button, pairing LED turns on, the control box enters into mode of code pairing;  
Press and hold the pairing LED of Remote, the backlight of pairing LED flashes, the backlight of remote flashes, the remote enters into mode of code pairing;  
The backlight of pairing LED of remote stops flashing, and the pairing led of control box turns off, it indicates that the code pairing is successful;  
If fails, repeat all the processes above;

 <small>A Phoenix Mecano Company</small>	Issue department: Bedding Division	Date:	2018-11-09
	<b>ProductFunction</b> <b>instruction</b>	Author:	Kyle
<b>CB1220</b>		<b>No: CB1220</b>	
	Version:	1.1	
	Page 4 of 4		

FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

ISED RSS Warning:

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

ISED RF exposure statement:

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator& your

body.This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. Le rayonnement de la classe b respecte ISED fixaient un environnement non contrôlés.Installation et mise en œuvre de ce matériel devrait avec échangeur distance minimale entre 20 cm ton corps.Lanceurs ou ne peuvent pas coexister cette antenne ou capteurs avec d'autres.