

# User Manual

CB.23.43.03


Version:


1.1

Page 1 of 6

## CB.23.43.03 Function instruction

### 1. Electrical configuration diagram:

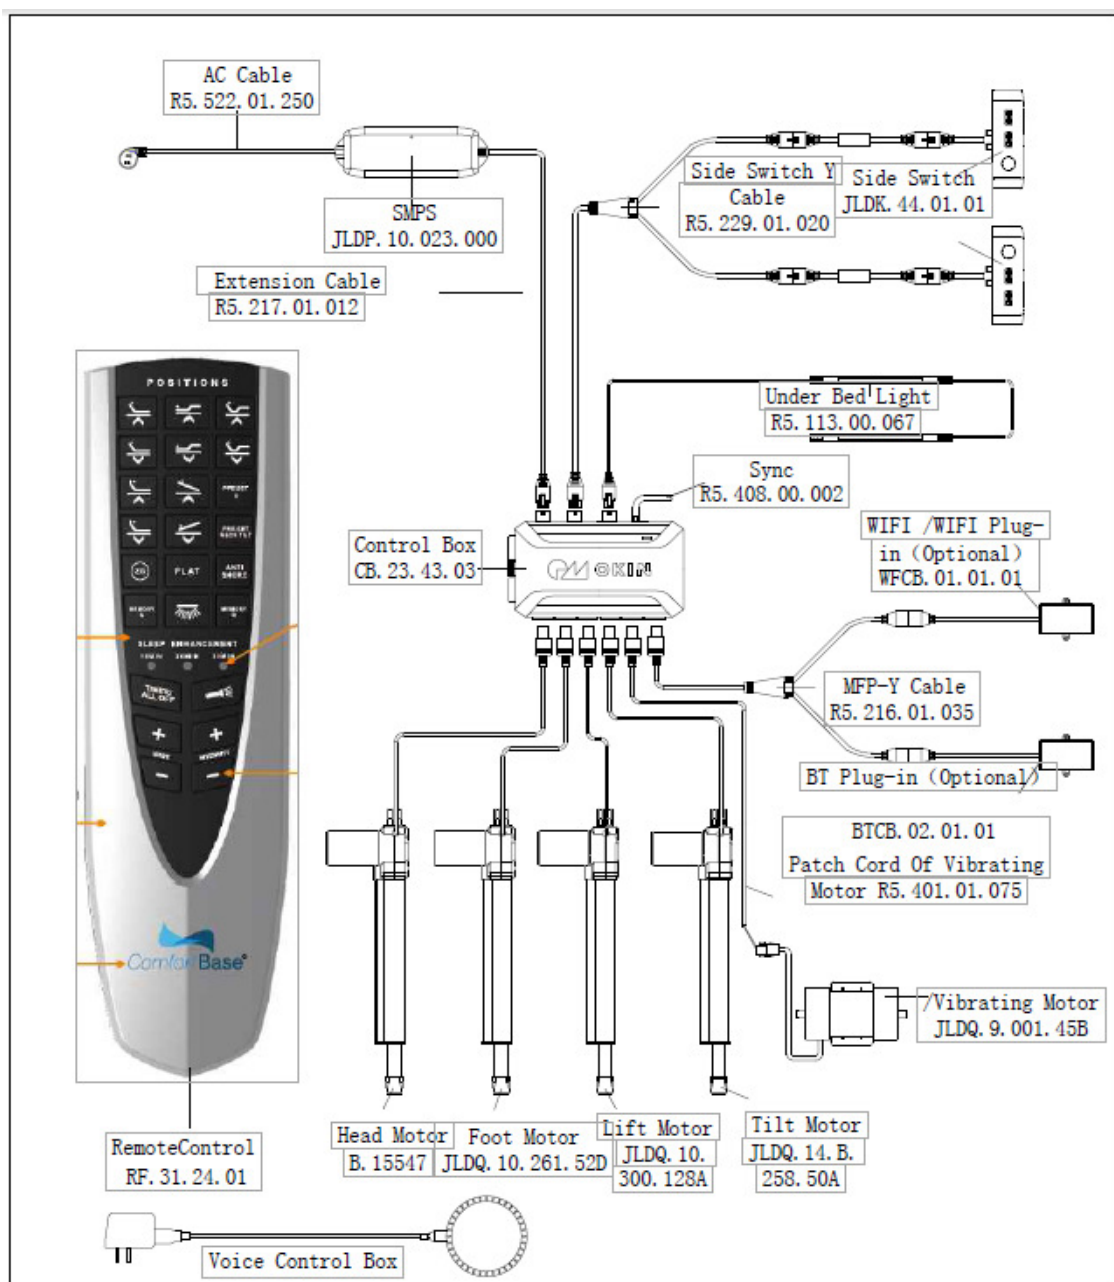

 <small>A Phoenix Mecano Company</small>	Issue department: Bedding Division	Date:	2017-08-23
	<b>User Manual</b>	Author:	Kyle
<b>CB.23.43.03</b>		Version:	1.1


## 2. Function Picture



## 3. Process of test

### 3.1. HEAD MOTOR

Connect to head actuator, control by remote single:

 <small>A Phoenix Mecano Company</small>	Issue department: Bedding Division	Date:	2017-08-23
	<b>User Manual</b>	Author:	Kyle
<b>CB.23.43.03</b>		Version:	1.1
	Page 3 of 6		

Click head up button on the remote, head actuator moves out, stop when released;  
 Click headdown button, head actuator moves in, stop when released;  
 This function takes effect only by pressing the corresponding button on the remote.

### 3.2. FOOT MOTOR

Connect to foot actuator,control by remote single:  
 Click foot up button, foot actuator moves out, stop when released;  
 Click foot down button, foot actuator moves in, stop when released;  
 This function takes effect only by pressing the corresponding button on the remote.

### 3.3. Tilt MOTOR


Connect to head actuator,control by remote single:  
 Click Tilt up button on the remote, head actuator moves out, stop when released;  
 Click Tilt down button, head actuator moves in, stop when released;  
 This function takes effect only by pressing the corresponding button on the remote.

### 3.4. Lumbar MOTOR

Connect to foot actuator,control by remote single:  
 Click Lumbar up button, foot actuator moves out, stop when released;  
 Click Lumbar down button, foot actuator moves in, stop when released;  
 This function takes effect only by pressing the corresponding button on the remote.

### 3.5. Massage

Connect to head& Foot&Lumbarmassage,control by remote:  
 Click head massage + button,head massage strengthens by one level;  
 Click head massage - button,head massage weakenby one level;  
 This function takes effect only by pressing the corresponding button on the remote.

 <small>A Phoenix Mecano Company</small>	Issue department: Bedding Division	Date:	2017-08-23
	<b>User Manual</b>	Author:	Kyle
<b>CB.23.43.03</b>		Version:	1.1
	Page 4 of 6		

### 3.6. Test for underbed light

Click button of underbed light, turns on( or turns off ) the underbed light, switch the status once when click once; This function takes effect only by pressing the corresponding button on the remote.

### 3.7. SYNC port

Connect with the same other Control box or Other accessories;

### 3.8. USB Port

Connect the USB function accessories.

### 3.9. Power LED& PAIRING LED

Power supply for control box, PAIRINGLED of control box is blue,POWER LEDis green。

### 3.10. Power


Connect to the 29V DC;

### 3.11. RESET button

Press and hold the RESET button, the Head, Foot actuators will moves to lower position.

### 3.12. Pair Function

Double click RESET button, pairing LED turns on, the control box enters into mode of code paring;  
 Press and hold the paring LED of Remote, the backlight of paring LED flashes, the backlight of remote flashes, the remote enters into mode of code paring;  
 The backlight of paring LED of remote stops flashing, and the paring led of control box turns off, it indicates that the code paring is successful;  
 If fails, repeat all the processes above;

	Issue department: Bedding Division	Date:	2017-08-23
	<b>User Manual</b>	Author:	Kyle
<b>CB.23.43.03</b>		Version:	1.1
	Page 5 of 6		

### 3.13. FLAT function


Press and release the FLAT button on remote, the head and foot actuators move to lower position (when the actuator is free, can turn off the vibration motor and turn off the indicator light when pressed once), stop when press any button;

This function takes effect only by pressing the corresponding button on the remote.

### 3.14. ZERO G position function

Press and release ZERO G button on remote, the head and foot actuator moves to preset memory position, stop when press any button;

This function takes effect only by pressing the corresponding button on the remote.

	Issue department: Bedding Division	Date:	2017-08-23
	<b>User Manual</b>	Author:	Kyle
<b>CB.23.43.03</b>		Version:	1.1
	Page 6 of 6		

**FCC:**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**ISED RSS Warning:**

This device complies with Innovation, Science and Economic Development Canada licence exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, an there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmfulth interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.