
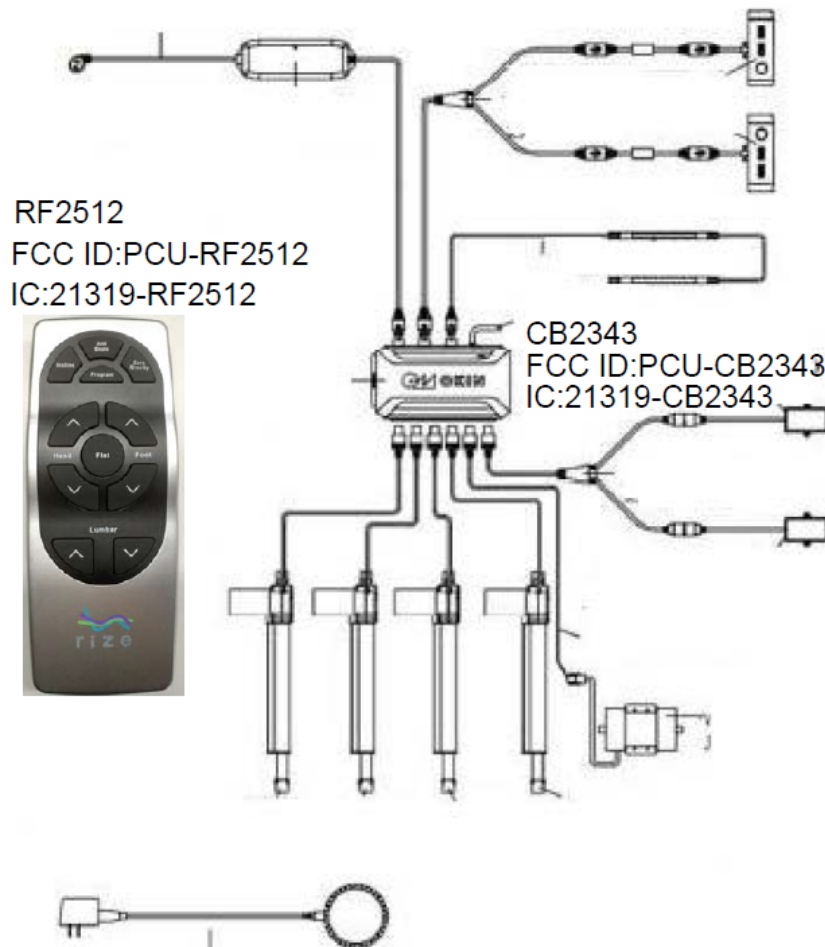



| | | | |
|---|---------------------------|-------------|-----------|
|  A Phoenix Mecano Company | | Date: | 2018-4-10 |
| | | Made by: | Evan |
| | RF2512 User Manual | | |
| | | Version: | 1.1 |
| | | Page 1 of 5 | |


RF2512 User Manual



Figure1: Remote



| | | | |
|---|---------------------------|-------------|-----------|
|  A Phoenix Mecano Company | | Date: | 2018-4-10 |
| | | Made by: | Evan |
| | RF2512 User Manual | | |
| | | Version: | 1.1 |
| | | Page 2 of 5 | |

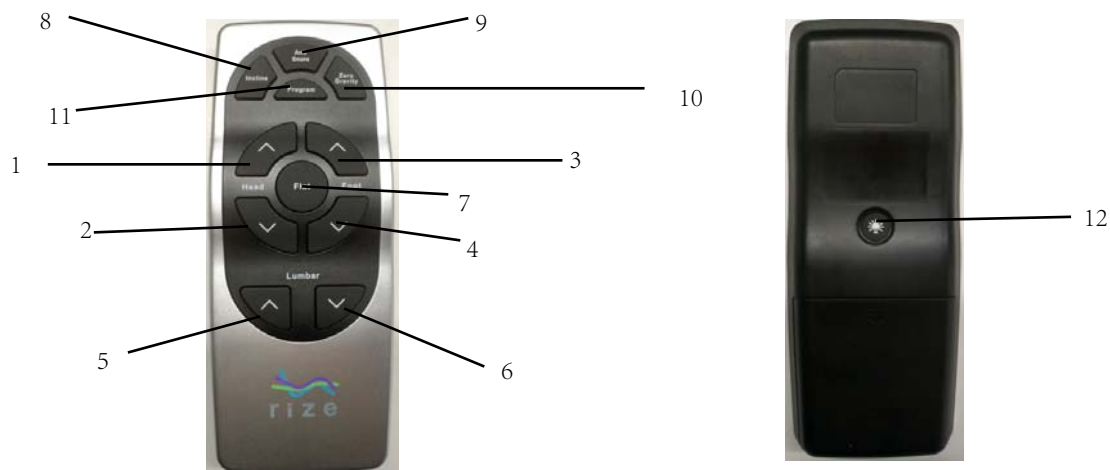

1 Head up

Press and hold HEAD UP button of remote, head actuator moves out, stop when released;

2 Head down

Press and hold HEAD DOWN button of remote, head actuator moves in, stop when released;

3 Foot up


Press and hold FOOT UP button of remote, foot actuator moves out, stop when released;

4 Foot down

Press and hold FOOTDOWN button of remote, foot actuator moves in, stop when released;

5 Lumbar up

Press and hold LUMBARUP button of remote, lumbar actuator moves out, stop when released;

| | | | |
|--|--|-------------|-----------|
|  <small>A Phoenix Mecano Company</small> | | Date: | 2018-4-10 |
| | | Made by: | Evan |
| | | | |
| RF2512 User Manual | | Version: | 1.1 |
| | | Page 3 of 5 | |

6 Lumbar down

Press and hold LUMBARDOWN button of remote, lumbar actuator moves in, stop when released;

7 Flat

Click FLAT button, the bed goes flat, stop when click any button during the process of going flat;

8 Incline

Click INCLINE button, Actuators move to Incline position, stop when click any button during the process of going Incline;

Press and hold Incline button for 2.5s, the black light on remote will flash, the control box set the new position as Incline.

Press and hold Incline and program for 2.5s, Incline position recovery for factory setting position

9 AntiSnore

Click AntiSnore button, Actuators move to AntiSnore position, stop when click any button during the process of going AntiSnore;

Press and hold AntiSnore button for 2.5s, the black light on remote will flash, the control box set the new position as AntiSnore.


Press and hold AntiSnore and program for 2.5s, AntiSnore position recovery for factory setting position

10 ZeroGravity

Click ZeroGravity button, ZeroGravity move to ZeroGravity position, stop when click any button during the process of going ZeroGravity;

Press and hold ZeroGravity button for 2.5s, the black light on remote will flash, the control box set the new position as ZeroGravity.

Press and hold ZeroGravity and program for 2.5s, AntiSnore position recovery for factory setting position

| | | | |
|--|--|-------------|-----------|
|  <small>A Phoenix Mecano Company</small> | | Date: | 2018-4-10 |
| | | Made by: | Evan |
| | | | |
| RF2512 User Manual | | Version: | 1.1 |
| | | Page 4 of 5 | |

11 Program

Press and hold any memory button and program for 2.5s, position recovery for factory setting position

12 Black Light

Click LED button, the Black light turned on

FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

ISED RSS Warning:

This device complies with Innovation, Science and Economic Development Canada licence exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.