

Smart phone

Turbo E

P4526A

USER MANUAL

Content

1. Product ID photo
2. Notices for the use of phone
3. Unlocking, idle screen and applications menu
4. Dialing
5. Messaging
6. Contacts
7. Google Play store
8. Settings

1.Product ID photo



2. Notices for the use of phone

CAUTION! Please read carefully this instructions and follow them, in the case of dangerous situations.

Driving safety: It is recommended not to use the phone while driving. If you use it however, turn on the Handsfree mode.

Turn off your phone while in an aircraft.

Interference caused by mobile phones affects aviation safety, and thus is illegal to use it on the plane. Please make sure that your mobile phone is turned off when you are on the plane.

In hospital: When using the phone in a hospital must submit to the relevant rules specified by the hospital. Any interference caused by wireless devices may affect the performance of the phone.

Approved service: Only approved repair shops can repair mobile phones. If you open the phone and try to fix it yourself you will void the warranty of the product.

Accessories and batteries: Only accessories and batteries approved by the producer can be used.

Emergency calls: Make sure the phone is turned on and enabled if you wish to make an emergency call, press the call key and confirm the location, explain what happened and do not close the call.

The battery and charging the battery: It is recommended to fully charge before first use of the device. Do not dispose the battery in fire or drop anywhere. Return defective batteries in special centers or to the supplier center.

Warning: We take no responsibility for situations where the phone is used other than as provided in the manual. Our company reserves the right to make changes in the content of the manual without making this public. These changes will be posted on the company website to the product it amends.

The contents of this manual may be different from that in the product. In this last case will be considered.

Do not cover the antenna with your hand or other objects Failure to comply resulting in connectivity issues and rapid discharge of the battery.

All applications provided by third parties and installed in this device, may be modified and/or stopped at any moment. we will not be responsible in any way for modifications of the services or content of

these applications. Any request or question regarding third party applications may be addressed to owners of these applications.


2.1 Device power on/off and standby

After inserting the SIM card, and battery, start the phone by holding down the Power button for 3 seconds. To power off, press and hold the same button and confirm. If you press the Power button you will set phone in standby mode, to return shortly press the same button.

3. Unlocking, idle screen and applications menu

To unlock the screen when resuming from standby, slide your finger from the bottom to the top of the screen. The main screen will be displayed

Home screen pages can be customized with shortcuts and widgets. At the top of the screen is placed the notification bar that contains information about the mobile network signal, WiFi, Bluetooth, battery level, and time .

To display the applications menu, touch the Menu icon  from the bottom of the main screen. Slide the screen to left to scroll main menu. Touch the desired application icon to access it. Use the Back button to return to the main screen.

4. Dialing

To call a number, from the main screen open the dialer, dial the number and press the call key. To answer a call drag the icon to the right, and to reject the call drag the icon to the left.

You can call numbers directly from Call log, touch the dial symbol from the right side of the desired number.

5. Messaging

To create and send an SMS, proceed as follows:

- Open the applications menu;
- Open the *Messaging* application;
- From the top-right side of the screen touch *Compose new message* symbol;
- Write the message;

Note: You create an MMS by touching the *attach* symbol and adding media content: images, sound or movies.

- In the top text box add the number or the name of the recipient;
- Tap the *arrow ->* symbol from the right side of the text box to send the message.

6. Contacts

Access the *Contacts* from menu applications.

Add new contact:

- Open *Contacts* from main menu;
- Tap the + symbol from the bottom-right side of the screen;
 - Select the memory where you will store: account or phone entry;
 - Enter contact information;
- Finally, tap Save.

Add new contact from call log:

- From the applications menu, open the *Dialer*;
- Tap the phone number you want to save;
- Tap *New contact* button;
- Select the memory where you will store: account or phone entry;
- Enter contact information;
- Finally, tap Save.

Import/export contacts

You can import or export contacts between memories and accounts available, as follows:

- Open *Contacts*;
- Press the *Options* button and select *Import / Export*;
- Choose memory from which to copy contacts;
- Choose in which memory to copy the contacts;
- Select contacts to copy, press the Copy button

Synchronize contacts with an account

Note: If you don't have an account, you can create one which is also necessary for the Google PlayTM store. You can synchronize the contacts of an account by following the next steps:

- Open the applications menu -> Settings -> Applications -> ACCOUNTS;

- Touch the desired account; if you don't have already set, you can add a new one by touching the button *Add new account* ;

- Tick the option *Sync contact*;

Customize contacts with photo

Note: The contacts from SIM card cannot be customized with photo.

To add a photo to one contacts follow the steps:

- Open *Contacts*;

- Touch the desired contact name;

- On the top-right of the screen touch the contact editing symbol;

- In the left corner of the screen touch the symbol to add image;

- Select the input method of image: photo shoot or from gallery.

7. Google Play store

Google Play store provides a multitude of applications from various categories: games, business, communication, shopping, travel, entertainment, books, education, finance, photography, tools, media, social, sports, news.

The first time you open the Google Play store, you will be prompted to authenticate. If you already have a Google™ account, enter the data. If not, click the Create button to create a new account and follow the steps on the screen.

8. Settings

Your service provider may default some device settings, so you may not be able to change these settings.

WLAN

Touch Wi-Fi switch to activate. Open Wi-Fi to search for available networks automatically. Networks without password can be used directly, for others you need to enter the password first.

Bluetooth

Touch Bluetooth switch to activate. Touch Bluetooth to enter the device searching screen. You can modify settings by pressing the Menu button.

Data usage

Here you can activate or deactivate the data connection and see a chart of data usage status. You can also set the data mobile limit for each SIM.

More

Airplane mode

Virtual Private Networks(VPN)

Settings.

Tethering & portable hotspot

Wifi Direct

Mobile network

Preferred network type: here you can enable/disable the 3G/4G service. Preferred networks

Access point names: add or modify the access points. Network operators.

Sounds

This option allows you to set audio tones for incoming calls, e-mail alerts and SMS notifications. Settings include: Vibration, Volume, Tone Audio, Reviews
Select General / Silent / Meeting / Outdoor profile by touching the right side circle.

Power Saving

You can choose one of the three power schemes: -Closed

-Normal: calling and messaging are available; data connection remains the same state -Super-long standby:

calling and messaging services remains in the same state.

Display

a. Brightness: adjust the brightness

b. Wallpaper: change the wallpaper picture for idle screen, lock screen and main menu

c. Auto rotating screen: rotate phone to change direction

d. Alert missed call & sms: blink screen backlight on missed call or unread sms. You will also receive notifications about missed calls and unread messages in the form of animated icons in the lock screen;

e. Sleep: adjust the delay before the screen automatically locks

f. Font size

Storage

1) View SD Card and Phone Memory .

2) Uninstall or Format SD Card.

Battery

Displays information about the charging status and usage of the battery.

Applications

Shows the list of the installed and downloaded applications, which of them are installed on SD CARD.

Location

Access to my location: enable applications to use your location information.

GPS satellites: switch on/off the GPS receiver.

Google Location Service™: let applications to use the WiFi or mobile network connection to get localization.

Security

1) Set up screen locks: you can choose slide, pattern, PIN or password to unlock the screen.

2) Set up SIM card lock: enter 4-8 numbers PIN to set the lock of SIM.

If you enter 10 times wrong PUK code, the SIM card will be permanently locked.

- Password visible: password visible when enter it
- Select device administration: add or delete device manager.
- Unknown sources: install apps from unknown sources
- Trusted credentials: show the trusted credentials
- Install from SD card: install the encrypted certificate from SD card.

Languages and input

- Selecting Language: include all the languages on the phone and totally amount of 12 kinds.
- Spell checker
- Personal Dictionary: add words to custom dictionary or delete.
- Input method: you can select Android™ keyboard or MultiLing keyboard input method.
- Text to speech settings

- Pointer speed

Reset to factory settings

Backup my data: backup my settings and data of other applications. Factory data reset: clear all data stored on the phone.

Accounts

Add, manage and change synchronization options for the used accounts.

Date and Time

- Automatic date & time: use date and time provided by network or by GPS
 - Automatic time zone: check to use network-provided time zone
 - Set Date / Set time: touch to set date / time.
- 4) Selecting time zone Select TimeZone according to where you are.
- Use 24 hour time format : ON/OFF
 - Select date format.

Schedule power on/off

You can set time of boot or shutdown the phone.

Schedule airplane on/off

You can set the time of activating or deactivating the plane mode.

Accessibility

- 1.Power button end call
- 2.Touch and hold delay
- 3.Install web scripts

Developer options

Set options dedicated to the Android software developers

About phone

You can check the information about: phone status, legal informations, software version.

Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information:

This Mobile Phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCCRF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6W averaged over one gram of tissue. Device types: P4526A (FCC ID: 2ADWUP4526A) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.590W/kg and when worn on the body is 1.195W/kg. This device was tested for typical body-worn operations with the back of the handset kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic

components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.