



**PMID704GK**

**Before operating this product, please read, understand the follow instructions.**

**Tablet 7" 3G**  
**Jet 704**



<b>Cautions .....</b>	<b>1</b>
MAIN UNIT .....	2
MAIN FEATURES .....	3
<b>How to Use Your Tablet .....</b>	<b>4</b>
JACK.....	4
PHYSICAL BUTTONS.....	4
TOUCH BUTTONS .....	5
SUSPENDED FUNCTION KEY .....	5
SHORTCUTS .....	7
WIDGETS .....	10
POWER ON/OFF/ STANDBY .....	12
RESET .....	13
MICRO SD AND SIM CARD .....	15
DESKTOP AND MAIN MENU (SOME SCREENS/FUNCTIONS MAY PRESENT DIFFERENT IN YOUR DEVICE DEPENDING ON THE SOFTWARE VERSION) .....	15
OPEN OR SWITCH APPLICATION .....	18
GENERAL FUNCTION .....	20
YOU CAN MANAGE SOME COMMON FEATURES SUCH AS BRIGHTNESS, WALLPAPER, SLEEP TIME. IN SETTINGS - GENERAL FUNCTIONS IS EASY TO OPERATE/CHANGE AS SHOWN BELOW: .....	20
WI-FI.....	20
BLUETOOTH .....	22
STORAGE .....	22
APPS.....	23
SECURITY .....	24
LANGUAGE & INPUT.....	25
BACKUP & RESET .....	25
<b>Application.....</b>	<b>26</b>
ANDROID SYSTEM PERMISSIONS MANAGEMENT .....	26
<b>Trouble Shooting .....</b>	<b>29</b>
<b>FCC Caution .....</b>	<b>30</b>
<b>Warranty .....</b>	<b>31</b>

## Cautions

For better use, please carefully read the "User's Guide", and follow the prompts.

Avoid products placed above 35° or below -5° environment;

Please forbid the product from fire, moisture environment, and direct sunlight;

Please do not attempt to personally disassemble, repair, modify the product, if demand, please contact authorized service center;

Please operate according to the "User's Guide";

Please avoid crashing the product;

Please do not use the product near strong magnetic fields, power plants, etc.;

Do not use the product when riding bicycle, car and motor cycle to avoid dangerous.

 
Do not use high volume to avoid damage to your hearing;

Properly dispose of electronic waste, such as batteries.

To prevent accidents, do not use the product if damaged or crashed, please contact authorized service center.

## Product Features

### Main Unit

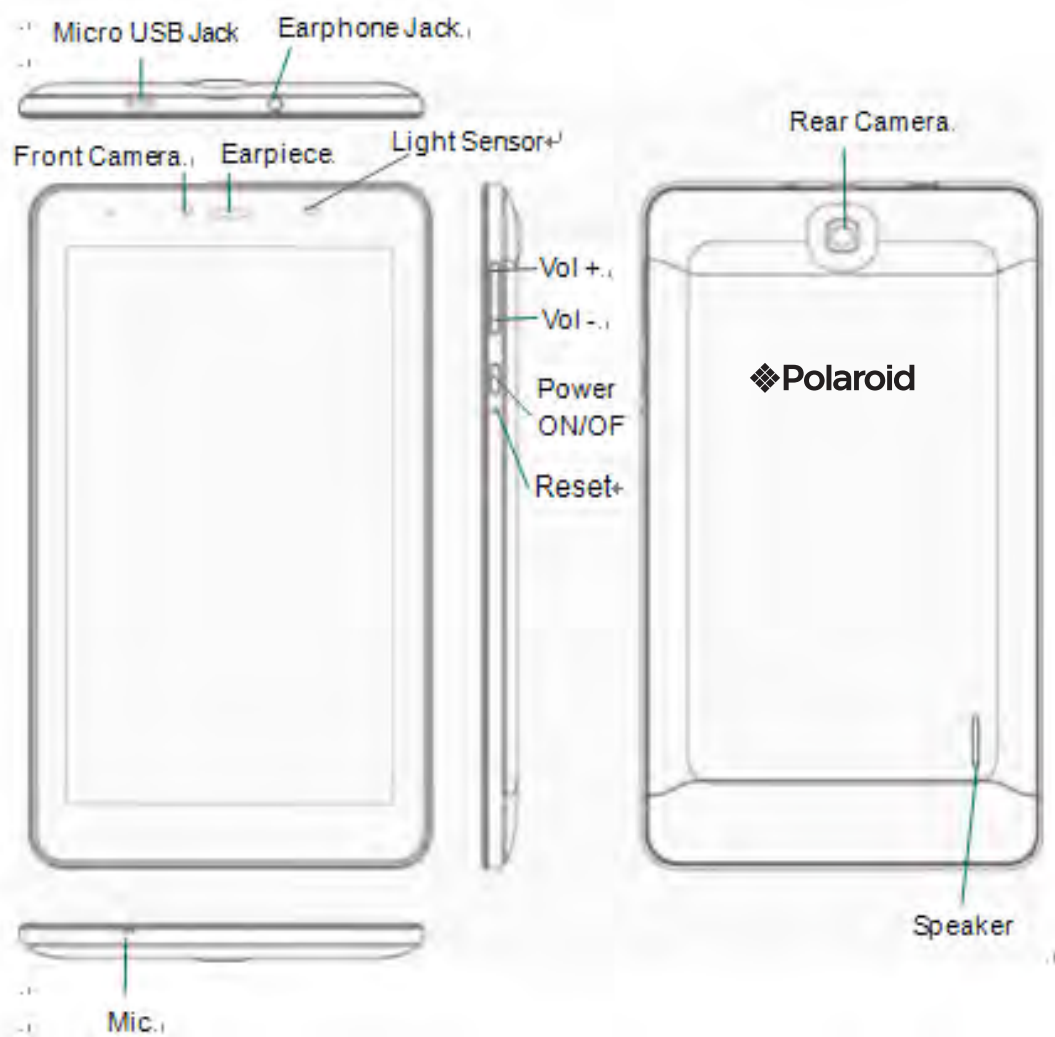

## Main Features

<b>Display</b>	
Display inch	7 inch
Resolution	1024*600
Ratio	16:9
Touch panel	5 point Capacitive multi-touching panel
<b>Processor/ Memory</b>	
CPU	Mediatek 8312, Dual core
Frequency	1.3GHz
GPU	Mali400 MP2
RAM	512 MB
ROM	4GB
System	Android 4.4.2
<b>Connect</b>	
WIFI	Support, IEEE802.11b/g/n
USB Host	x1
Micro-SD Slot	x1
Bluetooth	Support
Earphone	x1, 3.5mm
<b>Battery information</b>	
Battery Type	Lithium ion battery
Battery Capacity	2800mAh
Standby	270~300 hours approximately
Talk Time	6~7 Hours approximately
Charge Time	3~3.5 Hours
<b>Product</b>	
L x W x H	188.5*108.5*9.5 mm
Weight	300g approximately

## Accessories

Below items are included in your package:

- 1 Tablet unit
- 1 USB cable
- 1 Earphone
- 1 Power Adapter
- 1 User manual

---

## How to Use Your Tablet

### Jack

**Earphone Jack:** Insert earphone to this jack for listening music, video or make phones (capability might be blocked, depending on the region it is offered).

**Micro USB Jack:** Charging your tablet, or connecting your tablet with PC to copy/delete files, or connecting your USB accessories by the USB OTG cable, such as USB mouse, USB keyboard. (Can only use one equipment at the same time)

**TF Card Slot:** Insert TF card here, can support up to 32GB.

**Mic:** Built-in microphone for applications that support voice communication or phone call, however capability might be blocked, as not in all markets is offered).

### Physical Buttons

Items	Name	Functions
1	Power ON/OFF	Short press : Display sleep  Long press: (1) Power on/off ;  ( 2 ) Restart ;  ( 3 ) Airplane mode ;  ( 4 ) Ring/Vibrate/Silent ;
2	Vol +/-	Short press , vol +/- ;
3	Press Power and vol - button at the same time, can screen shot.	

## Touch Buttons

 
Items	Name	Functions
1	Short press	Press on screen within 1.2s, it mainly used on menu choice and confirm.
2	Long press	Press and hold on screen for more than 1.2s.
3	Drag	It belongs to identify the touch tracking direction. Mainly for pictures, flip, drag and so on.
4	Virtual key	It belongs to the virtual keyboard.


Virtual keyboard as below (product may show some differences depending on the software version)




## Suspended Function Key


Add suspended key functions. Click the function key can operate accordingly, as shown below (Your product may present variations depending on software version)

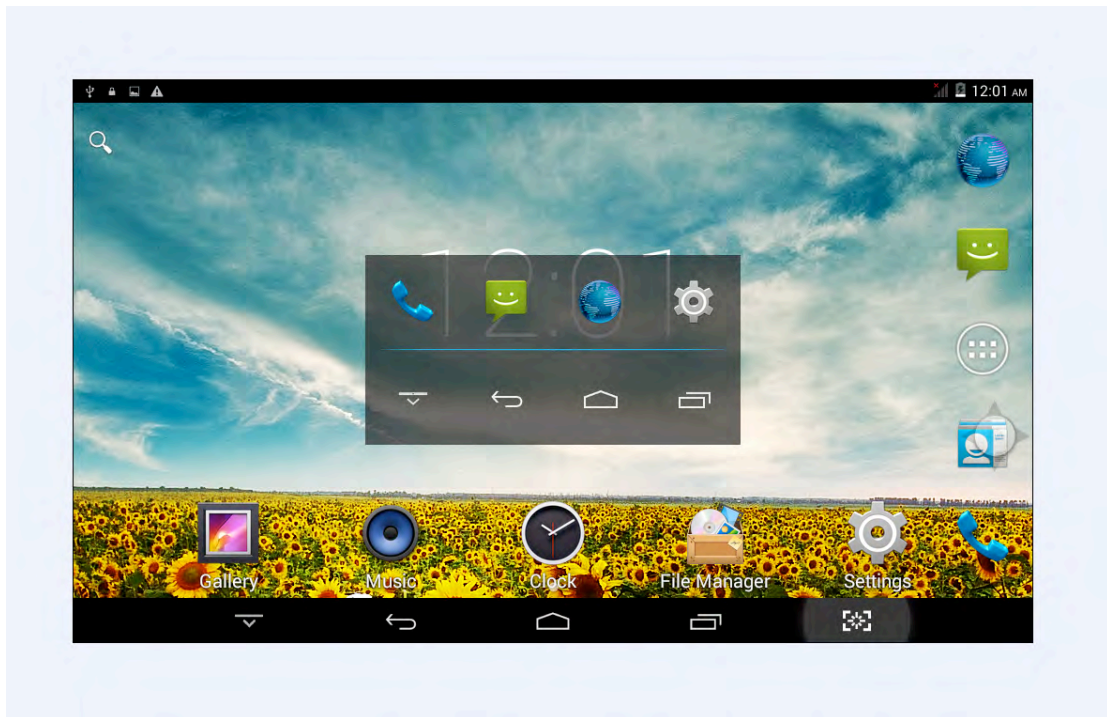


Click on the suspended function key , a dialog above pop on the screen, click on the optional box icon, you can go directly to the corresponding application or settings.



Suspended button is custom function key, press  to enter the Main menu,

 click  to enter the settings for the suspended and custom interface, please refer the figure below:

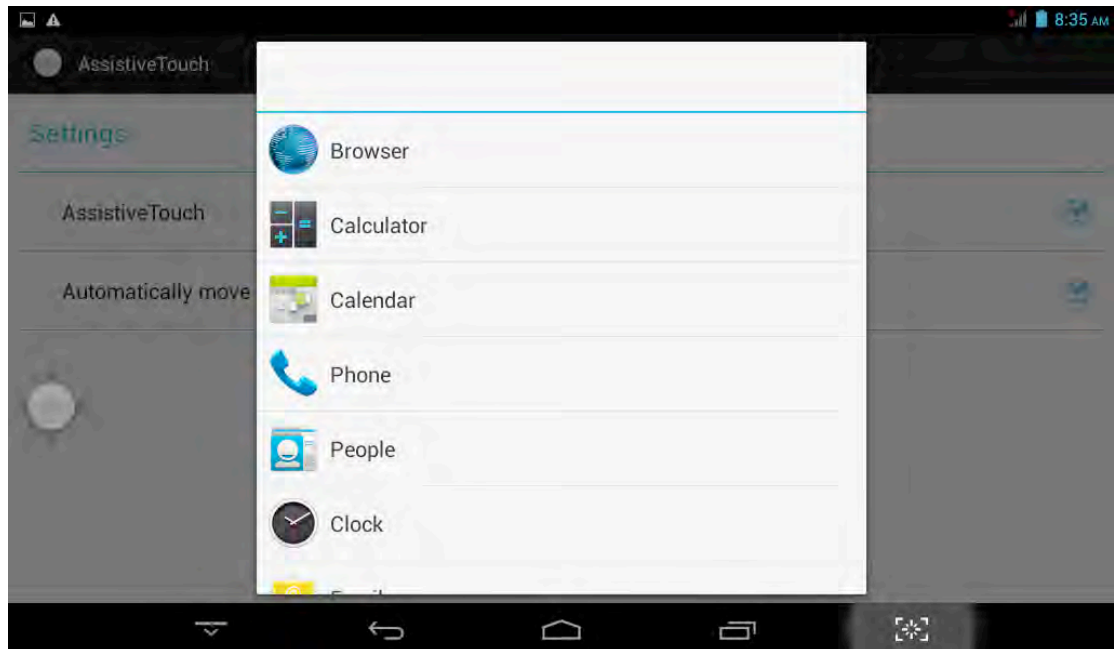






## Shortcuts

Please refer to the figure below:

 


There are 5 shortcuts at the bottom of the screen:

Item	Functions
Hidden key 	Hidden the shortcuts
Return key 	Return to the previous screen
Desktop menu 	Return to the Desktop
Recent program key 	List the recent program(s) or application(s)
Screen shot 	Screen shot the whole screen

## Notification Bar and Quick Settings

Notification Bar is shown as below:

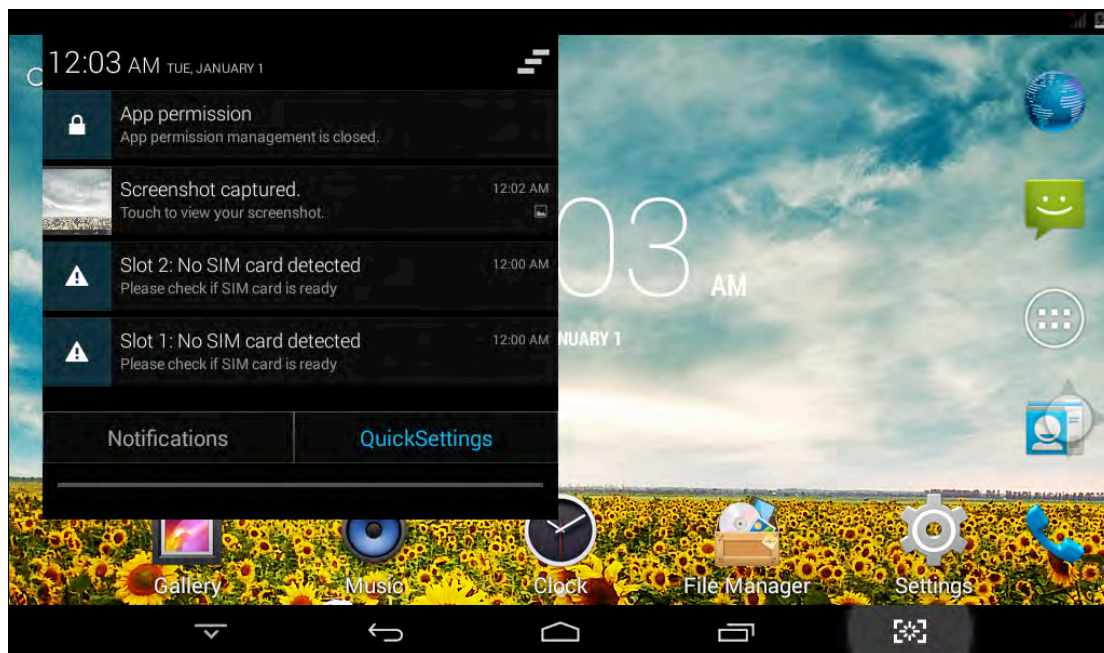


Real-time displays notification information plate.



: Clear key to clear all the notification.

Quick settings is shown as below:

 Show some short cuts, click the appropriate option, you can jump directly to the "Settings" in the corresponding area.


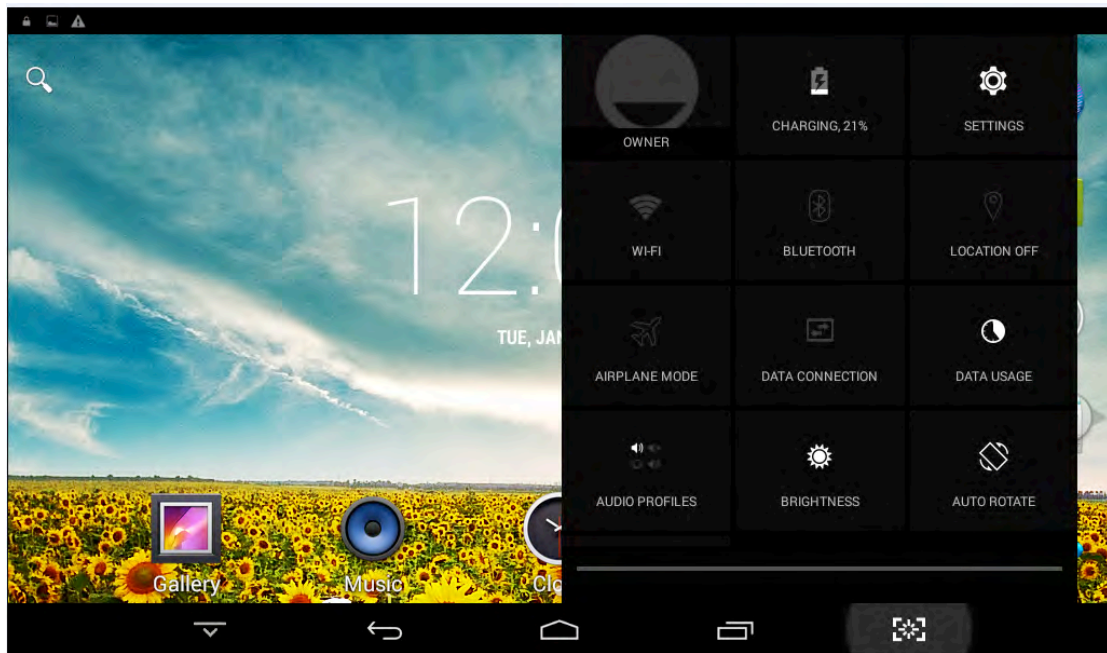


Jump box, can be set between the notification bar and quick settings.

## Widgets

  As shown below, it also belongs to a system of shortcuts. Some widgets are the system included. When you install a third-party APK, widgets will appear.

Widgets can be dragged to any desktop interface in a HOME screen interface.

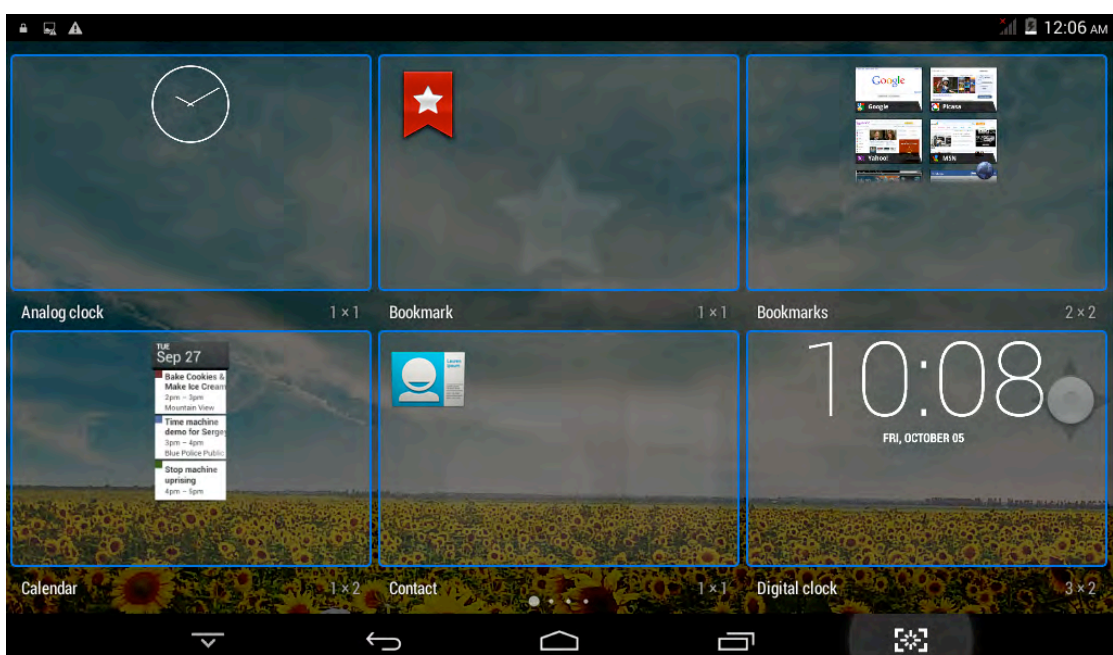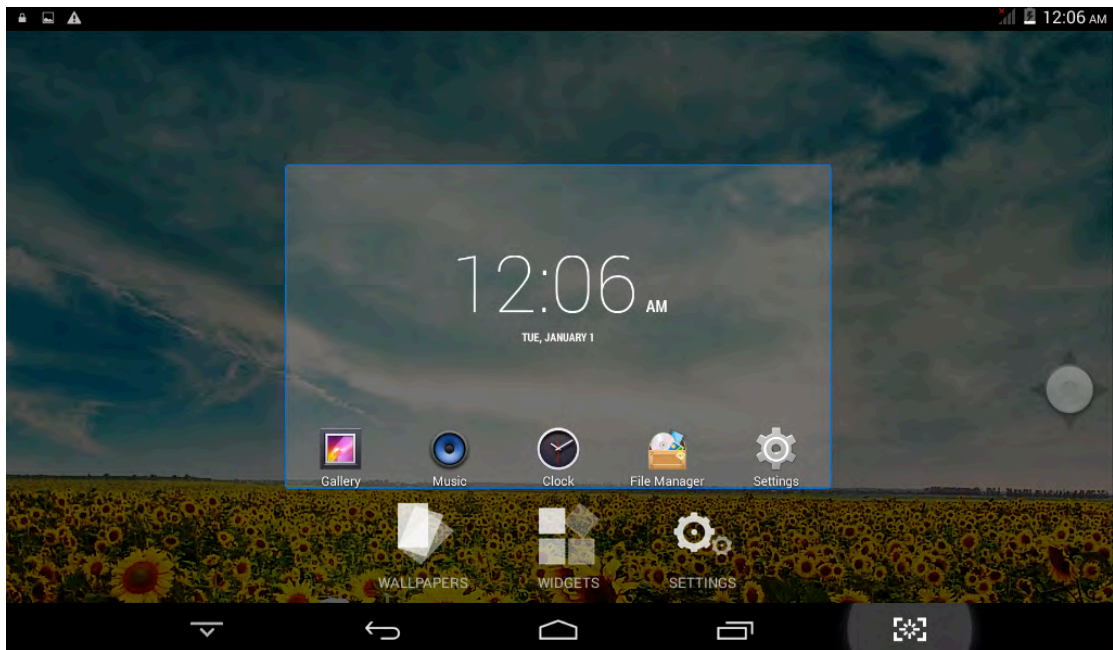



## Product Use

### Battery Charging

Your tablet has an integrated rechargeable lithium battery. Before using the product for the first time, the battery should be charged fully to ensure proper working of the product. We recommend 6 hours for first charge.

The battery inside the device can not be replaced. If you have questions or need to replace the battery, please contact an authorized service center.

Do not connect the tablet to a power source other than that which is indicated here or on the rating label as this may result in the risk of fire or electric shock and failure of the product.

When the battery power is low, the device will display a low battery message, if power is low, the device will automatically shut down. Please recharge the tablet to continue using it.

If misused battery used in this device may cause a fire or chemical burns.

The battery used in this device may result in fire or chemical burn if it is misused. Do not disassemble, incinerate, or heat the battery. Do not leave the battery in a place subject to direct sunlight or in a car with its windows closed.

**NOTE:**

 
**Please use the original included electrical adapter for charging, using different may cause damage to your product and risk of fire or electric shock**

## Power On/Off/ Standby

**Power on:** Long press Power ON/OFF button, after the “ANDROID” logo loading for several seconds, the desktop appears as below:



**Power Off:** Long press the Power ON/OFF button for 5 seconds, you can power off the tablet according the dialog pop on the screen. Refer the figure below:

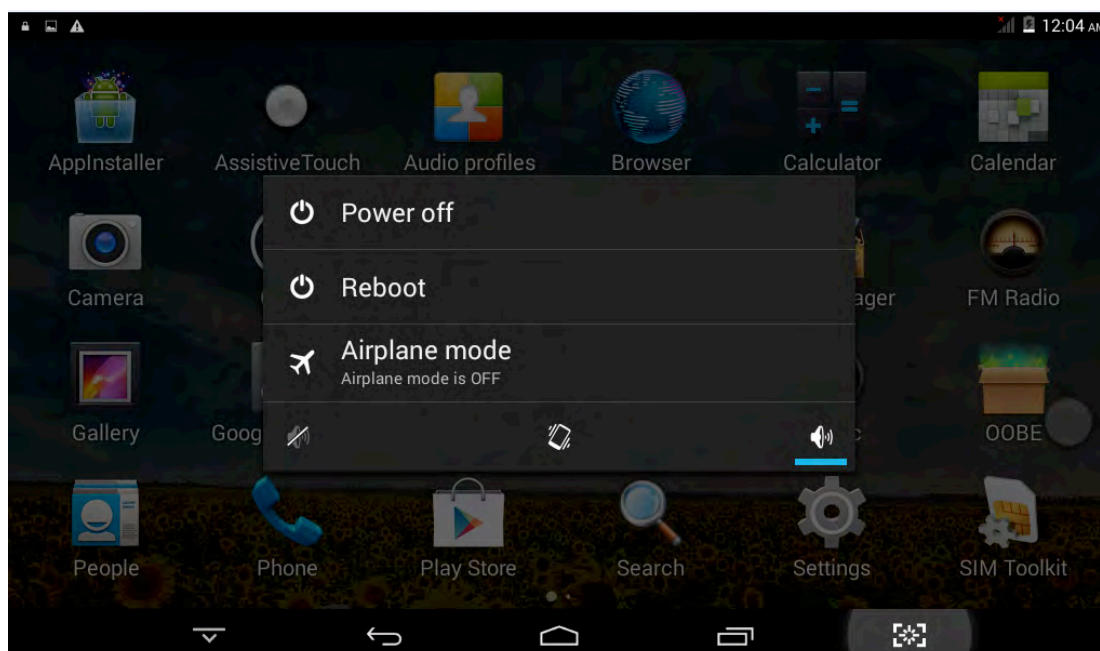

**Standby:** During the power on mode, press the power button to enter the power-saving standby mode, then press the power button again, the screen prompts to enter the unlock mode.


## Reset

 Stab the reset hole with a sharp hard object, you can reset the machine. After the reset, the machine will power off. It is recommended to back up your personal information/configuration to prevent data loss.


## Connecting to the PC

Connect the tablet to a PC with Windows XP/ Vista /7, Linux, MAC operating system. The PC will automatically recognize the device as an storage device.

On the tablet you will see a connection screen. To correctly connect the device with the computer, press “ Turn on USB storage.” and then you can copy files to/from your PC.

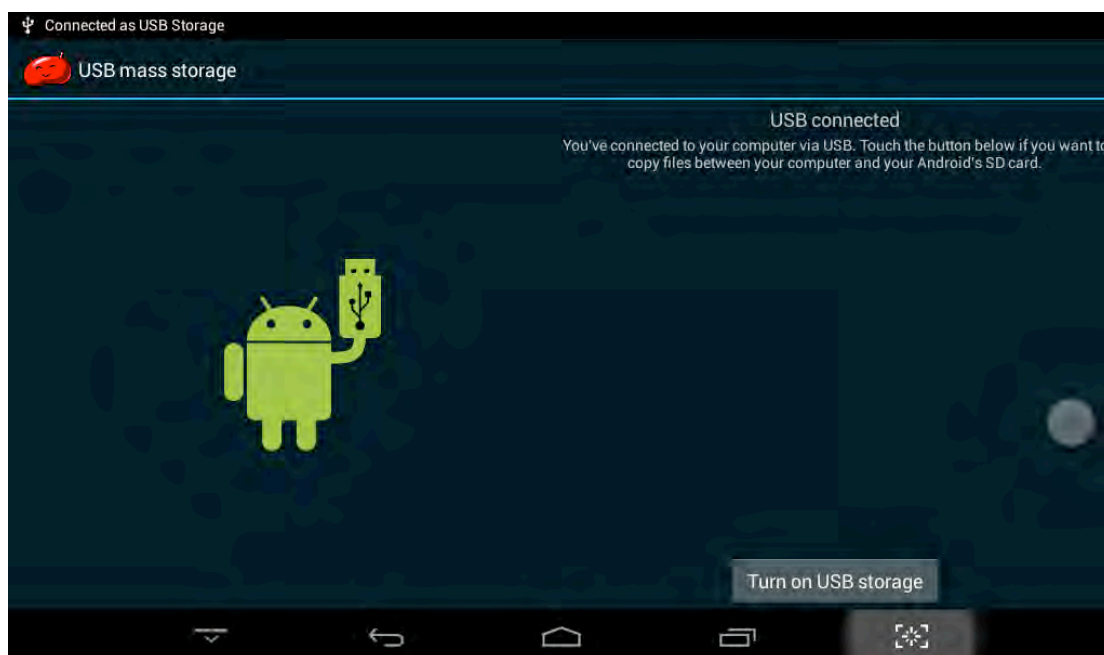

 Touch “ Turn off USB storage” and then safely remove your device from the computer to prevent data loss.

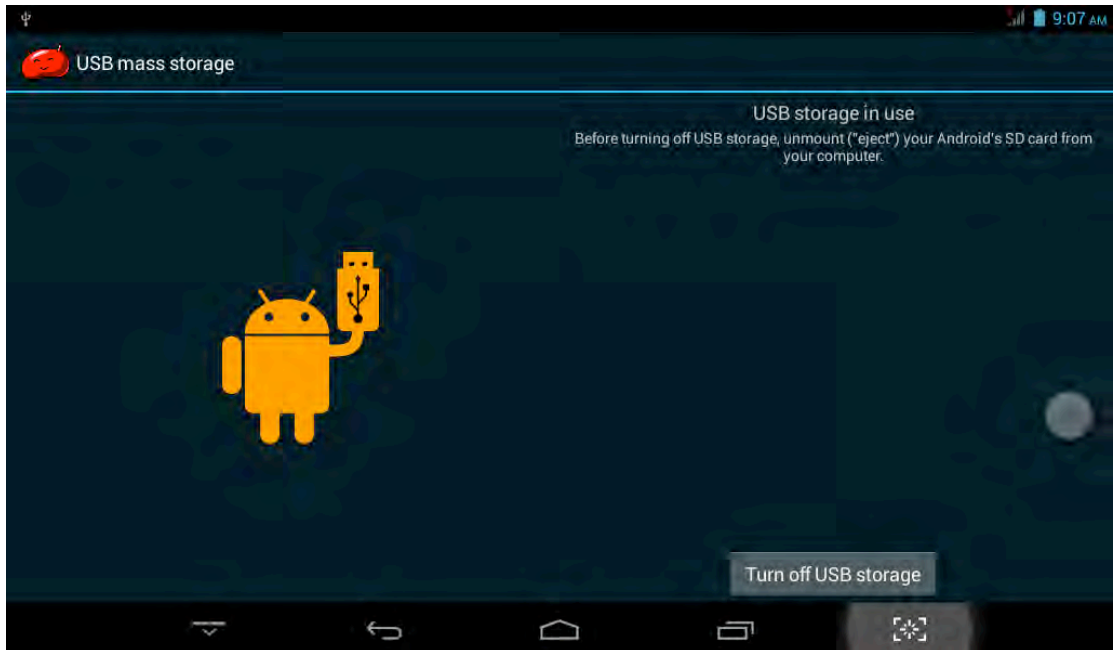



## Micro SD and SIM Card

Micro SD card maximum capacity of this product supports up to 32G.  
Insert the SD/SIM card according to the figure below:



## Desktop and Main Menu (Some screens/functions may present different in your device depending on the software version)

 
Desktop screen as below:



The shortcuts in the desktop can be freely drag and deleted.  
Desktop can be sliding around, long press the icon to drag the icons. Drag the icon to the top of the screen, the top of the screen there will be a "× Remove", drag the icon there, the corresponding shortcut is deleted, as shown below:



Click icon to enter the Main menu, all the APK appear on the Main menu.

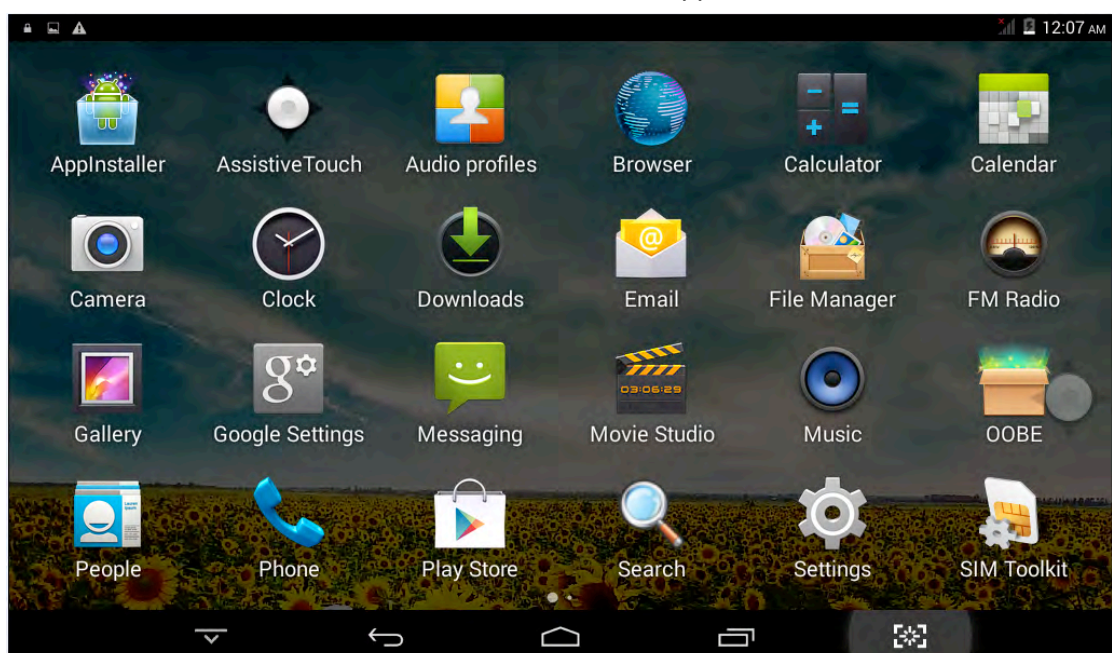




On the main menu, the third-party applications (user-installed applications) can be unloaded. Specific unloading operations are: long press APK want to uninstall, drag it to the top of the desktop, the desktop will appear above the "Uninstall" words, then drag the icon there, you can uninstall the corresponding application as shown below:







## Open or Switch Application

 
On the desktop or the main menu, select an application, click - to enter, you can enjoy the application. To exit, press the  or  to the main interface. After the return, you can click into other applications.

Click  to switch between the running applications, refer to the figure below:

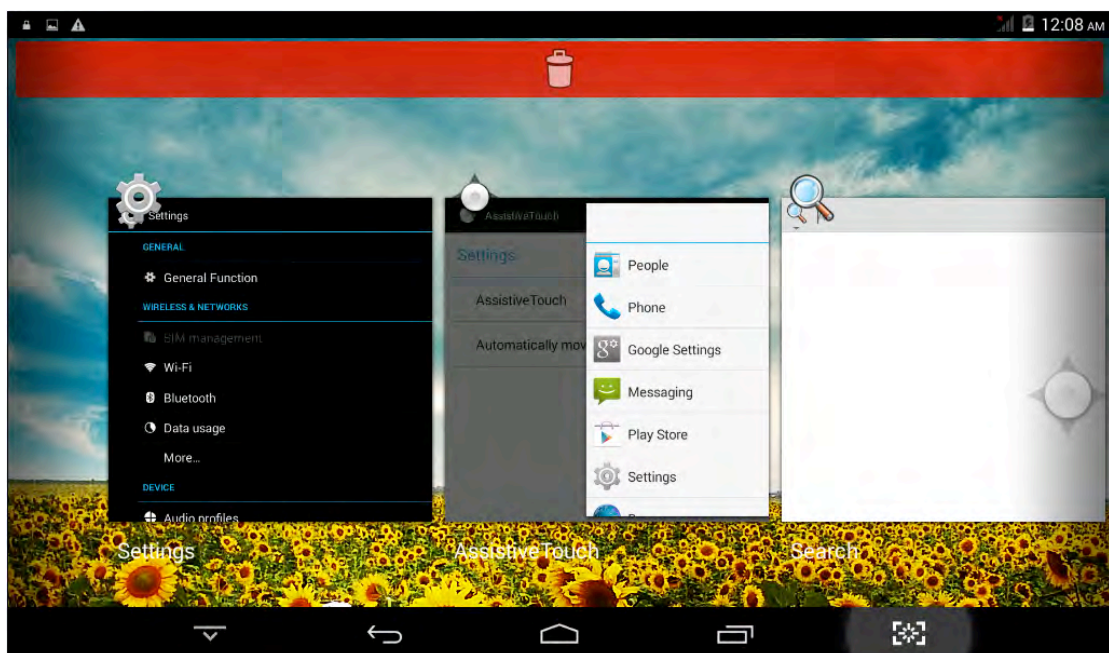


## Settings

 

 
Click  icon in the main applications to open the system settings interface, as shown below:

 Select the appropriate operation of the relevant items, such as: wireless and network, display, date and time settings, about device, etc.

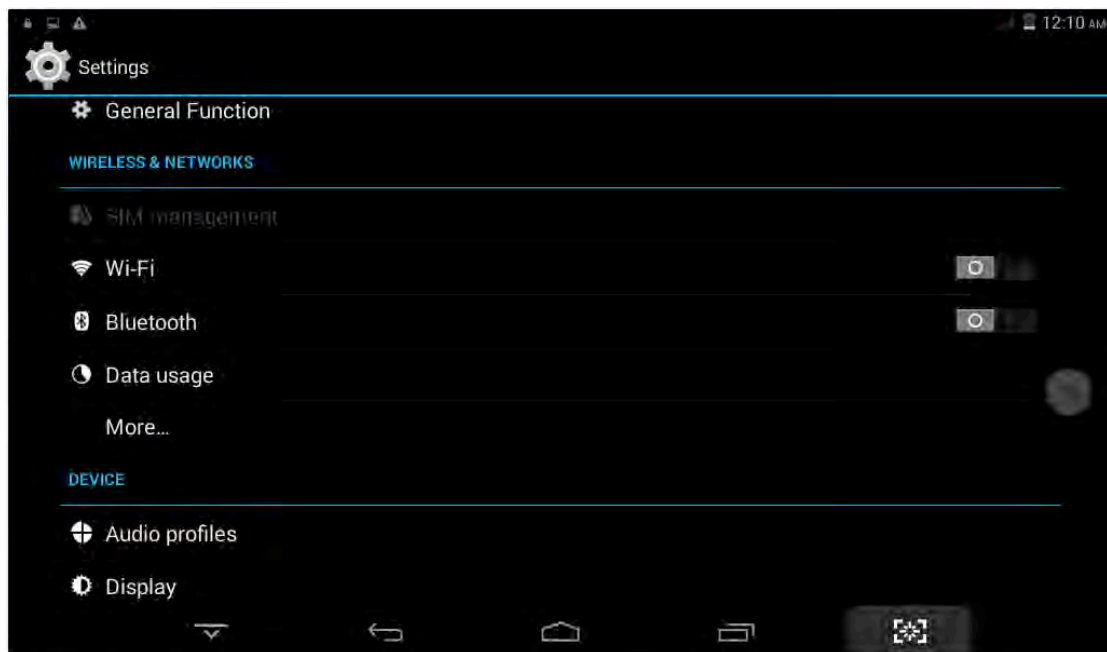


## General Function

 You can manage some common features such as brightness, wallpaper, sleep time. In Settings - General functions is easy to operate/change as shown below:

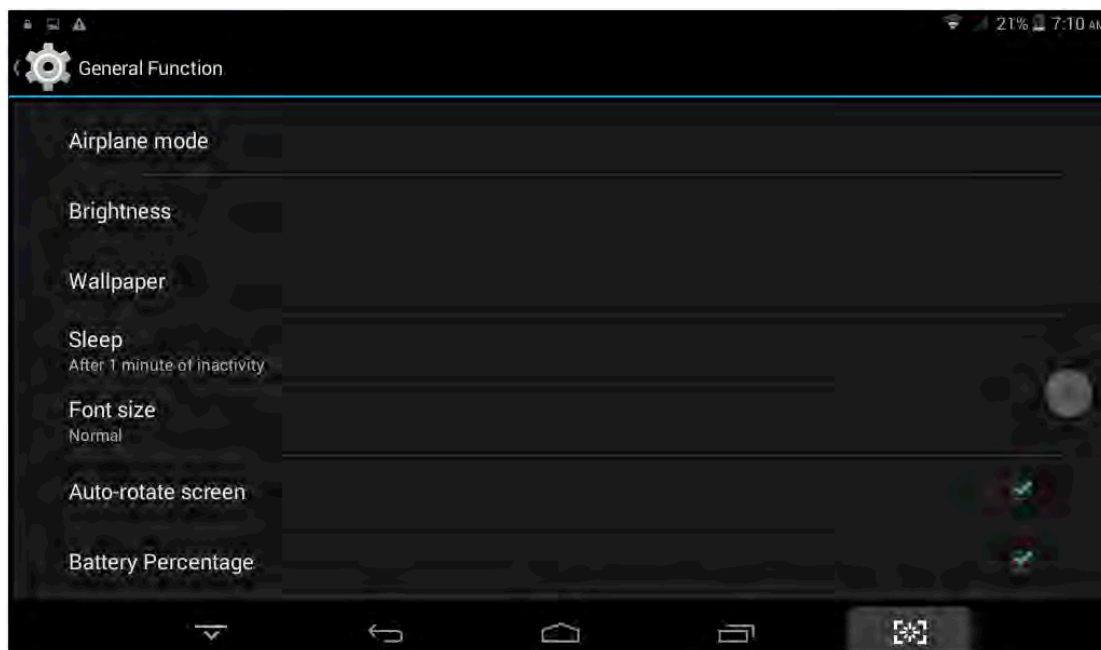


## Wi-Fi

 Wi-Fi connection is relatively easy to use, and configuration is similar to mobile phone-related operations. Thus, it is subject to service availability and you need your login and password information when the network demands. First, open Wi-Fi, then tap Wi-Fi network you want to connect, and then enter the password to login. Below there is a reference picture:

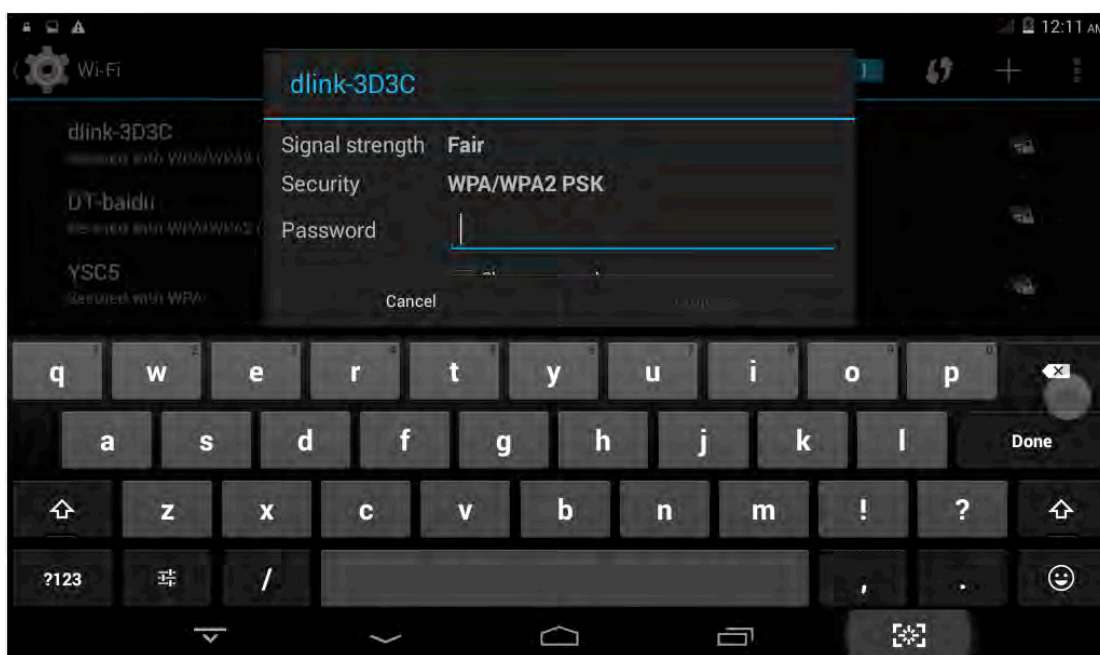

 
After the network connection, you can click the network is connected, check the specific circumstances of the network connection. Details as follows:

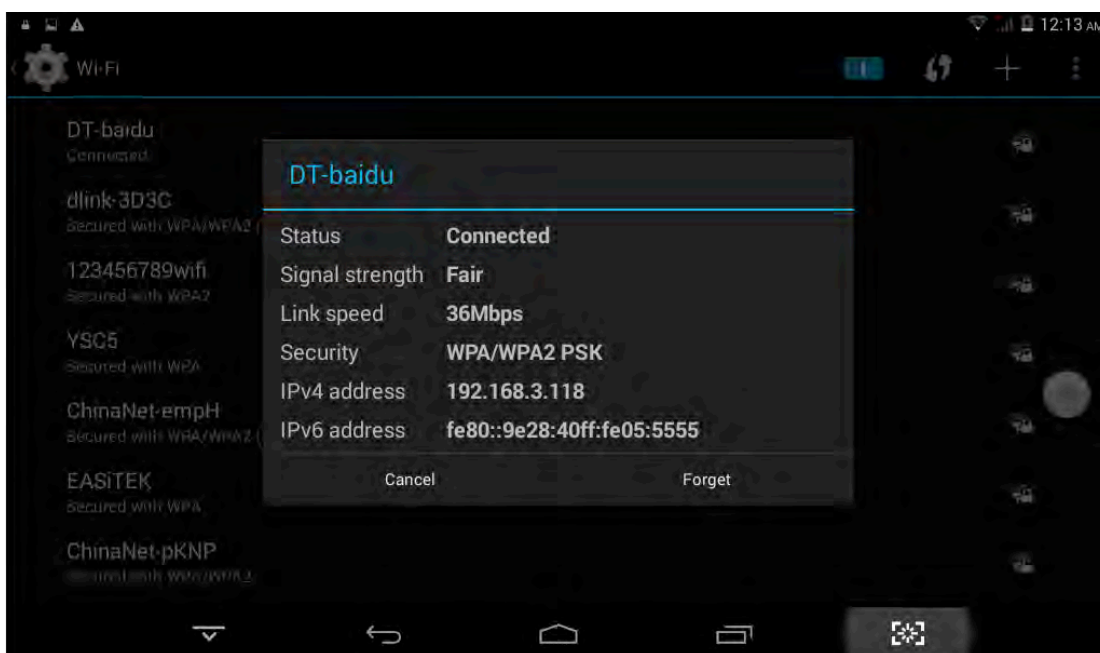

Of course, you can also open Wi-Fi network through the "Quick Setup" described earlier, or "suspended button". However, the premise is that you have a Wi-Fi network in the region, and the appropriate network passwords are known or saved.

## Bluetooth

 
Enter the Bluetooth option, open the Bluetooth, you can see the Bluetooth device information. You can toggle Bluetooth device status by clicking on the "ANDROID BT". Switch between "Not visible to other Bluetooth devices" and "Visible to all nearby Bluetooth devices". Details as shown below:

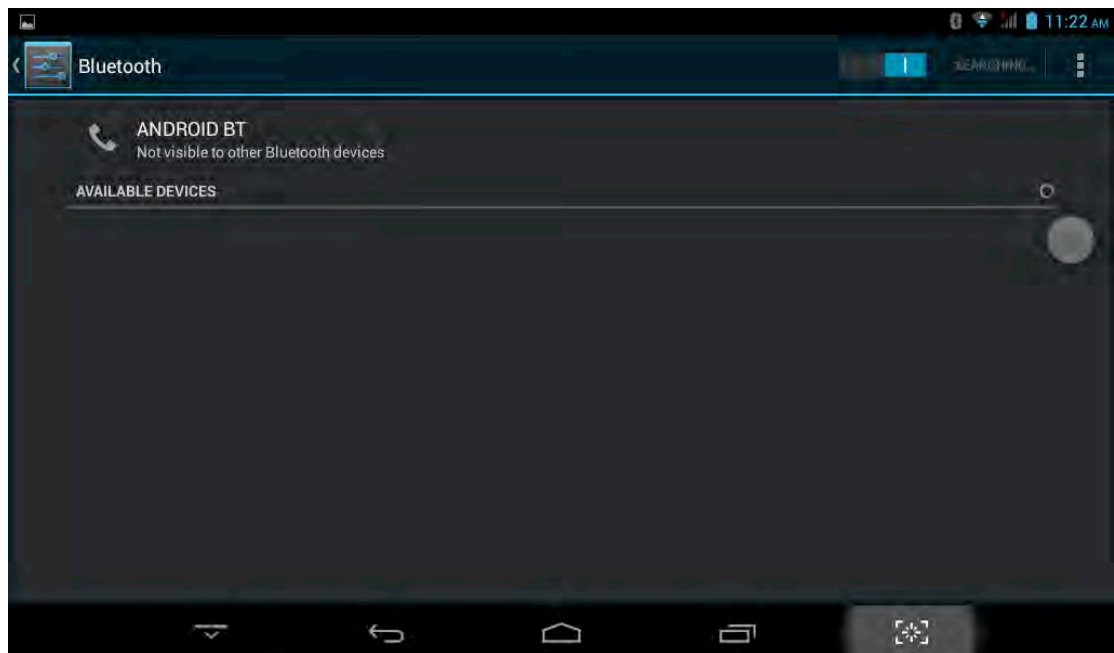

## Storage

 
Enter "Storage", you can see the storage device information, including the tablet capacity, external Micro-SD card capacity and usage. Below you will find a reference picture:



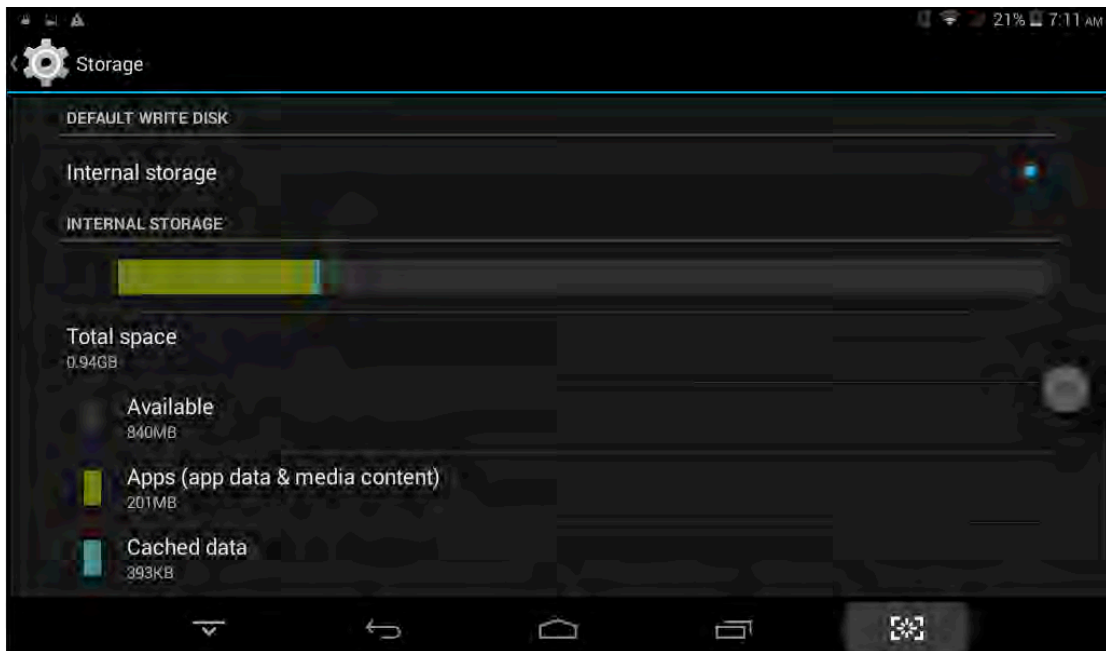


## Apps

 Enter “Apps” option where you can view the status of each APP, for example: the running, installed, and so on. Details as below:

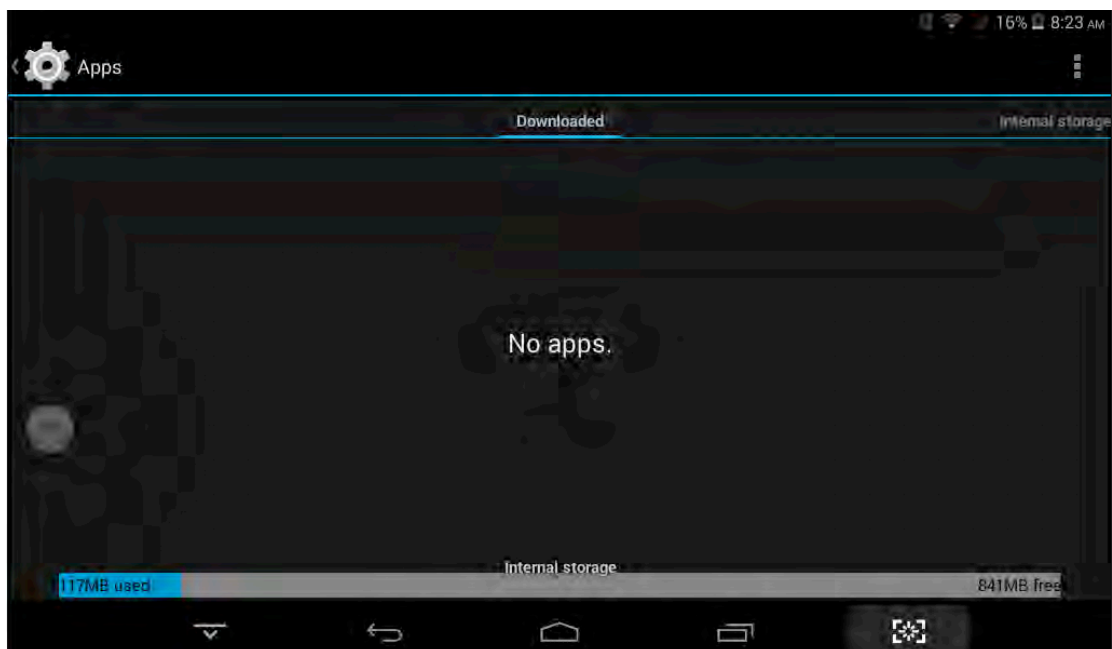


 Click on an individual APP, to enter to details, you can forcibly stop the corresponding APK, clear data, uninstall, move to SD card and other operations. Data loss may occur with certain applications.

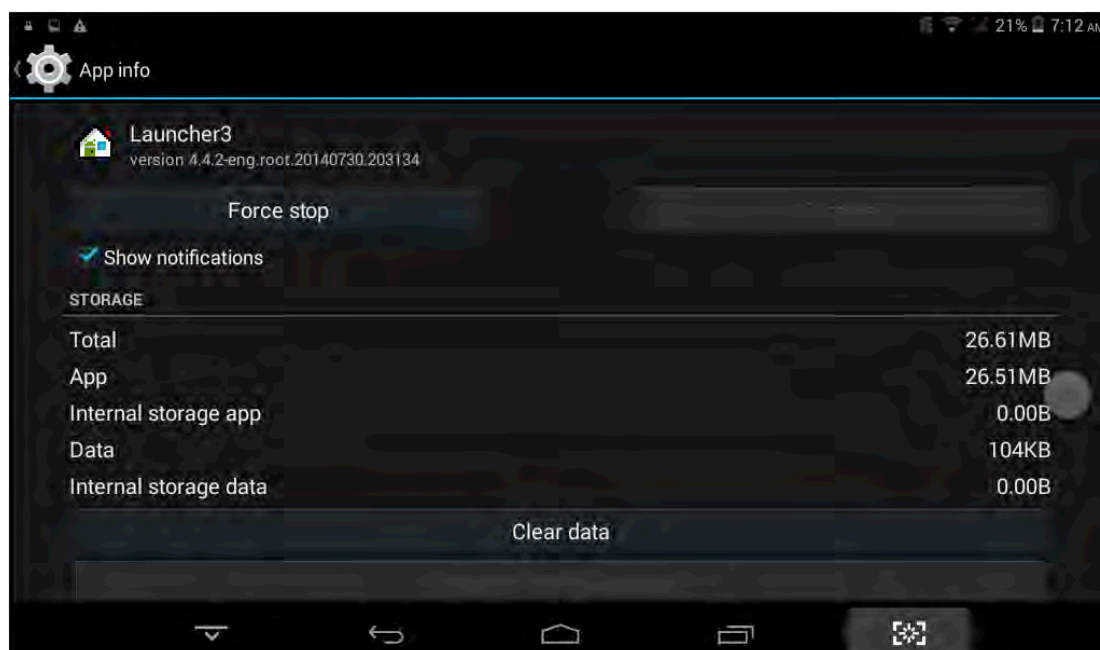


## Security

 Enter "Security" to set security settings, set the security password, pattern or others. Details as below:

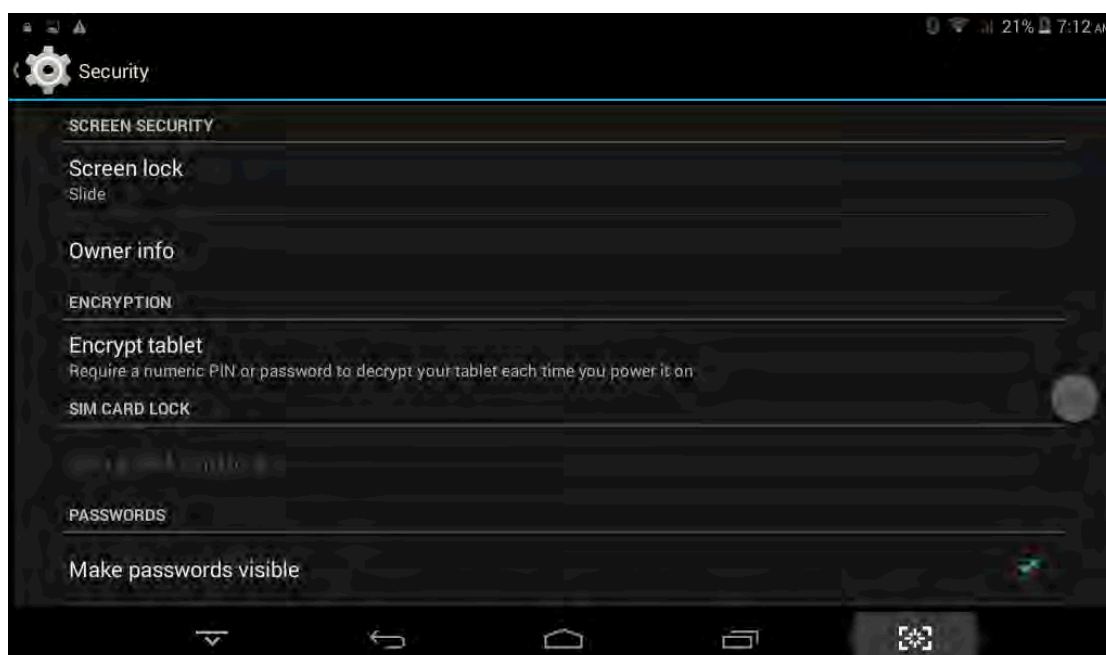


## Language & input

 Enter “Language & input”, can set the language and input. As shown below, click on the language to enter, you can set the machine language. (Under manual preparation process language library is the latest 4.4.2 system language libraries, however it may present changes on your device depending on software version pre-installed)

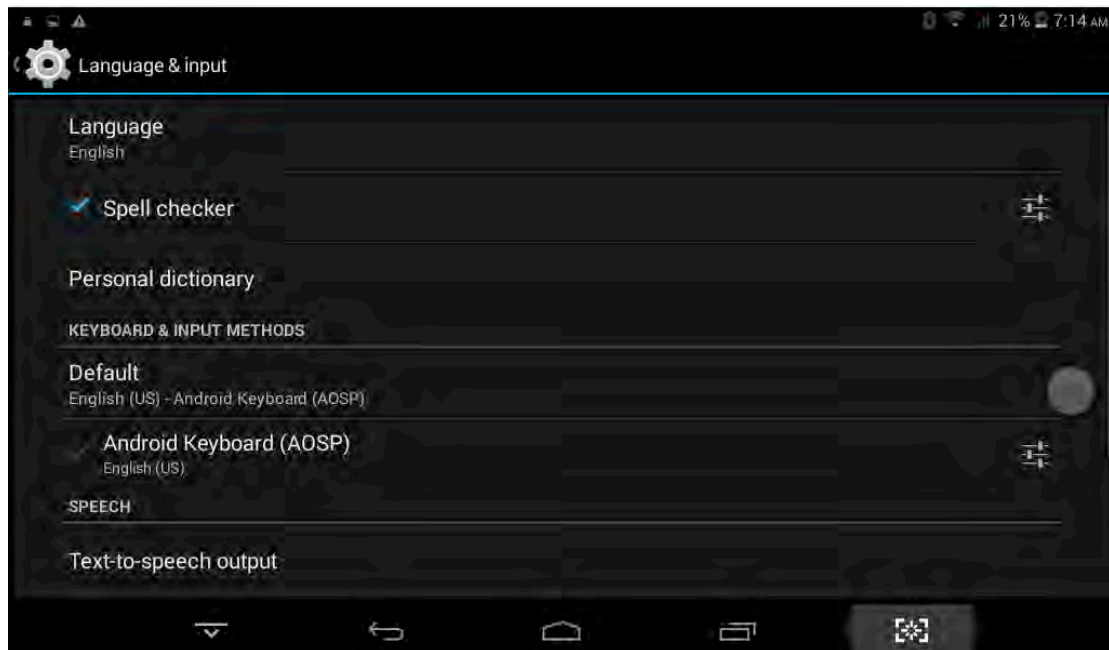

## Backup & reset

 Enter “Backup & reset”, can backup your information to prevent loss. Remark: Reset will empty all the user Information function, please carefully use this feature.

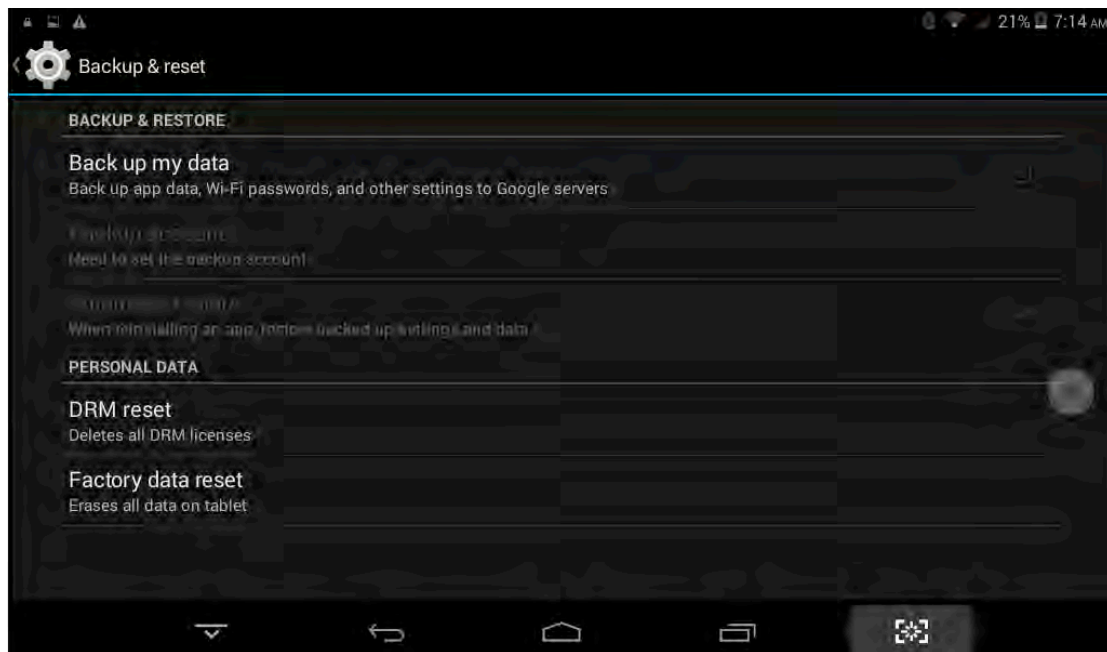

The relevant content of settings introduced here, users may enjoy yourselves on the remaining items!

## Application


Let us introduce some common used, information may present different on your device depending on software version for each market.

 
### Android system permissions management

Android system permissions management, management of third-party apk privacy rights. Force control the background operation which third-party APK may involve.

## Install APK




Click  to install APK, this APK can scan the all the APK storage, details as below:

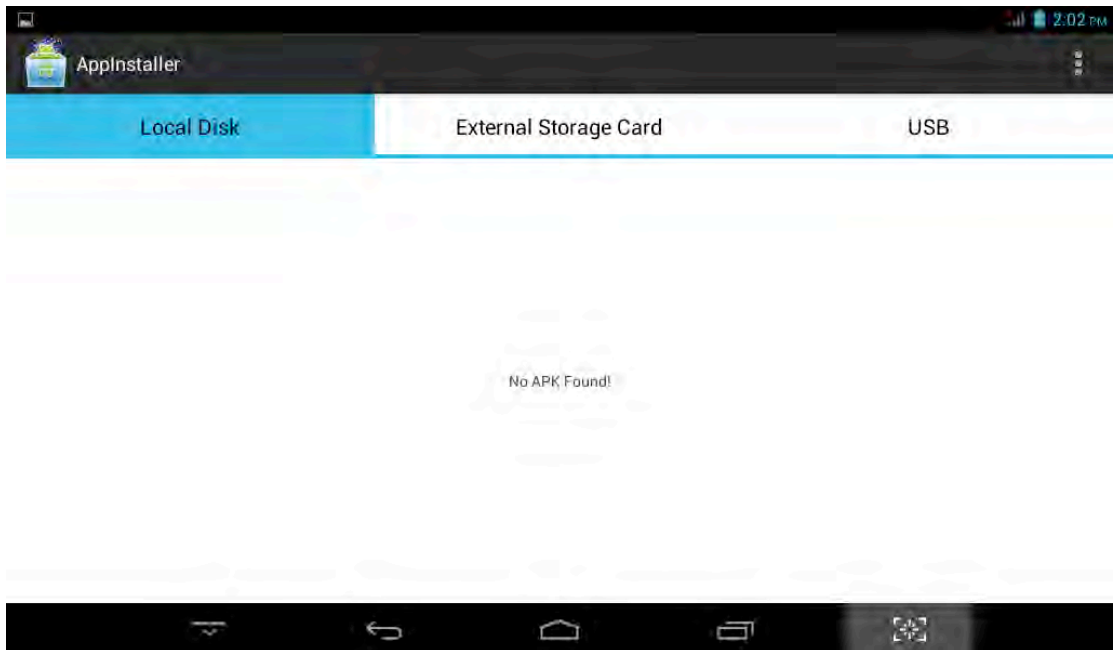

## Function icons

Below you will find a list of icons so you may activate proper functionality

Icon	Function
	Camera
	Video
	File manager
	Music
	Gallery
	Message
	Browser

## Trouble Shooting

If you have a problem with this device, please check the troubleshooting guide below.

Problem	Resolution
The Tablet does not turn on.	<ul style="list-style-type: none"><li>• Ensure that the tablet is fully charged. Try charging the Tablet overnight (8 hours).</li></ul>
The buttons does not work.	Switch –off and switch on the tablet
I cannot transfer files to the tablet.	<ul style="list-style-type: none"><li>• Ensure that your computer is running on a supported operating system platform.</li><li>• Check the USB extension cable, ensure that it is securely attached to the tablet and the PC, or try using another USB cable.</li><li>• Ensure that the tablet's memory capacity is full.</li></ul>
There is no sound during playback.	<ul style="list-style-type: none"><li>• Check the volume level.</li><li>• Ensure that the earphone is attached securely to the tablet.</li></ul>

## FCC Caution

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product



## Warranty



### PÓLIZA DE GARANTÍA

Descripción: \_\_\_\_\_

Modelo: \_\_\_\_\_

No. de serie: \_\_\_\_\_

Nombre del cliente: \_\_\_\_\_

Domicilio: \_\_\_\_\_

Ciudad: \_\_\_\_\_

Estado: \_\_\_\_\_

Fecha de compra: \_\_\_\_\_

Sello de la Tienda

**www.diamond-electronics.com**

Para localizar el centro de servicio más cercano a su domicilio, por favor consulte nuestra página WEB [www.diamond-electronics.com](http://www.diamond-electronics.com) en esta también puede escribirnos y ser atendido en línea a través de nuestro CHAT.  
Correo de atención: [polaroid@diamond-electronics.com](mailto:polaroid@diamond-electronics.com)

#### Horario de atención telefónica (Hora central de México)

Lunes a Viernes: 9:00 a 18:00 h

Sábado: 10:00 a 14:00 h

México, Guadalajara y Monterrey: **47 80 09 10**

Aguascalientes, Cd Juárez, Celaya, Cuernavaca, Matamoros, Mérida, Nuevo Laredo, Pachuca, Puebla, Querétaro, Reynosa, Saltillo, San Luis Potosí, Tijuana, Toluca, Torreón y Veracruz: **47 80 910**

Cancún, Culiacán, Hermosillo, León, Mexicali, Morelia y Tampico: **80 03 010**

Resto del país: 01 800 000 0081

Los consumidores pueden obtener las partes, componentes, consumibles y accesorios en:

Taller de Comercializadora Milenio:

Blvd. Juan Alessio No. 7510

Parque Industrial Pacífico

C.P. 22643 Tijuana B.C. Mex.

#### Responsable de la Garantía

COMERCIALIZADORA MILENIO, S.A. DE C.V.

Blvd. Juan Alessio No. 7510

Parque Industrial Pacífico

C.P. 22643 Tijuana B.C. Mex.

El aparato que usted ha recibido cuenta con una garantía de 1 año en la totalidad de las piezas; componentes del producto y mano de obra de la reparación a partir de la fecha de compra, así como gastos de transportación respectivos únicamente para el caso de que no haya un centro de servicio autorizado en su localidad.

La presente garantía será válida bajo las siguientes condiciones:

1. Para hacer efectiva la garantía, bastará presentar el producto junto con esta póliza debidamente sellada o en su defecto, el comprobante de compra en nuestro taller de servicio.
2. Comercializadora Milenio S.A. de C.V. se compromete a realizar una revisión de servicio y en su caso reparar o cambiar el artículo, si la falla es atribuible a defecto de fabricación.
3. El tiempo de reparación será máximo en 30 días a partir de la recepción del producto.

 
Esta garantía será nula en los siguientes casos:

- Cuando el producto se hubiese utilizado en condiciones distintas a las normales.
- Cuando el producto no hubiese sido operado de acuerdo al instructivo de uso que le acompaña.
- Cuando el producto hubiese sido alterado o reparado por personas no autorizadas por el fabricante nacional, importador o comercializador responsable respectivo.



Distributed by:  
Comercializadora Milenio S.A. de C.V.

© 2014 All Rights Reserved  
MADE IN CHINA



*Reconocible al instante. Al instante tranquilizador. El logo del Borde Clásico de Polaroid le hace saber que usted ha comprado un producto de calidad que ejemplifica lo mejor de nuestra marca y que contribuye a nuestro rico patrimonio de la calidad y la innovación.*

*Instantly recognizable. Instantly reassuring. The Polaroid Classic Border lets you know you've purchased a product that exemplifies the best qualities of our brand and that contributes to our rich heritage of quality and innovation.*