 


OPPO O-MUSIC


### Wearing the earphones

 Try the different size ear buds (small, medium, large). Select a pair of the appropriate size to ensure the richness of the bass.




1

2. Connect the headphones to O-Music.



2

 3. Wrap the headphone cable for the right ear around the back of your neck, adjust to a comfortable position and enjoy the music.

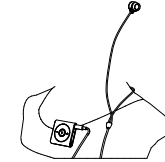


3

### Connecting to a phone

 When the headphones are used for the first time, the O-Music enters the Waiting for Connection mode.

1. Turn on the O-Music. Press and hold the Power button on the top of the O-Music for 1-2 seconds. When the blue indicator light flashes, the O-Music is on.




4

2. Enable Bluetooth on your phone, and search for devices. (For Android users, go to Settings-Bluetooth-Enable-Scan for devices; for iPhone users, go to Settings-Bluetooth-Enable).

3. Select O-Music. (Make sure that the O-Music is near your phone). If the O-Music does not enter the Waiting for Connection mode, you can double press the O-Music power button. When you hear the prompt "Waiting for Connection", the O-Music is ready to connect.

5

### Controls

 

6

1. Turn O-Music on or off  
Turn on: When the headphones are disabled, press and hold the power button until you hear "O-Music turned on".  
Turn off: When the headphones are enabled, press and hold the power button until you hear "O-Music turned off".  
2. Take photos  
Press the power button to take photos. Make sure that your phone is connected to the O-Music. (For non-ColorOS phones, you may need to start the camera manually).  
3. Use Google Now  
You can order certain smartphones to perform actions such as dialing a number or playing music by using voice commands. To use Google Now, press and hold the Play/Pause button until your phone asks you to give a command.

7

Note: For non-ColorOS phones, please contact your phone manufacturer for details about Google Now.  
4. Switch the voice prompt  
Press and hold the Power button and Volume Up at the same time.  
5. Play/Pause music  
Press the Play/Pause button.  
6. Skip to the next track  
Hold Volume Up for 1 second.  
7. Play the previous track  
Hold Volume Down for 1 second.  
8. Change the volume  
Press Volume Up or Volume Down.

8

9. Receive a call  
Press the Play/Pause button.  
10. Reject a call  
Press and hold the Play/Pause button for 1 second.  
11. End a call  
When you are in a call, press the Play/Pause button.  
12. Answer a second call  
Press the Play/Pause button once to put the first call on hold and answer the second call.  
Press the Play/Pause button twice to end the first call and answer the second call.  
If you want to switch between the two calls, press and hold the Play/Pause button for 1 second.  
If you want to finish the second call and return to the first call, press the Play/Pause button.

9

### Checking the battery status

You can press any button to view the battery status when the headphones are not playing any audio or video.  
Full: The battery is fully charged.

Medium: 50% of battery remaining.

Low: 20% of battery remaining, you can still use it for about an hour.  
Very low: 10% of battery remaining, you are advised to immediately charge the battery.

### Keeping the connection

The valid range for the Bluetooth connection between the phone and O-Music is about 10 meters. If the phone and O-Music are more than 10 meters apart, the sound quality may be affected, and they may become disconnected.

O-Music and your phone will attempt to re-connect once disconnected. If the re-connection fails, please press the Play/Pause button, or manually select the paired devices on your phone.

10

### Charging the battery

1. New O-Music has enough battery capacity for pairing and making some calls.

2. When the battery is low, please charge in a timely manner. It takes 2 hours to fully charge the O-Music. The indicator is red when charging, and will turn blue when fully charged.



11

### Warranty Information

Dear user, thank you for purchasing our product. A warranty service for damages caused by non-human factors is available for one year from the date of purchase. The warranty service includes: refund within 7 days, replacement within one month, and repair within one year.

To protect your legal rights, please note:

1. The warranty card becomes effective after it is stamped by the seller.  
2. Please keep the warranty card safe. If the card is lost, we will not provide a new one. The warranty card becomes invalid if altered.  
3. If the product fails due to non-human factors, you are advised to take your warranty card and the purchase invoice with the product number to our maintenance center to have it repaired for free. The warranty service is conditioned upon proper use of our products. It does not cover:

12

1. Defects or damage resulting from misuse that caused the product to fall or be submerged in water.  
2. Modifications or repairs carried out by unauthorized persons.  
3. Defects or damage resulting from using the product in a poor working environment.  
4. Defects or damage resulting from external causes including but not limited to fire, earthquake, and lightning.  
5. Defects or damage resulting from not following the user manual.  
6. Products whose SN and warranty card do not match or the warranty card is altered.  
7. Products whose SN and counterfeit mark are defaced or illegible. If your product is not covered in the warranty service and is repairable, you can choose our charged maintenance service.

13

### OPPO Warranty Card (For Users)

User Information (filled in by user):

Name: \_\_\_\_\_ Postal code: \_\_\_\_\_

Address: \_\_\_\_\_

Tel (with area code): \_\_\_\_\_

Product Information: \_\_\_\_\_

(Model/Color/SN/Other Information): \_\_\_\_\_

Seller Information: \_\_\_\_\_

Seller Name (with Stamp): \_\_\_\_\_

Seller Tel (with area code): \_\_\_\_\_

Seller Address: \_\_\_\_\_

Purchase Date: \_\_\_\_\_ (year) \_\_\_\_\_ (month) \_\_\_\_\_ (day)

Invoice Number: \_\_\_\_\_

Due to the used enclosure material, the product shall only be connected to a USB Interface of version 2.0 or higher. The connection to so called power USB is prohibited.

The suitable temperature for the product and accessories is -10°C-50°C.

CAUTION RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

Hereby, GUANGDONG OPPO MOBILE TELECOMMUNICATIONS CORP.,LTD declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.



FCC statements:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.