




# DRAFT

DVRC802E

# ELECTROHOME®

ENGLISH

## DVD-RW RECORDER & VCR USER MANUAL

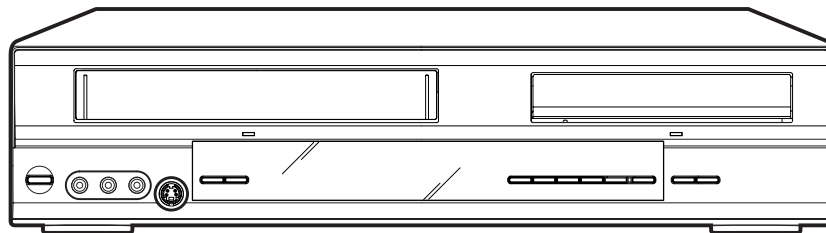

### ATTENTION

If you purchase a universal remote control from your local retailer, please contact the remote manufacturer for the required programming code.

### TV/CABLE MODE SELECTION

When shipped from the factory, the TV/CABLE menu option is set to the "CABLE" (Cable Television) mode. If not using Cable TV, set this menu option to the "TV" position.

Before operating the unit, please read this manual thoroughly.





# Contents

## Before using your unit

CAUTION .....	4
IMPORTANT SAFEGUARDS .....	5
Features .....	8
Disc .....	9
Handling discs .....	9
Discs which can be played back .....	9
Discs on which video can be recorded .....	10
Recording format .....	10
Disc playback in other players .....	11
Parts and functions .....	12
Front .....	12
Rear .....	12
Display window .....	13
Remote control .....	14
Power Source .....	15
Antenna connections .....	16
Cable TV connections .....	18
Connections with the TV or audio component .....	20
Auto clock setting .....	22
Setting the video channel .....	22

## Various settings

SETUP MENU .....	23
Using the SETUP MENU .....	23
Setting the language .....	24
OSD LANGUAGE .....	24
DVD MENU .....	24
AUDIO .....	24
SUBTITLE .....	24
Setting the parental control .....	25
Selecting parental control .....	25
Temporarily cancelling parental control .....	25
Setting the clock .....	26
CLOCK (manually) .....	26
AUTO CLOCK .....	26
STANDARD TIME (Time zone) .....	26
DAYLIGHT SAVING TIME .....	26
Setting the disc .....	27
REFORMAT .....	27
NEW DISC FORMAT .....	27
FINALIZE .....	27
PROTECT DISC .....	28
UNDO FINALIZE .....	28
Other (SYSTEM SETUP) .....	28
DIMMER (Brightness of the display window) .....	28
DISPLAY/CALL (Turning the screen display "ON" or "OFF") .....	28

Setting the screen .....	29
TV SCREEN .....	29
STILL MODE .....	29
LINE1 INPUT .....	29
LINE2 INPUT .....	29
Setting the image quality .....	30
BRIGHTNESS .....	30
Setting the audio .....	30
DRC .....	30
EXTERNAL AUDIO INPUT .....	30
SAP (Second Audio Program) .....	30
Setting the recording .....	31
INITIAL REC TO .....	31
INITIAL REC MODE .....	31
AUTO CHAPTER .....	31
INDEX PICTURE .....	31
Setting the channel .....	32
TV/CABLE SELECT .....	32
AUTO CH MEMORY .....	32
ADD/DELETE (channels) .....	32
Setting other items .....	32
JPEG INTERVAL .....	32

## Disc playback

Playback procedure .....	33
Playback by selecting a title .....	34
Checking media information .....	35
Special playback .....	36
Fast forward playback .....	36
Review playback .....	36
Still playback .....	36
Frame advance .....	36
Slow motion playback .....	36
Locating a chapter or track .....	36
Commercial skip .....	37
Locating a specific scene .....	37
Repeat playback .....	38
One touch repeat .....	38
A-B repeat playback .....	38
Title, Chapter repeat playback .....	38
Title selection .....	39
DVD menu .....	39
Changing angles .....	40
Zooming .....	40
Karaoke playback .....	40
Changing soundtrack language .....	41
Subtitles .....	41
Turning the subtitles On and Off .....	41
Various operations on CD .....	42
MP3/WMA/JPEG playback .....	44
Progressive scan .....	47



# Contents

## Tape playback

- Loading and unloading a cassette tape ..... 48
- Cassette tape playback ..... 49
- Special playback ..... 50
  - Picture search ..... 50
  - Still picture ..... 50
  - Slow motion ..... 50
  - Frame by frame picture ..... 50
  - Adjusting tracking condition ..... 50
  - Repeat playback ..... 50
  - Commercial skip ..... 50
  - To display VCR operation status ..... 50
- ZERO RETURN function ..... 51
- Video index search system ..... 51

## Dubbing

- Dubbing a tape onto a disc ..... 76
- Dubbing a disc onto a tape ..... 77
- Dubbing using other equipment ..... 78

## Additional information

- Glossary ..... 79
- Language code list ..... 81
- Error/Warning message list ..... 82
- Problems and troubleshooting ..... 83
- Video head cleaning ..... 84
- Specifications ..... 85
- WARRANTY ..... 86

## Recording

- Read this before recording on disc ..... 52
  - Types of disc ..... 52
  - Recording modes ..... 52
  - Disc remaining time ..... 53
  - Images that cannot be recorded ..... 53
- Recording a TV program ..... 54
- One-touch Timer Recording (OTR) ..... 56
- Timer recording ..... 57
- Stereo recording and playback ..... 60

## Editing the disc

- Editing the disc ..... 61
- Editing a playlist ..... 62
  - Creating a playlist ..... 62
  - Changing a title name ..... 63
  - Erasing a scene (Edit title) ..... 64
  - Combining the title ..... 66
  - Erasing a playlist ..... 67
- Editing an original title ..... 68
  - Adding a chapter mark ..... 68
  - Combining chapters ..... 69
  - Changing an original title name ..... 70
  - Erasing a scene (Edit title) ..... 71
  - Erasing an original title ..... 72
- Changing a disc name ..... 73
  - Changing a disc name ..... 73
  - Using the keyboard screen ..... 74

### Media mark



Each applicable media are indicated using the symbol shown below.

: DVD-Video	: DVD-R
: DVD-RW in VR mode	: Audio CD and CD-R/CD-RW
: DVD-RW in Video mode	: Video tape

- Before using your unit
- Various settings
- Disc playback
- Tape playback
- Recording
- Editing the disc
- Dubbing
- Additional information



# CAUTION

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN	
<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>		



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

**CAUTION:** TO PREVENT ELECTRIC SHOCK DO NOT USE THIS POLARIZED PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

**WARNING:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

**CAUTION:**  
THIS DIGITAL VIDEO PLAYER EMPLOYS A LASER SYSTEM.

TO ENSURE PROPER USE OF THIS PRODUCT, PLEASE READ THIS USER'S GUIDE CAREFULLY AND RETAIN FOR FUTURE REFERENCE. SHOULD THE UNIT REQUIRE MAINTENANCE, CONTACT AN AUTHORIZED SERVICE LOCATION-SEE SERVICE PROCEDURE.

USE OF CONTROLS, ADJUSTMENTS OR THE PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

 
TO PREVENT DIRECT EXPOSURE TO LASER BEAM, DO NOT TRY TO OPEN THE ENCLOSURE. VISIBLE LASER RADIATION MAY BE PRESENT WHEN THE ENCLOSURE IS OPENED. DO NOT STARE INTO BEAM.

## Location of the required Marking

The rating sheet and the safety caution are on the rear of the unit.

4

CERTIFICATION: COMPLIES WITH FDA RADIATION PERFORMANCE STANDARD, 21 CFR SUBCHAPTER J.





# IMPORTANT SAFEGUARDS

## 1. READ INSTRUCTIONS

All the safety and operating instructions should be read before the unit is operated.

## 2. RETAIN INSTRUCTIONS

The safety and operating instructions should be retained for future reference.

## 3. HEED WARNINGS

All warnings on the unit and in the operating instructions should be adhered to.

## 4. FOLLOW INSTRUCTIONS

All operating and use instructions should be followed.

## 5. CLEANING

Unplug this unit from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning the exterior cabinet only.

## 6. ATTACHMENTS

The manufacturer of this unit does not make any recommendations for attachments, as they may cause hazards.

## 7. WATER AND MOISTURE

Do not use this unit near water. For example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.

## 8. ACCESSORIES

Do not place this unit on an unstable cart, stand, tripod, bracket, or table. The unit may fall, causing serious injury, and serious damage to the unit.

- 8A. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

## 9. VENTILATION

Slots and openings in the cabinet back or bottom are provided for ventilation, to ensure reliable operation of the unit, and to protect it from overheating.

These openings must not be blocked or covered. The openings should never be blocked by placing the unit on a bed, sofa, rug, or other similar surface. This unit should never be placed near or over a radiator or heat source. This unit should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided and/or the manufacturer's instructions have been adhered to.

## 10. POWER SOURCES

This unit should be operated only from the type of power source indicated on the rating plate. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For units intended to operate from battery power, or other sources, refer to the operating instructions.

## 11. GROUNDING OR POLARIZATION

This unit is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug, if your unit is equipped with a 3-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This too, is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.

## 12. POWER-CORD PROTECTION

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

## 13. LIGHTNING

To protect your unit from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the unit due to lightning and power line surges.

Before using  
your unit

PORTABLE CART WARNING  
(symbol provided by RETAC)



S3125A



# IMPORTANT SAFEGUARDS

---

## 14. POWER LINES

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them might be fatal.

## 15. OVERLOADING

Do not overload wall outlets and extension cords, as this can result in a risk of fire or electric shock.

## 16. OBJECT AND LIQUID ENTRY

Do not push objects through any openings in this unit, as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid into the unit.

## 17. OUTDOOR ANTENNA GROUNDING

If an outside antenna or cable system is connected to the unit, be sure the antenna or cable system is grounded to provide some protection against voltage surges and built-up static charges, Section 810 of the National Electrical Code, ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

## 18. SERVICING

Do not attempt to service this unit yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

## 19. DAMAGE REQUIRING SERVICE

Unplug this unit from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a. When the power-supply cord or plug is damaged.
- b. If liquid has been spilled, or objects have fallen into the unit.
- c. If the unit has been exposed to rain or water.
- d. If the unit does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the unit to its normal operation.
- e. If the unit has been dropped or the cabinet has been damaged.
- f. When the unit exhibits a distinct change in performance, this indicates a need for service.

## 20. REPLACEMENT PARTS

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

## 21. SAFETY CHECK

Upon completion of any service or repairs to this unit, ask the service technician to perform safety checks to determine that the unit is in proper operating condition.

## 22. HEAT

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

## 23. DISC TRAY

Keep your fingers well clear of the disc tray as it is closing. It may cause serious personal injury.

## 24. CONNECTING

When you connect the product to other equipment, turn off the power and unplug all of the equipment from the wall outlet. Failure to do so may cause an electric shock and serious personal injury. Read the owner's manual of the other equipment carefully and follow the instructions when making any connections.

## 25. LASER BEAM

Do not look into the opening of the disc tray or ventilation opening of the product to see the source of the laser beam. It may cause sight damage.



# IMPORTANT SAFEGUARDS

## 26. DISC


Do not use a cracked, deformed, or repaired disc. These discs are easily broken and may cause serious personal injury and product malfunction.

## 27. NOTE TO CABLE TV SYSTEM INSTALLER

This reminder is provided to call the cable TV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Before using your unit

EXAMPLE OF ANTENNA GROUNDING AS PER THE NATIONAL ELECTRICAL CODE

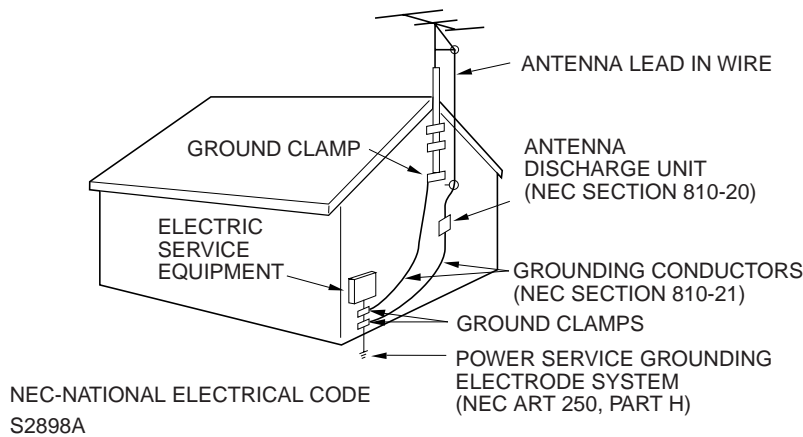

## MOISTURE CONDENSATION

**DO NOT OPERATE THIS DVD/VCR FOR AT LEAST TWO OR THREE HOURS WHEN MOISTURE IN THE AIR CONDENSES ON THE DVD/VCR.**

### WHAT IS MOISTURE CONDENSATION?

When cold liquid is poured into a glass, for example, water vapour in the air will condense on the surface of the glass. This is called moisture condensation.

### MOISTURE WILL CONDENSE ON THE UNIT IN THE FOLLOWING CASES;

- When you move this DVD/VCR from a cold to a warm place.
- After heating a cold room or under extremely humid conditions.

### WHEN YOU EXPERIENCE THE ABOVE CONDITIONS;

Plug the power cord into an AC outlet, set the power switch to ON and leave the unit at room temperature until moisture condensation disappears. Depending on the surrounding conditions, this may take from two or three hours.

- \* This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.
- \* Consumers should note that not all high definition television sets are fully compatible with this product and may cause artifacts to be displayed in the picture. In case of 525 progressive scan picture problems, it is recommended that the user switch the connection to the "STANDARD DEFINITION" output. If there are questions regarding our TV set compatibility with this model 525p DVD player, please contact our customer service center.
- \* Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.
- \* "DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.
- \* Unauthorized recording of copyrighted television programs, films, video cassettes and other materials may infringe the rights of copyright owners and be contrary to copyright laws.





# Features

Not only can you playback and record video tapes, but you can also playback DVD discs or make recordings using DVD-RW, DVD-R discs with this unit. In addition, you can enjoy editing the programs you record.

## Playback function

### A realistic, powerful, Movie Theater sound



When connected to Dolby Digital and DTS compliant devices, you can enjoy realistic, powerful surround sound.

### Playback the scene you want to see immediately



As DVD's do not require rewinding like video tapes, you can get to the scene you wish to watch immediately. A variety of search functions allow you to find the scene you wish to watch.

### Title menu



As thumbnail images are displayed in the title menu, you can find the title you want to play back quickly.

- Thumbnail image will not appear after finalizing DVD-RW (recorded in the Video mode) and DVD-R.

### MP3/WMA/JPEG playback



MP3 and WMA files can be played back. Also, you can display JPEG files on the TV screen and enjoy them as a slide show.

### Progressive scan



This unit supports the progressive scanning system. If your TV is equipped with component video input jacks which support the progressive video input, you can enjoy high quality picture.

## Recording function

### Timer recording



The timer recording system allows you to select the date, time and channel and record the desired programs. Up to 12 timer programs within a month can be stored in this unit.

### One-touch Timer Recording (OTR)



The One-touch Timer Recording feature provides a simple and convenient way to make a timed recording.

## Edit function

### Editing recorded material without changing the original titles



You can create a playlist based on the original titles. The playlist won't affect the original titles. If you erase the playlist, the original titles remain. It is recommended to create and edit the playlist to prevent important titles from being erased accidentally.

### Chapter mark



You can add (or delete) a chapter mark to (from) the original title. This function is useful when searching for the scene you wish to watch that you have marked with the Chapter mark function.

### Erasing scenes



You can erase an unnecessary scene from the created playlist or the original titles.

### Combining titles



You can combine several original titles or playlists to a separate playlist.

## Dubbing function

### Dubbing a tape onto a disc or a disc onto a tape



With just this one unit, you can dub however you like, from video tape to disc, or from disc to video tape.

- Dubbing cannot be carried out when attempting to copy a "copy guarded" video tape or disc.





# Disc

## Handling discs

### Removing the Disc from its case

Be sure to hold the disc by its edges. Do not touch the surface of the disc.

Take the disc carefully from its case.



- Do not scratch the disc.
- Do not get dirt on the surface of the disc.
- Do not stick labels or adhesive tapes on the disc.
- Do not drop or bend the disc.


### Storing discs

- Store the disc in the case to avoid any risk of scratches, dirt or damage.
- Do not leave the disc exposed to direct sunlight or in hot or humid places.

### Cleaning discs

Wipe the disc with a clean, dry cloth from the center outward toward the edges.

- Do not wipe the disc in a circular motion around the center.
- Do not use liquid or aerosol cleaners.

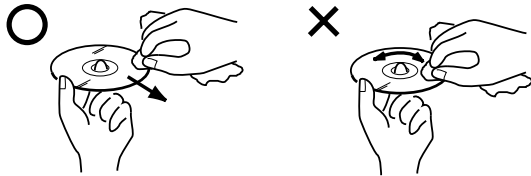

### Discs which can be played back

In this unit, use only discs that meet the standard, such as those bearing the below logo marks on the disc label surface. If you use a non-standard disc, we cannot guarantee playback. Even if such a disc can be played back, we cannot guarantee the image or sound quality. The DVD logo is a registered trademark.

Media type	Logo mark
DVD-Video	
DVD-RW Ver.1.0 Ver.1.1 Ver.1.2 Ver.1.1 CPRM support	
DVD-R Ver.2.0 (Ver.2.0/4x/8x)	
Audio CD*	
CD-R/CD-RW	

\* This unit is designed to playback music Compact Discs (CD) that conform to the CD standard. CDs that contain (copy-restriction) signals to protect copyrights cannot be played back.

## Region management information

This unit is designed and manufactured to support the region management information that is recorded on a DVD disc. If the region number written on the DVD disc does not correspond to the region number of this unit, this unit cannot play that disc.

- The region number of this unit is "1".
- The unit will play DVD-Video discs marked with labels containing "1" or "ALL".

Example:



## Operating DVD-Video

- Some operations of DVD-Video may be prohibited by the manufacturer, or some operation methods or functions of the DVD-Video may be different from the description in this manual.
- If you attempt an operation that is prohibited by either the disc or the unit, a "W" mark will appear on the TV monitor. For operations prohibited by the disc, see the information that came with the disc.
- When the menu screen or the operation guide appears during disc playback, follow the displayed information.

## Discs which cannot be played back

The discs listed below cannot be played back in general. Even if one of these can be played back, it may not be played back correctly. If a disc is played back by mistake, extensively loud sounds may blow the speakers or may damage the hearing of those in hearing range. Do not playback the discs listed below.

CDG, Photo-CD, CD-ROM, CD-TEXT, CD-EXTRA, VCD, SVCD, SACD, PD, CDV, DVD-ROM, DVD-RAM, DVD+R/RW, DVD audio, etc.

### The below DVD-Video may not be played back.

- DVD-Video that do not have the region number "1" or "ALL".
- PAL or SECAM DVD-Video.
- Prohibited or business-use DVD-Video.

### Use only CD-R discs and CD-RW discs - all other CD discs will not work in this unit.

### CD-R/CD-RWs cannot be played back for the following reasons.

- Compatibility of the disc and this unit.
- Compatibility of the disc and the recorder used.
- Unfinalized discs.

### Do not playback the following discs. Playback of these discs may cause a failure.

- Discs on which paper, labels or stickers are affixed.
- Discs that have sticky areas left by adhesive tape.
- Special-shaped discs.

Before using your unit



# Disc

## Discs on which video can be re-corded

To record video with this unit, use the discs below:

Media type	Logo mark
DVD-RW Ver.1.0 Ver.1.1 Ver.1.2 Ver.1.1 CPRM support	
DVD-R Ver.2.0 (Ver.2.0/4x/8x)	

### DVD-RW

- The disc can be erased and used again about 1,000 times.
- Only the VR mode can be used for Ver.1.0 discs.
- With Ver.1.1/1.2 discs, you can record by selecting the VR mode or Video mode.
- When you record in the VR mode, you can repeatedly record and erase. By erasing unnecessary titles, you effectively increase remaining time.
- When you record in the Video mode, you can record until the disc becomes full.
- When you use the Video mode, you can newly record on the disc by formatting the disc. However, if the disc is formatted, all the recorded contents will be erased.

### DVD-R

- You can record on the disc only in the Video mode.
- You can record until the disc becomes full.
- Finalizing the discs allows playback on other DVD players. However, the finalized discs can no longer be recorded.
- Discs can be recorded to repeatedly until they are finalized.

### NOTES:

- There are some players that cannot playback discs that were recorded with this unit. We cannot guarantee the playback with other units.
- This unit cannot record on DVD-R and DVD-RW discs that are 8 cm in diameter.
- This unit cannot record on CD-R or CD-RW.

## Recording format

This unit has two modes for formatting discs for recording: VR mode and Video mode.

When a blank, new disc is loaded into this unit, the automatic format function starts to format the disc. (For the disc format setting in this step, see page 27.)

### VR mode

- This mode can be used for DVD-RW.
- In this mode, the discs can be recorded and edited repeatedly.
- The disc recorded in this mode can be played back with other DVD-RW-compatible players.
- When a Ver.1.1 CPRM or Ver.1.2 disc is used, you can record a "Copy Once" program (see page 53).

### Video mode

- This mode can be used for DVD-R and DVD-RW (Ver.1.1/1.2).
- When you finalize the disc after recording, the disc recorded with this unit can be played back with other DVD players.
- Recording, editing or playback of an unfinalized disc can be done only with this unit. However, there are some limitation to editing operations.
- In this mode, you cannot record a "Copy Once" program (see page 53).
- When you record a TV program of a bilingual broadcast, only one of the audio modes can be recorded. You have to select it.

## Format modes that can be used each disc

The usable format depends on the media type as shown in the below table.

Media type	Format	Available functions
DVD-RW (Ver.1.0)	VR mode	Playback, recording and editing (Original/playlist)
DVD-RW (Ver.1.1 and 1.2)	VR mode	Playback, recording and editing (Original/playlist)
	Video mode	Playback and recording Editing (with limitation)
DVD-R (Ver.2.0/4x/8x)	Video mode	Playback and recording Editing (with limitation)




# Disc

## Title/Chapter/Track

A DVD-Video has large partitions called "Titles", and smaller partitions within them called "Chapters".

A music CD has other partitions called "Tracks". A number is allotted to each partition and these numbers are called "title numbers", "chapter numbers" or "track numbers".

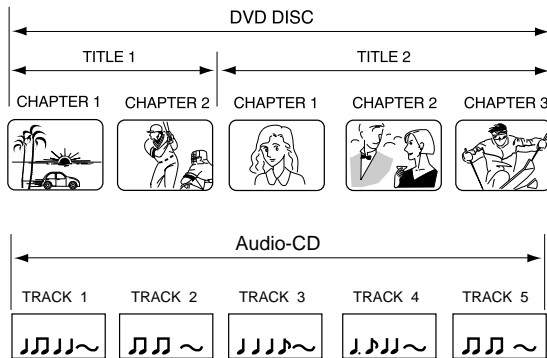

## When recording in the VR mode

One-time recording is set to 1 title (1 chapter). However, if you stop recording temporarily or erase scenes by editing, the chapter will automatically be partitioned. The interval between chapters can be specified. (See page 31.)

## When recording in the Video mode

One-time recording is set to 1 title. In recording, chapters are set automatically. The interval between chapters can be specified. (See page 31.)

### NOTES:

- The title, chapter and track are numbered, but some discs may not record the numbers.
- Recording on DVD-R/RW in the Video mode is a new standard approved at the 2000 DVD forum. Conformity to this standard varies with each DVD player manufacturer. Some models of DVD player or DVD-ROM drive, therefore, will not playback recorded videos.

## Disc playback in other players

A disc recorded in this unit can be finalized. The disc can be played back in other players that can playback DVD-RW and DVD-R.

For more information on finalization, see "FINALIZE" in "Setting the disc" (page 27).

## When recording in the VR mode

Even if a disc recorded in the VR mode is finalized, you can record or edit by cancelling the finalization. (See "UNDO FINALIZE" on page 28.)

When you playback the disc with another player, make sure that the DVD player supports DVD-RW and bears the following mark.



## When recording in the Video mode

When a disc recorded in the Video mode is finalized, it cannot be recorded onto any more. Therefore, before finalization, be sure to perform all desired recording. After finalization, a title list that can be used by the DVD player is automatically created.

### NOTES:


- The finalization process may require from a few minutes up to 1 hour depending on the disc type and the amount of free space on the disc.
- A DVD-RW Ver.1.1/1.2 recorded in the Video mode cannot be recorded or edited after finalization, but if you format the disc by erasing all the content, you can again record on this disc.
- A finalized disc may not play because of the condition of the DVD or the compatibility with the player used for playback.
- Some players may not playback the discs recorded with this unit. We cannot guarantee the playback using other players.

Before using your unit




# Parts and functions

## Front

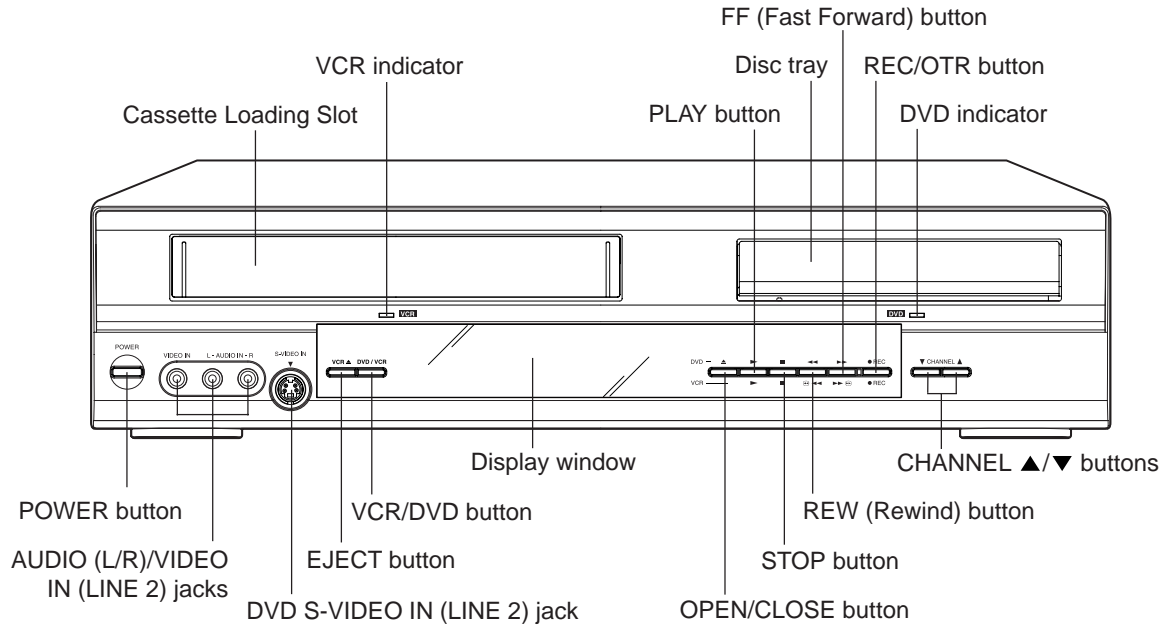


## Rear

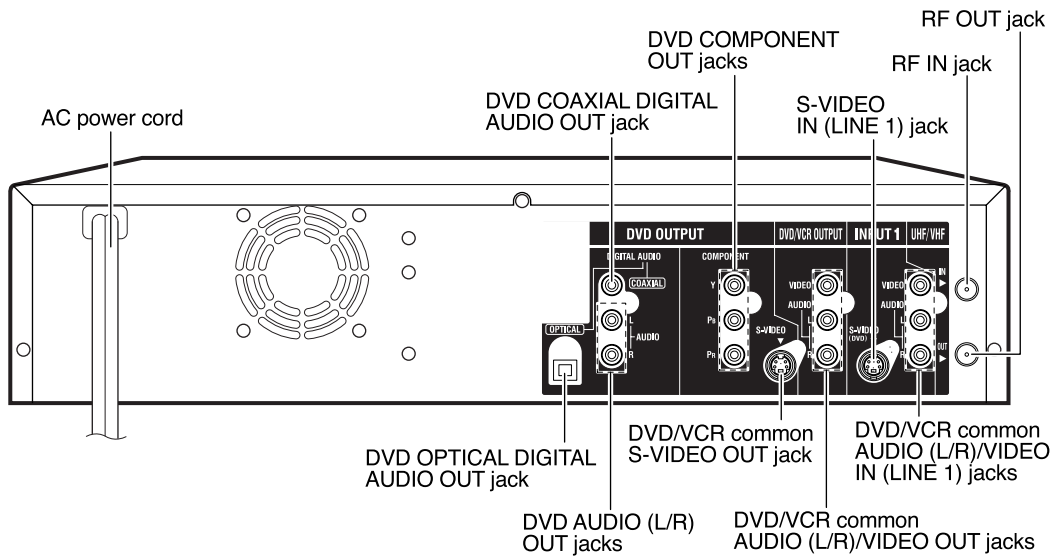



# Parts and functions

## Display window

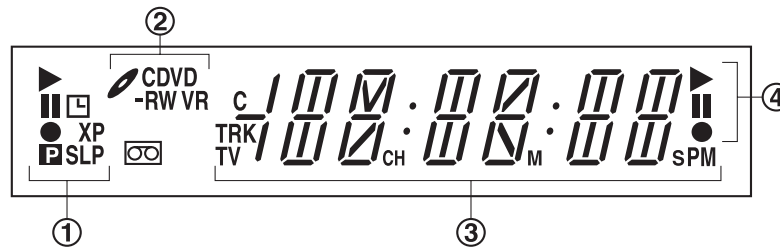

Before using  
your unit


No.	Display	Description
①		Lights during video tape playback.
		Video tape is temporarily stopped.
		Lights during video tape recording.
		Progressive scanning mode.
		Timer recording display.
	XP/SP/LP/SLP	4 DVD recording modes. XP, SP, LP or SLP can be selected in turn by pressing the REC MODE/SPEED repeatedly.
	SP/SLP	2 VCR recording modes. SP or SLP can be selected in turn by pressing the REC MODE/SPEED repeatedly.
②		Appears when a CD is inserted.
		Appears when a CD-R is inserted.
		Appears when a CD-RW is inserted.
		Appears when a DVD-Video is inserted.
		Appears when a DVD-R is inserted.
		Appears when a DVD-RW is inserted.
	VR	Appears when a DVD-RW in VR mode is inserted. When the disc is set to video mode, VR does not appear.
		Video tape is in the unit.
③	10:00	Clock display (Colon [ : ] flashes).
	01H00M00s	Counter display in hour/minute/second for VCR/DVD, minute/second for CD.
	C 36CH	Cable TV channel display.
	2CH	TV channel display.
	TRK 002	Track number display for CD.
	TV	Appears when the tuner built into this unit is not selected. When you press TV/VIDEO disappears.
	PM	Display for afternoon (out in the morning).
	L1/L2	The external input channel (L1 or L2) display.
	Err	Error display.
④		Lights during playback of DVD and CD. Flashes in auto resume.
		DVD or CD is temporarily stopped.
		Lights during DVD recording.

**NOTE:**

Some discs may not playback correctly, or chapter number, playback time, etc may not be displayed.

# Parts and functions

## Remote control



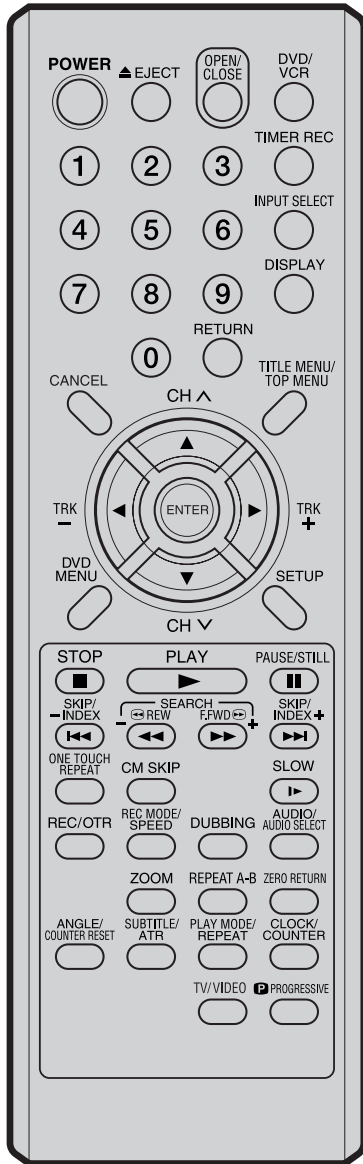


		Page
POWER	Turns power on/off	22
EJECT	Ejects the cassette tapes	48
OPEN/CLOSE	Opens or Closes the tray.	33
DVD/VCR	Switches to operation between VCR and DVD	33, 49, 76, 77
0-9	Direct channel selection of TV	54
	Setting input	37, 74
	Entering a password	25
TIMER REC	Sets the unit to start recording at a preset time	59
INPUT SELECT	Switches between the external inputs	78
DISPLAY	Displays VCR or DVD operation status	35, 51
RETURN	Close the menu window	23, 45
CANCEL	Deletes the Timer recording program	59
	Cancels input data in the setting mode	25
TITLE MENU/TOP MENU	Selects titles of a DVD disc	34, 39, 42, 62
CH ^/v	Channel selection for the connected TV or VCR	54
▲ / ▼	Cursor buttons	23, 33, 37, 57
TRK +/-	Manual tracking in the playback mode for VCR	50
◀ / ▶	Cursor buttons	33, 37
ENTER	Option selection in the menu	23, 33, 37, 57
DVD MENU	Displays the menu of the DVD disc	39
SETUP	Displays the setup menu	23, 57
STOP	Stop	33, 49, 55
PLAY	Playback	33, 49
PAUSE/STILL	Still picture/Recording pause on/off	36, 50
SKIP ◀▶	Skips chapters in the forward or reverse direction	36
INDEX -◀▶	Searches for the INDEX mark of a tape	51
REW/SEARCH -	Rewind/Review playback	36, 49, 50
F.FWD/SEARCH +	Fast Forward/Forward search playback	36, 49, 50
ONE TOUCH REPEAT	Repeats playback between the section played	
	10 seconds before and present section	38
CM SKIP	Skips commercial breaks	37, 50
SLOW	Slow motion playback	36, 50
REC/OTR	Recording	54, 56, 78
REC MODE/SPEED	Selects the recording mode	54, 56
DUBBING	Copies VCR to DVD or DVD to VCR	76, 77
AUDIO/AUDIO SELECT	Switches sound between mono and stereo	60
	Changes the language of the DVD	41
ZOOM	Zoom	40
REPEAT A-B	Repeats playback between A and B	38
ZERO RETURN	Stops the tape when the counter reaches 00:00m00s	51
ANGLE	Changes playback angle	40
COUNTER RESET	Resets the counter to 00:00m00s	51
SUBTITLE	Selects subtitles of the DVD disc	41
ATR	Digital AUTO TRACKING	50
PLAY MODE	Selects the playback mode	37
REPEAT	Repeats playback	38, 50
CLOCK/COUNTER	Changes the front panel display mode	51
TV/VIDEO	Switches input between the TV and VCR	22, 55
<b>P</b> PROGRESSIVE	Activates the progressive scanning mode	47

# Parts and functions

## Inserting Batteries into the Remote Control:

- 1 Open the battery compartment cover in the direction of the arrow.
- 2 Install two "AAA" batteries (not supplied), paying attention to the polarity diagram in the battery compartment.
- 3 Replace the compartment cover.

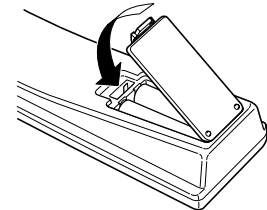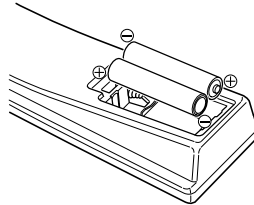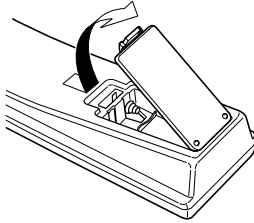

Before using  
your unit

## Battery precautions

The precautions below should be followed when using batteries in this device:


1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device. To avoid a potential short circuit, insert the "-" end first.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)

## Remote control basics


- Press **POWER** to turn the DVD/VCR on or off.
- Press **CH ^** or **CH v** to move through the channels one channel at a time.
- The **▲/▼/◀/▶** are also used to navigate on-screen menu system.
- You can directly access specific channels using **numeric keys**.
- Each press of **DVD/VCR**, switches the screen between the DVD screen (DVD mode) and the VCR screen (VCR mode).

## Operation

- Aim the remote control at the remote sensor and press control buttons to operate.
- Operate the remote control within 30° angle on either side of the remote sensor, up to a distance of approximately 5 meters (15 feet).

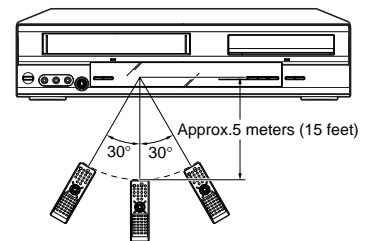

## Power Source

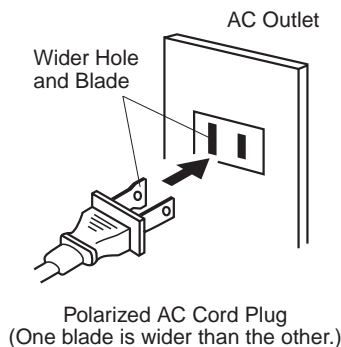

## TO USE AC POWER SOURCE

Use the AC polarized line cord provided for operation on AC. Insert the AC cord plug into a standard 120V 60Hz polarized AC outlet.

## NOTES:

- Never connect the AC line cord plug to other than the specified voltage (120V 60Hz). Use the attached power cord only.
- If the polarized AC cord does not fit into a non-polarized AC outlet, do not attempt to file or cut the blade. It is the user's responsibility to have an electrician replace the obsolete outlet.
- If you cause a static discharge when touching the unit and the unit fails to function, simply unplug the unit from the AC outlet and plug it back in. The unit should return to normal operation.






# Antenna connections

If you are using an antenna system, follow these instructions. If you are a cable TV subscriber, skip ahead to page 18 for the proper connections.

## ANTENNA TO DVD/VCR CONNECTION

The DVD/VCR must be connected "between" the antenna and the TV. First, disconnect the antenna from the TV and connect it to the DVD/VCR. Then connect the DVD/VCR to the TV. Below are 3 common methods of connecting an antenna system to a DVD/VCR. Find the type of antenna system you are using and follow the connection diagram.

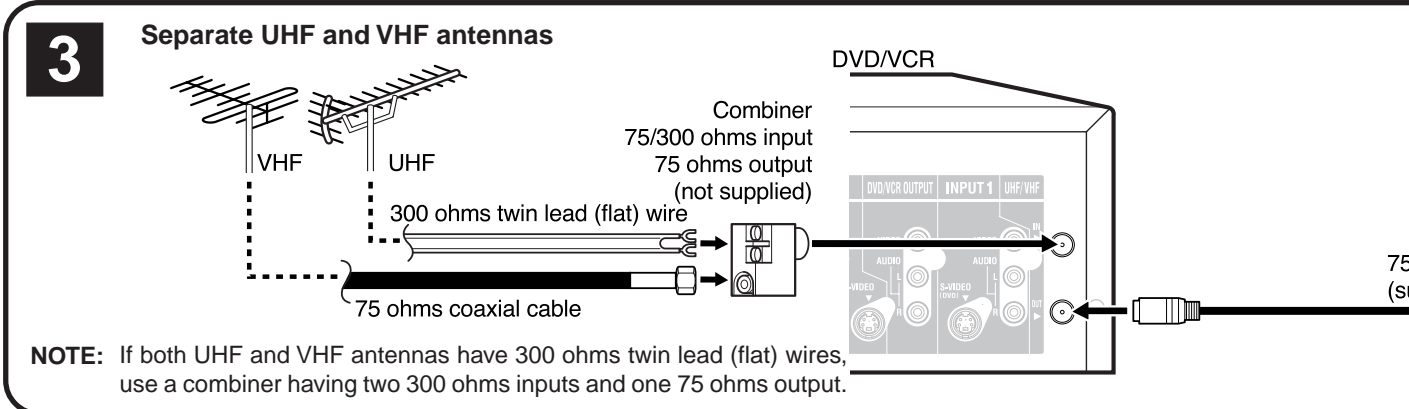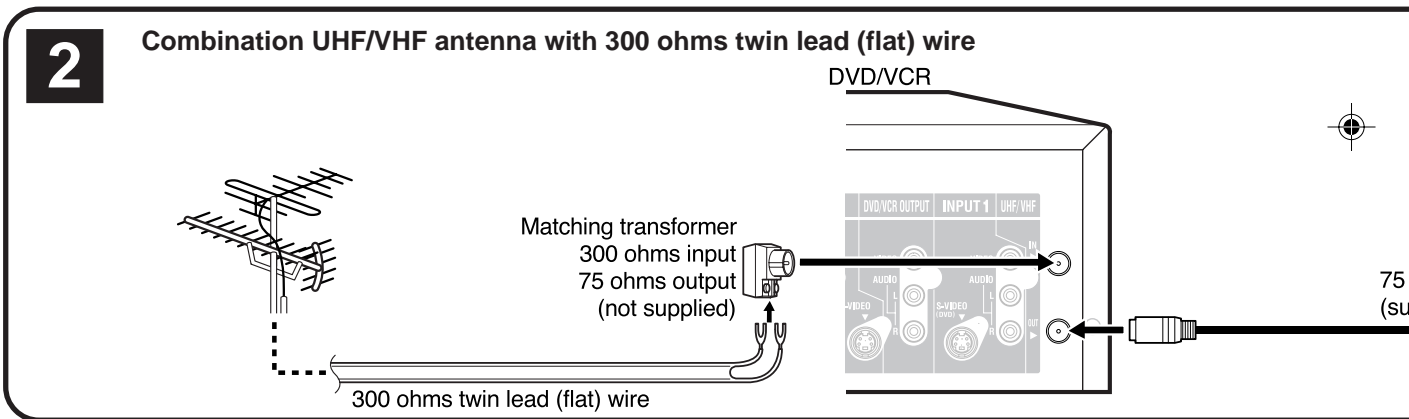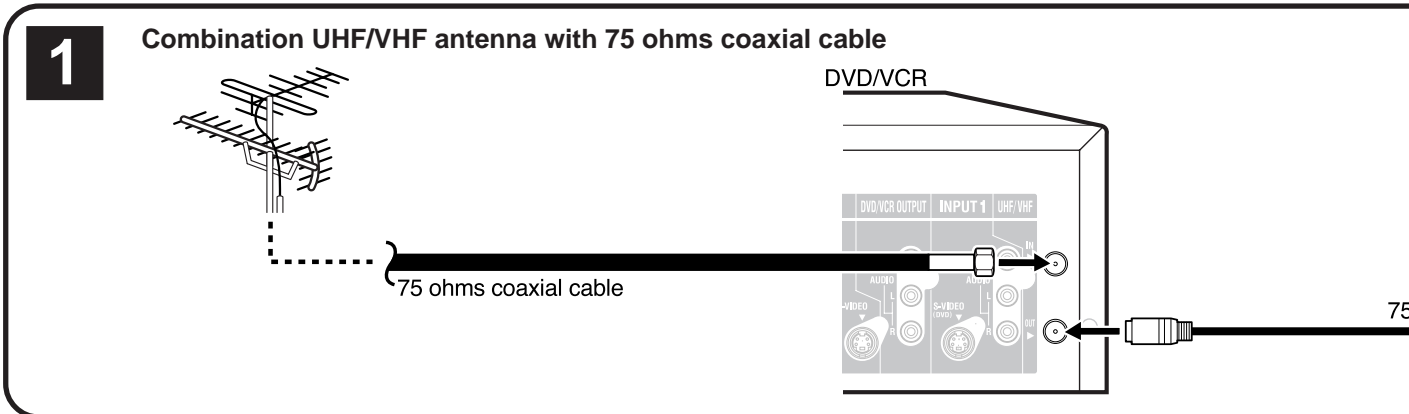

**NOTE:** If both UHF and VHF antennas have 300 ohms twin lead (flat) wires, use a combiner having two 300 ohms inputs and one 75 ohms output.

- NOTES:**
- A clear picture will not be obtained by the DVD/VCR unless the antenna signal is good. Connect the antenna to the DVD/VCR properly.
  - For better quality recording, an indoor antenna or a telescopic antenna is not recommended. The use of an outdoor type antenna is required.
  - If you are not sure about the connection, please refer to qualified service personnel.




# Antenna connections

## DVD/VCR TO TV CONNECTION

After you have connected the antenna to the DVD/VCR, you must connect the DVD/VCR to the TV. Below are 3 common methods of connecting your DVD/VCR to a TV. Find the type of TV you are using and follow the connection diagram.

This DVD/VCR has a single 75 ohms output for connection to a TV. If your TV has separate UHF and VHF antenna inputs (numbers 2 and 3 below), use a splitter to connect the DVD/VCR to the TV for UHF and VHF reception.

Before using  
your unit

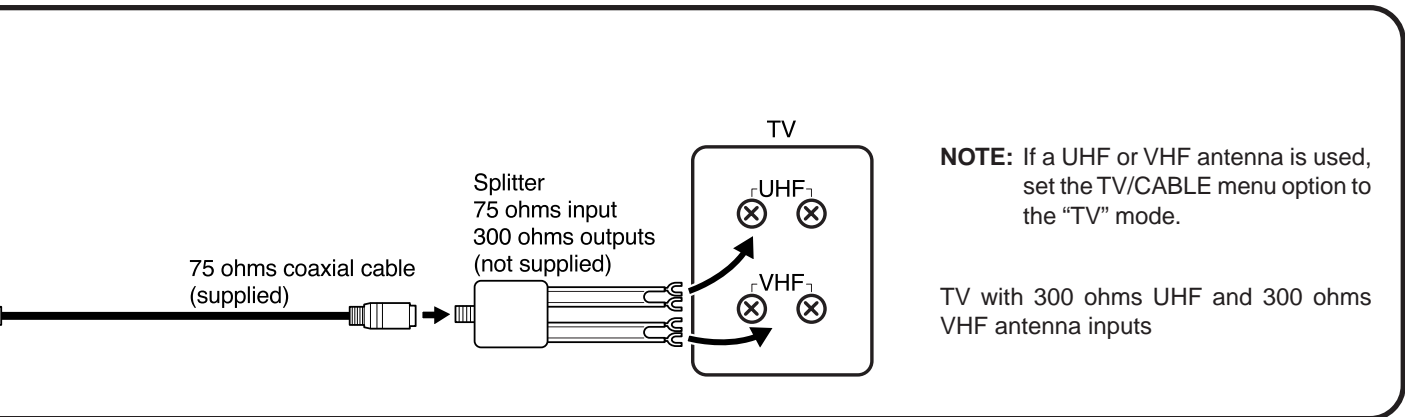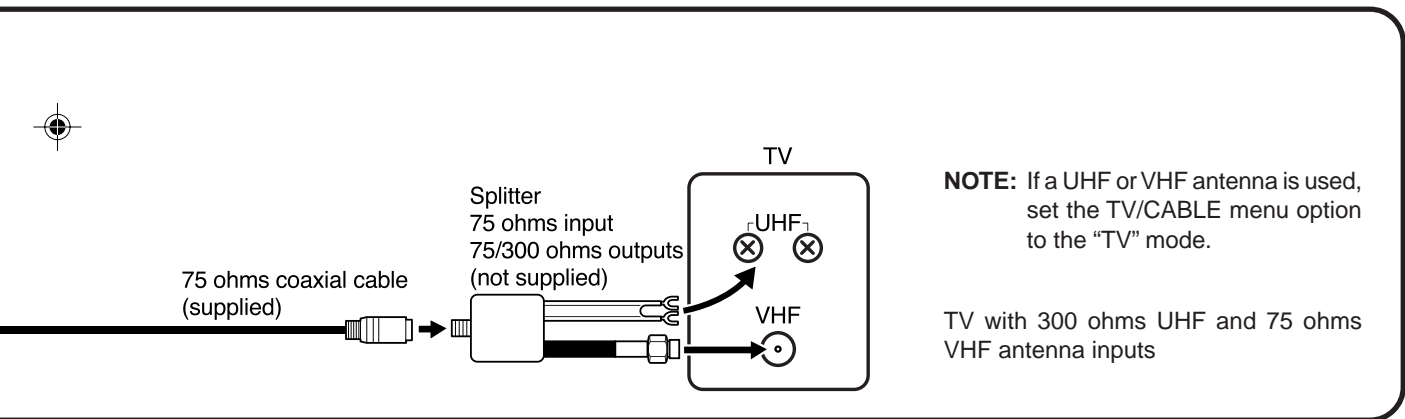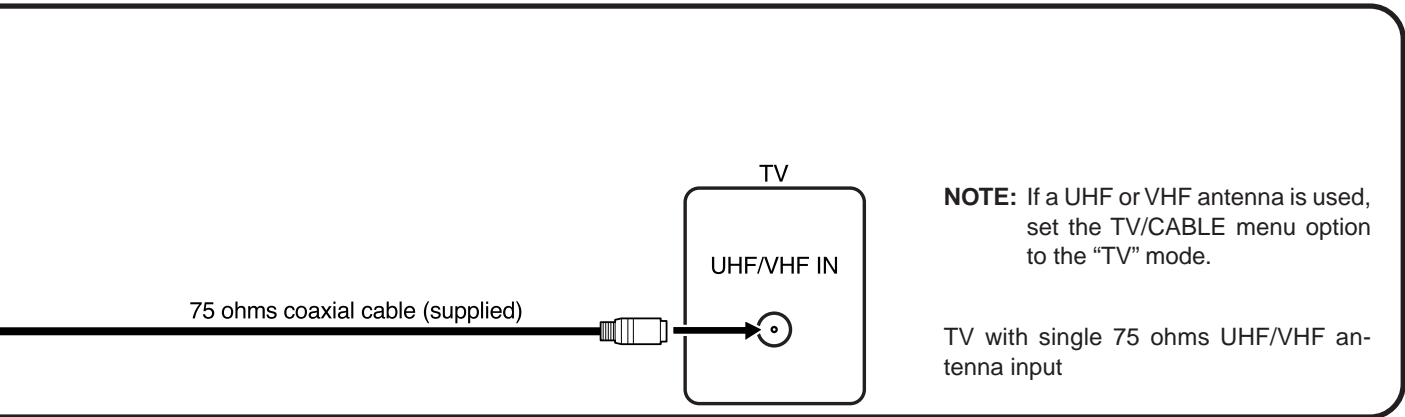

# Cable TV connections

Many cable TV companies offer services permitting reception of extra channels including pay or subscription channels. This DVD/VCR has an extended tuning range and can be tuned to most cable channels without using a cable TV company supplied converter box, except for those channels which are intentionally scrambled. If you subscribe to a special channel which is scrambled, you must have a descrambler box for proper reception.

**1**

DVD/VCR

TV

UHF/VHF IN (ANT)

INCOMING CABLE

DVD/VCR OUTPUT INPUT 1 UHF/VHF

**ALLOWS:**

- Recording of nonscrambled channels.
- Use of the programmable timer.
- Recording of one channel while watching another.

**2**

DVD/VCR

TV

UHF/VHF IN (ANT)

INCOMING CABLE

Converter/descrambler

DVD/VCR OUTPUT INPUT 1 UHF/VHF

**ALLOWS:**

- Recording of channels through the converter box (scrambled and unscrambled).
- Using the programmable timer to record only the channel selected at the converter box.

**PREVENTS:**

- Recording one channel while watching another.
- Using the DVD/VCR tuner to select channels.

**NOTE:**  
To record from converter/descrambler, DVD/VCR tuner must be tuned to the converter output channel, usually channel 3 or 4.

**3**

DVD/VCR

TV

UHF/VHF IN (ANT)

INCOMING CABLE

Converter/descrambler

DVD/VCR OUTPUT INPUT 1 UHF/VHF

**ALLOWS:**

- Recording of nonscrambled channels.
- Use of the programmable timer.
- Recording an unscrambled channel while watching any channel selected at the converter box.

**PREVENT:** Recording scrambled channels.

**NOTE:**  
If you are playing a tape or using the tuner built into the DVD/VCR, the converter must be set to the video channel output of the DVD/VCR (either 3 or 4).

**NOTE:** Whenever a converter/descrambler box is placed before the DVD/VCR, you must tune the DVD/VCR to the output of the converter/descrambler box, usually channel 3 or 4.



# Cable TV connections

**IMPORTANT: Make sure the TV/CABLE menu option is set to the "CABLE" mode.**

This DVD/VCR cannot receive scrambled programs since it does not contain a descrambler. In order to receive scrambled programs, your existing descrambler must be used. Descrambler boxes are available from cable companies. Consult your local cable company for more information concerning connection to their descrambler equipment. There are many ways to connect your DVD/VCR to a cable system. Below are six common methods of connection.

Before using your unit

**4**

**ALLOWS:**

- Recording of one channel while watching another.
- Using the programmable timer to record only the channel selected at the converter box.
- Recording of all channels through the converter box.

**PREVENTS:**

- Watching scrambled channels while recording another channel.
- Using the DVD/VCR tuner to select channels.

**5**

**ALLOWS:**

- Recording of nonscrambled channels.
- Recording of one channel while watching another.
- Watching premium channels through the converter while recording nonscrambled channels.
- Using the programmable timer.

**PREVENT:** Recording scrambled channels.

**6**

**ALLOWS:**

- Recording of all channels through the converter box.
- Recording a scrambled or unscrambled channel while watching another (scrambled or unscrambled) channel.
- Using the programmable timer to record only the channel selected at the converter box.

**PREVENT:** Using the DVD/VCR tuner to select channels.


# Connections with the TV or audio component

The exact arrangement you use to interconnect various video and audio components to the DVD/VCR is dependent on the model and features of each component. Check the Owner's Manual provided with each component for the location of video and audio inputs and outputs.

## Connect to a TV with Audio/Video output


You can enjoy playback by connecting the unit to a TV.

Connect the unit to a TV equipped with audio input (L/R) and video input jacks using the supplied audio/video cable.

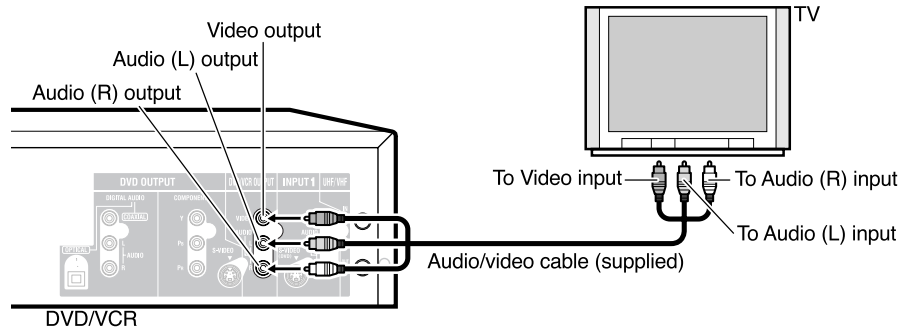


## Connect to a TV with S-Video output

If your TV has an S-Video input, you can get higher quality by connecting it with the S-Video output of the unit using the S-Video cable instead of connecting the video input of the TV to the video output jack of the unit.

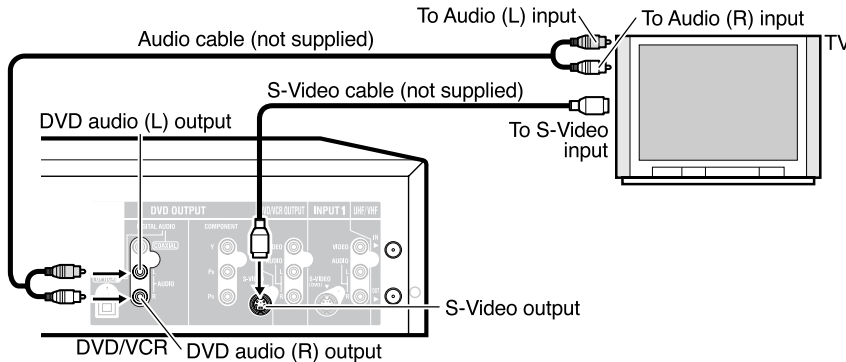

## Connect to a TV with Component video output (for DVD/CD playback)

You can enjoy the highest quality picture by connecting the unit's component video out jacks to the component video input jacks of your TV, with component video cables (not supplied).

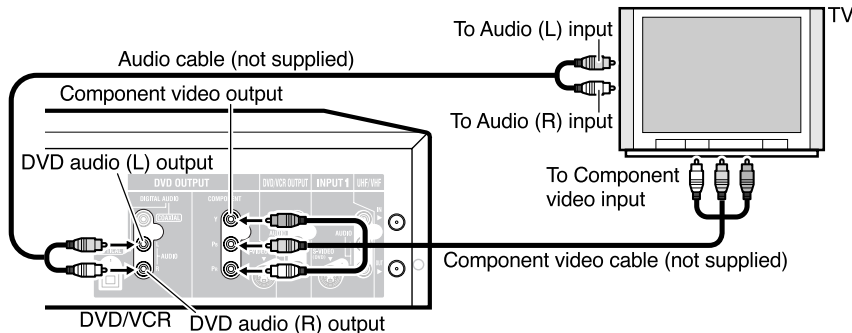


### NOTES:

- When connecting to a TV using the video or S-Video jack, make sure that the progressive indicator on the display window is not lit. If it is lit, the video and S-Video outputs do not feed the correct signals and you cannot see any picture. To turn off the progressive indicator, make the progressive scanning mode inactive (see page 47).
- If the component video input jacks on a TV are the BNC type, use an adapter to convert the RCA jacks from the component video cables to BNC (not supplied).

# Connections with the TV or audio component

## Connect to a stereo amplifier with audio output

You can enjoy high quality audio by connecting the audio output to your amplifier. Connect the audio output jacks to any line-level inputs (such as AUX, DVD, CD, etc.) of an audio amplifier.

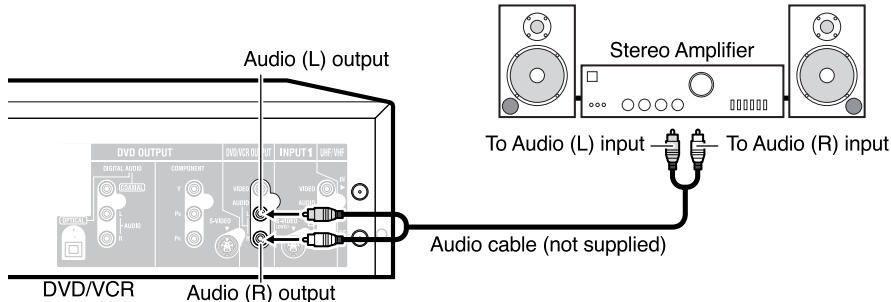

Before using your unit

## Connect to an AV Amplifier with built-in digital surround


If you are using an Amplifier with a built-in digital surround as follows, you can enjoy the various audio systems such as Dolby Digital and DTS by using the optical or coaxial digital output.

Use this connection to connect an:

- AV amplifier with built-in \*Dolby Digital decoder
- AV amplifier with built-in \*DTS decoder

### NOTE:

You may connect to a TV with a component video cable (not supplied) or S-Video cable (not supplied) instead of a video cable (not supplied).

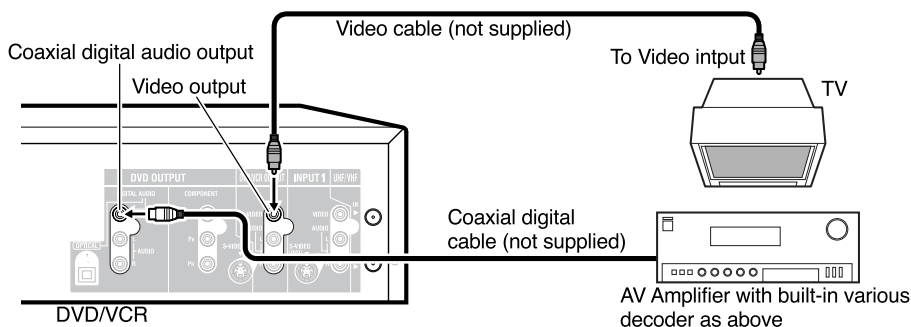

## Connecting the optical digital cable

You may connect to an AV Amplifier with an optical digital cable (not supplied) instead of a coaxial digital cable.


When you connect the optical digital cable (not supplied), remove the dust protection cap from the rear panel. When not using the optical digital cable, attach the dust protection cap to protect against dust.

### NOTES:

- The DVD OUTPUT jacks (OPTICAL, COAXIAL, AUDIO L/R and COMPONENT) are useful only for DVD section. The VHS signal is output only from the S-Video output jack, composite jacks (DVD/VCR OUTPUT) and UHF/VHF OUT.
- When you make the connections above, do not set DOLBY DIGITAL to DOLBY DIGITAL or DTS to ON on the AV amplifier. If you do, a loud noise will suddenly come out from the speakers, affecting your ears or causing the speakers to be damaged.
- Caution for the optical digital audio output connector: Do not connect to an amplifier (with an optical digital input connector) which does not contain a Dolby Digital or DTS decoder. Otherwise, any attempt to play DVDs may cause such a high level of noise that it may be harmful to your ears and damage your speakers.
- DTS audio will be output only from the COAXIAL or OPTICAL output. To hear DTS audio, DTS-Decoder is necessary.
- When playing DTS-encoded CDs, only noise will be heard from the speakers or analog stereo outputs.
- Some DTS decoders which do not support DVD-DTS interface may not work properly with the unit.
- The optical or coaxial digital output jack output sounds in the bitstream.

# Auto clock setting / Setting the video channel

## Auto clock setting

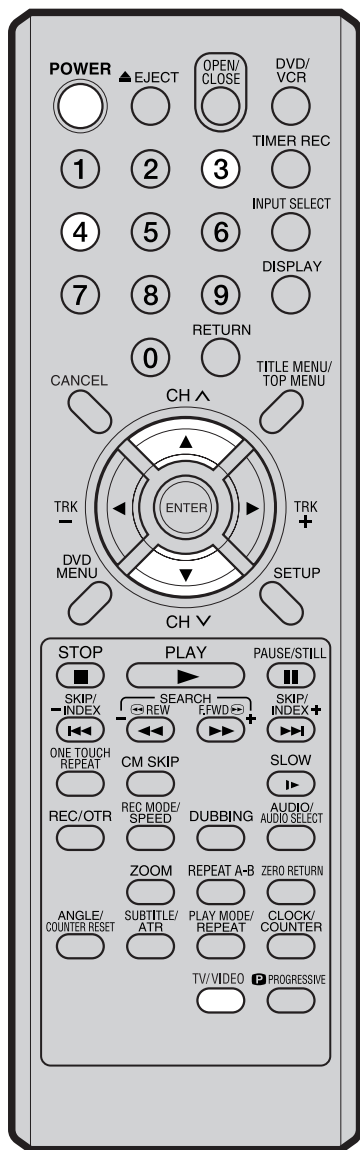

### Preparation:

You must connect the antenna or cable before connecting the AC cord to the power source.

Wait at least 3 minutes with the power turned off, after the antenna or cable is connected, for the auto clock feature to activate.

After the clock is set automatically, you may have to set the time zone and daylight saving time. (See page 26.)

Press **POWER** to turn on the DVD/VCR after the auto clock operation completed.

- When shipped from factory, the "AUTO CLOCK" option is set to "ON" position.
- If you turn the DVD/VCR on during auto clock setting, the clock is not set.
- Depending on the reception condition, auto clock setting may take approx. 30 minutes.
- After a power failure or disconnection of the power plug, the clock will be lost. In this case, wait 3 minutes before turning the DVD/VCR on.
- With cable box connection, if the auto clock setting is unsuccessful, select the PBS channel carrying the XDS information, then turn the DVD/VCR off. After 3 minutes, turn the DVD/VCR on.
- If the clock is not set automatically, set the clock manually. (See page 26.)

## Setting the video channel

To view playback of a recorded tape or DVD disc, or to watch a program selected by the VCR's channel selector, the TV must be set to channel 3 or 4 (video channel).

When a TV is connected with the 75 ohms coaxial cable only:

- 1 Press and hold **3** or **4** on the remote control for 3 seconds **in the standby mode** to select CH **3** or **4**. The selected channel number will flash on the display for about 4 seconds.
- 2 Turn ON the TV and set to CH **3** or **4** to correspond with the channel selected in step 1.
- 3 Press **POWER** to turn on the DVD/VCR.
- 4 Press **TV/VIDEO** to select the VIDEO position. The TV indicator will disappear in the display.
- 5 Select any channel to receive a TV station in your area. The channel number will appear on the screen for about 4 seconds.

### For a push-button TV tuner

If CH **3** or **4** corresponding to the video channel cannot be tuned on your TV, proceed as follows: set the VCR 3/4 channel selector and the TV to CH **3** or **4**, playback a prerecorded tape and tune the TV to receive a sharp color picture from the video cassette recorder. Refer to your TV owner's manual for details.

### NOTES:

- When shipped from factory, the video channel is set to CH 3.
- If the unit does not operate properly, or there is no key operation from the unit and/or the remote control: Static electricity, etc., may affect the operation. Disconnect the AC power cord over 30 minutes, then connect it again.




# SETUP MENU


The **SETUP MENU** consists of several menus where you can make various settings concerning language, audio functions, and images. In addition, this menu includes a clock, channel and other things that require setting just after purchase. For details of each menu, see the corresponding section in this chapter.

## Using the SETUP MENU


The following example shows the basic setting procedure of the SETUP MENU. The remote control keys that operate the SETUP MENU are displayed at the bottom of the screen.

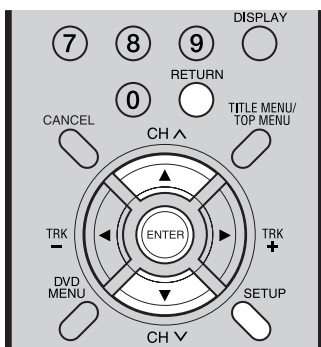


- 1 Press **SETUP** while the DVD or video tape is stopped. The **SETUP MENU** screen will appear.

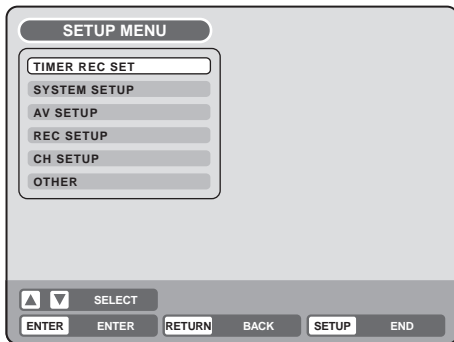

- 2 Press **▲** or **▼** to select the desired menu and press **ENTER**. The submenu screen of the selected menu will appear.

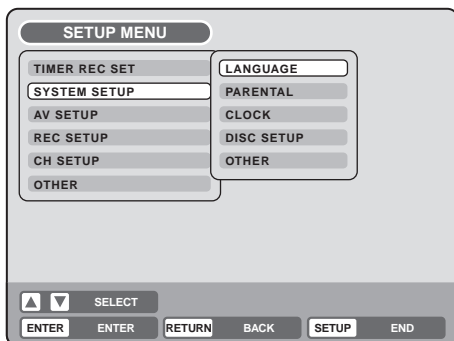


- 3 Press **▲** or **▼** to select the desired submenu and press **ENTER**. The screen for the selected submenu will appear.

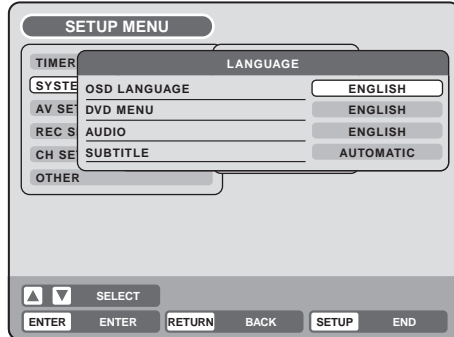

Various settings

- 4 Press **▲** or **▼** to select the desired item you want, and press **ENTER**. Selectable items will be listed.

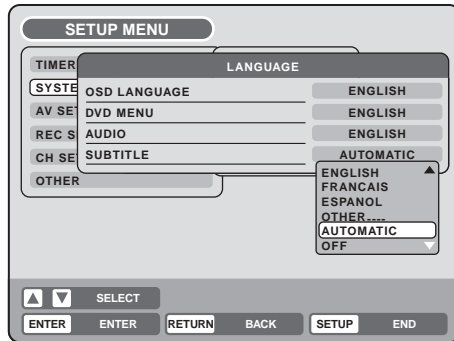

- 5 Press **▲** or **▼** to select the desired item and press **ENTER**. This completes the setting procedure.
  - To return to the previous screen, press **RETURN**.
  - To close the **SETUP MENU**, press **SETUP**.

### NOTES:

- For items that require different operations from the basic setting procedure, the setting procedure is described in each individual section.
- The item which is indicated by green color cannot be selected.
- "TIMER REC SET" cannot be selected when the clock is not set.




# Setting the language

You can choose the language of the menu screen, DVD menu, DVD audio and subtitles.

### Preparation:

- Turn ON the TV and set it to the video input mode.
- Select “LANGUAGE” from “SYSTEM SETUP”. For the procedure, see steps 1 to 3 in “Using the SETUP MENU” on page 23.

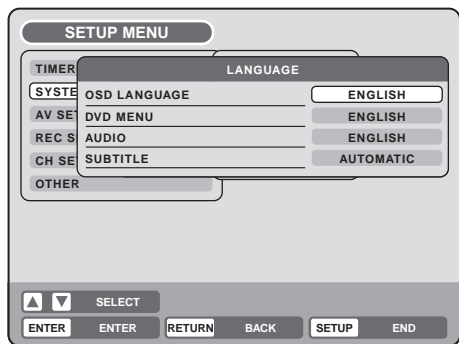

## OSD LANGUAGE

You can set the language for on screen display. Select “OSD LANGUAGE” and select the language from the list below.

**Selectable languages:**  
ENGLISH, FRANCAIS, ESPANOL

## DVD MENU

When several menu languages are recorded on a DVD, you can select the language to be used for the DVD menu. Select “DVD MENU” and select the language from the list below.

**Selectable languages:**  
ENGLISH, FRANCAIS, ESPANOL  
The selected language is the first priority menu language.

**OTHER**  
If you want to select another language, before pressing **ENTER**, input the language code by using the **numeric keys**. (See the Language code list on page 81). Then press **ENTER**.  
• If you input a wrong number, press **CANCEL**.

## AUDIO

When several audio languages are recorded on a DVD, you can select the audio language to be played back. The selected language remains in effect after the power is turned off or the disc is replaced. Select “AUDIO” and select the audio language from the list below.

**Selectable languages:**  
ENGLISH, FRANCAIS, ESPANOL

The language you have selected will play if it is recorded on the disc.

**ORIGINAL**  
The unit will select the first priority language of each disc.

**OTHER**  
If you want to select another language, before pressing **ENTER**, input the language code by using the **numeric keys**. (See the Language code list on page 81). Then press **ENTER**.  
• If you input a wrong number, press **CANCEL**.

**NOTE:**  
If the selected language is not recorded on the disc, the first-priority language is selected.

## SUBTITLE

When several subtitles languages are recorded on DVD, you can select the language to be used for the subtitles. The selected language remains in effect after the power is turned off or the disc is replaced. Select “SUBTITLE” and select the menu language from the list below.

**Selectable languages:**  
ENGLISH, FRANCAIS, ESPANOL  
The subtitle is displayed with the selected language if it is recorded on the disc.

**OTHER**  
If you want to select another language, before pressing **ENTER**, input the language code by using the **numeric keys**. (See the Language code list on page 81). Then press **ENTER**.  
• If you input a wrong number, press **CANCEL**.

**AUTOMATIC**

- The unit will automatically select the same language in the AUDIO setting.
- When the unit selects the same language as the AUDIO setting, the subtitles will not appear during playback.
- When you do not use the same language as the AUDIO setting, the subtitles will appear during playback.

**OFF**  
Subtitles do not appear.

**NOTE:**  
If the selected language is not recorded on the disc, the first-priority language is selected.




# Setting the parental control

Some discs are specified as not suitable for children. This unit can prevent playback of such discs.

## Preparation:

- Turn ON the TV and set it to the video input mode.
- Select "PARENTAL" from "SYSTEM SETUP". For the procedure, see steps 1 to 3 in "Using the SETUP MENU" on page 23.

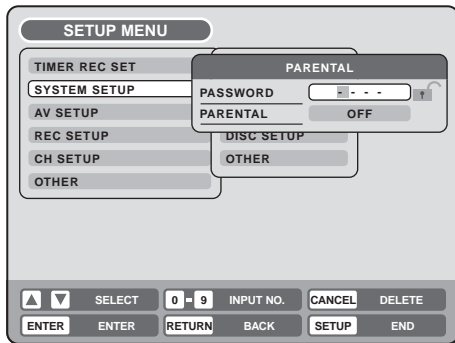

## Selecting parental control

Select "PARENTAL" and select the parental control level from the list below.

- Level Off:** Parental control is turned off.
- Level 1:** Adult discs and general discs (R-rated discs included) cannot be played back.
- Level 2 to 3:** Adult discs and R-rated discs cannot be played back.
- Level 4 to 7:** Adult discs cannot be played back. (Level 4 to 7 discs contain content children age 15 and younger may not see.)
- Level 8:** All discs can be played back without restriction.

Select from level 1 to level 8. On a scale of 1- 8, "1" is the most restrictive.

## To lock the selected parental control level

- 1 To lock the selected parental control level, press ▲ or ▼ to select "PASSWORD".
- 2 Use the **numeric keys** to input a 4-digit password.
  - If you input a wrong number, press **CANCEL**.
  - Be sure to remember this number!
- 3 Press **ENTER**.



## To cancel the locked parental control level

- 1 Select "PASSWORD" shown in step 1 of the above section and use the **numeric keys** to input the password.
- 2 Press **ENTER**. The locked mark "🔒" will change to an unlocked mark "🔓". Then, you can change the parental control level, or enter a new password.


## NOTE:

- The selected level will apply to operations executed after this.
- The unit cannot restrict playback of some discs.
- Some discs may not be encoded with specific rating level information though its disc jacket says "adult". Parental control will not work with those discs.
- Do not forget the password. If you forget the password, contact the dealer that you purchased the unit from.

## Temporarily cancelling parental control

Parental control can temporarily be cancelled with some DVDs.

- 1 Playback a DVD. (See page 33.)
- 2 If the DVD disc has been designed to temporarily cancel the rating level, the screen that follows the "READING" screen will change. If you select "YES" with the **ENTER**, the message "YOUR DISC EXCEEDS THE PARENTAL CONTROL LEVEL 1." (e.g.) will then appear.

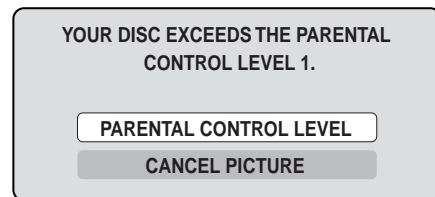

- 3 If you wish to cancel the set rating level temporarily, select "PARENTAL CONTROL LEVEL" with ▲ or ▼, then press **ENTER**. If the password has been selected, the password input screen will appear. Alternatively, if the password has not been set, playback will commence. If you don't know (or have forgotten) the password, select "CANCEL PICTURE". The setting screen will disappear. Press **OPEN/CLOSE** to remove the disc.
- 4 Use the **numeric keys** to input the password.
  - To interrupt the input process, press **RETURN**.
- 5 Press **ENTER**.
- 6 Playback will commence if the entered password was correct.

## NOTE:

This temporary cancellation of the rating level will remain active until the disc is ejected. When the disc is ejected, the original rating level will be set again automatically.


Various settings

# Setting the clock

The clock is set to the correct time automatically, but it can also be set manually. The clock can be set for daylight saving time and time zone.

### Preparation:

- Turn ON the TV and set it to the video input mode.
- Select "CLOCK" from "SYSTEM SETUP". For the procedure, see steps 1 to 3 in "Using the SETUP MENU" on page 23.

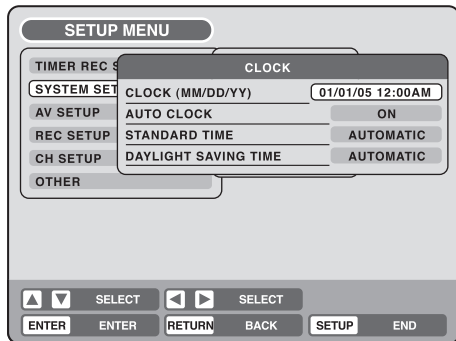

## CLOCK (manually)

You can manually set the date, year and present time with the remote control.

Ex.: Setting the clock to "10:20AM" October, 29th, 2005.

- 1 Select "CLOCK" and press **ENTER**.

01/01/05 12:00AM

- 2 Select the desired items using ◀ or ▶ (month, date, year, hour, minute and AM/PM), then press **ENTER**.

- 3 Press ▲ or ▼ to set the value of the selected item.

10/29/05 10:20AM

- 4 Repeat steps 2 and 3 to set the date, year and present time, and press **ENTER**. The SETUP MENU will close.  
This completes clock time setting.

## AUTO CLOCK

You can automatically set the clock by turning "ON" the AUTO CLOCK function.

When you want to set the auto clock function to "OFF", select "AUTO CLOCK", press **ENTER** and select "OFF" from the list.

For more information see page 22.

## STANDARD TIME (Time zone)

In the rare event that you live within the broadcast range of two stations in two different time zones, the DVD/VCR may recognize the wrong station for the auto clock set. To correct the situation:

Select "STANDARD TIME" and select the time zone from the list below.

### Selectable time zones and correction times

- ATLANTIC:** GMT – 4 hours  
(GMT: Greenwich Mean Time)
- EASTERN:** GMT – 5 hours
- CENTRAL:** GMT – 6 hours
- MOUNTAIN:** GMT – 7 hours
- PACIFIC:** GMT – 8 hours
- ALASKA:** GMT – 9 hours
- HAWAII:** GMT – 10 hours
- AUTOMATIC:** AUTO SET

### NOTES:

- When shipped from the factory, the "STANDARD TIME" is set to "AUTOMATIC".
- After making the auto clock setting, in some cases the clock may display another time zone. You can correct the clock by selecting your time zone setting above.
- When the clock is not set or you set the clock manually, the time zone setting is not available.

## DAYLIGHT SAVING TIME

You can set the clock to daylight saving time automatically or manually.

To select daylight saving time, select "DAYLIGHT SAVING TIME" and select "ON", while to cancel the daylight saving time, select "OFF".

- ON:** For manual setting (forward 1 hour)
- OFF:** For manual setting (back 1 hour)
- AUTOMATIC:** For automatic setting (read XDS in the signal)

### NOTES:


- When you want to set daylight saving time, on the first Sunday in April you set it to "ON", and on the last Sunday in October you set it to "OFF".
- When shipped from the factory, the "DAYLIGHT SAVING TIME" option is set to "AUTOMATIC".
- When the clock is not set, the daylight saving time setting is not available.
- When there is no daylight saving time in your area, always select "OFF".

# Setting the disc

You can format, protect, or finalize a disc.

## Preparation:

- Turn ON the TV and set it to the video input mode.
- Select "DISC SETUP" from "SYSTEM SETUP". For the procedure, see steps 1 to 3 in "Using the SETUP MENU" on page 23.

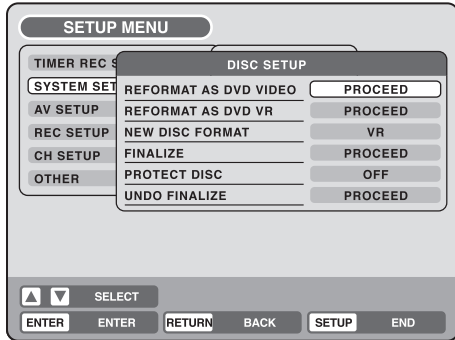


## REFORMAT


You can format a recorded DVD-RW. Check the content of the disc before format. If you format the disc, the recorded content of the disc will be erased.

To format a DVD in the Video mode, select "REFORMAT AS DVD VIDEO", and to format it in the VR mode, select "REFORMAT AS DVD VR".

The screen below will appear.

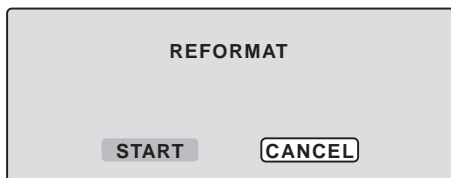

- When you select "START" and press **ENTER**, format will start. The screen below will appear.

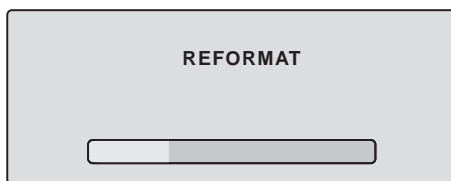

- When you select "CANCEL" and press **ENTER**, the DISC SETUP screen will appear.

### NOTES:

- You cannot format Ver. 1.0 DVD-RW and DVD-R.
- You cannot format a disc if the disc protection is "ON". In such a case, be sure to cancel the disc protection (see page 28) before format.

## NEW DISC FORMAT

If you insert an unused disc, the disc is automatically formatted.


If you use the DVD-RW (Ver.1.1/1.2), you can select the mode to be used for automatic format.

Select "NEW DISC FORMAT" and select the mode from the list below.


**VR:** Format the disc in the VR mode.

**VIDEO:** Format the disc in the Video mode.

When you insert an unused disc, the following message screen will appear.

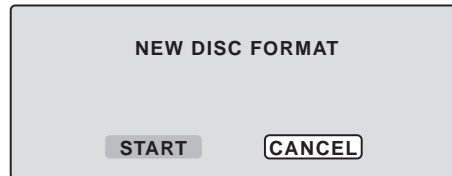

- When you select "START" and press **ENTER**, format will start. The screen below will appear.

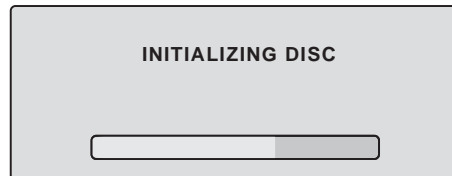

- When you select "CANCEL" and press **ENTER**, the normal TV screen will appear.


### NOTE:

If a recorded disc has scratches or contamination on it, the "NEW DISC FORMAT" screen may appear. If this happens, select "CANCEL".


## FINALIZE

To play a DVD disc recorded on this unit you must finalize the disc to insure compatibility with other DVD players. In addition if you are using a DVD-RW disc you must record in Video mode. **DVD-RW is the only disc that needs to be finalized.**

When "FINALIZE" is selected, the screen below will appear.

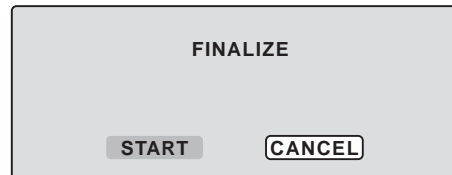

- When you select "START" and press **ENTER**, finalization will start. The screen below will appear.

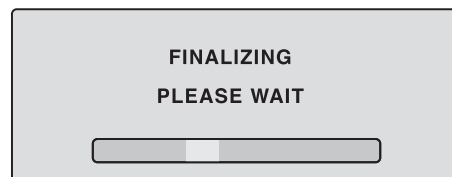

- When you select "CANCEL" and press **ENTER**, the DISC SETUP screen will appear.

Various settings

# Setting the disc / Other (SYSTEM SETUP)

**NOTES:**

- During the finalization the cursor will move repeatedly. When the finalization finished, "DISC FINALIZED" will appear.
- The finalization process may require a few minutes to about 1 hour according to disc type or the amount of free space on the disc.
- You can record or edit a finalized DVD-RW (in VR mode) by cancelling the finalizing, but you cannot do these operations with a DVD-RW (Video mode), or with a DVD-R.
- You cannot playback a disc recorded on VR mode on a unit that does not support DVD-RW.
- Even if you finalize a disc in the Video mode, the disc cannot be played back in some DVD players.
- A DVD-R disc cannot be named after it is finalized.

**PROTECT DISC**

You can protect a disc to prevent the content recorded on it from being erased, edited or re-recorded. Only DVD-RW (in VR mode) can be protected. Select "PROTECT DISC" and select "ON" to protect the disc.


To cancel the disc protection, select "OFF".

**UNDO FINALIZE**


You can cancel the finalization of a finalized DVD-RW (in VR mode).

You cannot cancel the finalization for discs other than above. You can record or edit on a disc whose finalization has been cancelled.

Select "UNDO FINALIZE", and the screen below will appear.

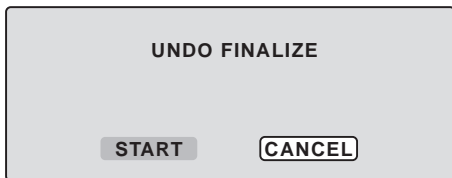

- When you select "START" and press **ENTER**, the cancelling finalization will start. The screen below will appear.

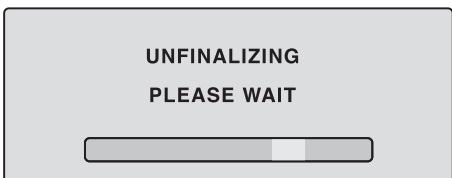

- When you select "CANCEL" and press **ENTER**, the DISC SETUP screen will appear.


**NOTES:**

- During the cancelling finalization the cursor will move repeatedly.
- The cancelling finalization process may require a few minutes to about 1 hour according to disc type or the amount of free space on the disc.
- When the disc's finalization cannot be cancelled, you cannot select "UNDO FINALIZE".

You can turn the display window and on-screen display "ON" or "OFF".

**Preparation:**

- Turn ON the TV and set it to the video input mode.
- Select "OTHER" from "SYSTEM SETUP". For the procedure, see steps 1 to 3 in "Using the SETUP MENU" on page 23.

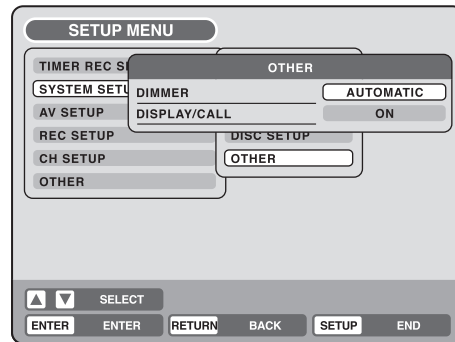

**DIMMER (Brightness of the display window)**

You may adjust the brightness or turn off the display on the front panel of the unit.

Select "DIMMER" and select the display window status from the list below.

- AUTOMATIC:** When the power is on, the display window appears bright. When the power is off, it appears dark.
- DIM:** The window display always appears dark.
- OFF:** When the power is on, the display window appears dark. When the power is off, it is turned off.

**DISPLAY/CALL (Turning the screen display "ON" or "OFF")**

You can turn off the screen display that is output to the TV screen by this unit. Select "DISPLAY/CALL", and select "ON" or "OFF".

- ON:** The screen display appears.
- OFF:** Nothing but the SETUP MENU and error messages appear.






# Setting the screen

This section describes settings about the screen.

### Preparation:

- Turn ON the TV and set it to the video input mode.
- Select "AV SETUP 1" from "AV SETUP". For the procedure, see steps 1 to 3 in "Using the SETUP MENU" on page 23.

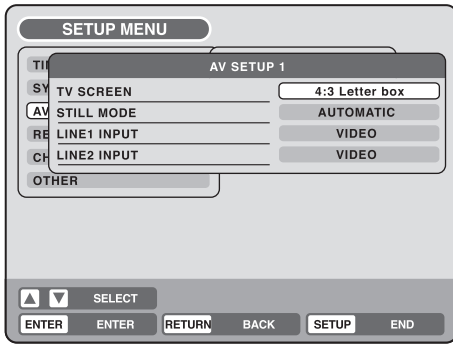

## TV SCREEN

You can select the TV screen size to suit the screen image.

Select "TV SCREEN" and select screen size from the list below.

### 4:3 Pan scan

It displays a wide picture across the whole screen with left and right edges automatically cut off.

### 4:3 Letter box

Select this mode when connecting to a conventional TV. When playing back a wide screen DVD disc, it displays a wide picture with black bands at the top and bottom of screen.

### 16:9

Select this mode when connecting to a wide-screen TV. A wide-screen picture is displayed in full size.

### NOTE:

If the DVD disc is not formatted in the Pan scan format, it displays a 4:3 aspect ratio.

## STILL MODE

You can set the type of image displayed on the TV screen when the playback of the DVD is stilled.

Select "STILL MODE" and select the image to be displayed from the list below.

### AUTOMATIC

The field still or frame still is automatically selected. (For normal use.)

### STILL BY FRAME

The frame still is set.

### Note for the field still and frame still:

(with 480i interlaced scanning mode)

- Field\* still (240 lines)  
Since only one field (half of the video information) is shown on the TV screen, the picture appears rough but does not shake.
- Frame\* still (480 lines)  
Two fields are alternatively shown on the TV screen. The picture shakes but the resulting picture quality is superior to the field still pictures.

Field\*: A field refers to the video information in one-half of a frame. 1 frame (screen) consists of 2 fields.

Frame\*: A frame refers to the total area occupied by each picture on the TV screen.

## LINE1 INPUT/LINE2 INPUT

This unit comes with an S-Video input jack and Video input jack. When you use an S-Video or Video input jack, you must select the input mode.

Select "LINE1 INPUT" ("LINE2 INPUT") and select the mode from the following list.

### S-VIDEO

The video signal is input only from the S-Video input jack.

### VIDEO

The video signal is input only from the video input jack.

Various settings




# Setting the image quality / Setting the audio

This section describes image quality settings.

### Preparation:

- Turn ON the TV and set it to the video input mode.
- Select "AV SETUP 2" in "AV SETUP". For the procedure, see steps 1 to 3 in "Using the SETUP MENU" on page 23.

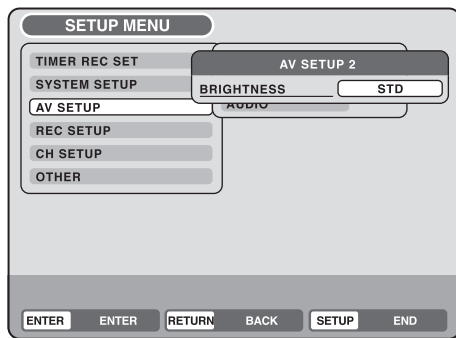

## BRIGHTNESS


You can control the brightness level of the image. Select "BRIGHTNESS" and select the level from the list below.

- MAX:** The image becomes brighter.
- STD:** The image is of standard brightness.
- MIN:** The image becomes darker.

This section describes audio settings.

### Preparation:

- Turn ON the TV and set it to the video input mode.
- Select "AUDIO" from "AV SETUP". For the procedure, see steps 1 to 3 in "Using the SETUP MENU" on page 23.

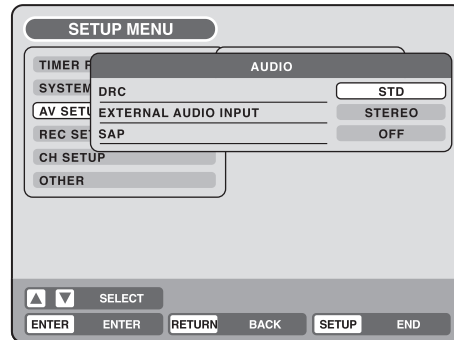

## DRC

DRC (Dynamic Range Control) enables you to control the dynamic range so as to achieve a suitable sound for your equipment.

Select "DRC" and select the level from the list below.

- MAX:** Full dynamic range is maintained.
- STD:** Full dynamic range is reduced.
- TV:** Dynamic range is reduced.

### NOTES:

- This function works only during playback of Dolby Digital recorded discs.
- When you listen to the sound from TV's speaker, we recommend that you select "TV".
- The level of Dynamic Range Reduction may differ depending on the DVD.

## EXTERNAL AUDIO INPUT

The audio mode for the audio input jack can be selected, choosing either stereo or monaural.

Select "EXTERNAL AUDIO INPUT" and select from the list below.

- STEREO:** The sound is treated as stereo sound.
- L CH:** The sound is treated as the monaural sound of the left channel.
- R CH:** The sound is treated as the monaural sound of the right channel.

## SAP (Second Audio Program)

This unit is fitted with an SAP broadcast system that enables you to switch to a second audio program while viewing a selected channel.

This function applies only when the program is broadcast in multiple languages through the SAP broadcast system.

Select "SAP" and select "ON" to use SAP, and to not use it, select "OFF".

### Listening to SAP


When the unit is turned on or a channel selection is made, make certain the letters "SAP" appear on the screen. This means that "Second Audio Program" broadcasting is available.

# Setting the recording

This section describes recording settings.

### Preparation:

- Turn ON the TV and set it to the video input mode.
- Select "REC SETUP". For the procedure, see steps 1 to 3 in "Using the SETUP MENU" on page 23.

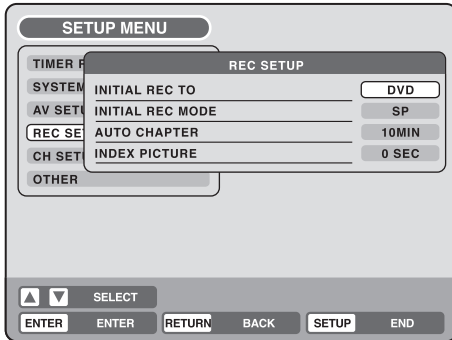

### INITIAL REC TO

You can select the recording media that is first displayed in the item "REC TO" on the timer recording screen. Select "INITIAL REC TO" and select "DVD" or "VCR".

### INITIAL REC MODE

You can select the recording mode that is first displayed in the item "REC MODE" on the timer recording screen. Select "INITIAL REC MODE" and select XP, SP, LP, or SLP.

### NOTES:

- For the DVD recording mode, see page 52. And for the VCR recording mode, see page 48.
- Even if you select the recording mode by "INITIAL REC MODE", the recording mode on the display window does not change. If you want to change the recording mode, press **REC MODE/SPEED** on the remote control.

### AUTO CHAPTER

You can automatically make chapter marks on the DVD to be recorded.

Select "AUTO CHAPTER" and select the interval between chapter marks from the list below.

- OFF:** The automatic chapter is not used.
- 5 MIN:** The interval is set to 5 minutes.
- 10 MIN:** The interval is set to 10 minutes.
- 15 MIN:** The interval is set to 15 minutes.
- 30 MIN:** The interval is set to 30 minutes.

### INDEX PICTURE

You can set the time that the thumbnail image is registered in the title menu of DVD-RW (VR mode).

Select "INDEX PICTURE" and select from the list below.

- 0 SEC:** The image of a recording start point is registered.
- 1 MIN:** The image 1 minute after a recording start is registered.
- 3 MIN:** The image 3 minutes after a recording start is registered.

### NOTE:

You cannot select the thumbnail image for Video mode.

Various settings




## Setting the channel / Setting other items

This DVD/VCR is equipped with a channel memory feature that allows you to skip channels up or down to the next channel set in memory, hence skip over unwanted channels.

Before selecting channels, they must be programmed into the DVD/VCR's memory. In addition to normal VHF and UHF channels, this DVD/VCR can receive up to 113 Cable TV channels. To use this DVD/VCR with an antenna, set the TV/CABLE menu option to the TV mode. When shipped from the factory, this menu option is in the CABLE mode.

### Preparation:

- Turn ON the TV and set it to the video input mode.
- Select "CH SETUP". For the procedure, see steps 1 to 3 in "Using the SETUP MENU" on page 23.

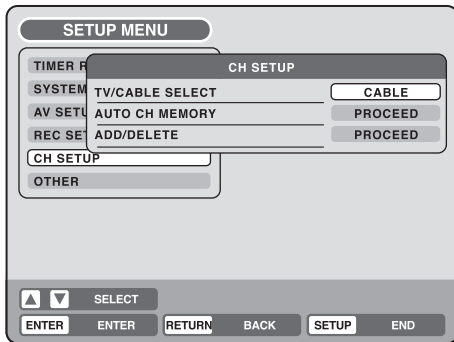

### TV/CABLE SELECT

Select "TV/CABLE SELECT" and select "TV" or "CABLE".

- TV:** VHF/UHF channels
- CABLE:** CABLE TV channels

### AUTO CH MEMORY

The VCR can receive a maximum of 181 channels by presetting the channels into memory.

When you select "AUTO CH MEMORY" and press **ENTER**.

The AUTO CH MEMORY function will be activated. The channel display will count up and, when finished, the screen returns to normal.

### ADD/DELETE (channels)

You can add the channels you want or delete the channels you do not want manually.


Select "ADD/DELETE" and select "ADD" or "DEL." for each channel.

- Press **▲** or **▼** to select the channel. The **numeric keys** can also be used for selection.
- When you want to delete the selected channel, press **▶** to select "DEL." and press **ENTER**.
- When you want to use the selected channel, press **◀** to select "ADD" and press **ENTER**.

You can set the switching interval between played back images in the slide show mode.

### Preparation:

- Turn ON the TV and set it to the video input mode.
- Select "OTHER". For the procedure, see steps 1 to 3 in "Using the SETUP MENU" on page 23.

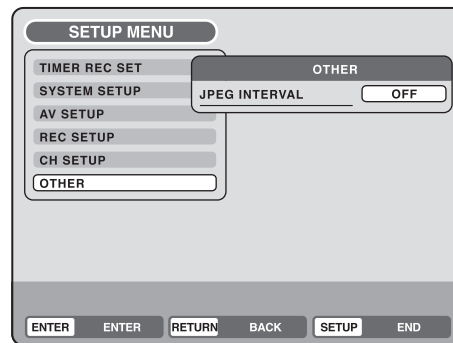


### JPEG INTERVAL

You can select the interval time for JPEG slide show (page 46).

Select "JPEG INTERVAL" and select the switching interval between images from the list below.

- OFF:** The slide show mode is not used.
- 5 SEC:** The interval is set to 5 seconds.
- 10 SEC:** The interval is set to 10 seconds.
- 15 SEC:** The interval is set to 15 seconds.

# Playback procedure

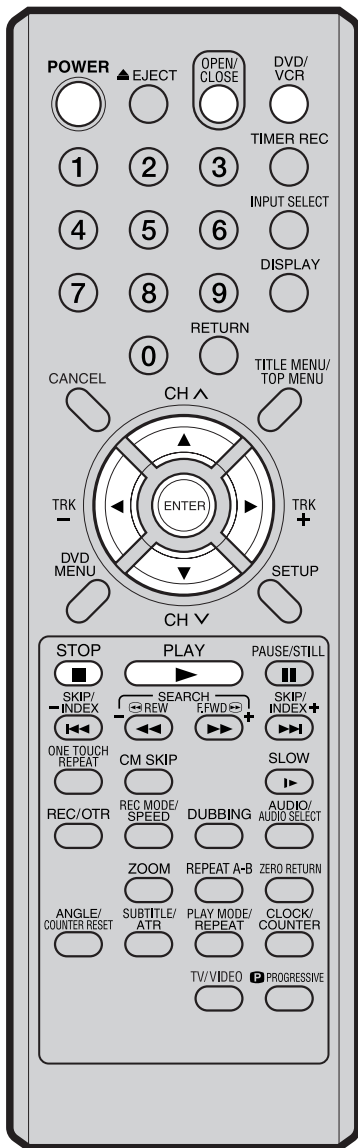


## Preparation:

- Turn ON the TV and set to the video input mode.
- Press **DVD/VCR** to select the DVD mode. (The DVD indicator will light.)


**1** Press **OPEN/CLOSE**.  
The disc tray will open.



**2** Place a disc onto the tray.  
Hold the disc, position it with the printed label side up, align it with the guides, and place it in its proper position.

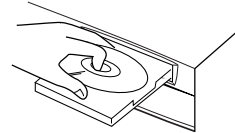

**3** Press **OPEN/CLOSE** to close the disc tray.  
"READING" appears on the screen and some discs start playback automatically.

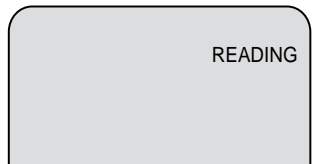

Disc playback

- A menu screen may appear on the TV screen, if the disc has a menu feature. In this case, press **▲**, **▼**, **◀**, **▶** or **ENTER** to operate a menu feature.

**4** Press **PLAY** to start playback.

**5** Press **STOP** to end playback.

- The DVD/VCR memorizes the stopped point, depending on the disc. "■" appears on the screen for approx. 4 seconds. "▶" keeps blinking in the display until the playback is stopped completely. Press **PLAY** to resume playback (from the scene point).
- If you press **STOP** again ("■" appears on the screen), the DVD/VCR will clear the stopped point.

**6** Then press **OPEN/CLOSE**.

- The disc tray opens.
- Remove the disc and press **POWER**.
- The disc tray closes automatically and DVD/VCR turns off.


## NOTES:

- If a non-compatible disc is loaded, "INCORRECT DISC", "REGION CODE ERROR" or "PARENTAL ERROR" will appear on the TV screen according to the type of loaded disc. In this case, check your disc again (See pages 9 and 25).
- Some discs may take a minute or so to start playback.
- A prohibition symbol "⊘" may appear at the upper right of the screen. This symbol means either the feature you tried is not available on the disc, or the DVD/VCR can not access the feature at this time. This does not indicate a problem with the DVD/VCR.
- When you set a single-faced disc label downwards (ie. the wrong way up) and press **PLAY** or **OPEN/CLOSE**, "READING" will appear and then it will change to "NO DISC".
- Some playback operations of DVDs may be intentionally fixed by software producers. Since this DVD/VCR plays DVDs according to the disc contents the software producers designed, some playback features may not be available. Also refer to the instructions supplied with the DVDs.
- When playing DTS-encoded Audio CDs, excessive noise will be heard from the analog stereo outputs. To avoid possible damage to the audio system, the consumer should take proper precautions when the analog stereo outputs of the DVD/VCR are connected to an amplification system.

# Playback by selecting a title




When playing back a recorded disc, you can display the title menu and select the title to be played back.

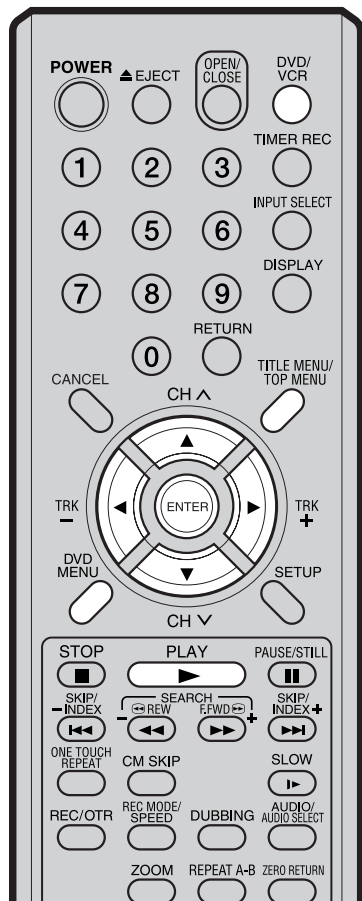

## Preparation:

- Turn ON the TV and set to the video input mode.
- Load a recorded DVD.
- Press **DVD/VCR** to select the DVD mode. (The DVD indicator will light.)


- 1 Press **TITLE MENU**.  
The title menu will appear.

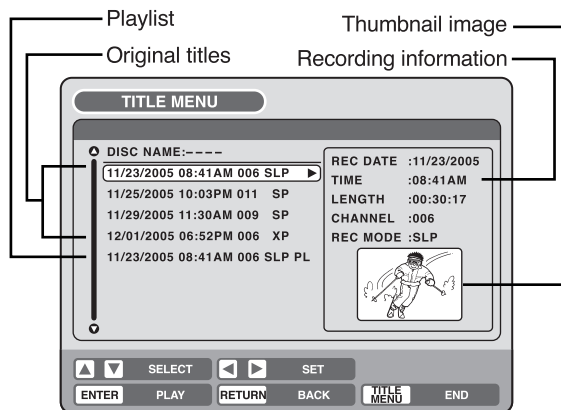

If there are many original titles and playlists...  
Before pressing **TITLE MENU**, press **DVD MENU** until "VR ORG" or "VR PL" will appear on the upper right of the TV screen, then press **TITLE MENU**.

The first original title or playlist will be highlighted.

- 2 Press **▲** or **▼** to select the title you want to playback.

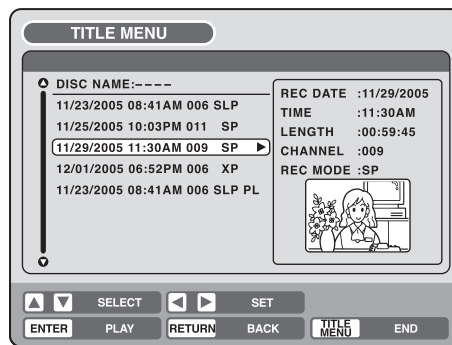


- 3 Press **ENTER**.  
The selected title is played back.

## NOTES:

- If you don't display the title menu and press **PLAY**, the first title is played back.
- The title menu is used not only for playing back titles but also for editing various discs and titles. For details of editing operation, see page 61.
- If you create a playlist, an original title and playlist appear in the title menu. For creating a playlist, see page 62.
- In case the disc includes more than 10 titles, you can turn to the next or the previous page. Press **◀**, then press **▼** or **▲** to display next/previous page. To return to normal use, press **▶**.
- You cannot switch to the VCR mode when the title menu is showing. Press **TITLE MENU** to clear the title menu, then press **DVD/VCR** to switch to the VCR mode.

## NOTE:


When a disc that has been recorded in the Video mode is finalized, a title list is automatically created that can be played back even with other DVD players. Consequently, the menu before finalizing is different from that of after finalizing.

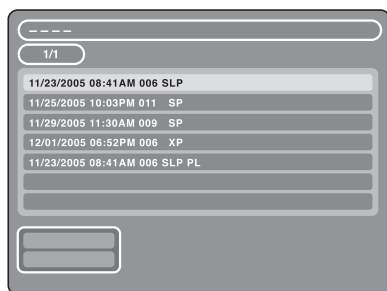

# Checking media information




Various information on the loaded disc can be displayed on the TV screen.

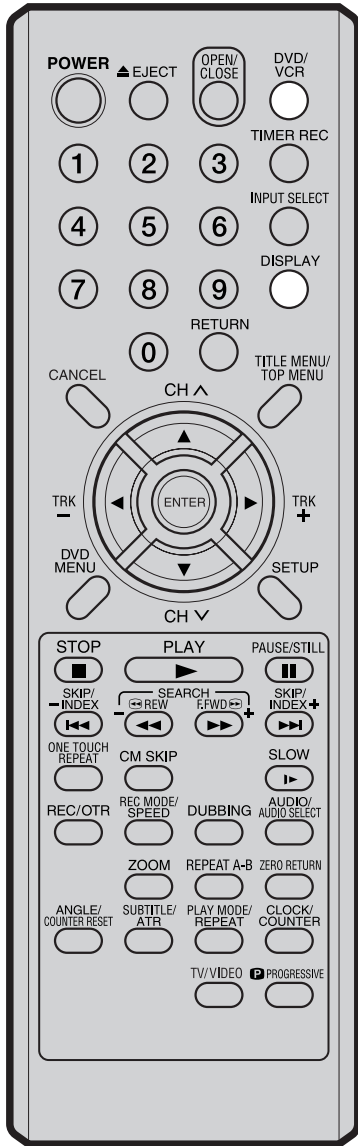

## Preparation:


- Turn ON the TV and set it to the video input mode.
- Load the disc.
- Press **DVD/VCR** to select the DVD mode. (The DVD indicator will light.)

- 1 Press **DISPLAY**.  
Media information will appear.

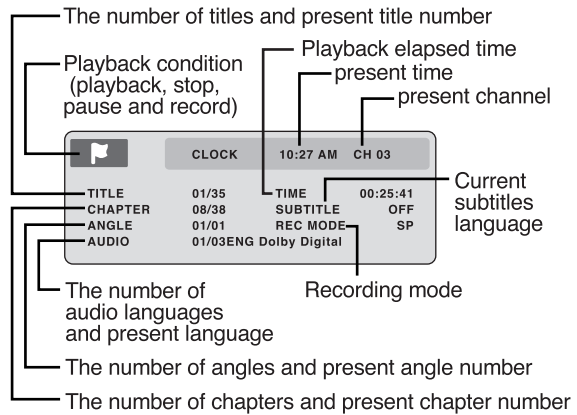

Disc playback

- 2 Press **DISPLAY** while the media information above is displayed.  
The next media information will appear.

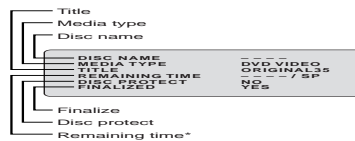

\*The remaining time displayed during recording may be different from the actual remaining time. When you want to check the correct remaining time, stop recording and display the media information again.

- 3 Press **DISPLAY** again while the media information above is displayed. The media information will disappear.


## NOTES:

- The displayed information varies with the type of media.
- Some information may not appear due to media type or operating conditions.
- In stop mode, some information does not appear.

# Special playback



**NOTE:** There may be a slight delay between pressing the button and the function activation.

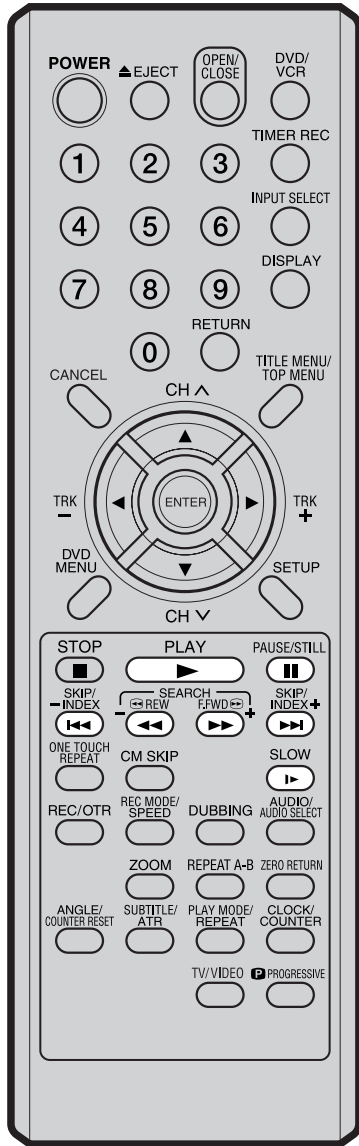

## Fast forward playback

Press **F.FWD** during normal playback. Each press of **F.FWD** will increase the speed of the search **▶▶** (x2), **▶▶▶** (x12), **▶▶▶▶** (x24), **▶▶▶▶▶** (x60). (The speed of the search is increased up to only 2 steps in Audio CD.)

- To resume normal playback, press **PLAY**.

## Review playback

Press **REW** during normal playback. Each press of **REW** will increase the speed of the search **◀◀** (x2), **◀◀◀** (x12), **◀◀◀◀** (x24), **◀◀◀◀◀** (x60). (The speed of the search is increased up to only 2 steps in Audio CD.)

- To resume normal playback, press **PLAY**.

## Still playback

Press **PAUSE/STILL** during normal playback.


- To resume normal playback, press **PLAY**.



## Frame advance

Press **PAUSE/STILL** during still playback. One frame is advanced each time you press **PAUSE/STILL**.

- To resume normal playback, press **PLAY**.

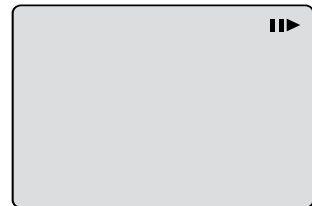

## Slow motion playback

Press **SLOW** during normal playback or still playback. Each press of **SLOW** will change the speed of the slow "▶ 1/2", "▶ 1/4", "▶ 1/8".

- To resume normal playback, press **PLAY**.
- To resume the still playback, press **PAUSE/STILL**.

## Locating a chapter or track

Press **SKIP ▶▶** Forward or **SKIP ◀◀** Reverse during playback to locate a chapter that you want to watch.

Each time you press the button, a chapter or track is skipped.


- When you press **SKIP ◀◀** once, playback starts from the beginning of the current chapter or track. If you want to play the preceding chapter or track, press **SKIP ◀◀** twice in quick successions.

### NOTES:

- The unit is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time, you risk permanent damage to your television screen. Projection televisions are very susceptible.
- Fast forward and review playback does not work with a MP3/WMA/JPEG-CD.
- Frame advance and slow motion does not work with a CD.



# Commercial skip / Locating a specific scene

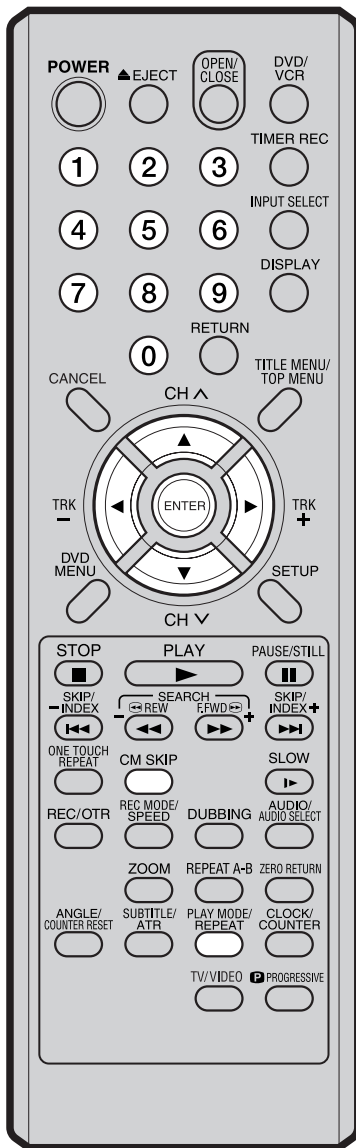

## Commercial skip

Use this function to skip commercials while you playback.

Press **CM SKIP** during playback.

The time jumps to a point approx. 30 seconds later and playback resumes.


### NOTE:

With some DVD-Video, the Commercial skip operation may not work.

## Locating a specific scene

Specify the time recorded on the disc, chapter or title to playback.

- 1 Press **PLAY MODE**.  
The play mode screen will appear.

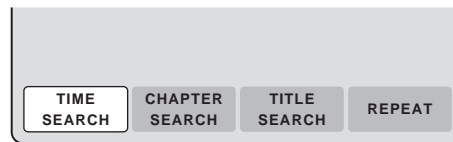


Disc playback

- 2 Press **◀** or **▶** to select "TIME SEARCH", "CHAPTER SEARCH" or "TITLE SEARCH", and press **ENTER**.

**TIME SEARCH:** Input the time until the playback is restarted.

**CHAPTER SEARCH:** Select the chapter number to be played back.

**TITLE SEARCH:** Select the title number to be played back.

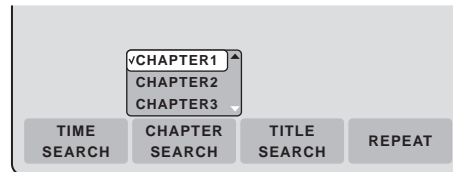

The screen above shows the display when "CHAPTER SEARCH" is selected.


- 3 When selecting "TIME SEARCH", input the time until the playback is restarted with the **numeric keys**. When selecting "CHAPTER SEARCH" or "TITLE SEARCH", press **▲** or **▼** to select the chapter number or title number.

- 4 Press **ENTER**.  
The playback starts at the point you selected.

### NOTE:

For "REPEAT", see "Title, Chapter repeat playback" (page 38).

# Repeat playback

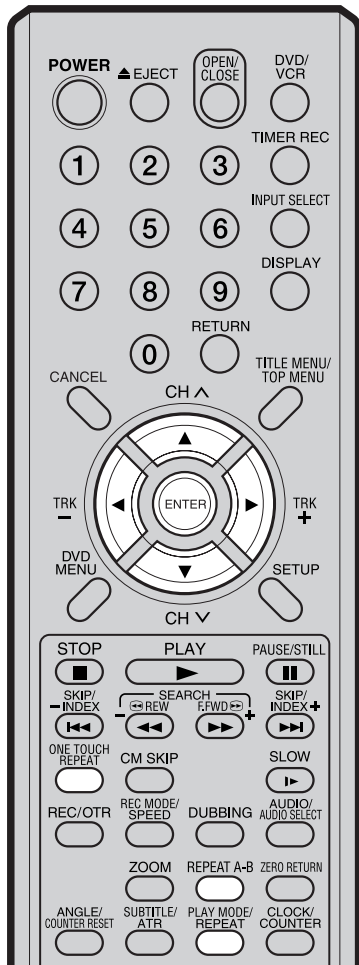

## NOTES:

- Some discs may not work with the repeat operation.
- In A-B repeat mode, subtitles near point A or B may not appear.
- A-B repeat does not work during the Title and the Chapter repeat playback.
- You may not be able to set A-B repeat, depending on the scenes of the DVD.
- A-B repeat and Title, Chapter repeat does not work with a MP3/WMA/JPEG-CD.

## One touch repeat

This feature can be used to repeat the last 10 seconds of viewed material, and continues to play as normal.

Press **ONE TOUCH REPEAT** during playback.

The video returns to a point 10 seconds before and playback resumes.

### NOTES:

- If the time from the title top is less than 10 seconds when **ONE TOUCH REPEAT** is pressed, the title top is repeated and then the video is played back.
- With some DVD-Video, the one touch repeat operation may not work.

## A-B repeat playback

A-B repeat playback allows you to repeat material between two selected points.

 
**1** Press **REPEAT A-B** during playback.

The start point is selected.



**2** Press **REPEAT A-B** again.

The end point is selected. Playback starts at the point that you selected. Playback stops at the end point, returns to point A automatically, then starts again.




To resume normal playback press **REPEAT A-B** again.

"OFF" appears on the screen.

## Title, Chapter repeat playback

**1** Press **REPEAT**.

The play mode screen will appear.

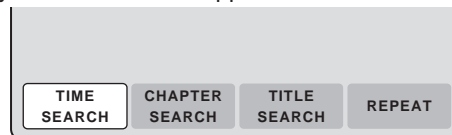

**2** Press **◀** or **▶** to select "REPEAT" and press **ENTER**.



**3** Press **▲** or **▼** to select "OFF", "CHAPTER" or "TITLE".

**OFF:** Playback is not repeated.


**CHAPTER:** The chapter in playback is repeatedly played back.

**TITLE:** The title in playback is repeatedly played back.

**4** Press **ENTER**.

To cancel the repeat playback, select "OFF" in step 3.

# Title selection / DVD menu

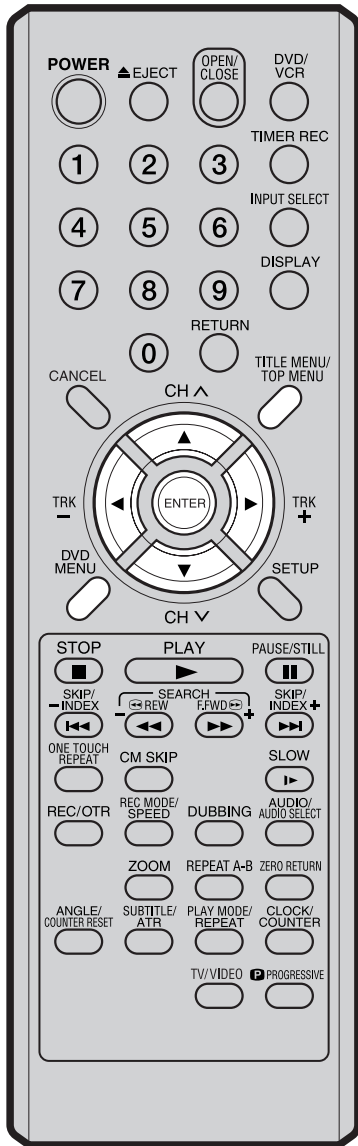

## Title selection

Two or more titles are recorded on some discs. If the title menu is recorded on the disc, you can select the desired title.

- 1 Press **TITLE MENU/TOP MENU** during playback. The title menu appears on the screen.
  - Press **TITLE MENU/TOP MENU** again to resume playback at the scene when you pressed **TITLE MENU/TOP MENU**.
- 2 Press **▲/▼** or **◀/▶** to select the desired title.
- 3 Press **ENTER**. The playback of the selected title will start.

## DVD menu

Some DVDs allow you to select the disc contents using the menu. When you playback these DVDs, you can select the subtitles language and soundtrack language, etc. using the DVD menu.


- 1 Press **DVD MENU** during playback. The DVD menu appears on the screen.
  - Press **DVD MENU** again to resume playback at the scene when you pressed **DVD MENU**.
- 2 Press **▲/▼** or **◀/▶** to select the desired item.
- 3 Press **ENTER**. The menu continues to another screen. Repeat steps 2 and 3 to set the item completely.

Disc playback

### NOTE:

Depending on the DVD, you may be unable to select the title, and a "title menu" may simply be called a "menu" or "title" in the instructions supplied with the disc.


# Changing angles / Zooming / Karaoke playback

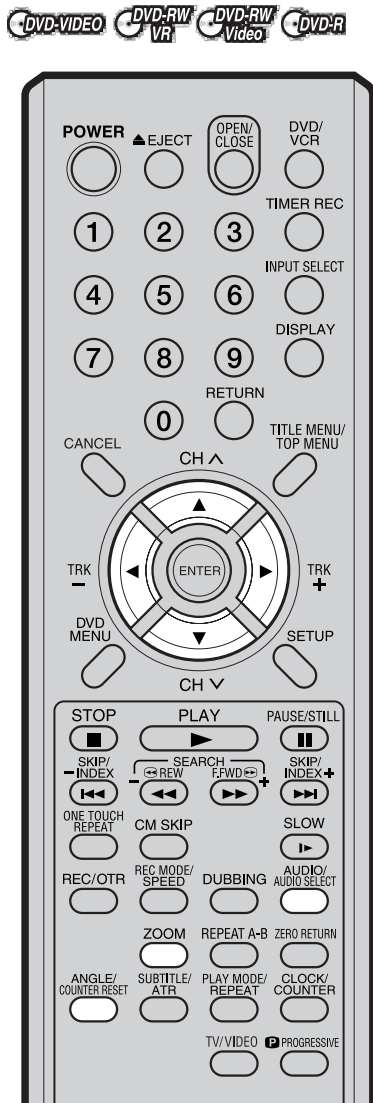

## Changing angles

When playing back a disc recorded with multi-angle facility, you can change the angle that you are viewing the scene from.

- 1 Press **ANGLE** during playback.  
The current angle will appear.

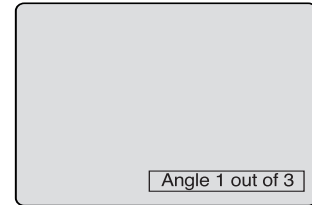


- 2 Press **ANGLE** repeatedly until the desired angle is selected.

## Zooming

This unit will allow you to zoom in on the frame image. You can then make selections by switching the position of the frame.

- 1 Press **ZOOM** during playback.  
The center part of the image will be zoomed in.  
Each press of **ZOOM** will change the ZOOM "x2", "x3" and "x4".

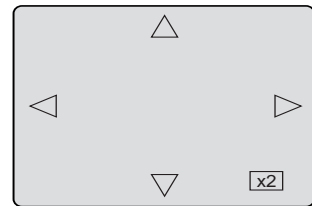

- 2 Press **▲/▼** or **◀/▶** to view a different part of the frame.  
You may move the frame from the center position to UP, DOWN, LEFT or RIGHT direction.

- 3 In the zoom mode press **ZOOM** repeatedly to return to a 1:1 view "x1".

### NOTES:

- Depending on the DVD, you may not be able to change the angles even if multi-angles are recorded on the disc.
- You can use the Pause, Slow, Search or Skip feature in the zoom mode.
- The vocal output feature is used during playback of Dolby Digital (multi-channel) recorded DVD KARAOKE discs. This feature allows you to turn off vocal audio tracks, or restore them for background accompaniment.
- When playing Karaoke, connect appropriate audio equipment such as an amplifier to this unit.


## Karaoke playback

You can turn the vocal on or off recorded on the DVD KARAOKE.

During DVD KARAOKE disc playback, press **AUDIO** repeatedly until the desired setting is selected.

**Vo. ON** : The primary vocal is output when it is recorded on the disc.


**Vo. OFF** : The primary vocal is not output.

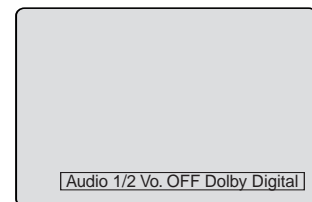

### NOTES :

- Some Karaoke discs may not have the vocal on/off function.
- The on screen display will disappear after a few seconds.


# Changing soundtrack language / Subtitles

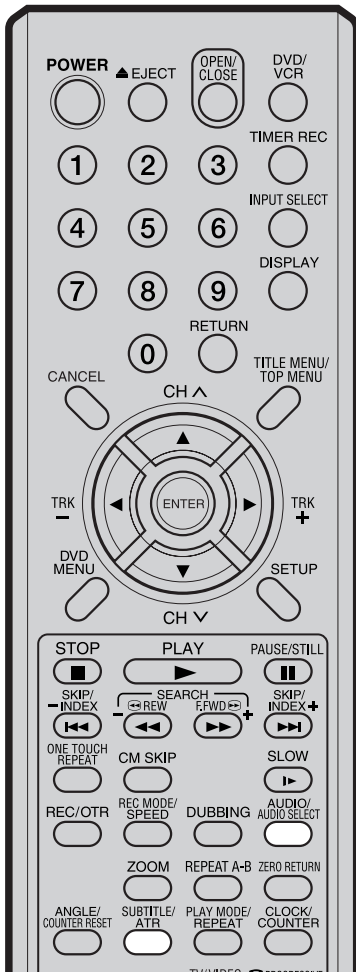


## Changing soundtrack language

You can select the language when you play a multilingual disc.

- 1 Press **AUDIO** during playback.  
The current soundtrack language will appear.

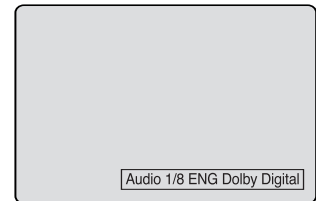

- 2 Press **AUDIO** repeatedly until the desired language is selected.  
The on-screen display will disappear after a few seconds.

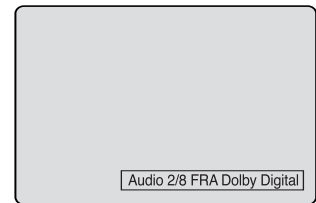


Disc playback

## Subtitles

### Turning the subtitles On and Off

When playing back a disc recorded with subtitles, you can turn the subtitles on or off.


Press **SUBTITLE** during playback until "Subtitle OFF" appears.

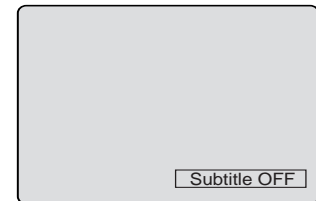

### Changing the subtitles language

You can select the language when playing back a disc recorded with multilingual subtitles.

Press **SUBTITLE** repeatedly during playback until your desired language appears.  
The on screen display will disappear after a few seconds.

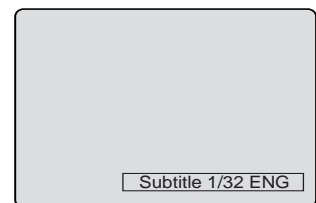


## NOTES:

- If the desired language is not heard after pressing the button several times, the language is not recorded on the disc.
- Changing soundtrack or subtitles language is cancelled when you open the disc tray. The initial default language or available language will be heard and seen if the disc is played back again.
- Depending on the DVD you may be unable to turn on, turn off, or change the subtitles, even if they are recorded on the disc. While playing the DVD, the subtitles may change while opening or closing the disc tray, or while changing the title.
- In some cases, the subtitles language is not changed to the selected one immediately.

# Various operations on CD



This section describes the **TRACK INFO** screen where music CDs can be played back using the various operations.

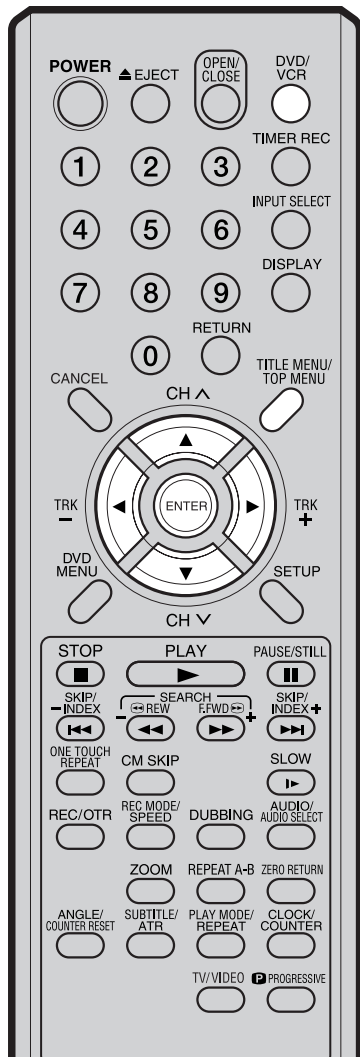

### NOTES:


- In case the disc includes more than 10 tracks, you can turn to the next or the previous page. Press **◀**, then press **▼** or **▲** to display next/previous page. To return to normal use, press **▶**.
- You cannot switch to the VCR mode when the **TRACK INFO** screen is showing. Press **TITLE MENU/TOP MENU** to clear the **TRACK INFO** screen, then press **DVD/VCR** to switch to the VCR mode.

### Preparation:


- Turn ON the TV and set to the video input mode.
- Load the music CD.
- Press **DVD/VCR** to select the DVD mode. (The DVD indicator will light.)

Press **TITLE MENU/TOP MENU**. The **TRACK INFO** screen will appear.

The elapsed time and total time of the music data (during playback)

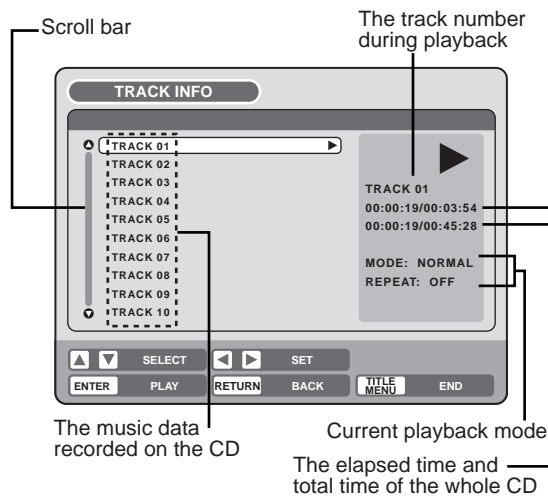

Press **▶**. The menu list will appear.

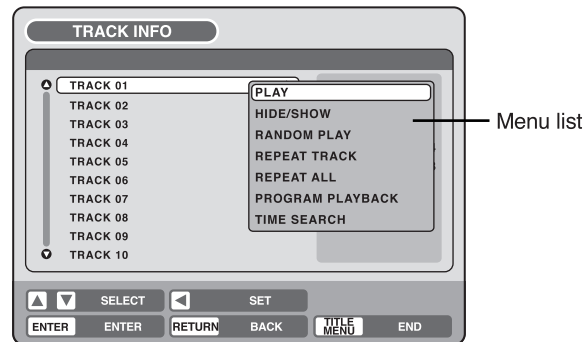

### Playing back a selected track


- Press **▲** or **▼** to select the track number you want to playback and press **▶**.
- Press **▲** or **▼** to select "PLAY" from the menu list and press **ENTER**. The selected track will be played back.

### Excluding specified track

- During stop, press **▲** or **▼** to select the track number you do not want to playback and press **▶**.
- Press **▲** or **▼** to select "HIDE/SHOW" from the menu list and press **ENTER**. The selected track will not be played back. ("H" appears at the side of the track number.)

When you want to cancel the exclusion, press **▲** or **▼** to select the track number with "H" and press **▶**. Press **▲** or **▼** to select "HIDE/SHOW" from the menu list and press **ENTER**, "HIDE" will be cancelled.

# Various operations on CD

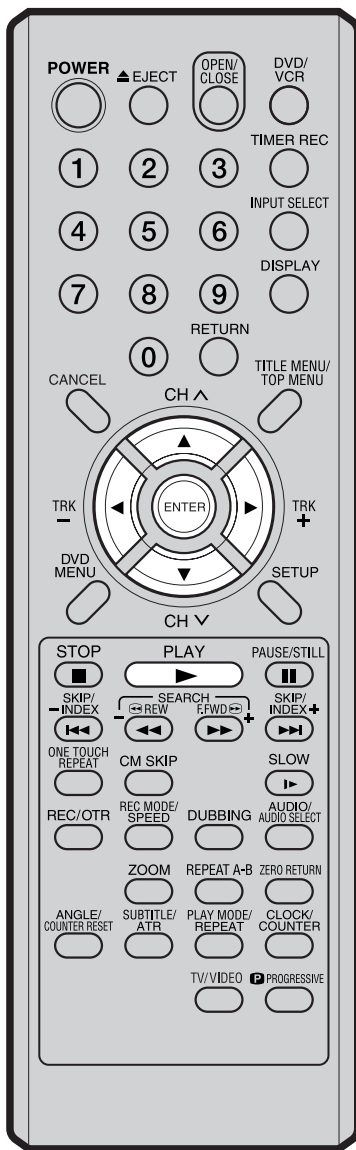

**NOTE:**

When recording on a CD-R/CD-RW in the MP3 or WMA modes, "RANDOM PLAY" and "TIME SEARCH" will not appear in the menu list.

## Random playback

- 1 Press ▲ or ▼ to select "RANDOM PLAY" from the menu list and press **ENTER**.  
The order of music tracks is randomly changed.
- 2 Press **PLAY**.  
Music is played back in random order.

To cancel random playback, select "RANDOM PLAY" from the menu list again, and press **ENTER**.

## Repeat playback of selected track

- 1 Press ▲ or ▼ to select the track number you want to repeat playback and press ▶.
- 2 Press ▲ or ▼ to select "REPEAT TRACK" from the menu list and press **ENTER**.
- 3 Press **PLAY**.  
The selected track will be played back repeatedly.

To cancel repeat track playback, select "REPEAT TRACK" from the menu list again, and press **ENTER**.

## Repeat playback of all tracks

- 1 Press ▲ or ▼ to select "REPEAT ALL" from the menu list and press **ENTER**.
- 2 Press **PLAY**.  
All tracks on CD will be played back repeatedly.

To cancel the repeat all playback, select "REPEAT ALL" from the menu list again, and press **ENTER**.

## Playing back programs

You can specify the playback order yourself.

- 1 Press ▲ or ▼ to select "PROGRAM PLAYBACK" from the menu list and press **ENTER**.
- 2 Press ▲ or ▼ to select to the track number that you want to change the order of and press **ENTER**.  
The "▶" mark will appear at the right side of the track number.
- 3 Press ▲ or ▼ to select to the track number that you want to specify and press **ENTER**.  
The track number that you select in step 2 moves to the position that you specified.
- 4 Repeat steps 2 and 3 to change the playback order.
- 5 Press **PLAY**.  
The tracks will be played back in the changed order.

To cancel program playback, select "EXIT PROGRAM MODE" from the menu list and press **ENTER**.

## Playing back track by specifying the time

- 1 Press ▲ or ▼ to select "TIME SEARCH" from the menu list during playback and press **ENTER**.
- 2 Press ▲/▼ or ◀/▶ to specify the elapsed time of the track (this will be the starting point of playback) and press **ENTER**.  
Playback will start from the specified elapsed time.

Disc playback






# MP3/WMA/JPEG playback



MP3 and WMA files can be played back. Also, you can display JPEG files on the TV screen and enjoy them as a slide show. Some discs may not play due to the condition of the recording.

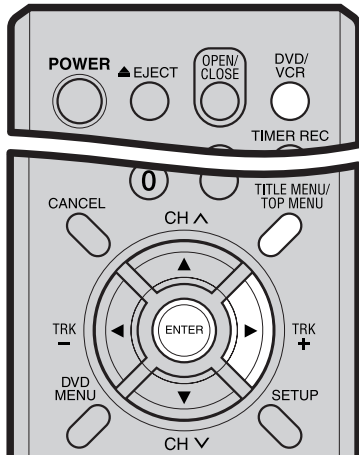

## Limitations on MP3/WMA/JPEG CD playback:


- MP3/WMA/JPEG CD is a disc that is standardized by ISO9660.
- The directory and file names of the MP3/WMA/JPEG CD must correspond to the ISO standardized file names.
- This unit can read 200 files per disc. If one directory has more than 200 files, it reads up to 200 files, the remaining files will be omitted.
- The unit is able to recognize up to a maximum of 50 directories per disc.
- If the CD has both audio tracks and MP3/WMA/JPEG files, only audio tracks are played.
- It may take more than one minute for this unit to read MP3/WMA/JPEG files depending on its structure.
- Music recorded by "Joliet Recording Specification" can be played back. Long file names will be cut.
- The music files recorded by "Hierarchical File System" (HFS) cannot be played.

## Preparation:

- Turn ON the TV and set to the video input mode.
- Load the disc storing MP3, WMA or JPEG.
- Press **DVD/VCR** to select the DVD mode. (The DVD indicator will light.)

## Using the BROWSER screen

- 1 Press **TITLE MENU**.  
The BROWSER screen will appear.

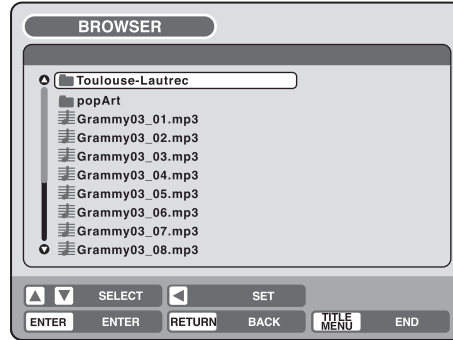


- 2 The MP3, WMA and JPEG files and folders stored in the disc are displayed on the BROWSER screen.
  - Select a folder and press **ENTER**. The files in the folder appear.

## When the file to be displayed is selected

You can select the file types to be displayed on the BROWSER screen.

- 1 Press **▶** to select "SELECT FILES" and press **ENTER**.  
The following list will appear.

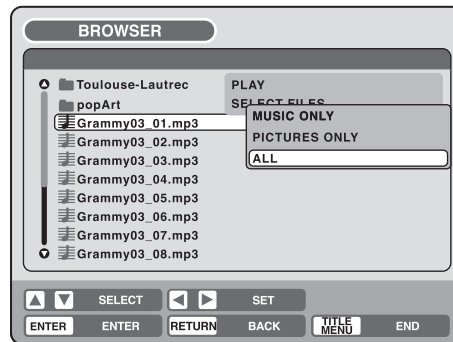

**MUSIC ONLY:** Only the MP3 and WMA files appear.


**PICTURES ONLY:** Only the JPEG files appear.

**ALL:** All files and folders appear.

- 2 Select one item in the above list and press **ENTER**.  
The display will be changed to the selected display type.




# MP3/WMA/JPEG playback

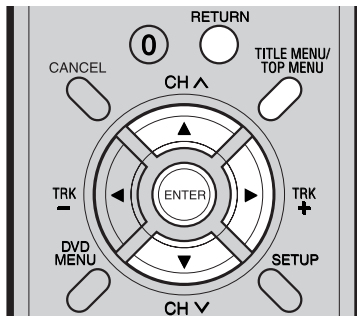

## Playing back MP3/WMA files


- 1 Press **▲** or **▼** to select MP3 or WMA file.
  - In case the disc includes more than 10 files, you can turn to the next or the previous page. (See page 42.)

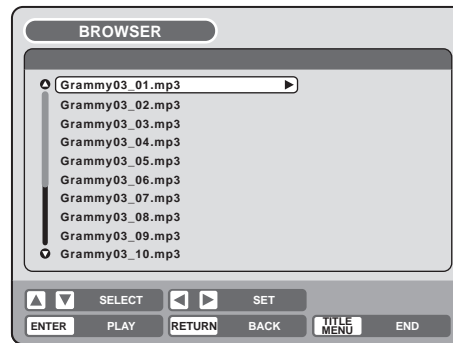

### MP3 CD

- MP3 files must have the extension letters ".mp3".
- Standard, sampling frequency, and the bit rate:  
MPEG-1 Audio  
32kHz, 44.1kHz, 48kHz  
32kbps to 320kbps (constant bit rate or variable bit rate)
- The recommend recording setting for a high quality sound is 44.1kHz of sampling frequency and 128kbps of constant bit rate.

- 2 Carry out either of the item **a** or **b** below.
  - a: Press **ENTER**.
  - b: Press **▶** to select "PLAY" and press **ENTER**.
 The TRACK INFO screen appears to playback the selected file. For the details of the TRACK INFO screen, see "Various operations on CD" on page 42.

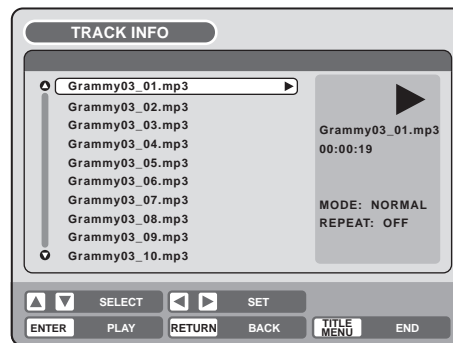


### WMA CD

- When creating a WMA disc, make sure that the copyright function is off. DRM (Digital Rights Management) files cannot be played back.
- WMA files must have the extension letters ".wma".
- Standard, sampling frequency, and the bit rate:  
WMA version 7 and 8  
32kHz, 48kbps  
44.1kHz, 48kbps to 192kbps  
48kHz, 128kbps to 192kbps
- Music files recorded as mono, 48kHz, 48kbps cannot be played back by this unit.

- 3 To return to the BROWSER screen, press **RETURN**.
  - To stop playback of the MP3 or WMA files, press **TITLE MENU**.

Disc playback

# MP3/WMA/JPEG playback

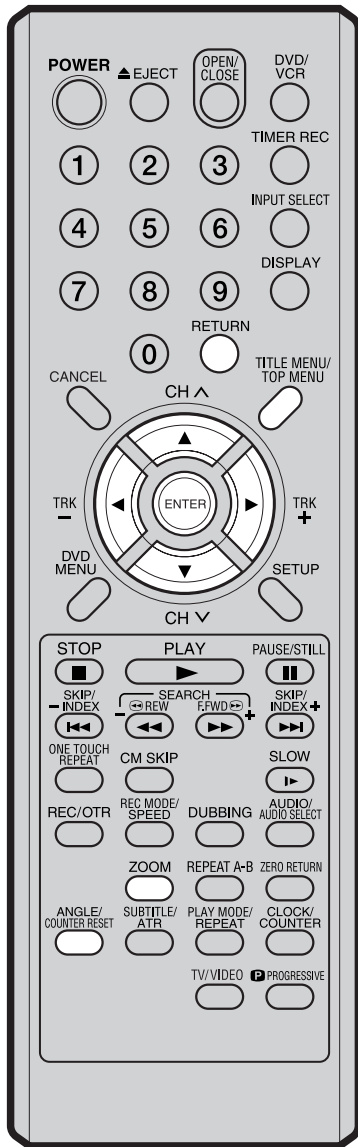


## JPEG CD


JPEG files must have the extension letters ".jpe", ".jpeg" or ".jpg".

## Playing back JPEG files


- 1 Press **▲** or **▼** to select JPEG file.
  - In case the disc includes more than 10 files, you can turn to the next or the previous page. (See page 42.)

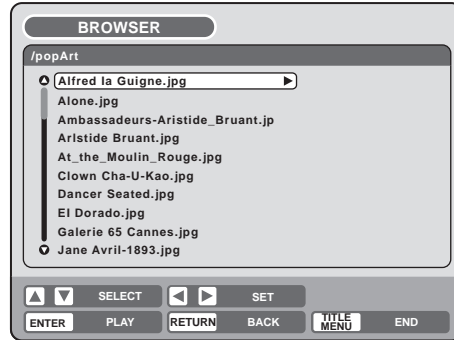

- 2 Carry out either of the item **a** or **b** below.
  - a: Press **ENTER**.
  - b: Press **▶** to select "PLAY" and press **ENTER**.  
The thumbnail images of the JPEG files stored in the route directory or the folder appear. Press **▲**, **▼**, **◀** or **▶** to select the pages of the thumbnail images, or select the JPEG file to be displayed at first for the slide show.

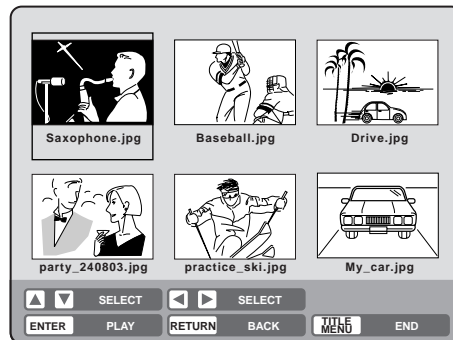

- 3 Press **ENTER** to play the selected picture.
  - If you have set the interval time for JPEG slide show, the pictures will be played back one after another automatically. (See page 32.)
  - Press **ZOOM** to enlarge the displayed image.
  - Press **ANGLE** to rotate the image by 90 degrees each time.

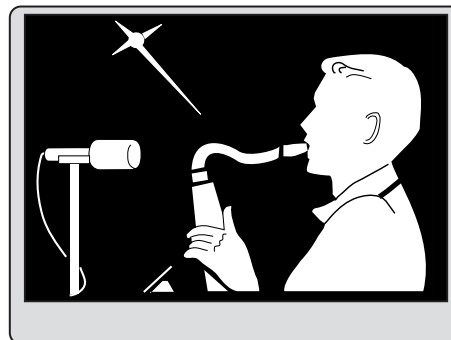


- 4 To return to the thumbnail screen, press **RETURN**.
  - To stop the slide show, press **TITLE MENU**.

# Progressive scan



The unit supports the progressive scanning system as well as the conventional interlaced scanning system. If your TV is equipped with component video input jacks which support the progressive video input, you can enjoy high quality picture by making the progressive scanning mode active.

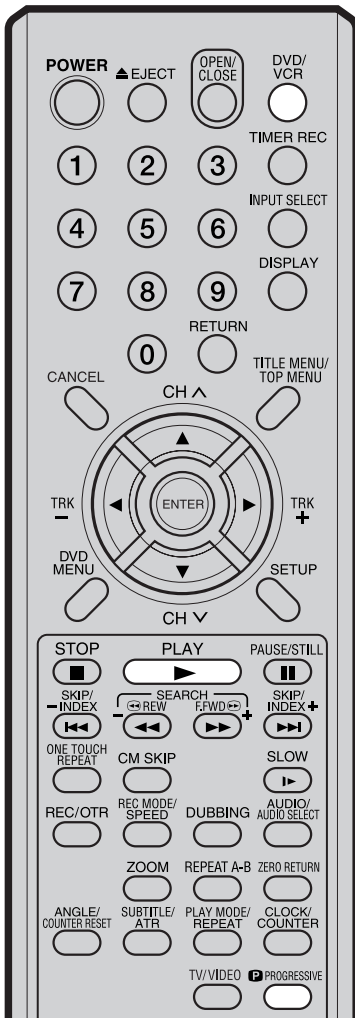

## Preparation:

- Connect to a TV equipped with component jacks which support the progressive video input.
- Turn ON the TV and set it to the corresponding video input mode.
- Press **DVD/VCR** to select the DVD mode. (The DVD indicator will light.)

- 1 Press **PROGRESSIVE** in the stop mode. The PROGRESSIVE indicator "P" on the display window will light.
  - The unit recognizes the picture source (film or video) of the current disc according to the disc information.

- 2 Press **PLAY** to start playback.



Disc playback

- To make the progressive scanning mode inactive, press **PROGRESSIVE** in the stop mode. The PROGRESSIVE indicator "P" on the display window will go off.

## Different scanning modes

### Interlaced scan

Technology that alternately displays odd-numbered scanning lines and even-numbered scanning lines. Also called "480i", "i" meaning "interlace".

### Progressive scan

Technology that simultaneously displays odd-numbered scanning lines and even-numbered scanning lines from top to bottom. Also called "480p", "p" meaning "progressive".

## NOTES:

- Some discs may not be played back with the progressive scan mode correctly because of the disc characteristics or recording condition.
- There are some progressive TV and High-Definition TV sets that are not fully compatible with the unit, resulting in an unnatural picture when playing back a DVD disc in the progressive scan mode. In such a case, use the interlaced scanning mode.
- You cannot activate the progressive scan mode in the following cases:
  - The unit is in the VCR mode.
  - A DVD disc is currently playing. You must stop playback first.



# Loading and unloading a cassette tape




Use only video cassette tapes marked **VHS** and **S-VHS**.

## SQPB


- Cassettes marked "VHS" (or "S-VHS") can be used with this video cassette recorder. However, S-VHS recording is not possible with this model.
- This model is equipped with SQPB (S-VHS QUASI PLAYBACK) that makes it possible to playback S-VHS recordings with regular VHS resolution.
- HQ VHS is compatible with existing VHS equipment.

### Loading


Push the center of the tape until it is automatically inserted.

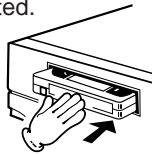

Insert the cassette tape with its labeled side facing up and the erase prevention tab positioned at your left. An inverted cassette tape cannot be inserted.

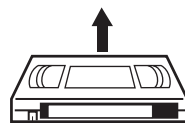

Erase prevention tab

 

### Automatic power ON

When you insert a cassette tape the VCR power will turn ON automatically.

### Automatic playback

When loading a cassette tape without an erase prevention tab, playback will start automatically.


### Unloading

You can eject the video tape while the unit is turned off.

1 Press **EJECT** on the unit or the remote control.



2 Remove the cassette tape.

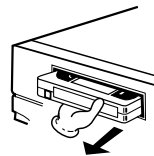


### Automatic tape eject

This VCR will automatically rewind the tape when the tape has ended. And when the tape is rewound to its beginning, the cassette tape will be ejected automatically.


### To prevent accidental erasure

Remove the erase prevention tab with a screwdriver.

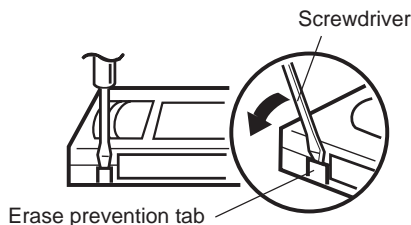

### To record again

Cover the hole with a piece of adhesive tape.

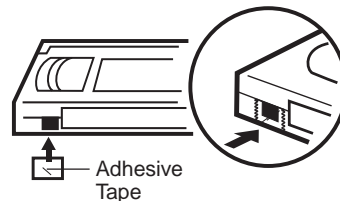


### Tape speed and maximum recording time

Tape Speed	Video cassette tape				
	T-160	T-120	T-90	T-60	T-30
SP (Standard Play)	2-2/3 hours	2 hours	1-1/2 hours	1 hour	30 minutes
SLP (Super Long Play)	8 hours	6 hours	4-1/2 hours	3 hours	1-1/2 hours




# Cassette tape playback

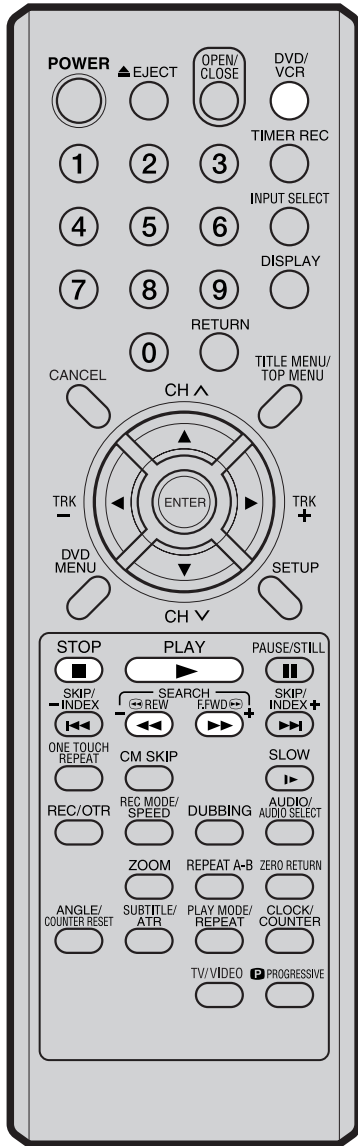


## Preparation:

- Turn ON the TV and set to the video input mode.
- Press **DVD/VCR** to select the VCR mode. (The VCR indicator will light.)

- 1 Load a prerecorded tape  
(When loading a cassette tape without the erase prevention tab, playback will start automatically).

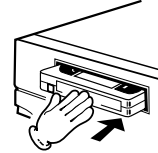

- 2 **To start playback**  
Press **PLAY**.  
Playback will start.  
"▶" will appear on the screen for about 4 seconds.

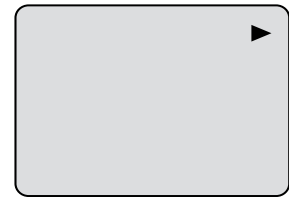


- To stop playback**  
Press **STOP** once.  
The tape will stop but remain fully loaded and ready to play.  
"■" will appear on the screen for about 4 seconds.




- To rewind the tape or forward it rapidly**  
Press **STOP**.

- To rewind the tape:**  
Press **REW**.

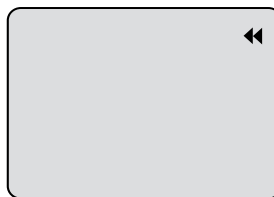

- To forward the tape:**  
Press **F.FWD**.

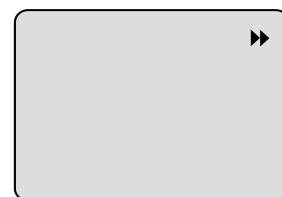

## NOTES:

- This VCR selects the playback tape speed SP, LP or SLP automatically.
- A cassette tape and DVD disc can be played back simultaneously. If you press **DVD/VCR**, the tape playback and DVD playback alternate with each other on the screen.

To stop the tape-winding, press **STOP**. To switch to playback directly (without **STOP**), press **PLAY**.

## Forward/Reverse picture search mode

When the tape is being wound, you can switch to picture search mode (see next page). To do this, press **REW** or **F.FWD** and hold it down. The unit will resume the tape winding as soon as the button is released.



# Special playback



## Picture search

Reverse picture search function  
Press **REW** x 1 or x 2 during the playback.  
Forward picture search function  
Press **F.FWD** x 1 or x 2 during the playback.

### SPEED SEARCH TIMES

TAPE SPEED	PICTURE SEARCH SPEED	
	PRESS ONCE	PRESS TWICE
SP (Standard Play)	3 X	5 X
LP (Long Play)	7 X	9 X
SLP (Super Long Play)	9 X	15 X

To return to playback: Press **PLAY**.

## Still picture

Press **PAUSE** during playback.  
To resume normal playback: Press **PLAY** or **PAUSE**.

## Slow motion

During playback press **SLOW**.  
To return to playback: Press **PLAY** or **SLOW**.

## Slow tracking and vertical lock adjustment

If noise bars appear in the picture during slow motion, press the **TRK +** or **-** to reduce the noise bars.  
If the still picture jitters excessively, press **TRK +** or **-** to stabilize the still picture.

## Frame by frame picture

Press **PAUSE** during playback.  
Press **SLOW** one by one: The picture advances frame by frame.  
To return to playback: Press **PLAY** or **PAUSE**.

## Adjusting tracking condition

### Automatic tracking adjustment

Whenever you insert a tape and start playback, automatic tracking starts working and continuously analyzes the signal to enable optimum picture quality during playback.

### Manual tracking adjustment

If automatic tracking cannot eliminate noises well during playback, press **TRK +/-** to eliminate the noises. "MANUAL TR." will appear. Press it briefly for a fine adjustment, or press and hold for a coarse adjustment.

- Press **ATR** to reactivate automatic tracking again. "AUTO TR." will appear.

### NOTES:


- The audio output is muted during SPEED SEARCH, STILL, FRAME ADVANCE and SLOW MOTION.
- During picture search mode there will be noise bars which are caused by the system.
- The Special Playback will automatically change to playback after approx. 5 minutes to protect the video tape against excessive wear.

## Repeat playback

The entire video tape will be played until its end. The tape will then automatically rewind to the beginning and the playback will be repeated.

1 Press **REPEAT** while the VCR is playing back.

2 By pressing **REPEAT** each time, "REPEAT ON" or "REPEAT OFF" is selected in turn.

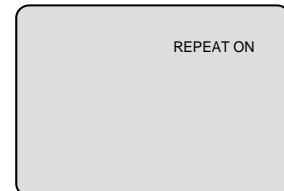

3 When "REPEAT ON" is selected, the tape is played back to the end, and then, it is automatically re-wound to the starting point and played back again. The display "REPEAT ON" goes out in about 3 seconds.

To cancel repeat playback: Press **REPEAT** to select "REPEAT OFF".


## Commercial skip

Press **CM SKIP** during playback.  
The video is rapidly forwarded for approx. 30 seconds and playback resumes.  
You may press the button up to six times in a row to move 180 seconds ahead.


## To display VCR operation status

Press **DISPLAY**. The clock, day of the week and more information will be indicated.

### While watching TV

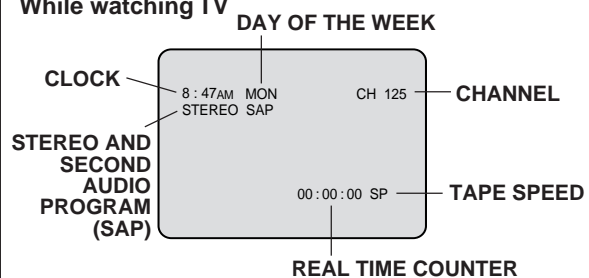

### While operating a tape

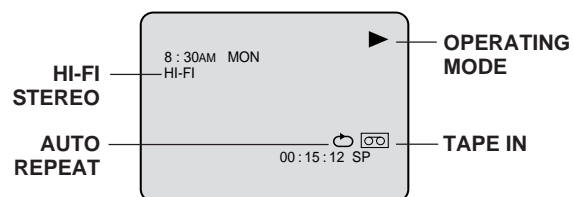

To cancel the display: Press **DISPLAY** until all indicators disappear.







# ZERO RETURN function / Video index search system




**ZERO RETURN function**  
This function makes tape rewinding stop at the counter "00:00:00" position automatically.

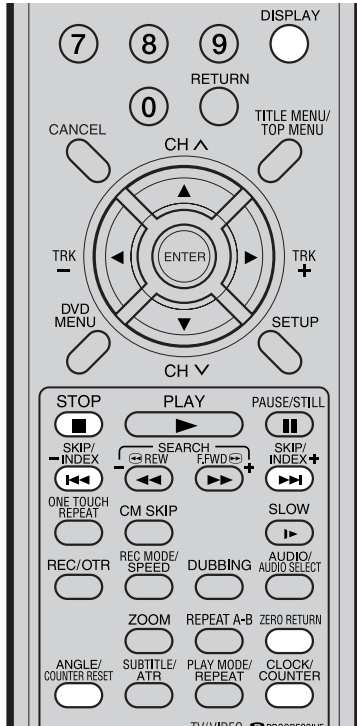

**1** Press **DISPLAY**.  
The counter display shows the tape running time during playback or recording.

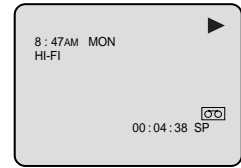



**2** Press **COUNTER RESET** at the desired tape position. The counter display will be reset to the "00:00:00" position (e.g. the beginning of recording).

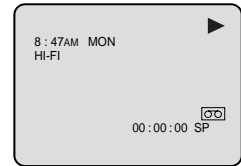

**3** Press **STOP** when playback or recording is finished. Press **ZERO RETURN**. The tape will be rewound or fast forwarded and automatically stop at the "00:00:00" position.

## Switching the display between clock and counter

Press **CLOCK/COUNTER**. The clock and tape counter alternate with each other in the display.

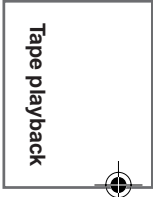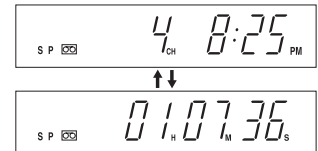


## Video index search system

This function enables you to locate the beginning of any recording made on the VCR.

## Recording an INDEX MARK

The Index search function automatically records an INDEX mark on the tape whenever a recording is initiated.

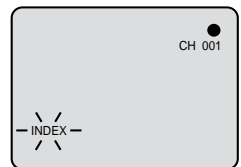

## Index search

Press **INDEX** **▶▶** or **◀◀** during stop or play mode.

For Succeeding programs: Press **INDEX** **▶▶**.  
For Preceding programs: Press **INDEX** **◀◀**.  
(Additional press increases the INDEX NO. up to 9.)

When the **INDEX** **▶▶** or **◀◀** is pressed, the unit starts searching the INDEX NO. selected and finds the portion, then playback starts automatically.

To stop the Index Search, press **STOP**.



▶▶ or ◀◀ is displayed

INDEX NO. (up to 9)

## NOTES for Counter Display:

- If you rewind the tape beyond "00:00:00", a minus sign ("–") will be displayed in front of the time.
- When you load a tape, the counter will reset to "00:00:00".
- The counter does not function on nonrecorded (blank) sections of the tape. When you rewind, fast forward or play tapes through blank sections, the counter stops.

## NOTES for Video index search system:

- When you record an INDEX mark at the very beginning of the tape, the mark may not be found.
- During INDEX search, the tape may stop and begin to play at a slightly different location.
- INDEX may not function properly with old or worn out video tapes.
- INDEX marks may not be found if it is extremely close to the point where the search began.
- In recording, if you stop recording temporarily, the INDEX mark is not recorded on the tape.



# Read this before recording on disc

This section explains things you must know to record onto a disc. Read it before attempting to record.

### NOTE:

Should a power failure occur or should the AC cord plug be disconnected while recording, editing, initializing, finalizing or any other function, the program being recorded will be lost or the disc may not be playable. Manufacturer can not guarantee against loss of program or disc should this occur. To start recording again, re-format the disc or use a new disc and follow the instruction on recording.

### NOTES:

Recording time can change for the following reasons.

- When image quality is poor as during poor TV reception.
- When recording on a disc that has been edited before.
- When the video is followed with recordings of still images or just audio.

### Types of disc

You can use DVD-RW and DVD-R discs to record video.

#### DVD-RW (VR mode)

- This mode involves multiple editing functions.
- Various editing options using a created Playlist.

#### DVD-RW (Video mode)-R

- Simple editing (renaming titles).

For more information on recording format, see “Recording format” (page 10).

### Recording modes

There are 4 modes for recording on disc. Recording time and quality vary according to mode.

Recording mode	Recording time	Quality
XP	Approx. 60 min	Can record high quality images.
SP	Approx. 120 min	Can record normal quality images.
LP	Approx. 240 min	Quality deteriorates slightly, but recording time is longer.
SLP	Approx. 360 min	Recording time is prioritized over quality.

- Recording time above is based on a 4.7GB disc.

Since DVD recording is performed using VBR (Variable Bit Rate), recording time varies according to the recorded content. To know the correct recording time, stop recording and check the media information. (See page 35.)



# Read this before recording on disc

## NOTES:

- When using one touch timer recording to record on a DVD disc, it takes some time from when you press **REC/OTR** until recording actually starts. Press **REC/OTR** a little before your preferred starting point.
- Even if **STOP** is pressed during recording, recording does not stop instantly. Recording may continue for as long as 5 seconds maximum in the VR mode or 30 seconds maximum in the Video mode.
- Because of characteristics peculiar to digital video compression technology, scenes with fast motion may appear as a matrix of larger blocks.

## Disc remaining time

### VR mode

- Recording is possible as long as there is available space on the disc. (Finalized discs can be recorded by cancelling the finalization, see “UNDO FINALIZE” on page 28.)
- Erasing unnecessary title frees up available space on the disc. (Titles can be erased from finalized discs by first undoing the finalization. See “UNDO FINALIZE” on page 28.)

### Video mode

- Up until the disc is finalized, recording is possible as long as there is available space on the disc. (Once the disc has been finalized, additional recording and erasing are not possible.)
- The remaining time cannot be increased, nor can recorded title be overwritten.
- Titles cannot be erased nor can recorded titles be overwritten.

## Images that cannot be recorded

Some DVD-Video and broadcasts contain copy-restriction signals to protect copyrights. There are 3 types of copy-restriction signals: “Copy Free”, “Copy Never” and “Copy Once”.

### “Copy Free” (unrestricted recording)

Land-based TV broadcasts and images you record yourself with a video camera allow unrestricted recording. There are no restrictions on recording.

### “Copy Never” (recording prohibited)

- Images that contain the recording prohibited signal cannot be recorded.
- If the recording prohibited signal appears halfway through an image you are recording, recording is paused at that instant. When the recording prohibited signal ends, recording resumes.
- This unit incorporates a built-in copy guard. It cannot record software or broadcasted programs that contain copy restriction signals designed to protect copyright, etc.


### “Copy Once” (one-time recordable)

Programs (images) that contain the one-time recordable signal can be recorded only in the VR mode using a DVD-RW disc that supports CPRM Ver. 1.1.

# Recording a TV program



You can record programs you watch on TV onto video tapes or DVDs.

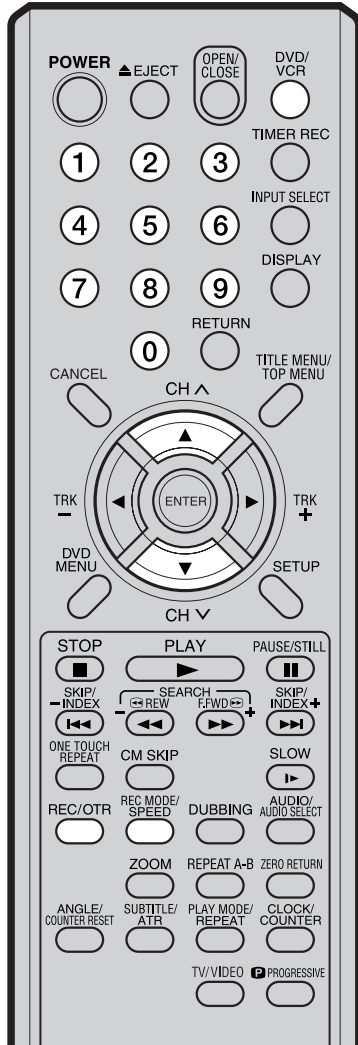



## Preparation:

- Turn ON the TV and set it to the video input mode.
- Load a recordable DVD or video tape into the unit.
- Press **DVD/VCR** to select the appropriate mode.

**1** Press **REC MODE/SPEED** to select the recording mode.


The recording mode will appear on the TV monitor and change every time **REC MODE/SPEED** is pressed.

  VCR recording modes: SP/SLP  
 DVD recording modes: XP/SP/LP/SLP



SP is the normal recording mode for video tapes. SLP offers 3 times the recording time as SP. For more information on DVD recording modes, see page 52.

 **2** Set the TV/CATV option to the appropriate position (page 32).



**3** Press the **numeric keys** or **CH ^/v** to select the channel to be recorded.

### TO SELECT Cable TV CHANNELS:

1-9 Press **0** twice and then **1-9** as required.

Example: To select 2, Press "002".

10-12 Press **0** first and then the remaining 2 digits in order from left to right.


Example: Press **012** for "12".

13-99 Press 2 digits in order.

Example: Press **22** for "22".

100-125 Press the 3 digits in order.

Example: Press **110** for "110".

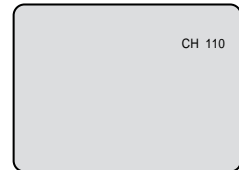

### TO SELECT TV CHANNELS:

 
 
All channels can be instantly selected by using two buttons. (For example, to select channel 2, press **0**, then **2**. If you press only **2**, channel selection will be delayed for a few seconds.) For channels 10 and above, press the 2 digits in order.

### VHF/UHF/CABLE CHANNELS

TV	CABLE
VHF	VHF
2-13	2-13
UHF	STD/HRC/IRC
14-69	14-36 (A) (W)
	37-59 (AA) (WW)
	60-85 (AAA) (ZZZ)
	86-94 (86) (94)
	95-99 (A-5) (A-1)
	100-125 (100) (125)
	01 (5A)

**4** Press **REC/OTR**.


When recording starts, "●" appears on the screen for about 4 seconds.



## NOTES:

- When recording onto a DVD, it takes some time from when you press **REC/OTR** until recording actually starts. Press **REC/OTR** a little before your preferred starting point. With a video tape, recording starts almost at the same time you press **REC/OTR**.
- If the erase prevention tab of video tapes is removed, the tape will eject when **REC/OTR** is pressed for recording.

# Recording a TV program

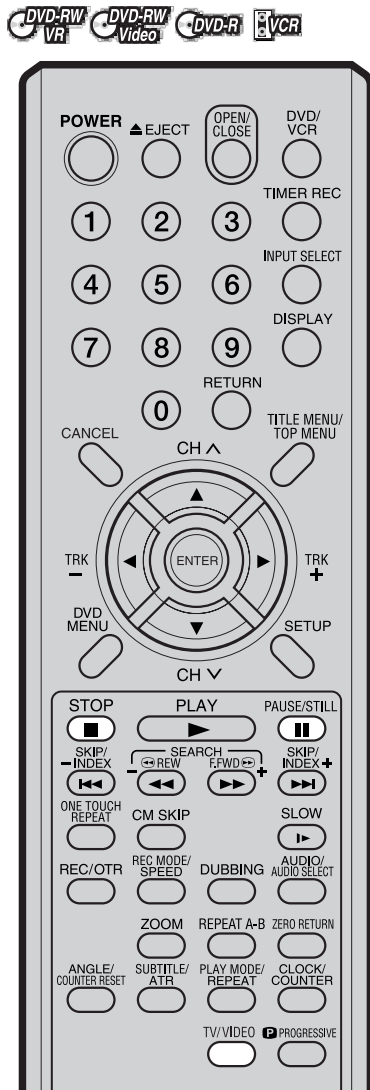

## To stop recording

Press **STOP** to stop recording.  
 “■” will appear on the screen for about 4 seconds.




## NOTE:

When recording onto a DVD, even if **STOP** is pressed during recording, recording does not stop instantly. Recording may continue for as long as 1 minute maximum.

## To stop recording temporarily

Press **PAUSE/STILL** to avoid recording unwanted material.  
 “●||” will appear on screen for about 4 seconds.  
 Press again to resume recording.

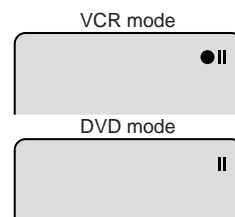

## NOTES:

- In video recording, the pause function will be released after 5 minutes to prevent damage the video tape. The unit will change to the STOP mode.
- When recording onto a video tape, you can select a recording channel in the recording pause mode (You cannot change a recording channel in the DVD recording pause mode.)

## Recording one program while watching another

While the unit is recording, press **TV/VIDEO** to select the TV position. The “VCR” will go off and recording will continue. Select the TV channel you want to watch by using the TV channel selector.

## NOTE:

Some cableTV hookups do not permit viewing one channel while recording another. See pages 18, 19.

## Auto Rewind feature

This VCR will automatically rewind the tape when the tape has ended (except during OTR and TIMER REC). It will also eject the tape.

## NOTES:


- If the disc space become full, the recording is stopped and “Disc is full” will appear on the screen.
- In the event of a power failure during DVD recording including OTR and TIMER REC, the program can not be recorded on the disc. When the power resumes, after the VCR/DVD is turned on, the set checks the disc to repair the error which is caused by a power failure. This checking process may require a few minutes to about 1 hour according to disc condition. In this process “SYSTEM ERROR PLEASE WAIT DISC CHECKING” will appear on the screen.

Recording

# One-touch Timer Recording (OTR)



The One-touch Timer Recording feature provides a simple and convenient way to make a timed recording.

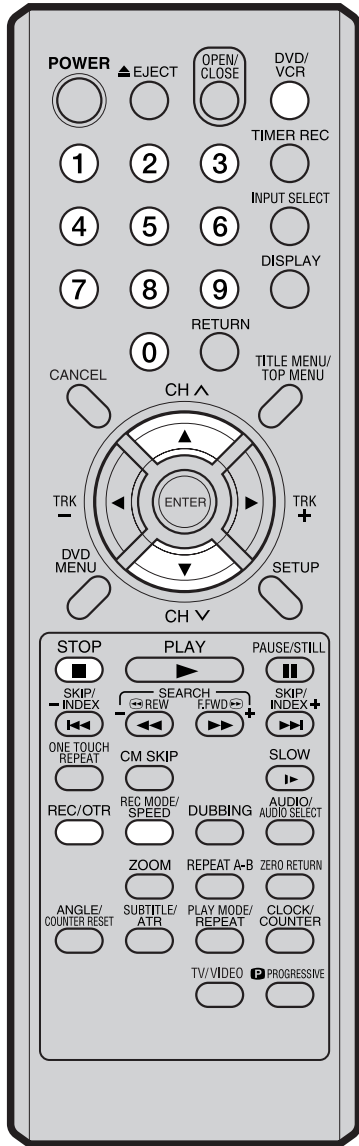



**NOTE:**  
If you wish to watch the DVD playback during the VCR OTR, press **DVD/VCR** to change to DVD mode and perform the DVD playback. You can also playback the VCR during DVD OTR.

## Preparation:

  
- Turn ON the TV and set to the video input mode.
- Load a recordable DVD or video tape into the unit.
- Press **DVD/VCR** to select the appropriate mode.

**Example:** One-touch Timer Recording for 30 minutes.


- 1 Press **REC MODE/SPEED** to select the recording mode.  
For the recording mode, see the step 1 on page 54.



 - 2 Set the TV/CABLE option to the appropriate position (See page 32).





- 3 Press **numeric keys** or **CH ^/v** to select the channel to be recorded.

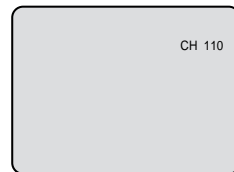

- 4 Press **REC/OTR**. Each additional press of **REC/OTR** will increase recording time as shown in the chart below, up to a maximum of 6 hours. The OTR and recording time will appear on the screen for about 4 seconds.

Press	Recording time	Press	Recording time
once	NORMAL REC	7 times	OTR 3:00
twice	OTR - : - -	8 times	OTR 4:00
3 times	OTR 0:30	9 times	OTR 5:00
4 times	OTR 1:00	10 times	OTR 6:00
5 times	OTR 1:30	11 times	NORMAL REC
6 times	OTR 2:00		

  

## To cancel OTR


Press **STOP** or turn off the power.  
"■" will appear on screen for about 4 seconds.



# Timer recording



The timer recording system allows you to select the date, time and channel and record the desired programs. Up to 12 timer programs within a month can be stored in this unit.

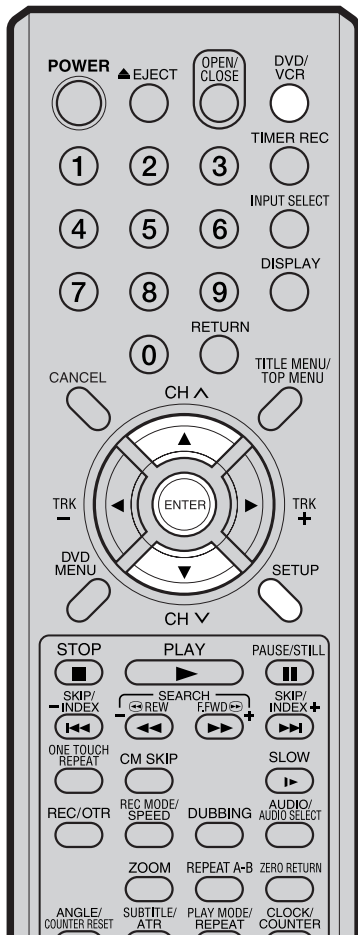

**NOTE:**

If a recordable tape is not inserted or no disc space is available, the timer record indicator "L" flashes. Replace the tape or disc to allow recording.


## Setting timer recording

**Preparation:**


- Turn ON the TV and set to the video input mode.
- Load a recordable DVD or video tape.
- Press **DVD/VCR** to select the appropriate mode.
- Confirm that the clock is indicating the correct time.

**Example:** Set the recording mode to LP; the TV program is on channel 12 starting at 8:00 PM and stopping at 9:30 PM on a date of 20th.


- 1 Press **SETUP**.  
The SETUP MENU screen appears.

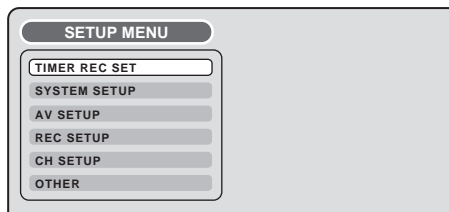

- 2 Press **▲** or **▼** to select "TIMER REC SET" and press **ENTER**.  
The TIMER REC SET screen will appear.

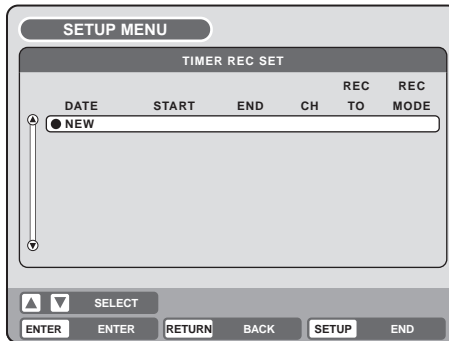

- 3 Press **▲** or **▼** to select "NEW" and press **ENTER**.  
The program screen will appear.

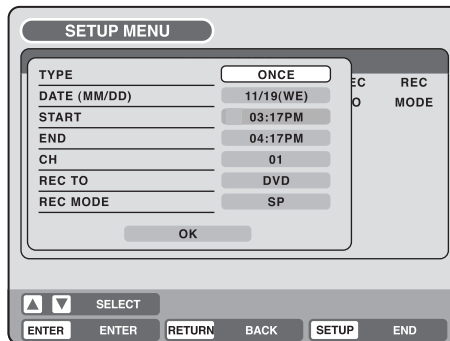




# Timer recording




### NOTES:

- If you select timer recording on a specified date only one time, select "ONCE" in the "TYPE" for recording. You can record same days of every week or from Monday to Friday using the item "TYPE". The items you can select are as follows:  
 ONCE: Recording on the selected "DATE"  
 EVERY SUN: Recording every Sun.  
 EVERY MON: Recording every Mon.  
 EVERY TUE: Recording every Tue.  
 EVERY WED: Recording every Wed.  
 EVERY THU: Recording every Thu.  
 EVERY FRI: Recording every Fri.  
 EVERY SAT: Recording every Sat.  
 MON-FRI: Recording from Mon. to Fri.  
 MON-SAT: Recording from Mon. to Sat.  
 EVERYDAY: Recording everyday.
- The starting and stopping times for the recording are displayed on the 12-hour (am/pm) clock. Twelve o'clock midnight is displayed as "12:00AM", whereas twelve o'clock noon is displayed as "12:00PM".
- The initial setting of "REC TO" and "REC MODE" can be changed using "Setting the recording". (See page 31.)

- Press ▲ or ▼ to select "TYPE" and press **ENTER**. Press ▲ or ▼ to select "ONCE" from the list and press **ENTER**.


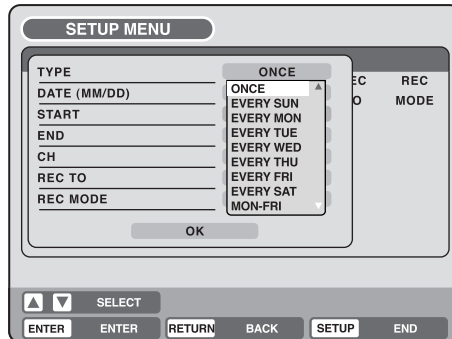


- Press ▲ or ▼ to select "DATE" and press **ENTER**. Press ▲ or ▼ to select the date to be recorded from the list and press **ENTER**.
- Press ▲ or ▼ to select "START" and press **ENTER**. Set the time when the recording is started.
  - To switch over the selection item (hour or minute), press ◀ or ▶, then press **ENTER**.
  - Press ▲ or ▼ to adjust the time.
  - After setting the time, press **ENTER**.

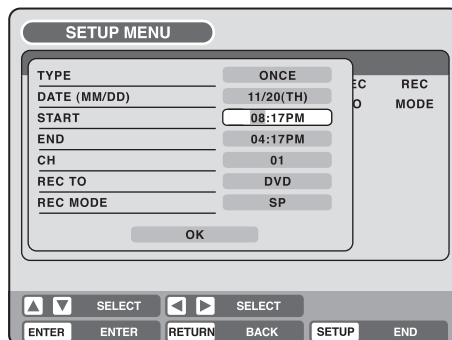

- Press ▲ or ▼ to select "END" and press **ENTER**. Set the stopping time in the same manner for setting the starting time of timer recording.
- Press ▲ or ▼ to select "CH" and press **ENTER**.
  - Press ▲ or ▼ to select the channel to be recorded.
  - You can select the external input (L1 or L2) by pressing ◀ or ▶.
- Press ▲ or ▼ to select "REC TO" and press **ENTER**. Select the media (DVD or VCR) to be recorded from the list and press **ENTER**.
- Press ▲ or ▼ to select "REC MODE" and press **ENTER**. The recording modes for the media selected in "REC TO" item are listed up. Select the recording mode and press **ENTER**. For the recording modes in VCR, see page 48, and for the recording modes in DVD, see page 52.

# Timer recording

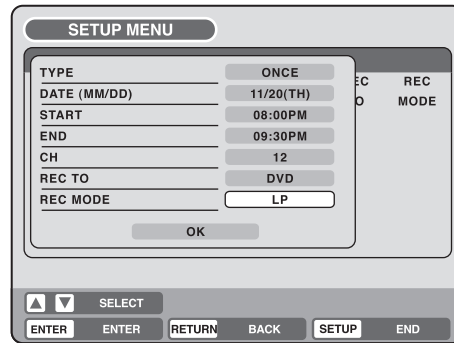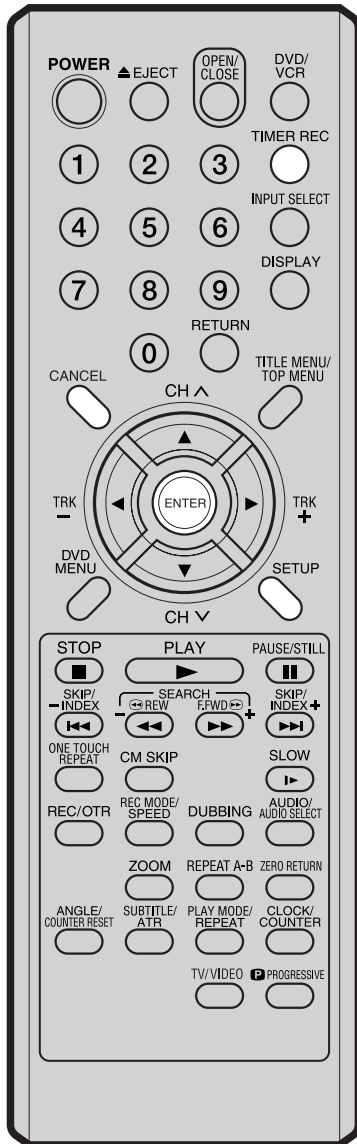

- 11 Select "OK" and press **ENTER**.  
The timer program is determined and the **TIMER REC SET** screen appears again.
- 12 When you enter the other program for the timer recording, repeat the steps 3 to 11.
- 13 Press **SETUP**.  
The **TIMER REC SET** screen disappears and the display will return to the normal screen.
- 14 Press **TIMER REC**. The timer indicator "□" will appear on the display and the unit stands by for recording.
  - If the program is DVD recording only, the unit will change to VCR mode automatically. (The DVD mode cannot be selected.)
  - If the program is VCR recording only, the unit will change to DVD mode automatically. (The VCR mode cannot be selected.)
  - If the programs are DVD and VCR recording, the unit will turn off. If you want to use the unit, press **TIMER REC** again to deactivate the timer.

## Checking or changing the timer recording

When you want to check the selected timer recording, follow the steps 1 and 2 of "Setting timer recording" and display the **TIMER REC SET** screen. To change the timer recording, select the program to be changed and press **ENTER**. The changing method is the same as that for the recording a program for the first time.


## Cancelling the timer recording

Display the **TIMER REC SET** screen. Select the program you want to cancel and press **CANCEL**, then the selected program will be erased from the timer recording list.

## In case Timer programs-overlap

Do not overlap timer programs as portions of the conflicting programs will be lost. The first recording time has priority over the next recording time as shown in the diagram below.

In this case, the next recording time is delayed a maximum of about 1 minute.

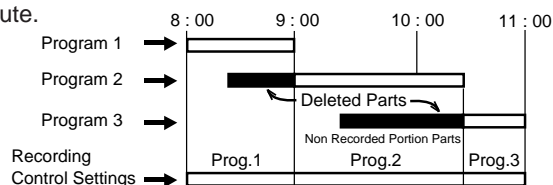

### NOTES:


- Recording starts a few seconds before the preset starting time.
- You cannot use the timer recording for the both DVD and VCR at the same time.
- You can playback the DVD during the VCR timer recording, and you can playback the VCR during the DVD timer recording.



# Stereo recording and playback




The VHS Hi-Fi audio system permits high fidelity recording of MTS STEREO TV broadcasts.

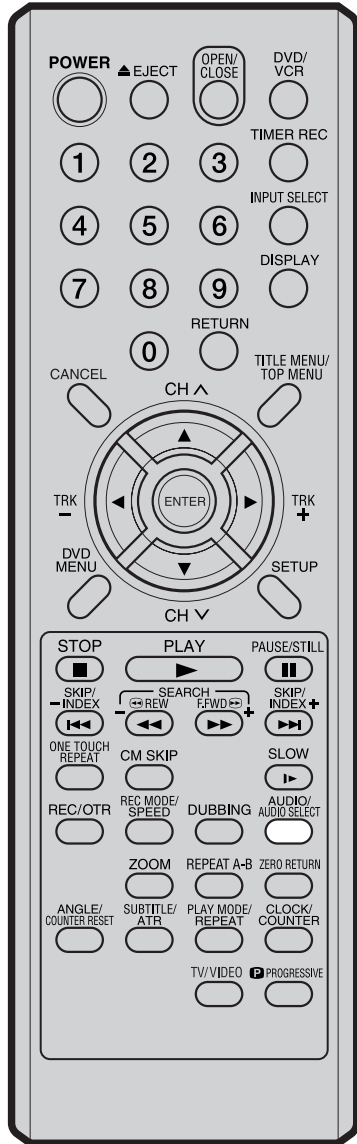

When a MTS STEREO broadcast is received, the word "STEREO" will appear on the screen and the program can be viewed or recorded in stereo.

The Hi-Fi STEREO recording procedure is the same as for normal recordings.

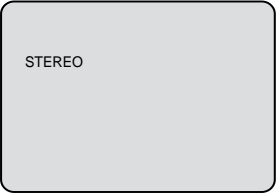

### NOTE:

When using a Cable TV system, stereo TV programs may be transmitted over a mono cable channel. In this case the word "STEREO" will not appear and the sound will be in mono.

### Output selection

When viewing an MTS STEREO TV program, or playing a prerecorded Hi-Fi STEREO on video tape or disc, press **AUDIO SELECT** to select how the audio will be heard through the speakers. Normally set to the Hi-Fi STEREO position, this button can be set to the MONO position if the stereo audio is of poor quality. The "R" and "L" positions allow the audio from the Right or Left Hi-Fi channel to be heard over both TV speakers. This button has no effect when viewing a monaural audio program. Each time when you press the button, output selection display appears on the screen for several seconds. Refer to the chart below.

OUTPUT SELECTION	SOUND HEARD ON BOTH SPEAKERS
STEREO	STEREO
L ch	LEFT CHANNEL AUDIO
R ch	RIGHT CHANNEL AUDIO
MONO	MONO

### Output selection for DVD

You can switch between the left or right channel and stereo only when playing a disc on which a bilingual broadcast was recorded in the DVD-RW VR mode. It is not possible to switch between channels otherwise as only the channel selected in the setting of SAP (Second Audio Program; ON or OFF) is recorded in the DVD-RW Video mode or DVD-R (see page 31).

### NOTE:

When a stereo or monaural broadcast is recorded, either stereo or monaural, respectively, is played back and it is not possible to switch between channels.

### NOTES:

- When playing back a video tape or disc that is not recorded in Hi-Fi stereo mode, the audio will automatically be monaural.
- When listening to a Hi-Fi video tape, disc or MTS broadcast through the RF OUT (UHF/VHF) jack (Audio/Video cord not connected), the sound will be monaural.



# Editing the disc

This section explains how to edit the recorded contents on DVD-RWs. However, the items that you can edit vary with the recording formats. In VR mode, you can edit various title menus, whereas in Video mode, you can edit only a few items.

## Title menu

When the content is recorded, a title name that includes the date, time, channel number and other information is created automatically. The title menu can be used when you playback after confirming the contents (see page 34), or when you check the contents recorded on the disc.

## Original title

The titles explained above are called original titles; these will be added with every recording. In VR mode you can do various editing operations i.e., you can rename the titles, or add the chapter marks. In addition, you can erase the unnecessary titles to increase the disc space.

## Playlist

You can create a playlist based on the original titles. You can combine or erase undesired scenes.

If you create a playlist it will become the primary list used by the disc. If you create a playlist to customize your viewing preferences, and choose to delete it, the original titles will not be affected. It is recommended to create and edit the playlist to prevent important titles from being erased accidentally.

If you create a playlist, both the original title and playlist will be displayed on the title menu.

## Editable items

The items that can be edited are different between original title and playlist. For the disc in Video mode, only the title name can be edited. The items can be edited in each are as follows:

Editing items	VR mode		Video mode
	Original	Playlist	Original
Playback	Y	Y	Y
Adding chapter mark	Y	N	N
Combining chapters	Y	N	N
Erasing scenes	Y	Y	N
Erasing titles	Y	Y	N
Renaming titles	Y	Y	Y
Creating playlist	Y	N	N
Combining titles	N	Y	N

Editing the disc

### NOTES:


- This unit can not record or edit a disc which was recorded or edited using another DVD recorder.
- You cannot edit or record the disc on which disc protection is set. In such a case, be sure to cancel the disc protection (see page 28) before starting the operation.
- When a scene has been erased, the selected position for erasing may vary slightly from the actual erased position.

If you finalize the disc in Video mode, the title menu is automatically changed. Thumbnail image and recording information will not appear in the title menu after finalizing.

# Editing a playlist



You can create and edit the playlist based on the original title.

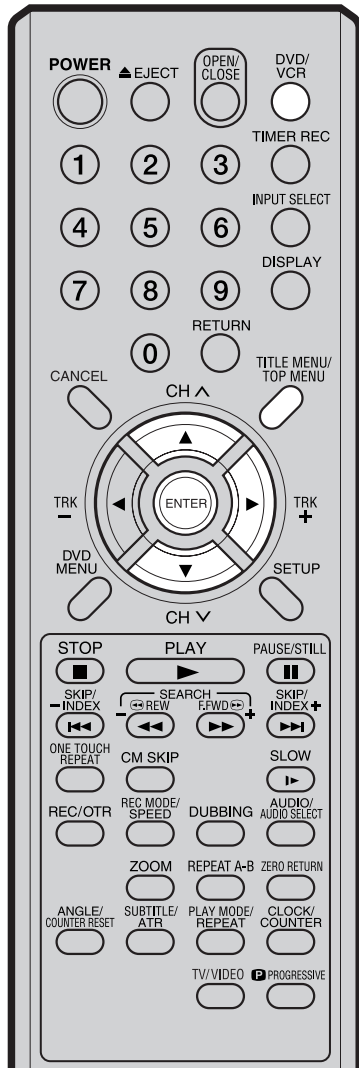


## Preparation:

- Turn ON the TV and set to the video input mode.
- Load the recorded DVD-RW (VR).
- Press **DVD/VCR** to select the DVD mode. (The DVD indicator will light.)

## Creating a playlist


- 1 Press **TITLE MENU**.  
The title menu will appear.

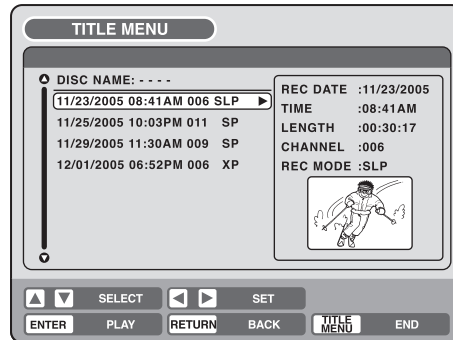

- 2 Press **▲** or **▼** to select the original title which will be used as the base of a playlist.


- 3 Press **▶**.  
The editing menu of original title will appear.

- 4 Press **▲** or **▼** to select "NEW PLAYLIST".

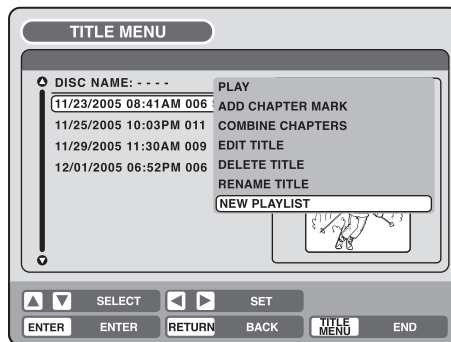

- 5 Press **ENTER**.  
The editing menu closes and the created playlist appears at the bottom of the list.


Created playlist

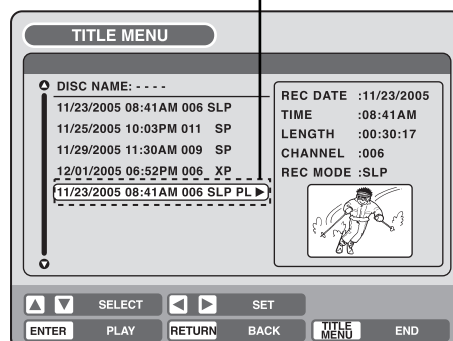

## NOTES:


- A playlist can only be created with a DVD-RW in VR mode. You cannot create a playlist with a DVD-RW in Video mode, nor with a DVD-R.
- In case the disc includes more than 10 titles, you can turn to the next or the previous page. (See page 34.)

# Editing a playlist

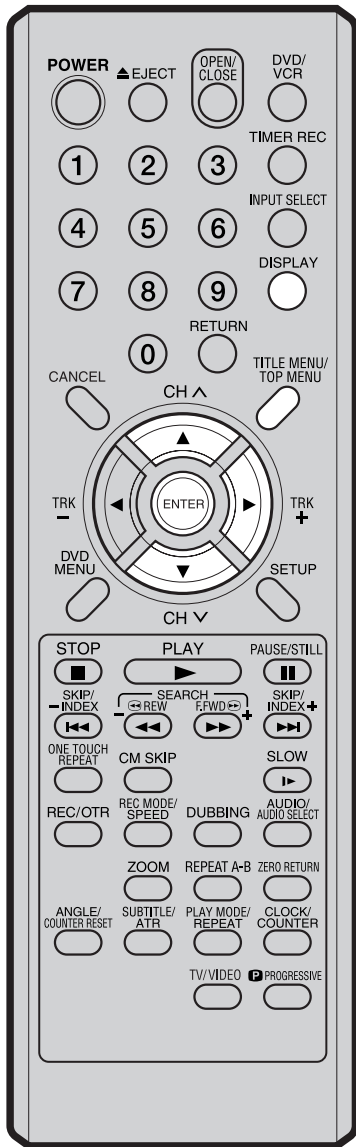


## Changing a title name

- 1 Press **TITLE MENU** to display the title menu.
- 2 Select the playlist where you want to change the title name.
  - Press **▲** or **▼** to select the playlist.
  - Press **▶** to display the editing menu of the playlist.
  - Press **▲** or **▼** to select "RENAME TITLE".

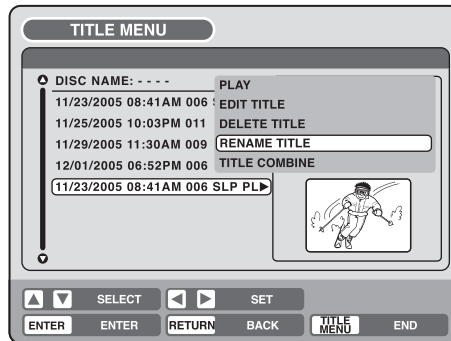


- 3 Press **ENTER**.  
The keyboard screen will appear.

- 4 Use the keyboard screen to enter the title name.

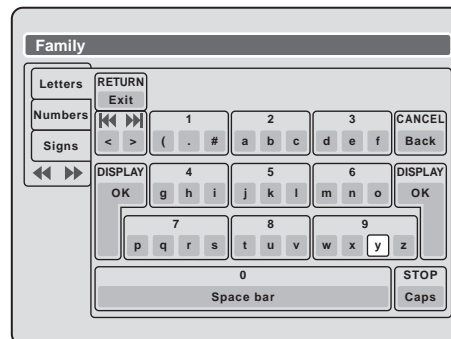

- 5 Press **DISPLAY** to return the title menu.

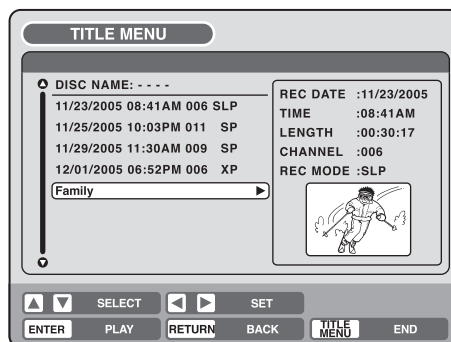


### NOTES:

- The title name can be a maximum of 64 characters. Long names will be shortened in the title menu.
- For using the keyboard screen, see "Changing a disc name" (page 74).

Editing the disc


# Editing a playlist

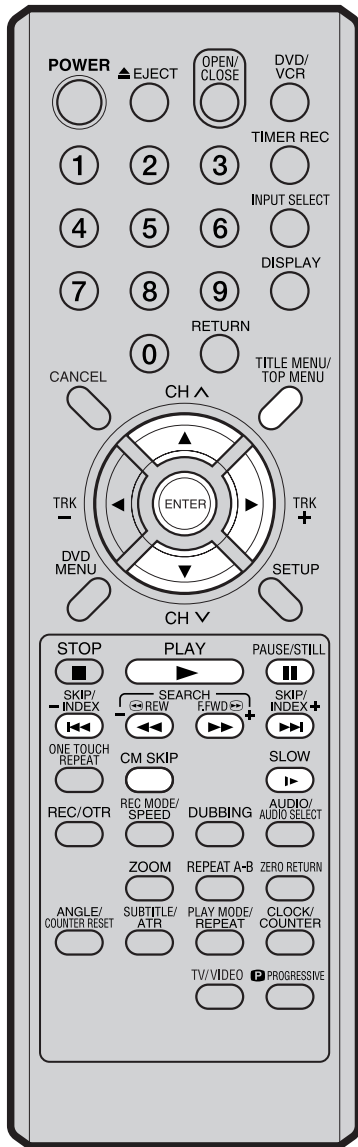


## Erasing a scene (Edit title)

You can erase an unnecessary scene from the created playlist. When you erase the scene from the playlist, the scene is not erased from the original title.

- 1 Press **TITLE MENU** to display the title menu.
- 2 Select the playlist where a scene you want to erase is included.
  - Press **▲** or **▼** to select the playlist.
  - Press **▶** to display the editing menu of the playlist.
  - Press **▲** or **▼** to select "EDIT TITLE".

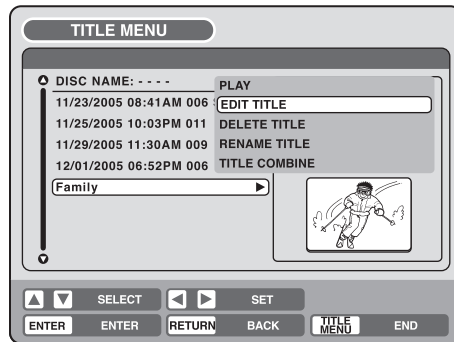

- 3 Press **ENTER**.  
The EDIT TITLE screen appears.

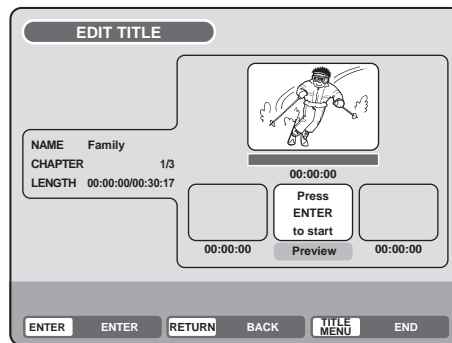

- 4 Press **ENTER** to playback the playlist on the EDIT TITLE screen.
  - Use each operation button (**F.FWD**, **REW**, **SKIP +**, **SKIP -**, **PLAY**, **PAUSE/STILL**, **SLOW**, **CM SKIP**) for the playback to search the starting point of the scene you want to erase.

