

ATTACHMENT N


Memorex®

OWNER'S MANUAL
MANUAL DE INSTRUCCIONES

**VIDEO CASSETTE RECORDER
VIDEOGRABADOR DE CASSETTE**

MVR4040A

HQ
HIGH QUALITY

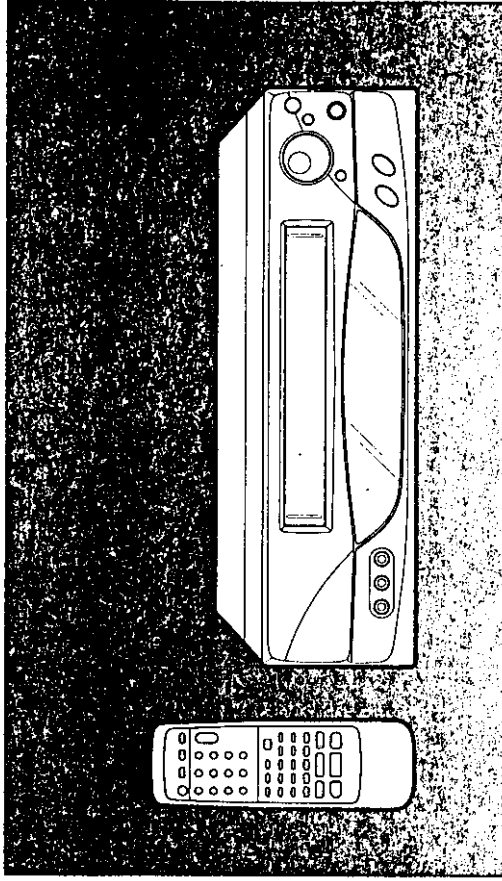

DRAFT

FCC ID:A7RM4C9D
MODEL NO.:MVR4040A
BRAND:MEMOREX



Before operating the unit, please read this manual thoroughly.
Antes de utilizar su aparato favor de leer las siguientes instrucciones.

ENGLISH



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

WARNING: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try correcting the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

IMPORTANT SAFEGUARDS

1. READ INSTRUCTIONS

All the safety and operating instructions should be read before the unit is operated.

2. RETAIN INSTRUCTIONS

The safety and operating instructions should be retained for future reference.

3. HEED WARNINGS

All warnings on the unit and in the operating instructions should be adhered to.

4. FOLLOW INSTRUCTIONS

All operating and use instructions should be followed.

5. CLEANING

Unplug this unit from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

6. ATTACHMENTS

Do not use attachments not recommended by the unit's manufacturer as they may cause hazards.

7. WATER AND MOISTURE

Do not use this unit near water. For example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.

8. ACCESSORIES

Do not place this unit on an unstable cart, stand, tripod, bracket, or table. The unit may fall, causing serious injury, and serious damage to the unit. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer.

8A. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

9. VENTILATION

Slots and openings in the cabinet and in the back or bottom are provided for ventilation and to ensure reliable operation of the unit and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the unit on a bed, sofa, rug, or other similar surface. This unit should never be placed near or over a radiator or heat source. This unit should not be placed in built-in installations such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

10. POWER SOURCES

This unit should be operated only from the type of power source indicated on the rating plate. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For units intended to operate from battery power, or other sources, refer to the operating instructions.

11. GROUNDING OR POLARIZATION

This unit is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug if your unit is equipped with a 3-wire grounding-type plug, a plug having a third (grounding) pin, this plug will only fit into a grounding-type power outlet. This too, is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet.

Do not defeat the safety purpose of the grounding-type plug.



PORTABLE CART WARNING
(symbol provided by RETAC)

S3126A

IMPORTANT SAFEGUARDS (CONTINUED)

12. POWER-CORD PROTECTION

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

13. LIGHTNING

To protect your unit from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the unit due to lightning and power line surges.

14. POWER LINES

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them might be fatal.

15. OVERLOADING

Do not overload wall outlets and extension cords, as this can result in a risk of fire or electric shock.

16. OBJECT AND LIQUID ENTRY

Do not push objects through any openings in this unit as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid into the unit.

17. OUTDOOR ANTENNA GROUNDING

If an outside antenna or cable system is connected to the unit, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

18. SERVICING

Do not attempt to service this unit yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

19. DAMAGE REQUIRING SERVICE

Unplug this unit from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the unit.
- If the unit has been exposed to rain or water.
- If the unit does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the unit to its normal operation.
- If the unit has been dropped or the cabinet has been damaged.
- When the unit exhibits a distinct change in performance, this indicates a need for service.

20. REPLACEMENT PARTS

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original parts. Unauthorized substitutions may result in i.e., electric shock or other hazards.

21. SAFETY CHECK

Upon completion of any service or repairs to this unit, ask the service technician to perform safety checks to determine that the unit is in proper operating condition.

22. WALL OR CEILING MOUNTING

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.


23. HEAT

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

24. NOTE TO CATV SYSTEM INSTALLER

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

EXAMPLE OF ANTENNA GROUNDING AS PER THE NATIONAL ELECTRICAL CODE

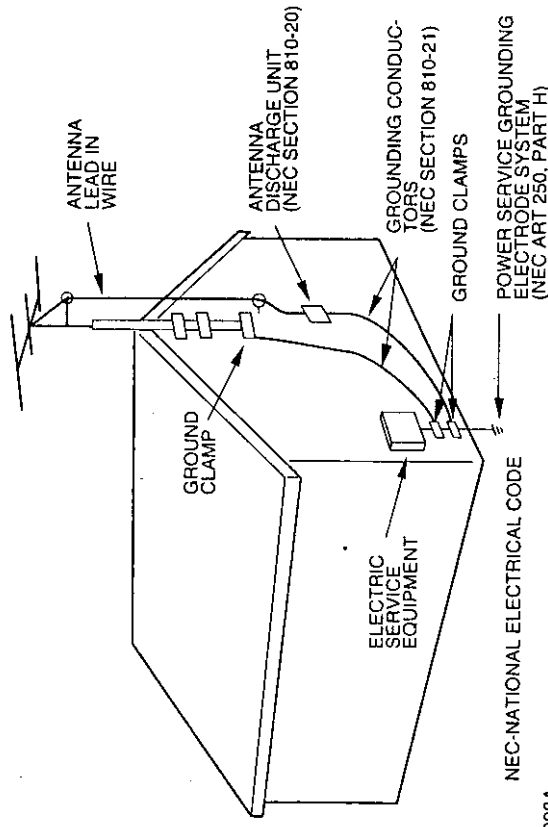

S2898A

FEATURES

High Quality Picture Technology - This video cassette recorder marked "HQ" incorporates VHS high quality technology. A built-in detail enhancer is used to boost the recorded signal and provide maximum picture quality in playback. It is compatible with other VHS video cassette recorders.

4 Video Heads - Provides optimal picture quality for special effects playback.

Hi-Fi Stereo Sound - With a frequency response of 20 to 20,000 Hz and a dynamic range of better than 85dB, this VCR provides a level of excellence that rivals compact discs.

Full Load Tape Transport - Permits rapid access between modes.

8-Program/1-Month Programmable Timer with Everyday/Every Week Capability - The built-in timer allows automatic absentee recording of up to 8 TV programs within 1 month. It is also possible to record a program which is broadcast at the same time everyday or every week.

On-Screen Display and Programming - When you select a channel or make other changes, the TV will show an indicator on the screen for a few seconds. Clock settings, timer setting and other set-up operations can be carried out using the on-screen display menu system.

Digital Auto Tracking - Automatically adjusts tracking during playback for the best possible picture.

181 Channel Tuner - Receives standard VHF and UHF broadcast channels and up to 113 cable channels.

One-Touch Timer Recording (OTR) - Simply by pressing the REC/OTR button, the VCR can be programmed for up to 5 hours of recording with an immediate start.

Automatic Power On - When loading a cassette tape, this VCR will automatically turn on.

Automatic Playback - When loading a cassette tape without the erase prevention tab, this VCR will automatically turn on and play back the cassette tape at the correct speed.

Automatic Rewind-Stop-Eject-Power Off - When a tape reaches its end during playback and recording, it will automatically stop, rewind, stop, eject the tape and the VCR will turn off.

Automatic Repeat Play System - When the AUTO REPEAT option is turned on, this VCR will automatically play back the same cassette tape repeatedly.

On-Screen 3 Language Display - You can select one of 3 languages; English, Spanish or French, for on-screen programming.

Variable Speed Slow Motion - This VCR provides Variable speed slow motion which offers steady, noise free playback at 1/5-1/30 normal speed.

Frame by Frame Advance - Press the SLOW button during still playback to advance the tape one frame at a time.

Skip Search - When the SKIP SEARCH button on the remote control is pressed during playback, the VCR will automatically search forward through approximately 30 seconds of tape with each press of the SKIP SEARCH button, and then return to normal playback.

Real Time Tape Counter with Zero Return - The counter displays real tape time and the zero return function can be used to return the tape to a preselected position (00:00:00) while the counter can be used to locate programs.

TV Monitor - When the TV MONI (Monitor) button on the remote control is pressed during playback, the TV channel selected on the VCR can be viewed.

Channel Skip - An unwanted channel can be deleted when using the CHANNEL ▲ or ▼ button.

Fluorescent Multi-Function Display - Selected functions are immediately indicated on the display.

2 Speed Picture Search - 3 or 5 times normal speed in SP mode (7X or 9X in LP and 9X or 15X in SLP).

3 Speed Record/Playback - Records and plays three tape speeds (SP, LP, SLP).

Stereo/SAP Reception - This VCR is designed to receive stereo and separate audio program (SAP) broadcasts where available.


Auto Head Cleaning System - Cleans the video heads automatically when a cassette tape is loaded and ejected.

Video Index Search System - Locates the beginning of any recording made on the VCR.

Front & Rear Audio/Video In Jacks - A VCR or other video device may be hooked up for dubbing.

TABLE OF CONTENTS

We recommend that you carefully read the descriptions and operating procedures contained in this Owner's Manual prior to operating your new VCR.

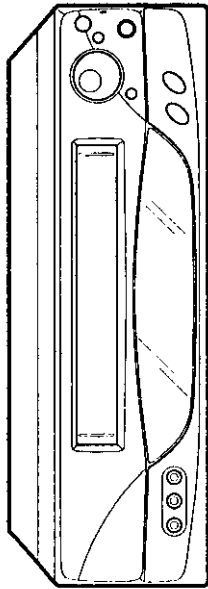

ENGLISH

PRECAUTIONS

PRECAUTIONS	8
LOCATION OF CONTROLS	10
REMOTE CONTROL	12
BASIC CONNECTIONS	14
CATV (CABLE TV) CONNECTIONS	18
AUDIO/VIDEO CONNECTIONS	22
SETTING THE VIDEO CHANNEL	23
ON-SCREEN LANGUAGE SELECTION	24
SETTING THE CLOCK	25
SETTING THE CHANNELS	26
NOISE ELIMINATION (BLUE SCREEN)	29

PLAYBACK

LOADING AND UNLOADING VIDEO CASSETTE TAPES	30
PLAYBACK	31
SPECIAL PLAYBACK	33

RECORDING

RECORDING A TV PROGRAM	36
ONE-TOUCH TIMER RECORDING (OTR)	39
SETTING THE TIMER RECORDING	40

ADDITIONAL INFORMATION

ON-SCREEN FUNCTION DISPLAY	43
USING ZERO RETURN	44
VIDEO INDEX SEARCH SYSTEM (INDEX)	45
STEREO RECORDING AND PLAYBACK	46
SEPARATE AUDIO PROGRAM (SAP)	47
DUPLICATING A VIDEO TAPE	48
VIDEO HEAD CLEANING	49
VIDEO GLOSSARY	50
BEFORE REQUESTING SERVICE	52
SPECIFICATIONS	54

PRECAUTIONS

MOISTURE CONDENSATION

DO NOT OPERATE THIS VCR FOR AT LEAST TWO OR THREE HOURS WHEN MOISTURE IN THE AIR CONDENSES ON THE VCR.

■ WHAT IS MOISTURE CONDENSATION?

When a cold liquid is poured into a glass, for example, water vapor in the air will condense on the surface of the glass. This is called moisture condensation.

■ MOISTURE WILL CONDENSE ON THE UNIT IN THE FOLLOWING CASES:


- When you move this VCR from a cold to a warm place.
- After heating a cold room or under extremely humid conditions.

■ WHEN YOU EXPERIENCE THE ABOVE CONDITIONS,


Plug the power cord into an AC outlet, set the power switch to ON and leave the unit at room temperature until moisture condensation disappears.

Depending on the surrounding conditions, this may take two or three hours.


Head Drum

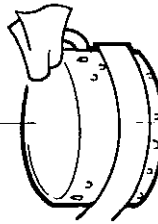


Video Tape

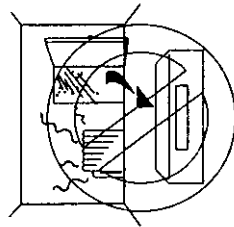


If you cause a static discharge when touching the VCR, and the VCR fails to function, simply unplug the unit from the wall outlet, wait a few minutes and plug it back in. The VCR should return to normal operation.

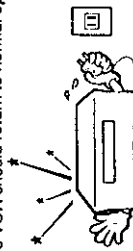

Avoid extreme heat.

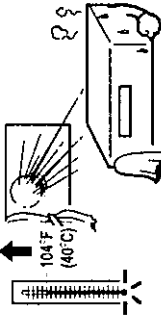


Avoid extreme cold.

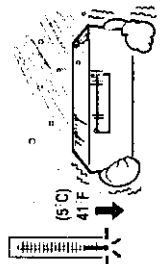


Do not place the VCR on or near appliances which may cause electromagnetic interference, e.g. TV, speakers, etc. Doing so may cause erratic operation of the VCR including picture and/or sound distortion or noise.



Avoid extreme moisture and dust.

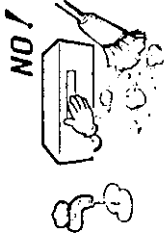


Do not insert fingers or any other objects into the cassette loading slot. Do not spray cleaner or wax directly on the VCR or use forced air to remove dust.

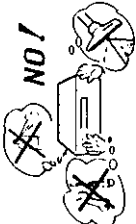


Keep the VCR away from flower vases, sinks, etc. if liquids should be spilled into the VCR, serious damage will result. If you spill any liquids into the VCR, unplug the AC power cord immediately and consult qualified service personnel before attempting to use the VCR again.




When you leave your home for a long time, unplug the AC power cord.

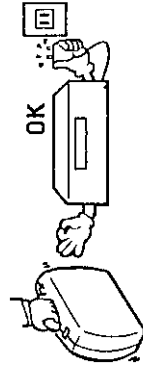


The ventilation holes prevent overheating. Do not block or cover these holes. Especially avoid covering the holes with soft materials such as cloth or paper.

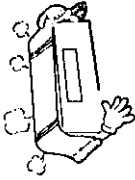

Avoid places subject to strong vibration. Use in a horizontal (flat) position only.

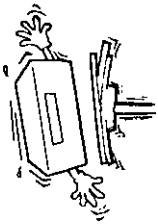

When you finish operating the VCR, always unload the cassette and turn off the power.

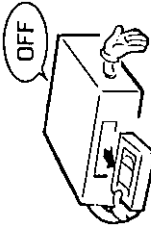


To protect the VCR from a lightning storm, unplug the AC power cord from the wall outlet and disconnect the antenna.




POWER SOURCE

If the polarized AC cord does not fit into a non-polarized AC outlet, do not attempt to file or cut the blade. It is the user's responsibility to have an electrician replace the obsolete outlet.

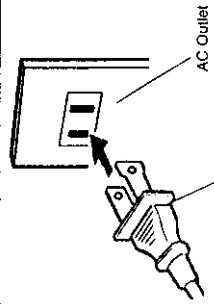

LOCATION OF CONTROLS


FRONT

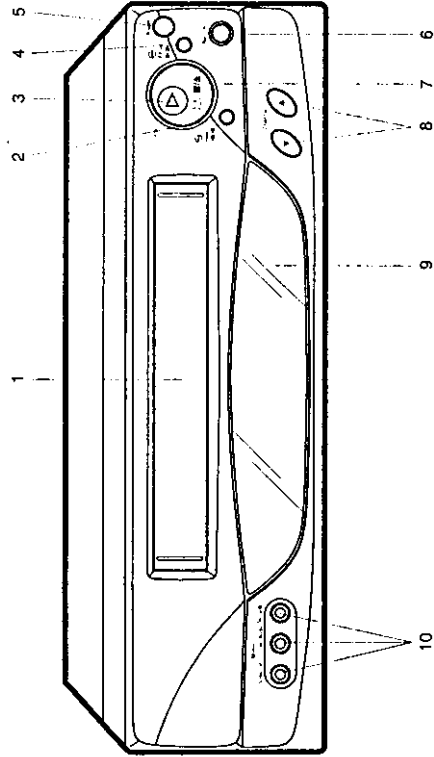

DESCRIPTION OF CONTROLS


- Cassette Loading Slot** - To insert or remove a video tape.
- Rev button** - In the STOP mode, this button rapidly winds the tape backwards. In the PLAY mode, this button activates Reverse Search.
- Play button** - Press to play a prerecorded tape.
- F. Fwd button** - In the STOP mode, this button rapidly winds the tape forward. In the PLAY mode, this button activates Forward Search.
- Power button** - Turns the VCR power on and off.
- Rec/Clr button** - Press once to start normal recording. Additional presses activate One Touch Recording.
- Stop/Eject button** - Press once to stop the tape in any mode. Press again (on the VCR) to eject the tape.
- Channel ▲ / ▼ buttons** - Used to select a channel for viewing or recording.
- Remote Sensor** - Signals from the Remote Control are received here.
- Audio (L/R)/Video In Jacks** - Audio and video signal cables from an external source can be connected here.

FLUORESCENT DISPLAY

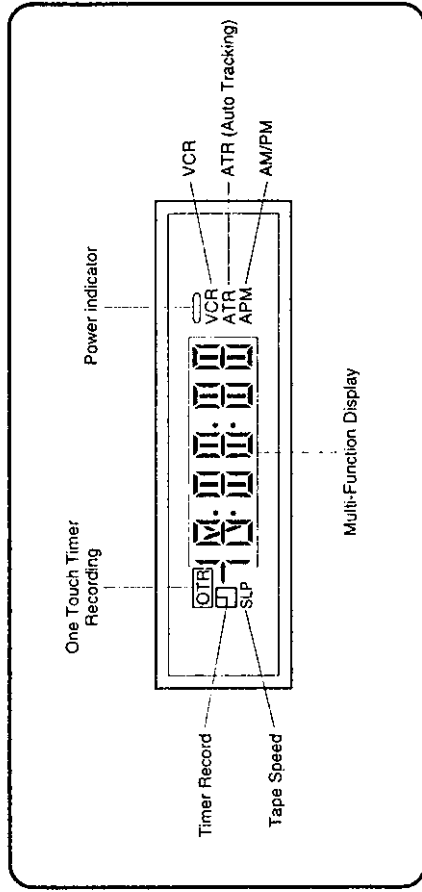

LOCATION OF CONNECTORS


REAR

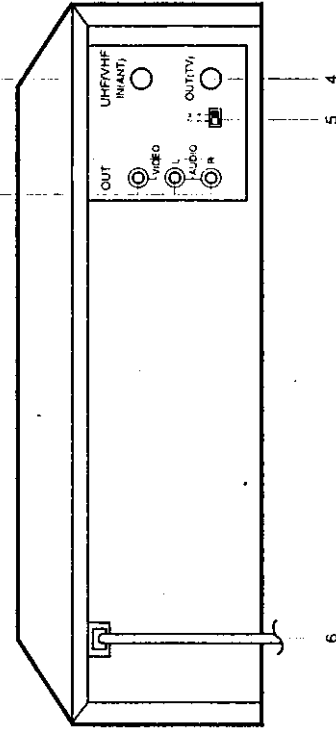

DESCRIPTION OF CONTROLS

- AUDIO (L/R)/VIDEO OUT Jacks** - Used to output audio and video signals to a TV, amplifier or VCR.
- VHF/UHF OUT (TV) Jack** - Used to output VHF/UHF or CATV signals to a TV.
- 3/4 Channel Selector Switch** - Selects the channel through which the VCR outputs its signal to a TV.
- AC Power Cord** - Connect to a 120V 60Hz outlet.

REMOTE CONTROL

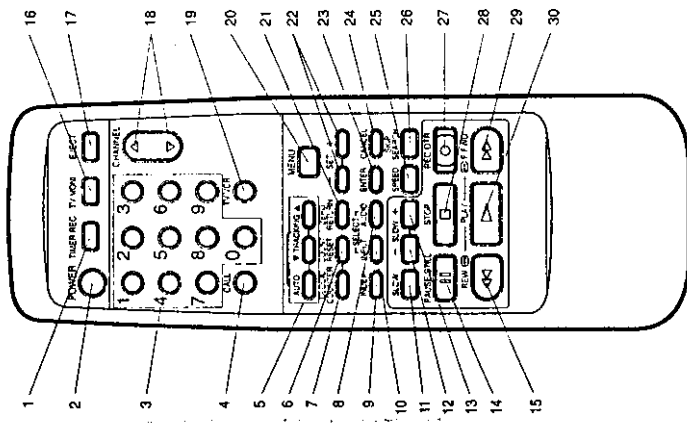

9. **INDEX button** - Used to search for the INDEX mark.
10. **INPUT SELECT button** - Switches the program for viewing between the VCR and external input sources.
11. **SLOW button** - Press to play back a tape in slow motion or to advance the tape one frame at a time during still playback.
12. **SLOW - button** - Press to speed down slow motion playback until it is 1/30 of normal speed playback.
13. **SLOW + button** - Press to speed up slow motion playback until it is 1/5 of normal speed playback.
14. **PAUSE/STILL button** - During recording, this button temporarily stops the tape. The "II" will appear on the screen. During playback, it stops the tape and displays a still image on the TV screen.
15. **REW button** - In the STOP mode, this button rapidly winds the tape backwards. In the PLAY mode, this button activates Reverse Search.
16. **TV MONI. (Monitor) button** - Used to temporarily view a TV channel selected on the VCR while in the playback mode.
17. **EJECT button** - Press to eject the tape.
18. **CHANNEL ▲ / ▼ buttons** - Used to select a channel for viewing or recording.
19. **TV/VCR selector button** - Switches between TV and VCR.
20. **MENU button** - Press to display the on-screen menu function.
21. **ZERO RETURN button** - Used to stop the tape when the counter reaches 00:00:00.
22. **SET +/- buttons** - Used to set the clock, timer recording, auto repeat, language and noise mute.
23. **ENTER button** - Used to enter information for timer recording, auto repeat, language, clock setting and sound mute.
24. **CANCEL button** - Used to clear the selected timer recording program.
25. **SPEED (SP/LP/SLP) selector button** - Sets the tape speed for recording.
26. **SKIP SEARCH button** - Press in the playback mode to search forward through approximately 30 seconds of tape.
27. **REC/OVR button** - Press once to start normal recording. Additional presses activate One-Touch Timer Recording.
28. **STOP button** - Press once to stop the tape.
29. **F. FWD button** - In the STOP mode, this button rapidly winds the tape forward. In the PLAY mode, this button activates Forward Search.
30. **PLAY button** - Press to play a prerecorded tape.

DESCRIPTION OF BUTTONS

1. **TIMER REC button** - Used to set the VCR to start recording at a preset time.
2. **POWER button** - Turns the VCR power on and off.
3. **Direct Channel Selection buttons (0-9)** - Allow direct access to any channel.
4. **CALL button** - Displays the present time/day of the week, channel, counter, speed selection and VCR mode on the TV screen.
5. **AUTO/Manual TRACKING ▲ / ▼ buttons** - Allow automatic or manual adjustment of tracking to minimize picture noise during playback.
6. **COUNT RESET button** - Resets the Real Time Counter to 00:00:00.
7. **CLOCK/COUNTER selector button** - Switches between the clock and the real time tape counter.
8. **AUDIO SELECT button** - Switches sound between mono and stereo, and SAP when receiving broadcasts in stereo or SAP.


BATTERY INSTALLATION

1. Open the battery compartment cover.
2. Install two "AAA" (penlight size) batteries.
3. Replace the cover.

BATTERY CAUTIONS

- Follow these precautions when using batteries in this device:
1. Use only the size and type of batteries specified.
 2. Be sure to follow the correct polarity when installing the batteries in the battery compartment. Reversed batteries may cause damage to the device.
 3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
 4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
 5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)

EFFECTIVE DISTANCE OF THE REMOTE CONTROL

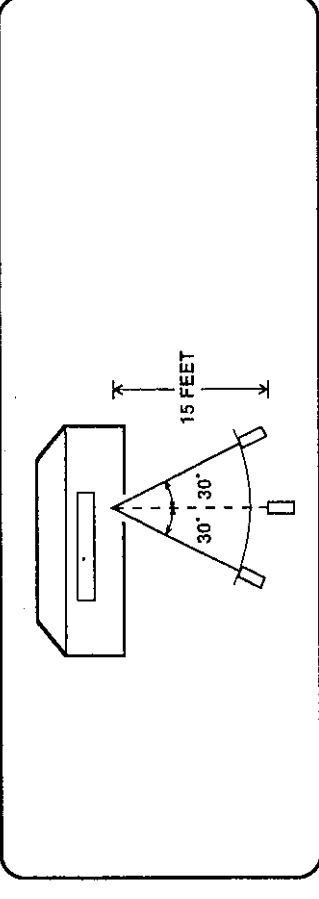

- NOTES:**
- When direct sunlight, an incandescent lamp, fluorescent lamp or any other strong light shines on the Remote Sensor, the remote operation may be unstable.
 - When there is an obstacle between the VCR and the remote control, the remote control may not operate.


BASIC CONNECTIONS

If you are using an antenna system, follow the instructions on pages 14-17. If you are a cable (CATV) subscriber, skip ahead to page 18 for the proper connections.

ANTENNA TO VCR CONNECTION



The VCR must be connected "between" the antenna and the TV. First, disconnect the antenna from the TV and connect it to the VCR. Then connect the VCR to the TV. Below are 3 common methods of connecting an antenna system to a VCR. Find the type of antenna system you are using and follow the connection diagram. After you have connected the antenna to the VCR, follow the instructions on pages 16-17 to connect the VCR to the TV.

1 Combination VHF/UHF Antenna with 75 ohm Coaxial Cable

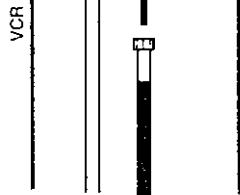



NOTE: If a VHF or UHF antenna is used, set the TV/CATV menu option to the "TV" mode.

2 Combination VHF/UHF Antenna with 300 ohm Twin Lead (Flat) Wire

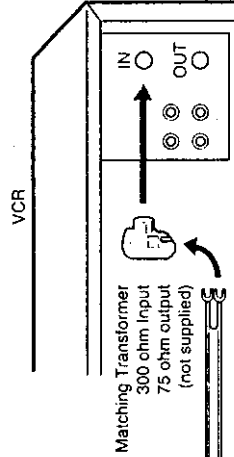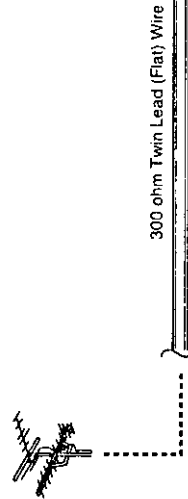

NOTE: If a VHF or UHF antenna is used, set the TV/CATV menu option to the "TV" mode.

3 Separate VHF and UHF Antennas

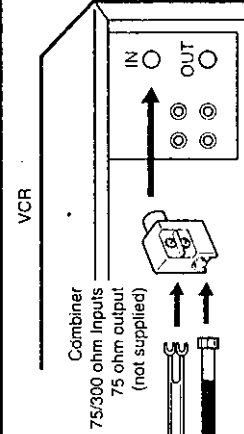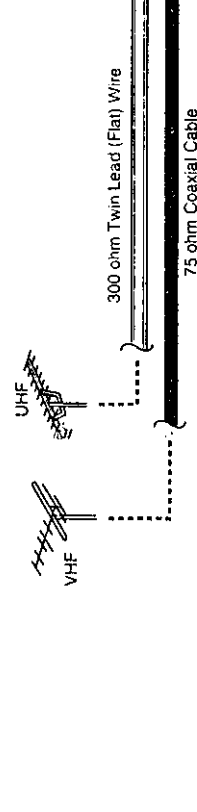

NOTE: If a VHF or UHF antenna is used, set the TV/CATV menu option to the "TV" mode.

NOTE: If both VHF and UHF antennas have 300 ohm twin lead (flat) wires, use a combiner having two 300 ohm inputs and one 75 ohm output.

NOTES: • A clear picture will not be obtained by the VCR unless the antenna signal is good. Connect the antenna to the VCR properly.


- For better quality recording, an indoor antenna or a telescopic antenna is not recommended. The use of an outdoor type antenna is required.
- If you are not sure about the connection, please refer to qualified service personnel.

BASIC CONNECTIONS

(CONTINUED)

VCR TO TV CONNECTION

After you have connected the antenna to the VCR (see pages 14 & 15), you must connect the VCR to the TV. Below are 3 common methods of connecting your VCR to a TV. Find the type of TV you are using and follow the connection diagram.

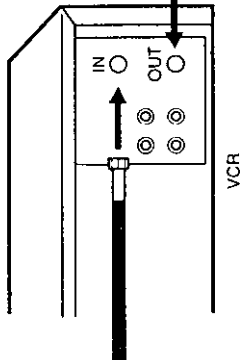


1

75 ohm Coaxial Cable (supplied)

NOTE: If a VHF or UHF antenna is used, set the TV/CATV menu option to the "TV" mode.

TV with single 75 ohm VHF/UHF antenna input

This VCR has a single 75 ohm output for connection to a TV. If your TV has separate VHF and UHF antenna inputs (numbers 2 and 3 below), use a splitter to connect the VCR to the TV for VHF and UHF reception.

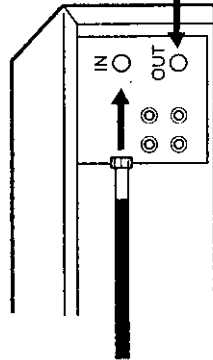


2

Splitter
75 ohm Input
75/300 ohm outputs
(not supplied)

75 ohm Coaxial Cable (supplied)

NOTE: If a VHF or UHF antenna is used, set the TV/CATV menu option to the "TV" mode.

TV with 300 ohm UHF and 75 ohm VHF antenna inputs

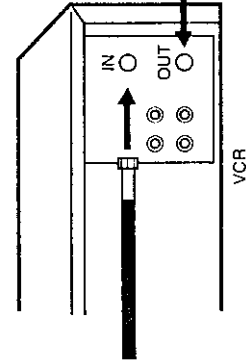

3

Splitter
75 ohm Input
300 ohm outputs
(not supplied)

75 ohm Coaxial Cable (supplied)

NOTE: If a VHF or UHF antenna is used, set the TV/CATV menu option to the "TV" mode.


TV with 300 ohm UHF and 300 ohm VHF antenna inputs

CATV (CABLE TV) CONNECTIONS

Many cable companies offer services permitting reception of extra channels including pay or subscription channels. This VCR has an extended tuning range and can be tuned to most cable channels without using a cable company supplied converter box, except for those channels which are intentionally scrambled. If you subscribe to a special channel which is scrambled, you must have a descrambler box for proper reception.

This VCR cannot receive scrambled programs since it does not contain a descrambler. In order to receive scrambled programs, your existing descrambler must be used. Descrambler boxes are available from cable companies. Consult your local cable company for more information concerning connection to their descrambler equipment. There are many ways to connect your VCR to a cable system. Below are six common methods of connection.


1 IMPORTANT: Make sure the TV/CATV menu option is set to the "CATV" mode.

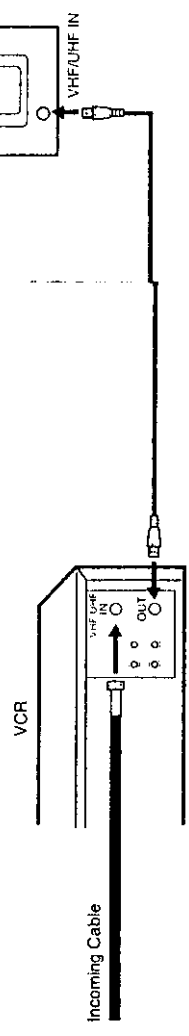

For basic cable service, no premium (scrambled) channels. **ALLOWS:**

- Recording of nonscrambled channels.
- Use of the programmable timer.
- Recording of one channel while watching another.

2 IMPORTANT: Make sure the TV/CATV menu option is set to the "CATV" mode.

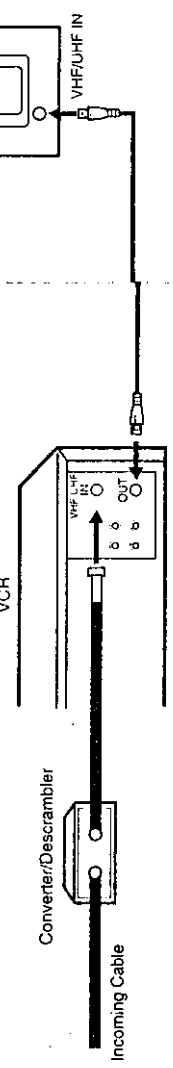

ALLOWS:


- Recording of channels through the converter box (scrambled and unscrambled).
- Using the programmable timer to record only the channel selected at the converter box.

PREVENTS:

- Recording one channel while watching another.
- Using the VCR tuner to select channels.

NOTE:
To record from converter/descrambler, VCR tuner must be tuned to the converter output channel, usually channel 3 or 4.

3 IMPORTANT: Make sure the TV/CATV menu option is set to the "CATV" mode.

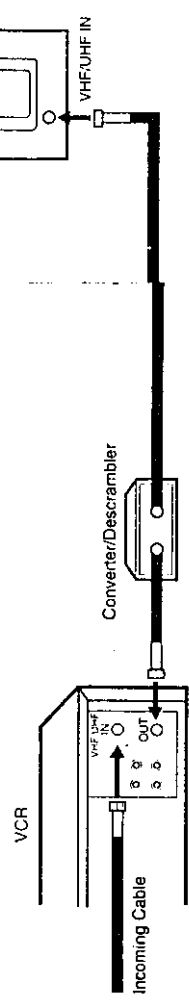

ALLOWS:

- Recording of unscrambled channels
- Using the programmable timer.
- Recording an unscrambled channel while watching any channel selected at the converter box.

PREVENTS:

- Recording scrambled channels.


NOTE:
If you are playing a tape or using the tuner built into the VCR, the converter must be set to the video channel output of the VCR (either 3 or 4).

NOTE: Whenever a Converter/Descrambler box is placed before the VCR, you must tune the VCR to the output of the Converter/Descrambler box, usually channel 3 or 4.

CATV (CABLE TV) CONNECTIONS (CONTINUED)

1


IMPORTANT: Make sure the TV/CATV menu option is set to the "CATV" mode.

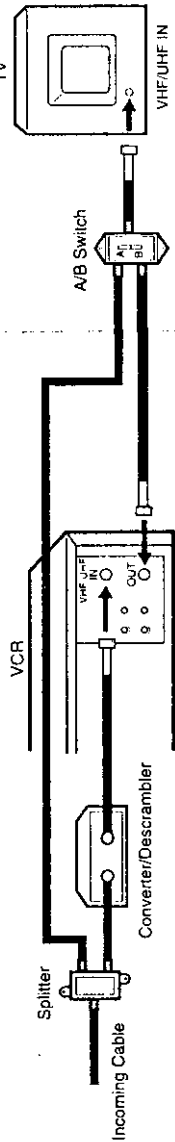

- ALLOWS:**
- Recording of all channels through the converter box.
 - Recording of one channel while watching another.
 - Using the programmable timer to record only the channel selected at the converter box.
- PREVENTS:**
- Watching scrambled channels while recording another channel.
 - Using the VCR tuner to select channels.
- NOTE:**
To record from converter/descrambler, VCR tuner must be tuned to the converter output channel, usually channel 3 or 4.

2


IMPORTANT: Make sure the TV/CATV menu option is set to the "CATV" mode.

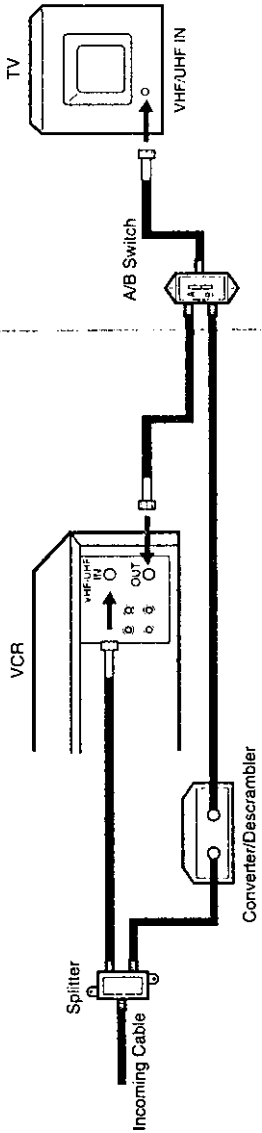

- ALLOWS:**
- Recording of nonscrambled channels.
 - Recording of one channel while watching another.
 - Watching premium channels through the converter while recording nonscrambled channels.
 - Using the programmable timer.
- PREVENTS:**
- Recording scrambled channels.

3

IMPORTANT: Make sure the TV/CATV menu option is set to the "CATV" mode.

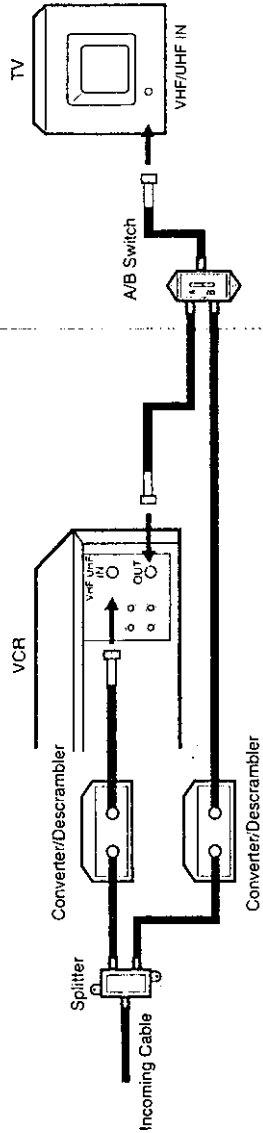


- ALLOWS:**
- Recording of all channels through the converter box.
 - Recording a scrambled or unscrambled channel while watching another (scrambled or unscrambled) channel.
 - Using the programmable timer to record only the channel selected at the converter box.
- PREVENTS:**
- Using the VCR tuner to select channels.
- NOTE:**
To record from converter/descrambler, VCR tuner must be tuned to the converter output channel, usually channel 3 or 4.

NOTE: Whenever a Converter/Descrambler box is placed before the VCR, you must tune the VCR to the output of the Converter/Descrambler box, usually channel 3 or 4.

AUDIO/VIDEO CONNECTIONS


If your TV has AUDIO IN and VIDEO IN jacks, you can connect your VCR to them to receive a higher quality picture and sound. If you have a stereo, you can connect a stereo amplifier to enjoy powerful sound.

AUDIO/VIDEO CONNECTION

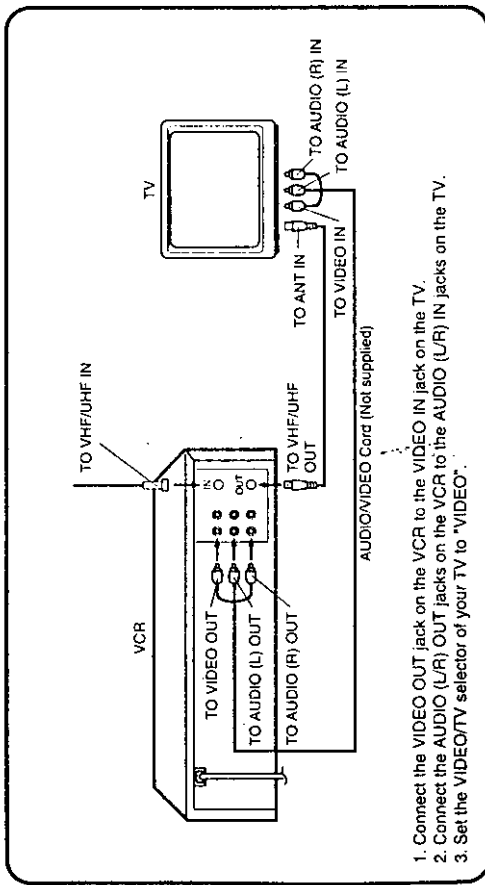

STEREO AMPLIFIER CONNECTIONS



When you connect your VCR to a Stereo Component System, you can view the picture from the VCR while enjoying powerful sound from your audio system.

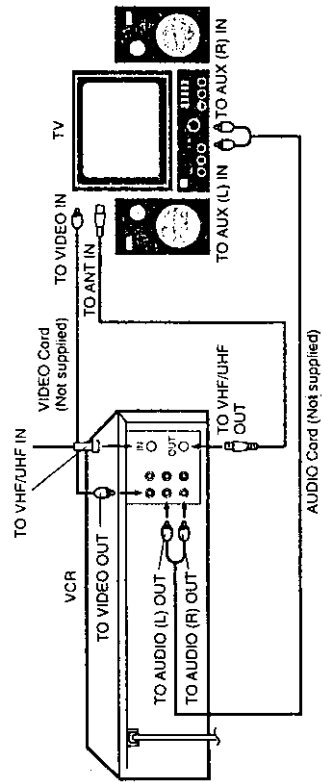

SETTING THE VIDEO CHANNEL

To view playback of a recorded tape, or to watch a program selected by the VCR's channel selector, the TV must be set to channel 3 or 4 (video channel).

When a TV is connected with an antenna cable only.

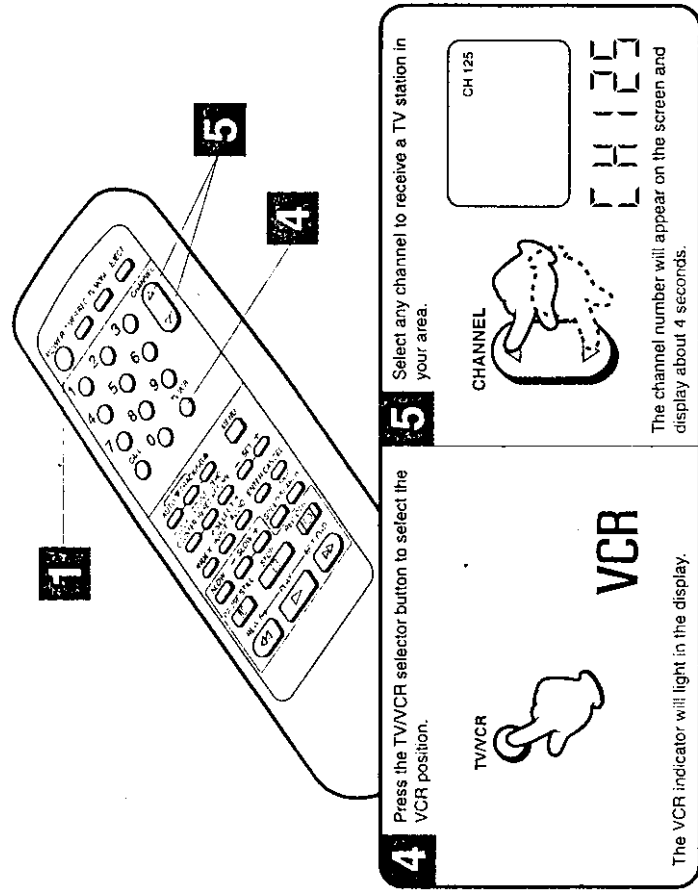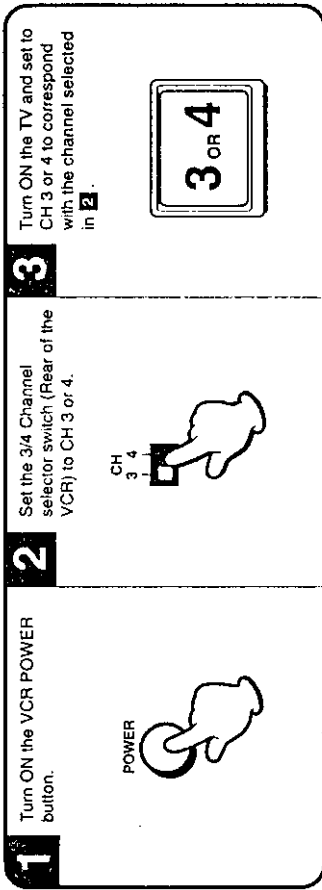


 

For a push-button TV tuner

if CH 3 or 4 corresponding to the video channel cannot be tuned on your TV, proceed as follows: set the VCR 3/4 channel selector and the TV to CH 3 or 4, play back a pre-recorded tape and tune the TV to receive a sharp color picture from the video cassette recorder. Refer to your TV owner's manual for details.

ON-SCREEN LANGUAGE SELECTION



This VCR can display on the TV screen in the English, Spanish or French language.

1 Press the MENU button. Press the SET + or - button to select the SYSTEM SET UP option, then press the ENTER button.

SYSTEM SET UP
 1. CLOCK SET
 2. LANGUAGE
 3. LANGUAGE
 4. LANGUAGE
 5. LANGUAGE
 6. LANGUAGE
 7. LANGUAGE
 8. LANGUAGE
 9. LANGUAGE
 0. LANGUAGE
 -- ENTER MENU --

2 Press the SET + or - button to select the LANGUAGE option, then press the ENTER button.

 



SYSTEM SET UP
 1. CLOCK SET
 2. LANGUAGE
 3. LANGUAGE
 4. LANGUAGE
 5. LANGUAGE
 6. LANGUAGE
 7. LANGUAGE
 8. LANGUAGE
 9. LANGUAGE
 0. LANGUAGE
 -- ENTER MENU --



CHECK BEFORE YOU BEGIN

- Turn ON the TV and set to the video channel 3 or 4.
- Turn ON the VCR POWER button.
- Press the TV/VCR selector button to select the VCR mode.

When a TV is connected with an audio/video cable, turn the TV and this VCR on and select the video input mode on the TV.




3 Press the SET + or - button to select the desired language: English, Spanish or French.

LANGUAGE SELECTION
 1. ENGLISH
 2. SPANISH
 3. FRENCH
 4. LANGUAGE
 5. LANGUAGE
 6. LANGUAGE
 7. LANGUAGE
 8. LANGUAGE
 9. LANGUAGE
 0. LANGUAGE
 -- ENTER MENU --

4 Press the MENU button 3 times.



CHECK BEFORE YOU BEGIN

- Turn ON the TV and set to the video channel 3 or 4.
- Turn ON the VCR POWER button.
- Press the TV/VCR selector button to select the VCR mode.


When a TV is connected with an audio/video cable, turn the TV and this VCR on and select the video input mode on the TV.

NOTE: If you do not set the clock, the SYSTEM SET UP menu automatically appears when you press the MENU button.



SETTING THE CLOCK

EXAMPLE: Setting the clock to *8:30 AM* March, 23(TUE), 1999.

1 Press the MENU button.



2 Press the SET + or - button to select the CLOCK SET option, then press the ENTER button.





SYSTEM SET UP
 1. CLOCK SET
 2. LANGUAGE
 3. LANGUAGE
 4. LANGUAGE
 5. LANGUAGE
 6. LANGUAGE
 7. LANGUAGE
 8. LANGUAGE
 9. LANGUAGE
 0. LANGUAGE
 -- ENTER MENU --




CHECK BEFORE YOU BEGIN

- Turn ON the TV and set to the video channel 3 or 4.
- Turn ON the VCR POWER button.
- Press the TV/VCR selector button to select the VCR mode.

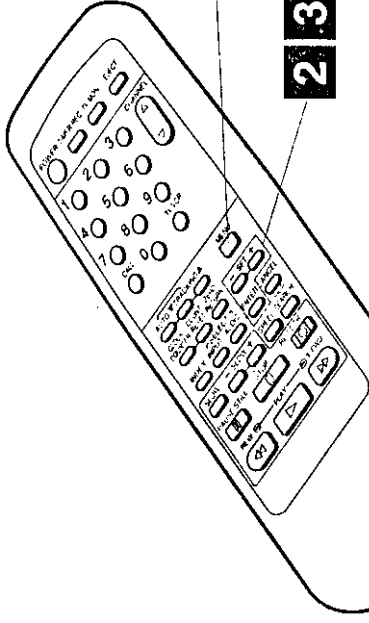When a TV is connected with an audio/video cable, turn the TV and this VCR on, and select the video input mode on the TV.





 
3 Press the SET + or - button to set the month, then press the ENTER button.

MONTH
 DAY
 YEAR
 TIME
 -- ENTER MENU --

4 Set the day, year and time as in Step 3.

- The day of the week will automatically appear when you set the year.
- Press and hold down the button to increase/decrease the minute by 10.
- Auto date and time start functioning when you finish setting.

MONTH
 DAY
 YEAR
 TIME
 -- ENTER MENU --

CHECK BEFORE YOU BEGIN

- Turn ON the TV and set to the video channel 3 or 4.
- Turn ON the VCR POWER button.
- Press the TV/VCR selector button to select the VCR mode.

When a TV is connected with an audio/video cable, turn the TV and this VCR on, and select the video input mode on the TV.

NOTES: • After a power failure or disconnection of the power, the timer settings will be lost. In this case, reset the present time.
• Press the CANCEL button to move cursor backward for correction.
• If you want to correct time or date while the clock is functioning, press the MENU button, then press

SETTING THE CHANNELS

This VCR is equipped with a channel memory feature which allows channels to skip up or down to the next channel set into memory, skipping over unwanted channels. Before selecting channels, they must be programmed into the VCR's memory. In addition to normal VHF and UHF channels, this VCR can receive up to 113 Cable TV channels. To use this VCR with an antenna, set the TV/CATV menu option to the TV mode. When shipped from the factory, this menu option is in the CATV mode.

TV/CATV SELECTION

1 Press the MENU button.

2 Press the SET + or - button to select the CH SET option, then press the ENTER button.

MENU

SET + ENTER

MENU
V NUMBER REC SET
A CHANNEL SET UP
B SYSTEM SET UP
F NO NOISE BACKGROUND
P ON OFF
--ENTER MENU--

The VCR can receive a maximum of 181 channels by presetting the channels into memory.

AUTOMATIC MEMORY TUNING

1 Press the MENU button.
Press the SET + or - button to select the CH SET UP option, then press the ENTER button.

2 Turn ON the TV and set to the video channel 3 or 4.
Turn ON the VCR POWER button.
Press the TV/VCR selector button to select the VCR mode.

When a TV is connected with an audio/video cable, turn the TV and this VCR on, and select the video input mode on the TV.

MENU

SET + ENTER

MENU
V NUMBER REC SET
A CHANNEL SET UP
B SYSTEM SET UP
F NO NOISE BACKGROUND
P ON OFF
--ENTER MENU--

3 Press the SET + or - button to select the TV or CATV mode.
The arrow indicates the selected mode.

4 Press the ENTER button to select the TV or CATV mode.

5 Press the MENU button twice to return to normal TV viewing.

SET + ENTER

ENTER

MENU

TV - VHF/UHF channels
CATV - Cable TV channels

CH SET UP
V TV CATV
A TO MEMORY
F ADD/DELETE
--ENTER MENU--

1 Press the SET + or - button to select the AUTO CH MEMORY mode, then press the ENTER button.

2 Press the SET + or - button to select the TV or CATV mode, then press the ENTER button.

3 The auto tuning will start. The channel display will count up and when finished, the screen returns to normal.

SET + ENTER

ENTER

MENU

CH 001

SETTING THE CHANNELS


(CONTINUED)

NOISE ELIMINATION (BLUE SCREEN)


When you don't want to receive a weak signal broadcast, the Blue back screen can be obtained by selecting the NO NOISE BACKGROUND "ON". When the unit is shipped from the factory, the NO NOISE BACKGROUND is set to the "ON".

TO ADD/DELETE CHANNELS

1 Press the MENU button. Press the SET + or - button to select the CH SET UP option, then press the ENTER button.

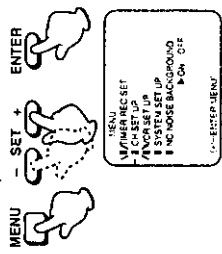

2 Press the SET + or - button to select the CH SET UP option, then press the ENTER button.

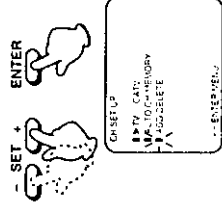

3 Select the desired channels to be memorized or deleted using the SET + or - button.




CHECK BEFORE YOU BEGIN


- Turn ON the TV and set to the video channel 3 or 4.
- Turn ON the VCR POWER button.
- Press the TV/VCR selector button to select the VCR mode.

When a TV is connected with an audio/video cable, turn the TV and this VCR on and select the video input mode on the TV.


1 Press the MENU button, then press the SET + or - button to select the NO NOISE BACKGROUND option.

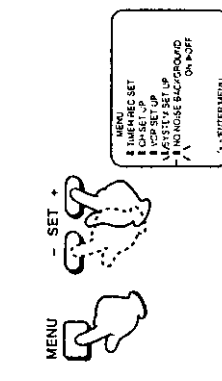


4 Press the ENTER button if you wish to DELETE the channel from memory. Press the ENTER button if you wish to ADD the unmemorized channel. Repeat Steps 3 and 4 for each channel to be added or deleted.

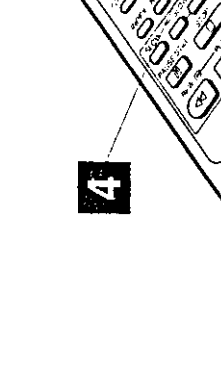


5 Press the MENU button three times after adding or deleting all of the desired channels, to return to normal TV viewing.

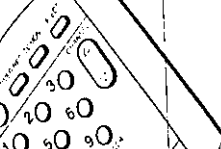

2 Press the ENTER button to select the ON position.

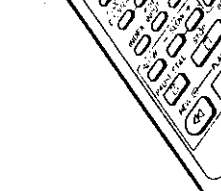

3 Press the MENU button again.

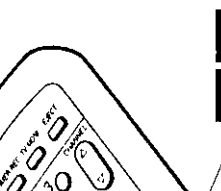

LOADING AND UNLOADING VIDEO CASSETTE TAPES

PLAYBACK


Use only video cassette tapes marked VHS.

To play a prerecorded cassette tape


LOADING

Push the center of the tape until it is automatically retracted.
AUTOMATIC POWER ON
 The VCR will turn on automatically and the POWER indicator will light.
AUTOMATIC PLAY

When loading a cassette tape without the erase prevention tab, playback will start immediately.
 Insert the cassette with its labeled side facing you.
 An inverted cassette cannot be inserted.

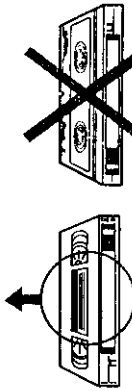

The clock display will change to the counter display.

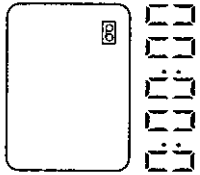


TO START PLAYBACK



CHECK BEFORE YOU BEGIN

Turn ON the TV and set to the video channel 3 or 4.
 When a TV is connected with an audio/video cable, turn the TV and this VCR on and select the video input mode on the TV.

Load a prerecorded tape. (When loading a cassette tape without the erase prevention tab, playback will start automatically.)

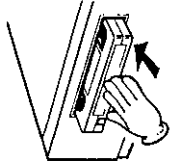

The clock display will change in the counter display.

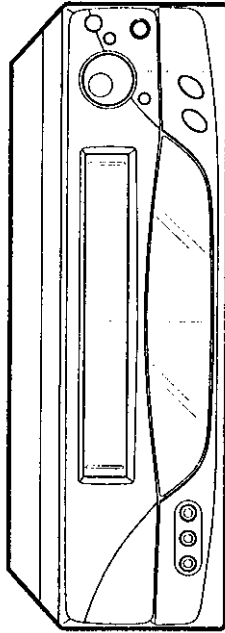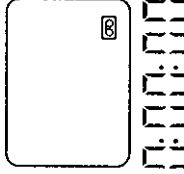


2

1

UNLOADING

1 To unload a cassette, press the EJECT button on the remote control, or press the STOP/EJECT button on the VCR twice. The first press will stop the tape in any mode. The second press will eject the tape. The * & * will appear on the screen. The EJECT indicator will light in the display.

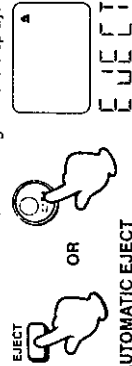


AUTOMATIC EJECT
 If the VCR automatically rewinds the tape to the beginning (AUTO REWIND FEATURE), the tape will be ejected automatically (See the NOTE on page 37).

The counter display will change to the clock display.





2 Pull the cassette out.

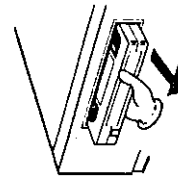

TO STOP PLAYBACK

 Press the STOP button once. The tape will stop but remain fully loaded and ready to play.

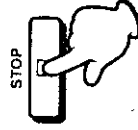

2 Press the PLAY button. Playback will start.



The * & * will appear on the screen about 4 seconds. The PLAY indicator will light in the display about 4 seconds.

The * & * will appear on the screen about 4 seconds. The STOP indicator will light in the display about 4 seconds.

NOTES: • Always eject the tape when not in use.
 • The cassette can be ejected even if the power is turned off.


PLAYBACK

(CONTINUED)

SPECIAL PLAYBACK

TO VISUALLY SEARCH FOR DESIRED POINTS


When either the F.FWD or REW button is pressed in the PLAYBACK mode, the speed search picture will appear. When pressed twice, the search picture will increase speed. Speed search time depends upon the speed used (SP, LP or SLP) during recording. To rewind or fast forward a tape, press the STOP button, and then press the REW or F.FWD button.

REW 

Press the REW button in the STOP mode.

The "⏮" will appear on the screen and display about 4 seconds.


The REW indicator will light in the display about 4 seconds.

F.FWD 

Press the F.FWD button in the STOP mode.

The "⏭" will appear on the screen and display about 4 seconds.


The F.FWD indicator will light in the display about 4 seconds.

REW/CF 

To visually search backward, press the REW button once or twice in the PLAYBACK mode.

The REW indicator will light in the display about 4 seconds.

Press the PLAY button to resume normal viewing speed.


F.FWD 

To visually search forward, press the F.FWD button once or twice in the PLAYBACK mode.

The F.FWD indicator will light in the display about 4 seconds.

Press the PLAY button to resume normal viewing speed.

TO REWIND OR FORWARD THE TAPE RAPIDLY

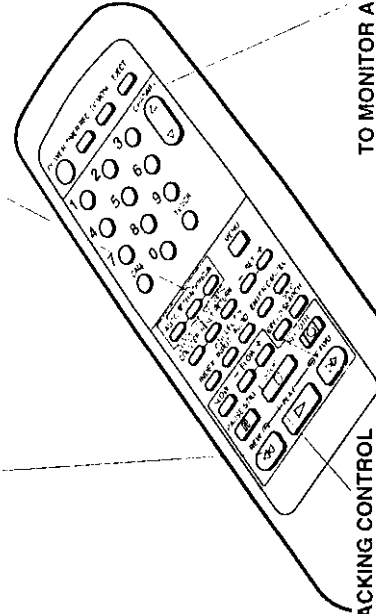

DIGITAL TRACKING CONTROL

When a tape is played, the Digital Auto Tracking System automatically adjusts the tracking to obtain the best possible picture. If noise bars appear during playback, adjust the tracking manually.

- Press the Manual TRACKING ▲ or ▼ button to obtain the best possible picture. To resume automatic tracking, press the AUTO Tracking button.



ATR

FORWARD/REVERSE PICTURE SEARCH

If you want to see the tape program during REW (F.FWD) mode, press and hold the REW (F.FWD) button again. The backward (forward) visual search picture will be seen on the screen. Release to return to the REW (F.FWD) mode.

TO MONITOR A TV PROGRAM

Press the TV MONI (Monitor) button while in the playback mode. The video tape will continue to play while the picture switches to the TV channel selected on the TV channel selected on the VCR. Press the button to return to the playback picture.



TO WATCH A STILL PICTURE

Press the PAUSE/STILL button in the PLAYBACK mode.



STILL

The STILL indicator will light in the display about 4 seconds.

Press the PAUSE/STILL button again to resume normal playback.

FRAME BY FRAME ADVANCE

Press the SLOW button during STILL playback.



STILL

The still picture will advance by one frame each time you press the button. Hold the button for continuous frame by frame viewing.

Press the PAUSE/STILL button again to resume normal playback.

NOTES:

- Best results during speed search playback can be obtained with cassette tapes recorded in the "SP" and "SLP" mode.
- A few noise bars will appear on the picture during SPEED SEARCH and STILL.
- The audio output is muted during SPEED SEARCH, STILL, FRAME ADVANCE and SLOW MOTION.
- To prevent damage to the tape, CUF, REVIEW and STILL playback is automatically chained to the PLAYBACK mode.

SPECIAL PLAYBACK

(CONTINUED)

SKIP SEARCH


Press the SKIP SEARCH button in the PLAY mode. The VCR will search forward through approximately 30 seconds of the tape (e.g. unwanted commercial time) for each press of the SKIP SEARCH button (maximum six presses) and then resume normal playback. The number of presses will appear on the display in place of the channel number.

- For example: 1 press: 30 seconds of tape
 2 presses: 60 seconds of tape
 3 presses: 90 seconds of tape



CUE 1

The CUE 1 indicator will light in the display. (For example : 1 press.)

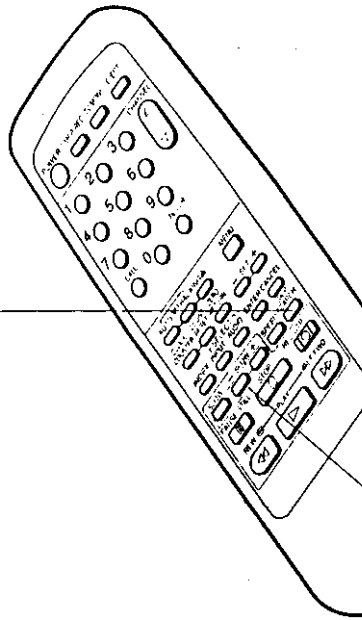


SLOW MOTION PLAYBACK

Press the SLOW button in the PLAYBACK mode. Playback will proceed at 1/10th of the normal speed.

Slow motion speed can be changed by using SLOW + or - button.

+ ... Press to speed up slow motion playback up to 1/5 normal playback speed.

 - ... Press to speed down slow motion playback down to 1/30 normal playback speed.



SLOW

The SLOW indicator will light in the display about 4 seconds. Press the PLAY button again to resume normal playback.

NOTE: SLOW TRACKING AND VERTICAL LOCK ADJUSTMENT

If noise bars appear in the picture during slow motion, press the Manual TRACKING ▲ or ▼ button to reduce the noise bars.

If the still picture jitters excessively, press the Manual TRACKING ▲ or ▼ button to stabilize the still picture.

TO WATCH A TAPE REPEATEDLY

 
CHECK BEFORE YOU BEGIN

- Turn ON the TV and set to the video channel 3 or 4.
- Turn ON the VCR POWER button.
- Press the TV/VCR selector button to select the VCR mode.

When a TV is connected with an audio/video cable, turn the TV and this VCR on, and select the video input mode on the TV.

1

Press the MENU button. Press the SET + or - button to select the VCR SET UP option, then press the ENTER button.



VCR SET UP
 1. VCR SET UP
 2. VCR SET UP
 3. NOISE REDUCTION
 4. ON OFF


2

Press the SET + or - button to select the AUTO REPEAT option.



VCR SET UP
 1. AUTO REPEAT ON OFF
 2. VCR SET UP
 3. NOISE REDUCTION
 4. ON OFF

3

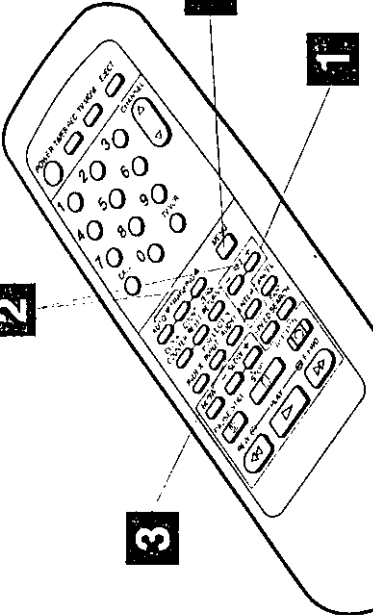

3

Press the ENTER button to select the ON position.



VCR SET UP
 1. AUTO REPEAT ON OFF
 2. VCR SET UP
 3. NOISE REDUCTION
 4. ON OFF

4

Press the MENU button. If you press the PLAY button, the tape will play over and over until the repeat mode is canceled.



* will appear if you press the CALL button.

NOTE: To cancel repeat mode, follow the above steps 1 and 2, then press the ENTER button to select the OFF position. Press the MENU button to return to the TV.

ENGLISH

RECORDING A TV PROGRAM

RECORDING AND VIEWING THE SAME TV PROGRAM



CHECK BEFORE YOU BEGIN

- Turn ON the TV and set to the video channel 3 or 4.
- Turn ON the VCR POWER button.
- Press the TV/VCR selector button to select the VCR mode.

When a TV is connected with an audio/video cable, turn the TV and this VCR on and select the video input mode on the TV.

1




Load a cassette tape with the erase prevention tab intact.
The VCR will automatically turn on.

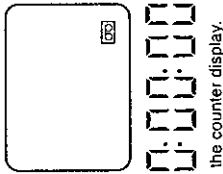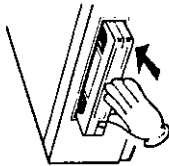

The clock display will change in the counter display.

TO STOP RECORDING


Press the REC/OTR button.
"●" will appear on the screen about 4 seconds.

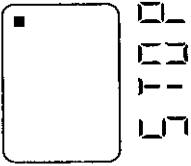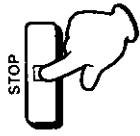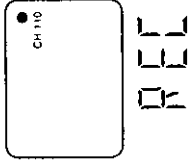


Press the STOP button to stop recording. "●" will appear on screen about 4 seconds.

The STOP indicator will light in the display about 4 seconds.

TV	CATV
VHF 2-13	VHF 2-13
UHF 14-69	STD/HRC/IRC 14-36 (A) (W) 37-55 (AA) (WW) 60-65 (AAA) (ZZZ) 86-94 (BB) (94) 95-99 (A-5) (A-1) 100-125 (100)(125) 01 (SA)

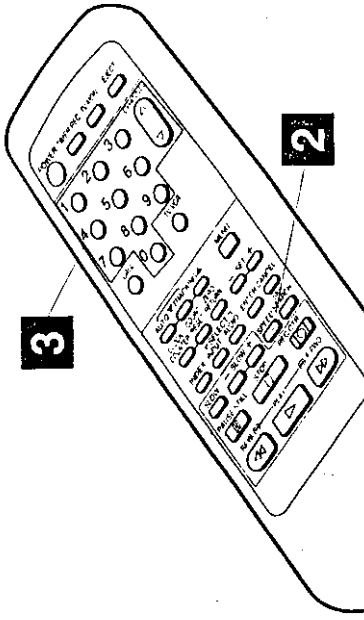

2 Press the SPEED selector button to select the desired tape speed SP, LP or SLP.

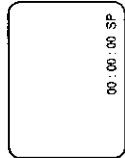

The counter and SP, LP or SLP will appear on the screen about 4 seconds.

3 Press the direct channel selection buttons to select the channel to be recorded.

- 1-9 Press 0 twice and then 1-9 as required.
(Example: to select 2, press 002.)
- 10-19 Press 0 first and then the remaining 2 digits in order from left to right.
(Example: press 018 for 18.)
- 20-99 Press 2 digits in order. (Example, press 22 for 22.)
- 100-125 Press the 3 digits in order. (Example: press 110 for 110.)



 
CHANNEL



Or press the CHANNEL ▲ or ▼ button to select the channel to be recorded.

TO STOP RECORDING TEMPORARILY

Press the PAUSE/STILL button to avoid recording unwanted material. Press again to continue the recording. "II" will appear on screen about 4 seconds and the PAUSE indicator will light in the display to continue pause mode.



NOTE: The pause function will be released after 5 minutes to prevent damage to the tape or the VCR. The VCR will change to the STOP mode.

NOTE: AUTO REWIND FEATURE

This VCR will automatically rewind the tape when the tape has ended (except during OTR and TIMER REC). It will also eject the tape and turn the VCR's power OFF.

RECORDING A TV PROGRAM


(CONTINUED)

ONE-TOUCH TIMER RECORDING (OTR)


The one-touch timer recording feature provides a simple and convenient way to make a timed recording.

RECORDING ONE PROGRAM WHILE WATCHING ANOTHER

1 While the VCR is recording, press the TV/VCR selector button to select the TV position. The TV/VCR indicator will go off and recording will continue.




2 Select the TV channel you want to watch by using the TV channel selector.

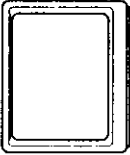


NOTE: Some CATV hookups do not permit viewing one channel while recording another. See pages 18-21.

TO PREVENT AN ACCIDENTAL RECORDING TO RECORD AGAIN

After recording, break off the erase prevention tab if you do not wish to record over the tape.

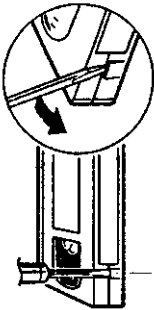

Adhesive tape

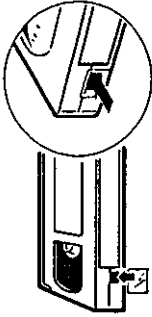

Cover the hole with adhesive tape. Be careful the tape does not extend past the edges of the cassette housing.

TAPE SPEED AND MAXIMUM RECORDING/PLAYBACK TIME

TAPE SPEED	VIDEO CASSETTE TAPE						
	T-210	T-160	T-120	T-90	T-60	T-30	
SP (Standard Play)	3-1/2 hours	2-2/3 hours	2 hours	1-1/2 hours	1 hour	30 minutes	
LP (Long Play)	7 hours	5-1/3 hours	4 hours	3 hours	2 hours	1 hour	
SLP (Super Long Play)	10-1/2 hours	8 hours	6 hours	4-1/2 hours	3 hours	1-1/2 hours	


EXAMPLE: One-touch timer recording for 30 minutes.

CHECK BEFORE YOU BEGIN


- Turn ON the TV and set to the video channel 3 or 4.
- Turn on the VCR power button.

When a TV is connected with an audio/video cable, turn the TV on and select the video input mode on the TV.

1 Load a cassette tape with the erase prevention tab intact.

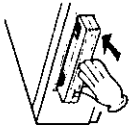


2 Press the SPEED selector button to select the desired tape speed SP, LP or SLP. The counter and SP, LP or SLP will appear on the screen about 4 seconds.

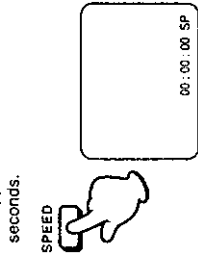


The clock display will change in the counter display.

3 Press the direct channel selection buttons or the CHANNEL \blacktriangle or \blacktriangledown button to select the channel to be recorded.



The channel number will appear on the screen and display about 4 seconds.

4 Press the REC/OTR button to begin recording. Press the button again to stop recording after 30 minutes. Each additional press of the REC/OTR button will increase recording time as shown in the chart below, up to a maximum of 5 hours. The OTR and recording time will appear on screen about 4 seconds.



NOTES: • Press the REC/OTR button to increase the time needed for recording. (See the chart below.)

Press	once	twice	3 times	4 times	5 times	6 times	7 times	8 times	9 times
Recording time	NORMAL REC	0:30	1:00	1:30	2:00	3:00	4:00	5:00	NORMAL REC

• To cancel OTR, press the STOP button or turn off the power.

SETTING THE TIMER RECORDING

Timer recording can be programmed on-screen with the remote control. The built-in timer allows automatic unattended recording of up to 8 programs within 1 month.

EXAMPLE: Program a timer recording for the 26th day, channel 125 (CATV), 11:00 - 11:30 PM on timer program number 1. (Tape speed: SLP)

CHECK BEFORE YOU BEGIN

- Turn on the TV and set to the video channel 3 or 4.
- Press the TV/VCR selector button to select the VCR mode.
- Load a video cassette with the erase prevention tab intact. The VCR will automatically turn on.
- Check that the clock and date are correct (see page 25).

When a TV is connected with an audio/video cable, turn the TV and this VCR on and select the video input mode on the TV.

1 Press the MENU button. Check the TIMER REC SET option is selected, then press the ENTER button.

4 Set the start time, end time, channel and tape speed as in step 3.

5 Press the ENTER button to accept them. To enter other programmes, repeat step 2 through 4. Or, press the MENU button twice to return to the normal screen.

2 Press the SET + or - button to select the PROGRAM, then press the ENTER button.

4 Set the start time, end time, channel and tape speed as in step 3.

5 Press the ENTER button to accept them. To enter other programmes, repeat step 2 through 4. Or, press the MENU button twice to return to the normal screen.

3 Press the SET + or - button to select the date, then press the ENTER button.

6 Press the TIMER REC button. The power will go off, the Timer Record indicator will light and the VCR stands by for recording.

5 Press the ENTER button to accept them. To enter other programmes, repeat step 2 through 4. Or, press the MENU button twice to return to the normal screen.

6 Press the TIMER REC button. The power will go off, the Timer Record indicator will light and the VCR stands by for recording.

To cancel timer recording, press the button again and the Timer Record indicator will go out.

NOTE: To set the timer for other programs, press the MENU button. Check that the TIMER REC SET option is selected, then press the ENTER button. Press the SET + or - button until the next program blinks, then press the ENTER button. Repeat steps 3 to 4 to set the second program.

NOTE:

- The VCR cannot be used while the Timer Record indicator is lit.
- After a power failure or disconnection of the power plug, all programmed recording settings must be reset upon resumption of power. In this case, reset the clock (see page 25) and reprogram any timer recordings.
- Press the CANCEL button to move cursor backward for correction.


SETTING THE TIMER RECORDING (CONTINUED)

(CONTINUED)

ON-SCREEN FUNCTION DISPLAY



TO SET DAILY/WEEKLY TIMER

When setting the date in step 3, press the SET - button repeatedly when the current day is displayed. The setting changes as follows:

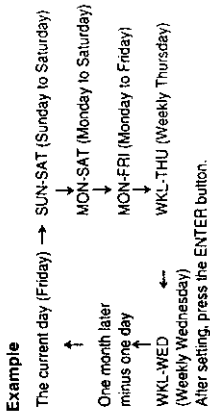

TO CONFIRM THE SETTINGS

 
Press the SET + or - button to select the TIMER REC SET option in the MENU. Then press the ENTER button to display the timer program list. Press the MENU button twice to return to the normal screen.

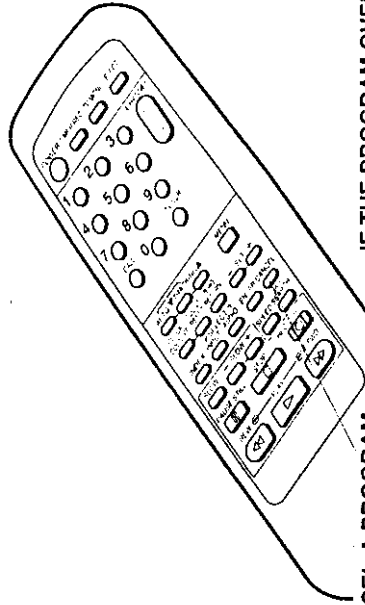

TO CANCEL A PROGRAM


Press the SET + or - button to select the TIMER REC SET option in the MENU. Then press the SET + or - button to select the unnecessary program, and press the CANCEL button to cancel the program.

 CANCEL



IF THE PROGRAM OVERLAPS ANOTHER

NOTE: Do not overlap programs as portions of the conflicting programs will be lost. The first recording time has priority over the next recording time as shown in the diagram.

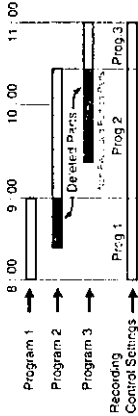


NOTES:

- The everyday/every week recording can be made continuously until the recording is canceled or the tape reaches the end.
- During timer recording, the automatic rewinding mechanism does not function.

WHILE WATCHING TV


Press the CALL button.

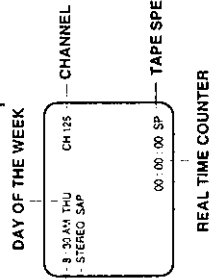

Press the CALL button again to make the display disappear.

WHILE OPERATING A TAPE

Press the CALL button.

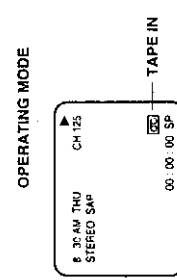


Press the CALL button again to make the display disappear.

TO SET THE COUNTER TO '00:00:00'

Press the COUNT RESET button. The counter will appear on the screen.

COUNT RESET

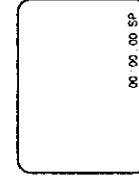


NOTES:

- If you rewind the tape from "00:00:00", a minus sign ("−") will be displayed in front of the time.
- When you load a tape, the counter will change to "00:00:00".
- The counter does not function on nonrecorded (blank) sections of the tape. When you rewind, fast forward or play tapes through blank sections, the counter stops.


USING ZERO RETURN

The zero return function provides a convenient method of rapidly returning to the starting point of recording or playback. The starting point can be indexed for any location on the tape by pressing the COUNT RESET button and ZERO RETURN button.

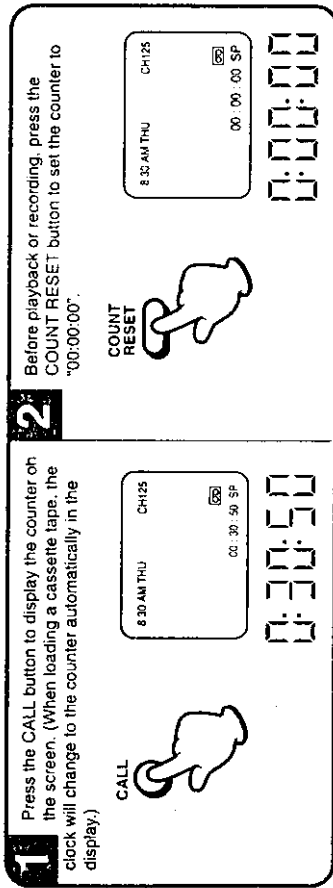

1 Press the CALL button to display the counter on the screen. (When loading a cassette tape, the clock will change to the counter automatically in the display.)

2 Before playback or recording, press the COUNT RESET button to set the counter to "00:00:00".

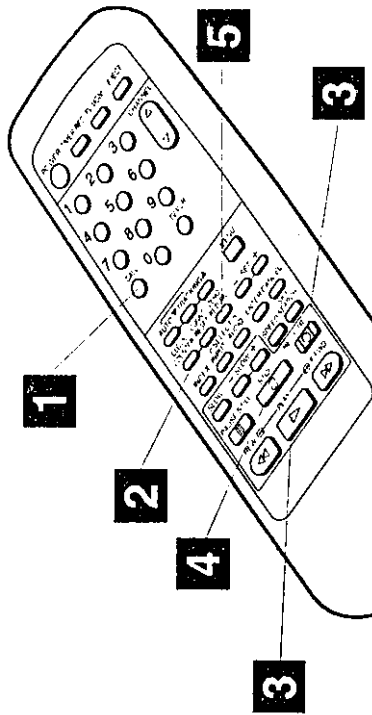

3 Begin playback or recording.

4 Press the STOP button when playback or recording is finished.

5 Press the ZERO RETURN button. The tape will rewind and automatically stop at the "00:00:00" position.


PLAY OR REC/OTR STOP ZERO RETURN

PLAY REEL STOP REEL


VIDEO INDEX SEARCH SYSTEM (INDEX)

The VIDEO INDEX SEARCH SYSTEM (INDEX) enables you to locate the beginning of any recording made on the VCR. The Index Search function automatically records an INDEX mark on the tape whenever a recording is initiated. This mark can easily be located by using the F.FWD and REW buttons.

SEARCHING FOR AN INDEX MARK

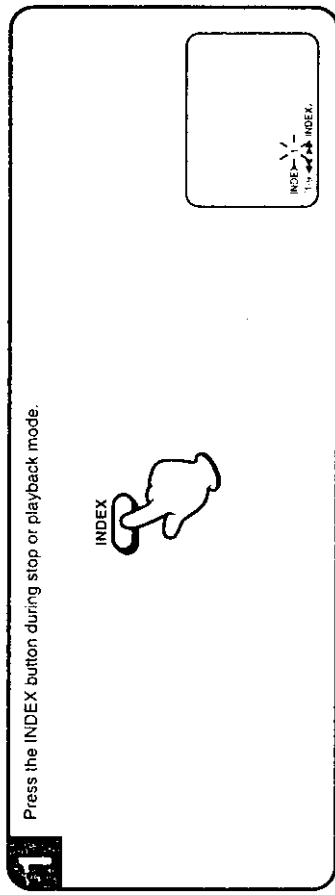

1 Press the INDEX button during stop or playback mode.

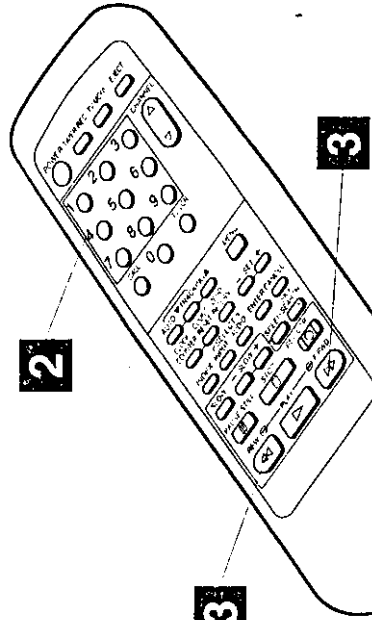

2 Select the number of INDEX marks to be skipped (from 1 to 9) with the Channel Number keys.

3 Press the F.FWD or REW button. The VCR will skip over the selected number of INDEX marks. The VCR will resume normal playback at the selected mark.

4 Press the REW button or the F.FWD button.

EXAMPLE: When the tape has four separate recorded programmes, select 4 to go to the beginning of the 4th programme (4th index mark).

NOTES:

- When you recorded an INDEX mark at the very beginning of the tape, the mark may not be found.
- During INDEX search, the tape may stop and begin to play at a slightly different location.
- INDEX may not function properly with old or worn out video tapes.

STEREO RECORDING AND PLAYBACK


RECORDING STEREO BROADCASTS

The VHS Hi-Fi audio system permits high fidelity recording of MTS STEREO TV broadcasts.

When a MTS STEREO broadcast is received, the STEREO will appear on the screen and the program can be viewed or recorded in stereo (refer to pages 36 and 37 for recording procedures). The Hi-Fi STEREO recording procedure is the same as for normal recordings.



NOTE: When using a CATV system, stereo TV programs may be transmitted over a mono cable channel. In this case the STEREO will not appear and the sound will be in mono.

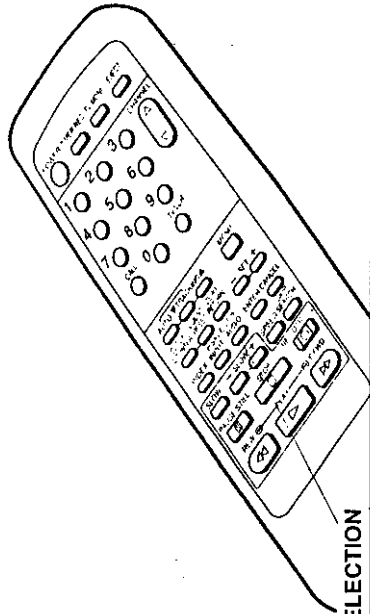

OUTPUT SELECTION

When viewing an MTS STEREO TV program, or playing a prerecorded VHS Hi-Fi STEREO videotape, press this button to select that the audio be heard through both speakers. Normally set to the Hi-Fi STEREO position, this button can be set to the MONO position if the stereo broadcast or videotape audio is of poor quality. The "R" and "L" positions allow the audio from the Right or Left Hi-Fi channel to be heard over both TV speakers. This button has no effect when viewing a MONO videotape or TV program. Each time when you press the button, OUTPUT SELECTION display appears on the screen for several seconds. Refer to the chart below.

OUTPUT SELECTION	SOUND HEARD ON BOTH SPEAKERS
STEREO	STEREO
L CH	LEFT CHANNEL AUDIO
R CH	RIGHT CHANNEL AUDIO
MONO	MONO

NOTES:

- When playing back a tape that is not recorded in Hi-Fi stereo mode, the audio will automatically be monaural.
- When listening to a VHS Hi-Fi video tape or MTS broadcast through the VHF/UHF jack (Audio/Video cord not connected), the sound will be monaural.

SEPARATE AUDIO PROGRAM (SAP)

Your VCR is fitted with an SAP broadcast system which enables you to switch to a SEPARATE AUDIO PROGRAM when viewing a selected channel. This function applies only when the program is broadcast in multi languages through the SAP broadcast system.

 
CHECK BEFORE YOU BEGIN

- Turn ON the TV and set to the video channel 3 or 4.
- Turn ON the TV/VCR selector button.
- Press the TV/VCR selector button to select the VCR mode.

When a TV is connected with an audio/video cable, turn the TV and this VCR on, and select the video input mode on the TV.


1 Press the MENU button.

Press the SET + or - button to select the VCR SET UP option, then press the ENTER button.



2 Press the SET + or - button


to select the SAP option, then press the ENTER button to select the ON position.

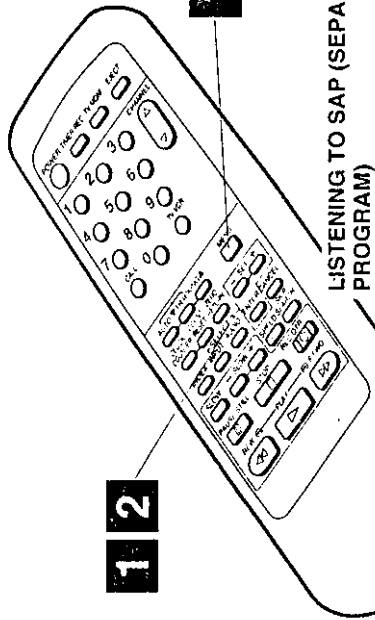

LISTENING TO SAP (SEPARATE AUDIO PROGRAM)

Press the MENU button twice.

When the VCR is tuned on or a channel selection is made, make certain the SAP is appeared on the screen. This means that the "Separate Audio Program" broadcasting is available.

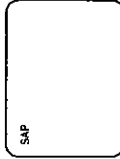


OR


DUPLICATING A VIDEO TAPE

If you connect the VCR to another VCR or camcorder, you can duplicate a previously recorded tape. Make all connections before turning on the power.


1 Load a blank cassette tape with the erase prevention tab intact into the recording VCR. Load a previously recorded tape into the playback VCR or CAMCORDER.

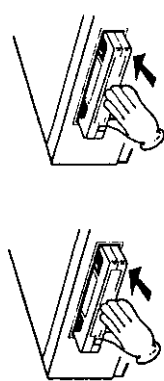

2 Press the INPUT SELECT button twice to select AUDIO/VIDEO input position. The "LINE2" will appear on the screen. The L2 indicator will light up on the display on the recording VCR.

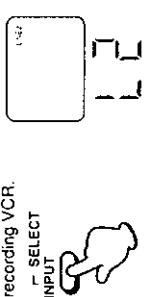


NOTE: You can also use the rear AUDIO/VIDEO IN jacks. Select "LINE1" by pressing the INPUT SELECT button.

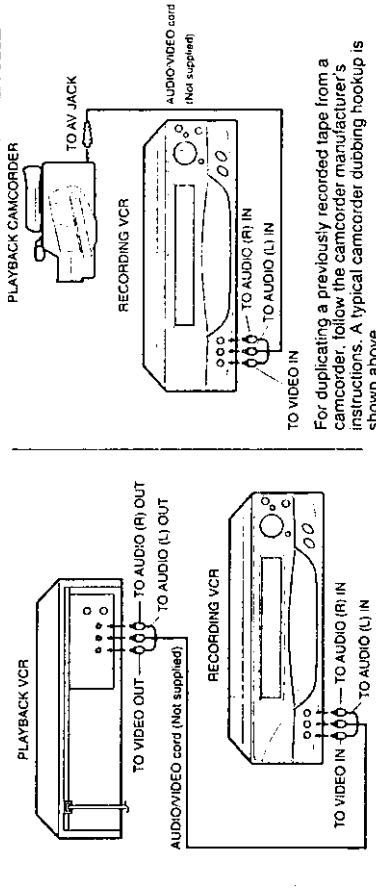


For duplicating a previously recorded tape from a camcorder, follow the camcorder manufacturer's instructions. A typical camcorder dubbing hookup is shown above.

 
3 Press the REC/OTR button on the recording VCR, then press the PAUSE/STILL button.



 4 Press the PLAY button on the playback VCR, then press the PAUSE/STILL button.



5 Press the PAUSE/STILL button on both the VCRs simultaneously to begin the duplicating process.

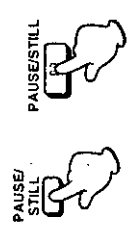

REC PAUSE PLAY STILL

NOTES:

- It is recommended that you set the SPEED to the SP mode on the recording VCR for best results.
- Unauthorized recording of copyrighted television programs, films, video tapes and other materials may infringe on the rights of copyright owners and violate copyright laws.

VIDEO HEAD CLEANING

VIDEO HEAD CLOGGING

The video heads are the means by which the VCR reads pictures from the tape during playback. In the unlikely event that the heads become dirty enough to be clogged, no picture will be played back. This can easily be determined if, during playback of a known good tape, there is good sound, but no picture (picture is extremely snowy). If this is the case, have the video cassette recorder checked by qualified service personnel.



Good Picture



Snowy Picture

AUTO HEAD CLEANING

The AUTO HEAD CLEANING system cleans the video heads automatically when a cassette is inserted or ejected to prevent dirt from accumulating on the heads. However, manual head cleaning is needed if the picture on playback is still unclear although the picture on program is normal. This failure signifies that the head is getting dirty and occurs when playing poor quality or damaged tapes. If the heads require cleaning, use a high quality head cleaning system or have them cleaned professionally.

DO NOT ATTEMPT TO CLEAN THE VIDEO HEADS OR SERVICE THE UNIT BY REMOVING THE TOP COVER.

 
NOTES:

- Video heads may eventually wear out and should be replaced when they fail to produce clear pictures.
- To help prevent video head clogging, use only good quality VHS tapes. Discard worn out tapes.

VIDEO GLOSSARY

This video glossary is provided to help you become familiar with video terms, equipment and accessories you may encounter or require in the future.

A/B SWITCH - A device that allows you to select from two video sources for output to your VCR or TV. (Not included)



A/B SWITCH

ANTENNA ADAPTER or ANTENNA MATCHING UNIT - See matching transformer.

BALUN - See matching transformer.

BANDS - Groups of TV channels which fall within certain frequencies.

All the channels your TV/VCR receives can be tuned on one of three bands:

V - VHF channels 2-6 and cable A-5--A-3

V_h - VHF channels 7-13 and cable A-2-A-1, A-1, J-W and AA-FFF

U - UHF channels 14-69 and cable GGG-125

CATV - Cable TV, a method of transmitting TV signals through cable. This usually involves a monthly service charge. CATV is usually transmitted by one of three systems: HRC, IRC or STD.

COAXIAL CABLE (75 ohm) - A special type of round wire used for antenna or cable systems, or for connecting a VCR to a TV.



COAXIAL CABLE WITH
THREADED F CONNECTOR

COMBINER (or COUPLER) - A device used to combine two or more incoming antenna wires or cables into a single output (not included).



CONVERTER BOX/DESCRAMBLER - A device supplied by cable companies for receiving or descrambling cable signals. Often used for TV sets that cannot receive cable channels, or when pay stations are desired by the customer (not included).



A CONVERTER/
DESCRAMBLER

DIGITAL - Special circuitry using microchips to store images enables a VCR to perform viewing effects like strobe, and high quality still picture.

DIGITAL AUTO TRACKING - Automatically adjusts the playback tracking for the best possible picture.

DUBBING - A method of recording from one video cassette tape to another by connecting a VCR with another VCR, VCP or camcorder.

FS TUNER - A quartz-locked, frequency synthesized tuning system that electronically locks in stations for optimal reception. Eliminates the need for presetting channels into the TV/VCR.

F-TYPE CONNECTOR JACK - A threaded input jack designed to accept coaxial cable (75 ohm) using either a 'push-on' or 'screw-on' F connector.



 
F CONNECTOR JACK

FULL LOADING TAPE TRANSPORT - Keeps video cassette tape fully loaded in VCR for rapid access between modes.

H.Q. - High Quality picture. Special circuitry designed to improve VHS picture quality. Includes 'white clip expansion' and one or more additional special circuits.

REAL TIME COUNTER - A real time counter that displays the elapsed time during recording or playback in hours, minutes and seconds. The counter does not function on nonrecorded (blank) sections of tape.

MATCHING TRANSFORMER - An adapter used to convert 75 ohm cable to 300 ohm twin lead wire, or 300 ohm to 75 ohm.



2 TYPES OF MATCHING
TRANSFORMERS



MTS - Multichannel TV Sound. A stereo broadcast sound system used for transmitting stereo sound signals on TV, usually broadcast with another channel (SAP).

PRESET - A method of programming channels and channel numbers into the memory of the VCR.

PUSH ON CONNECTOR - Made to fit over an F connector jack without threading. Many matching transformers use push on connectors.

RF CONVERTER - A device built into VCRs and converter/descramblers which converts all signals into the video channel (either 3 or 4) for viewing on a TV.

SAP-SEPARATE AUDIO PROGRAM - A third audio channel under the MTS system, frequently used for bilingual broadcasts.

SPECIAL EFFECTS - Picture features available on some VCRs such as still frame, and picture search.

SPLITTER - A device used to divide an incoming antenna wire or coaxial cable into two or more wires or cables (not included).



TWO TYPES OF SPLITTERS

STROBE PLAYBACK - A special digital playback feature in which still frames are displayed in rapid succession for a strobe effect.

TWIN LEAD WIRE (300 ohm) - A two conductor flat wire used for connecting an antenna to a TV set or VCR.



TWIN LEAD WIRE
WITH TERMINALS

UHF - Ultra High Frequency. The band of frequencies used for UHF channels 14-69. (Cable companies sometimes transmit UHF channels on other bands.)

VCP - Video cassette player. A device which can play video cassettes but cannot record.

VCR - Video cassette recorder. A device that can record and playback video cassettes.

VHF - Very High Frequency. The band of frequencies used to transmit VHF channels 2-13. Also used by cable companies to transmit their own channel.

VHS-C - A popular video cassette format used in many video camcorders. VHS-C cassettes can be loaded into a video cassette adapter which makes the tape fully compatible with the standard VHS format.

VHS - Video Home System. The video tape format most commonly used in the U.S.

VHS HI-FI - A superior method of recording stereo audio signals on video tape, resulting in very high quality audio recording.

VIDEO CHANNEL - The TV broadcast channel (usually 3 or 4) used to output signals from a VCR or cable box.

 
 
VIDEO INPUTS/OUTPUTS - RCA type jacks in back of the VCR used for dubbing or providing audio or video signals from other sources.



VIDEO INPUT/OUTPUT JACKS


BEFORE REQUESTING SERVICE

Make sure by first checking the following points.

SYMPTOMS	CAUSE	POSSIBLE SOLUTIONS	PAGE
POWER			
No power.	The AC power cord is not connected.	Connect the AC power cord to the AC outlet.	9
Although the power is on, it does not operate.	Cassette is not inserted.	Insert a video cassette.	30
TV BROADCAST RECEPTION			
A TV program that is selected by the VCR does not appear on the screen.	Antenna connection is not correct.	Connect it correctly.	14
	Antenna cable is disconnected.	Reconnect the antenna cable.	14
	The video channel is not in the correct position.	Set it to CH 3 or 4.	23
	The TV is not set to the video channel 3 or 4.	Set the TV channel selector to the 3 or 4 position.	23
A TV program selected by the VCR does not appear in color.	The TV/VCR selector is set at TV mode. (The VCR indicator is not on the display).	Press the TV/VCR selector button. (The VCR indicator is on the display).	23
	INPUT SELECT is set to the LINE mode.	Press the INPUT SELECT button to select the TV mode.	48
RECORDING			
TV recording does not work.	The TV/CATV menu option setting.	Set the TV/CATV menu option to select TV or CATV mode.	26
	The erase prevention tab of the video cassette is broken off.	Place a piece of vinyl tape over the gap.	38
Timer recording does not work.	INPUT SELECT is set to the LINE mode.	Press the INPUT SELECT button to select the TV mode.	48
	The time is not set correctly.	Reset the present time.	25
	The recording start/end time is not set correctly.	Set the start/end time.	41
	The TIMER REC button has not been pressed. (The Timer Record symbol  is not lit on the display).	Press the TIMER REC button. (The Timer Record symbol  is lit on the display).	41

ENGLISH

SYMPTOMS	CAUSE	POSSIBLE SOLUTIONS	PAGE	
PLAYBACK				
No picture on screen when playing back a recorded tape.	The TV is not set to the video channel 3 or 4.	Set to the video channel 3 or 4 or adjust the fine tuning button on your TV set.	23	
Noise bars on screen.	Tracking adjustment beyond range of automatic tracking circuit.	Adjust tracking manually using the TRACKING ▲ and ▼ buttons on remote control.	32	
	Video heads are dirty.	Have the video heads cleaned.	49	
REMOTE CONTROL	The tape is worn or damaged.	Try another tape.	-	
	Remote control does not work.	It is not aimed at the remote sensor.	Aim it at the remote sensor.	13
		Distance too far or too much light in the room.	Operate within 15 feet (5 meters) reduce the light in the room.	13
TV programs cannot be seen using the TV selector.	There is an obstacle in the path of the beam.	Clear the path of the beam.	13	
	The batteries are weak.	Replace the batteries.	13	
	The +, - polarity of the batteries are not inserted correctly.	Insert correctly.	13	
	The TV/VCR function is in the VCR mode.	Set to TV, or turn off the VCR power button.	-	

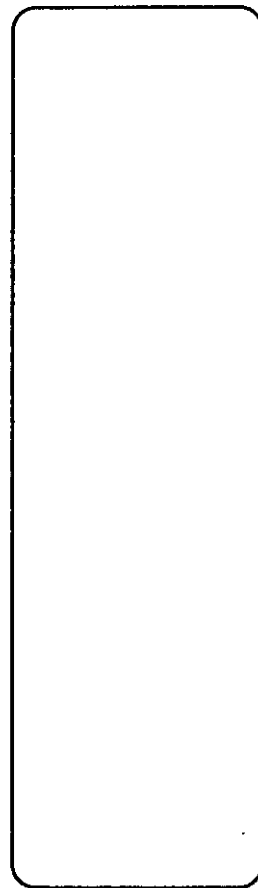

SPECIFICATIONS

MEMO

Video Head:

4 Rotary Heads

Audio Track:

Hi-Fi Sound - 2 Tracks
MONO Sound - 1 Track

Power Source:

120V, 60Hz

Power Consumption:

Approx. 13 watts

Tuner:

181 Channel Freq. Synthesized
VHF 2-13
UHF 14-69
CATV 14-36 (A)-(W)
37-59 (AA)-(WW)
60-85 (AAA)-(ZZZ)
86-94 (86)-(94)
95-99 (A-5)-(A-1)
100-125 (100)-(125)
01 (5A)

RF Channel Output:

Channel 3 or 4, Switchable

Inputs/Outputs:

Video: In (RCA) 1Vp-p 75 ohm
Out (RCA) 1Vp-p 75 ohm
Audio: In (RCA)-8dB/50K ohm
Out (RCA)-8dB/1K ohm
Antenna: VHF/UHF IN 75 ohm coaxial
VHF/UHF OUT 75 ohm coaxial

Hi-Fi Frequency Response:

20Hz to 20,000Hz

Hi-Fi Dynamic Range:

More than 85dB

F.FWD/REW Time:

F.FWD: Approx. 2 min. 15 sec.
REW: Approx. 1 min. 48 sec.
(with T-120 Cassette Tape)

Speed Search:

SP - 3 & 5 X Normal Speed
LP - 7 & 9 X Normal Speed
SLP - 9 & 15 X Normal Speed

Dimensions:

14-3/16"W X 3-3/4"H X 9-7/16"D

Weight:

8.8 lbs

Supplied accessories

Remote Control (1)
75 ohm Coaxial Cable (1)

Specifications are subject to change without notice.