


## COMPOSITION KIT

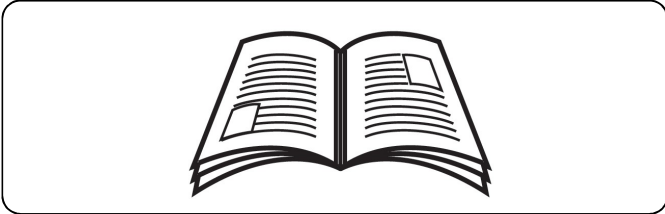

## TECHNICAL SPECIFICATIONS


Dimensions .....	25 x 35 x 48 mm
Supply voltage .....	from 6 to 16VDC
Working temperature .....	from -30 °C to + 65 °C
Application classification .....	inside the vehicle

## INSTALLATION AND ACTIVATION PROCEDURES

Your enclosed device plugs into the On Board Diagnosis (OBD) port of your vehicle.

Please follow the instructions below to install the device.

- a) Locate the OBD port in your vehicle. This port is usually located under the dashboard on the driver's side and may have a cover – the picture shows the typical vehicle OBD port location.
- b) Plug the device firmly into the OBD port – the picture shows how it works.
- c) Wait a few seconds for the LED lights to turn ON, confirming successful installation. (RED and BLUE Led only)

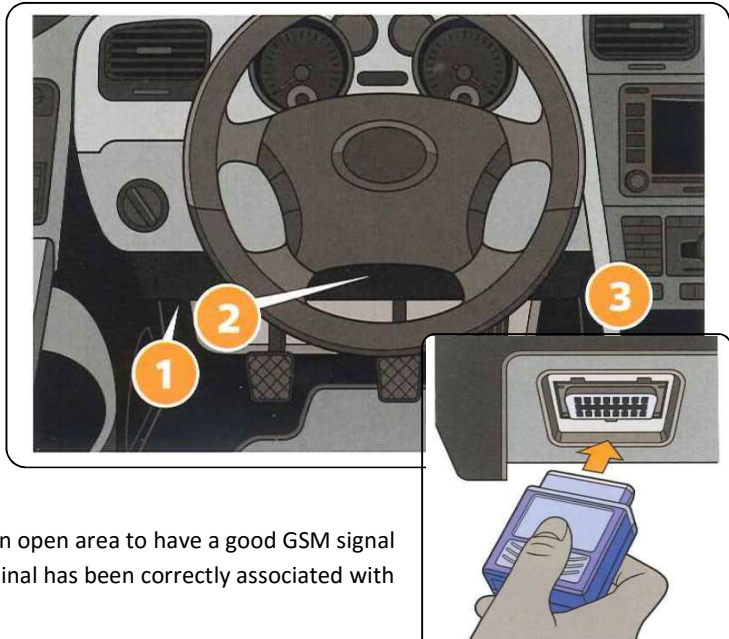

After installing the device, you will receive a welcome SMS to confirm the activation of the Telematics services.

**NOTE:** the procedure requires that the vehicle is outside in an open area to have a good GSM signal and the possibility of satellite reception. Check that the terminal has been correctly associated with the contract.

## WARNINGS

- If you suspect the device is interfering with vehicle operation, please immediately unplug the device and contact Octo Telematics for further assistance.
- At least 1cm separation distance between the device and the user's body must be maintained at all times.

## APPROVAL

This device complies with part 15 of the FCC Rules and Industry.

Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) The device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

- (1) L'appareil ne doit pas produire des brouillages, et
- (2) L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The conformity declaration could be accessed on the site: [www.octotelematics.com/certifications](http://www.octotelematics.com/certifications).

End of life disposal warning: When the unit has come to the end of its life, dispose of it in accordance with local regulations.