



Order Number
Test Report Number

: GETEC-C1-11-075
: GETEC-E3-11-025

FCC Part 15 subpart C

Page 1 / 1

APPENDIX I

: USER'S MANUAL

Operating Instructions For PHAZR-5 Cable Remote Control

UR5L-9000LRF & UR5L-9020LRF




2 Replacing Batteries

Before you program or operate the remote control, you must install two new AA alkaline batteries.

STEP1 Remove the battery compartment cover on the back of your remote control.

STEP2 Check battery polarity carefully, and install the batteries as shown in the illustration below.

STEP3 Replace the battery compartment cover.

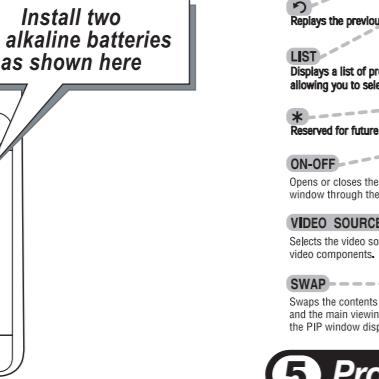

3 Operations

IMPORTANT SETUP NOTE!

In this section when you are instructed to press a [DEVICE] button, that means to press either the CBL, TV, AUD, DVD or AUX button, depending on what device you are programming the remote to operate.

There are five ways you can program your remote:

* Quick Set-Up Method

* The Auto-Search Method

* RF Setting Method

The Quick Set-Up Method is a unique feature that enables the fastest and easiest setup by using a 1 digit code. This is the quickest way to set up devices made by popular manufacturers.

The Channel Default: CABLE channel and numbers through the CABLE STB. You have the option of controlling your CABLE channel and numbers through the TV or AUD. Refer to section K for programming steps.

Volume Default: Volume and Mute control are automatically transferred to the respective Component based on the Device selected:

CBL: Cable Set-Top Box ; **TV:** TV ; **AUD:** AUD.

DVD: TV ; **AUX:** AUX. You have the option of controlling CABLE Volume and Mute through the TV, DVD or AUD. Refer to section J for programming steps.

IMPORTANT SETUP NOTE!

This pertains to all programming steps. When you are in setup mode the device LED will light for 30 seconds. If you do not press a button within 30 seconds, the LED light will turn off and exit setup mode, and you will need to start over.

1 Introduction

The PHAZR-5 UR5L-9000LRF & UR5L-9020LRF is designed to operate the CISCO / SA, Pioneer, Pace Micro, Samsung and Motorola digital set tops, Plus the majority of TV, AUD, DVD and AUX equipment on the market as shown below.

CBL : Cable Set-top Box


TV : Televisions

AUD : Audio Receivers

DVD : DVD Players

AUX : Media PC, Gaming System, etc.

4 Button Functions

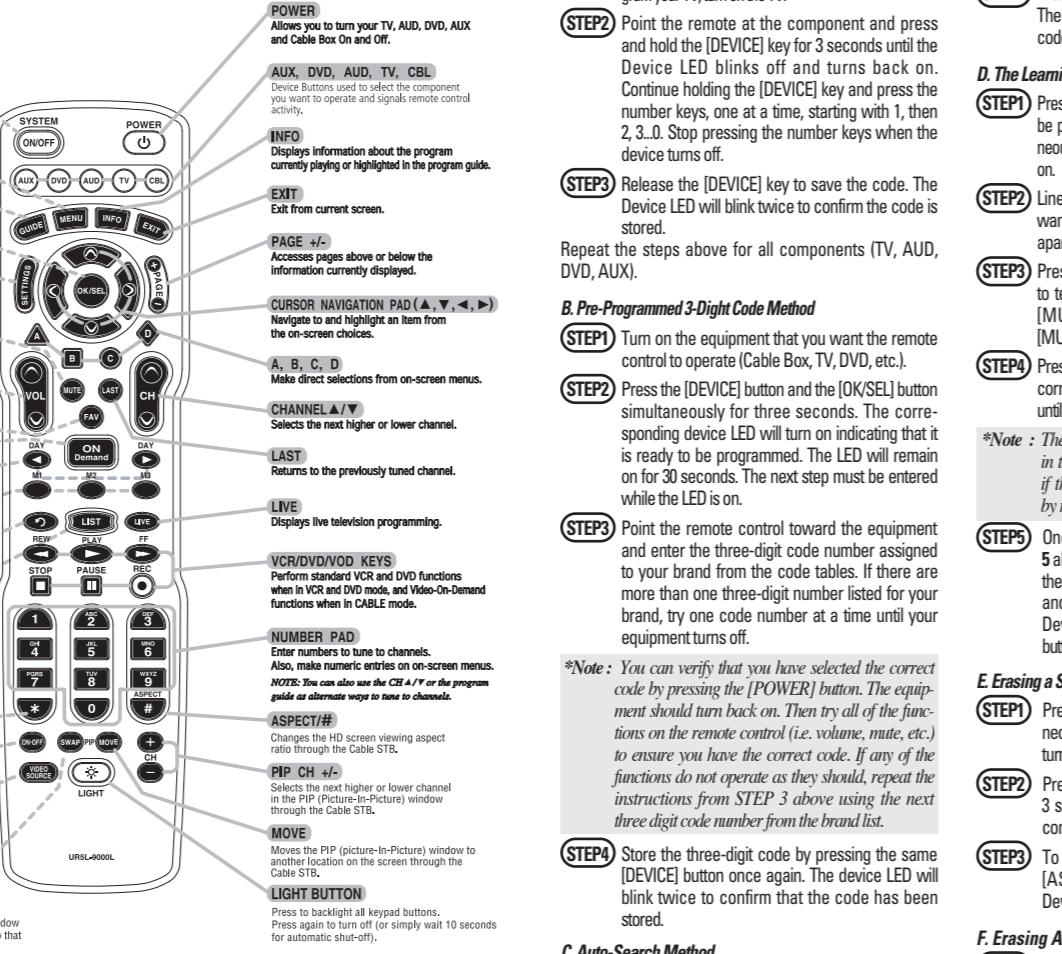

5 Programming the Remote Control

IMPORTANT SETUP NOTE!

In this section when you are instructed to press a [DEVICE] button, that means to press either the CBL, TV, AUD, DVD or AUX button, depending on what device you are programming the remote to operate.

There are five ways you can program your remote:

* The Pre-Programmed 3-Digit Code Method

* The Learning Method

* RF Setting Method

The Pre-Programmed Code Method allows you to setup all of the buttons at once by entering 3-digit code numbers that correspond with the components manufacturer/brand. Code tables for this method are on the backside of the operating instructions.

The Auto-Search Method scans through all of the codes in the remote control, one at a time allowing you to identify the correct code.

The Learning Method allows you to transfer functions from other remotes to the PHAZR-5 one button at a time.

IMPORTANT SETUP NOTE!

This pertains to all programming steps. When you are in setup mode the device LED will light for 30 seconds. If you do not press a button within 30 seconds, the LED light will turn off and exit setup mode, and you will need to start over.

A Quick Set-Up Method

STEP1 Turn on the equipment you want to program. To program your TV, turn on the TV.

STEP2 Point the remote at the component and press and hold the [DEVICE] key for 3 seconds until the Device LED blinks off and turns back on. Continue holding the [DEVICE] key and press the number keys, one at a time, starting with 1, then 2, 3... Stop pressing the number keys when the device turns off.

STEP3 Release the [DEVICE] key to save the code. The Device LED will blink twice to confirm the code is stored.

STEP4 Line up the PHAZR-5 to the remote control you want to "learn" from, head-to-head, 1 or 2 inches apart.

STEP5 Press the button on the PHAZR-5 that you want to teach a command to. For example, press the [MUTE] button to learn a command to the [MUTE] button.

STEP6 Press and hold the button on the other remote that corresponds to the command you want to teach until the PHAZR-5 Device LED blinks twice.

Note : The LED will blink 5 times if there was an error in the learning process. Repeat STEPS 3 and 4 if this occurs. Continue learning other buttons by repeating STEPS 3 and 4.

STEP7 Point the remote control toward the equipment and enter the three-digit code number assigned to your brand from the code tables. If there are more than one three-digit number listed for your brand, try one code number at a time until your equipment turns off.

Note : You can verify that you have selected the correct code by pressing the [POWER] button. The equipment should turn back on. Then try all of the functions on the remote control (i.e. volume, mute, etc.) to ensure you have the correct code. If any of the functions do not operate as they should, repeat the instructions from STEP 3 above using the next three digit code number from the brand list.

STEP8 Press the [CBL] button to select the CBL mode.

STEP9 Press the [MACRO] button and [OK/SEL] button simultaneously for 3 seconds. The [CBL] button will turn on for 30 seconds.

STEP10 Enter the the 2, 3 or 4-digit code for the channel you want programmed first (for example, 007) using the Number Pad, then press the [STOP] button.

STEP11 Press the [CBL] button. Then enter the code for the next channel (for example, 050), then press the [STOP] button. Repeat this process for the third channel. The [CBL] button will blink once for each channel entered.

STEP12 Press the [CH ▲] button to store the channels that were selected. The [CBL] button will blink twice to confirm the storage of commands.

STEP13 To access the programmed channels, press the [MACRO] button once. This will bring up the first channel. Press once again and it will bring up the second channel. Press again and it will bring up the third channel.

Warning!

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

J Programming Volume Control

Volume and Mute control are factory programmed to automatically transfer to the respective Device mode You select, as follows:

CBL : CBL **TV :** TV **AUD :** AUD

DVD : TV **AUX :** AUX

If you wish to store the TV volume control in CBL mode, use the following steps.

STEP1 Press the [OK/SEL] button and [CBL] button simultaneously for three seconds. The [CBL] device LED will turn on for 30 seconds. The next step must be performed while the LED is on.

STEP2 Press the [INFO] button. The device LED will blink a number of times indicating the number of each digit for the code. Each digit is separated by a one second interval of the LED being off.

STEP3 Press the [VOL ▲] button. The device LED will blink.

STEP4 Press [TV] button. The device LED will blink twice to confirm the programming.

Example One blink, (pause) three blinks, (pause) eight blinks indicates the code number 138.

Note : Ten blinks indicates the number 0.

H Programming the AUX Device

STEP1 Turn on the equipment you want to program. To program your TV, turn on the TV.

STEP2 Point the remote at the component and press and hold the [DEVICE] button to store the code. The Device LED will blink twice to confirm that the code has been stored.

I Memory Lock System

This remote control is designed to retain programmed memory for 10 years even after batteries are removed from the remote control.

STEP1 Turn on the 5th device you want to program (TV, AUD, DVD, etc.).

STEP2 Press the [AUD] button and the [OK/SEL] button simultaneously for 3 seconds. The [AUD] device LED will turn on for 30 seconds.

STEP3 Press the [Device] button for the type of device you want to setup. Point the remote control toward the device and enter the 3-digit code number assigned to your brand.

STEP4 Press the [VOL ▼] button. The device LED will blink.

STEP5 Press [TV] button. The device LED will blink twice to confirm the programming.

K Programming Channel Control

You can program the channel controls (Channel Up, Channel Down, Last and Numbers) from one Device to operate in another Device mode. Default channel control settings on the remote are as follows:

CBL : CBL **TV :** CBL **AUD :** AUD

DVD : DVD **AUX :** AUX

If you wish to store the TV channel controls in TV mode, use the following steps:

STEP1 Press the [OK/SEL] button and [TV] button simultaneously for three seconds. The device LED will turn on for 30 seconds. The next step must be performed while the LED is on.

STEP2 Press the [INFO] button and [OK/SEL] button simultaneously for 3 seconds. The [INFO] device LED will turn on for 30 seconds.

STEP3 Press the [Device] button for the type of device you want to setup. Point the remote control toward the device and enter the 3-digit code number assigned to your brand.

STEP4 Press the [VOL ▲] button. The device LED will blink.

STEP5 Press [TV] button. The device LED will blink twice to confirm the programming.

L Programming a Macro' button.

If your remote model has custom-programmable Macro buttons available(See Section 4), they can be programmed to act as a 'Macro' or Favorite Channel button in CABLE mode. This allows you to program up to five 2-digit channels, four 3-digit channels or three 4-digit channels that can be accessed with one button press.

STEP1 Press the [CBL] button to select the CBL mode.

STEP2 Press the [MACRO] button and [OK/SEL] button simultaneously for 3 seconds. The [CBL] button will turn on for 30 seconds.

STEP3 Once you have found the correct 3-digit code, save it by pressing the [AUD] button one more time. The [AUD] LED light will blink twice to confirm the code was stored.

STEP4 Press the [CBL] button to select the CBL mode.

STEP5 Press the [MACRO] button and [OK/SEL] button simultaneously for 3 seconds. The [CBL] button will turn on for 30 seconds.

STEP6 Once you have selected the correct macro, point the remote control toward the equipment and enter the 3-digit code assigned to the macro.

STEP7 Press the [CBL] button. The device LED will blink twice to confirm the macro has been stored.

STEP8 Press the [CH ▲] button to store the channels that were selected. The [CBL] button will blink twice to confirm the storage of commands.

STEP9 To access the programmed channels, press the [MACRO] button once. This will bring up the first channel. Press once again and it will bring up the second channel. Press again and it will bring up the third channel.

Warning!

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

M RF Setting Method.(RF Frequency: 418MHz)

After installing the MRF-250C, press the [CBL] and [LIST] button simultaneously for 3 seconds. The [CBL] device LED will turn on indicating that it is ready to be programmed. The LED will remain on for 30 seconds.

To exit, press and hold both the [DEVICE] and [ASPECT] buttons simultaneously

FCC Caution

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following conditions:

(1) this device may not cause harmful interference,

(2) this device must accept any interference received,

including interference that may cause undesired operation.

Note : Install and select the ID # on the MRF-250C. (For further details, refer to the MRF-250C manual.) You can operate up to 15 different equipment locations, each with an MRF-250C unique Receiver ID #.

N Low Battery Warning

The antenna(s) used for this transmitter must not be co-

located or operating in conjunction with any other anten-

na or transmitter.

When the batteries are low and need to be replaced with fresh batteries, the Device LED lights will blink 2 times in

A Quick Set-Up Method

Turn on the equipment you want to program. To program your TV, turn on the TV.

STEP1 Point the remote at the component and press and hold the [DEVICE] key for 3 seconds until the Device LED blinks off and turns back on. Continue holding the [DEVICE] key and press the number keys, one at a time, starting with 1, then 2, 3... Stop pressing the number keys when the device turns off.

STEP2 Release the [DEVICE] key to save the code. The Device LED will blink twice to confirm the code is stored.

STEP3 Line up the PHAZR-5 to the remote control you want to "learn" from, head-to-head, 1 or 2 inches apart.

STEP4 Press the [Device] button for the type of device you want to setup. Point the remote control toward the device and enter the 3-digit code number assigned to your brand.

| TV | | TV | | TV-LCD & Plasma TVs | | TV-LCD & Plasma TVs | | TV-Projectors | | AUDIO | | DVD | | DVD-Blu-ray & HD DVD | | DVD-DVD/VCR Combos | | AUX-iPod Control | | |
|--------------------|-------------------------------------|--------------------|------------------------------------|---------------------|-------------------------------------|---------------------|-------------------------------------|--------------------|-------------------------------------|--------------------|-------------------------------------|--------------------|--------------------|----------------------|--------------------|--------------------|--------------------|--------------------|--------------------|--|
| Manufacturer/Brand | Set-Up Code Number | Manufacturer/Brand | Set-Up Code Number | Manufacturer/Brand | Set-Up Code Number | Manufacturer/Brand | Set-Up Code Number | Manufacturer/Brand | Set-Up Code Number | Manufacturer/Brand | Set-Up Code Number | Manufacturer/Brand | Set-Up Code Number | Manufacturer/Brand | Set-Up Code Number | Manufacturer/Brand | Set-Up Code Number | Manufacturer/Brand | Set-Up Code Number | |
| HARLEY DAVIDSON | 028 | NAD | 138 025 | SOVA | 041 | AQUAVISION | 573 574 | SAMPO | 363 242 | MARANTZ | 006 028 031 040 063 185 186 265 289 | CITIZEN | 020 | OPPO | 341 | GO VIDEO | 137 | APPLE / iPod | 824 828 | |
| HARVARD | 043 | | 2/2 197134 116 040 016 024 056 019 | NEC | 528 033 | SOYO | 477 | ASTAK | 258 228 229 | HITACHI | 492 712 719 | PANASONIC | 130 | PANASONIC | 285 346 | PANASONIC | 150 | BOSE | 827 | |
| HAVERMY | 081 | | 262 236 281 575 | NET TV | 242 | SPECTRONIQ | 112 | SANSUI | 096 400 615 | INFOCUS | 230 532 564 595 | CYBERHOME | 271 | ORION | 058 | DENON | 830 559 | DENON | 830 559 | |
| HELLO KITTY | 076 | | | NEXUS | 620 | SPECTRONIQ | 499 500 | AVION | 166 007 | MERIDIAN | 100 012 013 628 | DAEWOO | 132 | PIONEER | 304 354 | PHILIPS | 066 | PHILIPS | 066 | |
| HIMITSU | 043 | | | NIKEI | 043 | SQUAREVIEW | 052 | AXION | 199 533 | PANASONIC | 144 150 285 138 021 346 347 | PHILIPS | 066 | PARASOUND | 245 | PHILIPS | 066 | PHILIPS | 066 | |
| HISENSE | 419 442 619 | | | NIKKO | 116 | SSS | 363 043 | STARLITE | 251 363 | MARANTZ | 157 158 042 043 081 112 | NAKAMICHI | 154 | DIAMOND VISION | 037 038 039 | NAKAMICHI | 154 | GRiffin | 835 | |
| HITACHI | 011 166 009 010 012 023 075 143 158 | | | NIKO | 527 | SUNBRITE TV | 605 | SHARP | 281 562 584 | PHILIPS | 158 276 317 344 | SONY | 154 | YAMAHA | 164 | KENSINGTON | 825 | KENSINGTON | 825 | |
| HP | 072 363 250 587 613 | | | NORCENT | 390 | SUPERSCAN | 052 081 | SHERWOOD | 349 | PHILIPS | 164 276 317 344 | SONY | 154 | Yamaha | 164 | MARANTZ | 834 | MARANTZ | 834 | |
| HUMAX | 518 | | | NORWOOD MICRO | 027 | SUPRA | 116 | SONY | 349 | PHILIPS | 164 276 317 344 | SONY | 154 | ZENITH | 164 | ONKYO | 833 | ONKYO | 833 | |
| HYPERION | 609 | | | NTC | 103 | SUPRE MACY | 002 | SUPREMACY | 349 | PHILIPS | 164 276 317 344 | SONY | 154 | ZENITH | 164 | SONANCE | 831 | SONANCE | 831 | |
| HYUNDAI | 337 338 | | | NUVISION | 351 567 | SVA | 328 | SVA | 328 | PHILIPS | 164 276 317 344 | SONY | 154 | | | | | | | |
| ILO | 472 399 | | | OLEVIA | 432 363 333 | SYLVANIA | 116 003 052 059 060 164 044 333 127 | SYLVANIA | 116 003 052 059 060 164 044 333 127 | PHILIPS | 164 276 317 344 | SONY | 154 | | | | | | | |
| INFINITY | 164 | | | ONKING | 043 | SYNTHONIC | 514 593 | SYNTHONIC | 514 593 | PHILIPS | 164 276 317 344 | SONY | 154 | | | | | | | |
| INFOCUS | 333 230 547 548 70 532 564 595 | | | ONWA | 043 | SYNTAX OLEVIA | 432 363 333 | TANDY | 251 | PHILIPS | 164 276 317 344 | SONY | 154 | | | | | | | |
| INITIAL | 035 282 | | | OPTIMUS | 025 | TECHNICS | 034 080 | TATUNG | 056 | PHILIPS | 164 276 317 344 | SONY | 154 | | | | | | | |
| INSIGNIA | 350 400 052 164 403 454 457 604 617 | | | OPTOMA | 265 249 | TECHNOL ACE | 028 | TECHVIEW | 045 557 | PHILIPS | 164 276 317 344 | SONY | 154 | | | | | | | |
| INTEQ | 073 | | | OPTONICA | 019 251 | TECHWOOD | 363 | TELEFUNKEN | 037 046 615 | PHILIPS | 164 276 317 344 | SONY | 154 | | | | | | | |
| JANEL | 002 | | | ORION | 096 | TELEUR | 072 | TELEFUNKEN | 037 046 615 | PHILIPS | 164 276 317 344 | SONY | 154 | | | | | | | |
| JBL | 164 | | | PANASONIC | 080 034 056 164 208 359 552 524 607 | TELENET | 072 | TELENET | 072 | PHILIPS | 164 276 317 344 | SONY | 154 | | | | | | | |
| JCB | 001 | | | PHILCO | 116 003 059 060 164 363 024 056 | TERA | 172 | TERA | 172 | PHILIPS | 164 276 317 344 | SONY | 154 | | | | | | | |
| JCPENNEY | 024 116 008 009 030 065 258 143 333 | | | PHILIPS | 164 005 093 038 116 003 363 059 127 | THOMSON | 049 055 | THOMSON | 049 055 | PHILIPS | 164 276 317 344 | SONY | 154 | | | | | | | |
| JENSEN | 013 | | | PILOT | 116 | THOMSON | 337 338 | THOMSON | 337 338 | PHILIPS | 164 276 317 344 | SONY | 154 | | | | | | | |
| JVC | 038 034 001 083 199 210 533 581 | | | PIONEER | 234 135 025 018 023 116 393 272 520 | TIKON | 073 | TIKON | 073 | PHILIPS | 164 276 317 344 | SONY | 154 | | | | | | | |
| KAWASHO | 116 001 | | | POLAROID | 388 323 328 353 354 355 356 494 387 | TOLEVISION | 143 | TOLEVISION | 143 | PHILIPS | 164 276 317 344 | SONY | 154 | | | | | | | |
| KEC | 043 | | | PORLAND | 391 505 506 508 | TRUTECH | 529 | TRUTECH | 529 | PHILIPS | 164 276 317 344 | SONY | 154 | | | | | | | |
| KENWOOD | 116 001 | | | PORTLAND | 363 143 143 154 | UNIVERSAL | 008 009 | UNIVERSAL | 008 009 | PHILIPS | 164 276 317 344 | SONY | 154 | | | | | | | |
| KLEGG | 466 | | | PROX | 572 | VIDEO CONCEPTS | 146 | VIDEO CONCEPTS | 146 | PHILIPS | 164 276 317 344 | SONY | 154 | | | | | | | |
| KMC | 002 059 | | | PULSAR | 116 073 | VICTOR | 038 | VICTOR | 038 | PHILIPS | 164 276 317 344 | SONY | 154 | | | | | | | |
| KONKA | 143 | | | QUASAR | 034 056 606 | VIDIKRON | 174 164 188 192 342 | VIDEKRON | 174 164 188 192 342 | PHILIPS | 164 276 317 344 | SONY | 154 | | | | | | | |
| KREISEN | 530 | | | RADIO SHACK | 019 363 143 043 127 | VIDECH | 363 | VIDECH | 363 | PHILIPS | 164 276 317 344 | SONY | 154 | | | | | | | |
| KTV | 043 116 143 154 | | | RCA | 333 065 116 363 024 056 152 023 074 | VIEWSONIC | 242 389 | VIEWSONIC | 242 389 | PHILIPS | 164 276 317 344 | SONY | 154 | | | | | | | |
| KURAZAI | 072 | | | REALISTIC | 007 019 043 047 | VIKING | 002 | VIKING | 002 | PHILIPS | 164 276 317 344 | SONY | 154 | | | | | | | |
| LG | 363 113 116 102 106 112 127 143 569 | | | REVOLUTION HD | 466 | Wards | 363 008 019 028 060 061 072 074 | Wards | 363 008 019 028 060 061 072 074 | PHILIPS | 164 276 317 344 | SONY | 154 | | | | | | | |
| LITEON | 268 | | | RUNCO | 182 073 395 416 072 342 | WEBCAM | 015 | WEBCAM | 015 | PHILIPS | 164 276 317 344 | SONY | 154 | | | | | | | |
| LODGENET | 072 | | | SAMPO | 116 058 363 242 | WIECON | 076 276 435 001 280 | WIECON | 076 276 435 001 280 | PHILIPS | 164 276 317 344 | SONY | 154 | | | | | | | |
| LOEWE | 164 | | | SAMSUNG | 258 050 089 105 363 127 143 333 228 | WINBOOK | 339 | WINBOOK | 339 | PHILIPS | 164 276 317 344 | SONY | 154 | | | | | | | |
| LOGIK | 072 | | | MAJESTIC | 333 072 | YAMAHA | 116 363 370 | YAMAHA | 116 363 370 | PHILIPS | 164 276 317 344 | SONY | 154 | | | | | | | |
| LUXMAN | 363 | | | MARANTZ | 116 164 281 562 584 | YAP | 043 | YAP | 043 | PHILIPS | 164 276 317 344 | SONY | 154 | | | | | | | |
| LXI | 166 007 138 052 251 333 164 | | | MARANTZ | 116 164 281 562 58 | | | | | | | | | | | | | | | |