

### **13. Caution on LCD Screen**

Please note that the LCD screen is a breakable glass. Please use necessary caution in handling LCD screen.

### **14. Memory Lock**

The MX-1000 has an internal memory lock system that retains all the programs and learned functions for the extended period.

### **15. Erasing all the Programs**

Pressing the button shown through the opening in the battery compartment after removing the batteries from the MX-1000 will erase all the programs in the remote control.

### **16. Warranty**

We guarantee MX-1000 against any manufacturer defects for one year from the date of purchase.

# 17. Specifications

**Operating range**

40 ft ~ 60ft, depending upon components.

**Power requirements**

Four size AA batteries

**Battery life**

About 4 months

**Weight**

7.38 Oz (not including batteries)

**Dimensions**

8.9" x 3.0" x 1.5" (W x H x D)

Programmed Code Numbers:

AUDIO	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
TUNER	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
CD	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
DVD	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
LD	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
TAPE	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
SAT	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
CABLE	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
TV	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
VCR1	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
VCR2	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
AUX	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>

# 18. Appendix

A. Set up Function Table

B. Set up code table

# Set-Up Function Table

## AUDIO

Button Name		Audio Functions
Device Name		Audio(On)
POWER		On/Off (Off)
CH UP		Preset+
CH DOWN		Preset -
VOL UP		Volume Up
VOL DOWN		Volume Down
MUTE		Mute
PRE. CH		
PLAY		
STOP		
REW		
F.F		
CURSOR ENTER		
CURSOR UP		
CURSOR DOWN		
CURSOR LEFT		
CURSOR RIGHT		
Page 1	TUNER	Tuner
	CD	CD
	DVD	DVD
	LDP	LD
	VCR 1	VCR 1
	VCR 2	VCR 2
	TV	TV
	SAT	SAT
	AUX	AUX
	TAPE 1	TAPE 1
	TAPE 2	TAPE 2
	PHONO	Phono
	Page 2	VCR 3
DAT		DAT
CATV		CATV
AM		AM
FM		Band / FM
SLEEP		Sleep
PROLOGIC		Pro. Logic
3.CH		3 Ch
TEST	Test Tone	
MENU	Menu	

Button Name		Audio Functions
Page 3	GUIDE	Guide
	EXIT	Exit
	1	1
	2	2
	3	3
	4	4
	5	5
	6	6
	7	7
	8	8
	9	9
	0	0
	+10	+10
SHIFT	Shift	
Page 4	SURR	Surround
	CNTR	Center
	DELAY	Delay
	REAR UP	Rear +
	REAR DOWN	Rear -
	CNTR UP	Center +
	CNTR DOWN	Center -
DELAY UP	Delay +	
DELAY DOWN	Delay -	

Note: TUNER functions are same as AUDIO device.

# Set-Up Function Table

## SATELLITE

Button Name		SAT Functions
Device Name		SAT(On)
POWER		On/Off (Off)
CH UP		Channel Up
CH DOWN		Channel Down
VOL UP		Volume Up
VOL DOWN		Volume Down
MUTE		Mute
PRE. CH		Prev. Ch.
PLAY		
STOP		
REW		
F.F		
CURSOR ENTER		Select
CURSOR UP		Up
CURSOR DOWN		Down
CURSOR LEFT		Left
CURSOR RIGHT		Right
Page 1	1	1
	2	2
	3	3
	4	4
	5	5
	6	6
	7	7
	8	8
	9	9
	0	0
INPUT		TV/SAT
ENTER		Enter
Page 2	MENU	Menu
	GUIDE	Guide
	EXIT	Exit/Cancel
	INFO	Info
	FAV.CH	Fav.
	ACTION	Action
	ALPHA	Alpha
	NEXT	Next Prog.
VIEW	View	
ALT AUDIO	Alt.Audio	

Button Name		SAT Functions
	REC	Rec.
	FETCH	Fetch
Page 3	FAV1	
	FAV2	
	FAV3	
	FAV4	
	FAV5	
	FAV6	
FAV7		
FAV8		
Page 4	FAV9	
	FAV10	
	FAV11	
	FAV12	
	FAV13	
	FAV14	
FAV15		
FAV16		

# Set-Up Function Table

## TV

Button Name	TV Functions	
Device Name	TV(On)	
POWER	On/Off (Off)	
CH UP	Channel Up	
CH DOWN	Channel Down	
VOL UP	Volume Up	
VOL DOWN	Volume Down	
MUTE	Mute	
PRE. CH	Q.View/Last Ch.	
PLAY		
STOP		
REW		
F.F		
CURSOR ENTER	Select	
CURSOR UP	Up	
CURSOR DOWN	Down	
CURSOR LEFT	Left	
CURSOR RIGHT	Right	
Page 1	1	1
	2	2
	3	3
	4	4
	5	5
	6	6
	7	7
	8	8
	9	9
	0	0
	100	100
	ENTER	Enter
Page 2	MENU	Menu
	DISPLAY	Display/Recall
	EXIT	Exit/Clear
	TV/VCR	TV/Video
	TV/CATV	TV/Catv
	INPUT	Ant
	SLEEP	Sleep
	CC	Caption
CH. SCAN	Ch. Scan	
AUDIO	Audio	

Button Name	TV Functions	
PICTURE	Picture	
RESET-STD	Reset	
AUTO. CH	Auto	
ADD	Add	
DELETE	Delete	
PIP ON	Pip On	
PIP OFF	Pip Off	
Page 3	SWAP	Swap
	FREEZE	Freeze
	POSITION	Position
	K1	
	K2	
	K3	
Page 4	FAV1	
	FAV2	
	FAV3	
	FAV4	
	FAV5	
	FAV6	
	FAV7	
	FAV8	

# Set-Up Function Table

## VCR

Button Name	VCR1,2 Functions	
Device Name	VCR(On)	
POWER	On/Off (Off)	
CH UP	Channel Up	
CH DOWN	Channel Down	
VOL UP	Volume Up	
VOL DOWN	Volume Down	
MUTE	Mute	
PRE. CH		
PLAY	Play	
STOP	Stop	
REW	Rewind	
F.F	Fast Forward	
CURSOR ENTER		
CURSOR UP		
CURSOR DOWN		
CURSOR LEFT		
CURSOR RIGHT		
Page 1	1	1
	2	2
	3	3
	4	4
	5	5
	6	6
	7	7
	8	8
	9	9
	0	0
100	1-100	
ENTER	Enter	
Page 2	PAUSE	Pause
	X2	x2
	REC	Record
	SRCH-	Search-
	SRCH+	Search+
	F. ADV	F. Adv
	SLOW-	Slow-
	SLOW+	Slow+
SLOW	Slow	
V/T	Vcr/Tv	

Button Name	VCR1,2 Functions	
INPUT	Input	
VCR+	Vcr Plus	
Page 3	MENU-PGM	Program
	DISPLAY	Display
	AUDIO MONITOR	Audio Monitor
	COUNTER	C-Counter
	RESET	Reset
	CLEAR	Clear
	INDEX	Index
	INDEX MARK	Index Mark
	INDEX ERASE	Index Erase
	TAPE SPEED	Tape Speed
TIMER-REC	Timer Rec	
EJECT	Eject	
Page 4	AUTO TRK	Auto Tracking
	TRK-	Tracking-
	TRK+	Tracking+
	AUTO CH	Auto Ch
	ADD	Add+
	DELETE	Delete-
	EDIT	Edit
	QTR ON	Qtr On
	QTR OFF	Qtr Off
	K1	
K2		

# Set-Up Function Table

## CABLE

Button Name	Cable Functions	
Device Name	Cable(On)	
POWER	On/Off (Off)	
CH UP	Channel Up	
CH DOWN	Channel Down	
VOL UP	Volume Up	
VOL DOWN	Volume Down	
MUTE	Mute	
PRE. CH	Prev. Ch.	
PLAY		
STOP		
REW		
F.F		
CURSOR ENTER	Select	
CURSOR UP	Up	
CURSOR DOWN	Down	
CURSOR LEFT	Left	
CURSOR RIGHT	Right	
Page 1	1	1
	2	2
	3	3
	4	4
	5	5
	6	6
	7	7
	8	8
	9	9
	0	0
INPUT	Switch/A/B	
ENTER	Enter/Memory	
Page 2	MENU	Menu
	GUIDE	Guide/Recall
	EXIT	Exit
	INFO	Info
	FAV	Fav
	PPV	Ppv/Buy
	PAGE-	Page-
	PAGE+	Page+
	BYPASS	Bypass
DAY-	Day-	

Button Name	Cable Functions
DAY+	Day+
HELP	*/Help
A	P/Delete
B	
C	
REW	
PLAY	
F.F	
PAUSE	
STOP	
REC	Record
FAV1	
FAV2	
FAV3	
FAV4	
FAV5	
FAV6	
FAV7	
FAV8	
FAV9	
FAV10	
FAV11	
FAV12	
FAV13	
FAV14	

# Set-Up Function Table

## DVD

Button Name	DVD Functions		
Device Name	DVD(On)		
POWER	On/Off (Off)		
CH UP	Skip >>		
CH DOWN	Skip <<		
VOL UP			
VOL DOWN			
MUTE			
PRE. CH			
PLAY	Play		
STOP	Stop		
REW	Rew		
F.F	FF		
CURSOR ENTER	Select		
CURSOR UP	Up		
CURSOR DOWN	Down		
CURSOR LEFT	Left		
CURSOR RIGHT	Right		
Page 1	1	1	
	2	2	
	3	3	
	4	4	
	5	5	
	6	6	
	7	7	
	8	8	
	9	9	
	0	0	
	+10	+10	
	ENTER	Enter	
	Page 2	PAUSE	Pause
		OPEN/CLOSE	Open/Close
PROGRAM		Program	
DISPLAY		Display	
REPEAT		Repeat	
A-B		A/B Repeat	
SUB ON/OFF		Sub. On/Off	
SUB CHANGE	Subtitle		
MENU	Menu		

Button Name	DVD Functions	
SET-UP	Setup	
CLEAR	Clear	
Page 3	ANGLE CHANGE	Angle
	RANDOM	Random
	RETURN	Return
	AUDIO CHANGE	Audio
	TITLE	Title
	SHUFFLE	Shuffle
	TIME	T
	MEMORY	Memory
	SLOW	Slow
	K1	
Page 4	K2	
	K3	
	K4	
	K5	
	K6	
	K7	
	K8	
	K9	
	K10	
	K11	
	K12	
	K13	
	K14	



# Set-Up Function Table

## CD

Button Name		CD Functions
Device Name		CD(On)
POWER		On/Off (Off)
CH UP		Track + / Skip +
CH DOWN		Track - / Skip -
VOL UP		Volume Up
VOL DOWN		Volume Down
MUTE		Mute
PRE. CH		
PLAY		Play
STOP		Stop
REW		Rew/Search -
F.F		FF/Search +
CURSOR ENTER		
CURSOR UP		
CURSOR DOWN		
CURSOR LEFT		
CURSOR RIGHT		
Page 1	1	1
	2	2
	3	3
	4	4
	5	5
	6	6
	7	7
	8	8
	9	9
	0	0
	+10	+10
	DISC	Disc
	Page 2	PAUSE
EJECT		Eject
PROGRAM		Program
DISPLAY		Display
CLEAR		Clear
REPEAT		Repeat
A-B		A-B
INTRO	Intro	
TIME	Time	

Button Name		CD Functions	
Page 3	FADER	Fader	
	EDIT	Edit	
	DISC1	Disc1	
	DISC2	Disc2	
	DISC3	Disc3	
	DISC4	Disc4	
	DISC5	Disc5	
	DISC6	Disc6	
	K1	Search -	
	K2	Random	
	K3	Search +	
	K4		
	K5		
	K6		
	Page 4	K7	
		K8	
K9			
K10			
K11			
K12			
K13			
K14			
K15			
K16			

# Set-Up Function Table

## LASER DISC

Button Name	LD Functions	
Device Name	LD(On)	
POWER	On/Off (Off)	
CH UP	Track + / Skip +	
CH DOWN	Track - / Skip -	
VOL UP	Volume Up	
VOL DOWN	Volume Down	
MUTE	Mute	
PRE. CH		
PLAY	Play	
STOP	Stop	
REW	Rew/Search -	
F.F	FF/Search +	
CURSOR ENTER		
CURSOR UP		
CURSOR DOWN		
CURSOR LEFT		
CURSOR RIGHT		
Page 1	1	1
	2	2
	3	3
	4	4
	5	5
	6	6
	7	7
	8	8
	9	9
	0	0
	+10	+10
	DISP	Display
	Page 2	PAUSE
OPEN/CLOSE		Open/Close
STILL/STEP-		Search -
STILL/STEP+		Search +
PROGRAM		Program
REPEAT		Repeat
ALL		All
A-B	A-B	
SHUFFLE	Shuffle	

Button Name	LD Functions	
FRAME/TIME	Frame	
CLEAR	Clear	
Page 3	AUTO PGM	Auto Program
	DISC A	Disc A
	DISC B	Disc B
	AUDIO MONITOR	Audio Monitor
	ANALOG	Analog
	BACK	Back
	AV TIME	Time
	PICTURE CHANGE	Picture Change
	INTRO	Intro
	K1	Random
	K2	Disc
K3		
Page 4	K4	Disc1
	K5	Disc2
	K6	Disc3
	K7	Disc4
	K8	Disc5
	K9	Edit
	K10	
	K11	
	K12	
	K13	
	K14	

# Set-Up Function Table

## TAPE

Button Name		Tape Functions
Device Name		Tape(On)
POWER		On/Off (Off)
CH UP		
CH DOWN		
VOL UP		
VOL DOWN		
MUTE		
PRE. CH		<DECK A>
PLAY		Play
STOP		Stop
REW		Rew
F.F		FF
CURSOR ENTER		
CURSOR UP		
CURSOR DOWN		
CURSOR LEFT		
CURSOR RIGHT		
Page 1	DECK A-R PLAY	Rev. Play
	DECK A-PAUSE	Pause
	DECK A-REC	Record
	DECK A-REC MUTE	Rec. Mute
	DECK A	Deck A
	DECK B	Deck B
Page 2	DECK B-R PLAY	Rev. Play
	DECK B-PLAY	For.Play
	DECK B-REW	Rew
	DECK B-F.F	FF
	DECK B-PAUSE	Pause
	DECK B-STOP	Stop
	DECK B-RECORD	Record

Button Name		Tape Functions
	DECK B-REC MUTE	Rec. Mute
Page 3	K1	
	K2	
	K3	
	K4	
	K5	
	K6	
	K7	
	K8	
	K9	
	K10	Deck A
	K11	
	K12	Deck B
Page 4	K13	
	K14	
	K15	
	K16	
	K17	
	K18	
	K19	
	K20	
	K21	
	K22	
	K23	

# Set-Up Function Table

## AUX

Button Name		AUX Functions
Device Name		AUX(On)
POWER		On/Off (Off)
CH UP		Up
CH DOWN		Down
VOL UP		
VOL DOWN		
MUTE		
PRE. CH		
PLAY		
STOP		
REW		
F.F		
CURSOR ENTER		
CURSOR UP		
CURSOR DOWN		
CURSOR LEFT		
CURSOR RIGHT		
Page 1	1	1
	2	2
	3	3
	4	4
	5	5
	6	6
	7	7
	8	8
	9	9
	0	0
DISP		Disp
ENTER		Enter
Page 2	K1	
	K2	
	K3	
	K4	
	K5	
	K6	
	K7	
	K8	
	K9	
	K10	

Button Name		AUX Functions
Page 3	K11	
	K12	
	K13	
	K14	
	K15	
	K16	
	K17	
	K18	
	K19	
	K20	
Page 4	K21	
	K22	
	K23	
	K24	
	K25	
	K26	
	K27	
	K28	
	K29	
	K30	
	K31	
	K32	
	K33	
	K34	
	K35	

# Set-Up Code Table

## AUDIO

Manufacturer/Brand	Set-Up Code Number
ADC	007
ADCOM	082 092 225 161 269
AIWA	018 104 170 202 203 213 211 188
AKAI	138 189
AMC	125 126 127 128 258 281 282
AMEND	054
AMX	196
ANGSTROM	142
ARCAM	141
AUDIO ACCESS	147
AUDIO ALCHEMY	135
AUDIO DESIGN	194 221 011
AUDIO EASE	021 196 207
AUDIO FILE	071
AUDIO MATRIX	167
AUDIO SOURCE	273
AUDIO TECHNICA	134
B & K	096 097
BOSE	070 170 224
BRYSTON	023
CARVER	006 028 061 071 201 214 226 180 185 022 029 077 284
CASIO	076
CHIRO	140
CINEMA SOUND	034 134
CITATION	148 272
CLARION	026
CURTIS MATHES	076
DENON	002 034 109 215 229 230 027 037 234 259
EIGER	149
ELAN	057
ENLIGHTENED AUDIO	099 098
FISHER	047 214 180 182
FOSGATE	062 231
GE	056 260
GOLDSTAR	008
HAFLER	174
HARMAN KARDON	231 233 254 153 154 118 121 227 277
HITACHI	020
INKEL	197
JBL	263
JCPENNY	076 216
JEFF ROWLAND	206
JENSEN	058
JVC	240 163 191 114 266 279
KENWOOD	026 066 145 146 181 190 197 192 182 199 151 222 180 005 280
KINERGETICS	220 140
KOSS	216
KRELL	150 072
KYOCERA	007
LEXICON	120 235 236 237
LINN	124
LUXMAN	137 139 052 165 115 004 009
LXI	076 056
MAGNAVOX	086 164 152 208
MARANTZ	006 028 031 040 063 185 186 251 265
MCINTOSH	238
MCS	076
MERIDIAN	100 012 013
MITSUBISHI	242 243 204
MONDIAL	157 158 042 043 081 112
MYRYAD	276
NAD	186 113 283

# Set-Up Code Table

## AUDIO

Manufacturer/Brand	Set-Up Code Number
NAKAMICHI	111 244 245 172 183
NEC	176
ONKYO	017 046 064 107 108 187 079 080 090 179 209 270 275
OPTIMUS	026 041 138
PANASONIC	032 195 219 177
PARASOUND	129 130 132 261
PHAST	196
PHILIPS	249 250 251 063
PIONEER	014 033 039 044 045 050 069 159 168 116 035 078 198
PROCEED	144 268
RCA	010 048 117 156 067
REALISTIC	019 056 073 075 095
REVOX	162
ROTEL	074 083 085
SAMSUNG	016
SANSUI	040 048 110 119 065 228
SANYO	047 059
SCOTT	019 091
SEARS	076
SHARP	026 094 131 175 181
SHERWOOD	024 038 055 102 103 105 106 051 030
SONY	018 093 223 247 248 160 166 015 101 184 218 271
SOUNDESIGN	036
SOUNDSTREAM	084 088
SSI	068
SUMO	171
TAEKWANG	138
TEAC	005 019 049 111 212 217
TECHNICS	122 176 193 219 178 177 200 257 262
THETA DIGITAL	136
TOSHIBA	060 087 198 278
WARDS	180
YAMAHA	026 253 169 067 173 205 264 232 089 264 274 285
ZENITH	143 210

# Set-Up Code Table

SAT

Manufacturer/Brand	Set-Up Code Number
ALPHASTAR	123
AMPLICA	050
BIRDVIEW	129 113 051 126
BSR	053
CAPETRONICS	053
CHANNEL MASTER	013 014 015 018 036 055
CHAPARRAL	008 009 012 077
CITOH	054
CURTIS MATHES	050
DRAKE	005 006 007 010 011 112 116 141 052
DX ANTENNA	024 046 056 076
ECHOSTAR	038 040 057 058 093 094 095 096 097 098 099 100 122
ELECTROHOME	089
EUROSAT	114
FUJITSU	017 021 022 027 133 134
GENERAL ELECTRIC	151 106 150
GENERAL INSTRUMENT	003 004 016 029 031 059 101 148
HITACHI	139 140
HOME CABLE	080 044 029
HOUSTON TRACKER	033 037 039 104 057 051
HUGHES	068 154
HYTEK	053
HYUNDAI	149
ICR	023
JANIEL	060 147
KATHREIN	108
LEGEND	057
LUTRON	132
LUXOR	144 062
MACOM	010 059 063 064 065
MEMOREX	057
NEXTWAVE	028 124 125
NORSAT	069 070
PACE	143
PANASONIC	142 060
PANSAT	121
PERSONAL CABLE	117
PHILIPS	071 152 153
PL	023 026
PRESIDENT	019 102
PRIMESTAR	110 030
PROSAT	072
PROSCAN	151 106 150
RCA	151 106 150
REALISTIC	043 074
SAMSUNG	123
SATELLITE SERVICE	028 035 047 085
SONY	103
STARCAST	041
SUPERGUIDE	020 124 125
TEECOM	023 026 075 087 088 090 107 130 137
TOSHIBA	002 127
TOWN & COUNTRY	023 026
UNIDEN	016 025 042 043 044 045 048 049 078 079 080 086 101 135 136
VIEWSTAR	115
WINEGARD	128 146
ZENITH	081 082 083 084 091 120

# Set-Up Code Table

TV

Manufacturer/Brand	Set-Up Code Number
ADMIRAL	072 081 161 160
AKAI	197 146
AMARK	112 143
AMPRO	073 167 157 183
AMSTRAD	052
ANAM	043 054 056 080 112 131
AOC	197 004 112 058
AUDIOVOX	076
BLAUPUNKT	088
CAIRN	201
CANDLE	197 002 003 004
CAPEHART	058
CETRONIC	043
CITIZEN	197 002 003 004 043 101 103 143
CLASSIC	043
CONCERTO	004
CONTEC	043 050 051
CORONADO	143
CRAIG	043 054
CROWN	043 143
CURTIS MATHES	197 101 004 143
CXC	043
DAEWOO	004 016 043 044 076 103 114 125 127 143
DAYTRON	004 143
DWIN	177
DYNASTY	043
DYNATECH	062
EIKI	187
ELECTROHOME	024 076 143 196
EMERSON	197 004 005 028 043 047 048 050 051 076 096 143 151 153 154 155
FISHER	007 057
FUJITSU	198
FUNAI	028 043
FUTURETECH	043
GE	197 008 009 034 056 073 074 130 144 155 160 161 165 004 091 157 183
GOLDSTAR	004 102 106 112 113 116 119 127 143
HALL MARK	004
HITACHI	004 009 010 011 012 023 075 143 158 163 166 072
INFINITY	164
JBL	164
JCPENNY	197 004 008 009 024 030 065 101 143 156 160
JENSEN	013
JVC	034 038 070 083 145 199
KEC	043
KENWOOD	197 070
KLOSS	002 059
KMC	143
KTV	197 043 143 154
LODGENET	072
LOGIK	072
LUXMAN	004
LXI	166 007 015 052 081 160 164
MAGNAVOX	197 003 004 022 059 060 061 063 064 127 160 164 094
MARANTZ	197 164
MATSUI	164
MEMOREX	007 072 004
METZ	088
MGA	197 004 024 028 042
MINERVA	088
MITSUBISHI	004 024 028 040 042 109 124 146 191
MTC	197 004 062 101



# Set-Up Code Table

TV

Manufacturer/Brand	Set-Up Code Number
NAD	015 025
NEC	132 130 134 197 040 016 024 056 019
NIKEI	043
ONKING	043
ONWA	043
OPTONICA	019 081
ORION	096
PANASONIC	034 056 080 092 164
PHILCO	197 003 024 056 059 060 063 064 164 004
PHILIPS	197 003 004 005 038 059 093 164 127
PIONEER	197 018 023 025 116 135 190
PORTLAND	004 143
PROSCAN	144 160 161 165 167
PROTON	004 058 131 143 171 173 193
QUASAR	034 056 092
RADIO SHACK	019 043 143 004 127
RCA	160 161 165 065 156 144 197 004 023 024 056 074 152
REALISTIC	007 019 043 047
ROCTEC	186
RUNCO	168 169 178 179 180 181 182 183 073 157
SAMPO	197 058 004 202
SAMSUNG	004 050 089 101 105 127 143 160
SANYO	166 007 020 053 057 082 187
SCOTT	004 028 043 048 143
SEARS	015 030 004 007 028 057 143 094 160 082 165 166
SELECO	189 200
SHARP	170 081 019 028 029 014 004 022 143 175
SIEMENS	088
SIGNATURE	072
SONY	070 085 139 147 126 185 194
SOUNDESIGN	004 028 003 043
SPECTRICON	112
SSS	004 043
SUPRE MACY	002
SYLVANIA	197 003 059 060 063 064 164 044 160 127
TANDY	081
TATUNG	056 062
TECHNICS	034 080
TECHWOOD	004
TEKNIKA	002 003 004 024 028 043 072 101 143
TELEFUNKEN	037 046 086 087
TELERENT	072
TERA	172
TMK	004
TOSHIBA	007 015 030 040 062 101 138
TOTEVISION	143
UNIVERSAL	008 009
VIDEO CONCEPTS	146
VIDIKRON	174 184 188 192
VIDTECH	004
WARDS	004 008 009 019 028 060 061 063 064 072 074 143 164 034
WESTING HOUSE	076
YAMAHA	197 004
YORK	004
YUPITERU	043
ZENITH	072 073 095 103 157 183
ZONDA	112

# Set-Up Code Table

VCR1

Manufacturer/Brand	Set-Up Code Number
AIWA	034 161
AKAI	016 043 046 124 125 142 146
AMPRO	072
ANAM	031
AUDIO DYNAMICS	012 023 039 043
BROOKSONIC	035 037 129
CANON	028 031
CAPEHART	108
CRAIG	003 040 135
CURTIS MATHES	031 041
DAEWOO	005 007 010 065 108 110 111 112 116 117 119
DAYTRON	108
DBX	012 023 039 043
DYNATECH	034 053
ELECTROHOME	059
EMERSON	006 017 025 027 029 031 034 035 036 037 046 101 129 131 138 153 162 116
FISHER	003 008 009 010
FUNAI	034
GE	031 063 072 107 109 144 147
GO VIDEO	132 136 155 040 115
GOLDSTAR	012 013 020 101 106 114 123
HARMAN KARDON	012 045
HITACHI	004 018 026 034 043 063 137 150 160 013
INSTANTREPLAY	031
JCL	031
JCPENNY	012 013 015 040 066 101
JENSEN	043
JVC	012 031 043 048 050 055 060 130 150 152
KENWOOD	014 048 034 047
LLOYD	034
LXI	003 009 017 034 106
MAGIN	040
MAGNAVOX	031 034 041 067 068 156 164
MARANTZ	012 031 067 069
MARTA	101
MATSUI	027 030
MEI	031
MEMOREX	003 010 014 031 034 053 072 101 102 134 139
MGA	045 046 059
MINOLTA	013 020
MITSUBISHI	013 020 045 046 051 059 061 142 151 049
MTC	034 040
MULTITECH	024 034
NEC	012 023 039 043 048
NORDMENDE	043
OPTONICA	053 054
ORION	025
PANASONIC	066 070 083 133 140 145 157 163 074
PENTAX	013 020 031 063
PHILCO	031 034 067
PHILIPS	031 034 054 067 071 101
PILOT	101
PIONEER	013 021 048
PORTLAND	108
PULSAR	072
QUARTZ	002 014
QUASAR	066 145 075
RADIO SHACK	123
RCA	013 020 041 107 109 140 144 145 147 034 040 158
REALISTIC	003 008 010 014 031 034 040 053 054 101
RICO	058

# Set-Up Code Table

VCR1

Manufacturer/Brand	Set-Up Code Number
RUNCO	148
SALORA	014
SAMSUNG	032 040 066 102 104 107 109 112 113 115 120 122 125
SANSUI	022 043 048 135
SANYO	003 007 010 014 134 102
SCOTT	017 037 112 129 131
SEARS	003 008 009 010 013 014 081 101 017 073 112
SHARP	031 054 149 159 165
SHINTOM	024
SIGNATURE	034
SONY	003 031 052 056 057 058 076 077 078 149 154
SOUNDESIGN	034
STS	013
SYLVANIA	031 034 059 067
SYMPHONIC	034
TANDY	010 034
TATUNG	039 043
TEAC	034 039 043
TECHNICS	031 070
TEKNIKA	019 031 034 101
THOMAS	034
TMK	006
TOSHIBA	008 013 042 047 059 079 082 112 131 081
TOTEVISION	040 101
UNITECH	040
VECTOR RESEARCH	012
VICTOR	048
VIDEO CONCEPTS	012 034 046 141
VIDEOSONIC	040
WARDS	003 013 017 024 031 034 040 053 054 131
YAMAHA	012 034 039 043
ZENITH	034 048 056 058 072 080 101

# Set-Up Code Table

## CABLE

Manufacturer/Brand	Set-Up Code Number
ABC	103 003 004 039 042 046 053
AMERICAST	099
ANTRONIX	014
ARCHER	005 007 014
BELL SOUTH	099
CENTURION	092
CENTURY	007
CITIZEN	007
COMBANO	080 081
COMSAT	074
COMTRONICS	030
DIGICABLE	101
EAGLE	020 030 040
EASTERN	057 066
ECHOSTAR	106
ELECTRICORD	032
GEMINI	008 054
GENERAL ELECTRIC	072
GENERAL INSTRUMENT	103 074 104
GNC	099
GOLDEN CHANNEL	030
HAMLIN	049 050 055
HITACHI	103 055
JERROLD	103 002 003 004 008 009 010 069 074
MAGNAVOX	010 012 064 079 095 094
MEDIA ONE	107
MEMOREX	052
MITSUBISHI	102
M-NET	037
MOVIE TIME	028 032
NOVAPLEX	092
NSC	015 028 038 071
OAK	031 037 053
PANASONIC	044 047
PARAGON	052
PHILIPS	006 012 013 020 085 095
PIONEER	103 034 051 063 076 105
PRUCER	059
PTS	011 071 074
PULSAR	052
RCA	047
RECOTON	098
REGAL	049 050
REGENCY	057
SAMSUNG	030
SCIENTIFIC ATLANTA	003 011 041 042 043 045 046
SIGNAL	030
SIGNATURE	103
SL MARX	030
SONY	096
SPRUCER	047 078
STARCOM	002 004 008 009
STARGATE	008 030 097 104
TADIRAN	030
TIME WARNER	043
TOCOM	039 040 056
TOSHIBA	052
UNIKA	007 014
UNITED CABLE	004 053
UNIVERSAL	005 007 014 032 035
VIEWSTAR	012 015 018 086 087 088 089
ZENITH	052 060 093 100

# Set-Up Code Table

DVD

Manufacturer/Brand	Set-Up Code Number
APEX DIGITAL	087
DENON	007 080
GE	026 027
HARMAN KARDON	084
JVC	012
LG	091 057 074
MAGNAVOX	066
MARANTZ	083
MITSUBISHI	017
NAD	088
ONKYO	076 035
PANASONIC	021 042
PHILIPS	066
PIONEER	023 092
PROCEED	086
PROSCAN	026 027
RCA	026 027
SAMSUNG	056 070
SHARP	094
SONY	033
THETA DIGITAL	032
THOMPSON	026 027
TOSHIBA	035 034
YAMAHA	042 089
ZENITH	057 074 091

# Set-Up Code Table

CD

Manufacturer/Brand	Set-Up Code Number
ADCOM	062 042
AIWA	059 065 088 089 105 122 170 187
AKAI	085 195 202
AMC	231 232
AMEND	118
ARCAM	238
AUDIO ACCESS	119 147
AUDIO EASE	165
AUDIO TECHNICA	046
BSR	037 057
CALIFORNIA AUDIO	103 008
CAPETRONIC	063
CARRERA	057 080
CARVER	185 041 044 050 086 107 130 134 135 138 139 203 204 167
CASIO	111 182
CLARINETTE	182
CREEK	159
CROWN	035
DENON	002 123
EMERSON	042 069 102
FISHER	050 185 134 008
FRABA	111
GENEXXA	010 069 102
GOLDSTAR	080
HAITAI	093
HARMAN KARDON	018 033 047 208
HITACHI	042 175
INKEL	130 143 144
JC PENNY	014 061 092 141
JENSEN	158
JVC	004 022 136 163 213 214 242 243
KENWOOD	185 007 023 055 071 072 142 137
KOSS	051
KRELL	241
KYOCERA	005
LOTTE	102
LUXMAN	011 028 070 076
LXI	059
MAGNAVOX	044 107
MARANTZ	027 041 044 051 077 107 209
MCINTOSH	212
MCS	014 073 092
MEMOREX	010
MISSION	044 107
MITSUBISHI	179
MITSUMI	153
MODULAIRE	182
MONDIAL	147
MYRYAD	244
NAD	006 005 067 178
NAKAMICHI	217 218 219 095
NEC	014 062
NIKKO	046
NSM	044 107
ONKYO	030 038 039 168 169
OPTIMUS	010 050 057 058 081 082 083 085 093 195
PANASONIC	103 201 172 008 068
PARASOUND	233
PHILIPS	041 044
PIONEER	010 020 025 056 174 175 176
PROCEED	239
PROTON	044 107 228

# Set-Up Code Table

CD

Manufacturer/Brand	Set-Up Code Number
QUASAR	103 008
RADIO SHACK	182
RCA	017 042 150
REALISTIC	042 050 051 102 181 182 187
ROTEL	044 107 161 178 250
SAE	044 107
SANSUI	044 069 107 128 171 190 125
SANYO	050
SCOTT	069 102
SHARP	026 031 051 066
SHERWOOD	003 019 051 096 112 115 119 166
SIGNATURE	033
SONY	048 081 097 126 133 177 225 226 164
SOUNDESIGN	251
SUMO	155
SYLVANIA	044 107
SYMPHONIC	052 181
TAEKWANG	195 085
TANDY	010
TEAC	015 034 036 051 052 101 131 140 079
TECHNICS	060 103 200 172 184 008 068
TECHWOOD	076
THETA DIGITAL	234 235
TOSHIBA	006 067 091 160 148
VECTOR RESEARCH	080
VICTOR	004 022 114 124
WARDS	185 033
YAMAHA	024 046 054 186 183 245
YORX	182

## Set-Up Code Table

LD

Manufacturer/Brand	Set-Up Code Number
DENON	206 207
FUNAI	120
KENWOOD	152 013
MAGNAVOX	032 121
MARANTZ	211
MITSUBISHI	121
NAD	121
OPTIMUS	049 013
PANASONIC	113
PHILIPS	032
PIONEER	106 117 121
RADIO SHACK	120
RCA	002
REALISTIC	049
RUNCO	127
SANYO	075
SHARP	152 013
SONY	053 110
TECHNICS	113
THETA DIGITAL	032
TOSHIBA	152 106
YAMAHA	043 129



# Set-Up Code Table

TAPE

Manufacturer/Brand	Set-Up Code Number
AIWA	015 071 100 114
CARVER	006 008 027 024 036
DENON	105 227 229
FISHER	064
GOLDSTAR	011
HARMAN KARDON	233
JVC	106 116 239 240
KENWOOD	005 013 023 026 064 145 146 181 190
LINN	124
LUXMAN	035 137 139
MAGNAVOX	027
MARANTZ	014 027 056 065 087
MCINTOSH	238
mitsubishi	242 243
NAD	029 048
NAKAMICHI	244 245 025
ONKYO	002 012 016 017 018 019 115
OPTIMUS	026 054 055
PANASONIC	007 010 032 088 195
PHILIPS	027 087
PIONEER	003 039 047 050 066 098 222
QUASAR	007 088
SANSUI	027 113 119 224
SHARP	026 057 131 175 181
SHERWOOD	038 004 028 030 033 034
SONY	020 022 052 084 089
TEAC	009 059 212
TECHNICS	007 010 076 088 109 122 193
TOSHIBA	112
VICTOR	106
YAMAHA	021 026 031 067 040

# Set-Up Code Table

AUX

Manufacturer/Brand	Set-Up Code Number
3M	152
AIWA	164
ARCHER	155
AUTON	191
DMX	156
DRAPER SCREEN	204
DWIN	080
EVERQUEST	206
EXTRON	151
FAROUDJA	184
FUJI	209
JERROLD	153
JVC	185
KENWOOD	185
LITE-TOUCH	208
LUTRON	077 158 159
MAKITA	186 201
MINDPATH	205
NILES	160 187
NSM	161
PIANO DISC PLUS	085
POLKAUDIO	162
REPLAY	075
RUSSOUND	081
SCIENTIFIC ATLANTA	156 163
SIMA	082
SOLO ELECTRONICS	207
SOMFY	078 079
SONY	164 165 166
STARCOM	153
TIVO	090
TURBOSCAN	167
VELODYNE	203
X-10	093 183
XANTECH	168 169 170 171 172 188 189