

QuickStart Guide

D-535 ZOOM / C-370 ZOOM / X-450

OLYMPUS IMAGING AMERICA INC.
Two Corporate Center Drive, PO Box 9058, Melville,
NY 11747-9058, U.S.A.
<http://www.olympusamerica.com/support>

OLYMPUS EUROPA GMBH
Wendenstrasse 14-18,
20097 Hamburg, Germany
<http://www.olympus-europa.com>

OLYMPUS®

<http://www.olympus.com/>

 
Thank you for purchasing an Olympus digital camera.

START HERE


It is strongly recommended that you follow these step-by-step numbered instructions to set up and quickly begin using your new Digital camera.

1 UNPACKING THE BOX CONTENTS


Gather your digital camera and the parts as shown in the illustration. If any accompanying item is missing or damaged, contact the store where you purchased the camera.

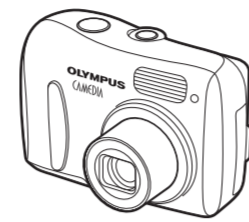

Digital camera

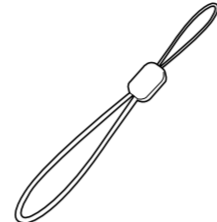 

Strap

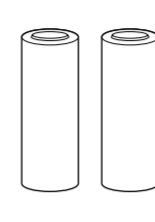 


AA (R6) alkaline
batteries (2)



USB cable



 Basic manual

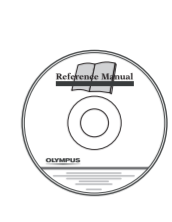

Reference Manual
CD-ROM



OLYMPUS Master CD-ROM/
Installation guide

The following items are also included in the Digital camera package: video cable, warranty card, registration card (not provided in some areas), and safety precautions booklet.

 
2 PREPARING THE CAMERA FOR USE

Before you begin using your Olympus Digital camera...


a. Loading the batteries

1 Make sure the camera is turned off.


- The monitor is off.
- The green lamp and the orange lamp on the camera are off.
- The lens is not extended.

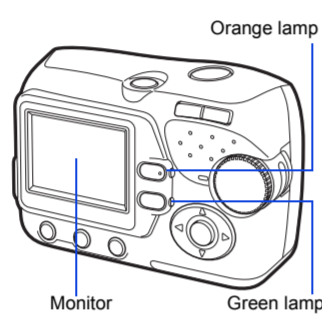

 
2 Holding the lock button, slide the battery compartment/card cover in the direction of (A), and then lift it in the direction of (B).

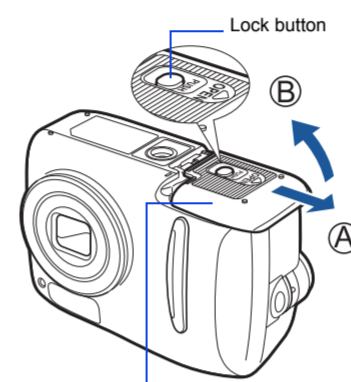

 
3 Insert the batteries, making sure that they are correctly oriented as shown in the illustration.

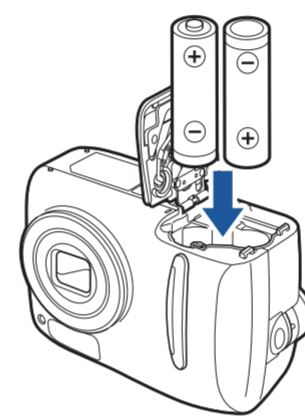

 4 Holding the batteries down with the battery compartment/card cover, close the cover in the direction of (C) and slide it in the direction of (D).

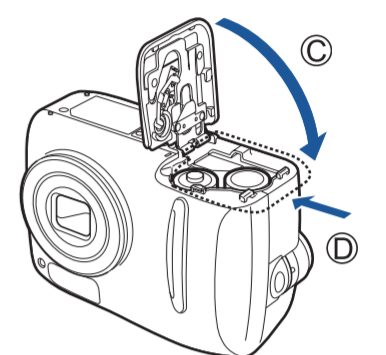

 b. Attaching the strap

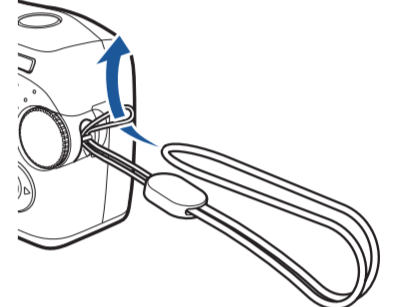

3 TURNING ON THE CAMERA

Turn the camera on and check the monitor indications.

 
a. Turning the Camera On (Shooting mode)

Set the mode dial to **P-AUTO** and press the power switch.

- The camera turns on in the shooting mode.
- The lens extends and the monitor turns on.


TIPS To maximize battery life, the monitor turns off and the camera enters sleep mode after approximately 30 seconds of non-use. To reactivate the camera, press the shutter button or

- To turn the camera off, press the power switch.

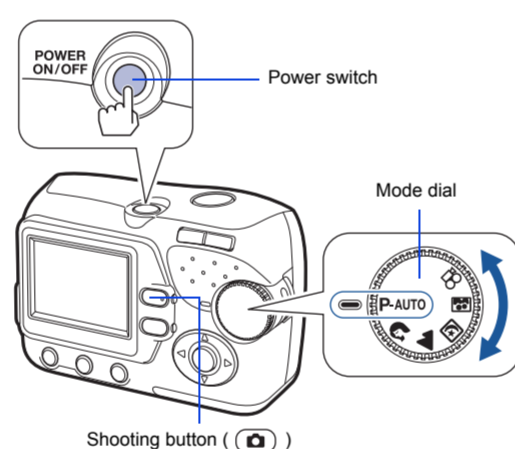


b. Setting the Date and Time

 
Set the date and time before using the camera for the first time.
The information will be recorded with each picture.

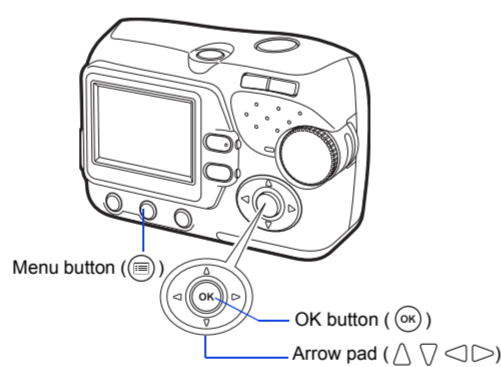


1 Display the menu.

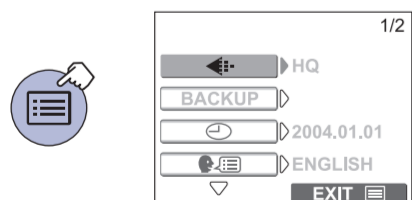 

2 Select

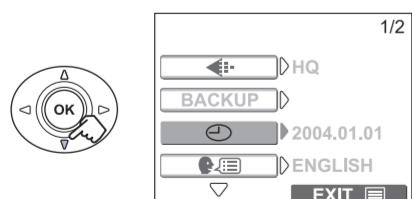 


3 Display the screen.

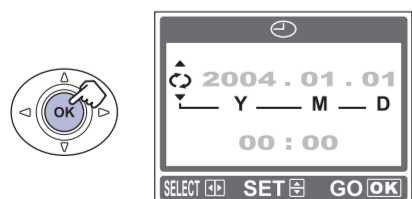 


4 Select the date format.

 
- The following steps show the procedure used when Y-M-D is selected.

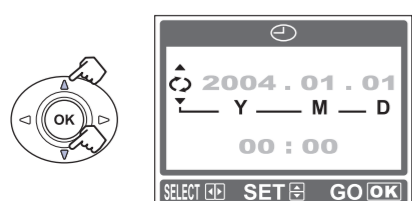

5 Move to the year field.

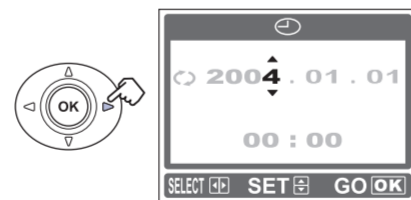 


6 Set the year.

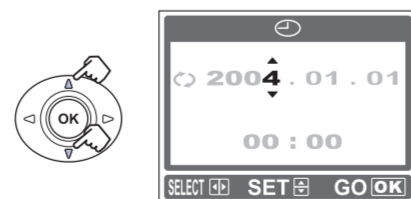 


7 Repeat Steps 5 and 6 until all date/time fields have been set.

 - Time is entered using the 24-hour format.

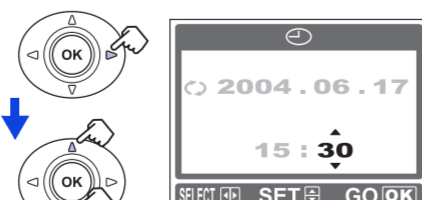

8 Press to set the date and time.

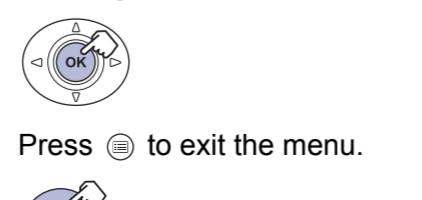 


9 Press to exit the menu.




c. Camera Diagram and Controls

 
Now take a moment to familiarize yourself with the key areas of camera controls by reviewing the illustrations.

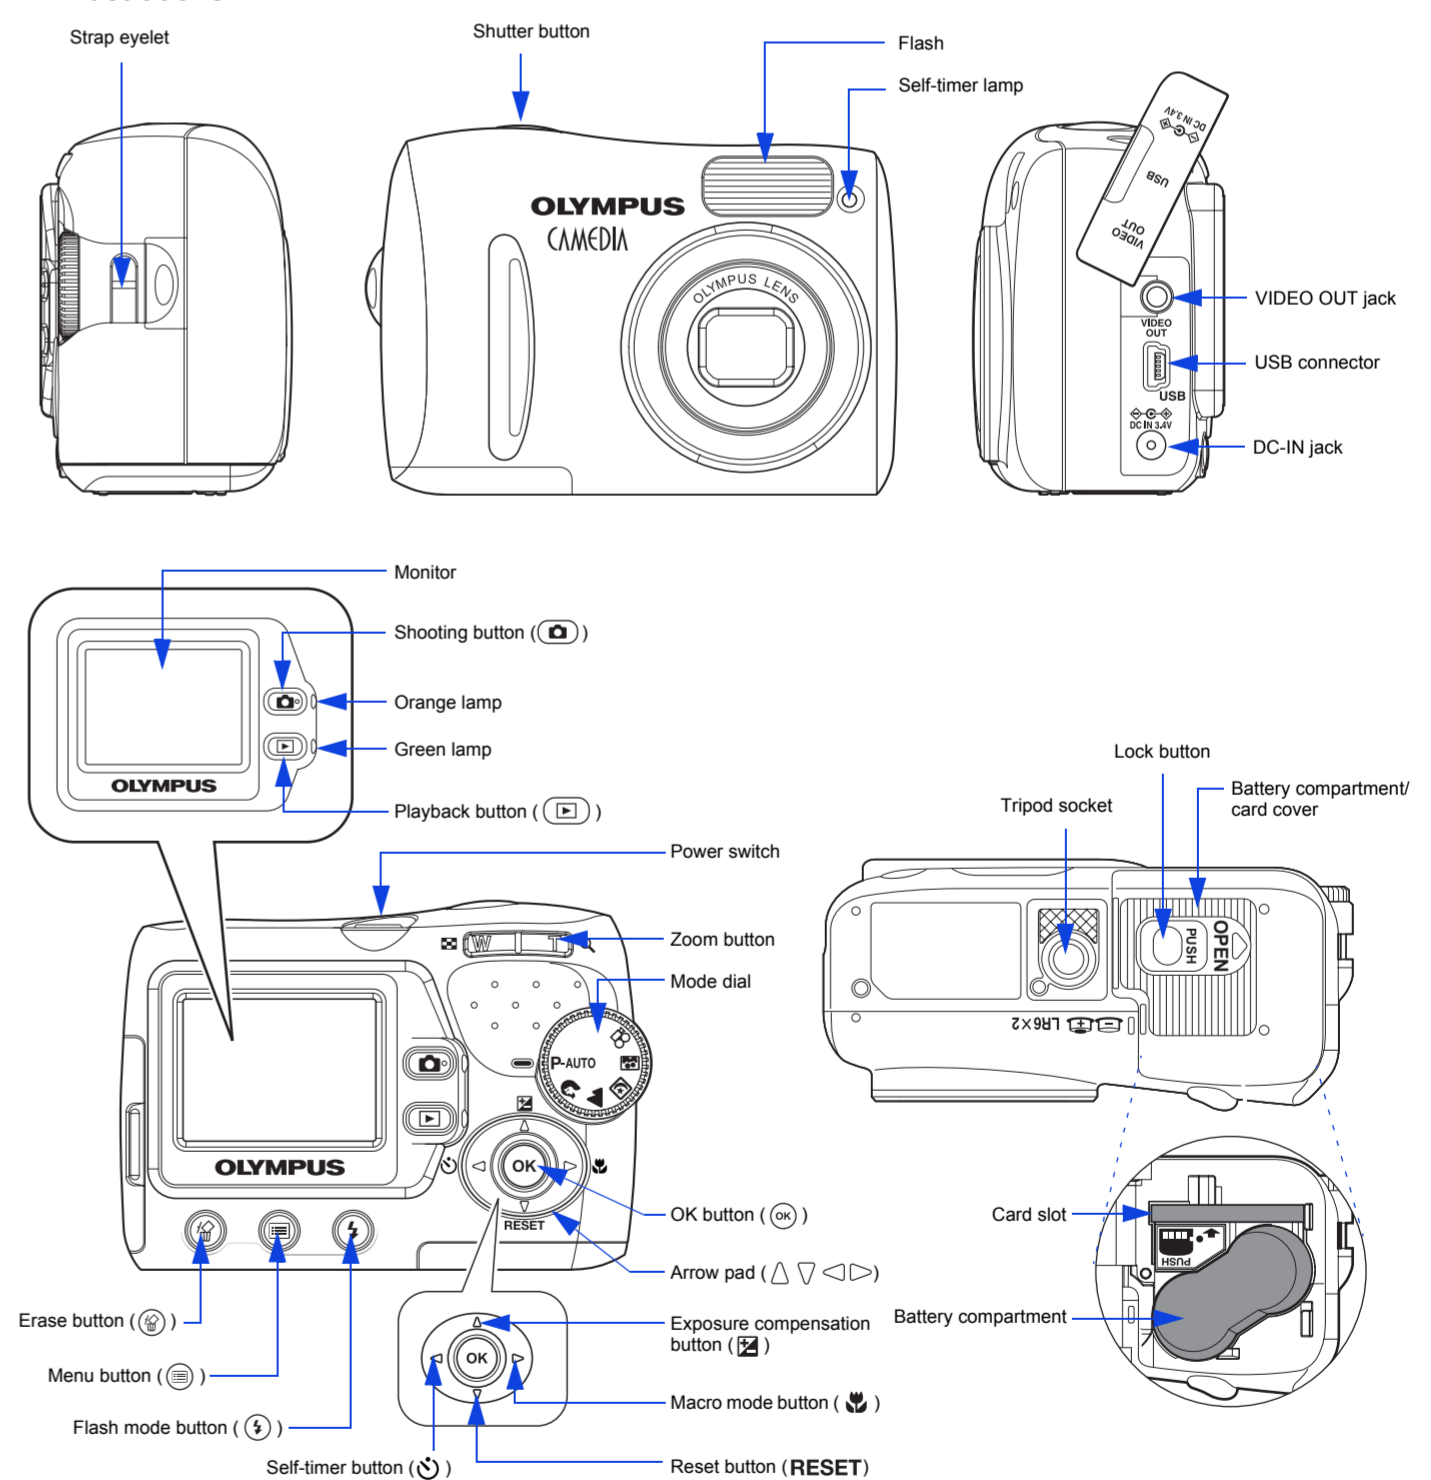

Monitor Indications in Shooting Mode

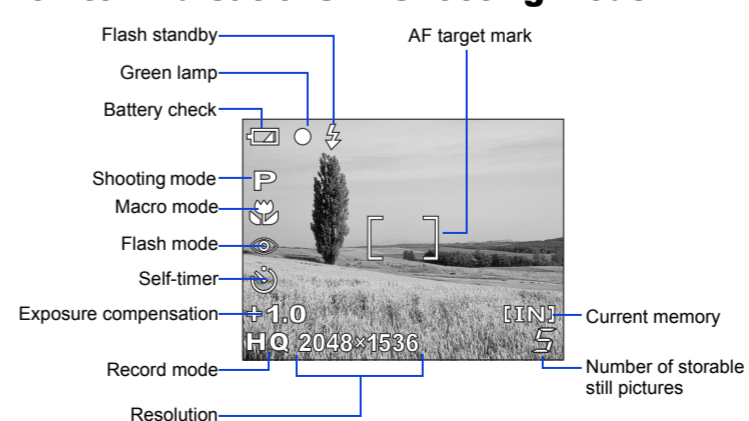 

Monitor Indications in Playback Mode

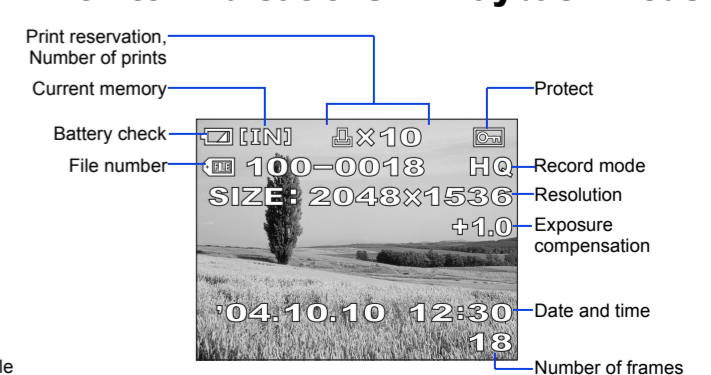 


TIPS Depending on the camera settings, not all indicators will be displayed.

4 TAKING PICTURES

Let's press the shutter button and take a picture – it's easy.

a. Taking a Picture

 - 1 Position the AF target mark on the subject while looking at the monitor and decide on composition.

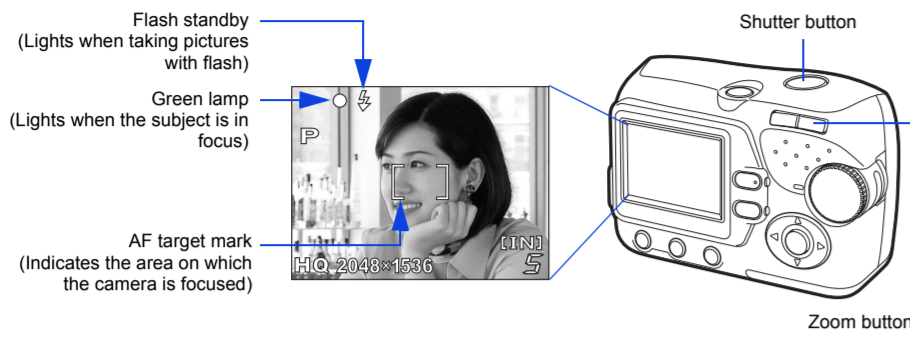

TIPS Icons representing camera settings appear on the monitor, telling you important information such as the flash and record modes, battery life and the number of frames remaining.

 
- 2 Press the shutter button gently (halfway) to adjust the focus.
 - The focus is properly set when the green lamp lights.
 - The ⚡ indicator lights steadily when the flash is ready to fire.
- 3 Press the shutter button completely to take the picture.

b. Zooming

Use the zoom button to zoom in closer to the subject or zoom out for a wide-angle shot.

Press toward W to zoom out and get everything into the picture.


Press toward T to choose telephoto shooting and make the subject bigger.

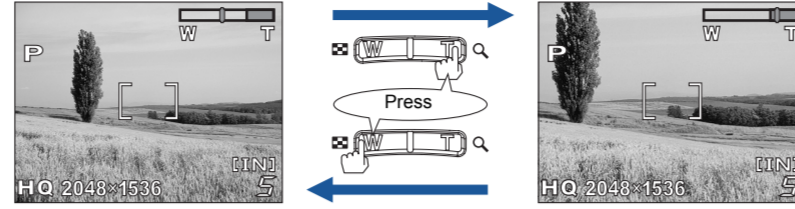


c. Flash Modes

This digital camera features multiple flash modes. Choose the mode best suited to the shooting conditions and the kind of picture you want.

 - 1 Press ⚡.

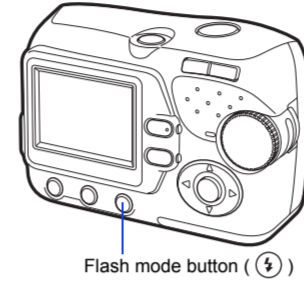

 - 2 Press Δ ∇ to select the flash mode, and press \odot .

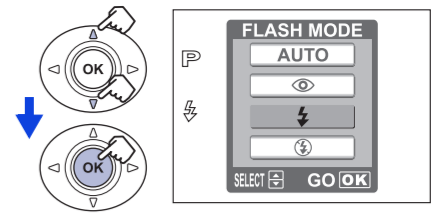

Icon	Flash Mode	Description
No indication	Auto flash	The camera automatically decides if the flash is needed.
	Red-eye Reduction Flash	Reduces incidence of red eyes by emitting pre-flashes.
	Fill-in Flash	The flash always fires with every picture.
	Flash Off	The flash does not fire regardless of the light conditions.

- 3 When the shutter button is pressed halfway, the ⚡ mark lights or blinks.
 - ⚡ lights: The flash is ready to fire when the shutter button is fully depressed.
 - ⚡ blinks: The flash is charging. Wait until the ⚡ mark changes from blinking status to steady.

 
TIPS Not all flash modes are available depending on the shooting mode selected. Refer to the Reference Manual for more information.

5 VIEWING AND ERASING PICTURES


With a digital camera, you can easily view the photos you want - and delete the ones you don't.

a. Viewing Pictures


- 1 With the camera in the shooting mode, press \square .
 - Playback mode is set.
 - The last picture taken appears in the monitor.

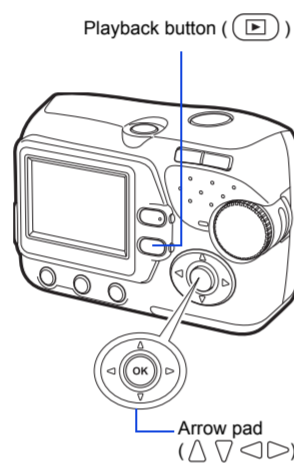

 - 2 Use the arrow pad to playback other pictures.

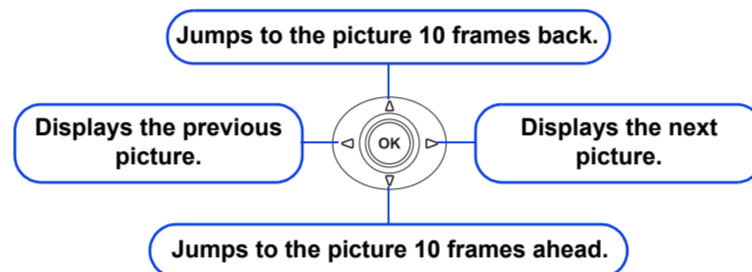

 - To return to the shooting mode, press \square .

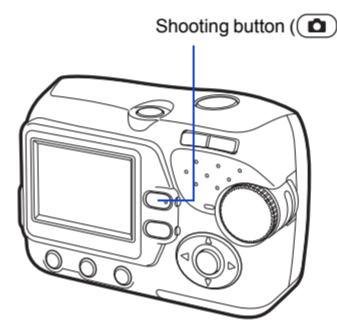



b. Erasing Pictures

Deletes only the picture currently displayed in the monitor.



Once erased, pictures cannot be restored. Check each picture before erasing to avoid accidentally erasing pictures you want to keep.

  - 1 Display the picture you want to erase.
- 2 Press \odot .
- 3 Select [YES], and press \odot .
 - The picture will be erased.

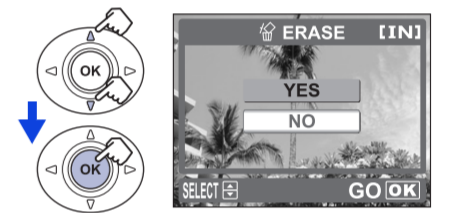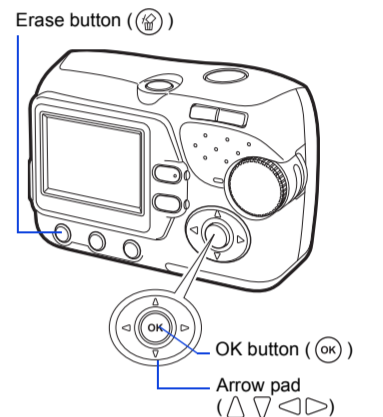

TIPS The "all-frame erase" function erases all frames stored in the camera. Refer to the Reference Manual for more information.

6 CONNECTING THE CAMERA TO A COMPUTER

Olympus makes it simple to connect your camera to a computer and download pictures.

TIPS Olympus recommends using the optional AC adapter to ensure a consistent power supply when downloading images.

a. Installing OLYMPUS Master

- 1 Insert the CD-ROM into the CD-ROM drive.
 - The OLYMPUS Master installation screen is displayed.
- 2 Click the [OLYMPUS Master] button.
 - Installation starts.
 - Follow the on-screen instructions to complete the installation.



 
TIPS For more information on operating environment and installation procedure of OLYMPUS Master, refer to the Reference Manual.

b. Connecting to a computer




Make sure that the camera is turned off before connecting it to your computer.

- 1 Make sure the camera is turned off.
 - The monitor is off.
 - The green lamp and the orange lamp on the camera are off.
 - The lens is not extended.
- 2 Plug the USB cable provided with the camera into the USB port on your computer.

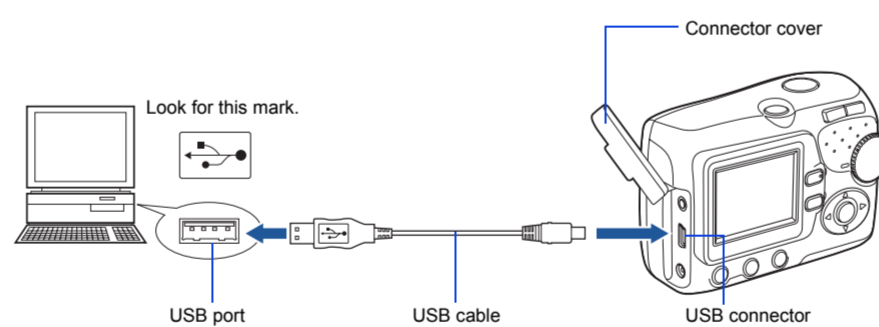

 - 3 Plug the other end of the USB cable into the USB connector on your camera.
 - The camera starts communicating with the PC and the selection screen for the USB connector is displayed on the camera's monitor.
- 4 Select [PC], and press \odot .
 - When the camera is recognized by the PC, a new icon appears on the desktop.

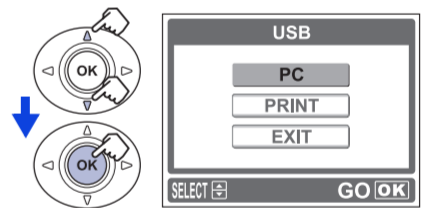


For advanced users

About the functions and detailed instructions on how to use them...

- ➔ See "BASIC MANUAL" to find out the capabilities of your camera.
- ➔ Insert the CD-ROM provided with the camera to your PC, and refer to "REFERENCE MANUAL" on the CD-ROM for more information.

 - Take pictures using the optimal settings according to the shooting conditions.
- Record movies.
- Increase the maximum number of pictures to take with an optional xD-Picture Card inserted.
- Play back pictures on your TV using the video cable provided with the camera.
- Use the direct print function, connecting the camera and PictBridge-compatible printer with the USB cable provided with the camera.

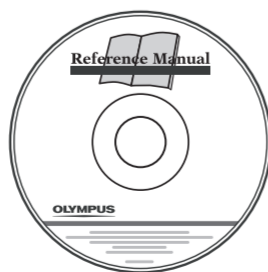

To enjoy the images on your PC...

- ➔ Insert the Olympus Master CD-ROM provided with the camera to your PC, and enjoy pictures with the OLYMPUS Master software.



- Play back still pictures and movies.
- Perform the editing such as rotating and trimming of images.
- Manage images using the calendar function.
- Print images easily.
- Make online user registration of camera (confirm that your PC is connected to Internet beforehand).

Technical Support (USA)
1-888-553-4448 (Toll-free)
8:00 AM - 10:00 PM ET
Monday - Friday

European Technical Customer Support
00800 - 67 10 83 00 (Toll-free)
+49 180 5 - 67 10 83 or
+49 40 - 237 73 899 (Charged)
9:00 AM - 6:00 PM MET
Monday - Friday