 


It is strongly recommended that you follow these step-by-step instructions to set up and quickly begin using your new Digital Camera.

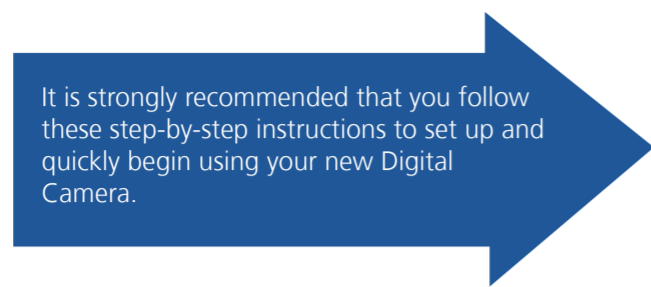


STEP



1

UNPACK THE BOX CONTENTS


Please gather the items shown in the illustration. You'll need these to complete the procedures that follow.

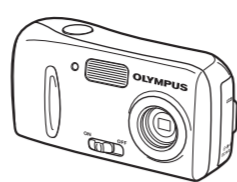

Digital camera

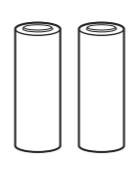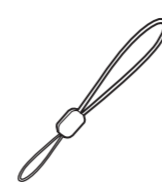2 × AA (R6)
alkaline batteries

Strap

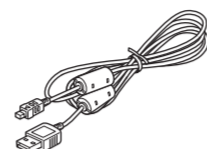CD-ROM
(OLYMPUS Master software)

USB cable

The following items are also included in the Digital Camera package: Basic Manual, warranty card, Advanced Manual on CD-ROM and registration card.

STEP

2

REVIEW THE DOCUMENTATION

Quick Start Guide (this document)
Getting started with your digital camera.

Quick Reference Guide (reverse side of this document)
Quick guide to using common features and functions.

Basic Manual (printed booklet)
Guide to mastering the basics of taking and viewing pictures.

Advanced Manual (CD-ROM)
Detailed instructions on all camera features and functions.


Software Installation Guide (separate document on OLYMPUS Master CD-ROM)
Detailed instructions on installing the OLYMPUS Master software.

STEP

3

INSERT THE BATTERIES


- Make sure the camera is off.
- Open the battery compartment/card cover on the side of the camera and insert the batteries.
- Close the cover.

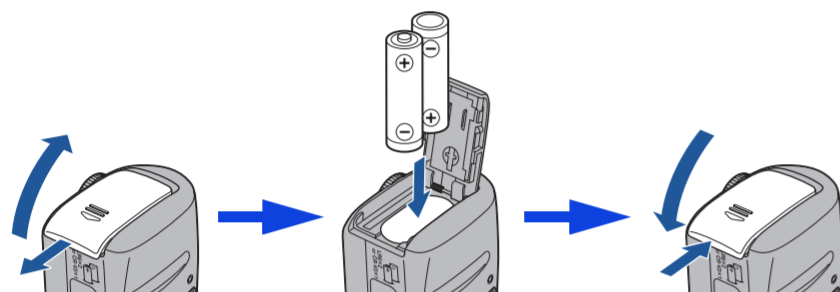

TIPS: The alkaline batteries included are only intended for start up and initial usage. For extended battery life, we recommend using NiMH rechargeable batteries.

STEP

4

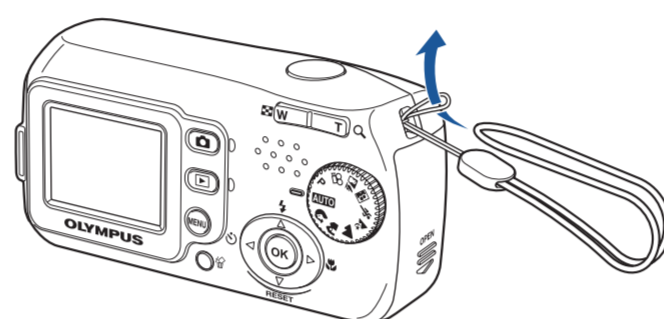
ATTACH THE STRAP

STEP


5

TURN ON THE CAMERA

Set the mode dial to **AUTO** and slide the power switch to **ON**. The lens barrier opens.

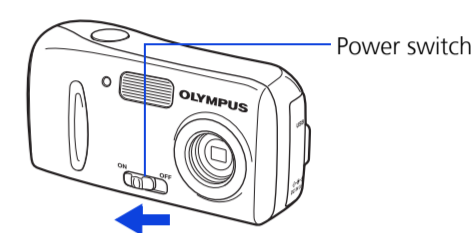

The monitor turns on. The orange lamp lights indicating that the camera is in shooting mode.

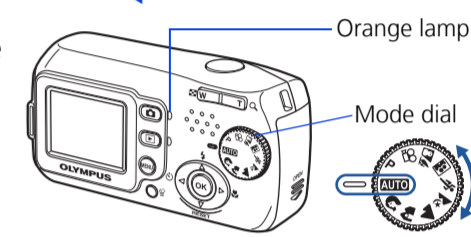

Note: After use, slide the power switch to **OFF**. The lens barrier closes and the monitor turns off.

 
STEP

6

SET THE DATE AND TIME

- With the camera on, press .
- Press to select [E], and press .
- Press to select the date format, and press .
- Press to set each item, and press to move to the next item.
- Press when you have finished entering the date and time.

Note: Press to quit the menu.

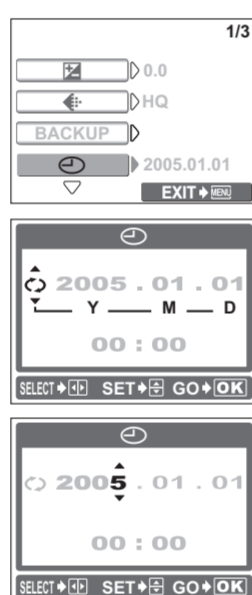


STEP

7

TAKING A PICTURE

- Place the AF target mark on your subject using the monitor.
- Press the shutter button halfway to lock the focus and exposure, then press the shutter button completely to take the picture.

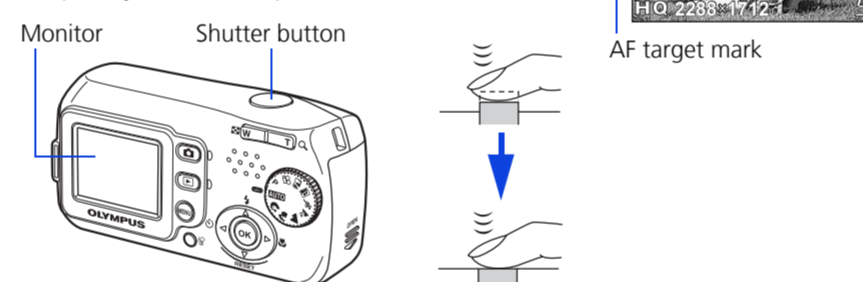

• Pictures are automatically stored in the internal memory ([IN] is displayed on the monitor). Alternately, you can store your pictures on an xD-Picture Card (sold separately). While the card is inserted, [xD] is displayed on the monitor and all pictures are stored on the card.


STEP

8

REVIEWING A PICTURE

- Press . The green lamp lights indicating that the camera is in playback mode. The last picture taken is displayed on the monitor.
- Use the arrow pad to display the picture you want.

Note: Press to return to shooting mode.

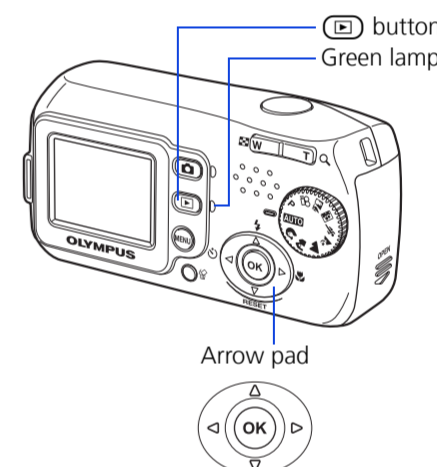


STEP


9

ERASING A PICTURE

- Display the picture you want to erase and press the button.

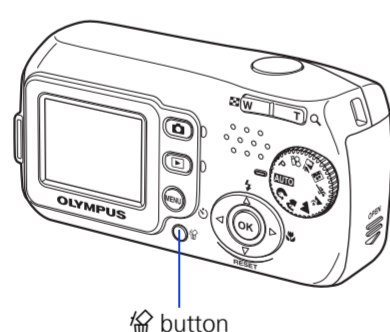

- Press to select [YES] and press .

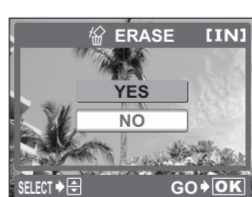


STEP


10

CONNECTING THE CAMERA TO A COMPUTER

- Make sure the camera is off.
- Connect the camera to the computer using the USB cable (included). The camera turns on and the green lamp lights.

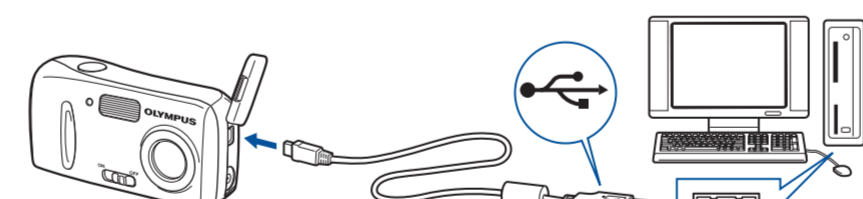

- Press to select [PC] on the camera's monitor and press .

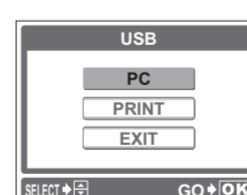

STEP

11

VERIFY CAMERA CONNECTION**WINDOWS:**


- From the desktop ("Start" menu for XP), open "My Computer".

- Verify that the "Removable Disk" icon representing the camera is displayed.

MACINTOSH:


- Verify that the "NO_NAME" icon representing the camera is displayed.

• The above steps confirm that the camera has been installed correctly. You can transfer your images immediately using the standard drag and drop procedure, or enhance your experience using OLYMPUS Master software (included).

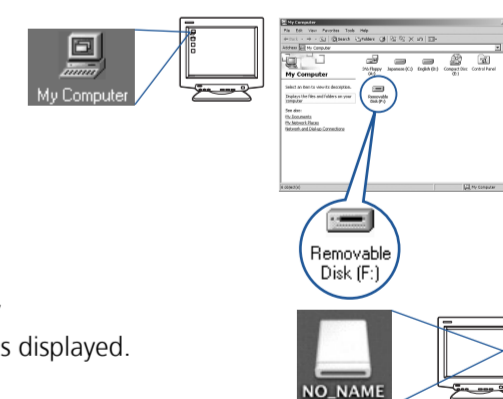

STEP

12

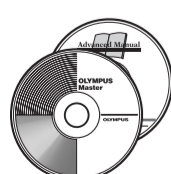ABOUT THE CD-ROM DISCS

Now that you've mastered the basic functionality of your new Olympus Digital Camera, you are ready to begin exploring the possibilities that digital photography brings to your computer. Activities such as photo editing, printing and much more are only steps away!

CD-ROM1

OLYMPUS Master software: Download pictures from the camera, view, organize, retouch, e-mail and print your digital photos and movies and more! This CD also contains the complete software users manual in Adobe Acrobat (PDF) format.

CD-ROM2

Advanced Manual: A complete camera guide in Adobe Acrobat (PDF) format. This manual contains detailed instructions on the camera's features and functions which are not covered in the printed Basic Manual or Quick Start/Quick Reference Guides.

STEP

 
13

INSTALLING THE CAMERA SOFTWARE

- Insert the OLYMPUS Master CD-ROM into your computer's CD-ROM drive.

- For Windows:
Click the "OLYMPUS Master" button in the "Setup" window.

For Macintosh:
Double-click the "Installer" icon.

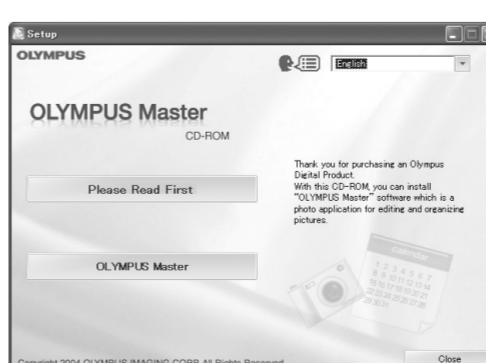

- Follow the on-screen instructions. For more details, click "Please Read First".

Please refer to the Quick Reference Guide on the reverse side of this sheet to familiarize yourself with the commonly used features and functions of your new Olympus Digital Camera.



Quick Reference Guide

D-425

INDEX


1. Camera Diagram and Controls
2. Shooting Modes
3. Using the Zoom
4. How to Use the Autofocus
5. Flash Modes
6. Image Quality Modes
7. Recording a Movie
8. How to Erase All Pictures
9. E-mailing a Picture
10. Printing a Picture

1 CAMERA DIAGRAM AND CONTROLS

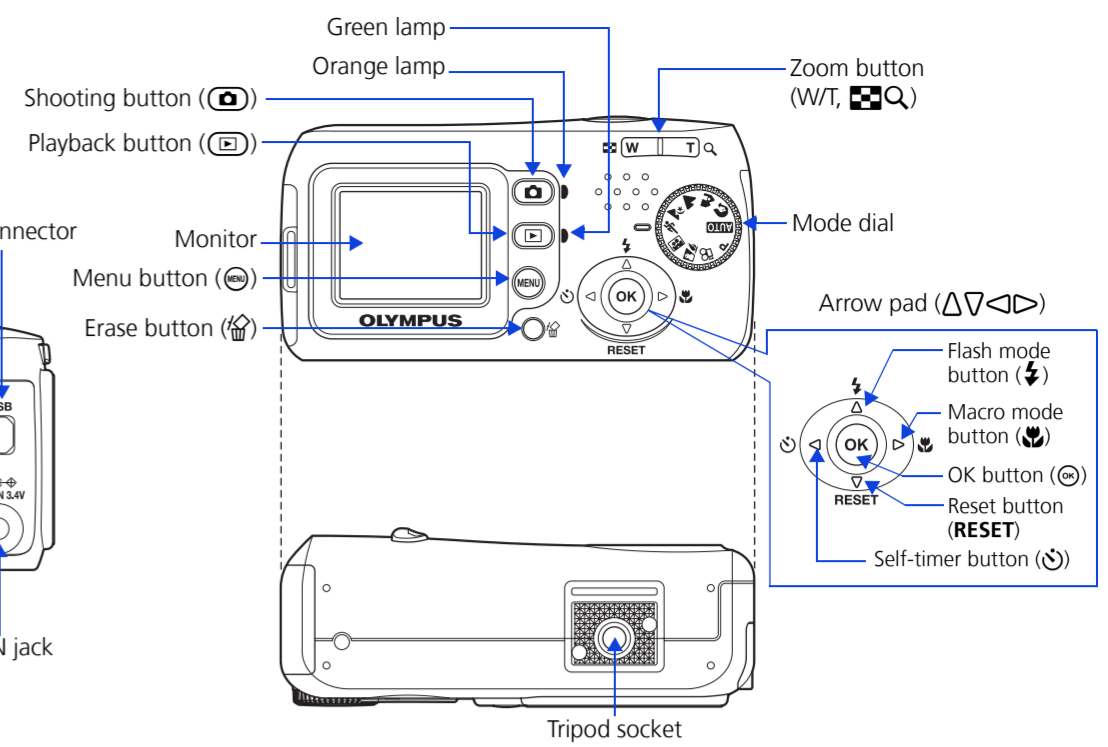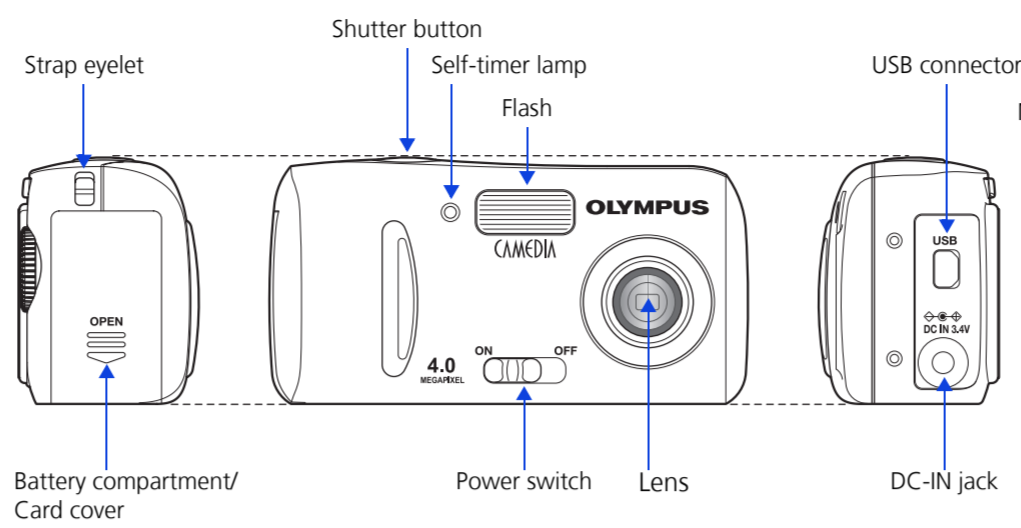

2 SHOOTING MODES

This camera features two main operating modes.

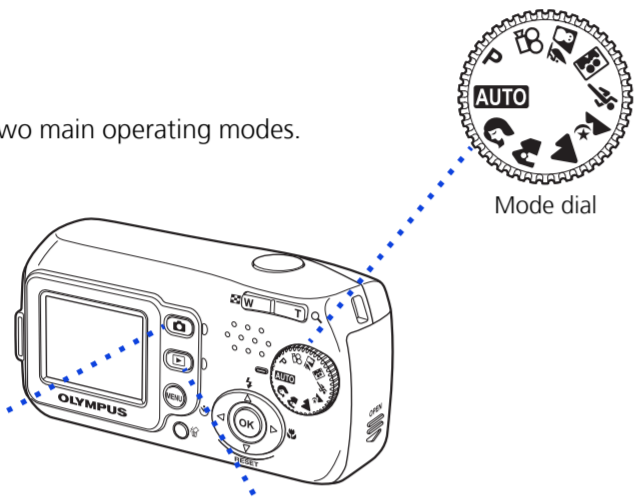

Shooting mode (orange lamp lit): Press this button to prepare the camera for taking pictures or movies. Set the mode dial to access specialized shooting modes.

Playback mode (green lamp lit): Press this button for viewing pictures or movies.


Shooting Mode Descriptions

- P** • The generic mode for taking pictures.
- AUTO** • The camera sets the optimal settings automatically.
- Portrait** • Lets you take impressive portrait shots.
- Landscape** • Lets you take the subject in the foreground as well as the landscape in the background clearly.
- Macro** • Lets you capture the vivid blues and greens of all the landscape from nearby to far off in the distance.
- Night** • Lets you capture those details that would otherwise be cloaked in darkness when taking pictures at night.
- Sports** • Lets you freeze-frame fast-moving action.
- Self** • Lets you take pictures of yourself - by yourself.
- Snow/Beach** • Lets you capture happy moments in the snow or at the beach.
- Movie** • Lets you record movies.

Note: You can change the mode dial when the camera is on or off.

3 USING THE ZOOM

This camera features a digital zoom, letting you get closer to the action or capture wide-angle shots.

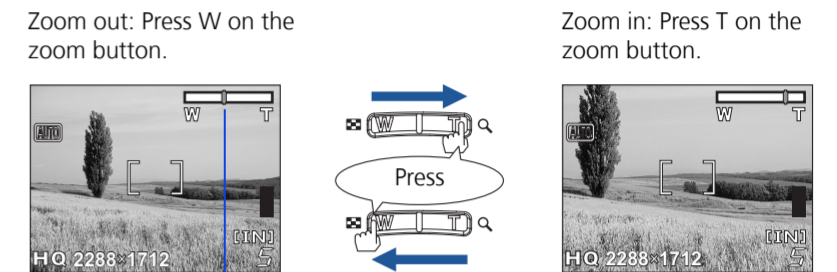


The cursor moves sideways indicating the current magnification.

- Press W to zoom out and get more into the picture.
- Press T to zoom in and get closer to the action.


Note: The digital zoom may cause the picture to appear grainy at high magnifications.

4 HOW TO USE THE AUTOFOCUS


a. While positioning the AF target mark over the subject, press and hold the shutter button halfway.

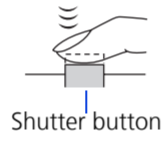

 b. The green lamp, which indicates the focus and exposure are locked, remains lit as long as the shutter button is kept depressed halfway.

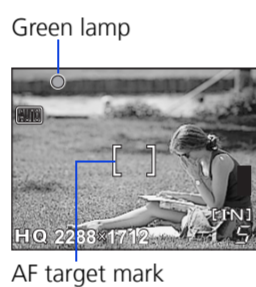

c. Press the shutter button completely to take the picture.

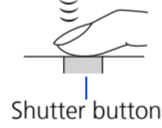


5 FLASH MODES

This camera features multiple flash modes. You can select the appropriate flash mode to suit the situation. The icons that are displayed on the monitor are shown below.

- (None)
- AUTO-FLASH** - The camera decides if the flash is needed.
- RED-EYE REDUCTION** - Reduces the incidence of red-eye by emitting pre-flashes to shrink pupil size before taking the picture.
- FILL-IN FLASH** - The flash always fires. Suitable for shooting backlit subjects.
- FLASH OFF** - The flash is turned off. Suitable for when flash photography is not permitted.

- With the camera in shooting mode, press Δ .
- Press Δ to select the desired flash mode, and press \odot .

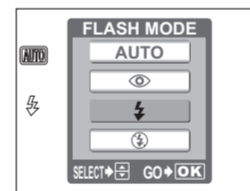


6 IMAGE QUALITY MODES

Your camera is equipped with multiple image quality modes, which determine the quality and image size of the pictures you take. Below is a general description of the commonly used modes. For a detailed description of all quality modes, refer to the Advanced Manual included on the CD-ROM.

Application	Image size	Image becomes clearer		
		Compression	Low compression	High compression
Select according to print size	2288 x 1712	—	SHQ	HQ
	1600 x 1200	—	—	SQ1
For small-sized prints and websites	640 x 480	—	—	SQ2

- With the camera in shooting mode, press \odot .
- Press Δ to select [←], and press \odot .
- Press Δ to select the record mode, and press \odot .

Note: Press \odot to quit the menu.

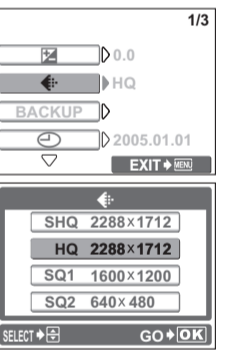


7 RECORDING A MOVIE

a. With the camera in shooting mode, set the mode dial to \odot .

b. Press the shutter button to start recording.

c. Press the shutter button again to stop.

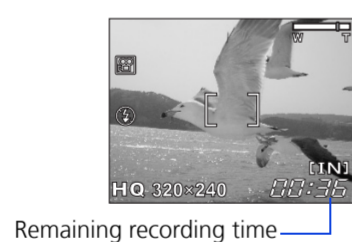


Note: Audio recording is not available.

8 HOW TO ERASE ALL PICTURES

WARNING - PERFORMING THESE STEPS WILL DELETE ALL STORED PICTURES!

 - With the camera in playback mode, press \odot .
- Press Δ to select [MEMORY SETUP], and press \odot .
- Press Δ to select [ALL ERASE], and press \odot .
- Press Δ to select [YES], and press \odot .

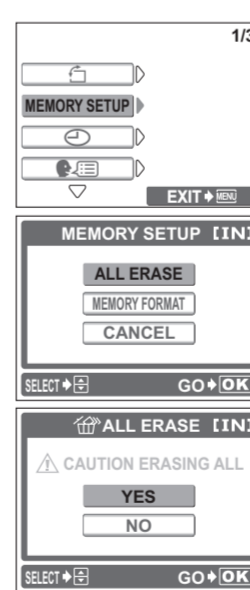

9 E-MAILING A PICTURE

Using the OLYMPUS Master software (included), you can share your pictures with others by using the built-in e-mail feature.

After installing OLYMPUS Master, open the program and click "Browse Images". From the "Browse" window, select the picture(s) you want to send and click the "E-mail" tool button.

At this time, you can resize your pictures to make them more manageable for e-mail. This helps you stay within the e-mail capacity limitations set by your e-mail provider.

When finished, click the "Launch Mailer" button at the bottom of the window. Your default e-mail program will open, and the selected picture(s) will automatically be attached to a new message.

10 PRINTING A PICTURE

Using the OLYMPUS Master software (included), you can make prints of your pictures using your own photo printer.

After installing OLYMPUS Master, open the program and click the "Print Images" icon on the main menu. You can create many different types of prints such as an index print, photos, albums, or calendars. Simply select the image(s) and add them to one of the many layouts within OLYMPUS Master. For detailed instructions, please refer to the "Help" menu in the software. You can also order prints online using the "Print Online" feature in OLYMPUS Master.

Alternatively, you can print your pictures by connecting your PictBridge* compatible camera directly to a PictBridge* compatible printer, such as the Olympus P-10 Digital Photo Printer. This permits fast, easy printing without using a computer.

* For detailed instructions on using PictBridge, please refer to your camera's Advanced Manual included in digital format on the CD-ROM.

CONTACT INFORMATION

OLYMPUS IMAGING AMERICA INC.

Two Corporate Center Drive, P.O. Box 9058, Melville, NY 11747-9058

Technical Support (USA):

24/7 online automated help: <http://olympusamerica.com/support>
Phone customer support: 1-888-553-4448 (toll free)

Our phone customer support is available from 8am - 10pm, (Monday to Friday) ET

E-mail: distec@olympus.com

Olympus software updates can be obtained at: <http://olympus.com/digital>

OLYMPUS