

PICTURE OF ONE FOR ALL 5 REMOTE	2
INSTALLING THE BATTERIES	3
THE KEYPAD	3

SETTING UP THE ONE FOR ALL 5 (How to set up the ONE FOR ALL 5 to control your devices)	6
SEARCH METHOD	7

SET UP CODES

 TV	: Television / LCD / Plasma / Projector / Rear Projector.	18
 VCR	: Video Cassette Recorder / TV/VCR Combi / DVD/VCR Combi / PVR.	25
 SAT	: Satellite Receiver / Set-Top-Box / DVB-S / DVB-T / Freeview (UK) / TNT (F) / Digitenne (NL) / SAT/HDD.	27
CBL	: Cable Converter / Set-Top-Box / DVB-C.	31
VAC	: Video Accessory like Media Centres / AV Accessories / AV Selectors.	32
 AMP	: Audio / Amplifier / Active Speaker System.	32
TUN	: Audio / Audio Receiver/Tuner/Amplifier / (DVD) Home Cinema.	32
 DVD	: DVD Player / DVD-R / DVD Home Cinema / DVD Combi / DVD/HDD.	33

CODE BLINK OUT (To find out which code is currently programmed)	8
---	---

QUICK CODE REFERENCE	8
-----------------------------	---

THE LEARNING FEATURE (How to copy functions from your original working remote onto the ONE FOR ALL 5)	9
--	---

OPERATIONAL RESET	11
--------------------------	----

EXTRA FEATURES

• Mode re-assignment (Changing a device mode)	12
• Volume Punch-Through	13
• Macros (Sequence of commands)	14
• Key Magic (How to program missing functions)	16
• Colour and Brightness	17

TROUBLE-SHOOTING	17
-------------------------	----



Installing the Batteries

Your ONE FOR ALL 5 requires 4 new "AAA/LR03" alkaline batteries.

- 1 Push the battery door upwards and lift it up to remove it.
- 2 Match the batteries to the (+) and (-) marks inside the battery case, then insert the batteries.
- 3 Replace the battery cover by pushing downwards and allowing it to click back into position.

Important notes:

- On the inside of the battery compartment door you will find a label on which to write your Set-Up codes after your ONE FOR ALL 5 is set up for your device. Please write down your codes for easy, future reference.
- Do not use rechargeable batteries.
- Upon changing the batteries, your set-up codes and advanced programming will be retained.

The Keypad

See picture of ONE FOR ALL 5 remote on page 2.

1 Magic Key

The MAGIC key is used to set up your ONE FOR ALL 5.

2 Power

The POWER key operates the same function it did on your original remote control.

3 Backlight Device Keys

The TV, VCR, SAT, DVD, and AMP keys select the home entertainment device to be controlled. For example pressing the TV key allows the remote to control the functions of your Television, after pressing VCR you can operate your Video Cassette Recorder etc.

For more detailed information, please refer to the chart on page 6.

During operation of the ONE FOR ALL the red light (LED - Light Emitting Diode) underneath a device key will light up (every time a key is pressed) to indicate the device mode you are using.

4 Number Keys (0-9, -/-, AV)

The Number keys (0-9, -/-, AV) provide functions just like your original remote, such as direct access channel selection. If your original remote uses one/two digit input switching (-/- symbol), this function can be obtained by pressing the -/- key. If your original remote has an 10 key, this function can also be found under the -/- key. If your original remote has an 20 key, this function can also be found under the AV key. In AMP mode the Number keys may provide source (input) selection.

5 AV Key

In TV mode you will obtain the AV / Input function. In VCR mode you will obtain the "TV/VCR" function, if available on your original remote. In DVD mode you will obtain the "TV/DVD" function, if available on your original remote. In DVD mode you will obtain the "TV/SAT" or "TV/DTV" function, if available on your original remote.

6 Volume +/- Keys

These keys operate in the same way as the keys on your original remote.

The Keypad

7 Mute Key

The Mute key operates the same function it did on your original remote control.

8 Menu Key

The MENU key controls the same function as it did on your original remote.

9 Channel +/- Keys

These keys operate in the same way as the keys on your original remote.

10 Directional Keys

If available on your original remote, these keys will allow you to navigate through the menu mode of your device.

11 OK

The OK key will confirm your choice in menu operation.

12 Transport Keys (VCR / DVD)

These keys operate the transport functions (PLAY, FF, REW etc.) of your device. To prevent accidental recording, the RECORD key must be pressed twice to start recording.

13 Teletext Keys

After pressing the TV key, the transport keys (REW, PLAY, PAUSE, FF) are used to operate the main Teletext functions. The symbols below the keys are for Teletext. The text keys are used to access the Teletext functions of your television. Of course, your television must have Teletext capability.



TEXT ON: Puts the television in the Teletext mode.



TEXT OFF: Switches the television back to regular viewing mode. On some televisions, this may be done by pressing the TEXT ON key several times.



HOLD/STOP: Stops changing pages.



EXPAND: Shows the top half of the Teletext page in larger letters. By pressing again, you can see the bottom half of the Teletext page enlarged. To return to regular Teletext viewing, press the EXPAND key again, or press the TEXT ON key, depending on your television.

After pressing the TV key and accessing the text mode, the keys marked **red, green, yellow** and **blue**, allow you to access the Fasttext functions of your television. **If on your original remote control these keys are used for Menu navigation, the ONE FOR ALL Fasttext keys may operate in the same way.**

Important note: For a more detailed explanation of Teletext and Fasttext, please refer to the manual of your television. Remember, different televisions control Teletext and Fasttext features in different ways. Not all of the Teletext functions may be available for your particular model.

14 Additional Function Keys



Guide

In TV and/or SAT mode you will obtain the "Guide" function, if available on your original remote.



I

In TV and/or SAT mode you may obtain the "Display", "OSD" or "info" function, if available on your original remote.



?

In SAT mode you will obtain the "help" function, if available on your original remote.



Back

In TV, VCR and DVD mode you will obtain the "Menu Exit" function, if available on your original remote. In SAT menu mode you may use the "back" key to go to the previous menu screen.



PPV

In SAT mode you will obtain the Pay Per View (PPV) function, if available on your original remote.



Subt.

In TV, VCR, SAT and DVD mode you will obtain the "Subtitle" function, if available on your original remote.



Radio

In SAT mode you will obtain the "Radio" function, if available on your original remote.






 

Fav

In TV mode this key provides you the (16:9) wide screen view function, if available on your original remote). In SAT mode you will obtain the "Favorite" function, if available on your original remote.

Setting up the ONE FOR ALL 5

 
(How to set up the ONE FOR ALL 5 to control your devices)

Example: To set up the ONE FOR ALL 5 for your Television:

-  **Find the code for your device in the Code list (page 18 – 37).** Codes are listed by device type and brand name. The most popular code is listed first. Make sure your device is switched on (not on standby).
-  **Press the TV key** on the ONE FOR ALL 5 for the device you wish to Set-Up.
-  **Press and hold down MAGIC until the ONE FOR ALL 5's TV key blinks twice** (the red LED underneath the TV key will blink once and then twice).
-  Enter your **four-digit device code** using the number keys. The device key will blink twice.
-  Now, aim the ONE FOR ALL 5 at your device and **press POWER. If your device switches off, the ONE FOR ALL 5 is ready to operate your device.**
- Turn your device back on and try all the remote's functions to ensure they are working properly. If the functions do not work properly, repeat steps 1-5 using another code listed under your brand.
- If your device does not respond, follow steps 1 to 5 with each code listed for your brand. If none of the codes listed for your brand operate your device, or if your brand is not listed at all, try the Search Method described on page 7.**

- Some codes are quite similar. If your device does not respond or is not functioning properly with one of the codes, try another code listed under your brand.
- If your device's original remote control does not have a POWER key, press PLAY instead of POWER when setting up your device.
- Remember to press the corresponding device key before operating your device.

Devices can be found under the following keys:

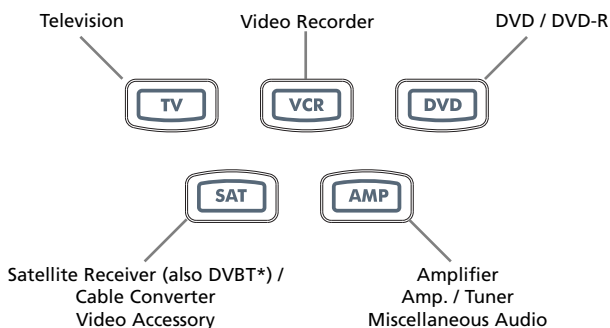

* DVBT codes (Digital Terrestrial / Free View) can be found in the "Satellite Receiver" section.

To set up a second TV, VCR, SAT, DVD or AMP see page 12.

Setting up the ONE FOR ALL 5







Search Method

--> If your device does not respond to the ONE FOR ALL 5 after you have tried all the codes listed for your brand.

--> If your brand is not listed at all.

The Search Method allows you to scan through all the codes contained in the memory of the ONE FOR ALL 5.

Example: To search for your TV code:

- 1 Switch your television on (not on standby) and aim your ONE FOR ALL at your TV.
- 2  Press the **TV key** on your ONE FOR ALL 5.
- 3  **Press and hold down MAGIC until the ONE FOR ALL 5's TV key blinks twice** (the red LED underneath the TV key will blink once and then twice).
- 4  Press **9 9 1**. The TV key will blink twice.
- 5  Next, press **POWER**.
- 6  Aim the ONE FOR ALL 5 at your Television. Now press CH+ over and over, until your Television turns off (every time you press the CH+ key the ONE FOR ALL 5 will send out a POWER signal from the next code contained in the memory). **You may have to press this key many times (up to 150 times) so please be patient.** If you skip past a code, you can go to the previous code(s) by pressing the CH- key. Remember to keep pointing the ONE FOR ALL 5 at your Television while pressing this key.
- 7  As soon as your television turns off, press **MAGIC** to store the code.








- Most TV's do not switch on pressing the POWER key. Please try pressing a "number" key or the "TV-text off" key to switch your TV back on.
- If you cannot control your Television properly, please continue the Search Method, you may be using the wrong Code.
- To search for the code for another device follow the instructions above only press the appropriate device key instead of TV during step 2.
- If the original remote control of your Video recorder or DVD player does not have a POWER key, press PLAY instead of POWER during step 5.

Code Blink out

(To find out which code is currently programmed)

Once you have Set-Up your ONE FOR ALL 5, you can blink back your SET-UP CODE for future reference.

Example: To blink out your Television code:

-  Press **TV** once.
-  Press and hold down **MAGIC** until the **ONE FOR ALL 5's TV key blinks twice** (the red LED underneath the TV key will blink once and then twice).
-  Press **9 9 0**. The TV key will blink twice.
-  For the first digit **of your four-digit** code, press **1** and count all the red blinks. If there are no blinks, the digit is "0".
-  For the second digit, press **2** and count all the red blinks. If there are no blinks, the digit is "0".
-  For the third digit, press **3** and count all the red blinks. If there are no blinks, the digit is "0".
-  For the fourth digit, press **4** and count all the red blinks. If there are no blinks, the digit is "0". **Now you have your four-digit code.**

- To blink back the code for your other devices press the appropriate device key during step 1.

Quick Code Reference

Write down the codes for your devices in the boxes below and in the battery compartment for quick and easy reference.

Device Type	Code
1. _____	<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>
2. _____	<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>
3. _____	<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>
4. _____	<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>
5. _____	<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>

The Learning Feature

(How to copy functions from your original working remote onto the ONE FOR ALL5)

The ONE FOR ALL 5 comes with a complete library of pre-programmed codes. After you have set up the ONE FOR ALL 5 for your device, you may find that there are one or more keys that you had on your original remote, which do not have a place on the ONE FOR ALL keypad.

As a convenience, the ONE FOR ALL 5 offers a special Learning feature that allows you to copy any function from your original remote control onto the keypad of the ONE FOR ALL 5.

 
Before you start:







- Make sure your original remote control is working correctly.
- Make sure neither your ONE FOR ALL, nor your original remote control is pointing at your device.

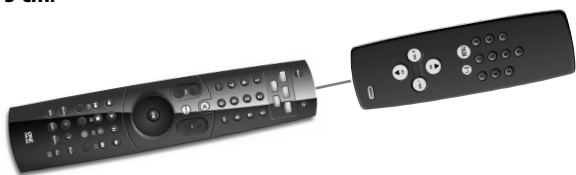• Learning (Direct)

Example: To copy the "mono/stereo" function from your original TV remote onto the "Radio" key of your ONE FOR ALL 5.

- 1 Place both remote controls (the ONE FOR ALL 5 and your original) on a flat surface. Make sure the ends which you normally point at your device are facing each other. Keep the remotes at a distance of 2 to 5 cm.**



- 2**  **Press and hold the MAGIC key until one of the device keys will blink twice.** The red LED underneath the corresponding device key (depending on the device mode that was selected) will blink once then twice.
- 3**  **Press 9 7 5** (the device key will blink twice).
- 4**  Press the device key (on the ONE FOR ALL remote) to select the mode to which you want to copy the learned function (Example: TV key).
- 5**  **Press the key (on the ONE FOR ALL remote) where you want to place the learned function (Example: "Radio" key).** The device key will flash rapidly.
- 6**  **Press and hold the key (on your original remote) that you want to copy until the device key on the ONE FOR ALL blinks twice (Example: "mono/stereo" key).**
- 7** If you want to copy other functions within the same mode, simply repeat steps 5 and 6 pressing the next key you want to copy by learning.
- 8**  To exit the learning mode, **press and hold MAGIC** until the device key blinks twice.
- 9** Learning is mode specific. To access your learned function, press the appropriate device key first.

The Learning Feature

Important notes:

- During steps 2 - 7 (page 9), you have approximately 10 seconds to conduct each step. If there is a gap of more than 10 seconds between two steps, you will have to start again from step number 2.
- If you learn a function on a key, the original ONE FOR ALL feature automatically becomes shifted. You can press MAGIC then the key to access it (this excludes the Channel and Volume keys).
- The Learning feature is mode specific. Therefore you can place one learned feature per mode on the same key.
- If a Shifted Learned function is placed on the Channel and Volume keys then Colour/Brightness will be sacrificed.
- The ONE FOR ALL 5 can learn approximately 25 – 40 functions.
- You can replace a learned function by placing another learned function on top.
- Learning should not be done in direct sunlight or under incandescent lights.
- Make sure you are using new batteries before following the instructions above.
- Upon changing the batteries, your learned functions will be retained.

• Shifted Learning

You can also learn a function on a key of the ONE FOR ALL without sacrificing the original ONE FOR ALL function. A Shifted Learning function can also be put on any key EXCEPT for the following: Device keys, MAGIC key, Number keys. To install a Shifted Learning function, simply follow steps 1-8 on the previous page. During step 5, press MAGIC once before you press the key where you are placing the learned function.

To access the shifted function, press MAGIC and then the key you have learned on.

The Learning Feature

To delete a learned function:

- 1 Press and hold the MAGIC key until one of the device keys will blink twice.** The red LED underneath the corresponding device key (depending on the device mode that was selected) will blink once then twice.
- 2 Press 9 7 6** (the device key will blink twice).
- 3 Press the device key** in which the function will be deleted.
- 4 Press twice on the learned key which will be deleted** (the device key will blink twice).*
- 5** If there is another key which you wish to delete, repeat steps 1-4.
- 6** The original functions of the ONE FOR ALL 5 will now be present.

* To delete a Shifted Learned feature, press MAGIC before you press the learned key to be deleted (during step 4).

To delete all learned functions within a specific mode:

- 1 Press and hold the MAGIC key until one of the device keys will blink twice.** The red LED underneath the corresponding device key (depending on the device mode that was selected) will blink once then twice.
- 2 Press 9 7 6** (the device key will blink twice).
- 3 Press the appropriate device (mode).**

Operational Reset

The Operational Reset will erase all learned functions across all modes and some other programmed functions like Key Magic and Macros.

- 1 Press and hold the MAGIC key until one of the device keys will blink twice.** The red LED underneath the corresponding device key (depending on the device mode that was selected) will blink once then twice.
- 2 Press 9 8 0** (the device key will blink four times).

Extra Features

Mode re-assignment

(Changing a device mode)

It is possible to change the mode of any device key. This is useful if you want to set up two of the same devices on the ONE FOR ALL 5. The code can be set up using "Direct code set up" (p. 6) or "Search method" (p. 7). To change a device key, see the three examples below.

Example 1) if you want to program a second TV on the VCR key.

Example 2) if you want to program a second TV on the SAT key.

Example 3) if you want to program a second VCR on the SAT key.

Example 1:

To program a second Television on the VCR key (for example), you need to change the VCR key into a TV key, so press:



The VCR key has now become a second TV key.

Now enter the Set-Up code for your second TV by pressing:



Example 2:

To program a second Television on the SAT key (for example), you need to change the SAT key into a TV key, so press:



The SAT key has now become a second TV key.

Now enter the Set-Up code for your second TV by pressing:



Example 3:

To program a second Video Recorder on the SAT key (for example), you need to change the SAT key into a VCR key, so press:



The SAT key has now become a second VCR key.

Now enter the Set-Up code for your second VCR by pressing:



Resetting a Device key

Example: To reset the VCR key to its original mode, press:



Example: To reset the SAT key to its original mode, press:



(*) **Press and hold down the MAGIC key until the red light (LED) blinks twice.**




(**) **The red light (LED) will blink once then twice.**

Extra Features

Volume Punch Through





You may be able to use some functions of your Television, Video recorder, DVD player, Amp./Tuner, Satellite receiver or Cable converter at the same time. For example: if you are watching a program on your video recorder, you can adjust the volume (a TV function) without pressing the TV mode key on your ONE FOR ALL 5.

To punch through to TV volume while in the VCR, DVD, AMP or SAT mode:

-  **Press and hold the MAGIC key until one of the device keys will blink twice.** The red LED underneath the corresponding device key (depending on the device mode that was selected) will blink once then twice.
-  Press **9 9 3**.
-  Then press the **TV** key and the red light will blink twice.




To cancel the "Volume Punch Through" per mode:

(Example: to cancel the "Volume Punch Through" for the VCR mode)

-  Press **VCR** once.
-  **Press and hold down MAGIC until the ONE FOR ALL 5's VCR key blinks twice** (the red LED underneath the VCR key will blink once and then twice).
-  Press **9 9 3**.
-  Then press the Volume (-) key and the red light will blink four times.

Result: being in VCR mode, you will be able to control VOL+/- or MUTE functions of your VCR (provided it has volume control).

To cancel the „Volume Punch Through“:

-  **Press and hold the MAGIC key until one of the device keys will blink twice. The red LED underneath the corresponding device key (depending on the device mode that was selected) will blink once then twice.**
-  Press **9 9 3**.
-  Press the **Volume (+)** key and the red light will blink four times.

Extra Features

Macros (Sequence of commands)

Macros (Direct)

You can program your ONE FOR ALL 5 to issue a sequence of commands at the press of one button. Any sequence of commands you regularly use can be reduced to one key stroke for your convenience. For example, you may want to turn off your TV, VCR and Satellite at the same time.

Example: To set up the Macro mentioned above on the key labeled "Radio" on your ONE FOR ALL 5:

- 1** Press and hold the **MAGIC** key until one of the device keys will **blink twice**. The red LED underneath the corresponding device key (depending on the device mode that was selected) will blink once then twice.
- 2** Press **9 9 5**.
- 3** Then press the **Radio** key to which the Macro will be assigned.
- 4** Next press **TV, POWER, VCR, POWER, SAT, POWER**.
- 5** To store the Macro, **press and hold MAGIC** until the device key blinks twice (the device key will blink once then twice).
- 6** Whenever you press the **"Radio"** key, the ONE FOR ALL 5 will turn off your TV, VCR and Satellite.

• **To erase the Macro from the Radio key, press:**

MAGIC* 9 9 5 Radio key MAGIC*

*Here you must hold down MAGIC until the device key blinks twice.

Extra Features

Shifted Macros

You can install a Shifted Macro on any key, except for the device keys (TV, VCR, SAT, DVD and AMP), the MAGIC key, and the NUMBER keys.

If for example, you want to program a shifted Macro on the POWER key, simply press MAGIC once then the POWER key during step 3.

Now everytime you press **MAGIC**, then the **POWER** key, the ONE FOR ALL will turn off your TV, VCR and Satellite.

- To erase the Shifted Macro from the POWER key press:

MAGIC* 9 9 5 MAGIC POWER key MAGIC*

* Here you must hold down MAGIC until the device key blinks twice.

- Each MACRO can consist of a maximum of 15 key strokes.
- Make sure that you program a Macro on a spare key that you don't use in any mode.
- Once you program a Macro on a specific key, the sequence will work regardless of the mode (TV, VCR, SAT, DVD and AMP) you are using.
- To avoid accidental recordings with the ONE FOR ALL 5, you must press the Record key twice to begin recording. Because of this, you cannot assign a Macro or Shifted Macro to the Record key.
- If you had to hold down a key for a few seconds on the original remote control to get a function, this function may not work in a macro on your ONE FOR ALL remote.
- If you program a Macro on a key, the original function will become shifted (excluding CH+/- and VOL+/- keys). Press MAGIC then the key to access it. If you place a Macro shifted on a digit key, access the original function by pressing MAGIC twice and then the digit key.
- If a Shifted Macro is placed on the Channel and Volume keys then the Colour and Brightness feature will be sacrificed.

Extra Features

Key Magic®

how to program missing functions

Key Magic is an exclusive ONE FOR ALL feature. The design of the ONE FOR ALL ensures that many functions of your original remote control can be operated - even those that do not have their own key on the ONE FOR ALL keypad. Frequently used functions can be assigned to a key of your choice using the Key Magic feature of your ONE FOR ALL.

In order to program a certain function with Key Magic you need to know the corresponding function code. As the function codes vary with different types of devices, they cannot be found in the manual. You can request your function codes through our consumer service help-line or by letter, fax or e-mail.

All we need to know is:

- The 5-digit set-up code your device is working with.
- How the function was labelled on your original remote control.

**You can also visit our website
(www.oneforall.com)
to find an answer to your questions.**

Once you obtain(ed) your function code(s) from customer service, programming the code is easy:

- 1 Press the device key (**TV, VCR, SAT, DVD** and **AMP**).
- 2 **Press and hold the MAGIC key until one of the device keys will blink twice.** The red LED underneath the corresponding device key (depending on the device mode that was selected) will blink once then twice.
- 3 Press **9 9 4**. The device key will blink twice.
- 4 Press the **MAGIC** key once.
- 5 Enter the **5-digit function code** (provided by customer service).
- 6 Press the **key to which the function will be assigned**. The device key will blink twice.

EXTENDED FUNCTION REFERENCE (first entry is an example):

DEVICE	SET-UP CODE	FUNCTION	FUNCTION CODE
TV	0556	16/9 format	00234

- To access the function you have programmed, press the corresponding device key first.
- Key Magic can be assigned to any key EXCEPT the Device keys and the MAGIC key.
- Please note all the extended function codes you obtain from customer service for easy future reference.

Extra Features

Colour and Brightness

Depending on the functions of your original remote control, the ONE FOR ALL may operate the colour and brightness settings of your television.

Colour (+) = Press and release MAGIC then hold Volume (+)

Colour (-) = Press and release MAGIC then hold Volume (-)

Brightness (+) = Press and release MAGIC then hold Channel (+)

Brightness (-) = Press and release MAGIC then hold Channel (-)

Trouble-Shooting

Problem:	Solution:
Your brand is not listed in the code section?	Try the search method on page 7.
The ONE FOR ALL does not operate your device(s)?	A) Try all the codes listed for your brand. B) Try the search method on page 7.
The ONE FOR ALL is not performing commands properly?	You may be using the wrong code. Try repeating the Direct Set-Up using another code listed under your brand or start the search method over again to locate the proper code.
Problems changing channels?	Enter the channel number exactly as you would on your original remote.
Video not recording?	As a safety feature on your ONE FOR ALL, you must press the Record key twice.
The ONE FOR ALL does not respond after pressing a key?	Make sure you are using new batteries and are aiming the ONE FOR ALL at your device.
The device key does not blink when you press a key?	Replace batteries with 4 fresh, new AAA/LR03" alkaline batteries.

TV

888 0264
 A.R. Systems 0037 0373 0556
 Accent 0037 0556
 Accusound 0860
 Acer 1339
 Acoustic Solutions 1667 1727 1545 1523
 1865 1037
 0625
 Adcom 0653 0108
 Addison 0093 0264
 Admiral 1613
 Advent 0037 0556
 AEA 0606 1556 1037 1324
 AEG 1667 1163 2239 2197
 0891
 Aftron 0264
 Agashi 0037 0556 0371 0035
 Aiko 1681 0880 0361 0191
 0264
 Aim 0037 0556 0753 0208
 0706 0698 0634 0606
 0499
 Airis 1833
 Aiwa 0701 1916 1505
 Akai 0361 1326 1413 0556
 0208 0371 0037 0191
 0035 0753 0806 0714
 0706 0698 0715 0812
 0480 0264 0178 0606
 1037 0473 1248 1727
 1308 1865
 Akashi 0860
 Akiba 0037 0556
 Akira 2241 0753 0037
 Akito 0037 0556
 Akura 0037 1687 0264 0556
 0668 1667 1645 1770
 1585 0714 1982 1983
 1363 2239 2059
 Alba 0037 1037 0556 0714
 0371 0668 0487 0443
 1997 1865
 Alkos 0035
 Allstar 0037 0556
 All-Tel 0865
 Amitech 1849
 Amstrad 0037 0264 0371 0556
 1037 1324 1982
 Anam 0037 0556 0650
 Anam National 0037 0650 0556
 Andersson 1163 1667 1585
 Anglo 0264
 Anitech 0264 0037 0556
 Ansonic 0037 0556 0668 0292
 AOC 1588 0625 2111 2214
 0093 0108 0178
 Aolinpike 0264
 Apollo 0473
 AquaVision 1606
 Arc en Ciel 0109
 Arçelik 0714
 Ardem 0486 0714 0633 0037
 0556
 Arena 0037
 Aristona 0556 0037
 Art Mito 1585
 Asberg 0037 0556
 Astra 0037 0556
 Asuka 0264
 ATD 0698
 Atec 1606

Atlantic 0037 0556
 Audiosonic 0037 0820 0556 0109
 1308 1681 0714 0715
 0264 0486 1983
 Audioton 0486 0264
 Audioworld 0698
 AWA 0037 0556 0606 0108
 0264 0178 0698 1681
 2241
 Axxon 0714
 Azuki 2239
 Baier 1324 2239
 Baihe 0264
 Baile 0661
 Baird 0343 0109 0208 0606
 Bang & Olufsen 0565 0620
 BaoHuaShi 0264
 Base 0780
 Basic Line 1667 0037 0668 0556
 1037
 Bauer 0698 0706 0264
 Baur 0037 0361 0512 0535
 0195 0556 0191 1505
 BBK 1523 1645
 Beaumark 0178
 Beijing 0208 0226 0264 0661
 0812
 Beko 0714 0486 0035 0715
 0037 0556 2125 0606
 1308 0808 1652
 Belson 2241 2032
 Bennett 0556 0037
 BenQ 1562
 Bensten 1326 1413
 Beon 0037 0556
 Berthen 0668 0556
 Bestar 0037 0556
 Bestwell 1326
 Black Diamond 0820 1037 0556 0753
 1163 0587
 Black Strip 0035
 Blaupunkt 0195 0535 0191 0170
 Blue Media 1606
 Blue Sky 0037 1324 0556 1037
 0668 0714 1709 1667
 0487 0715 0625 1652
 0624 0808 1363 1916
 1324
 Boman 1363
 Bork 1363
 BPL 0037 0556 0896 0373
 0208 1208 1637
 Brandt 0109 0625 0335 0287
 0343 0560
 Brandt
 Electronique 0287 0335
 Brimax 1709
 Brinkmann 0037 0556 0668 0486
 Brionvega 0037 0556
 Brother 0264
 Bruns 0486
 BSR 0361
 Bush 1037 1326 1441 1585
 0037 0714 2125 0668
 1652 0371 0698 0264
 0361 0487 0208 1556
 0556 1667 1982 1248
 1916 1682 0587 1687
 1308 2053 2214 1983
 2241
 Buxtron 0698
 Caishi 0891
 Cameron 1523 0556
 Camper 0037 0556 0486
 Capsonic 0264
 Carad 0610 0037 0556 0668
 1037
 Carena 0037 0556

Carrefour 0037 0556
 Carver 0170
 Cascade 0037 0556
 Casio 0037 0556
 CAT 1682
 Cathay 0037 1727 0556
 CCE 0037 0556
 Celestial 0820
 cello 1770
 Centrex 0780 0891 0698 1702
 Centrum 1037
 Centurion 0037 0556
 CGE 0074
 Changcheng 0264 0661
 Changfeng 0264 0753
 Changhong 0820 0264 0508
 Chimei 1852 1666 1505
 Chunfeng 0264
 Chung Hsin 0108 0653
 Cinex 2197 1556 1982
 Clarity 1720
 Clarivox 0037 0556
 Clatronic 0037 0371 0714 0264
 0556 0606 1324 1163
 Clayton 1037
 Cobolt 0891
 Condor 0037 0556 0264
 Conia 1687 0754 1645 0820
 1702 1523 2032
 Conrac 0808
 Conrad 0037 0556
 Conrowa 0264 0698 0753
 Contec 0264 0037 0556
 Continental
 Edison 0109 0287 0487
 Cosmel 0037 0556
 CPTEC 0625 1363
 Crosley 0074
 Crown 0712 0037 0486 0556
 0487 0714 0606 0715
 0373 0208 0653 1037
 1652 0668
 Curtis Mathes 0093
 CWR-Tech 1324
 Cyberpix 1667
 Cytronix 1298
 D.Boss 0037
 Daewoo 0634 0661 1849 2098
 0499 0624 0037 0556
 1137 0178 0170 0880
 0108 0865 0698 0714
 0706 2037
 Dansai 0037 0556 0264 0035
 0208
 Dantax 0486 1652 1916 0714
 0606 1037 0715
 Datsura 0373 0208
 Dawa 0037 0556
 Daytek 0698 0706 0264
 Daytron 0037 0556
 Dayu 0661
 de Graaf 0208
 DEC 0860 0891 1326 0896
 Decca 0037 0556 1137
 Deitron 0037 0556
 Denko 0264
 Denver 0037 1324 0556 0606
 0587 1709 2139 2197
 Desmet 0037 0556
 DGM 2239 2059
 Diamant 0037 0556
 Diamond 0264 0698 0371 0860
 0820 0896 1681 0706
 DiBoss 0037 0556
 Digatron 0037 0556
 Digihome 1667
 Digiline 0037 0556 0668

DigiLogic 0037 0556
 Digital Device 1606
 Digitek 1709
 Digtex 0820
 Digitor 0037 0556 0888
 Digivision 0361
 DigiX 0880
 DiK 0037 0556
 Dixi 0037 0556
 DL 0891 0780 0037 0587
 0865 1363 1326
 DMTECH 2001
 Domeos 0668 0037 1037
 DSE 0888 1556 0820 0698
 1682 2241 2032 2098
 1326
 Dual 0343 0037 0556 1137
 1667 1037 2032 2241
 1324 1163
 Durabrand 0037 0178 0556 1652
 1037
 Dux 0037 0556
 D-Vision 0037 1982 0556
 DVX 0891
 Dynatron 0037 0556
 Dyon 2241
 e:max 1324 0606
 Easy Living 1248 1709 1613 1308
 2005 1556 1666
 Ecco 0706 0698
 ECE 0037 0556
 Edison-Minerva 0487
 Elbe 0610 0292 0037 0556
 0191 0361
 Electrion 1585
 Elekta 0037 0556 0264
 Elfunk 1208 1037
 ELG 0037 0556
 Elin 0037 0556 0361
 Elite 0037 0556
 Elonex 1776
 Elta 0264
 Emerson 0178 0714 0037 0556
 0371 0361 0624 0486
 0668
 e-motion 1709
 Enzer 0753 0860
 Erisson 1682
 Erres 0037 0556
 ESC 0037 0556
 Etron 0037 0556 0820
 Eurofeel 0264
 EuroLine 0037
 Euroman 0264 0037 0556
 Europa 0037 0556
 Europhon 0037 0556
 Evesham 1667 1248 1606
 Excel 0037 0556
 Excelllo 1037
 Exquisit 0037 0556
 Fagor 0037 0556
 Family Life 0037 0556
 Feiyan 0264
 Ferguson 0037 0109 0625 0287
 0335 0343 0560 0556
 0035 0653 0108 0361
 0443 1037 1916 2053
 1865
 Fidelity 0512 0361 0037 0556
 0371 0264
 Finlandia 0208 0361 0287 0343
 Finlux 0037 0556 0714 1585
 1667 0715 0480 1556
 0473 0606 0808 1248
 Fintec 1982

Firstline 0037 0556 0668 0714
 0624 0208 0361 1037
 0808 1363 1163 1308
 Fisher 0208 0361
 Flint 0037 0556 0610 0264
 Force 1667
 Formenti 0037 0556 0486
 Fortress 0093
 Fraba 0037 0556
 Friac 0037 0556 0499 0610
 Frontech 0264
 Fuchsware 0780
 Fujicom 1709
 Fujimaro 0865 1687 1645
 Fujimaru 1687
 Fujitsu 0853 0037 0556 0361
 Fujitsu Siemens 1666 1298 1248 1163
 0808
 Funai 1817 1394 0264 1037
 1666 1595 0668 1505
 0714
 Furi 0264
 Furichi 0860
 Futronic 0264 0860 0698
 Future 0037 0556
 Gaba 1037 0037
 Galaxi 0037 0556 0361
 Galaxis 0037 0556
 Garza 0556
 GE 0343 0178 0560 0287
 0109 0335 0625
 GEC 0037 0361 0556
 General 0109 0287
 General Electric 0343 0287
 Genesis 0037 0556
 Genexxa 0037 0556
 Gericom 0865 1606 1298 0880
 0808
 G-Hanz 1681 1363
 Gold 1833 1770
 Goldfunk 0668
 GoldStar 0037 0178 0556 0361
 0109 0606 0714 0715
 Gooding 0487
 Goodmans 0634 0715 1248 1037
 0624 0037 1795 0499
 0556 0714 0343 0668
 0371 0264 0487 0035
 0480 0560 0335 0661
 0880 1308 0587 1667
 1727 1645 1687 1682
 1720 2053 1983 2223
 2393
 Gorenje 1585 1667
 GP 0753
 Gradiente 0653 0170 0037 0556
 Graetz 0714 0361 0371 0037
 0556 1163
 Granada 0037 0556 0208 0226
 0108 0473 0335 0560
 0343
 Grandin 0037 1652 0556 0610
 0714 0715 0668 1037
 0865 0880
 Grundig 0195 0508 0535 1223
 0037 2059 0487 1687
 0191 0556 1582 0587
 0706 1037 0443 1916
 1308 0178 0343 1667
 2053 2239 2125 1324
 Grunkel 1163
 GVA 1326
 H&B 0808 2001
 Haaz 0706
 Haier 0698 0264 0037 0508
 0587 0896
 Haiyan 0264

Halifax 0264
 Hallmark 0178
 Hammerstein 0264
 Hankook 0178
 Hanns.G 1613
 Hannspree 1351 1613 1776 2214
 Hanseatic 0037 0556 0499 0361
 0661 0292 0634 0373
 0714 0808 0486 0625
 2001
 Hantarex 2197 0037 0556 0865
 Hantor 0037 0556
 Harsper 0865
 Harwood 0037 0556 0487
 Hauppauge 0037 0556
 Havermy 0093
 HCM 0037 0556 0264
 Hedzon 0556 0037
 Hicon 1298
 Hifivox 0109
 Highline 0264 0037 0556
 Hikona 1983
 Hinari 0208 0037 0556 0443
 0487 0264
 Hisawa 0610 0714
 Hisense 1363 0208 2098 2037
 0508 0753 0698 0891
 0860 0780 1208 2341
 0556
 Hitachi 1576 1772 0481 0578
 2207 0108 0744 1585
 1037 0109 1687 1667
 0634 0178 0473 0343
 2214 1163 0508 0499
 0480 0037 0556 1137
 0361
 Hitachi Fujian 0108 0037 0556 0860
 0499
 Hitsu 0610
 Höher 0714 1556 0865 1163
 Home
 Electronics 0606
 Hongmei 0093 0264
 Hongyan 0264
 Horizont 1617
 Hornyphon 0037 0556
 Huangshan 0264
 Huanyu 0264
 Huaqiang 0264
 Huari 0264
 Hugoson 1666
 Humax 1295 1539
 Hypersonic 0361
 Hypson 0037 0264 0556 0714
 0715 1037 0668 0486
 Hyundai 0860 0037 0865 0556
 2139 0698 1326 0753
 1681 1770 0264 0888
 1037 1606 0706 1556
 Iberia 0037 0556
 ICE 0264 0037 0371 0556
 Ict 0037 1137 0556
 iDEAL 1556
 IISonic 1613
 Imperial 0037 0074 0508 0556
 2197 0361
 Imperial Crown 0264 0661
 Indiana 0037 0556
 Ingelen 0487 0610 0714 0361
 Inno Hit 1037 0037 0556 1163
 1585
 Innova 0037
 Innovation 0037 0556
 Innowert 0865 1298
 Inotech 0820
 Inspira 1324 1556

Interactive 0037 0556 0512 0361
 0109
 Interbuy 0037 0264 0512 0556
 Interfunk 0037 0556 0361 0512
 0109
 Internal 0037 0556 0624 0499
 Intervision 0037 0264 0371 0486
 0487 0556
 Irradio 0037 0556 0371 0714
 IRT 0698
 Isukai 0037 0556
 ITS 0037 0371 0264 0556
 ITT 0361 2125 0480 0473
 0208 0610 1523
 ITT Nokia 0361 0473 0480 0208
 0606 0610
 ITV 0037 0264 0556
 JDV 1982
 JEC 0035
 JGC 1709
 Jialicai 0264
 Jinfeng 0208 0226
 Jinque 0264
 Jinta 0264
 Jinxing 0264 0698 0037 0556
 JMB 0037 0499 0634 0556
 0443
 JNC 1702 0896
 Jocel 0712
 JTV 0860
 Jubilee 0556
 Juhua 0264
 JVC 0653 1818 2118 0606
 1653 0371 0508 0093
 0650
 Kaige 0264
 Kaisui 0037 0556
 Kambrook 0264
 Kanghua 0896
 Kangli 0264 0661
 Kangyi 0264
 Kapsch 0361
 Karcher 0037 0556 0610 0264
 0714 1556 0606 1982
 2125 1308
 Kathrein 0556 0037 0880
 Kawa 0371
 Kendo 0037 0610 0556 0512
 1585 1037 0486 1667
 1163 1137
 Kennex 1037
 Keydo 1702
 Keymat 1326 1413
 Kingsbrook 1037
 Kioto 0556 0706
 Kiton 0556 0037 0668
 KLL 0037
 Kneissel 0037 0610 0499 0556
 0292
 Kobra 1298
 Kolin 0653 0108
 Kolster 0037 0556
 Kongque 0264
 Konka 0037 0556 0371 0714
 0587 0754 0606
 Kontakt 0487
 Korpel 0037 0556
 Kosmos 0037 0556
 Kotron 0264
 Kuaille 0264
 Kunlun 0208 0226 0264 0661
 Kuro 0373
 Kyoshu 0264
 L&S Electronic 0865 0714
 LaSAT 0486
 Lavis 1037 0037
 Lecson 0037 0556

Lenco 0037 0556 0587 1037
 1983
 Levis Austria 0037 0556
 Leyco 0037 0264 0556
 LG 2182 1423 1663 0178
 0037 0556 1305 1859
 1842 0714 1637 0644
 0606 0108 0715 1681
 0109 0698 0361
 Liesenkötter 0037 0556
 Lifetec 0037 0668 1037 1137
 2001 0512 0556 0714
 0264 1248
 Local
 Calcutta TV 0208 1208
 Local
 Chennai TV 1413 0371 0264 0806
 1236 1367 1441
 Local Delhi TV 0508
 Lodos 1037 1667
 Loewe 0512 0633 1884 0556
 0292
 Logik 0698 1865 0264 0371
 1702 0880 1037 1687
 1645
 Logix 0668
 Longjiang 0264
 Luker 1982
 Luma 0037 0556
 Lumatron 0037 0556 0361 0264
 Lux May 0037 0556
 Luxor 1163 0361 0480 0208
 0473 1037
 LXI 0178
 Madison 0037 0556
 Magnavox 0037 0556 0706 0780
 0753
 Magnum 0714 0037 0556 0715
 1556
 Mandor 0264
 Manesth 0037 0556 0264 0035
 Manhattan 0037 0556 0668 1037
 Maqma 1298 1702 1709 1606
 Marantz 0037 0556
 Mark 0037 0556 0714 0715
 Marks
 and Spencer 1770
 Mascom 1556 0556 0037
 Mastec 1997
 Master's 0499 0037
 Masuda 0371 0264 0037 0556
 Matsui 0037 1163 0556 0487
 0035 0443 2007 0208
 0371 0195 0191 0335
 0714 1037 1916 1666
 0880 1667
 Matsushita 0650
 Matsuviana 0587
 Maxam 0264
 Maxdorf 0698 0706 0264
 Maxim 1982 1556
 Mediator 0037 0556
 Medion 0668 0714 0808 1037
 0037 0556 0512 1137
 0698 1248 0880 1916
 1556 1667 2001
 Megas 0610
 Megatron 0178
 MEI 1037 0037 0556
 Meile 0264
 Melectronic 0037 0512 0109 0343
 0287 0480 0556 0624
 0634 0361 0191 0195
 0661 0714 1652
 Memorex 0178 1037 0650
 Memory 1983

Mercury 0037 0698 0264 0556
 0706
 Mermaid 0037
 Merritt 0361
 Metronic 0625
 Metz 0535 1533 0746 0447
 1163 0195 0191 0037
 0556 0587 0668 1037
 MGA 0178 0037 0556
 Micromaxx 0037 0556 0668 1037
 0808 1324 2001 0714
 Microspot 1614
 Microstar 0808
 MicroTEK 0820 0698 0860 0706
 0264
 Mikomi 1667 1163 0744 1585
 Minato 0037 0556
 Minerva 1248 0487 0535 0195
 0191 0108
 Ministry
 of Sound 1667
 Minoka 0037 0556
 Mirai 1666 1852 1651
 Mitsai 1556
 Mitsubishi 0108 0512 0093 0178
 0037 0650 0535 0556
 0208 1037
 Mivar 0609 0292
 Moree 0037
 Morgan's 0037 0556
 Moserbaer 1667
 Motorola 0093
 MTC 0512 0361
 MTlogic 0714 1308
 Mudan 0208 0226 0264
 Multitec 0037 0556 0486 0668
 1037 1556 1982
 Multitech 0486 0037 0556 0264
 2005
 Murphy 0037 0556
 Musikland 0037 0556
 Mx Onda 1687 1983 1645
 MyCom 0178
 Myryad 0556 0037
 NAD 0178 0361 0865
 Naiko 0037 1982 0606 0556
 Nakimura 0037 0556
 Nanbao 0264
 Nansheng 0264
 Narita 1982
 NAT 0226
 National 0226 0208 0508
 NEC 0170 0587 1367 0178
 1775 2461 0037 0556
 0653 0264 0508 0499
 0661
 Neckermann 0037 0191 0556 1505
 0512
 NEI 0037 0556 0371 1037
 NEO 0754 1324
 Neon 1770
 Neovia 0865
 Netsat 0037 0556
 Neufunk 0037 0556 0610 0714
 New Tech 0037 0556 0343
 Newave 0178 0093
 Nikkai 0035 0037 0556 0264
 1667
 Nikkei 0714
 Nikko 0178
 Nintaus 0891
 Nogamatic 0109
 Nokia 0361 0473 0480 0606
 0208 0610 0109

Nordmende 0109 0891 0287 0343
 0560 0195 0037 0556
 0335 1248 0714 2001
 1413 0443 2007 1585
 1667 1163 1308
 Normerel 0037 0556
 Novak 0037 0556
 Novatronic 0037 0556
 Novex 1523
 Novita 1585
 Nurnberg 0361
 NU-TEC 0698 0820 0037 0556
 0706 0264
 O.K.Line 1037 1324 1556
 Oceanic 0361 0208 0473 0480
 2001
 Odeon 0264
 Odys 1795
 Okano 0037 0556 0264
 OKI 1037 2125
 Omega 0264
 Omni 0780 0891 0698
 Onei 1667
 Onida 0653
 Onn 1667 1709 2125 0556
 1770
 Onwa 0371
 Onyx 1709 1770
 Opera 0037 1308 0556 0714
 Optimus 0650
 Optonica 0093
 Orava 1037
 Orbit 0037 0556
 Orion 0037 2007 2032 2005
 0443 0714 2108 0556
 0264 1916 0880 2001
 Orline 0037 0556
 Ormond 0668 1037 0037 0556
 Osaki 0264 0037 0556
 Osio 0037 0556
 Osume 0037 0556
 OTIC 1687 1645 1983
 Otto Versand 1505 0037 0343 0093
 0512 0535 0556 0195
 0191 0361 0109 0226
 0373
 Pacific 0037 0556 1137 0714
 1037 0443 1324
 Palladium 0037 0714 1137 0191
 1505 0556 1982
 Palsonic 0264 0037 0698 0556
 1326 1681 1795 2461
 Panache 1585
 Panama 0264 0037 0556
 Panasonic 0650 0226 1636 1650
 0037 0556 0208 0508
 0896 0361 0853 0108
 Panavision 0037 0556
 Panda 0208 0226 0264 0508
 0698 0780 0706 0891
 Papouw 0037 0556
 Pathe Cinema 0292
 Pathe Marconi 0109
 Peng Sheng 0891
 Penney 0178
 Perdio 0037 0556
 Perfekt 0037 0556
 Philco 0074 0037 0556 0178
 0481
 Philips 0037 0556 1506 0639
 0605 1744 2015 1583
 1867 0178 0108 0343
 0361
 Phocus 1308 0714 1652
 Phoenix 0037 0556 0486
 Phonola 0037 0556
 Pilot 0556 0037 0712 0706

Pioneer 1260 0760 1457 0109
0170 0679 0037 0556
0287 0343 0361 0486
0512
Pionier 0486
Plantron 0037 0556 0264
Playsonic 0714 0037 0715 1652
Polar 0037
Polaroid 1523 1720 1645 1687
2125
Policom 0109 0361 0074 0535
Portland 0624
Powerpoint 0487 0037 0556 0698
1770
Prandoni-Prince 0361
Premier 0264 0891
President 0860
Prima 0264
PrimeView 1606
Princess 0698 1326
Prinston 1037
Prinz 0361
Profex 0361
Profilo 1556
Profitronic 0037 0556
Proline 0037 1613 1727 1545
0556 0625 0634 1037
2223
Prosonic 0037 0556 1865 0880
0371 0668 0714 2139
2001 1324 1770 2106
1709 0606 2197 2100
2125 1545 1849 0715
Protech 0037 0556 0264 0668
0486 1037
Proton 0178 0644
Proview 1687 1645
Provision 0499 0037 0556 1037
0714 1324
PVision 2001
Pye 0037 0556
Qingdao 0208 0226 0264
Quadro 0753 1326 0556 0037
1667 1163
Quasar 0650 0865
Quelle 0037 1505 0074 0361
0109 0535 0512 0191
0668 0556 0195 0264
1037
Radialva 0109 0037 0556 0287
Radiola 0037 0556
Radiomarelli 0037 0556
Radionette 0714
RadioShack 0037 0556 0178
Radiotone 0037 0556 0668 0264
1037
Rank Arena 0753
RCA 0625 0093 0178 0560
0335 0618 0343 0679
0753
Realistic 0178
Recor 0037 0556
Rectiligne 0037 0556
Red Star 1556
Reddiffusion 0361
Redstar 0037 0556
Reflex 0037 0556 1037 0668
Relisys 0865 1298 1585 1645
Reoc 0714 0624 0634
Revox 0037 0808 0556
Rex 0264
RFT 0292 0264 0037 0556
0486
Ricoh 0037 0556
Rinex 0698 0264 0706
R-Line 0037 0556

Roadstar 1037 0715 0264 0037
0556 0714 0668 1916
1326
Rodex 0037 0556
Rolsen 0037 0556 2098 2037
Rowa 0037 0264 0698 0712
1441 0706 0587 0556
Royal 0606
Royal Lux 0335
Rukopir 0556 0037
Saba 0109 0625 0560 0287
0335 0343 0361 0650
0714 1588
Sagem 0610 0830 0618
Saisho 0634 0264
Saivod 0037 1982 0556 1163
1556 0668 0712 1037
Salora 0361 0373 0208 0480
1556 2125 2197 2001
Salsa 0335
Sampo 0093 0178 0650
Samsung 0644 0812 2051 0618
0178 0587 1312 2103
0093 1619 1458 0556
2137 1249 1630 1584
1235 0037 0264 0208
0226
Sanjian 0264
Sansui 0037 1709 0556 0706
0371 1413 1236 0888
0753 0698 0264 0806
0714 1248 1681 1556
Sanyo 0208 1208 0292 2461
0508 0373 0037 0108
0556 0486 0170 0264
1037 1667 1163 1585
Sanyuan 0093
Save 0037 0556
SBR 0037 0556
Schaub Lorenz 0361 0714 0606 0486
1324 1363 2100 1667
2125 1308
Schneider 0037 1137 0556 0371
0668 0343 0361 1037
0714 0624 1982 1916
1617 1324
Schöntech 1037
Scotch 0178
Scott 0178 1983
Sears 0178
Seaway 0634
Seelver 0556 1037 0037
SEG 1037 0037 0264 1163
0556 0668 0487 0634
0624 1667 2125
SEI 1505 0037 0556
Sei-Sinudyne 1505 0037 0556
Seitech 1324
Seleco 0371 0264
Sentra 0035
Serie Dorada 0178
Serino 0610 0093 1193
Shancha 0264
Shanghai 0208 0226 0264
Sharp 0093 1193 1659 2214
1587 1819 0650 0653
Shencai 0264
Sheng Chia 0093
Shenyang 0264 0753
Shintoshi 0037 0556
Shivaki 0037 0556 0443 0178
Show 0698 0264 0706 0037
Siemens 0037 0191 0195 0535
0556 0361
Siera 0037 0556 0587
Silva 0037 0556 0361
Silva Schneider 0753 1556 2125

Silver	0037	0361	0556	0715
SilverCrest	1037	0037	0556	
Singer	0806	0698	0037	1556
	0556	0335		
Sinotec	0606	0698		
Sinudyne	1324	0361	1505	0037
	0556	0606		
Sky	0037	0880	1614	0178
	0556	1613	1606	1775
	0661	0865		
Skysonic	0753			
Skyworth	0037	0556	0264	0698
	0753			
Sliding	0865	0880	1324	
SLX	0668			
Smaragd	0487			
Soemtron	0865	1298		
Solavox	0361	0037	0556	
Sonic	0753	1702		
Soniko	0037	0556		
Soniq	1298	1702		
Sonitron	0208			
Sonneclair	0037	0556		
Sonoko	0037	0556	0264	
Sonorol	0208	1505	0361	
Sontec	0037	0556		
Sontech	1983			
Sony	1505	1825	1651	0650
	1625	1751		
Sound & Vision	0037	0556		
Soundesign	0178			
Soundwave	0037	0556	0715	
Sowa	0226	0178		
Soyo	1709			
Standard	0037	0556	1037	1709
Starion	1037			
Starlite	0037	0556	0264	
Stern	0264			
Stevison	1982	1556		
Strato	0037	0556	0264	
Strong	1163	1667	1037	0037
	0556			
Sungoo	1248	2037		
Sunic Line	0037	0556		
Sunkai	0610	0037	0556	0487
	0865			
Sunny	0037	1617		
Sunstar	0371	0037	0556	0264
Sunstech	2001			
Sunwood	0037	0556		
Supersonic	0208	0556	0698	0264
	0037			
SuperTech	0037	0556		
Supervision	0698	0264		
Supra	0178	0037		
Susumu	0335	0287		
SVA	0587	0698	0264	0865
	0208	0706		
Svasa	0698	0208	0706	0264
Swedex	1606			
Swisstec	1613	1614	1606	0880
	0865	1775	1776	1849
	2059			
Synco	0093	0178		
Sysline	0037	0556		
T+A	0447			
Tacico	0178			
Tandberg	0109	0361		
Tandy	0093			
Targa	0618			
Tashiko	0650	0170		
Tatung	1720	0037	1248	1556
	0556	1324		
Tauras	2197			
TCL	0806	1916	0625	0698
	0706			
TCM	0714	0808	2001	1308

Teac	0698	1645	2168	0037
	0264	1037	0556	0512
	0712	0668	0706	0624
	0178	0170	0714	1667
	1617	1363	1795	0587
	1770	1709	2032	2241
TEC	0335	0037	0556	0361
Tech Line	0037	0556	0668	1163
Technica	1982			
Technics	0650			
Technika	2032	1865	2059	1849
	2106	1667	1983	1585
	2125	2197		
TechniSat	0037	0556	2422	
Technisson	0714	1652		
Techno	1585	1037		
Technol Ace	0698	0264	0634	
Technosonic	0037	0556	1324	0499
	0880	1326	1982	2032
Technotrend	1702			
Techvision	1709	2032		
Techwood	1163	1037	1667	
Tecnimagen	0556			
Teco	1523	0093	0178	0264
	0653			
Tedalex	0698	0706	0606	0037
	0208	0891	0587	0556
	0806	1709	1681	0264
Tek	0820	0037	0698	
TELE System	2125			
Teleavia	0109	0343	0287	
Telecor	0037	0556		
Telefunken	0625	1667	0560	0074
	0109	0587	0698	0335
	0343	0712	0820	0896
	0754	0780	0891	0287
	1681	0753	0706	0037
	0556	0486	0714	1556
	1585	1588		
Telefusion	0037	0556		
Telegazi	0037	0264	0556	
Telemeister	0037	0556		
Telesonic	0037	0556		
Telestar	0037	0556	1849	
Teletech	0037	0556	0668	1037
Television	0037	0556		
Tempest	0037	0556	0264	
Tennessee	0037	0556		
Tensai	0037	0556	0371	0715
	1037			
Tesla	1037	0037	0668	0714
	1652	0715	1137	0371
	0753	0556	0610	
Tevion	1248	1298	1645	0037
	0556	1556	1667	0808
	2032	2100	0865	0668
	1687	1137	0714	2241
	1037	1585		
Texla	0780			
Thes	1849			
Thomson	0560	0625	0109	0343
	0287	0753	0335	0037
	0556	1588		
Thorn	0035	0108	0109	0037
	0074	0343	0361	1505
	0499	0512	0535	0556
	0335			
Thorn-Ferguson	0108	0343	0109	0361
	0499	0335	0035	
Tiane	0093			
Time	1702	1997		
TMK	0178			
Tobo	0264			
Tokai	0037	0556	0668	1037
Tokaido	1037			
Tokyo	0035			
Tongguang	0264			

Tongtel 0780 0587
 Top Show 0698 0264 0706
 Topline 1037 0668
 Toshiba 1508 0718 0508 0035
 0714 0093 0264 0618
 0644 1582 0650 0109
 1457 0195 0191 1916
 0698 0037 1556 1037
 Tosumi 1982 1770
 Toyoda 0371 0264
 Trakton 0264
 TRANS-
 continents 0668 1037 0865 0556
 0037 0486
 Transonic 0037 0698 0712 0556
 0587 0512 0264 1363
 1326 0780
 Triad 0037 0556
 Trio 1687 1248 1645
 Tristar 0264
 Triumph 0556 0037
 TVE 2239
 TVTEXT 95 0556
 Uher 0037 0556 0486 0480
 Ultravox 0037 0556
 UMC 1606 1775 1614 1849
 2059 2106 2168
 Unic Line 0037 0556 0473
 United 0714 1983 0037 0715
 0556 1916 1037 0587
 1982 1652 1770
 Unitron 1681
 Universal 0714 0037 0556
 Universum 0037 1037 0074 1163
 0264 0668 0535 0480
 0195 0473 1667 0361
 0512 0556 1505 0109
 0170 0618
 Univox 0037 0556
 V7 Videoseven 0178 0880 1666 0618
 1651 1505
 Vanguard 0037 0556
 Venturer 1727 1545 1865
 Venus 1326
 Vestar 1137
 Vestel 0037 1037 1163 1585
 1667 0668 0556
 Vexa 0037 0556
 Victor 0653 0650
 Videocon 0508
 VideoSystem 0037 0556
 Vidtech 0178
 ViewSonic 1627 1588 2111
 Vision 0037 0264 0556
 Vistar 0361
 Vistron 1363
 Visual
 Innovations 2106
 Vivax 1326 1308 1617 1702
 0037 1709
 Vivo 2032 2100
 Vortec 0037 0556
 Voxson 0178 0037 0556 2197
 VSA 1413
 VU 2098 2037
 Vue 1236
 Walker 1667
 Waltham 0287 0037 0556 0668
 0109 1037 0443
 0178
 Wards 0661 0634
 Warumaia 0037 1037 1248 0556
 Watson 0668
 Watt Radio 0486
 Wega 0037 0556
 Wegavox 0037 0556
 Welltech 0714 1652

Weltblick 0037 0556
 Weltstar 1037
 Weston 0037 0556 1441
 Wharfedale 0037 0896 1613 0891
 0860 0556 0698 1556
 0706 1681 1324 1667
 1983
 White
 Westinghouse 0037 0556 0624
 Wilson 0556
 Windsor 0668 1037
 Windy Sam 0556
 Wintel 0714
 World-of-Vision 0880 0865 1298 1606
 XDome 0508
 Xenius 0634 0661
 Xiahua 0264 0698
 Xiangyang 0264
 Xihu 0264
 Xinghai 0264
 Xiron 1983
 XLogic 0698 0860
 XMS 1441
 Xomax 1770
 Xoro 1324
 Xrypton 0037 0556
 Yakumo 1613
 Yamaha 0650 1576
 Yamishi 0037 0556
 Yapshe 0650
 Yokan 0037 0556
 Yoko 0037 0264 0556 0373
 YU-MA-TU 0037
 Yüsmart 1613
 Zenith 0178 0624
 Zepto 1585
 Zonda 0698

VCR

Aim 0278 0642 0348
 Aiwa 0348 0352 0037 0742
 1137 0032 1032
 Akai 0037 0315 0642 0352
 0240 0348
 Alba 0278 0352 0315 0348
 0081
 Allorgan 0240
 Allstar 0081
 Amstrad 0278
 Aristona 0081
 ASA 0037 0081
 Asuka 0037 0081
 Audiosonic 0278
 AVA Technology 0615
 AVP 0352
 AWA 0037 0278 0642
 Baird 0278 0104
 Basic Line 0278 0104
 Beko 0104
 Bestar 0278
 Black Diamond 0642 0278
 Black Panther 0278
 Blaupunkt 1562 0226 0081
 Blue Sky 0037 0348 0352 0278
 0642 1137 0742
 Brandt 0320
 Brinkmann 0348
 Broksonic 0742 0352
 Bush 0278 0315 0352 0348
 0081 0642 0742
 Carena 0081

Carrefour 0045
 Cathay 0278
 Centrum 0593
 Combitech 0352
 Condor 0278
 Crown 0037 0278
 Cyrus 0081
 Daewoo 0278 0642 0348 0352
 0045
 Dansai 0278
 Dantax 0352 0742
 Daytron 0278
 de Graaf 0042 0081 0104 0048
 Decca 0081 0067 0348 0352
 Deitron 0278
 Denon 0042
 Diamant 0037
 Diamond 0278
 Digator 0642
 DSE 0642
 Dual 0081 0278 0348
 Dumont 0081 0104
 Durabrand 0642 0593
 Elbe 0278
 Elin 0240
 Elta 0278
 Emerson 0045 1137
 ESC 0278 0240
 EuroLine 0348
 Ferguson 0320 0278 0348 0742
 Fidelity 0240 0432 0352
 Finlandia 0104 0081 0042 0048
 0037 0226
 Finlux 0081 0104 0042
 Firstline 0348 0037 0045 0042
 0278 1137
 Fisher 0104
 Flint 0348
 Fujitsu General 0037
 Funai 0593
 Galaxis 0278
 GE 0320
 GEC 0081
 General Technic 0348
 Genexxa 0104
 GoldStar 0037
 Goodmans 0240 0278 0037 0081
 0348 0352 0642
 GPX 0037
 Graetz 0104 0240
 Granada 0104 0048 0081 0240
 0037 0226 0042
 Grandin 0037 0278
 Grundig 0347 0081 0226 0320
 0348 0352 0742
 Haaz 0348
 Hanimex 0352
 Hanseatic 0037 0278 0081
 Hinari 0352 0278 0240
 Hisawa 0352
 Hischito 0045
 Hitachi 0042 0240 0081 0104
 0593
 Höher 0278 0642
 Hornyphon 0081
 Hypson 0348 0278 0352 0037
 Imperial 0240
 Ingersoll 0240
 Inno Hit 0240 0278
 Interbuy 0037
 Interfunk 0081 0104
 Internal 0278
 International 0278 0037
 Intervision 0278 0037 0348
 Irradio 0037 0081 1137
 ITT 0104 0240
 ITT Nokia 0048

ITV 0278 0037
 JMB 0352 0348
 JVC 0067
 Kambrook 0037
 Karcher 0278
 Kendo 0315 0348 0037 0278
 Kneissel 0352 0348 0037 0278
 Kolster 0348
 Lenco 0278
 LG 0037 0278 1137
 Lifetec 0348
 Loewe 0081 1562 0226 0037
 Logik 0240
 Lumatron 0278 0593
 Luxor 0104 0048 0315
 Magnavox 0081 0642
 Magnum 0642
 Manesth 0045 0081
 Marantz 0081
 Mark 0278
 Mascom 0642
 Mastec 0642
 Master's 0278
 Matsui 0348 0037 0240 0352
 0742
 Maxton 0081
 Mediator 0081
 Medion 0348 0352
 Melectronic 0037
 Memorex 0104 0037 0048
 Metronic 0081
 Metz 1562 0347 0836 0081
 0226 0837 0037
 Micormay 0348
 Micromaxx 0348
 Mitsubishi 0067 0081 0642
 Multitec 0037
 Multitech 0104
 Myryad 0081
 NAD 0104
 Naiko 0642 0348
 National 1562 0226
 NEC 0067 0104 0037 0278
 1137
 Neckermann 0081
 Nesco 0352
 Neufunk 0037
 Nikkai 0278
 Nokia 0104 0315 0278 0240
 0048 0042 0081
 Nordmende 0320 0067 0642
 NU-TEC 0348
 Oceanic 0320 0048 0081 0104
 Okano 0315 0348 0278
 Onimax 0642
 Orion 0348 0352 0742
 Osaki 0037
 Otto Versand 0081
 Pace 0352
 Palladium 0315 0037 0240 0348
 0432
 Palsonic 0642
 Panasonic 1562 0226 0836 0837
 Philips 0081 0593
 Phoenix 0278
 Phonola 0081
 Pioneer 0067 0081 0042
 Portland 0278
 Profitronic 0081 0240
 Proline 0278 0615 0642 0320
 Proscoc 0278
 Prosonic 0278
 Protech 0081 0278
 Provision 0278
 Pye 0081
 Quasar 0278
 Quelle 0081

Radialva	0037	0081	0048
Radiola	0081		
Radionette	1137	0037	
RCA	0320		
Reoc	0348	0278	
Roadstar	0240	0037	0278 0742
	0081		
Saba	0320	0278	
Saisho	0348		
Salora	0104		
Samsung	0240	0432	
Sansui	0067	0348	
Sanyo	0104	0048	0067 0348
Saville	0352	0278	0240
SBR	0081		
ScanSonic	0240		
Schaub Lorenz	0104	0315	
Schneider	0037	0081	0278 0240
	1137	0042	0352 0642
Scott	0593		
Seaway	0278		
SEG	0278	0240	0642 0081
	0593		
SEI	0081		
Sei-Sinudyne	0081		
Seleco	0037		
Sharp	0048	0037	
Shintom	0104		
Shivaki	0037		
Siemens	0037	0104	0081 0320
	0347		
Siera	0081		
Silva	0037		
Silver	0278		
SilverCrest	0642		
Singer	0348	0045	
Sinudyne	0081	0352	
Skantic	0348		
Smaragd	0348		
Sonoko	0278		
Sonolor	0048		
Sontec	0037	0278	
Sonwa	0642		
Sony	0032	1032	
Soundwave	0037	0348	
Standard	0278		
Starlite	0037	0104	
Stern	0278		
Sunkai	0348	0278	
Supra	0037	0240	0348 0278
T+A	1562	0226	
Tandberg	0278		
Tashiko	0048	0240	0081 0037
Tatung	0081	0048	0348 0352
Tchibo	0348		
TCM	0348		
Teac	0278	0642	0037 0081
	0593		
TEC	0278		
Technics	0226		
TechniSat	0348		
Tedalex	0037	0348	0642
Telefunken	0642	0593	0320 0278
Telestar	0037		
Teletech	0278		
Tensai	0037	0278	
Tesla	0081		
Tevion	0348	0642	
Textet	0278		
Thomson	0320	0067	0278
Thorn	0104	0037	
Thorn-Ferguson	0320		
Tokai	0037	0104	
Topline	0348		
Toshiba	0045	0081	0742 0352
Tradex	0081		
Tredex	0278		

Triad	0278
Uher	0037 0240
Ultravox	0278
Unitech	0240
United	0348 0742
Universum	0081 0240 0037 0348
	0104
Victor	0067
Watson	0081 0352 0278 0642
Weltblick	0037
Wharfedale	0593 0642 0615
World	0348
Yamishi	0278
Yoko	0037 0240
ZX	0348 0352

SAT

@sat	1300
@Sky	1334
ABsat	1323 0713
Acoustic Solutions	1284
ADB	0887 1473 1492 2152
	2367
Adcom	0200
AGK	2139
Airis	1659 1993
Akai	0200
Akura	1626
Alba	2296 1284 1659 0713
Allsat	0200
Alltech	0713
Allvision	1232 1334
Alpha	0200
Amitronica	0713
Ampere	0396 0132
Amstrad	0132 1693 0847 0885
	1175 1662 2139 0396
	0713 0742 0501
Anglo	0713
Ankaro	0713
Ansonic	2418
Apro	1672
Arcon	0132
Arena	1736
Armstrong	0200
Arnion	1300
ASA	0299 0740
Asat	0200
ASCI	1334 0114
ASLF	0713
AssCom	0853
Aston	1129
Astra	0713
Astratec	1743 1929
Astell	0885
Astro	0133 0173 2026 0501
	0658 1099 1100 0200
Atlanta	2418
Atlantic Telephone	1333
Audiola	2418
Audioline	1429
Aurora	0879 1333 1433
Austar	1459 0879 1176
Avalon	0396
Avanit	0299 1631
Axil	1777 1993 1659 2418
Axis	1111
Axitronic	1626
B.net	1672

B@ytronic 0299 0740
 Base 1718
 Belson 2418 2139
 Best Buy 1993 2139 2728
 Beyonwiz 2379
 BIG TV 2463
 Black Diamond 1284
 Blaupunkt 0173
 Blue Sky 0713 0885
 Boca 0132 0713 1232 2026
 2308 2458 2533
 Boshmann 1413 1631
 Boston 0132
 Boxer 1458 1957 1692
 Brainwave 0658 1672
 British Sky
 Broadcasting 1175 0847 1662
 Broco 0713
 BSkyB 1175 0847 1662
 Bubus Sat 0713
 Bush 1284 1626 1672 1645
 1743 2376 1291 0742
 1935
 Cambridge 0501
 Canal Digitaal 0853 1499
 Canal Digital 1780 0853 1004 2553
 1334
 Canal Plus 2107 2657
 Canal+ 0853 2107 2657
 CanalSat 2107 2657 0853
 CanalSatellite 0853 2107 2657
 CDV 1993
 CGV 1413 1567 2034
 Challenger 1956
 Cherokee 1323
 Chess 1334 0114 0713 2026
 1626
 Chili 1718
 CityCom 1176 1232 0299 1777
 0658
 Clarke-Tech 1806
 Clatronic 1413
 Clayton 1626
 Clemens
 Kamphus 0396
 Cobra 0396
 Colombia 0132
 Columbia 0132
 Com Hem 1176 1915 2357
 Comag 1232 1413 2026 0132
 2101 2308 2533 2458
 Comsat 1413
 Comwell 1956
 Connexions 0396
 Conrad 0573 0501 0132
 Coship 1672 2525
 Crown 1284
 CS 1631
 Cyfra+ 1076 2593 1409 0853
 Cyfrowy Polsat 0253 0853
 Cyrus 0200
 Daeryung 0396
 Daewoo 0713 1743 1111
 DAK 1993
 Dantax 1626
 D-box 1114 0723
 Denver 2418
 DGTEC 1631 1718
 Digenius 0299
 Digi 2026
 Digi Raum
 Electronics 1176
 Digitality 1334
 DigiFusion 1645 1743 1929
 Digihome 1284 2034 1935
 DigiLogic 2034 2241
 DigiMax 2273

DigiQuest 1300 1631
 DigiSat 1232
 Digital 2308 2273
 Digital Vision 1929
 Digital+ 0853
 DigitAlb 1232
 DigitalBox 1886 1631 1100
 Digitel+ 1659
 Digttrade 1659
 DigiTurk 1076 2097
 Dilog 1780 1957
 DiPro 1473
 DishTV 0128 1780 1300
 Distratel 0885
 Distrisat 0200
 DNT 0200 0396
 Doro 1672
 DRE 1176
 Dream
 Multimedia 1237 1652 1923
 DSE 2280 2418
 DStv 1433 0879
 Dual 2034
 Durabrand 1284 2241 2034
 DVX 1993
 Echostar 1200 0853 0396 0713
 1323 1473 1409
 Eco-Star 1413
 Edision 1631 2306 2712
 Einhell 0132 0713 0501
 Elap 0713 1611 1129 1567
 1413
 Elbe 2418
 Electron 1956
 Elless 0740
 Elsat 0713
 Elta 0200 1659
 Emtec 1659
 Energy Sistem 1631
 Engel 1777 0713
 Eurieult 0885
 Europa 0501 0200
 Europhon 0299 0132 0713 1334
 Europsat 1413
 Eurosat 1567 1886
 Eurosky 0132 0299 0114 0501
 0740
 Euro-Vox 0744
 Eutelsat 0713
 Eutra 0740
 Evesham 2034
 F&U 2139
 Fagor 1611
 Fenner 0713
 Ferguson 1291 1743 1929
 Fidelity 0501
 Finepass 1780
 Finlux 1626 0573 1232
 FinnSat 0740
 Flair Mate 0713
 FMD 1413 0114
 FoneStar 1777
 Foxtel 1356 0879 1176
 FPE 1993
 Free Wave
 Technology 1743
 Freecom 0501 0173
 Freesat 2376 1692
 FTEmaximal 0713 1886
 Fuba 0396 0173 0573 0299
 Galaxis 1111 1176 0853 0879
 Galaxy 1956
 General
 Satellite 1176
 Get 1004
 Globalteq 2145

Globo 2273 1626 1429 1334
 2026 0740
 GOD Digital 0200
 Gold Box 0853
 Gold Vision 1631
 GoldMaster 1334 1722
 Goodmans 1284 2034 1291 2376
 Gradiente 0887
 Gran Prix 0740
 Grandin 1626
 Grocos 1409
 Grundig 0173 0847 2367 1291
 1284 2376 0879 0885
 0853 0501 1780 2034
 Haier 2418
 Hallo 1626
 Hama 1567
 Handan 0128 1780 1957
 Hanseatic 1099 1100
 Hänsel & Gretel 0132
 Hauppauge 1672
 HB 1736
 HE@D 2183
 Hills 1232
 Hirschmann 0396 1886 1111 2026
 0173 0573 0299 1232
 0501 0740
 Hitachi 1284 2034
 HNE 0742 1232 0132
 Homecast 1680 2525 1736
 Houston 0396
 Humax 0215 1176 1232 1631
 1808 1427 1915 2144
 1882 1788 1675 1743
 2357 2443
 Huth 0132
 Hyundai 2463
 i-Box 1652
 i-CAN 2367
 ID Digital 1176
 ID Sat 2145 1631
 ILLUSION sat 1631
 Image 1993
 Imperial 1429 1334 1099 1100
 1197 1195 1351 0200
 1672 1631
 iNETBOX 1652
 Ingelen 0396
 Inno Hit 1626
 International 0132
 Interstar 2200
 Inves 1993 1743
 inVion 2418
 iotronic 1413 0132
 ITT 2418
 ITT Nokia 0573 0723
 Jaeger 1334
 KabelBW 1882 1915 1195 1197
 2176 1176
 Kamm 0713
 Kaon 1004 1300
 KaTelco 1111
 Kathrein 1561 0249 0707 0658
 1567 1717 2569 0114
 0173 0200 0713 0742
 1323
 Kenwood 0853
 Key West 0132
 Kiton 0114
 Kocmoc TB 1333
 Kongque 1300
 König 1631
 Koscom 1956
 Kreiling 0658 0249 0114 1626
 Kreiselmeier 0173
 K-SAT 0713
 Kyostar 0132

L&S Electronic 0132 1334
 LaSAT 0132 0299 0740 0173
 Lauson 2531
 Legend 1718
 Legend Digital 1718
 Leiko 1626
 Lemon 1334
 Lenco 0713
 Lenoxx 1611
 Lenson 0501
 Lexus 0200
 LG 1414
 Lifesat 0132 0299 0713
 Linsar 1284
 Listo 1626
 Lodos 1284
 Logik 1284 2441
 Lorenzen 0299 0742 2026 0132
 Luxor 1935 0573 0501
 Macab 0853
 Manata 0713 0132
 Manhattan 1300
 Maplin 2034
 Marantz 0200
 Marks
 and Spencer 2441
 Maspro 0713 0173
 Matsui 1626 0173 1743 1929
 Maximum 1334 2552
 Mediabox 0853
 Mediacom 1206
 MediaSat 0501 0853 2107
 Medion 1232 0299 0713 0132
 1626 1334 0740 2026
 Medison 0713
 Mega 0200
 Megasat 1886 1631
 Metronic 1659 0713 0885 0132
 2418 1993 1413 1672
 Metz 0173
 MiCO 1993
 Micro 0501 0713
 Micro electronic 0713 2308
 Micro
 Technology 0713
 Micromaxx 0299
 Microstar 0299
 Microtec 0713
 Morgan's 0132 0713 0200 1232
 1409
 Motorola 0856 1473
 Multichoice 0879 1333 1433 1959
 1960 2059 2060
 Mx Onda 1659
 Myryad 0200
 Mysat 0713
 MySky 1356 1693
 N 2152
 NanoXX 2204
 Neom 1993
 Neotion 1334
 Netgem 1322
 Neuf TV 1322
 Neuhaus 0501 0713
 Neuling 1232 0132 2458 2026
 Neusat 0713
 Nevir 1659
 Newton 0396
 Next 2200
 NextWave 1956
 Nikko 0713 0723 0200
 Noda Electronic 0885
 Nokia 1114 1023 0723 0853
 0573
 Noos 0853
 Nordmende 1611

Nova 0879 1959 1960 2059
 2060
 NPG 1631
 Numericable 0853 1409
 OctalTV 1429
 OKI 1567
 Omni 1993
 Onn 1284 2034
 Openbox 1956
 Opensat 1956
 Opentel 1232
 Optex 0114 0713 1611 1626
 1413
 Opticum 2273
 Optus 0879 0853 1356
 Orbis 1334 1232
 Orbit 0215
 Orbitech 1099 1195 1197 1100
 0200 0501 0114 1351
 P/Sat 1232
 Pace 1175 1356 1682 1693
 1717 2097 2593 2657
 0847 0887 1662 1323
 2059 2060 0200 0853
 Pacific 1284
 Packard Bell 1111
 Palcom 0299 1409
 Palladium 0501 0396
 Palsat 0501
 Panasat 0879
 Panasonic 0847 1304
 Panda 0173
 Patriot 0132
 peeKTON 1993 2418
 Philips 0099 2107 2176 2593
 1076 1114 1499 0853
 0133 0200 1672 1743
 0173 1429
 Phoenix 2418 1956
 Phonotrend 1200
 Pino 1334
 Pioneer 0853
 Planet 0396
 PMB 1611 0713
 Polytron 0396
 Preisner 0132 0396
 Premiere 1114 0723 1111 1176
 1195 1100 0249 0658
 1717 2176 1675
 Premium 1736
 Primacom 1111
 Pro Basic 2205 0853 2531
 Proline 1284 1659
 Prosonic 0742
 Quadral 1323
 Quelle 0742 0299
 Radiola 0200
 Radix 0396
 RCA 1291
 Reliance 2463
 RFT 0200
 RiksTV 2367 1692
 Roadstar 0713 0853
 Rollmaster 1413
 Rover 0713
 Rowsonic 1567
 SAB 1956 1300 1631
 Saba 2205 0885
 Sagem 2107 2553 1114 1690
 1692 1004
 Saivod 2418
 Salora 1232
 Samsung 2176 1662 1458 1206
 0853 0253 1175
 Sansui 1545
 Sanyo 1626
 SAT 0501

Sat Control 1300
 Sat Partner 0501
 Sat Team 0713
 SAT+ 1409
 SatCatcher 1956
 Satec 0713
 Satlink 2273 1567
 Satplus 1100
 SatyCon 1631
 Schaub Lorenz 2418
 Schneider 1206
 Schwaiger 2533 1334 1631 2458
 0740 0885 1111 1429
 1672 2308 0132
 SCS 0299
 Sedefa
 Electronique 0132 1626 0114
 Seeltech 1993
 Seemann 0396
 SEG 1626 0742 0114 1993
 1659 1284
 Septimo 0885
 Servimat 1611
 ServiSat 0713
 Shark 1631
 Sharp 1935 2034
 Sherwood 1611 1409
 Siemens 0173 1626 1657 1334
 1429 2418 1672
 Sigmatek 2139 2418
 SignalMAX 1956
 Silva 0299
 SilverCrest 2026 2101 2308 2458
 Skantin 0713
 SKR 0713
 SKT 0132
 Sky 0856 1175 1693 0887
 0847 1662
 SKY Deutschland 1114 0723 1111 1176
 1195 1100 0249 0658
 1717 2176 1675
 SKY Italia 1693
 SKY+ 1175 1662
 Skymaster 1409 1611 0713 1200
 1334 1567 2205 1545
 2409 2728
 Skymax 0200 1413
 Skypex 0299 0740
 skyplus 2026 1232 1334 1175
 0740
 SkySat 0713 0501 0114
 SL 2026 0132 0742 0740
 1672
 SM Electronic 0713 1200
 Smart 0132 0299 0396 1232
 0713 1413 1631 2285
 Sogo 2139
 Soniq 1567
 Sony 1558 0847 0639 0853
 SR 0132
 Star Sat 0132
 Star View 2145
 Starcom 0114
 Starland 0713
 Stream System 1300
 Strong 1409 1806 2235 0713
 1626 2418 0853 1284
 1300 0879 1473
 Sun Direct 2525
 Sunny 1300
 Sunsat 0713
 Sunstar 0132
 Sunstech 1993 2139
 Supratech 1413 2139
 Systec 0132 1334
 Sytech 2139 2418
 S-ZWO 1722

TATA Sky	1997	0847		
TBoston	2418	1659	2139	
Teac	1322	1957		
Tecatel	1200			
Technika	2034	2441	1284	1672
TechniSat	1195	1197	1100	1099
	0501	1351	1322	0200
	0114	0396		
Technosat	1206			
Technosonic	1672			
Technotrend	1429	1672		
Technowelt	0885	0132		
Techwood	0114	1284	1626	2034
	1935			
TELE System	1611	1409	0396	
Telecom	0713			
Teleka	0396	0501		
Telestar	0501	1099	1100	0114
	0200	1429	1334	1351
	1626	1672	1195	1197
	2540			
Teletech	0114			
Televés	0501	0132	1300	1334
	1409			
Telewire	1232			
TelSKY	2540			
Tesla	1626			
Tevion	1334	1672	0713	1409
	1567	2205		
Thomson	0847	1291	2107	2176
	1175	0853	1662	1459
	1935	0713		
Tiny	1672			
Tioko	0132			
Titan	1886	2205		
Tividi	1429	1736		
TNT SAT	2235	1692		
Tokai	0200			
Tonna	1611	0501	0713	
Topfield	1986	1545	1783	1722
	1206	1824		
Toshiba	1284			
Triasat	0501			
Triax	0501	0200	0396	0713
	0853	0114	1291	0132
	1099	1626	1611	1413
	2101	1886		
Tricolor TV	1176			
TT-micro	1429			
Turnsat	0713			
TVonics	2441			
Twinner	0132	0713	1611	
UEC	0879	2463	1356	
Umax	1993			
Unisat	0200	0132		
Unitymedia	1429	1882	1176	1195
	1197			
Univers	1886			
Universum	0173	0299	0742	0114
	1099	0740		
Van Hunen	0299			
Vantage	2204	2297	1458	
Vaova	1993			
Variosat	0173			
VEA	2418			
Ventana	0200			
Vestel	0742	1284	0114	
VH Sat	0299			
Viasat	1323	1023	1682	1195
	2235			
Viola Digital	1672			
Vision	1626	1886		
Visiosat	1718	1413	0713	0114
	1129			
Vitecom	1413			
Volcasat	2418			
Voo	0853			

Wavelength	1232	1413		
Welho	2357			
Wetekom	0501			
Wharfedale	1284	2034	0200	1935
Wisi	0173	0396	0299	0501
	0132	0740	1232	1986
Worldsat	1473	0114		
Woxter	2418	2139		
XSat	0713	0847	1323	
Xtreme	1300			
Yakumo	1413			
Yamada	1718	1993	2139	
YES	0887			
Yukai	1659			
ZapMaster	0740			
Zehnder	1777	1334	1232	1413
	0114	0742	1631	2388
Zenega	0128			
Zenith	0856			
Zeta Technology	0200			
Ziggo	1657	1499	2443	
Zinwell	1176	2280		

CBL

@Home	1666	2015	0660	
ADB	2343			
Akado	2339	2043		
Altibox	2030			
Amino	1615			
BT Vision	2294			
Cablecom	1582			
Cisco	2506	2589		
ClubInternet	2132			
Com Hem	0660	1666	2015	
Comcor	2339			
freebox	1976	1482		
GuestComm	2030			
Hathw@y	2043			
Humax	2043	0660	1813	2339
	1885	1983	2165	1981
Kabel				
Deutschland	1981	1983	2165	
KabelBW	1813	2174	1981	1983
	1060			
Kiss	2132			
Kreatel	2030			
MIO	2275			
Mio TV	2275			
Motorola	2030	2275		
NTL	1060	1068		
Ono	1068			
Optus	1060			
Orange	2407			
Pace	1068	2620	1060	
Philips	1619	2174	1582	
Premiere	2620	2174		
Sagem	2407			
Samsung	2407	2015	2174	2368
	1060	1666	1987	2610
Scientific				
Atlanta	2506	2132		
SingTel	2275			
Sky	2620			
SKY Deutschland	2620			
Stofa	2015			
Telewest	1068	1060	1987	
TelstraClear	2343			
T-Home	2132			
Thomson	1582	1981	2174	1983
TP	2407			
Unitymedia	2610			

UPC	1582
Viasat	2030
Viken Fibernet	2030
Virgin Media	1060 1068 1987
YouSee	2368
Ziggo	2015 0660 2589 1666

VAC

A.C.Ryan	2709	2535
Apple	2615	
Argosy	2270	
ATMT	2270	
Bang & Olufsen	0875	
Best Buy	2522	
chiliGREEN	2535	2628
CnM	2535	
Dane-Elec	2628	
Digitech	2260	
DVICO	1921	2153
EGreat	2260	
Elonex	1272	
Eminent	2260	
Emtec	2535	2709
EverTech	2535	
Fantec	2535	2522 2709
Freecom	1843	
Fujitsu Siemens	1272	
Galaxy	2238	
Hauppauge	1408	
Hewlett Packard	1272	
iMON	2037	
INOi	2270	
lomega	2270	2238
ISTAR	2260	
LaCie	2238	2626
me2	2535	2270
Memup	2270	2522
Microsoft	1272	
Netgear	2036	
Olidata	2270	
Packard Bell	2238	
peeKTON	2116	
Pinnacle Systems	1447	
Popcorn Hour	2260	
RaidSonic	2238	
Ricavision	1272	
Sitecom	1843	
Sony	1733	
SoundGraph	2037	
Sumvision	2628	
Thermaltake	2037	
Trust	1272	
TViX	2153	
Via Technologies	1272	
Western Digital	2558	
Woxter	2628	2535
XBox	1272	

VAC

AMP

Acoustic Solutions	1501	1446
Audiovox	1408	
Cambridge Audio	1730	1982 2345
Denon	0272	
Logitech	1408	
Marantz	2138	
Teufel	2322	
upXus	1446	
Yamaha	0143	0354

TUN

AEG	1390	1961	1389
AFK	1389		
Aim	1390		
Aiwa	0121	1405	1827 1058
	1158	1258	1358 1622
	1822	1722	
Akai	0609	1390	
All-Tel	1390		
Amitech	1961		
Amstrad	1390	1961	
Anam	0609		
Arcam	0642	1089	1189 1269
	1289		
ASCOMTEC	1389		
Audiolab	1089	1189	1269 1289
Audiosonic	1389		
Audioworld	1390		
Balanced Audio Technology	1089	1189	1269 1289
Bang & Olufsen	0799		
Belson	1389		
Best Buy	1961		
Blue Sky	1390		
Bonnet	1189		
Bose	1229	1629	1933
BSkyB	1497		
Bush	1089	1189	1269 1289
Cambridge Audio	1647	1189	
Centrum	1389		
Copland	1089	1189	1269 1289
Denon	1360	2857	0771 1460
	1434	2820	
Denver	1389		
Diamond	1390		
DMTECH	1390		
Dual	1390		
Electro-companiet	1189		
Elta	1390	1961	
Goldmund	1089	1189	1269 1289
Goodmans	0609	1389	1497
Grundig	1089	1189	1269 1289
	1725		
H&B	1961		
Hanseatic	1390		
Harman/Kardon	1304	1089	1306 1189
	1269	1289	0208
HCM	1390		
HE	1389		
Hiteker	1389		
Home Tech Industries	1389		
Integra	1805		

TUN

Irradio	1961			
Jamo	2160			
JBL	1306			
JVC	0074	0464	1374	1676
	1776			
Kenwood	1313	1027	1569	1570
	1293			
KXD	1389			
Lenoxx	1389			
LG	1293	2197		
Linn	1089	1189	1269	1289
Loewe	1089	1189	1269	1289
Marantz	1089	2117	1189	2114
	1269	1289	0642	
Mark	1089	1189	1269	1289
Medion	2197			
MEI	1390			
Meletronic	0609			
Meridian	1089	1189	1269	1289
Micromega	1089	1189	1269	1289
Muvid	2476			
Mx Onda	1497			
Myryad	1189	1089	1269	1289
Mystral	1961			
NAD	0320	0609		
Naim	1089	1189	1269	1289
Nexius	1390			
Nikkai	1389			
Okano	0609			
Onkyo	1320	1805	0135	
Orava	1389			
Oritron	1497			
Panasonic	1779	2967	1518	1308
	1763	1765	1309	1288
	1316	1533		
Philips	1189	1269	1089	1289
	2341	2311	2459	0642
	1120	1673	1831	2434
Pioneer	1023	1935	0289	1123
	1184	1089	1189	1269
	1289	1284	1459	1623
	1823			
Proceed	1189			
Proline	1390			
Proson	0609			
Provision	1389			
Quad	1089	1189	1269	1289
Radiola	1089	1189	1269	1289
Radionette	1293			
Red Star	1389			
Revox	1089	1189	1269	1289
Revoy	1089	1189	1269	1289
Rotel	0793			
Samsung	1295	1868	2137	
Sansui	0609	1961	1089	
Sanyo	1801			
Schaub Lorenz	1961			
Schneider	1390			
Sherwood	1077			
Siemens	0609			
Silva Schneider	1293			
Sky	1497			
Sony	1822	1158	1858	1827
	1759	1758	1058	1358
	1658	1258	1454	1622
	1558	1441	1722	1112
	1882	2172	2475	
Soundwave	0609			
Tag McLaren	1189			
Targa	1293			
Teac	0609	1390	1725	
Technics	1763	1518	1779	1309
	1308	0208	1765	1288
	1316			
Telefunken	1390	1389		
Thomson	1354	1194	1497	

Thorens	1189	1089	1269	1289
Tokai	1961			
United	1390			
Universum	1390	0609	2160	1089
	1189	1269	1289	
Venturer	1390			
Victor	0074			
Waitec	1961			
Wharfedale	0609	1390		
Xenon	1389			
Yamaha	0176	1331	1276	0376
	1176	1376	0712	1776
	1815	2061		

DVD

3 Plus	0490			
3D LAB	0539			
4Kus	1158			
Acoustic				
Solutions	0730	0713	1228	
AEG	0770	1233	1923	0675
	2173			
AFK	1228	1152	1923	
AG Electronics	1228			
AGK	2139			
Aim	0672			
Airis	0672	1005	1107	
Aiwa	0695	0869	0533	1824
Akai	1115	0898	1527	0884
	0713	1233		
AKI	1005			
Akura	0898	0733	1493	
Alba	0713	0733	0695	0730
	0539	0672	1530	
Amitech	0770			
Amstrad	0713	1115	1571	1493
	0770	2139	2172	
AMW	0872			
Ansonic	1351	0831	1493	
Apex Digital	0672			
Arcam	0732			
Arena	1115			
Aristona	0539	0646	2241	
ASCOMTEC	1923			
A-Trend	0714			
Audio Authority	2555			
Audiola	1660			
Audiosonic	1527	1923		
Audix	1152	0713		
Autovox	0713			
AVideo	2173			
AWA	0730	0872	1555	
Axion	0730			
Basic Line	0713			
Baze	0898	0672		
BBK	2332			
Bellagio	0872	1004		
Belson	1923	2139	2172	
Belsonic	1493			
Berthen	1643			
Best Buy	2139	2172		
Binatone	1923			
Biostek	1005			
Black Diamond	0713	0884	0833	
Blu:sens	1233			
Blue Parade	0571			
Blue Sky	0713	0695	0672	0651
	0884			
BlueTinum	1493			
Boghe	1004			
Boman	0898	1005		
Bose	2023			

Brainwave	0770	1115		
Brandt	0651	0551	0503	
Bush	0713	0695	0833	0730
	0831	0884	1351	0733
	1530			
CAT	0789			
Celestial	0672			
Centrex	0672	1004		
Centrum	0713	0789	1005	1923
	0675			
CGV	0733	0770		
Chili	1493			
Cinea	0841			
Cinetec	0713	0872		
CJ Digital	1643	2173		
Classic	0730			
Clatronic	0672	0675	1233	
Clayton	0713			
CMX	1643			
Coby	1107	0730		
Codex	1233			
Compacks	1107			
Conia	0672			
Continental				
Edison	0872	0831		
Crown	0770	0651		
Crypto	1228			
C-Tech	1152			
Curtis	1493			
Cybercom	0831			
CyberHome	0714	0816	1023	
Cytron	0651	0831		
Daenyx	0872			
Daewoo	0833	0770	0714	0872
	0213			
Dansai	0770	1115		
Dantax	0695	0713		
Daytek	0872	1005		
Dayton	0872			
DCE	0831			
Decca	0770			
Denon	0490	1634	2258	
Denver	0898	1107	1923	1493
	0672			
Diamond	0651	1152	0770	1115
Digihome	0713			
DigiLogic	0713			
Digital	2173			
Digitor	1005	0651		
Digitrex	0672	1004		
DiK	0831			
Dimarson	1233			
Disney	0831			
DK digital	0831	1643	1660	2095
DMTECH	2173			
Dragon	0831			
DSE	0833	1152	1527	0675
	0213			
Dual	0831	0713	0651	0730
	1023	1530	0884	1115
Durabrand	1003	0675	0831	0713
	1530			
D-Vision	1115			
DVX	1152			
e:max	1233	1643	1670	2173
	0770			
EagleTec	0714			
eBench	1152			
Ecco	1555			
Electrohome	0770			
Elenberg	1228			
Elfunk	0884	0713		
Elin	0770			
Elta	0770	1115	1233	1670
	1643	2173		
Emerson	0591	0869		
Enzer	1228	1005	0770	

TUN

EuroLine	1115	1233	1351	1555
	0675	1643		
F&U	2172	2139		
Ferguson	0651	0898	0713	0884
Finlux	0741	0770	0591	0672
Fintec	0713	1530		
Firstline	0869	0651	1530	
Funai	0695	0675		
Futronic	1005			
Global Solutions	1152			
Global Sphere	1152			
GoldStar	0591	0741		
Goodmans	0713	1004	0730	0651
	0833	0733	1923	1530
GoWell	1643			
GP Audio	0733			
GPX	0741			
Gran Prix	0831	0898		
Grandin	0672	0713	2173	
Grundig	0695	0775	0651	0539
	0713	0670	0551	1004
Grunkel	0770	1493	0831	
H&B	0713	0841	1233	
Haaz	1152			
Hanseatic	0741			
Harman/Kardon	0702			
HE	0730	1923	1493	
Henß	0713			
Hicon	0672			
Hitachi	0664	0573	0713	1748
	0884			
Hiteker	0672	1923		
Höher	0831	1004	2173	0713
	1530			
Home				
Electronics	0730	0770		
Home Tech				
Industries	1923			
HYD	1233			
Hyundai	1228	1660	1527	1152
	1530	0833		
ICP	1152			
Ilekei	1107			
Inno Hit	0713			
Integra	2147			
Irradio	0741	1115	1233	0869
	0770			
ISP	0695			
ITT	1233			
JBL	0702			
JDB	0730			
JDV	1228	1555		
JGC	1530			
JMB	0695			
JVC	0623	2365	1901	0539
	0503			
Kansai	1107			
Kansas				
Technologies	1233	1530		
Kazuki	1493			
Kendo	0713	0831	0672	
Kennex	0770	0713	0898	
Kenwood	0490	1906		
KeyPlug	0770	1643		
Kiiro	0770			
King D'Home	0833			
King Vision	1643	1493		
Kiss	0841			
Koss	0651			
KXD	1107	1923		
Lawson	1152			
Leiker	0872			
Lenco	0651	0770	0713	0831
Lenoir	1228			
Lenoxx	1005	1923		
Lexia	1152			

DVD

LG 0741 1906 0591 0869
 1233 1602
 Lifetec 0651 0831
 Limit 1152
 LiteOn 1158 1416 1738
 LM 1643
 Lodos 0713 0884
 Loewe 0539 0741
 Logic3 0772
 LogicLab 1152
 Logik 0713 0884
 Lumatron 1115 0741 0833 0713
 0730 0898
 Luxman 0573
 Luxor 1004 0713 0730 0884

 Magnavox 0503 0675 0539 0713
 0733 1354 2241
 Magnum 1382
 Majestic 1107
 Manhattan 0713
 Manta 1493
 Marantz 0539 2414
 Mark 0713 0695 0884
 Marquant 0770
 Matsui 0651 0713 0672 0695
 0884
 Maxim 0713
 MBO 0730
 Mecotek 0770
 Medion 0831 0651 0630 1416
 0741
 Memorex 0831
 Memory 0730
 Metz 0571 0525 0713
 Micromaxx 0695
 Micromedia 0503 0539
 Micromega 0539
 Microsoft 0522 1708 2083
 Microstar 0831
 Minax 0713
 Minoka 0770 1115
 Mitsubishi 0713
 Mustek 0730
 Muvid 1643 2173
 Mx Onda 0651
 Mystral 0831
 NAD 0741
 Naiko 0770 1004
 NEC 0869 0591 0741 1602
 Neom 1493 1643
 Nevir 0831 1660 0770 0672
 Nikkai 1923
 Nordmende 0831 1530
 Nortek 1643 2173
 NU-TEC 1228 1493
 Omni 0833 1228
 One For All 2555
 Onida 1004 2418
 Onkyo 0627 0503 1769 2147
 Oopla 1158
 Oppo 2545
 Optimus 0571 0525
 Orava 1923
 Orbit 0872
 Orion 0695 1233 0898
 Oritron 0651
 Pacific 1152 0713 0831
 Packard Bell 0831
 Palladium 0695 0713
 Palsonic 0672 0833 1251
 Panasonic 0490 1834 1661 1579
 1641 2518
 Panda 1107
 Papouw 0533
 peeKTON 0898

Philips 0539 0646 2056 1340
 1354 0675 2334 2434
 1506 2526 1813 0503
 1158 1846 1755 2093
 1267
 Pioneer 0571 0631 1965 0525
 1571 1900 0142 1531
 1768 2442
 Play It 1643
 Pointer 0770
 Portland 0770
 Powerpoint 0872 1005
 Prima 1228
 Prinz 0831
 Prism 0831
 ProAudio 1394
 ProCaster 1004
 Proline 0651 0672 1004 0833
 1738
 Proscan 0522
 Proson 0713 1005
 Prosonic 1107 1923
 Provision 1923 1107 1493 0730
 Pye 0646 0539
 Radionette 0741 0869 1906
 Radiotone 0713
 RCA 0522 0651
 RE-BL 2555
 REC 0490
 Red Star 0770 0898 0806 1003
 1923 1107 1351 1394
 Reoc 1152
 Revoy 0841
 Richmond 1233
 Roadstar 0713 0730 0898 0833
 Rocksonic 0789
 Ronin 0872
 Rotel 0623
 Rowa 1004 0525
 Rowsonic 0789
 Saba 0651 2173 1643 0551
 Sabaki 1152
 Saivod 0831 0770
 Sakyno 1152
 Salora 0741
 Samsung 0573 1635 0744 0199
 1932 1075 0490 1748
 0298 2107 2269
 Sansui 0695 1152 0770 1228
 1115
 Santosh 1115
 Sanyo 0670 0695 0213 0713
 1228
 SAST 0806
 ScanMagic 0730
 SCE 0789
 Schaub Lorenz 0770 1152 1643 2173
 Schneider 0831 0539 0713 0651
 0869 0646 2241
 Schöntech 0713
 Scientific Labs 1152
 Scott 0651 0672 1233 1394
 2173
 Seeltech 1643
 SEG 0713 1152 0884 0872
 1530
 Shanghai 0672
 Sharp 0630 2652 0713 0695
 Sherwood 0741 0213
 Siemens 1382
 Sigmatek 2139 2172
 Silva 0898 0831
 Silva Schneider 0831 1906 0741
 SilverCrest 1152 1643 2173
 Singer 1152
 Sinotec 0770 1115
 Sinudyne 0733

Sistemas	0672			
Skantic	1003			
Skymaster	0730	1152		
Skyworth	0898			
Sliding	1115			
Slim Art	0770			
Slim Devices	0533			
SM Electronic	0730	1152		
Smart	0713			
Sogo	2172	1493	2139	
Sonashi	0831			
Sonwa	1004			
Sony	0533	0772	1070	1536
	1824	1981	1633	1516
	1533	1903	2457	0864
	1033	2132		
Sound Color	1233			
Soundmaster	1152			
Soundmax	1152			
Soundwave	1530			
Spectra	0872			
Standard	0651	1152	0831	0898
Star Clusters	1152			
StarLogic	1005			
Starmedia	1005			
Strato	1527	1382	1152	
Strong	0713			
Sunkai	0770			
Sunstech	2139	0831	2172	
Superior	1643	2173		
Supervision	0730	1152		
Supratech	2172	2238	2139	
SVA	0672			
Symphonic	0675			
Synn	1152			
Sytech	2139	0831		
Tamashi	1394			
Tandberg	0713			
Targa	1158	1416	1906	0741
Tatung	0770			
TBoston	2172	2139		
Tchibo	0741			
TCM	0741			
Teac	0741	1152	0571	0591
	0833	1394	0675	1228
TEC	0898			
Technics	0490			
Technika	0770	1115	0831	2302
	1530	1152		
Technisson	0672			
Technosonic	1115			
TechnoStar	1643			
Techwood	0713	1530	0539	
Tecnimagen	1233			
Tedalex	1228	1004	1152	0770
Telefunken	0789	1228	1923	0833
	1115	0770	1555	
Teletech	0713	0884	1152	
Tensai	0651	0770		
Tevion	0651	1382	1152	1004
	0833	1660		
Textorm	1493			
Theta Digital	0571			
Thomson	0551	0522	0831	
Tokai	0898	1233		
Tom-Tec	0789	0833		
Toshiba	0503	1510	1769	
TRANS-				
continents	0872	0831	1233	0833
Tranonic	0672	1394		
Trevi	0831			
Trio	0770			
TVE	0713			
UMC	2302			
United	0730	1228	0672	0695
	1115	1152	1233	1555
	0713	0884	1351	0675

Universal				
Multimedia	1152			
Universum	0741	0713	0591	1530
Vecatech	1493			
Venturer	1769			
Vestel	0713	1530		
Voxson	0730	0831		
VTrek	1228			
Waitec	0730			
Waltham	1530			
WB Electronics	2555			
Welkin	0831			
Wellington	0713			
Weltstar	0713			
Wharfedale	1152	0770	1115	
Wilson	0831	1233		
Windy Sam	0573			
Woxter	2139	2172		
XBox	0522	1708	2083	
Xenon	1923			
XLogic	0770	1152	1228	
XMS	0770			
Xoro	0806	1251		
Yakumo	1004			
Yamada	1004	0872	1493	1416
	1158	2139		
Yamaha	0539	0646	0490	1158
	0497			
Yamakawa	0872			
Yukai	0730			
Zenith	0503	0591	0741	
Telefunken	0790	0789	0788	1228
	1923	1832	1676	1690
	0833	1483		
Teletech	0713			
Tensai	0651	0770		
Tevion	0651	1036	1382	0768
	1505	1685	2014	1227
	0833	1347	1730	0652
Theta Digital	0571			
Thomson	0551	0522		
Tiny	1489			
Tokai	0665	0898	0788	
Tokiwa	0705	0716		
Tom-Tec	0789			
Top Suxess	1224			
Toshiba	0503	1045	1510	2006
	0452			
Trans				
Continens	0826			
TRANS-				
continents	0872	0826	0831	1327
	1165			
Tranonic	0672	1165		
Tredex	0843			
Trio	0770			
TruVision	0857	1451		
TSM	1224			
Umax	1151			
United	0788	0730	0790	1228
	0672	1165	0695	1115
	0699	0768	1233	1446
	1489	2021	0713	0884
	1152	0826	1832	1367
	0675			
Universal				
Multimedia	0768			
Universum	0741	0713	0591	1918
	1913	1227	1829	0790
	1530			
Uptek	0763			
upXus	1345			
Venturer	0790			
Vestel	0713	1994	1530	
Vieta	0705			
Viewmaster	0862	1224		
Voxson	0730	0831	2007	

VTrek	1228			
Waitec	1224	1894	1917	
Walkvision	0717			
Waltham	1530			
Welkin	0831			
Wellington	0713			
Weltstar	0713			
Wesder	0699			
Wharfedale	0686	0768	1832	0723
	0751	0652		
Wilson	0831	1233	1513	
Windy Sam	0573			
Wintech	1187			
Woxter	1151	1224		
X-Waves	1513			
XBox	0522			
XLogic	0770	0768	1228	
XMS	0788	0770		
Xoro	1183	1379		
Yakumo	1004	1056	0652	
Yamada	1004	0872	1151	1416
	1056	1489	1158	0652
Yamaha	0539	0646	0490	
Yamakawa	0665	0872	1104	1489
	1760			
Yukai	0730	1917	1646	
Zenith	0503	0591	0741	

DVD