

<b>ABOUT YOUR <i>KAMELEON 1</i></b> .....	2
<b>BATTERIES</b> .....	2
<b>THE KEYPAD</b> .....	3 - 6
• <b>"EL" Screen activation setting</b> .....	3
(Activation by touching screen and remote simultaneously and/or by keypress)	
• <b>"EL" Screen brightness adjustment</b> .....	3
• <b>"EL" On time setting</b> .....	4

## SET UP

• <b>SETTING UP THE <i>KAMELEON 1</i></b> .....	<b>Page 7</b>
(How to set up the <i>KAMELEON 1</i> to control your television)	
• <b>Search Method</b> .....	<b>8</b>
<b>SET-UP CODES</b>	
• Televisions .....	16

<b>CODE BLINK OUT</b> .....	9
(To find out which code is currently programmed)	

<b>QUICK CODE REFERENCE</b> .....	9
-----------------------------------	---

<b>LEARNING FEATURE</b> .....	10 - 12
(How to copy functions from your <b>original working remote</b> onto the <i>KAMELEON 1</i> )	

<b>EXTRA FEATURES</b>	
• Operational Reset .....	12
• Colour & Brightness .....	13
• Channel +/- simulation .....	13
• Key Magic® (How to program missing functions) .....	14
• TV Sleptimer .....	15

<b>PROBLEM &amp; SOLUTION</b> .....	15
-------------------------------------	----

## About Your **KAMELEON 1**

### Easy to use unique "EL" display

By choosing the ONE FOR ALL **KAMELEON 1** universal remote control you have opted for easy use. Your **KAMELEON 1** features a unique, user-friendly backlit display, which ensures you have easy access to all the keys you need, whilst hiding those you don't. Made of the strictest quality, it will provide long-term satisfaction. After replacing batteries, you will need to first press any key before the screen will light up. From then on, the display will automatically illuminate whenever the remote is picked up (touching screen and remote simultaneously). It is also possible to change the activation-mode into activation by key press. To set the "EL" display to activation by key press, see page 3, section: "EL" screen activation setting. Also, this product comes with a build-in light sensor which will increase the brightness in a bright environment and decrease the brightness in a dark environment.

### Learning feature

The **KAMELEON 1** comes equipped with the unique "learning feature", which means that you can copy almost any function (max. ± 30) from your original (working) remote control onto your new **KAMELEON 1** (See "Learning Feature" on page 10). This comes in handy, when after having setup your **KAMELEON 1** you may find that some functions from your original remote are missing on your **KAMELEON 1** key pad.

## Batteries

Your **KAMELEON 1** requires 2 AA/LR6 batteries.

1. Push the battery door upwards and lift it up to remove it.
2. Match the batteries to the (+) and (-) marks inside the battery case, then insert the batteries.
3. Replace the battery cover by pushing downwards and allowing it to click back into position.

---



- *After re-installing the batteries, the entire "EL" display will be lit for a duration of 6 seconds upon the first key press after which it will default to the main mode.*

---

### Low Voltage Indicator

As soon as the batteries run out of power the **KAMELEON 1** will indicate this. The IR indicator will flash 5 times whenever you press a key. Please make sure to replace the batteries with 2 new AA/LR6 alkaline batteries.




# The Keypad

	= MAGIC (hat) key
	= The animated IR Indicator that will light up during programming

## "EL" Screen activation setting

The *KAMELEON 1* features an "EL" panel which is activated **by touching screen and remote simultaneously** or **by keypress**.

It is possible to **lock** the *KAMELEON 1* to one activation setting:







-  **Press and hold the MAGIC key until the rabbit comes out of the hat.** 
-  Now press **9 8 9**. The IR Indicator will blink twice (or 4 times).

- > If the animated IR Indicator blinks **twice** the "EL" panel will be **activated only by touching screen and remote simultaneously**.
- > If the animated IR Indicator blinks **four times** the "EL" panel will be **activated only by keypress**.

Simply perform these steps to lock the *KAMELEON 1* to the activation setting that you prefer.

## "EL" Screen brightness adjustment

To increase or decrease the brightness of the *KAMELEON 1* "EL" screen:


-  **Press and hold the MAGIC key until the rabbit comes out of the hat.** 
-  Press **9 7 4**.
- >  To increase the brightness of the "EL" screen press and hold **CH+**.
- >  To decrease the brightness of the "EL" screen press and hold **CH-**.
-  Press **MAGIC** to store the brightness setting.

- Increasing the brightness of the *KAMELEON* "EL" panel can decrease the battery life. Battery life varies from 3 - 12 months (depending on brightness setting and usage).

# The Keypad


## "EL" On time setting

To change the time (default: 8 sec.) that the *KAMELEON 1* "EL" screen will be ON, after each keypress during use of the remote (not programming mode):


-  Press and hold the **MAGIC** key until the rabbit comes out of the hat.




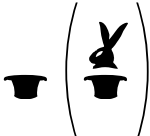
-  Press **9 7 8**.

-  Press **1, 2, 3, 4** or **5** (e.g. 1 = 4 seconds) depending on your choice, see table below. The animated IR Indicator will blink twice.




 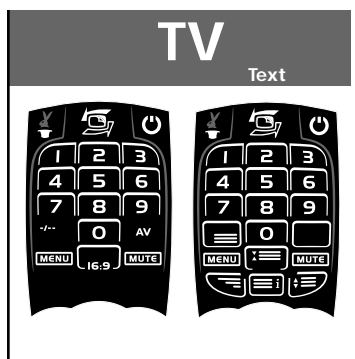



Selection	"EL" On Time
1	4 seconds
2	8 seconds (default)
3	12 seconds
4	16 seconds
5	20 seconds







 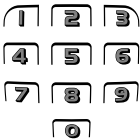


 


-  **IR (infra-red) Indicator**  
The IR Indicator will give feedback when keys are pressed both during normal use and in programming mode.

-  **MAGIC (in "shifted" or "programming" mode)**  
The MAGIC key is used to set up your *KAMELEON 1* and to access special functions.

## The Keypad

3.  **SCROLL**  
The SCROLL key gives you the possibility to move through the different screens.
4.  **POWER (in shifted mode; Sleptimer)**  
The POWER key controls the same function as on your original remote. In shifted mode (accessed by pressing MAGIC shortly and releasing it) the POWER key becomes the Sleptimer function (see page 15).
5.  **Number keys**  
The number (1 – 9, 0) keys provide functions just like your original remote.
6.  -/-- **-/--**  
If your original remote uses one/two digit input switching (-/-- symbol), this function can be obtained by pressing the -/-- key.
7. **AV** **AV**  
The AV key operates the same function it did on your original remote control. If your original remote uses a 20 key, this function can be found by pressing the AV key.
8.  **MENU**  
The MENU key operates the same function it did on your original remote control.
9. **16:9** **16:9**  
In TV mode you will obtain the 16:9 (screen format) function.
10.  **MUTE**  
The Mute key operates the same function it did on your original remote control.
11.  **CH +/- (in shifted mode; brightness +/-)**  
These keys operate just as those on your original remote. In shifted mode (accessed by pressing MAGIC shortly and releasing it) these keys may provide you the brightness +/- function.




 


## The Keypad

12.  **OK**  
In menu mode this key will confirm your choice. On some devices you can confirm your menu option simply by pressing MENU.
13.  **Directional keys**  
If available on your original remote control, these keys will allow you to navigate through the menu. On some TV's you may have to press CH+/- and VOL+/- keys OR the color keys (red, green, yellow, blue) to navigate through the menu, depending on your model of TV.
14.  **VOL +/- (in shifted mode; colour +/-)**  
The volume keys operate just as those on your original remote. In shifted mode (accessed by pressing MAGIC shortly and releasing it) these keys may provide you the colour +/- function.
15. **Teletext Keys**  
These keys are used to operate the main teletext functions. Of course, your Television must have teletext capability. For a more detailed explanation of teletext and fasttext, please refer to the manual of your television. Remember, different televisions control teletext and fasttext functions in different ways. Not all of the teletext functions may be available on your particular model.
-  **TEXT ON:** Once in text mode, pressing this key may switch to MIX or TURN OFF text, depending on your television.
-  **TEXT OFF:** Switches the television back to regular viewing mode. On some televisions this may be done by pressing the "TEXT ON" key several times.
-  **HOLD/STOP:** Stops changing pages.
-  **MIX:** Shows both text and TV picture.
-  **TEXT INDEX:** This key will give you access to the index function within the text mode.
-  **EXPAND:** Shows the top half of the teletext page in larger letters. By pressing again, you can see the bottom half of the teletext page enlarged. To return to regular teletext viewing, press the EXPAND key again, or press the TEXT ON key, depending on your television.
16.  **Red / Green / Yellow / Blue**  
When accessing the text mode, the colour keys marked red, green, yellow and blue, allow you to access the fasttext functions of your television. If on your original remote control these keys are used for Menu navigation, the *KAMELEON 1* Fasttext keys may operate the same.

# Setting up the **KAMELEON 1**

(How to set up the **KAMELEON 1** to control your television)

To set up the **KAMELEON 1** for your television:

-  **Find your device code in the Codelist (page 16 - 26).** Codes are listed by device mode and brand name. The most popular code for each brand is listed first. If your brand is not listed at all in the code section, try the Search Method on page 8.
- Make sure your television is **switched ON** (not on standby).
-  **Press and hold down the MAGIC key** (for about 3 seconds) until the rabbit comes out of the hat. 
-  Enter your **four-digit code** using the number keys. The bottom part of the animated IR Indicator will blink twice. 
-  **Now, aim your KAMELEON 1 at your television** and press **POWER**. If your television switches off, your **KAMELEON 1** should be ready to control your television.
- Turn your device (television) back on and try all the remote's functions to ensure they are working properly. Most TV's do not switch back on pressing the POWER key, please try pressing a "number" key or the "TV-text off" key to switch your TV back on.
- If your device does not respond, follow steps 1 through 5 with each code listed for your brand. If none of the codes listed for your brand operate your device, then try the Search Method described on page 8.

---

- *Some codes are quite similar. If your device does not respond or is not functioning properly with one of the codes, try another code listed under your brand.*

---









# Setting up the **KAMELEON 1**

## Search Method

- > If your device does not respond to the **KAMELEON 1** after you have tried all the codes listed for your brand.
- > If your brand is not listed at all.

The Search Method allows you to scan through all the codes contained in the memory of the **KAMELEON 1**.

### To search for your TV code:

1. Switch ON your Television (not on standby).
2.  **Press and hold down the MAGIC key** (for about 3 seconds) until the rabbit comes out of the hat. 
3.  Press **9 9 1**, the bottom part of the animated IR Indicator will light up twice. 
4.  Next, press **POWER**.
5.  **Point the **KAMELEON 1** at your Television. Now press CH+ over and over, until your Television turns off** (every time you press the CH+ key the **KAMELEON 1** will send out a POWER signal from the next code contained in the memory). **You may have to press CH+ many times (up to 150 times) so please be patient. Remember to keep pointing the **KAMELEON 1** at your Television while pressing this key.** (If you skip past a code, you can go to the previous code(s) by pressing the CH - key.)
6.  **When your Television switches off**, press the **MAGIC** key to store the Code. The bottom part of the animated IR Indicator will light up twice. Now your **KAMELEON 1** should be ready to control your television. 

- 
- *Most TV's do not switch on pressing the POWER key. Please try pressing a "number" key or the "TV-text off" key to switch your TV back on.*
  - *If you cannot control your Television properly, please continue the Search Method, you may be using the wrong Code.*
-




## Code blink out


(To find out which code is currently programmed)

If you have set up your *KAMELEON 1* via the Search Method, you can blink back your code for future reference. Please note that the bottom part of the animated IR Indicator will indicate the 4 digits by animated blink(s).


**To blink out your television code:**

1.  Press and hold down the **MAGIC** key until the rabbit comes out of the hat.




2.  Press **9 9 0**, the bottom part of the animated IR Indicator will light up twice.




3.  For the **first** digit of your **four-digit code**, press **1** and count the blinks on the bottom part of the animated IR Indicator. If there are no blinks, the digit is "0".




4.  For the **second** digit, press **2** and count the animated blinks. If there are no blinks, the digit is "0".



5.  For the **third** digit, press **3** and count the animated blinks. If there are no blinks, the digit is "0".



6.  For the **fourth** digit, press **4** and count the animated blinks. If there are no blinks, the digit is "0".  
**Now you have found your four-digit code.**



## Quick code Reference

Write down the code for your television in the boxes below for quick and easy reference.

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
----------------------	----------------------	----------------------	----------------------

# Learning Feature

(How to copy functions from your original working remote onto the **KAMELEON 1**)

The **KAMELEON 1** comes with a complete library of pre-programmed codes. After you have set up the **KAMELEON 1** for your device, you may find that there are one or more keys that you had on the original remote control, which do not have a place on the **KAMELEON 1** keypad. The **KAMELEON 1** offers a special Learning feature that allows you to copy almost any function from your original remote control onto the keypad of the **KAMELEON 1**.

## Before you start:


- Make sure your original remote is working correctly.
- Make sure neither your **KAMELEON 1**, nor your original remote control is pointing at your device.

## ■ Learning (direct)


**Example:** To copy the "mono/stereo" function from your original TV remote control onto the "16:9"-key of your **KAMELEON 1**.

1. Place the **KAMELEON 1** and your original remote control on a flat surface. Make sure the ends which you normally point at your device are facing each other. Point the original remote to the front left side of the **KAMELEON 1** (see picture below). Keep the remotes at a distance of 2 to 5 cm (0.8 to 2 inches).




2.  Press and hold down the **MAGIC** key (for about 3 seconds) until the rabbit comes out of the hat.




3.  Press **9 7 5**. The IR Indicator will blink twice.

4. **16:9** Press the key (Example: "16:9" key) on the **KAMELEON 1** remote where you want to place the learned function. The IR Indicator will blink three times and then the display will switch off.

5.  Press and hold the key that you want to copy (Example: **mono/stereo**) on your original remote control. The display switches back on and you will see two blinks to indicate successful learning operation.

## Learning Feature

6. If you want to copy other functions within the same mode, simply repeat steps 4 and 5 pressing the next key you want to copy by learning.

7.  To exit the learning mode, **press and hold down the MAGIC key** (for about 3 seconds) until the IR Indicator blinks four times.



- 
- As soon as the display switches off in step 4 you need to press the key (in this example: the "mono/stereo" key) on your original remote within 10 seconds. If no key is pressed while in learning mode, the remote will return to user mode after 30 seconds.
  - If you learn a function on a key, the original KAMELEON 1 function automatically becomes shifted. Press the MAGIC key then the key to access it (this excludes the POWER, Channel and Volume keys). If you learned on a digit key, access the original function by pressing magic twice and then the digit.
  - If you want to learn a function on a key that is not in the main screen, use the SCROLL key to change the screen.
  - The KAMELEON 1 can learn approximately 30 functions. This depends on the other programmed functions and on the remote to be learned from.
  - You can replace a learned function by placing another learned function on top.
  - Please make sure not to use the learning procedure when in direct sunlight or under incandescent lights.
  - Make sure you are using new batteries before following the learning instructions above.
  - Upon changing the batteries, your learned functions will be retained.
- 

### Shifted Learning

It is also possible to place a function *shifted* on a key to maintain the original function.

**Example:** to place the **mono/stereo** function *shifted* on the "red" key.

To place the (e.g. **mono/stereo**) function shifted on the red key, simply follow steps 1-7 on page 10, only press "**MAGIC**" then the "**red**" key (instead of "16:9") during step 4.

To access the e.g. "mono/stereo" function in this example; simply press "**MAGIC**" then the "**red**" key.

- 
- If a Shifted Learned function is placed on the POWER, Channel and Volume keys then the "Sleeptimer" and "Colour & Brightness features will be sacrificed.
  - If you place a function shifted on a digit key (0 - 9) you need to press MAGIC twice then the digit key to access this shifted function.
-

## Learning Feature

### ■ To delete a learned function:

(To delete one single learned function, follow the steps below.)

Example: to delete the **mono/stereo** function learned on the "16:9" key:

1. **Press and hold the MAGIC key until the rabbit** comes out of the hat.
2. Press **9 7 6**. The IR Indicator will blink twice.
3. Press the learned key which you want to restore (example "16:9") **twice**. The IR Indicator will blink twice.

- 
- *The original function (if present) of the KAMELEON 1 will be restored.*
  - *If there is another learned function you want to delete, repeat steps 1 – 3.*
- 

### ■ To delete a "Shifted" learned function:

(To delete one single "shifted" learned function, follow the steps below.)

Example: to delete the **mono/stereo** function learned *shifted* on the "red" key:

1. **Press and hold the MAGIC key until the rabbit** comes out of the hat.
2. Press **9 7 6**. The IR Indicator will blink twice.
3. Press **MAGIC**, then press **twice the learned key** which you want to restore (example "red" key). The IR Indicator will blink twice.

- 
- *The original function (if present) of the KAMELEON 1 will be restored.*
  - *If there is another Shifted learned function you want to delete, repeat steps 1 – 3.*
- 

## Operational Reset

The Operational Reset will erase all learned functions.

It may also delete some other programmed functions like Key Magic.

1. **Press and hold the MAGIC key until the rabbit** comes out of the hat.
2. Press **9 8 0**. The IR Indicator will blink four times.

## Extra Features

### Colour & Brightness

Depending on the functions of your original remote control, the *KAMELEON 1* can operate the colour and brightness settings of your Television.

■ **To adjust the colour:**

Press the **MAGIC** key followed by **Volume +** (for colour +) or **Volume -** (for colour -).

■ **To adjust the brightness:**

Press the **MAGIC** key followed by **Channel +** (for brightness +) or **Channel -** (for brightness -).

Depending on how you used colour and brightness on the original remote, you may need to access colour and brightness in a different way (through menu for example).

### Channel +/- simulation

If your original TV remote control does not have any channel +/- keys, your *KAMELEON 1* can simulate this function.

■ **Example: to program "Channel +/- Simulation":**

1. **Press and hold the MAGIC key until the rabbit** comes out of the hat.
2. Press **9 7 1**. The IR Indicator will light up twice.

The original channel +/- function of your TV (if present) on the CH+/- key will now be sacrificed.

■ **Example: to cancel the "Channel +/- Simulation":**

1. **Press and hold the MAGIC key until the rabbit** comes out of the hat.
2. Press **9 7 1**. The IR Indicator will blink four times.

The CH+/- function of your TV (if present) will now be restored.

---

- *The Channel +/- simulation will be limited to: (1 – 9, 0).*

---

## Extra Features

### Key Magic®

(How to program missing functions)

Key Magic® is an exclusive ONE FOR ALL feature. The design of the *KAMELEON 1* ensures that many functions of your original remote control can be operated - even those that do not have their own key on the *KAMELEON 1* keypad.

Frequently used functions can be assigned to a key of your choice using the Key Magic® feature of your *KAMELEON 1*. In order to program a certain function with Key Magic® you need to know the corresponding function code. As the function codes vary with different types of devices, they cannot be found in the manual. You can request your function codes through our consumer service help-line, by letter, fax or e-mail.

All we need to know is:

- Brand and Model number of the device in question (for verification if you are using the correct code).
- The 4-digit set-up code your device is working with.
- How the function was labeled on your original remote control.

You can also visit our website ([www.oneforall.com](http://www.oneforall.com)) to find an answer to your questions.

■ **Once you obtain(ed) your function code(s) from customer service, programming the code is easy:**

1. **Press and hold the MAGIC key until the rabbit** comes out of the hat.
2. Press **9 9 4**.
3. Press the **MAGIC** key once.
4. Enter the **5-digit function code** (provided by customer service).
5. Press the **key to which the function will be assigned** (if this key is located in a different screen than the main screen, use the SCROLL key to access the screen). The IR Indicator will blink twice.

- 
- *Key Magic® can be assigned to any key EXCEPT the following: MAGIC key and the SCROLL key.*
  - *Please note all the extended function codes you obtain from customer service for easy future reference.*
- 

■ **EXTENDED FUNCTION REFERENCE**  
(first entry is an example):

DEVICE	SET-UP CODE	FUNCTION	FUNCTIONCODE
TV	0556	16/9 format	00234

## Extra Features

### TV Sleptimer

If your Television has a "Sleptimer" function built in, you can access this function with your **KAMELEON 1** remote. To do so:

1. Make sure your **TV** is **switched on**.
  2. Point the **KAMELEON 1** at your TV and press and release the **MAGIC** key then press **POWER**. You should see the Sleptimer activate on your television. To increase the timer, simply press **POWER** again (within 10 seconds) until the timer gets to the desired time.
- 
- *To deactivate the "Sleptimer", repeat steps 1 – 2 above. During step 2, continue pressing **POWER** again (within 10 seconds) until the timer indicates zero minutes.*
  - *Depending on how you used sleptimer on the original remote, you might need to access sleptimer in a different way (through menu for example).*
- 

## Problem & Solution

### Problem:

### Solution:

Your brand is not listed in the code section?	Try the search method on page 8.
The <b>KAMELEON 1</b> does not operate your television?	A) Try all the codes listed for your brand. B) Try the search method on page 8.
The <b>KAMELEON 1</b> is not performing commands properly?	You may be using the wrong code. Try repeating the Direct Set-Up using another code listed under your brand or start the search method over again to locate the proper code.
Problems changing channels?	Enter the program number exactly as you would on your original remote.
The <b>KAMELEON 1</b> does not respond after pressing a key?	Make sure you are using new batteries and are aiming the <b>KAMELEON 1</b> at your television.
Your original remote had a "20" key?	You can find this function on the AV key.
Upon each keypress, the IR indicator will blink 5 times.	Replace batteries with 2 fresh, new "AA/LR6" alkaline batteries.

## Televisions

## Fernseher

## Téléviseurs

## Televisores

## Televisões

## Televisori

## Televisies

A.R. Systems	0037	0373	0352	0556	0374	0455
Abex	0032					
Accent	0009	0037	0556			
Accuphase	0556	1909				
Acec	0012					
Adcom	0625	0284				
Admiral	0093	0363	0418	0087	0305	0286 0163 0264
Adyson	0068	0217	0216	0032		
AEA	0037	0556				
AEG	1556					
Agashi	0216	0264	0217			
AGB	0075	0516				
Agef	0087					
Aiko	0269	0009	0037	0556	0216	0371 0035 0433 0072 0361 0191 0264 0217
Aim	0037	0072	0412	0556	0274	0753 0208 0706 0805 0068
Alwa	0705	0701	1904	1916	1908	1914 1955 1915
Akai	0361	0208	0269	0371	1537	0037 0803 0433 0745 0191 0702 0035 0284 0672 0009 0696 0072 0753 0218 0806 0552 0729 0714 0163 0488 0546 0516 0715 0075 0602 0556 0548 0581 0480 0217 0631 0216 0264 0448 0178 0329 0377 0606 0708 0351 0586 1037 1908 0473 0648
Akiba	0218	0282	0455	0037	0556	0294
Akira	0190					
Akito	0272	0037	0556			
Akura	0037	0556	0668	1668	0359	0412 0493 0283 0009 0218 0282 0276 0264 0171 0714
Alaron	0179	0216				
Alba	0009	0418	0370	0235	0371	0372 0668 0037 0556 1037 0355 0218 0216 0247 0431 0163 0487 0211 0581 0036 0677 1668 0579 0474 1904 1908 0714 0443
Alcyon	0076	0211				
Alkos	0035					
Allorgan	0206	0294	0217			

Allstar	0037	0556				
Ambassador	0177					
Amplivision	0217	0400	0370	0320		
Amstrad	0177	0009	0516	0264	0354	0371 0075 0218 0171 0037 0556 0433 0412 0362 1037 0648 0581 1904
Anam	0037	0556	0004	0009	0068	0250 0426
Anam						
National	0037	0250	0556	0650	0055	
Anex	0416	0421				
Anglo	0009	0264				
Anitech	0009	0068	0076	0264	0037	0556 0474 0282 0102
Ansonic	0370	0037	0556	0009	0668	0374 0163 0292 0102 0323 0411 0259 0247 1437 0012 0284 0428 1904 0104 1668
Apex Digital	1943					
Apollo	0473					
Arc en Ciel	0399	0501	0109	0196	0568	0333 0198
Arcam	0216	0399	0217			
Ardem	0486	0714	0037	0633	0556	
Aristona	0556	0037	0012	0013		
Arthur Martin	0215	0163	0400	0237		
ASA	0105	0346	0070	0298	0295	0104 0087
Asberg	0037	0556	0076	0102		
Asora	0009					
Astra	0037	0556				
Asuka	0218	0217	0216	0264	0282	1904
ATD	0698					
Atlantic	0037	0556	0216	0206	0475	0320 0259
Atori	0009					
Auchan	0163	0215	0400			
Audiosonic	0009	0037	0374	0556	0109	0714 0715 0217 0370 0337 0264 0218 0486 0428
Audioton	0217	0486	0370	0264	0428	
Audiovox	0451					
Aumark	0060					
Ausind	0076					
Autovox	0087	0206	0537	0237	0076	0286 0544 0349 0295 0217 0247 0336
AVP	1904	1908				
AWA	0011	0036	0009	0157	0374	0451 0412 0037 0556 0216 0606 0217 0108 0264 0785 0883
Axxent	0009					
Axxon	0714					
Ayomi	0317					
Baird	0109	0193	0343	0325	0190	0192 0072 0073 0217 0208 0557 1904
Bang						
& Olufsen	0565	0087	0275			
Barco	0380	0416	0410	0552	0163	
Basic Line	0374	0037	0163	0668	0556	0009 0218 0567 0282 0217 0455 0339 1037 1668
Bastide	0217					
Bauer	0805					



Baur 0009 0146 0303 0535 0195 0512 0037  
 0556 0554 0191 0361 0544 0349 1505  
 1010  
 Bazin 0217  
 Beaumark 0178  
 Beko 0486 0035 0428 0510 0714 0370 0518  
 0418 0037 1037 0556 0606 0715  
 Bennett 0556 0037  
 BenQ 1032  
 Beon 0037 0556 0418 0032  
 Berthen 0668 1668  
 Best 0337 0370 0421  
 Bestar 0037 0556 0370 0374  
 Bestar-  
 Daewoo 0374  
 Binatone 0217  
 Black  
 Diamond 0614 1037 0556  
 Black Panther 0102  
 Black Star 0247  
 Black Strip 0035  
 Blacktron 0282  
 Blackway 0282 0218  
 Blaupunkt 0554 0191 0535 0195 0200 0301 0327  
 0328 0318 0448 0455 0170 0036  
 Blue Sky 0037 0714 1037 0487 0668 0715 1909  
 0556 0218 0282 0455 1934 1904 1908  
 1668  
 Blue Star 0282  
 Bondstec 0247  
 Boots 0272 0217 0009  
 Bosch 0320 0327  
 Boxlight 0736  
 BPL 0037 0556 0282 0373  
 Brandt 0625 0501 0109 0399 0237 0333 0196  
 0198 0287 0335 0568 0471 0343 0560  
 Brandt  
 Electronique 0287 0335 0501 0568  
 Braun 0366  
 Brinkmann 0037 0556 0668 0519 0418 0486 1668  
 Brionvega 0037 0556 0362 0087  
 Britannia 0216 0217  
 Broksonic 0236 0463 0426 1905  
 Brother 0264  
 Bruns 0087 0297 0428 0506  
 BSR 0550 0163 0294 0552 0361  
 BTC 0218  
 Bush 0668 0218 0163 0349 0009 0036 0037  
 0371 0235 0522 0282 0272 0355 0363  
 0374 0519 0264 0524 0361 1037 0487  
 0660 0211 0208 0217 1556 0614 0617  
 0698 0581 0294 0677 0284 0552 0556  
 0714 1900 1904 1908 0778 1668  
 Candle 0186  
 Canton 0218  
 Capsonic 0264  
 Carad 0610 0037 0556 0668 1037 1668

Carena 0455 0037 0556  
 Carrefour 0036 0070 0057 0037 0556  
 Carver 0170  
 Cascade 0009 0037 0556  
 Casio 0037 0556 0163 0349 1904  
 Cathay 0037 0556 0474  
 CCE 0037 0556 0217 0329  
 Celebrity 0000  
 Celestial 0819 0820 0821 0767  
 Centrex 0780 0826  
 Centrum 1037  
 Centurion 0037 0556  
 Century 0087 0247 0238  
 CGE 0074 0084 0306 0076 0418 0247 0552  
 0370 0163 0276 0540 0399 1904  
 Changhong 0827  
 Cimline 0009 0235 0218  
 Cinal 0451  
 Cinex 0648  
 Citizen 0451 0060 0186  
 City 0009  
 Clarivox 0418 0037 0556 0070 0102 0297  
 Clatronic 0037 0370 0371 0714 0218 0264 0556  
 0217 0076 0540 0247 0009 0102 0320  
 0579 0648 1904  
 Clayton 0385 1037  
 CMS 0216  
 CMS hightec 0217  
 Combitech 1908  
 Concorde 0009  
 Condor 0320 0037 0556 0370 0216 0009 0282  
 0102 0247 0418 0314 0411 0163 0264  
 Conia 0754 0821  
 Conic 0032  
 Conrad 0037 0556  
 Contec 0216 0009 0157 0011 0036 0264 0037  
 0556  
 Continental  
 Edison 0501 0109 0237 0196 0198 0399 0333  
 0287 0487 0568 0654  
 Cosmel 0009 0337 0037 0556  
 Crosley 0087 0247 0074 0084 0076 0552 0163  
 0347  
 Crown 0009 0712 0370 0486 0037 0556 0487  
 0714 0606 0715 0421 0373 0418 0076  
 0359 0579 0208 0039 0672 0339 1934  
 1928  
 Crystal 0431  
 CS Electronics 0216 0218 0247  
 CTC 0247  
 Curtis Mathes 0047 0060 0093 0145 0451 0166  
 CyberHome 0794  
 Cybertron 0218  
 D-Vision 0037 0556  
 Daas 0297

Daewoo 0634 0374 1909 0499 0037 0556 0009  
0216 0218 0661 0217 0451 0039 1137  
1902 1928 1908 0841 0880

Dainichi 0218 0216 0215

Dansai 0037 0556 0264 0032 0035 0216 0009  
0036 0217 0208

Dansette 0412

Dantax 0370 0486 0714 0606 0715 1908

Datsura 0373 0208

Davis 0736

Dawa 0009 0037 0556

Daytek 0698 0706

Daytron 0009 0374 0037 0556 0039

de Graaf 0208 0044 0227 0163 0548 0363

DEC 0795 0785

Decca 0072 0033 0516 0075 0037 0556 0244  
0249 0272 0217 1137 0621 1904 1908

Deitron 0037 0556 0374 0218

Denko 0264

Denon 0145

Denver 0037 0556 0606

DER 0193 0190

Derwent 0201

Desmet 0320 0037 0556 0009 0087 0351

Diamant 0037 0556

Diamond 0264 0698 0696 0009 0804 0825 0216  
0371

Digatron 0037 0556

Digiline 0037 0556 0105 0668 1668

Digitor 0037 0556 0888

Digivision 0361

DIK 0037 0556

Dixi 0009 0037 0556 0297 0004 0247 0217  
0087

DK digital 1942

DL 0848 0891 0872 0780 0037

Domeos 0668 1668

Domland 0394

Doric 0201 0349

Dream Screen 0654

Dream Vision 0673

DTS 0009

Dual 0544 0349 0217 0343 0336 0057 0519  
1237 0037 0556 0259 0352 0394 0399  
0303 0552 0163 0531 1904 1137

Dumont 0087 0298 0104 0102 0217 0070 0295  
0072 0347 1904

Dunai 0544 0163

Durabrand 1437

Dux 0037 0556 0012

Dynatron 0037 0556 0012

E-Elite 0218

Ecco 0773 0706

Edison-  
Minerva 0487

Eiki 0735

Elbe 0435 0238 0259 0362 0292 0370 0163  
0037 0556 0218 0191 0284 0411 0610  
0551 0217 0516 0361 0630 0552

Elbe-Sharp 0516

Elicit 0087 0247 0516 0075 0102 0539 0540  
0552 0163

Electroband 0000

Elekta 0009 0037 0556 0264 0282

ELG 0037 0556

Elin 0216 0037 0556 0105 0104 0548 0361  
0448 0305 0349 0163 0009

Elite 0218 0037 0556 0320 0305

Ellie 0788 0789

Elman 0102

Elta 0009 0068 0264 0216 0431 0474 0347

Emco 0247

Emerson 0177 0714 0178 0087 0179 0247 0037  
0556 0371 0070 0236 0463 0039 0282  
0320 0361 1909 0486 0370 0163 0076  
0321 1904 1906 1905

Emperor 0282

Enzer 0696 0753

Erres 0037 0556 0012

ESC 0037 0556 0217 0474

Estèle 0552 0163

Etron 0001 0037 0556 0009 0550 0163 0283

Eurofeel 0264 0464 0217 0654

EuroLine 0037

Euroman 0216 0264 0037 0556 0217 0421 0370

Europa 0037 0556

Europhon 0037 0516 0075 0102 0163 0217 0556  
0314 0247 0552 0431 0216

Excel 0037 0556

Expert 0215 0206 0400 0475 0259 0163 0305  
0521

Exquisit 0037 0556 0247

Fagor 0037 0556

Family Life 0037 0556

Fenner 0374 0009

Ferguson 0073 0625 0287 0192 0190 0335 0238  
0325 0295 0193 0324 0109 0560 0037  
0556 0035 0343 0104 0108 0361 0471  
1904 0548

Fidelity 0163 0512 0171 0363 0037 0556 0371  
0412 0531 0193 0216 0264 0351 0372  
0383 0432 0474 0544 1904 1906 1907  
1908 0361

Filsai 0217

Finlandia 0208 0346 0359 0548 0361 0163 0363  
0072 0287 0343 0045 0347

Finlux 0105 0104 0037 0556 0714 0346 0295  
0217 0072 0552 0163 0298 0076 0516  
0715 0075 0070 0087 0179 0102 0314  
0411 0631 0492 0480 0347 1556 0629  
0473 0418 0606 0621

Firstline 0037 0556 0374 0668 0714 0163 0009  
 0294 0321 0216 0385 0247 0552 1909  
 0314 0102 0217 0411 0544 0349 0531  
 0238 0072 0235 0208 0361 1037 1668  
 Fisher 0104 0217 0036 0057 0208 0370 0555  
 0297 0045 0087 0157 0361 0552 0163  
 0303 0544 0349 0072 0047  
 Flint 0037 0556 0610 0072 0218 0455 0264  
 FNR 0102  
 Forgestone 0193  
 Formenti 0163 0037 0556 0486 0216 0087 0320  
 0552 0347 0076  
 Formenti-  
 Phoenix 0216 0320 0552  
 Fortress 0093 0087  
 Fraba 0037 0556 0370 0531  
 Fredomatic 0461  
 Friac 0009 0037 0556 0102 0421 0370 0499  
 0655 0610  
 Frontech 0247 0264 0349 0363 0431 0448 0217  
 0009 0474 0163  
 Fujitsu 0179 0206 0072 0102 0314 0217 0163  
 0009 0352 0683 0037 0556 0361 0357  
 0259 0550 0853  
 Fujitsu  
 General 0009 0186 0217 0550 0206 0163  
 Funai 0668 0179 0264 0294 0303 0412 1668  
 Futronic 0264 0795 0860  
 Future 0037 0556  
 Galaxi 0102 0037 0556 0361 0163  
 Galaxis 0370 0418 0037 0102 0556  
 Galeria 0009  
 GBC 0163 0009 0374 0218 0552 0363  
 GE 0343 0047 0735 0178 0055 0282 0451  
 0560 0287 0109 0347 0335 0575 0625  
 Geant Casino 0163 0400 0215  
 GEC 0163 0361 0349 0037 0516 0556 0043  
 0072 0521 0075 0217 0557 0288  
 Geloso 0540 0247 0009 0363 0552 0163 0374  
 0347 0539  
 General 0590 0109 0287 0471 0186  
 General  
 Electric 0343 0287  
 General  
 Technic 0009  
 Genesis 0009 0037 0556  
 Genexxa 0218 0037 0556 0412 0493 0163 0009  
 Gericom 0865  
 Giant 0217  
 Goldfunk 0668 1668  
 Goldhand 0216  
 Goldline 0337  
 GoldStar 0037 0009 0370 0001 0290 0032 0002  
 0377 0217 0178 0247 0216 0556 0431  
 0163 0361 0474 0109 0363 0606 0044  
 0039 0283 0317 1934 1926 0714 0715  
 Gooding 0487

Goodmans 0634 0374 0037 0499 0556 1037 0668  
 1909 0036 0264 0072 0516 0009 0075  
 0290 0179 0487 0364 0371 0269 0343  
 0235 0035 0480 0560 0032 0217 0335  
 0218 0317 0451 1928 1908 0579 0630  
 0661 1900 1668  
 Gorenje 0370 0421  
 GPM 0218  
 Gradiente 0170 0037 0556  
 Graetz 0347 0361 0371 0163 0546 0557 0037  
 0339 0556  
 Gran Prix 0648  
 Granada 0075 0400 0215 0037 0556 0226 0356  
 0359 0012 0045 0072 0351 0146 0108  
 0208 0217 0076 0036 0339 0516 0201  
 0502 0473 0335 0560 0047 0163 0363  
 0225 0469 0343 0548  
 Grandin 0037 0556 0009 0163 0610 0714 0715  
 0668 0374 0320 0282 0218 0455 0400  
 0215 0579 1037 1668  
 Gronic 0102 0217 0163  
 Grundig 0535 0195 0191 0554 0487 0070 0706  
 0076 0237 0422 0037 0556 0215 0587  
 0009 0036 0443 0370 0318 0740 1935  
 1908 0630 0757  
 Grunpy 0179  
 Haaz 0706  
 Haier 0698 0869 0264  
 Halifax 0264 0216 0217  
 Hammerstein 0264 0060  
 Hampton 0216 0217  
 Hanimex 0218 0294 1908  
 Hanseatic 0037 0556 0499 0519 0349 0163 0361  
 0292 0544 0282 0524 0394 0320 0634  
 0428 0370 0661 0057 0009 0294 0217  
 0373 0431 0276 0087 0377 0351 0336  
 0714  
 Hantarex 0009 0037 0556 0296 0102 0516 0238  
 0829  
 Hantor 0037 0556  
 Harley  
 Davidson 0179 0043  
 Harsper 0865  
 Harvard 0068  
 Harwood 0317 0009 0412 0032 0037 0556 0487  
 Hauppauge 0037 0556  
 HCM 0009 0412 0037 0556 0217 0218 0418  
 0282 0264  
 Hedzon 0556 0037  
 Hema 0217 0009  
 Hemmermann 0349 0544  
 Hifivox 0501 0109 0196 0399 0568 0198  
 Higashi 0216  
 Highline 0264 0037 0556  
 Hikona 0474 0218

Hinari	0208 0037 0556 0009 0218 0036 0179 0283 0163 0364 0039 0355 0443 0211 0487 0235 0294 0550 0264 1908	Intervision	0282 0217 0455 0037 0068 0371 0464 0377 0519 0448 0486 0370 0394 0487 0218 0102 0431 0163 0264 0247 0654 0009 0556
Hisawa	0282 0218 0400 0455 0610 1908 0714	Irradio	0009 0037 0556 0218 0247 0290 0076 0371
HiSense	0848 0208	Isukai	0218 0037 0556 0282 0455
Hit	0087	ITC	0217 0552 0320
Hitachi	0225 1225 0349 0036 0356 0044 0043 0108 0473 0521 0163 0552 0343 0578 0196 0198 0217 0306 0227 0576 0032 0194 0276 0516 0075 0072 0481 0499 0037 0522 0563 0095 0469 0145 0556 0109 0363 0548 0719 0634 0144 0178 1137 0105 0347 0492 0557 1481 0047 0359 0361 0512 0480 0777 0797 1045 0629 0737 1037 0884 1576	ITS	0037 0371 0218 0282 0264 0216 0009 0556
Hitachi Fujian	0108 0828 0225 0576	ITT	0163 0480 0349 0546 0361 0473 0548 0347 0351 0567 0193 0346 0339 0521 0208 0586 0179 0557 0283 0544 0610
Hitsu	0009 0455 0218 0610	ITT Nokia	0361 0548 0163 0546 0557 0521 0473 0480 0347 0349 0346 0208 0179 0339 0351 0567 0586 0606 0610 0631 0363 0431
HMV	0087 0193	ITV	0264 0037 0556 0247 0284 0374
Höher	0714	Jean	0036
Home		JEC	0035 0502
Electronics	0606	JMB	0037 0499 0634 0374 0556 0443 1908
Hornophon	0037 0556 0012	Jocel	0712
Hoshai	0218 0455 0282	Jubilee	0556
Huanyu	0374 0216	JVC	0653 0190 0036 0192 0193 0371 0218 0606 0418 0731 1153 0093 1923
Hygashi	0217 0216	Kaisui	0218 0282 0037 0556 0216 0455 0217 0009
Hyper	0009 0216 0217 0247	Kamp	0216
Hypersonic	0361	Kapsch	0163 0361 0206 0475 0259 0104 0557
Hypson	0037 0556 0714 0715 1934 0264 0217 0282 0455 0400 0238 1908 0668 1668	Karcher	0037 0556 0421 0370 0610 0163 0282 0102 0314 0264 0778 0714 1556
Hyundai	0037 0803 0865 0556 0706 0753	Kathrein	0556 0037
Iberia	0037 0556	Kawa	0371
ICE	0264 0037 0371 0009 0556 0218 0217 0216	Kawasho	0216
Ices	0218 0216	KB Aristocrat	0163 0347
Icos	0012	Kendo	0610 0037 0556 0163 0519 0512 0370 0377 0363 0428 0411 0102 0235 0247 0362
Ict	0037 1137 0556	Kennedy	0163 0206 0552 0435
Imperial	0037 0163 0370 0074 0084 0556 0630 0411 0361 0349 0418 0247 0196 0076 0431 0524 0531 0540 0552	Kenwood	0105
Indesit	0237	KIC	0217 0329
Indiana	0037 0556	Kingsley	0216
InFocus	0736 0752 0781	Kiota	0001
Ingelen	0487 0610 0714 0163 0557 0361 1337	Kiton	0556 0037 0668 1668
Ingersoll	0009	Kneissel	0037 0385 0370 0610 0411 0374 0499 0556 0435 0259 0292 0238 0362 1908
Inno Hit	0009 0072 0037 0556 0218 0290 0217 0517 0076 0516 0075 0247 0102 0282	Kolster	0037 0556 0102 0349 0247
Innovation	0519 0037 0556 0068	Konichi	0009
Interactive	0037 0556 0012 0087 0512 0275 0327 0163 0546 0361 0370 0501 0109 0568 0411	Konka	0037 0707 0556 0632 0371 0714 0418 0703 0218 0725 0726 0641 0816 0587 0754 0779 0894
Interbuy	0009 0037 0264 0247 0068 0512 0556	Kontakt	0487
Interfunk	0037 0556 0012 0087 0512 0275 0327 0163 0546 0361 0370 0501 0109 0568 0349 0557 0247 0200	Korpel	0037 0556
Internal	0037 0556 0499 0374 1909	Korting	0087 0288 0421 0370 0320
International	0216	Kosmos	0037 0556
		Kotron	0412 0264
		Koyoda	0009

Kraking 0238  
 Kriesler 0012  
 KTV 0039 0217  
 Kuba 0349 0163  
 Kuba  
   Electronic 0303 0349 0163  
 Kuro 0373  
 Kyoshu 0412 0418 0264 0032  
 Kyoto 0385 0032 0163 0216 0217  
 LaSAT 0486 0370  
 Leader 0009  
 Lecson 0037 0556  
 Legend 0009  
 Lemair 0411 0032  
 Lenco 0037 0009 0163 0374 0556 0104 0474  
 Lenoir 0009  
 Lesa 0247  
 Levis Austria 0037 0556  
 Leyco 0264 0072 0037 0556 0294 0579  
 LG 0037 0370 0009 0377 0032 0001 0217  
   0002 0556 0714 0247 0216 0431 0290  
   0163 0178 0361 0606 0109 1934 1926  
   0698 0715 0823 0829 1637 0442  
 Liesenk & Tter 0327 0037 0556  
 Liesenkotter 0037 0327 0328 0012 0556  
 Lifetec 0037 0009 0519 0374 0668 0512 0655  
   1037 1137 0556 0218 0264 1668  
 Lloyd's 0001 0009  
 Lloytron 0032  
 LME 0431  
 Loewe 0512 0037 0556 0655 0370 0633 0087  
   0075 0292 0289 0551 0362 0790 0516  
   1790  
 Logik 0011 0033 0060 0698 0773 0009 0193  
   0264 0371 0001 0880  
 Logix 0668 1668  
 Luma 0037 0363 0206 0305 0163 0411 0556  
   0374 0009 0362 0259  
 Lumatron 0363 0206 0305 0037 0556 0362 0163  
   0550 0259 0361 0217 0264 0073  
 Lux May 0037 0009 0556 0581  
 Luxman 0579  
 Luxor 0194 0237 0290 0357 0363 0480 0492  
   0349 0361 0208 0356 0548 0163 0384  
   0346 0473 0179 0546 0217 0631 1037  
 LXI 0047 0178  
 Madison 0037 0556  
 Magnadyne 0087 0247 0516 0075 0102 0539 0540  
   0552 0163 0347 0544  
 Magnafon 0516 0075 0076 0102 0314 0216 0073  
 Magnavox 0037 0556 0036 0179 0780  
 Magnum 0648 0714 0037 0556 0715  
 Mandor 0264  
 Manesth 0037 0556 0235 0217 0264 0320 0276  
   0035 0294 0163 0363  
 Manhattan 0037 0556 0668 1037 0163 0778 1668  
 Marantz 0037 0556 0412

Marelli 0087  
 Mark 0037 0556 0217 0216 0374 0009 0714  
   0715  
 Master's 0499  
 Masuda 0218 0371 0009 0264 0037 0217 0556  
 Materin 0858  
 Matsui 0037 0556 0487 0009 0235 0177 0011  
   0355 0072 0033 0036 0211 0217 0354  
   0294 0371 0433 0269 0443 0363 0524  
   0579 0455 0163 0272 0349 0516 0075  
   0035 0431 0208 0045 0195 0191 0335  
   0544 1908 0714 1037 0629  
 Matsushita 0250 0650  
 Matsuviama 0587  
 Maxam 0264  
 MAXIVIDEO 0788 0789 0314  
 MCE 0009  
 McMichael 0043  
 Mediator 0037 0556 0012  
 Medion 0037 0668 0519 0512 0556 1137 0698  
   0808 1908 1037 1437 1900 1668 0245  
 Megas 0610  
 Megatron 0145 0178  
 MEI 1037 0037 0556  
 Meletronic 0346 0037 0512 0109 0343 0247 0105  
   0104 0374 0009 0217 0480 0492 0216  
   0411 0349 0163 0287 0556 0634 0361  
   0191 0195 0057 0068 0661  
 Melvox 0215 0400  
 Memorex 0009 1920 0178 0250 0060 1924  
 Memphis 0337 0072 0009 0385  
 Mercury 0001 0037 0009 0556 0329  
 Metz 0195 0535 0447 0554 0191 0367 0388  
   0239 0746 0037 0087 0556 0275 0587  
   0668 1037 1668  
 MGA 0178 0037 0556 0218 0104  
 Micromaxx 0037 0556 0668 1037 0630 0808 1668  
 Microstar 0808  
 Midland 0032 0039 0047  
 Minato 0037 0556  
 Minerva 0487 0535 0195 0070 0076 0191 0554  
   0237 0516 0108  
 Minoka 0412 0037 0556 0359  
 Mirror 1900  
 Mistral  
   Electronics 0193  
 Mitsubishi 0108 0093 0512 0037 0178 0354 0087  
   0033 0036 0201 0237 0382 0193 0535  
   0556 0691 0208 1934 1037 1917  
 Mitsuri  
   General 0163  
 Mivar 0292 0290 0291 0370 0517 0076 0216  
   0313 0609 0516 0217  
 Monaco 0009  
 Morgan's 0037 0556  
 Motion 0076  
 Motorola 0055 0093

MTC 0060 0370 0349 0512 0163 0216 0361  
0448

MTEC 0272 0032

MTlogic 0714

Multi-  
broadcast 0193

Multimat 0432 0314

Multistandard 0102 0432 0314

Multitec 0037 0556 0486 0668 1037 1556 1668

Multitech 0349 0009 0363 0486 0037 0370 0556  
0217 0216 0247 0102 0314 0075 0264  
0076

Murphy 0104 0216 0039 0474 0072 0163 0201  
0351

Musikland 0037 0218 0247 0556

Myryad 0556 0037

NAD 0166 0178 0361 0163

Nagoa 0283

Naiko 0037 0606 0556

Nakimura 0374 0037 0556

Naonis 0363 0163

NAT 0226 0340 0214

National 0214 0226 0237 0340

NEC 0170 1170 1270 0036 0320 0455 0009  
0374 0217 0037 0556 0011 0704 0245  
0237 0333 0499 1704 0771 0661

Neckermann 0037 0191 0370 1505 1010 0200 0554  
0556 0552 0163 0327 0418 0349 0087  
0247 0217 0411 0320 0363 0522 0512

NEI 0037 0556 0337 0431 0371 0163

Nesco 0247 0179 1908

Netsat 0037 0556

Network 0032 0337

Neufunk 0037 0009 0556 0610 0218 0282 0714

New Tech 0037 0009 0556 0343 0217 0448

New World 0218

Nfren 0800

Nicamagic 0216

Nikkai 0072 0218 0037 0556 0217 0264 0032  
0035 0337 0216 0009 0036

Nikko 0317 0178

Nishi 0482

Nobliko 0102 0076 0070 0216 0314

Nogamatic 0399 0501 0109 0196 0568 0333

Nokia 0361 0163 0480 0349 0548 0492 0359  
0473 0546 0347 0351 0557 0339 0208  
0374 0586 0631 0606 0346 0179 0320  
0521 0567 0610 0109 0551 1912

Nordic 0217

Nordmende 0109 0714 0501 0287 0399 0196 0343  
0198 0575 0568 0560 0195 0037 0556  
0335 0163 0347 0471

Norfolk 0163

Normerel 0037 0556

Novak 0012 0037 0556

Novatronic 0037 0105 0374 0531 0556

NU-TEC 0455 0698

Nurnberg 0163 0361

Oceanic 0215 0567 0163 0400 0361 0294 0208  
0563 0347 0473 0548 0480

Odeon 0264

Okano 0370 0037 0556 0264 0072 0488 0009

Omega 0264

Omni 0780 0891 0698 0826

Onwa 0371 0602 0218 0433 0581 0102 0431

Opera 0037 0556

Optimus 0250 0650 0166 1924

Optonica 0093

Orbit 0037 0556

Orion 0037 0179 0236 0355 0463 0556 0655  
1954 0714 0235 0443 0294 0177 0320  
0011 0009 0321 0364 0211 0317 0474  
0314 0296 0102 0269 0264 0412 0516  
0531 0544 1916 1908 0033 1905 0880

Orline 0037 0218 0556

Ormond 0385 0668 1037 0037 0556 1668

Orsowe 0516

Osaki 0072 0218 0032 0217 0264 0269 0493  
0276 0037 0412 0272 0374 0474 0211  
0355 0556

Osio 0037 0556 0290

Oso 0218

Osume 0157 0072 0474 0036 0032 0218 0037  
0556

Otake 0317

Otto Versand 1505 1010 0036 0093 0512 0037 0556  
0535 0195 0544 0349 0554 0191 0361  
0235 0109 0294 0226 0247 0303 0320  
0217 0009 0282 0336 0343 0347 0373  
0428 0431 0516 0519 0552

Pace 1908

Pacific 0037 0556 1137 1237 0714 1037

Pael 0216

Palladium 0370 0037 0191 1505 1010 0200 0418  
0554 0556 0247 0327 0349 0087 0552  
0163 0217 0411 0655 0519 0363 0630  
0714 1137

Palsonic 0264 0412 0037 0284 0217 0377 0218  
0698 0556 0448 0488 0773 0779 0001  
0418

Panama 0009 0217 0264 0216 0037 0556 0247

Panashiba 0001

Panasonic 0650 0055 1650 0108 0250 1924 0226  
0274 0214 0361 0237 0367 0340 0347  
0516 0075 0037 0556 0163 0548 0351  
0557 1210 1310 1930 0850 0001 0853  
1941

Panavision 0037 0411 0556

Pathe Cinema 0163 0238 0216 0215 0400 0320 0301  
0292 0349 0431 0552 0370 0347

Pathe  
Marconi 0501 0109 0301 0196 0198 0333 0399  
0237 0568

Pausa 0009

Penney 0039 0047  
 Perdio 0269 0072 0320 0163 0037 0216 0282  
 0556  
 Perfekt 0037 0556  
 Pershin 0215 0400  
 Phase 0032  
 Philco 0087 0084 0463 0074 0418 0076 0145  
 0247 0552 0163 0370 0037 0556 0186  
 0519  
 Philex 0193 0201 0551 0163 0351  
 Philharmonic 0217  
 Philips 0556 0037 0238 0012 0721 0013 0323  
 0554 0191 0043 0087 0193 0293 0423  
 0572 0343 0570 0374 0000 0772 0009  
 0200  
 Phoenix 0037 0556 0370 0486 0163 0087 0072  
 0216 0269 0320 0385 0552  
 Phonola 0037 0556 0012 0013 0087 0293 0193  
 0216  
 Pilot 0556 0037 0039 0712  
 Pioneer 0166 0011 0037 0170 0556 0423 0428  
 0370 0343 0361 0109 0163 0287 0486  
 0512 0760  
 Pionier 0370 0486  
 Plantron 0037 0556 0264 0009  
 Plasma 0654  
 Playsonic 0714 0037 0217 0339 0715  
 Plus 0771  
 Policom 0568 0102 0109 0196 0198 0206 0237  
 0238 0239 0275 0361 0163 0070 0074  
 0084 0087 0501 0535  
 Polytron 0697 0282  
 Poppy 0009  
 Portland 0374 0039 1909  
 Powerpoint 0487 0037 0556  
 Prandoni-  
 Prince 0247 0516 0075 0361 0363 0076  
 Precision 0217  
 Premier 0009 0264  
 Prima 0032 0009 0264 0474 0303 0068 0412  
 Princess 0698  
 Princeton 1037  
 Prinz 0072 0544 0349 0361 0194 0057  
 Profex 0009 0163 0431 0361 0363 0076  
 Profi 0009  
 Profitronic 0037 0556 0314 0102  
 Proline 0037 0556 0625 0634 0630 0411 0012  
 0321 0072 0621  
 Proscan 0047  
 Prosonic 0037 0556 0370 0374 0371 0668 0714  
 0451 0216 0214 0579 0217 1668  
 Protech 0037 0556 0217 0009 0247 0349 0102  
 0264 0431 0418 0337 0668 0282 0552  
 0163 0486 1037 1668  
 Proton 0178  
 Provision 0499 0037 0556 1037 0714  
 Proxima 0737

Pye 0037 0556 0012 0013 0572 0293 0087  
 0554 0374 0349 0412  
 Pymi 0009  
 Quadra Vision 0215 0400  
 Quadral 0218  
 Qualcraft 0039  
 Quasar 0247 0650 0250 0474 0009 0055 1924  
 Quelle 0037 1505 1010 0011 0501 0109 0506  
 0512 0535 0544 0349 0554 0191 0361  
 0032 0036 0217 0247 0074 0327 0084  
 0328 0306 0070 0104 0105 0668 0556  
 0157 0195 0200 0295 0264 0290 0146  
 0294 0346 0421 0552 0009 1668  
 Questa 0036 0032  
 R-Line 0037 0556 0163  
 Radialva 0109 0218 0431 0163 0037 0556 0287  
 0337  
 Radiola 0037 0556 0012 0217 0301 0323  
 Radiomarelli 0087 0201 0516 0075 0247 0037 0556  
 0540 0539  
 RadioShack 0037 0556 0032 0039 0047 0178  
 Radiotone 0009 0037 0556 0428 0370 0579 0418  
 0412 0648 0668 0295 0264 1037 1668  
 Rafena 0297  
 Rank 0070  
 Rank Arena 0036 0796 0157 0602 0753  
 RBM 0070 0089  
 RCA 0047 0625 0093 0560 0335 0343 0753  
 Realistic 0032 0039 0178  
 Recor 0037 0418 0556  
 Rectiligne 0037 0556  
 Rediffusion 0201 0361 0351 0548 0036 0346  
 Redstar 0037 0556  
 Reflex 0037 0556 1037 0668 1668  
 Relisys 0865 0876 0877 0878  
 Reoc 0714 0634 1909  
 Revox 0037 0556 0370  
 Rex 0305 0206 0363 0411 0540 0247 0550  
 0163 0259 0475 0286 0264 0537 0551  
 RFT 0297 0087 0292 0370 0428 0506 0072  
 0264 0037 0556  
 Rhapsody 0216  
 Ricoh 0037 0556  
 Roadstar 1037 0009 0418 0037 0556 0668 0218  
 0264 0282 1916 1337 1668  
 Robotron 0087  
 Rodex 0037 0556  
 Rowa 0264 0698 0217 0712 0009 0216 0587  
 Roxy 0448  
 Royal Lux 0421 0370 0412 0335  
 Rukopir 0556 0037  
 Saba 0625 0287 0075 0087 0399 0163 0109  
 0501 0516 0343 0361 0498 0196 0198  
 0335 0568 0548 0347 0471 0557 0560  
 0250 0714  
 Saccs 0238  
 Sagem 0610 0455 0282

Saisho 0235 0516 0075 0177 0009 0011 0033  
0217 0431 0163 0264 0211 0354 0544

Saivod 0037 0556 0668 0712 1037 1668

Sakai 0163

Sakyno 0455

Salora 0290 0194 0546 0349 0522 0163 0356  
0359 0361 0364 0516 0075 0363 0373  
0548 0339 0208 0296 0461 0552 0480  
0621 1237

Salsa 0335

Sambers 0516 0075 0517 0076 0102 0314

Sampo 0032 0039

Samsung 0618 0587 0037 0178 0556 0009 0702  
0093 0217 0448 0482 0370 0488 0264  
0329 0216 0290 0644 0060 0032 0072  
0208 0682 0517 0519 0039 0163 0625  
0812

Samsux 0039

Sandra 0216 0217

Sanela 0238

Sansei 0451

Sansui 0037 0729 0556 0706 0371 0655 0727  
0726 0725 0463 0602 0421 0455 0861

Santon 0009

Sanyo 0208 1208 0157 0292 0721 0036 0088  
0011 0370 0339 0072 0216 0217 0104  
0045 0555 0146 0009 0544 0163 0373  
0037 0108 0297 0556 0486 0735 0799

Save 0037 0556

Saville 1908

SBR 0037 0556 0012 0193 0013 0043

Schaub  
Lorenz 0349 0347 0548 0714 0606 0361 0546  
0557 0486 0374

Schneider 1137 0037 0556 0519 0012 0057 0303  
0544 0349 0394 0352 0336 0259 0323  
0550 0343 0217 0247 0371 0361 0218  
0668 1037 0163 0648 0714 0013 1909  
1908 1668

Scotland 0163

Scott 0236 0178 0179

Sears 0047 0146 0171 0178 0179

Seaway 0634

Seelver 0556 1037 0037

SEG 0037 0556 1037 1337 1437 0668 0217  
0487 0009 0349 0163 0264 0297 0634  
0036 0540 0102 0247 0362 0314 0216  
0552 0076 0218 1909 1668 1901

SEI 0087 0102 1505 1010 0552 0163 0516  
0075 0544 0349 0294 0314 0296 0206  
0037 0556 0177 0347

Sei-Sinudyne 0102 0206 0294 0296 0314 0347 0516  
1505 1010 0552 0544 0037 0556 0087

Seleco 0305 0206 0363 0259 0362 0163 0550  
0475 0286 0411 0347 0673 0537 0551  
0371 0036 0264 0346 0435

Sencora 0009

Sentra 0283 0276 0035 0218 0009 0550 0349

Serino 0610 0455 0216 0093

Sharp 0093 0039 1193 0157 0036 0294 0491  
0653 0256 0193 0186 0516 0200 0760  
0818 1917

Shintoshi 0037 0556

Shivaki 0037 0556 0443 0451 0374 0178

Shorai 0294 0179

Show 0418 0009 0072

Siarem 0075 0552 0163 0087 0102 0347 0516

Siemens 0191 0535 0554 0200 0195 0301 0327  
0328 0157 0032 0146 0037 0556 0347  
0361

Siera 0037 0556 0012

Siesta 0370

Silva 0037 0556 0216 0361 0648

Silva  
Schneider 1556

Silver 0036 0037 0455 0361 0556 0179 0715  
0163

Simpson 0186

Singer 0009 1537 0087 0806 0540 0037 0556  
0102 0247 0435 0400 0215 0567 0335  
0163

Sinotec 0773

Sinudyne 0177 0087 0235 0102 0294 0296 0552  
0163 0361 0516 0075 0544 0349 1505  
1010 0314 0206 0037 0556 0347 1908

Skantic 0357 0356

Sky 0037 0282 0556

Skymaster 0105

Skysonic 0696 0753

SLX 0668 1668

Smaragd 0487

Soemtron 0865

Sogera 0320

Solavox 0032 0361 0072 0163 0548 0351 0550  
0037 0556

Sonawa 0218

Soniko 0037 0556

Sonitron 0208 0370 0339 0217

Sonneclair 0037 0556

Sonoko 0037 0556 0009 0264 0282 0217

Sonolor 0215 0208 0567 0163 0400 1505 1010  
0548 0361 0282 0347

Sontec 0037 0556 0370 0294 0009

Sony 1505 1651 1010 0011 0000 0036 0384  
0102 0314 0353 0037 0556 0157 1751  
1925

Sound  
& Vision 0102 0218 0374 0037 0556

Soundesign 0178 0179 0186

Soundwave 0037 0556 0320 0418 0032 0715

Spectra 0009

Ssangyong 0032 0009

Stag 0032

Staksonic 0009



Standard	0037 0556 1037 0218 0009 0217 0320 0374
Starlite	0009 0552 0163 0037 0556 0264 0412
Stenway	0282 0218
Stern	0305 0206 0259 0286 0550 0163 0363 0475 0264 0411 0551 0435
Strato	0037 0556 0264 0009
Stylandia	0217
Sunic Line	0037 0556
Sunkai	0294 0355 0321 0455 0218 0235 0610 0037 0556 0487 0531
Sunstar	0371 0037 0556 0009 0579 0264
Sunwood	0037 0556 0009
Superla	0516 0075 0216 0217
Supersonic	0208 0556 0698 0264 0805
SuperTech	0009 0037 0556 0216 0218
Superton	0075 0431
Supra	0178 0374 0009 0039
Susumu	0474 0335 0269 0218 0287
Sutron	0009
Swissline	0247
Sydney	0216 0217
Sylvania	0186
Symphonic	0171 1904
Sysline	0037 0556
Sytong	0216
T+A	0447
Tactus	0272
Tandberg	0289 0367 0295 0411 0109 0337 0196 0362 0361 0163
Tandy	0039 0218 0072 0217 0247 0276 0093 0163 0540
Tashiko	0036 0043 0217 0146 0170 0032 0216 0359 0163 0363 0372
Tatung	0055 1556 0037 0556 0072 0516 0075 0217 0272 0249 0011 0244 0629 0621 0033 1908
TCM	0714
Teac	0698 0512 0037 1437 1037 0556 0712 0668 0455 0217 0706 0264 0544 1909 0686 0178 0009 0171 0412 0349 0721 0282 0336 0418 0431 0755 0170 0714 1932 0892 1668 1913 1949 1724
TEC	0217 0276 0009 0247 0471 0335 0474 0337 0259 0552 0550 0037 0556 0361 0163
Tech Line	0037 0556 0668 1437 1668
Techica	0218
Technema	0320
Technics	0250
TechniSat	0655 0297 0037 0556 0163
Technol Ace	0179
Tecnimagen	0556
Tedelex	0217 0418 0606 1537 0009 0706 0208 0698 0587 0891 0037 0284 0556 0431
Teiron	0009
Teknika	0060 0179 0186 0039

Teleavia	0109 0501 0287 0196 0399 0333 0490 0568 0343
Telecor	0037 0556 0163 0218 0217 0259 0284 0394
Telefunken	0109 0625 0702 0501 0587 0520 0698 0498 0712 0471 0820 0399 0896 0287 0074 0084 0101 0335 0262 0306 0073 0343 0196 0037 0556 0486 0566 0568 0490
Telefuzion	0037 0556
Telegazi	0037 0163 0259 0218 0264 0284 0556
Telemeister	0320 0037 0556
Telesonic	0037 0556
Telestar	0009 0037 0556 0579 0412
Teletech	0037 0556 0668 0009 0247 0337 1037 1668
Teleton	0217 0275 0206 0550 0163 0349 0259 0475 0186 0036 0363
Televideon	0320 0552 0163 0216
Televiow	0037 0556
Televiso	0215 0400
Telexa	0102
Temco	0294
Tempest	0009 0037 0556 0264
Tennessee	0037 0556
Tensai	0104 0218 0037 0556 0217 0294 0320 0009 0105 0374 0371 0317 0377 0247 0715 0163
Tenson	0320 0009
Tesla	0037
Tevion	0519 0894 0037 0556 0648 0668 1137 0714 1037 1668
Texet	0217 0374 0009 0216 0218
Thomas	1904
Thomson	0625 0560 0287 0109 0501 0333 0399 0471 0335 0196 0198 0237 0343 0037 0556 0568 0490 0574 0349
Thorn	0108 0193 0109 0073 0225 0343 0190 0361 0238 1505 0192 1010 0074 0084 0522 0499 0535 0037 0072 0556 0011 0104 0012 0335 0013 0512 0033 0359 0036 0043 0272 0045 0374 0035 0070 0101 0553 0356 0501
Thorn- Ferguson	0104 0108 0109 0190 0192 0238 0193 0361 0335 0499 0073 0035
Tiny Digital	0660
TMK	0178 0177
Tobishi	0218
Tokai	0072 0037 0556 0337 0668 0448 0163 0217 0374 0009 1037 0552 1668
Tokaido	1037
Tokyo	0216 0035 0448 0329 0539 0303
Tomashi	0282 0218
Tongtel	0780

Toshiba 0035 0060 0502 0553 0508 0509 0089  
 0510 0243 0036 0070 0102 0241 0445  
 0518 1508 0217 0109 0490 0718 0195  
 0191 0618 1916 1908 0009 0698 0037  
 1945 0736  
 Totevision 0039  
 Towada 0349 0102 0314 0217 0552  
 Toyoda 0009 0371 0276 0493 0264  
 Trakton 0009 0264 0217  
 Trans  
 Continens 0668 0217 1037 0037 1668 0556 0486  
 TRANS-  
 continents 0621  
 Transonic 0037 0556 0455 0587 0512 0264 0698  
 0712 0418 0009  
 Transtec 0216  
 Triad 0037 0556  
 Trical 0157  
 Trident 0516 0075 0217  
 Tristar 0264 0218 0193  
 Triumph 0177 0516 0075 0346 0556 0037 0243  
 0298  
 Tsoschi 0282  
 TVTEXT 95 0475 0556  
 Uher 0076 0037 0556 0057 0206 0320 0303  
 0374 0418 0486 0370 0475 0259 0480  
 Ultra 0192  
 Ultravox 0087 0102 0374 0540 0247 0216 0552  
 0163 0314 0037 0556 0351  
 Unic Line 0037 0556 0473 0455 0349  
 United 0037 0556 0714 0715  
 Universal 0654 0037 0556  
 Universum 0346 0105 0535 0195 0473 0361 0247  
 0492 0480 0370 0200 0418 0011 0146  
 0512 0294 0036 0157 0032 0070 0552  
 0163 0264 0104 0037 0556 0421 0488  
 0411 0290 0074 0306 0327 0328 1505  
 1010 0076 0295 0668 0298 0544 0349  
 0217 0501 0109 0362 0337 0474 0177  
 0631 1337 0554 0009 0084 1901 1037  
 1237 1437 0170 1668  
 Univox 0037 0556 0337 0087 0163 0238 0296  
 Utax 0163  
 V2M 0464 0654  
 V7Vidoseven 1755  
 Vendomatic 0288  
 Vestel 0037 0552 0163 0217 0556 0668 1037  
 1668  
 Vexa 0009 0037 0556  
 Vibrant 0272  
 Videologic 0218 0216  
 Videologique 0216 0218 0217  
 Videosat 0247  
 VideoSystem 0037 0556  
 Videotechnic 0216 0320 0217 0374  
 Videoton 0356 0163 0431  
 Vidikron 0102 0673 0735

Vidtech 0036 0178  
 Viper 0337  
 Visiola 0216  
 Vision 0032 0037 0264 0556 0320 0474 0217  
 0488  
 Visorex 0432  
 Vistar 0276 0206 0361 0567  
 VMS 0314  
 Vortec 0037 0556  
 Voxon 0654  
 Voxson 0087 0076 0037 0556 0363 0418 0163  
 0178  
 Wallis 0792  
 Waltham 0217 0276 0356 0418 0287 0385 0037  
 0556 0668 0109 1037 0431 0490 1668  
 Wards 0179  
 Watson 0037 0556 0320 0524 0163 0218 0464  
 0305 0579 0519 0394 0009 0668 0654  
 1037 1908 1437 1668  
 Watt Radio 0102 0544 0349 0552 0163 0216 0314  
 Wega 0037 0556 0036 0087  
 Wegavox 0009 0037 0556  
 Weltblick 0037 0556 0320 0217  
 Welttech 0284  
 Weston 0037 0556  
 Wharfedale 0037 0861 0519 1237 0556 1556  
 White Wes-  
 tinghouse 0320 0216 0037 0556 0337 1909  
 Windsor 0668 1037 1668  
 Windstar 0282 0337  
 Windy Sam 0556  
 Wintel 0714  
 World-of-Vision 0880  
 Worldview 0455  
 Xenius 0634  
 XLogic 0698 0860  
 Xrypton 0037 0556  
 Yamaha 0650  
 Yamishi 0282 0455 0218 0037 0556 0217  
 Yokan 0037 0556  
 Yoko 0217 0037 0556 0218 0264 0009 0431  
 0421 0370 0305 0339 0216 0247 0373  
 Yorx 0218  
 Zanela 0238  
 Zanussi 0206 0286 0305 0363 0217 0475  
 Zenith 1909  
 Zenor 0339  
 ZX 0284 1908