

# ONKYO

AV RECEIVER

# HT-R758

## Instruction Manual



## Contents

Safety Information and Introduction .....2



Table of Contents .....6

Connections .....12

Turning On & Basic Operations .....19

Advanced Operations .....41

Controlling Other Components .....56

Appendix .....62

Speaker Package

Internet Radio Guide

Remote Control Codes



**WARNING:**

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

**CAUTION:**

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



## Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Damage Requiring Service  
Unplug the apparatus from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - A. When the power-supply cord or plug is damaged,
  - B. If liquid has been spilled, or objects have fallen into the apparatus,
  - C. If the apparatus has been exposed to rain or water,

PORTABLE CART WARNING



- D. If the apparatus does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the apparatus to its normal operation,
  - E. If the apparatus has been dropped or damaged in any way, and
  - F. When the apparatus exhibits a distinct change in performance this indicates a need for service.
16. Object and Liquid Entry  
Never push objects of any kind into the apparatus through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.  
The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases shall be placed on the apparatus.  
Don't put candles or other burning objects on top of this unit.
  17. Batteries  
Always consider the environmental issues and follow local regulations when disposing of batteries.
  18. If you install the apparatus in a built-in installation, such as a bookcase or rack, ensure that there is adequate ventilation.  
Leave 20 cm (8") of free space at the top and sides and 10 cm (4") at the rear. The rear edge of the shelf or board above the apparatus shall be set 10 cm (4") away from the rear panel or wall, creating a flue-like gap for warm air to escape.



# Precautions

1. **Recording Copyright**—Unless it's for personal use only, recording copyrighted material is illegal without the permission of the copyright holder.
2. **AC Fuse**—The AC fuse inside the unit is not user-serviceable. If you cannot turn on the unit, contact your Onkyo dealer.
3. **Care**—Occasionally you should dust the unit all over with a soft cloth. For stubborn stains, use a soft cloth dampened with a weak solution of mild detergent and water. Dry the unit immediately afterwards with a clean cloth. Don't use abrasive cloths, thinners, alcohol, or other chemical solvents, because they may damage the finish or remove the panel lettering.
4. **Power**

## WARNING

BEFORE PLUGGING IN THE UNIT FOR THE FIRST TIME, READ THE FOLLOWING SECTION CAREFULLY.

AC outlet voltages vary from country to country. Make sure that the voltage in your area meets the voltage requirements printed on the unit's rear panel (e.g., AC 230 V, 50 Hz or AC 120 V, 60 Hz).

The power cord plug is used to disconnect this unit from the AC power source. Make sure that the plug is readily operable (easily accessible) at all times.

For models with [POWER] button, or with both [POWER] and [ON/STANDBY] buttons:

Pressing the [POWER] button to select OFF mode does not fully disconnect from the mains. If you do not intend to use the unit for an extended period, remove the power cord from the AC outlet.

For models with [ON/STANDBY] button only:

Pressing the [ON/STANDBY] button to select Standby mode does not fully disconnect from the mains. If you do not intend to use the unit for an extended period, remove the power cord from the AC outlet.

## 5. Preventing Hearing Loss

### Caution

Excessive sound pressure from earphones and headphones can cause hearing loss.

## 6. Batteries and Heat Exposure

### Warning

Batteries (battery pack or batteries installed) shall not be exposed to excessive heat as sunshine, fire or the like.

## 7. Never Touch this Unit with Wet Hands

—Never handle this unit or its power cord while your hands are wet or damp. If water or any other liquid gets inside this unit, have it checked by your Onkyo dealer.

## 8. Handling Notes

- If you need to transport this unit, use the original packaging to pack it how it was when you originally bought it.
- Do not leave rubber or plastic items on this unit for a long time, because they may leave marks on the case.
- This unit's top and rear panels may get warm after prolonged use. This is normal.
- If you do not use this unit for a long time, it may not work properly the next time you turn it on, so be sure to use it occasionally.

## For U.S. models

### FCC Information for User

#### CAUTION:

The user changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



## For Canadian Models

**NOTE:** THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

For models having a power cord with a polarized plug:

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

## Modèle pour les Canadien

**REMARQUE:** CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

Sur les modèles dont la fiche est polarisée:

**ATTENTION:** POUR ÉVITER LES CHOCS ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU' AU FOND.

## For British models

Replacement and mounting of an AC plug on the power supply cord of this unit should be performed only by qualified service personnel.

## IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

Blue: Neutral

Brown: Live

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

## IMPORTANT

The plug is fitted with an appropriate fuse. If the fuse needs to be replaced, the replacement fuse must be approved by ASTA or BSI to BS1362 and have the same ampere rating as that indicated on the plug. Check for the ASTA mark or the BSI mark on the body of the fuse.

If the power cord's plug is not suitable for your socket outlets, cut it off and fit a suitable plug. Fit a suitable fuse in the plug.

## For European Models



# Supplied Accessories

Make sure you have the following accessories:

**Indoor FM antenna** (→ page 18)

**AM loop antenna** (→ page 18)

**Speaker cable labels** (→ page 12)

(Not supplied with the Home Theater System.)


**Speaker setup microphone** (→ page 30)

**Remote controller (RC-834M) and two batteries (AA/R6)**

**Quick Start Guide**

\* In catalogs and on packaging, the letter at the end of the product name indicates the color. Specifications and operations are the same regardless of color.

## ■ Installing the batteries

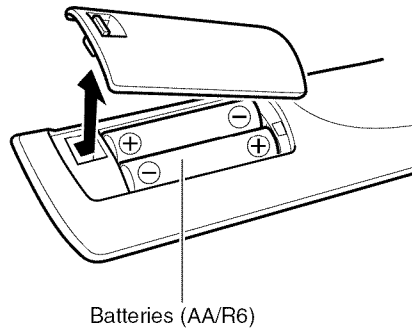


### Note

- If the remote controller doesn't work reliably, try replacing the batteries.
- Don't mix new and old batteries or different types of batteries.
- If you intend not to use the remote controller for a long time, remove the batteries to prevent damage from leakage or corrosion.
- Remove expired batteries as soon as possible to prevent damage from leakage or corrosion.

## ■ Aiming the remote controller

To use the remote controller, point it at the AV receiver's remote control sensor, as shown below.

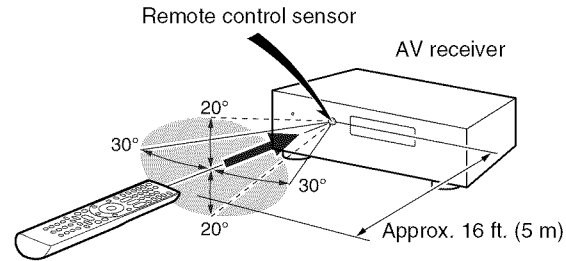

Thank you for purchasing an Onkyo AV Receiver. Please read this manual thoroughly before making connections and plugging in the unit. Following the instructions in this manual will enable you to obtain optimum performance and listening enjoyment from your new AV Receiver. Please retain this manual for future reference.

# Table of Contents

## Safety Information and Introduction

|                                     |    |
|-------------------------------------|----|
| Important Safety Instructions ..... | 2  |
| Precautions .....                   | 3  |
| Supplied Accessories.....           | 5  |
| Table of Contents.....              | 6  |
| Features.....                       | 7  |
| Front & Rear Panels.....            | 8  |
| Front Panel.....                    | 8  |
| Display .....                       | 9  |
| Rear Panel .....                    | 10 |
| Remote Controller.....              | 11 |
| Controlling the AV Receiver.....    | 11 |

## Connections

|  |    |
|--|----|
| Connecting the AV Receiver.....            | 12 |
| Connecting Your Speakers .....             | 12 |
| About AV Connections .....                 | 14 |
| Connecting Components with HDMI.....       | 15 |
| Connecting Your Components .....           | 16 |
| Connecting Onkyo <b>RI</b> Components..... | 17 |
| Connecting the Antennas.....               | 18 |
| Connecting the Power Cord.....             | 18 |

## Turning On & Basic Operations

|  |    |
|--|----|
| Turning On/Off the AV Receiver .....                 | 19 |
| Turning On .....                                     | 19 |
| Turning Off .....                                    | 19 |
| Playback .....                                       | 20 |
| Playing the Connected Component .....                | 20 |
| Controlling Contents of USB or Network Devices ..... | 21 |
| Understanding Icons on the Display .....             | 22 |
| Playing an iPod/iPhone via USB.....                  | 22 |
| Playing a USB Device .....                           | 23 |
| Listening to vTuner Internet Radio .....             | 23 |
| Registering Other Internet Radio .....               | 24 |
| Playing Music Files on a Server.....                 | 25 |
| Remote Playback.....                                 | 26 |
| Listening to AM/FM Radio.....                        | 27 |

|   |    |
|---|----|
| Using Basic Functions .....             | 30 |
| Using the Automatic Speaker Setup ..... | 30 |
| Using the Listening Modes .....         | 33 |
| Using the Home Menu .....               | 38 |
| Using the Sleep Timer .....             | 39 |
| Setting the Display Brightness .....    | 39 |
| Displaying Source Information.....      | 39 |
| Changing the Input Display .....        | 40 |
| Using the Music Optimizer.....          | 40 |
| Muting the AV Receiver .....            | 40 |
| Using Headphones .....                  | 40 |

## Advanced Operations

|  |    |
|--|----|
| On-screen Setup.....                         | 41 |
| Using the Quick Setup .....                  | 41 |
| Using the Audio Settings of Quick Setup..... | 42 |
| Using the Setup Menu (HOME) .....            | 43 |
| About the HYBRID STANDBY indicator .....     | 44 |
| Setup menu items .....                       | 44 |
| HDMI Input.....                              | 45 |
| Component (Component Video Input) .....      | 45 |
| Digital Audio (Digital Audio Input) .....    | 46 |
| Sp Config (Speaker Configuration).....       | 46 |
| Sp Distance (Speaker Distance).....          | 47 |
| Level Cal (Level Calibration).....           | 47 |
| Audio Adjust.....                            | 48 |
| Source Setup .....                           | 49 |
| Hardware .....                               | 51 |
| HDMI Setup .....                             | 52 |
| Network Setup .....                          | 53 |
| Zone 2 .....                                 | 55 |
| Making Zone 2 Connections .....              | 55 |
| Controlling Zone 2 Components .....          | 55 |

## Controlling Other Components

|   |    |
|---|----|
| iPod/iPhone Playback via Onkyo Dock ..... | 56 |
| Using the Onkyo Dock .....                | 56 |
| Controlling Your iPod/iPhone.....         | 57 |

|  |    |
|--|----|
| Controlling Other Components.....                  | 58 |
| Preprogrammed Remote Control Codes .....           | 58 |
| Entering Remote Control Codes.....                 | 58 |
| Remapping Colored Buttons .....                    | 58 |
| Remote Control Codes .....                         | 59 |
| for Onkyo Components Connected via <b>RI</b> ..... | 59 |
| Resetting the REMOTE MODE Buttons .....            | 59 |
| Resetting the Remote Controller .....              | 59 |
| Controlling Other Components .....                 | 59 |

## Appendix

|   |    |
|---|----|
| Troubleshooting .....                                     | 62 |
| Firmware Update .....                                     | 67 |
| Connection Tips and Video Signal Path .....               | 71 |
| Using an RIHD-compatible TV, Player,<br>or Recorder ..... | 72 |
| About HDMI .....  | 74 |
| Network/USB Features.....                                 | 75 |
| License and Trademark Information .....                   | 78 |
| Specifications .....                                      | 79 |

To reset the AV receiver to its factory defaults, turn it on and, while holding down **CBL/SAT**, press **ON/STANDBY** (→ page 62).



# Features

## Amplifier

---

- 80 Watts/Channel @ 8 ohms (FTC)
- 130 Watts/Channel @ 6 ohms (IEC)
- 160 Watts/Channel @ 6 ohms (JEITA)
- Optimum Gain Volume Circuitry
- H.C.P.S. (High Current Power Supply) Massive High Power Transformer

## Processing

---

- HDMI (Audio Return Channel, 3D, DeepColor, x.v.Color, Lip Sync, DTS-HD Master Audio, DTS-HD High Resolution Audio, Dolby TrueHD, Dolby Digital Plus, DSD and Multi-CH PCM)
- Non-Scaling Configuration
- A-Form Listening Mode Memory
- Direct Mode
- Pure Audio Mode (**European and Australian models**)
- Music Optimizer for Compressed Digital Music files
- 192 kHz/24-bit D/A Converters
- Powerful and Highly Accurate 32-bit Processing DSP
- Jitter Cleaning Circuit Technology

## Connections

---

- 6 HDMI Inputs and 1 Output
- Onkyo **RIHD** for System Control
- 4 Digital Inputs (2 Optical/2 Coaxial)
- Component Video Switching (2 Inputs/1 Output)
- Banana Plug-Compatible Speaker Posts
  - \* In Europe, using banana plugs to connect speakers to an audio amplifier is prohibited.
- Internet Radio Connectivity
- Network Capability for Streaming Audio Files
- Front-Panel USB Input for Memory Devices and iPod®/iPhone® models

## Miscellaneous

---


- 40 FM/AM Presets
- Audyssey 2EQ® to correct room acoustic problems
- Audyssey Dynamic EQ® for loudness correction
- Audyssey Dynamic Volume® to maintain optimal listening level and dynamic range
- Crossover Adjustment (40/50/60/70/80/90/100/120/150/200 Hz)
- A/V Sync Control Function (up to 400 ms)
- Auto Standby Function
- On-Screen Display via HDMI
- Preprogrammed **RI**-Compatible Remote



# Front & Rear Panels

## Front Panel

(North American models)

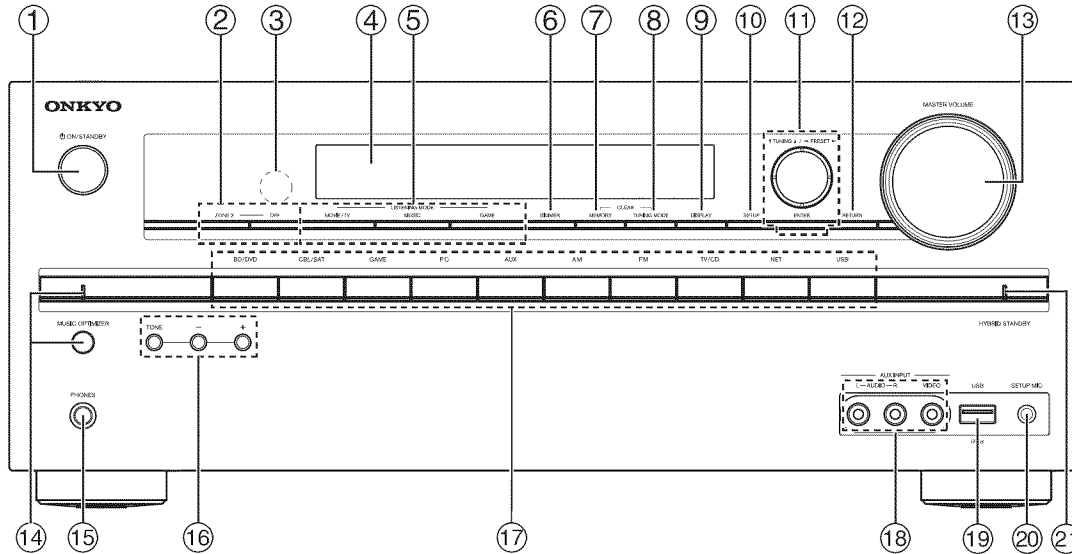


For detailed information, see the pages in parentheses.

- ① **ON/STANDBY** button (19)
- ② **ZONE 2, OFF** buttons (55)
- ③ **Remote control sensor** (5)
- ④ **Display** (9)
- ⑤ **LISTENING MODE** buttons (33)
- ⑥ **DIMMER** button (North American models) (39)
- ⑦ **MEMORY** button (28)
- ⑧ **TUNING MODE** button (27)
- ⑨ **DISPLAY** button (39)
- ⑩ **SETUP** button (43)

- ⑪ **TUNING ▲/▼** (27), **PRESET ◀/▶** (28), **cursor and ENTER** buttons
- ⑫ **RETURN** button
- ⑬ **MASTER VOLUME** control (20)
- ⑭ **MUSIC OPTIMIZER** button and indicator (North American models) (40, 43)
- ⑮ **PHONES** jack (40)
- ⑯ **TONE** and **Tone Level** buttons (42)
- ⑰ **Input selector** buttons (20)
- ⑱ **AUX INPUT AUDIO/VIDEO** jacks (16)
- ⑲ **USB** port (16)
- ⑳ **SETUP MIC** jack (31)

(European and Australian models)

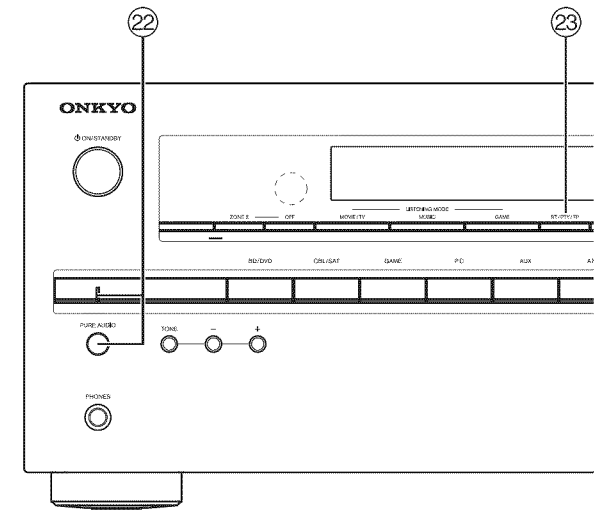


- ⑳ **HYBRID STANDBY** indicator (44)
- ㉑ **PURE AUDIO** button and indicator (European and Australian models) (33)
- ㉒ **RT/PTY/TP** button (European and Australian models) (29)






## Display

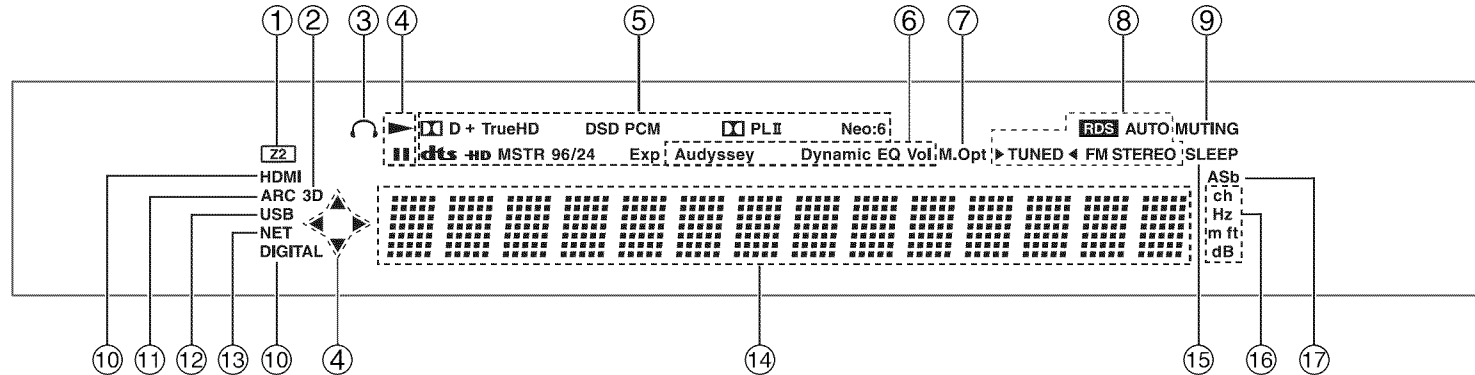

For detailed information, see the pages in parentheses.

- ① **Z2 (Zone 2) indicator** (55)
- ② **3D indicator**  
This lights when a 3D input signal is detected.
- ③ **Headphone indicator** (40)
- ④ **▶, || and cursor indicators** (22)
- ⑤ **Listening mode and format indicators** (33)
  - ⑥ **Audyssey indicator** (30, 49)
  - Dynamic EQ indicator** (49)
  - Dynamic Vol indicator** (49)
  - ⑦ **M.Opt indicator** (40, 43)
- ⑧ **Tuning indicators**
  - RDS indicator** (excluding North American models) (28)
  - AUTO indicator** (27)
  - TUNED indicator** (27)
  - FM STEREO indicator** (27)
- ⑨ **MUTING indicator** (40)
- ⑩ **Input indicators** (71)
  - HDMI indicator** (52)
  - DIGITAL indicator**
  - ⑪ **ARC indicator** (53)
  - ⑫ **USB indicator** (22, 23)
  - ⑬ **NET indicator** (23 to 26, 54)
- ⑭ **Message area**
- ⑮ **SLEEP indicator** (39)
- ⑯ **Channel/Unit indicators**
  - ch indicator**
  - Hz indicator**
  - m/ft indicator**
  - dB indicator**
- ⑰ **ASb indicator** (51)

## Rear Panel

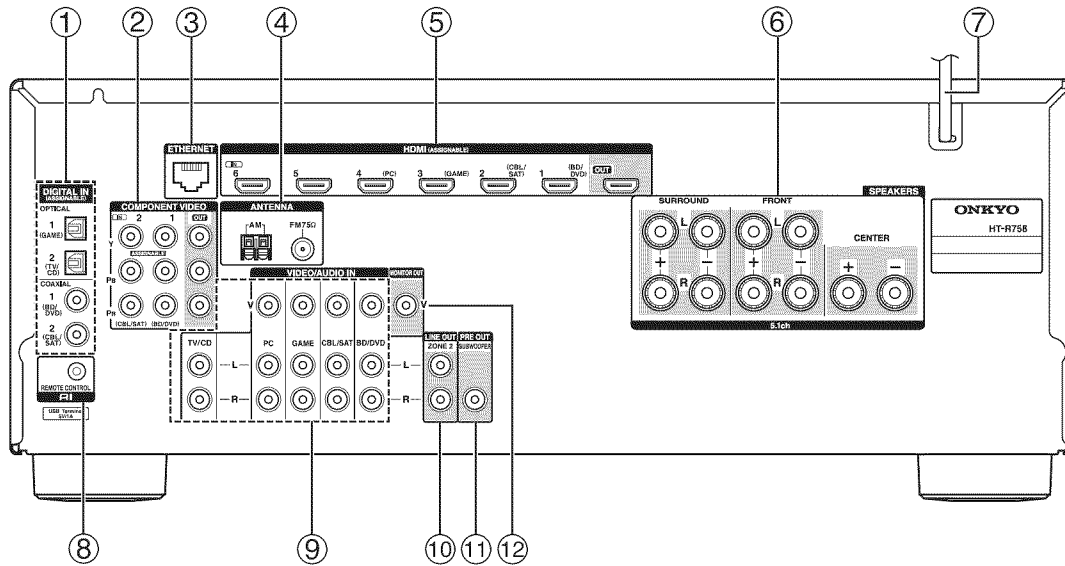


- ① DIGITAL IN COAXIAL and OPTICAL jacks
- ② COMPONENT VIDEO IN and OUT jacks
- ③ ETHERNET port
- ④ FM ANTENNA jack and AM ANTENNA terminal
- ⑤ HDMI IN and OUT jacks
- ⑥ SPEAKERS terminals  
(CENTER, FRONT, SURROUND)
- ⑦ Power cord
- ⑧ RI REMOTE CONTROL jack
- ⑨ Composite video and analog audio jacks  
(BD/DVD IN, CBL/SAT IN, GAME IN, PC IN, TV/CD IN)
- ⑩ ZONE 2 LINE OUT jacks
- ⑪ SUBWOOFER PRE OUT jack
- ⑫ MONITOR OUT V jack

See "Connecting the AV Receiver" for connection  
(→ pages 12 to 18).



# Remote Controller

## Controlling the AV Receiver

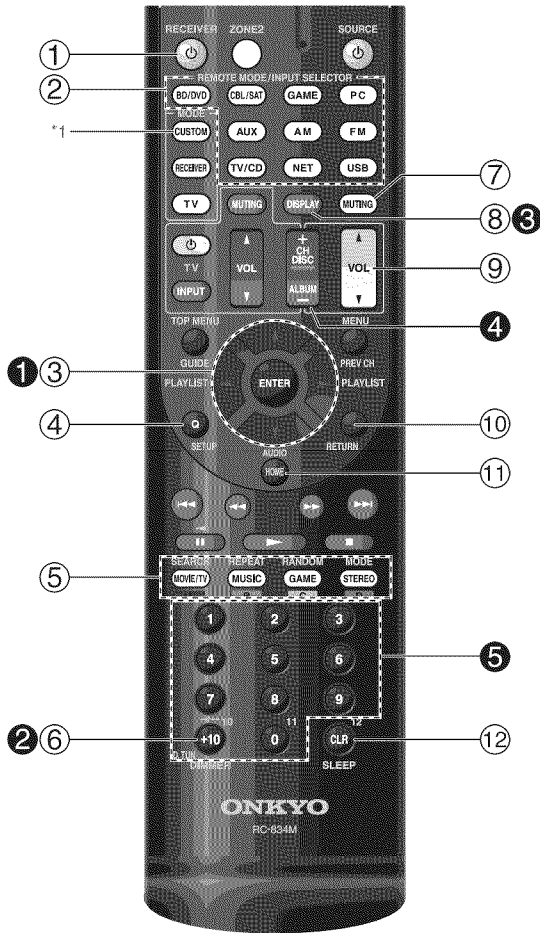

To control the AV receiver, press **RECEIVER** to select Receiver mode.  
 You can also use the remote controller to control Onkyo Blu-ray Disc/DVD player, CD player, and other components.  
 See “Entering Remote Control Codes” for more details (→ page 58).

For detailed information, see the pages in parentheses.

- ① **RECEIVER** button (19)
- ② **REMOTE MODE/INPUT SELECTOR** buttons (20)
- ③ **▲/▼/◀/▶** and **ENTER** buttons
- ④ **Q SETUP** button (41)
- ⑤ **Listening Mode** buttons (33)
- ⑥ **DIMMER** button (39)
- ⑦ **MUTING** button (40)
- ⑧ **DISPLAY** button (39)
- ⑨ **VOL ▲/▼** button (20)
- ⑩ **RETURN** button
- ⑪ **HOME** button (38)
- ⑫ **SLEEP** button (39)

### ■ Controlling the tuner

To control the AV receiver’s tuner, press **AM** or **FM** (or **RECEIVER**).

- ① **▲/▼** buttons (27)
- ② **D.TUN** button (27)
- ③ **DISPLAY** button
- ④ **CH +/-** button (28)
- ⑤ **Number** buttons (27)

\*1 To control a component, you must first enter the remote control code.  
 See “Entering Remote Control Codes” for more details (→ page 58).



# Connecting the AV Receiver


## Connecting Your Speakers

### Connecting the Speaker Cables

The following illustration shows how to connect the speakers to each pair of terminals.


#### ■ Screw-type speaker terminals

 Strip 1/2" to 5/8" (12 to 15 mm) of insulation from the ends of the speaker cables, and twist the bare wires tightly, as shown.



#### ■ Banana Plugs (North American models)

- If you are using banana plugs, tighten the speaker terminal before inserting the banana plug.
- Do not insert the speaker code directly into the center hole of the speaker terminal.

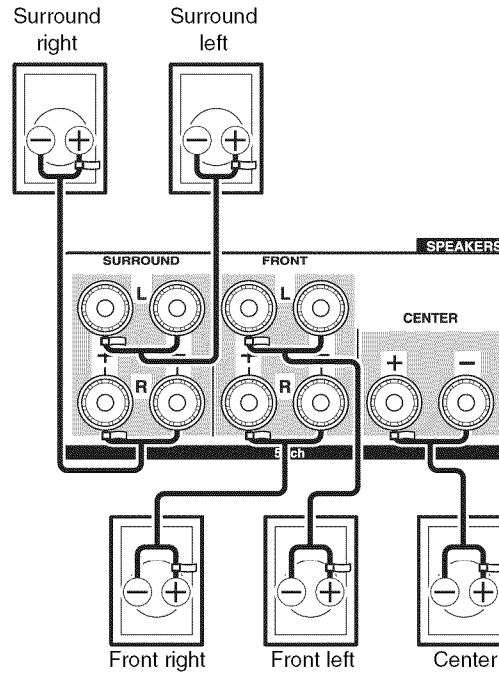

## Speaker Configuration

The following table indicates the channels you should use depending on the number of speakers that you have. No matter how many speakers you use, a powered subwoofer is recommended for a really powerful and solid bass.

To get the best from your surround sound system, you need to set the speaker settings automatically (→ [page 30](#)) or manually (→ [page 46](#)).

| Number of speakers | 2 | 3 | 4 | 5 |
|--------------------|---|---|---|---|
| Front speakers     | ✓ | ✓ | ✓ | ✓ |
| Center speaker     |   | ✓ |   | ✓ |
| Surround speakers  |   |   | ✓ | ✓ |

### Attaching the Speaker Cable Labels

The speaker terminals are color-coded for identification purpose.

| Speaker        | Color |
|----------------|-------|
| Front left     | White |
| Front right    | Red   |
| Center         | Green |
| Surround left  | Blue  |
| Surround right | Gray  |

The supplied speaker cable labels are also color-coded and you should attach them to the positive (+) side of each speaker cable in accordance with the table above. Then all you need to do is to match the color of each label to the corresponding speaker terminal.



#### Note


- With the Home Theater System, speaker cable labels are not supplied.




## Speaker Connection Precautions

Read the following before connecting your speakers:



- You can connect speakers with an impedance of between 6 and 16 ohms. If you use speakers with a lower impedance, and use the amplifier at high volume levels for a long period of time, the built-in amp protection circuit may be activated.
- Disconnect the power cord from the wall outlet before making any connections.
- Read the instructions supplied with your speakers.
- Pay close attention to speaker wiring polarity. In other words, connect positive (+) terminals only to positive (+) terminals, and negative (–) terminals only to negative (–) terminals. If you get them the wrong way around, the sound will be out of phase and will sound unnatural.
- Unnecessarily long, or very thin speaker cables may affect the sound quality and should be avoided.
- Be careful not to short the positive and negative wires. Doing so may damage the AV receiver.
- Make sure the metal core of the wire does not have contact with the AV receiver's rear panel. Doing so may damage the AV receiver.

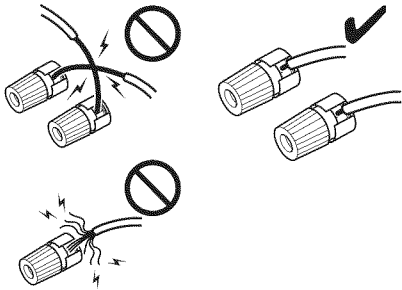

- Don't connect more than one cable to each speaker terminal. Doing so may damage the AV receiver.
- Don't connect one speaker to several terminals.

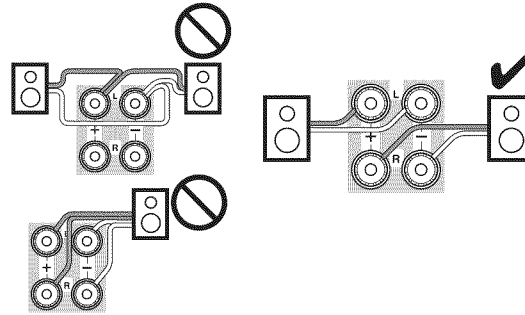

## Using a Powered Subwoofer

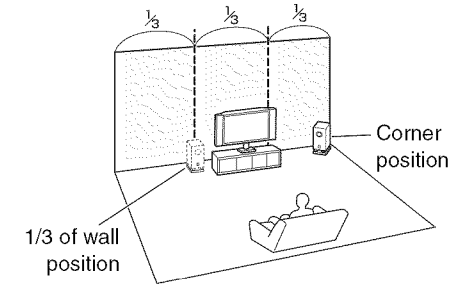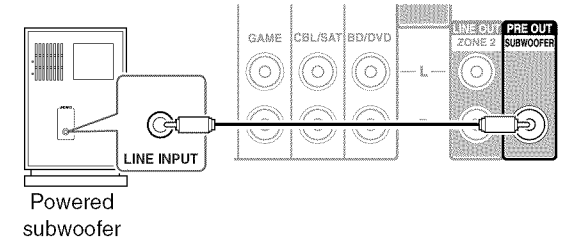

To find the best position for your subwoofer, while playing a movie or some music with good bass, experiment by placing your subwoofer at various positions within the room, and choose the one that provides the most satisfying results.

### Tip


- If your subwoofer is unpowered and you're using an external amplifier, connect the subwoofer pre out jack to an input on the amplifier.




## About AV Connections

### Connecting AV components


#### HDMI cable

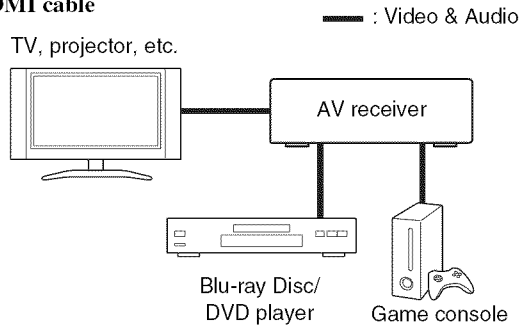

#### Other cables

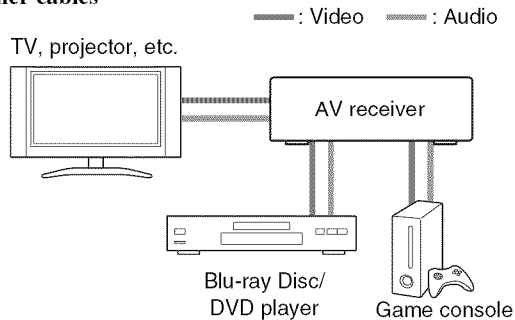

- Before making any AV connections, read the manuals supplied with your AV components.
- Don't connect the power cord until you've completed and double-checked all AV connections.
- Push plugs in all the way to make good connections (loose connections can cause noise or malfunctions).
- To prevent interference, keep audio and video cables away from power cords and speaker cables.

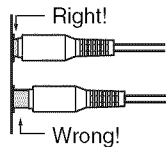

### AV Cables and Jacks

 
#### HDMI

HDMI connections can carry digital video and audio.



#### Component video

Component video separates the luminance (Y) and color difference signals (Pb, Pr), providing the best picture quality (some TV manufacturers label their component video sockets slightly differently).



#### Composite video

Composite video is commonly used on TVs, DVDs, and other video equipment.



#### Optical digital audio

Optical digital connections allow you to enjoy digital sound such as PCM<sup>\*1</sup>, Dolby Digital or DTS. The audio quality is the same as coaxial.



 
#### Coaxial digital audio

Coaxial digital connections allow you to enjoy digital sound such as PCM<sup>\*1</sup>, Dolby Digital or DTS. The audio quality is the same as optical.



#### Analog audio (RCA)

Analog audio connections (RCA) carry analog audio.



\*1 For PCM signals, the supported sampling rates are 32/44.1/48/88.2/96 kHz. With HDMI connections, 176.4 and 192 kHz are also supported.

#### Note


- The AV receiver does not support SCART plugs.
- The AV receiver's optical digital jacks have shutter-type covers that open when an optical plug is inserted and close when it's removed. Push plugs in all the way.

#### Caution

- To prevent shutter damage, hold the optical plug straight when inserting and removing.



## Connecting Components with HDMI

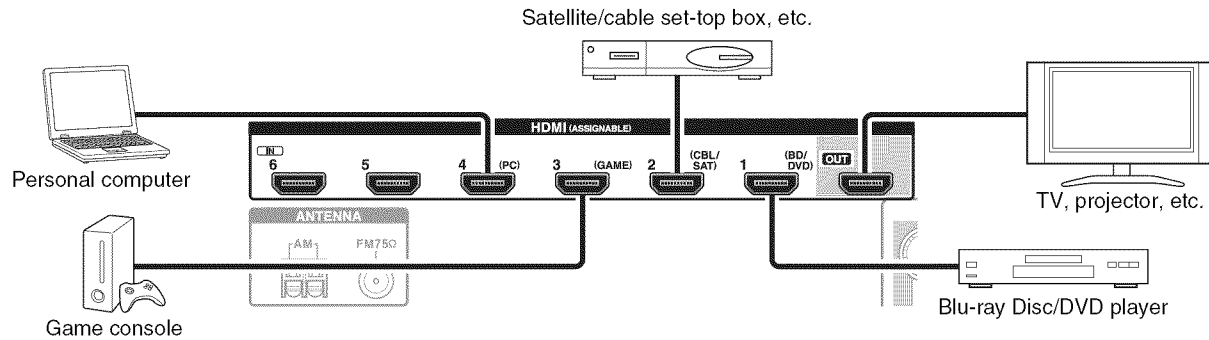

- \* If your TV doesn't support Audio Return Channel (ARC), you need to connect an optical digital cable together with the HDMI cable to the AV receiver.
- \* When listening to an HDMI component through the AV receiver, set the HDMI component so that its video can be seen on the TV screen (on the TV, select the input of the HDMI component connected to the AV receiver). If the TV power is off or the TV is set to another input source, this may result in no sound from the AV receiver or the sound may be cut off.

Connect your components to the appropriate jacks. The default input assignments are shown below.

✓: Assignment can be changed (→ page 45).

| Jack     | Components                        |   |
|----------|-----------------------------------|---|
| HDMI IN1 | Blu-ray Disc/DVD player           | ✓ |
| HDMI IN2 | Satellite/cable set-top box, etc. | ✓ |
| HDMI IN3 | Game console                      | ✓ |
| HDMI IN4 | Personal computer                 | ✓ |
| HDMI IN5 | Other components                  | ✓ |
| HDMI IN6 | Other components                  | ✓ |
| HDMI OUT | TV, projector, etc.               |   |

See also:

- “Connection Tips and Video Signal Path” (→ page 71)
- “Using an RIHD-compatible TV, Player, or Recorder” (→ page 72)
- “About HDMI” (→ page 74)

### Tip

- To listen to the audio of a component connected via HDMI through your TV's speakers, enable “HDMI Through” (→ page 52) and set the AV receiver to standby mode.

### Note

- In the case of Blu-ray Disc/DVD players, if no sound is output despite following the above-mentioned procedure, set your Blu-ray Disc/DVD player's HDMI audio settings to PCM.



### ■ Audio Return Channel (ARC) function

The Audio Return Channel (ARC) function enables an HDMI capable TV to send the audio stream to **HDMI OUT** on the AV receiver.

- This function can be used when:
  - Your TV is ARC capable, and
  - The **TV/CD** input selector is selected, and
  - “HDMI Ctrl (RIHD)” is set to “On” (→ page 52), and
  - “Audio Return Ch” is set to “Auto” (→ page 53).



## Connecting Your Components

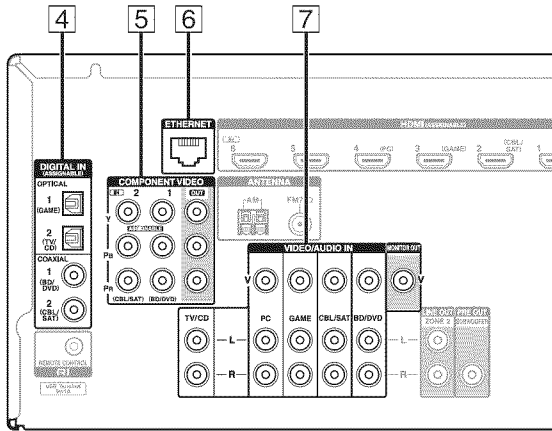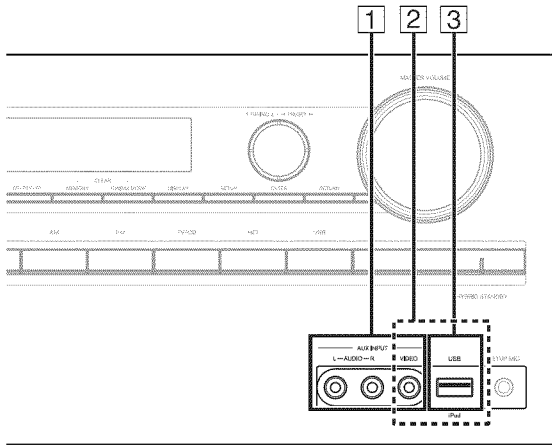

Connect your components to the appropriate jacks. The default input assignments are shown below. See “Connection Tips and Video Signal Path” for more information (→ page 71).

The on-screen menus appear only on a TV that is connected to **HDMI OUT**. If your TV is connected to other video outputs, use the AV receiver’s display when changing settings.

✓: Assignment can be changed (→ page 45).

| No. | Jack/Port              | Components  |   |
|-----|------------------------|---|---|
| 1   | AUX INPUT              |   |   |
|     | VIDEO                  | Camcorder, etc  |   |
|     | AUDIO L/R              |   |   |
| 2   | USB, AUX INPUT VIDEO*1 | iPod/iPhone (video playback)                                      |   |
| 3   | USB*2                  | iPod/iPhone, MP3 player, USB flash drive                          |   |
| 4   | DIGITAL IN             |   |   |
|     | OPTICAL 1 (GAME)       | Game consoles   | ✓ |
|     | OPTICAL 2 (TV/CD)      | TV, CD player   | ✓ |
|     | COAXIAL 1 (BD/DVD)     | Blu-ray Disc/DVD player   | ✓ |
|     | COAXIAL 2 (CBL/SAT)    | Satellite/cable set-top box, RI dock, etc.                        | ✓ |
| 5   | COMPONENT VIDEO        |   |   |
|     | IN 1 (BD/DVD)          | Blu-ray Disc/DVD player, RI dock                                  | ✓ |
|     | IN 2 (CBL/SAT)         | Satellite/cable set-top box, RI dock, etc.                        | ✓ |
|     | OUT                    | TV, projector, etc.   |   |
| 6   | ETHERNET               | Router  |   |
| 7   | MONITOR OUT            | TV, projector, etc.   |   |
|     | BD/DVD IN              | Blu-ray Disc/DVD player   |   |
|     | CBL/SAT IN             | Satellite/cable set-top box, etc.                                 |   |
|     | GAME IN                | Game console, RI dock   |   |
|     | PC IN                  | Personal computer   |   |
|     | TV/CD IN               | TV, CD player, cassette tape deck, MD, CD-R, Turntable*3, RI dock |   |

### Note

- \*1 When the **USB** input is selected, you can input video signals from the **AUX INPUT VIDEO** jack. Video signals input from **AUX INPUT VIDEO** will be output from the **MONITOR OUT** jack.
  - \*2 Do not connect the AV receiver’s **USB** port to a USB port on your computer. Music on your computer cannot be played through the AV receiver in this way.
  - \*3 Connect a turntable (MM) that has a phono preamp built-in. If your turntable (MM) doesn’t have it, you’ll need a commercially available phono preamp. If your turntable has a moving coil (MC) type cartridge, you’ll need a commercially available MC head amp or MC transformer as well as a phono preamp. See your turntable’s manual for details.
- With connection 4, you can enjoy Dolby Digital and DTS. (To listen in Zone 2 as well, use 4 and 7.)
  - With connection 7, you can enjoy audio from external components while you are in Zone 2.
  - With connection 7, if your Blu-ray Disc/DVD player has both the main stereo and multichannel outputs, be sure to connect the main stereo.





## Connecting Onkyo RI Components

- 1 Make sure that each Onkyo component is connected with an analog audio cable (connection 7 in the hookup examples) (→ page 16).
- 2 Make the RI connection (see the illustration).
- 3 If you're using an RI Dock, or cassette tape deck, change the Input Display (→ page 40).

With **RI** (Remote Interactive), you can use the following special functions:

### ■ System On/Auto Power On


When you start playback on a component connected via **RI**, while the AV receiver is on standby, the AV receiver will automatically turn on and select that component as the input source.

### ■ Direct Change

When playback is started on a component connected via **RI**, the AV receiver automatically selects that component as the input source.

### ■ Remote Control

You can use the AV receiver's remote controller to control your other **RI**-capable Onkyo components, pointing the remote controller at the AV receiver's remote control sensor instead of the component. You must enter the appropriate remote control code first (→ page 59).

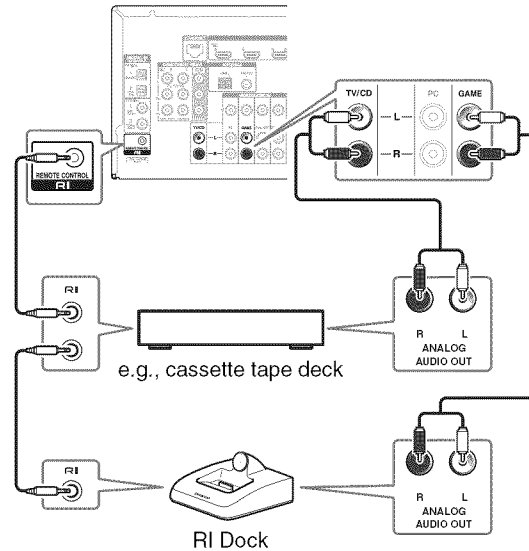


### Note

- Use only **RI** cables for **RI** connections. **RI** cables are supplied with Onkyo components.
- Some components have two **RI** jacks. You can connect either one to the AV receiver. The other jack is for connecting additional **RI**-capable components.
- Connect only Onkyo components to **RI** jacks. Connecting other manufacturer's components may cause a malfunction.
- Some components may not support all **RI** functions. Refer to the manuals supplied with your Onkyo components.
- While Zone 2 is on, the System On/Auto Power On and Direct Change **RI** functions do not work.

## Connecting the Antennas

This section explains how to connect the supplied indoor FM antenna and AM loop antenna. The AV receiver won't pick up any radio signals without any antenna connected, so you must connect the antenna to use the tuner.

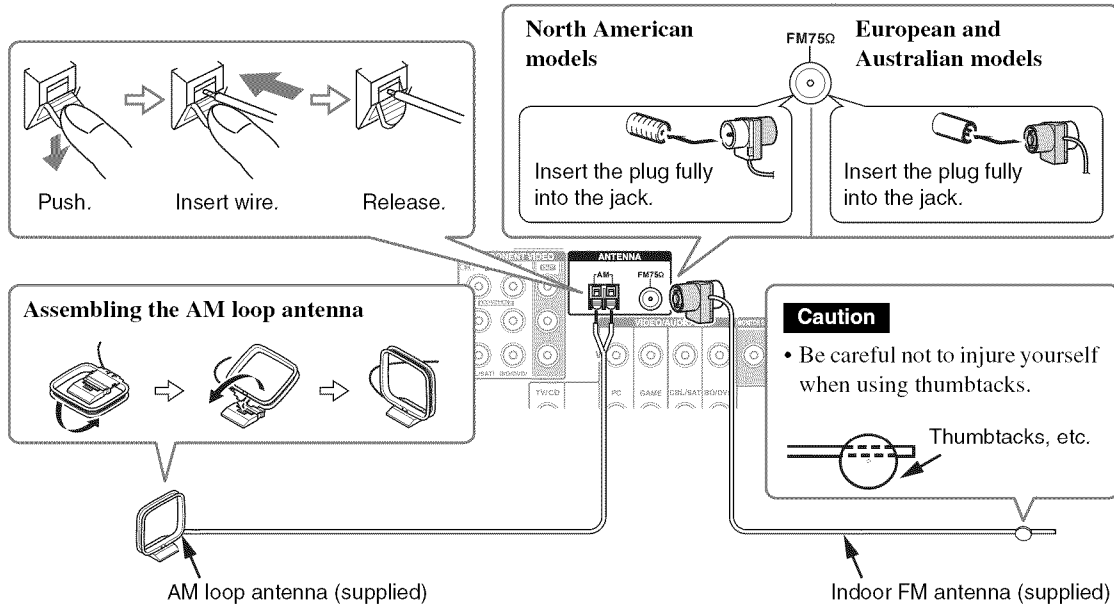

### Note

- Once your AV receiver is ready for use, you'll need to tune into a radio station and position the antenna to achieve the best possible reception.
- Keep the AM loop antenna as far away as possible from your AV receiver, TV, speaker cables, and power cords.

### Tip

- If you cannot achieve good reception with the supplied indoor FM antenna, try a commercially available outdoor FM antenna instead.
- If you cannot achieve good reception with the supplied indoor AM loop antenna, try using it with a commercially available outdoor AM antenna.

## Connecting the Power Cord

### 1 Plug the power cord into an AC wall outlet.



### Note

- Before connecting the power cord, connect all of your speakers and AV components.
- Turning on the AV receiver may cause a momentary power surge that might interfere with other electrical equipment on the same circuit. If this is a problem, plug the AV receiver into a different branch circuit.



# Turning On/Off the AV Receiver

ON/STANDBY

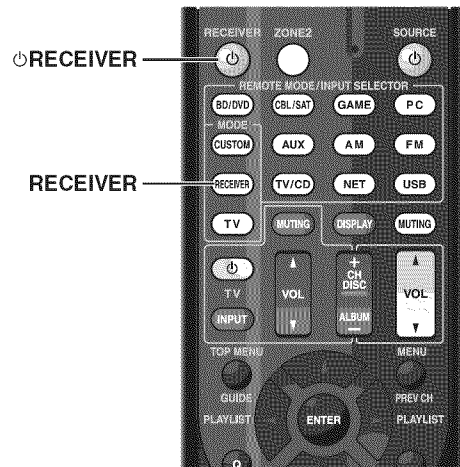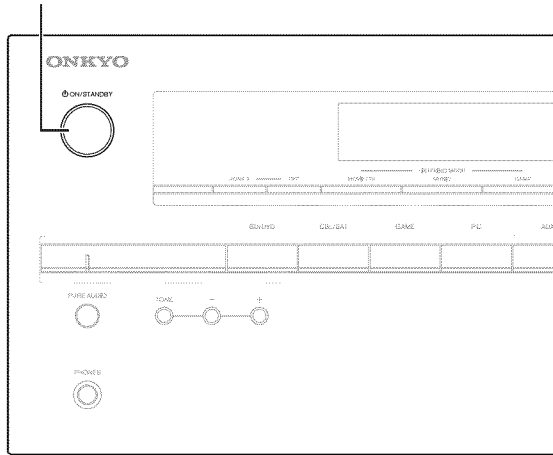

## Turning On

1 Press **ON/STANDBY** on the front panel.

or

Press **RECEIVER** followed by **RECEIVER** on the remote controller.

The AV receiver comes on and its display lights.

## Turning Off

1 Press **ON/STANDBY** on the front panel.

or

Press **RECEIVER** followed by **RECEIVER** on the remote controller.

The AV receiver will enter standby mode. To prevent any loud surprises when you turn on the AV receiver, always turn down the volume before you turn it off.

### Tip

- The **HYBRID STANDBY** indicator may light depending on the status of settings (→ page 44).
- For details on power management settings, see “Auto Standby” (→ page 51).

### ■ If the “Update New F/W” window appears.

When a new version of the firmware is available, the notification window “Update New F/W” pops up. This notification only appears when the AV receiver is connected to your home network (→ page 75). To perform the firmware update, follow the instructions on screen.

Use the **▲/▼** and **ENTER** buttons on the AV receiver or remote controller to select one of the options.

#### ▶ Update Now:

Starts the firmware update.

Refer to “Firmware Update” (→ page 67).

#### ▶ Remind me Later:

The update notification will pop up again the next time you turn the AV receiver on.

#### ▶ Never Remind me:

Disables the automatic update notification.

### Tip

- The update notification window can be enabled or disabled in “Update Notice” (→ page 54).




# Playback

The on-screen menus appear only on a TV that is connected to HDMI OUT. If your TV is connected to other video outputs, use the AV receiver's display when changing settings.

This section describes the procedure for using the remote controller, unless otherwise specified.

## Playing the Connected Component

### Operating with the remote controller

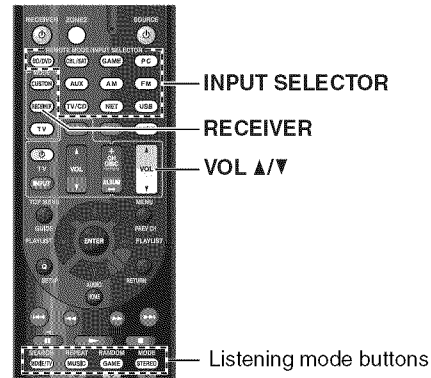

**1** Press **RECEIVER** followed by an **INPUT SELECTOR** button.

**2** Start playback on the source component.

See also:

- “Playing an iPod/iPhone via USB” (→ page 22)
- “Playing a USB Device” (→ page 23)
- “Listening to vTuner Internet Radio” (→ page 23)
- “Registering Other Internet Radio” (→ page 24)
- “Playing Music Files on a Server” (→ page 25)
- “Remote Playback” (→ page 26)
- “Listening to AM/FM Radio” (→ page 27)
- “iPod/iPhone Playback via Onkyo Dock” (→ page 56)
- “Controlling Other Components” (→ page 58)


**3** To adjust the volume, use **VOL ▲/▼**.

**4** Select a listening mode and enjoy!

See also:

- “Using the Listening Modes” (→ page 33)

### Operating on the AV receiver

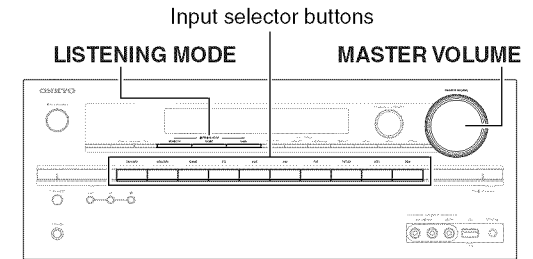

**1** Use the input selector buttons to select the input source.

**2** Start playback on the source component.


**3** To adjust the volume, use the **MASTER VOLUME** control.

**4** Select a listening mode and enjoy!



**Controlling Contents of USB or Network Devices**

Press **USB** or **NET** first.

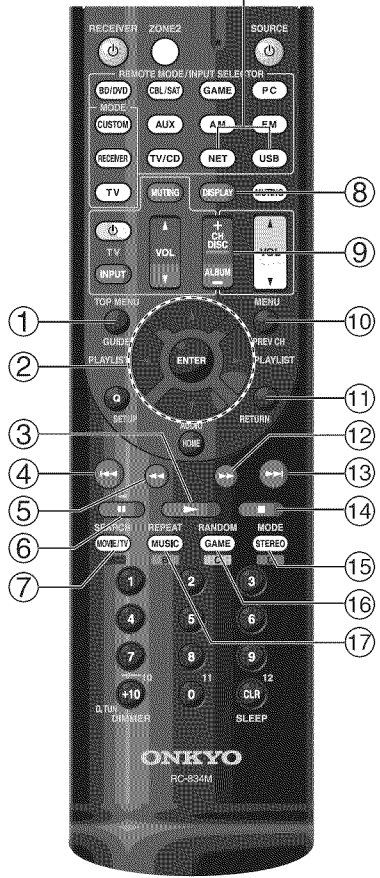

- ① **TOP MENU**  
This button displays the top menu for each media or service.
- ② **▲/▼ and ENTER**  
These buttons navigate through the menus.  
◀/▶  
This button cycles through pages.  
**PLAYLIST** ◀/▶  
In Standard Mode (iPod/iPhone), this button selects playlists.
- ③ **▶**  
This button starts playback.
- ④ **⏮**  
This button selects the beginning of the current song. Pressing this button twice selects the previous song.
- ⑤ **⏪**  
This button fast-reverses the current song.
- ⑥ **⏹**  
This button pauses playback.
- ⑦ **SEARCH**  
You can toggle between the playback screen and the list screen during playback.
- ⑧ **DISPLAY**  
This button switches between song information during playback. Press this button while the list screen is displayed to return to the playback screen.
- ⑨ **ALBUM +/-**  
In Standard Mode (iPod/iPhone), this button selects albums.
- ⑩ **MENU**  
This button returns to top menu of the Internet Radio service.
- ⑪ **RETURN**  
This button returns to the previous menu.
- ⑫ **⏩**  
This button fast-forwards the current song.
- ⑬ **⏭**  
This button selects the next song.

- ⑭ **■**  
This button stops playback.
- ⑮ **MODE**  
You can switch between Standard Mode and Extended Mode during iPod/iPhone playback.
- ⑯ **RANDOM**  
This button performs random playback.
- ⑰ **REPEAT**  
Press this button repeatedly to cycle through the repeat modes.

**Tip**

• See “Controlling Other Components” about the operation of other components (→ page 58).









 

 


**Note**

• The buttons you can use will differ depending on the devices and media used for playback.



## Understanding Icons on the Display

This section describes icons that appear on the AV receiver's display during media playback.

| Icon  | Description                 |
|---|-----------------------------|
|  | Folder                      |
|  | Track                       |
|  | Playback                    |
|  | Pause                       |
|  | Fast Forward                |
|  | Fast Reverse                |
|  | Artist                      |
|  | Album                       |
|  | Repeat One Track            |
|  | Repeat Folder (USB Device)  |
|  | Repeat                      |
|  | Shuffle                     |
|  | Shuffle Album (iPod/iPhone) |

## Playing an iPod/iPhone via USB

The on-screen menus appear only on a TV that is connected to **HDMI OUT**.

This section explains how to play music files on the iPod/iPhone.

Compatible iPod/iPhone models

Made for:

iPod touch (1st, 2nd, 3rd and 4th generation), iPod classic, iPod nano (2nd, 3rd, 4th, 5th and 6th generation), iPhone 4S, iPhone 4, iPhone 3GS, iPhone 3G, iPhone

### 1 Press **USB** to select the “USB” input.

#### Tip

- The same operation can be done by selecting “USB” in the Home menu.

### 2 Connect the **USB cable that comes with the iPod/iPhone to the USB port on the front of the AV receiver.**

While reading the contents of your iPod/iPhone, the message “**Connecting...**” appears on the AV receiver's display.

A list of your iPod/iPhone model's contents appears (Extended Mode).

The **USB** indicator lights. It will flash if the AV receiver cannot read the iPod/iPhone.

### 3 Use **▲/▼** to select a folder, and then press **ENTER** to open it.

#### Tip

- If you want to operate using the iPod/iPhone or the remote controller, press **MODE** to switch to Standard mode.
- When you disconnect the iPod/iPhone, the AV receiver remembers the current mode. This means that if you disconnect when in Extended Mode, the AV receiver will start in Extended Mode the next time you connect the iPod/iPhone.

- You can also use the **▲/▼**, **ENTER** and **TUNING MODE** buttons on the front panel. **TUNING MODE** allows you to switch modes.
- When connecting your iPod/iPhone with a USB cable, we recommend you use an official USB cable from Apple Inc.

### 4 Use **▲/▼** to select a music file, and press **ENTER** or **▶** to start playback.

#### Note

- While the message “**Connecting...**” appears on the AV receiver's display, do not disconnect the USB cable supplied with your iPod/iPhone or the USB device from the **USB** port.
- If you connect an iPod or iPhone to the **USB** port, no sound will be output from the headphones jack.

## Extended Mode Control

The content information is displayed (lists are displayed), and you can control the content while looking at the screen. Top screen list:

Playlists, Artists, Albums, Genres, Songs, Composers, Shuffle Songs, Now Playing.

## Standard Mode Control

The content information is not displayed, but can be operated using the iPod/iPhone or the remote controller.



## Playing a USB Device

The on-screen menus appear only on a TV that is connected to **HDMI OUT**.

This section explains how to play music files from a USB device (e.g., USB flash drives and MP3 players).

See also:

- “Network/USB Features” (→ [page 75](#))

- 1 Press **USB** to select the “USB” input.
- 2 Plug your USB device into the AV receiver’s USB port.  
The **USB** indicator lights. It will flash if the AV receiver cannot read the USB device.
- 3 Press **ENTER**.  
A list of the device’s contents appears. To open a folder, use **▲/▼** to select it, and then press **ENTER**.
- 4 Use **▲/▼** to select a music file, and press **ENTER** or **▶** to start playback.

### Note

- While the message “Connecting...” appears on the AV receiver’s display, do not disconnect the USB cable supplied with your iPod/iPhone or the USB device from the **USB** port.

## Listening to vTuner Internet Radio

You need to connect the AV receiver to your home network (→ [page 75](#)). The on-screen menus appear only on a TV that is connected to **HDMI OUT**.

The vTuner Internet Radio Service is a portal site featuring radio stations from all over the world.

You can search for stations by categories such as genre or location. The AV receiver is preinstalled with this service.

- 1 Press **NET**.  
The “NET” screen appears, and the **NET** indicator lights. If it flashes, verify that the Ethernet cable is firmly connected to the AV receiver.
- Tip**
- The same operation can be done by selecting “Network Service” in the Home menu.
- 2 Use **▲/▼** to select “vTuner Internet Radio” and then press **ENTER**.
  - 3 Use **▲/▼** to select a program and then press **ENTER**.  
Playback starts.



### Tip

- You can find stations similar to the one being played. During playback, press **MENU** on the remote controller, select “Stations like this” and press **ENTER**.

## ■ Adding vTuner Internet Radio Stations to Favorites

There are two ways you can register specific Internet radio stations (programs) from the vTuner Internet Radio.

### Adding to My Favorites

The selected program will be added to “My Favorites” on the “NET” screen, which appears when pressing **NET** on the remote controller.

1. Press **MENU** with the station selected or while a station is playing.
2. Use **▲/▼** to select “Add to My Favorites”, and press **ENTER**.
3. Use **▲/▼/◀/▶** to select “OK”, and press **ENTER**.

### Tip

- You can rename the stations saved in “My Favorites”.

### Adding to vTuner Internet Radio’s Favorites

Select “vTuner Internet Radio” and press **ENTER** to display the “Favorites” folder that appears on the same screen as “Stations By Genre”, “Stations By Location”, etc. This is where your favorite Internet radio bookmarks will be stored.

To register your favorite stations using a personal computer, you need to connect your PC to the same network as the AV receiver. Enter the ID# (MAC address) of your unit on the <http://onkyo.vtuner.com/>. You can then register your favorite radio programs. The ID# is shown at the bottom of the “vTuner Internet Radio” top menu, and the AV receiver’s MAC address is shown on “Network Setup” of the Setup menu (→ [page 53](#)).



## Registering Other Internet Radio

**You need to connect the AV receiver to your home network (→ page 75). The on-screen menus appear only on a TV that is connected to HDMI OUT.**

Internet radio URLs in the following formats are supported: PLS, M3U, and podcast (RSS). However, depending on the type of data or audio format used by the Internet radio station, you may not be able to listen to some stations.

To listen to other Internet radio stations, you must register your station in “My Favorites” of the “NET” screen, as described below.

### Note

- Services available may vary depending on the region. See the separate instructions for more information.

### 1 Select “Network Setup” on the Setup menu to verify your IP address (→ page 54).

Take a note of the IP address.

### 2 On your computer, start your web browser.

### 3 Enter the AV receiver’s IP address in the browser’s Internet address (URL) field.

If you are using Internet Explorer®, you can also enter the URL by selecting “Open...” on the “File” menu.

Information on the AV receiver is then shown on your Internet browser (Web Setup).

### 4 Click on the “My Favorites” tab, and enter the Internet radio station’s name and URL.

### 5 Click “Save” to save the Internet radio station.

The Internet radio station is then added to “My Favorites”. To play the registered station, press **NET**, and then select “My Favorites” on the “NET” screen. A list of registered Internet radio stations appears. Select the one that you saved and press **ENTER**.

### Tip

- If you want to add a new station directly from “My Favorites”, select an empty slot in the list and press **MENU**. Then, select “Create New Station” and press **ENTER**. Pressing **ENTER** again will display the keyboard screen. Use that keyboard to enter the station’s name and URL respectively, and then press **ENTER**.
- If you want to delete a station saved in “My Favorites”, press **MENU** with the station selected or while the station is playing. Then, use **▲/▼** to select “Delete from My Favorites” and press **ENTER**. You can also delete stations from the Web Setup.
- If you want to rename a station, select the desired station and press **MENU**. Then, use **▲/▼** to select “Rename this station” and press **ENTER**.
- You can save up to 40 Internet radio stations.





## Playing Music Files on a Server

You need to connect the AV receiver to your home network (→ page 75). The on-screen menus appear only on a TV that is connected to HDMI OUT.

This section explains how to play music files on a computer or media server through the AV receiver (Server Playback).

### 1 Start your computer or media server.

### 2 Press NET.

The “NET” screen appears. The NET indicator lights. If it flashes, confirm the network connection.

#### Tip

- The same operation can be done by selecting “Network Service” in the Home menu.

### 3 Use ▲/▼ to select “DLNA”, and press ENTER.

#### Tip

- To go back to the previous screen, press RETURN.


### 4 Use ▲/▼ to select a server, and then press ENTER.

The menu is displayed according to the server functions.

#### Note

- The search function does not work with media servers which do not support this function.
- Photos and movies stored on a media server cannot be accessed from the AV receiver.
- Depending on the sharing settings in the media server, the AV receiver may not be able to access the content. See the instruction manual of the media server.

### 5 Use ▲/▼ to select an item, and then press ENTER or ► to start playback.

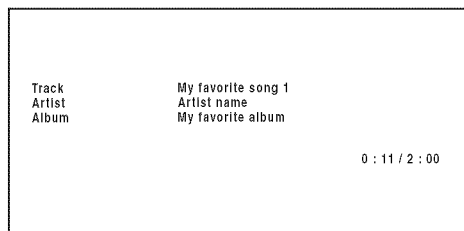

#### Note

- Depending on the media server, ◀◀/▶▶/|| may not work.
- If the message “No Item.” appears, this means that no information can be retrieved from the server. In this case, check your server, network, and AV receiver connections.

## Windows Media Player 11 Setup

This section explains how to configure Windows Media Player 11 so that the AV receiver can play the music files stored on your computer.

### 1 Start Windows Media Player 11.

### 2 On the “Library” menu, select “Media Sharing”.

The “Media Sharing” dialog box appears.

### 3 Select the “Share my media” check box, and then click “OK”.

A list of the supported devices appears.

### 4 Select the AV receiver in the list, and then click “Allow”.

The corresponding icon will be checked.

### 5 Click “OK” to close the dialog box.

This completes the Windows Media Player 11 configuration.

You can now play the music files in your Windows Media Player 11 library through the AV receiver.

#### Tip

- Windows Media Player 11 can be downloaded for free from the Microsoft web site.



## Remote Playback

**You need to connect the AV receiver to your home network (→ page 75). The on-screen menus appear only on a TV that is connected to HDMI OUT.**

Remote Playback means you can play the music files stored on a media server or personal computer with the AV receiver by operating the controller device in the home network.

### Windows Media Player 12 Setup

This section explains how to configure Windows Media Player 12 so that the AV receiver can play the music files stored on your personal computer.

- 1 Start Windows Media Player 12.**
- 2 On the “Stream” menu, select “Turn on media streaming”.**  
A dialog box appears.  
**Tip**
  - If the media streaming is already activated, clicking on “More streaming options...” in the “Stream” menu will display a list of the playback devices connected to the network. You can skip step 3.
- 3 Move your cursor and click on “Turn on media streaming”.**  
A list of media server appears. Wording may vary slightly depending on the network location.
- 4 On the “Media streaming options”, select the AV receiver and confirm that it is set to “Allow”.**

- 5 Click “OK” to close the dialog box.**  
This completes the Windows Media Player 12 configuration.

You can now play the music files in your Windows Media Player 12 library.

#### Tip

- On the “Stream” menu, confirm that “Allow remote control of my Player...” is checked.

### Using Remote Playback

- 1 Turn on the AV receiver.**
- 2 Start Windows Media Player 12.**  
To enable remote playback, you must first configure Windows Media Player 12.
- 3 On Windows Media Player 12, right-click on a music file.**  
The right-click menu appears.  
**Tip**
  - For selecting another media server, select the desired media server from the “Other Libraries” menu on Windows Media Player 12.
- 4 Select the AV receiver in “Remote playback”.**  
The “Play to” window appears and playback on the AV receiver starts. Operations during remote playback can be made from the “Play to” window of Windows 7 on your personal computer.  
A playback screen will be displayed on the connected TV.

- 5 Adjusting the Volume.**

You can adjust the volume by adjusting the volume bar in the “Remote playback” window. The default maximum volume level is 64. If you wish to change this, enter the value from the Web Setup in your browser. Refer to step 3 of “Registering Other Internet Radio” for details (→ page 24).

The volume value of the remote window and the volume value of the AV receiver may not always match.

Adjustments you make to the volume in the AV receiver will not be reflected in the “Remote playback” window.

#### Note

- Remote playback cannot be used in any of the following cases:
  - Network services are being used.
  - Contents are being played from a USB device or iPod/iPhone.
  - Zones are turned on.



## Listening to AM/FM Radio


This section describes the procedure of using the buttons on the front panel, unless otherwise specified.

### Using the Tuner

With the built-in tuner you can enjoy AM and FM radio stations. You can store your favorite stations as presets for quick selection.

You can also change the frequency steps (→ page 51).

- 1 Press **AM** or **FM** to select either “AM” or “FM”.  
In this example, FM has been selected.

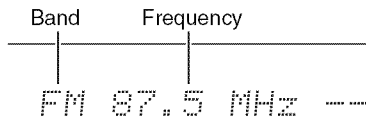

(Actual display depends on the country.)

## Tuning into Radio Stations

### Auto tuning mode

- 1 Press **TUNING MODE** so that the **AUTO** indicator lights on the AV receiver's display.
- 2 Press **TUNING ▲/▼**.  
Searching stops when a station is found.

When tuned into a station, the **TUNED** indicator lights. When tuned into a stereo FM station, the **FM STEREO** indicator lights as shown.



### Tip

#### • Tuning into weak FM stereo stations

If the signal from a stereo FM station is weak, it may be impossible to get good reception. In this case, switch to manual tuning mode and listen to the station in mono.

### Manual tuning mode

 
In manual tuning mode, FM stations will be in mono.

- 1 Press **TUNING MODE** so that the **AUTO** indicator goes off on the AV receiver's display.
- 2 Press and hold **TUNING ▲/▼**.  
The frequency stops changing when you release the button.  
Press the buttons repeatedly to change the frequency one step at a time.

### Tuning into stations by frequency

You can tune into AM and FM stations directly by entering the appropriate frequency.

- 1 On the remote controller, press **AM** or **FM** to select “AM” or “FM”, followed by **D.TUN**.



(Actual display depends on the country.)

- 2 Within 8 seconds, use the number buttons to enter the frequency of the radio station.

For example, to tune to 87.5 (FM), press **8, 7, 5** or **8, 7, 5, 0**.

If you have entered the wrong number, you can retry after 8 seconds.



## Presetting AM/FM Stations

 
You can store a combination of up to 40 of your favorite AM/FM radio stations as presets.

### 1 Tune into the AM/FM station that you want to store as a preset.

See the previous section.

### 2 Press MEMORY.

The preset number flashes.



(Actual display depends on the country.)

### 3 While the preset number is flashing (about 8 seconds), use PRESET ◀/▶ to select a preset from 1 through 40.

### 4 Press MEMORY again to store the station or channel.

The station or channel is stored and the preset number stops flashing.

Repeat this procedure for all of your favorite AM/FM radio stations.

## ■ Selecting Presets

### 1 To select a preset, use PRESET ◀/▶ on the AV receiver, or the remote controller's CH +/-.

#### Tip

- You can also use the remote controller's number buttons to select a preset directly.

## ■ Deleting Presets

### 1 Select the preset that you want to delete.

See the previous section.

### 2 While holding down MEMORY, press TUNING MODE.

The preset is deleted and its number disappears from the AV receiver's display.

## Using RDS (excluding North American models)

**RDS works only in areas where RDS broadcasts are available.**

When tuned into an RDS station, the **RDS** indicator lights. When the station is broadcasting text information, the text can be displayed.

### ■ What is RDS?

RDS stands for Radio Data System and is a method of transmitting data in FM radio signals. It was developed by the European Broadcasting Union (EBU) and is available in most European countries. Many FM stations use it these days. In addition to displaying text information, RDS can also help you find radio stations by type (e.g., news, sport, rock, etc.).

The AV receiver supports four types of RDS information: **PS (Program Service)**

When tuned to an RDS station that's broadcasting PS information, the station's name will be displayed. Pressing **DISPLAY** will display the frequency for 3 seconds.

#### **RT (Radio Text)**

When tuned to an RDS station that's broadcasting text information, the text will be shown on the AV receiver's display as described in the next section.

#### **PTY (Program Type)**

This allows you to search for RDS radio stations by type (→ page 29).

#### **TP (Traffic Program)**

This allows you to search for RDS radio stations that broadcast traffic information (→ page 29).

↳ To be continued



**Note**

- In some cases, the text characters displayed on the AV receiver may not be identical to those broadcast by the radio station. Also, unexpected characters may be displayed when unsupported characters are received. This is not a malfunction.
- If the signal from an RDS station is weak, RDS data may be displayed intermittently or not at all.

**■ Displaying Radio Text (RT)****1 Press RT/PTY/TP once.**

The RT information scrolls across the AV receiver's display.

**Note**

- The message “**Waiting**” may appear while the AV receiver waits for the RT information.
- If the message “**No Text Data**” appears, no RT information is available.

**■ Finding Stations by Type (PTY)**

You can search for radio stations by type.

**1 Press RT/PTY/TP twice.**

The current program type appears on the AV receiver's display.

**2 Use PRESET ◀/▶ to select the type of program you want.**

See the table shown later in this chapter.

**3 To start the search, press ENTER.**

The AV receiver searches until it finds a station of the type you specified, at which point it stops briefly before continuing with the search.

**4 When a station you want to listen to is found, press ENTER.**

If no stations are found, the message “**Not Found**” appears.

**■ Listening to Traffic News (TP)**

You can search for stations that broadcast traffic news.

**1 Press RT/PTY/TP three times.**

If the current radio station is broadcasting TP (Traffic Program), “[TP]” will appear on the AV receiver's display. If “TP” without square brackets appears, this means that the station is not broadcasting TP.

**2 To locate a station that is broadcasting TP, press ENTER.**

The AV receiver searches until it finds a station that's broadcasting TP.

If no stations are found, the message “**Not Found**” appears.

**RDS program types (PTY)**

| Type                     | Display  |
|--------------------------|----------|
| None                     | None     |
| News reports             | News     |
| Current affairs          | Affairs  |
| Information              | Info     |
| Sport                    | Sport    |
| Education                | Educate  |
| Drama                    | Drama    |
| Culture                  | Culture  |
| Science and technology   | Science  |
| Varied                   | Varied   |
| Pop music                | Pop M    |
| Rock music               | Rock M   |
| Middle of the road music | Easy M   |
| Light classics           | Light M  |
| Serious classics         | Classics |
| Other music              | Other M  |
| Weather                  | Weather  |
| Finance                  | Finance  |
| Children's programmes    | Children |
| Social affairs           | Social   |
| Religion                 | Religion |
| Phone in                 | Phone In |
| Travel                   | Travel   |
| Leisure                  | Leisure  |
| Jazz music               | Jazz     |
| Country music            | Country  |
| National music           | Nation M |
| Oldies music             | Oldies   |
| Folk music               | Folk M   |
| Documentary              | Document |
| Alarm test               | TEST     |
| Alarm                    | Alarm!   |



# Using Basic Functions

## Using the Automatic Speaker Setup

With the supplied calibrated microphone, Audyssey 2EQ® automatically determines the number of speakers connected, their size for purposes of bass management, optimum crossover frequencies to the subwoofer (if present), and distances from the primary listening position. Audyssey 2EQ then removes the distortion caused by room acoustics by capturing room acoustical problems over the listening area in both the frequency and time domain. The result is clear, well-balanced sound for everyone.

Audyssey 2EQ can be used with Audyssey Dynamic EQ® and Audyssey Dynamic Volume® (→ [page 49](#)).

Before using this function, connect and position all of your speakers.

Audyssey 2EQ offers two ways of measuring: the “**Audyssey Quick Start**” and “**Audyssey 2EQ Full Calibration**”.

- “**Audyssey Quick Start**” uses the measurement from one position to perform the speaker setting only.
- “**Audyssey 2EQ Full Calibration**” uses the measurement from three positions to correct room response in addition to the speaker setting.

The more positions are used in measuring, the better the listening environment will become. We recommend using a measurement from three positions to create the best listening environment.

The Quick Start takes 2 minutes and Full Calibration takes about 10 minutes.

Total measurement time varies depending on the number of speakers.

## Measurement procedure

To create a listening environment in your home theater that all listeners will enjoy, Audyssey 2EQ takes measurements at up to three positions within the listening area. Position the microphone at ear height of a seated listener with the microphone tip pointed directly at the ceiling using a tripod. Do not hold the microphone in your hand during measurements as this will produce inaccurate results.

### ① First measurement position

Also referred to as the Main Listening Position, this refers to the most central position where one would normally sit within the listening environment. Audyssey 2EQ uses the measurements from this position to calculate speaker distance, level, polarity, and the optimum crossover value for the subwoofer.


### ② Second measurement position

The right side of the listening area.

### ③ Third measurement position

The left side of the listening area.

The distances from position ① to ② and ① to ③ must be at least 1 meter (3.3 ft).

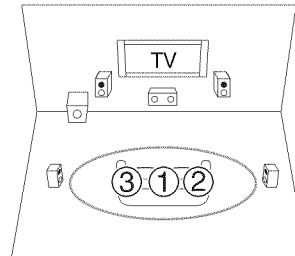

○ : Listening area

① to ③: Listening position

## Note

- Make the room as quiet as possible. Background noise and Radio Frequency Interference (RFI) can disrupt the room measurements. Close windows, televisions, radios, air conditioners, fluorescent lights, home appliances, light dimmers, or other devices. Turn off the cell phone (even if it is not in use) or place it away from all audio electronics.
- The microphone picks up test tones played through each speaker as Audyssey 2EQ Room Correction and Speaker Setup runs.
- Audyssey 2EQ Room Correction and Speaker Setup cannot be performed while a pair of headphones is connected.


- 1 Turn on the AV receiver and the connected TV.**  
On the TV, select the input to which the AV receiver is connected.

**Note**

- Before plugging the Speaker setup microphone to perform Automatic Speaker Setup, please make sure that all your connected speakers and subwoofers produce sound.

- 2 Set the speaker setup microphone at the Main Listening Position ①, and connect it to the SETUP MIC jack.**

SETUP MIC jack

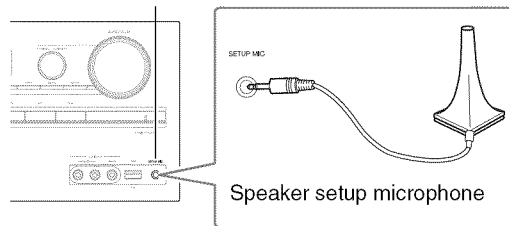**Note**

- The on-screen menus appear only on a TV that is connected to **HDMI OUT**. If your TV is connected to other video outputs, use the AV receiver's display when changing settings.

- 3 Use ▲/▼ to select “Audyssey Quick Start” or “Audyssey 2EQ Full Calibration”, and then press ENTER.**

- 4 Press ENTER.**  
Audyssey 2EQ® Room Correction and Speaker Setup starts.

Test tones are played through each speaker as Audyssey 2EQ Room Correction and Speaker Setup runs. This process takes a few minutes. Please **refrain from talking** during measurements and **do not stand** between speakers and the microphone.

Do not disconnect the speaker setup microphone during Audyssey 2EQ Room Correction and Speaker Setup, unless you want to cancel the setup.


If you select “**Audyssey Quick Start**”, you will go to step 7.

- 5 Place the speaker setup microphone at the next position, and then press ENTER.**

Audyssey 2EQ performs more measurements. This takes a few minutes.

- 6 When prompted, repeat step 5.**

- 7 Use ▲/▼ to select an option, and then press ENTER.**

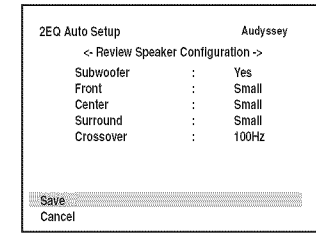

The options are:

**► Save:**

Save the calculated settings and exit Audyssey 2EQ Room Correction and Speaker Setup.

**► Cancel:**

Cancel Audyssey 2EQ Room Correction and Speaker Setup.

**Tip**

- You can view the calculated settings for the speaker configuration, speaker distances, and speaker levels by using ◀/▶.

- 8 Use ▲/▼ to select a target, and use ◀/▶ to change the setting.**

After the results of Audyssey 2EQ have been saved, the menu will display the “Audyssey” (→ [page 42](#)), “Dynamic EQ” (→ [page 42](#)), “Dynamic Volume” (→ [page 42](#)) settings.

**Note**

- When “**Audyssey Quick Start**” has been used for measurement, “**Audyssey**” cannot be selected.
- These settings are applied to all input selectors.

- 9 Press ENTER.**

- 10 Disconnect the speaker setup microphone.**




**Note**

- You can cancel Audyssey 2EQ Room Correction and Speaker Setup at any point in this procedure simply by disconnecting the setup microphone.
- Do not connect or disconnect any speakers during Audyssey 2EQ Room Correction and Speaker Setup.
- If the AV receiver is muted, it will be unmuted automatically when Audyssey 2EQ Room Correction and Speaker Setup starts.
- Changes to the room after Audyssey 2EQ Room Correction and Speaker Setup requires you run Audyssey 2EQ Room Correction and Speaker Setup again, as room EQ characteristics may have changed.

**Error Messages**

While Audyssey 2EQ® Room Correction and Speaker Setup is in progress, one of the error messages below may appear.

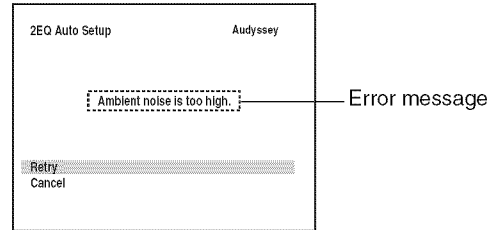

The options are:

▶ **Retry:**

Try again.

▶ **Cancel:**

Cancel Audyssey 2EQ Room Correction and Speaker Setup.

• **Ambient noise is too high.**

The background noise is too loud. Remove the source of the noise and try again.

• **Speaker Matching Error!**

The number of speakers detected was different from that of the first measurement. Check the speaker connection.

• **Writing Error!**

This message appears if saving fails. Try saving again. If this message appears after 2 or 3 attempts, contact your Onkyo dealer.

• **Speaker Detect Error**

This message appears if a speaker is not detected. “No” means that no speaker was detected.

**Tip**

- See “Speaker Configuration” for appropriate settings (→ page 12).

**Changing the Speaker Setup Manually**

You can manually make changes to the settings found during Audyssey 2EQ Room Correction and Speaker Setup.

See also:

- “Sp Config (Speaker Configuration)” (→ page 46)
- “Sp Distance (Speaker Distance)” (→ page 47)
- “Level Cal (Level Calibration)” (→ page 47)

**Using a Powered Subwoofer**

If you’re using a powered subwoofer and it outputs very low-frequency sound at a low volume level, it may not be detected by Audyssey 2EQ Room Correction and Speaker Setup.

If the “**Subwoofer**” appears on the “**Review Speaker Configuration**” screen as “**No**”, increase the subwoofer’s volume to the half-way point, set it to its highest crossover frequency, and then try running Audyssey 2EQ Room Correction and Speaker Setup again. Note that if the volume is set too high and the sound distorts, detection issues may occur, so use an appropriate volume level. If the subwoofer has a low-pass filter switch, set it to Off or Direct. Refer to your subwoofer’s instruction manual for details.






## Using the Listening Modes


### Selecting Listening Modes

See “About Listening Modes” for detailed information about the listening modes (→ page 34).

#### ■ Listening Mode Buttons

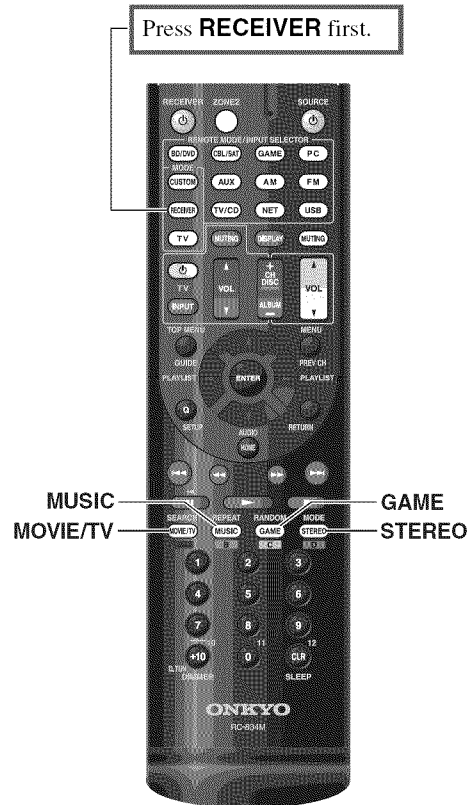


#### (North American models)

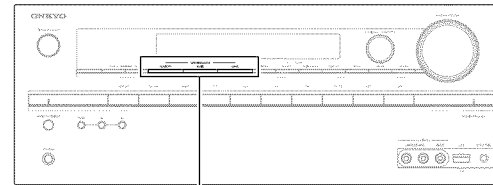

**MOVIE/TV, MUSIC, GAME**

#### (European and Australian models)

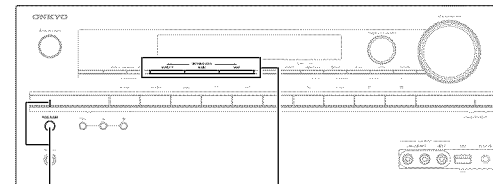

**PURE AUDIO**    **MOVIE/TV, MUSIC, GAME**

#### **MOVIE/TV** button

This button selects the listening modes intended for use with movies and TV.

#### **MUSIC** button

This button selects the listening modes intended for use with music.

#### **GAME** button

This button selects the listening modes intended for use with video games.

#### **STEREO** button

This button selects the Stereo listening mode and All Channel Stereo listening mode.

#### **PURE AUDIO** button and indicator

(European and Australian models)

This button selects the Pure Audio listening mode.

When this mode is selected, the AV receiver’s display and video circuitry are turned off. The indicator lights when this mode is selected. Pressing this button again will select the previous listening mode.


- The Dolby Digital and DTS listening modes can only be selected if your Blu-ray Disc/DVD player is connected to the AV receiver with a digital audio connection (coaxial, optical, or HDMI).
- The listening modes you can select depends on the format of the input signal. To check the format, see “Displaying Source Information” (→ page 39).
- While a pair of headphones is connected, you can select the following listening modes: Pure Audio (European and Australian models), Mono, Direct, and Stereo.



## About Listening Modes

The AV receiver's listening modes can transform your listening room into a movie theater or concert hall, with high fidelity and stunning surround sound.

### ■ Explanatory Notes

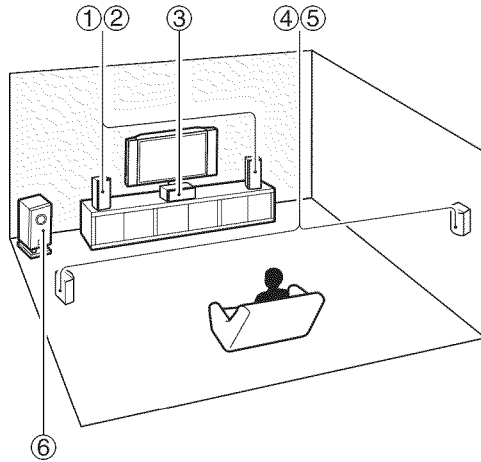

- ① ② Front speakers
- ③ Center speaker
- ④ ⑤ Surround speakers
- ⑥ Subwoofer

### Input Source


The following audio formats are supported by the listening modes.

|                 |   |
|-----------------|---|
| <b>MONO</b>     | This is mono (monophonic) sound.  |
| <b>STEREO</b>   | This is stereo (stereophonic) sound. Two independent audio signal channels are reproduced through two speakers.   |
| <b>5.1ch</b>    | This is 5.1-channel surround sound. This surround system has five main channels of sound and a sixth subwoofer channel (called the point-one channel).  |
| <b>7.1ch</b> *1 | This is 7.1-channel surround sound. This is a further sound enhancement to 5.1-channel sound with two additional speakers that provide greater sound envelopment and more accurate positioning of sounds. |

\*1 The AV receiver outputs this source in 5.1-channel surround sound.

### Speaker Layout

The illustration shows which speakers are activated in each channel. See "Sp Config (Speaker Configuration)" for the speaker setup (→ [page 46](#)).

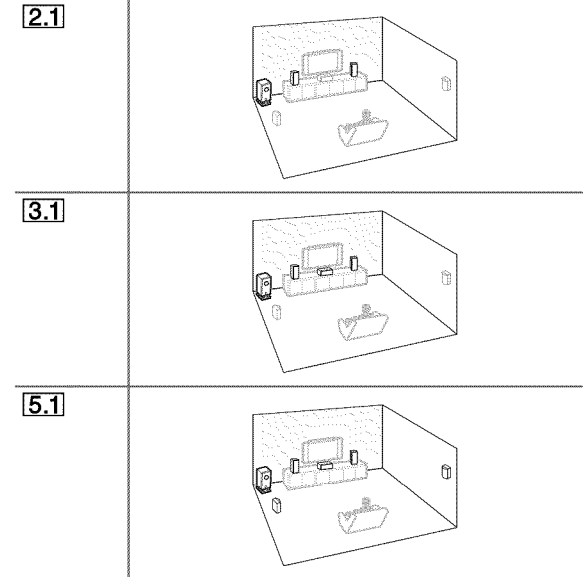

■ Onkyo-Original DSP Listening Modes

| Listening Mode                               | Description   | Input Source   | Speaker Layout        |
|--|---|--|-----------------------|
| <b>Orchestra</b><br><i>Orchestra</i>         | Suitable for classical or operatic music, this mode emphasizes the surround channels in order to widen the stereo image, and simulates the natural reverberation of a large hall. | <b>MONO</b><br><b>STEREO</b><br><b>5.1ch</b><br><b>7.1ch</b> | <b>5.1</b>            |
| <b>Unplugged</b><br><i>Unplugged</i>         | Suitable for acoustic instruments, vocals and jazz, this mode emphasizes the front stereo image, giving the impression of being right in front of the stage.                      |  |                       |
| <b>Studio-Mix</b><br><i>Studio-Mix</i>       | Suitable for rock or pop music, listening to music in this mode creates a lively sound field with a powerful acoustic image, like being at a club or rock concert.                |  |                       |
| <b>TV Logic</b><br><i>TV Logic</i>           | This mode adds realistic acoustics to TV shows produced in a TV studio, surround effects to the entire sound, and clarity to voices.  |  |                       |
| <b>Game-RPG</b><br><i>Game-RPG</i>           | In this mode, the sound has a dramatic feel with a similar atmosphere to Orchestra mode.  |  |                       |
| <b>Game-Action</b><br><i>Game-Action</i>     | In this mode, sound localization is distinct with emphasis on bass.   |  |                       |
| <b>Game-Rock</b><br><i>Game-Rock</i>         | In this mode, sound pressure is emphasized to heighten live feel.   |  |                       |
| <b>Game-Sports</b><br><i>Game-Sports</i>     | In this mode, reverberation is increased and sound localization decreased slightly.   |  |                       |
| <b>All Ch Stereo</b><br><i>All Ch Stereo</i> | Ideal for background music, this mode fills the entire listening area with stereo sound from the front, and surround.   |  | <b>3.1</b> <b>5.1</b> |
| <b>Full Mono</b><br><i>Full Mono</i>         | In this mode, all speakers output the same sound in mono, so the sound you hear is the same regardless of where you are within the listening room.                                |  |                       |

| Listening Mode                                 | Description  | Input Source   | Speaker Layout                   |
|--|--|--|----------------------------------|
| <b>T-D (Theater-Dimensional)</b><br><i>T-D</i> | With this mode you can enjoy a virtual surround sound even with only two or three speakers. This works by controlling how sounds reach the listener's left and right ears. Good results may not be possible if there's too much reverb, so we recommend that you use this mode in an environment with little or no natural reverb. | <b>MONO</b><br><b>STEREO</b><br><b>5.1ch</b><br><b>7.1ch</b> | <b>2.1</b> <b>3.1</b> <b>5.1</b> |



## ■ Listening Modes

| Listening Mode   | Description  | Input Source   | Speaker Layout                   |
|--|--|--|----------------------------------|
| <b>Pure Audio</b> <sup>1,2</sup><br><i>Pure Audio</i>      | In this mode, the display and video circuitry are turned off, minimizing possible noise sources for the ultimate in high-fidelity audio reproduction. (As the video circuitry is turned off, only video signals input through HDMI IN can be output from HDMI OUT.)  | <b>MONO</b><br><b>STEREO</b><br><b>5.1ch</b><br><b>7.1ch</b> | <b>2.1</b> <b>3.1</b> <b>5.1</b> |
| <b>Direct</b><br><i>Direct</i>                             | In this mode, audio from the input source is output without surround-sound processing. The speaker configuration (presence of speakers) and speaker distance settings are enabled, but much of the processing set via the audio setup is disabled. See "Using the Setup Menu (HOME)" for more details (→ page 43).       |  |                                  |
| <b>Stereo</b><br><i>Stereo</i>                             | Sound is output from the front left and right speakers and subwoofer.  |  |                                  |
| <b>Mono</b><br><i>Mono</i>                                 | Use this mode when watching an old movie with a mono soundtrack, or use it with the foreign language soundtracks recorded in the left and right channels of some movies. It can also be used with DVDs or other sources containing multiplexed audio, such as karaoke DVDs.  |  |                                  |
| <b>Multichannel</b><br><i>Multich</i>                      | This mode is for use with PCM multichannel sources.  | <b>5.1ch</b><br><b>7.1ch</b>                                 | <b>3.1</b> <b>5.1</b>            |
| <b>DSD</b> <sup>3</sup><br><i>DSD</i>                      | In this mode, audio from the input source is output without surround-sound processing. The speaker configuration (presence of speakers), crossover frequency, speaker distance, A/V Sync and much of the processing set via the audio setup are enabled. See "Using the Setup Menu (HOME)" for more details (→ page 43). | <b>5.1ch</b>   | <b>3.1</b> <b>5.1</b>            |
| <b>Dolby Digital</b><br><i>Dolby D</i>                     |  |  |                                  |
| <b>Dolby Digital Plus</b> <sup>4</sup><br><i>Dolby D +</i> |  | <b>5.1ch</b><br><b>7.1ch</b>                                 | <b>3.1</b> <b>5.1</b>            |
| <b>Dolby TrueHD</b><br><i>Dolby TrueHD</i>                 |  | <b>5.1ch</b><br><b>7.1ch</b>                                 | <b>3.1</b> <b>5.1</b>            |

| Listening Mode  | Description  | Input Source                 | Speaker Layout        |
|---|--|------------------------------|-----------------------|
| <b>DTS</b><br><i>DTS</i>  | In this mode, audio from the input source is output without surround-sound processing. The speaker configuration (presence of speakers), crossover frequency, speaker distance, A/V Sync and much of the processing set via the audio setup are enabled. See "Using the Setup Menu (HOME)" for more details (→ page 43).   | <b>5.1ch</b>                 | <b>3.1</b> <b>5.1</b> |
| <b>DTS-HD High Resolution Audio</b><br><i>DTS-HD HR</i>                                 |  | <b>5.1ch</b><br><b>7.1ch</b> | <b>3.1</b> <b>5.1</b> |
| <b>DTS-HD Master Audio</b><br><i>DTS-HD MSTR</i>  |  |                              |                       |
| <b>DTS Express</b><br><i>DTS Express</i>  |  | <b>5.1ch</b>                 | <b>3.1</b> <b>5.1</b> |
| <b>DTS 96/24</b><br><i>DTS 96/24</i>  | This mode is for use with DTS 96/24 sources. This is high-resolution DTS with a 96 kHz sampling rate and 24-bit resolution, providing superior fidelity. Use it with DVDs that bear the DTS 96/24 logo.  | <b>5.1ch</b>                 | <b>3.1</b> <b>5.1</b> |
| <b>Dolby Pro Logic II</b><br><i>PLII Movie</i><br><i>PLII Music</i><br><i>PLII Game</i> | <b>Dolby Pro Logic II</b> expands any 2-channel source for 5.1-channel playback. It provides a very natural and seamless surround-sound experience that fully envelops the listener. As well as music and movies, video games can also benefit from the dramatic spatial effects and vivid imaging.<br><ul style="list-style-type: none"> <li>• <b>Dolby PLII Movie</b><br/>Use this mode with DVDs and videos that bear the Dolby Surround logo or TV shows that feature Dolby Surround. You can also use this mode with stereo movies or TV shows and the AV receiver will create a 5.1 surround mix from the 2-channel stereo.</li> <li>• <b>Dolby PLII Music</b><br/>Use this mode to add 5.1 surround to stereo sources such as music CDs and DVDs.</li> <li>• <b>Dolby PLII Game</b><br/>Use this mode when playing game discs.</li> </ul> | <b>STEREO</b>                | <b>3.1</b> <b>5.1</b> |



| Listening Mode  | Description  | Input Source  | Speaker Layout          |
|---|--|---------------|-------------------------|
| <b>DTS Neo:6</b><br><i>Neo:6 Cinema</i><br><i>Neo:6 Music</i> | This mode expands any 2-channel source for up to 5.1-channel playback. It uses seven full-bandwidth channels of matrix decoding for matrix-encoded material, providing a very natural and seamless surround sound experience that fully envelops the listener. <ul style="list-style-type: none"> <li>• <b>DTS Neo:6 Cinema</b><br/>Use this mode with any stereo movie (e.g., TV, DVD, VHS).</li> <li>• <b>DTS Neo:6 Music</b><br/>Use this mode with any stereo music source (e.g., CD, radio, cassette, TV, VHS, DVD).</li> </ul> | <b>STEREO</b> | <b>3.1</b>   <b>5.1</b> |

**Note**

- \*1 **(North American models)** This listening mode is not available.
- \*2 Pure Audio cannot be selected when Zone 2 is active.  
Besides, if you activate Zone 2 while Pure Audio is selected, the listening mode will automatically switch to Direct.
- \*3 The AV receiver can input the DSD signal from HDMI IN. Depending on the player, setting the output on the player side to PCM might bring better sound.
- \*4 For the Blu-ray Discs, Dolby Digital is used in a 3.1/5.1-channel speaker system.
- The listening modes cannot be selected with some source formats.




## Using the Home Menu

The Home menu provides quick access to frequently used menus.

The Home menu appears only on a TV that is connected to HDMI OUT. If your TV is connected to other video outputs, use the AV receiver's display when changing settings.

### 1 Press RECEIVER followed by HOME.

The Home menu will be superimposed on the TV screen.

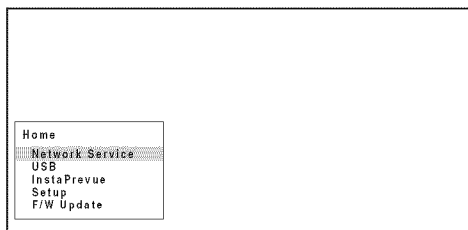

### 2 Use ▲/▼ and ENTER to make the desired selection.

Press HOME to close the menu.

## Network Service

You need to connect the AV receiver to your home network (→ page 75).

▶ With this selection, you can use various Internet radio services or play the contents stored in media connected to your home network (DLNA) (→ pages 23 to 26). Note that this selection will be grayed out for a short while after the AV receiver is turned on. Please wait until it becomes operable.

Press **ENTER** to display the “NET” screen. If you want to use the Internet radio services, use ▲/▼ to select the desired service. Pressing **ENTER** again switches to that selection. If you want to play music files on a server, use ▲/▼ to select “DLNA” and then press **ENTER**.

## USB

▶ With this selection, you can play contents of portable players (iPod, etc.) and USB storage devices connected to the AV receiver's USB port (→ pages 22, 23). Note that this selection will be grayed out for a short while after the AV receiver is turned on. Please wait until it becomes operable.

Press **ENTER** to select a drive or browse the contents of the media connected, followed by ▲/▼ to select the desired folder or track. Pressing **ENTER** as a track is selected will start playback.

## InstaPrevue

▶ With this selection, you can preview audio/video streams coming from HDMI inputs (**HDMI IN 1/2/3/4/5**). Even with multiple components connected through HDMI, you can easily switch between inputs as their previews are displayed on a single screen.

Press **ENTER** to display the main preview (currently selected HDMI input) and the additional previews (other HDMI inputs). Using ▲/▼ or ◀/▶ to select a preview thumbnail and pressing **ENTER** will switch the AV receiver to that input source.

### Tip

- If no video signals are present, the thumbnails will be filled in black.
- You can specify the number of preview thumbnails as well as their positioning on screen (→ page 53).

### Note

- This function cannot be selected when:
  - **HDMI IN 6** is the current HDMI input source, or
  - No signal is present on the current input source.
- Depending on video signals, the picture may not be properly rendered on the preview thumbnails of InstaPrevue.

## Setup

▶ With this selection, you can access the common settings of the on-screen Setup menu.

Press **ENTER** to display the Setup menu (→ page 43).

### Tip

- You can also access frequently used settings from Quick Setup (→ page 41).

## F/W Update

▶ With this selection, you can update the firmware of the AV receiver. Note that this selection will be grayed out for a short while after the AV receiver is turned on. Please wait until it becomes operable.

Press **ENTER** to start the procedure (→ page 67).



## Using the Sleep Timer

With the sleep timer, you can set the AV receiver to turn off automatically after a specified period.

### 1 Press RECEIVER once followed by SLEEP repeatedly to select the required sleep time.

The sleep time can be set from 90 to 10 minutes in 10 minute steps.

The **SLEEP** indicator lights on the AV receiver's display when the sleep timer has been set. The specified sleep time appears for about 5 seconds, then the previous display reappears.

#### Tip

- If you need to cancel the sleep timer, press **SLEEP** repeatedly until the **SLEEP** indicator goes off.
- To check the time remaining until the AV receiver sleeps, press **SLEEP**. Note that if you press again on **SLEEP** as the time being displayed is 10 minutes or less, the sleep timer will go off.

## Setting the Display Brightness

You can adjust the brightness of the AV receiver's display.

### 1 Press RECEIVER once followed by DIMMER repeatedly to switch between: normal, dim, or dimmer brightness.

#### Tip

- (North American models) Alternatively, you can use **DIMMER** on the AV receiver.

## Displaying Source Information


You can display various information about the current input source as follows.

### 1 Press RECEIVER once followed by DISPLAY repeatedly to cycle through the available information.

#### Tip

- Alternatively, you can use **DISPLAY** on the AV receiver.

The following information can be typically displayed.

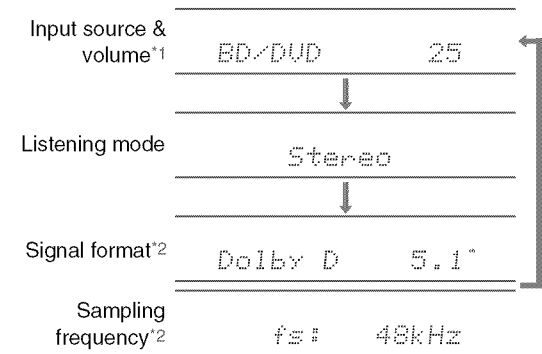

\*1 When AM or FM radio is used, the band, preset number, and frequency are displayed.

\*2 If the input signal is digital, the signal format is displayed. Information is displayed for about three seconds, then the previously displayed information reappears.



## Changing the Input Display

When you connect an **RI**-capable Onkyo component, you must configure the input display so that **RI** can work properly.

This setting can be done only from the front panel.

### 1 Press **TV/CD** or **GAME**.

“**TV/CD**” or “**GAME**” appears on the AV receiver’s display.

### 2 Press and hold down the same button (about 3 seconds) to change the input display.

Repeat this step to select the desired input display.

■ **TV/CD:**            **TV/CD** → **DOCK**  
                           ↑            **TAPE** ←

■ **GAME:**            **GAME** ↔ **DOCK**

#### Note

- “**DOCK**” can be selected for the “**TV/CD**” or “**GAME**” input selector, but not at the same time.
- Enter the appropriate remote control code before using the remote controller for the first time (→ [page 59](#)).

## Using the Music Optimizer

The Music Optimizer function enhances the sound quality of compressed music files.

### 1 (North American models) Press **MUSIC OPTIMIZER** on the front panel.

The **M.Opt** indicator lights on the AV receiver’s display.

The **MUSIC OPTIMIZER** indicator lights on the front panel.

#### Tip

- Alternatively, you can use **Q SETUP** on the remote controller.
- See “Music Optimizer” for more details (→ [page 43](#)).

## Muting the AV Receiver

You can temporarily mute the output of the AV receiver.

### 1 Press **RECEIVER** followed by **MUTING**.


The output is muted and the **MUTING** indicator flashes on the AV receiver’s display.

#### Tip

- To unmute, press **MUTING** again or adjust the volume.
- Muting is automatically cancelled when the AV receiver is set to standby.

## Using Headphones

### 1 Connect a pair of stereo headphones with a standard plug (1/4 inch or 6.3 mm) to the **PHONES** jack.

While the headphones plug is inserted in the **PHONES** jack,  indicator lights.

#### Note

- Always turn down the volume before connecting your headphones.
- While the headphones plug is inserted in the **PHONES** jack, the speakers are turned off.
- When you connect a pair of headphones, the listening mode is set to Stereo, unless it’s already set to Stereo, Mono, Direct, or Pure Audio (**European and Australian models**).
- If you connect an iPod or iPhone to the **USB** port on the AV receiver, no sound will be output from the headphones jack.





# On-screen Setup

With the AV receiver connected to a TV, there are two ways of changing the settings on-screen: using the Quick Setup or the Setup Menu (**HOME**).

## ■ Quick Setup

The Quick Setup provides quick access to frequently used settings. You can change settings and view the current information.

## ■ Setup menu (**HOME**)

The Setup menu (**HOME**) provides a convenient way to change the AV receiver's various settings. Settings are organized into 11 categories.


The on-screen menus appear only on a TV that is connected to **HDMI OUT**. If your TV is connected to other video outputs, use the AV receiver's display when changing settings.

This section describes the procedure for using the remote controller unless otherwise specified.

### Note

- The on-screen menus are displayed when:
  - There is no video input, or
  - The video input is 480p, 576p, 720p, 1080i, or 1080p.

## Using the Quick Setup

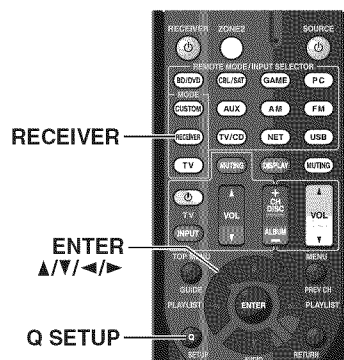


- 1 Press RECEIVER followed by Q SETUP.**  
The Quick Setup will be superimposed on the TV screen.
- 2 Use ▲/▼ and ENTER to make the desired selection.**  
Press **Q SETUP** to close the menu.  
Press **RETURN** to return to the previous menu.

## Explanatory Notes

- ① — ■ **Music Optimizer**
- ② — Off  
— On

- ① Setting target
- ② Setting options (default setting underlined)

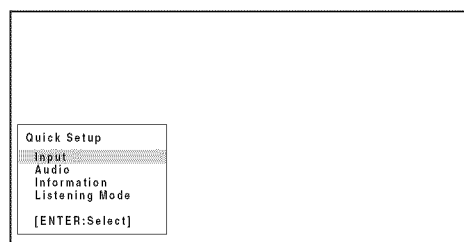

## ■ Input

- ▶ You can select input sources and view information on their assignments.

Use ▲/▼ to select an input source and view its assignment information.

Pressing **ENTER** switches to the selected input source.

## ■ Audio (→ page 42)

- ▶ You can change the following settings: “Bass”, “Treble”, “Subwoofer Level”, “Center Level”, “Audyssey”, “Dynamic EQ”, “Dynamic Volume”, “Late Night”, “Music Optimizer”, and “Cinema Filter”.

## ■ Information<sup>1</sup>

- ▶ You can view the information of the following items: “Input” and “Output”.

## ■ Listening Mode<sup>2</sup>

- ▶ You can select the listening modes that are grouped in the following categories: “MOVIE/TV”, “MUSIC”, “GAME”.

Use ▲/▼ to select the category and ◀/▶ to select the listening mode. Press **ENTER** to switch to the selected listening mode.

### Note

- <sup>1</sup> Depending on the input source and listening mode, not all channels shown here output the sound.
- <sup>2</sup> • This setting is not available in either of the following cases:
  - The “Audio TV Out” setting is set to “On” (→ page 52).
  - “HDMI Ctrl (RIHD)” is set to “On” (→ page 52) and you're listening through your TV speakers.



## Using the Audio Settings of Quick Setup

You can change various audio settings from the Quick Setup (→ page 41).

### Note

- These settings are not available in either of the following cases:
  - The “**Audio TV Out**” setting is set to “**On**” (→ page 52).
  - “**HDMI Ctrl (RIHD)**” is set to “**On**” (→ page 52) and you’re listening through your TV speakers.

## Tone Control

### ■ Bass

▶ **-10 dB** to **0 dB** to **+10 dB** in 2 dB steps

You can boost or cut low-frequency sounds output from the front speakers.

### ■ Treble

▶ **-10 dB** to **0 dB** to **+10 dB** in 2 dB steps

You can boost or cut high-frequency sounds output from the front speakers.

You can adjust the bass and treble for the front speakers, except when Direct or Pure Audio (**European and Australian models**) listening mode is selected.

## Operating on the AV receiver

- 1 Press **TONE** repeatedly to select either “**Bass**” or “**Treble**”.
- 2 Use **-** and **+** to adjust.

## Speaker Levels

### ■ Subwoofer Level

▶ **-15 dB** to **0 dB** to **+12 dB** in 1 dB steps

### ■ Center Level

▶ **-12 dB** to **0 dB** to **+12 dB** in 1 dB steps

You can adjust the volume of each speaker while listening to an input source.

These temporary adjustments are cancelled when the AV receiver is set to standby. To save the setting you made here, go to “**Level Cal (Level Calibration)**” (→ page 47) before setting the AV receiver to standby.

### Note

- You cannot use these function while the AV receiver is muted.
- These settings cannot be used while a pair of headphones is connected.
- Speakers that are set to “**No**” or “**None**” in “**Sp Config (Speaker Configuration)**” (→ page 46) cannot be adjusted.

## Audyssey®

### ■ Audyssey

See “**Audyssey**” in “**Source Setup**” (→ page 49).

### ■ Dynamic EQ

See “**Dynamic EQ**” in “**Source Setup**” (→ page 49).

### ■ Dynamic Volume

See “**Dynamic Volume**” in “**Source Setup**” (→ page 49).

### Note

- These technologies can be used when all the following conditions are met:
  - Room Correction and Speaker Setup is completed. Note that “**Audyssey**” requires the “**Audyssey 2EQ Full Calibration**” method.
  - Any listening mode other than Direct or Pure Audio (**European and Australian models**) is selected.
  - A pair of headphones is not connected.
- The setting is stored individually for each input selector.

## Late Night

### ■ Late Night

For **Dolby Digital** and **Dolby Digital Plus** sources, the options are:

#### ▶ Off

#### ▶ Low:

Small reduction in dynamic range.

#### ▶ High:

Large reduction in dynamic range.

For **Dolby TrueHD** sources, the options are:

#### ▶ Auto:

The Late Night function is set to “**On**” or “**Off**” automatically.

#### ▶ Off

#### ▶ On

Turn this setting on to reduce the dynamic range of Dolby Digital material so that you can still hear quiet parts even when listening at low volume levels—ideal for watching movies late at night when you don’t want to disturb anyone.

### Note

- The effect of the Late Night function depends on the material that you are playing and the intention of the original sound designer, and with some material there will be little or no effect when you select the different options.
- The Late Night function can be used only when the input source is Dolby Digital, Dolby Digital Plus, or Dolby TrueHD.
- The Late Night function is set to “**Off**” when the AV receiver is set to standby. For Dolby TrueHD sources, it will be set to “**Auto**”.



## Music Optimizer

### ■ Music Optimizer

- ▶ Off
- ▶ On

The Music Optimizer function enhances the sound quality of compressed music files. When set to “On”, the **M.Opt** indicator lights on the AV receiver’s display, and the **MUSIC OPTIMIZER** indicator (**North American models**) lights on the front panel.

#### Tip

- (**North American models**) Alternatively, you can use the AV receiver’s **MUSIC OPTIMIZER**.

#### Note

- The Music Optimizer function only works with PCM digital audio input signals with a sampling rate below 48 kHz and analog audio input signals.
- The Music Optimizer is disabled when the Direct or Pure Audio (**European and Australian models**) listening mode is selected.
- The setting is stored individually for each input selector.

## CinemaFILTER

### ■ Cinema Filter

- ▶ Off
- ▶ On


Turn this setting on to soften overly bright movie soundtracks, which are typically mixed for reproduction in a movie theater.

CinemaFILTER can be used with the following listening modes: Dolby Digital, Dolby Digital Plus, Dolby TrueHD, Dolby Pro Logic II Movie, Multichannel, DTS, DTS Neo:6 Cinema, DTS 96/24, DTS-HD High Resolution Audio, DTS-HD Master Audio and DTS Express.

#### Note

- The CinemaFILTER may not work when used with certain input sources.

## Using the Setup Menu (HOME)

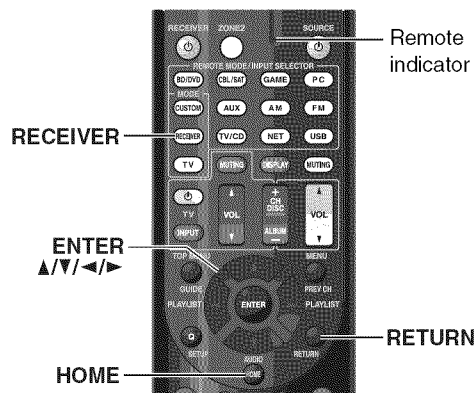


- 1** Press **RECEIVER** followed by **HOME**.
- 2** Use **▲/▼** to select “Setup”, and then press **ENTER**.
- 3** Use **▲/▼** to select a menu item, and then press **ENTER**.
- 4** Use **▲/▼** to select a setting target, and use **◀/▶** to change the setting.  
Press **HOME** to close the menu.  
Press **RETURN** to return to the previous menu.


#### Note

- This procedure can also be performed on the AV receiver by using **SETUP**, the cursor buttons, and **ENTER**.
- During Audyssey 2EQ® Room Correction and Speaker Setup, messages, etc., that are displayed on the TV screen will appear on the AV receiver’s display.

## Explanatory Notes

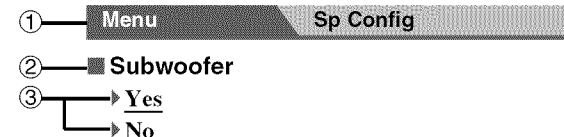

- ① Menu selection
- ② Setting target
- ③ Setting options (default setting underlined)

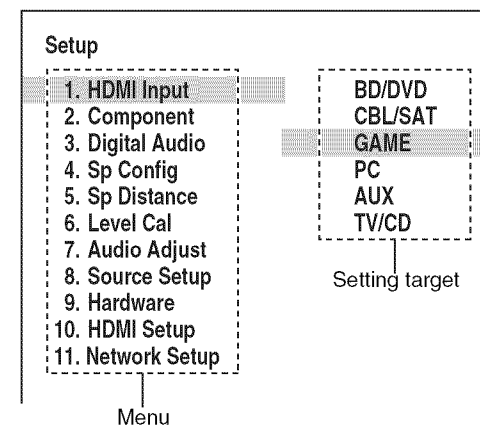


## About the HYBRID STANDBY indicator

By way of optimized circuitry, this function reduces power consumption when the AV receiver is in standby mode.

The **HYBRID STANDBY** indicator will light in either of the following conditions:

- “**HDMI Through**” is enabled and Zones are turned off (the **HDMI** indicator is off).
- “**Network Standby**” is enabled and Zones are turned off (the **NET** indicator is off).

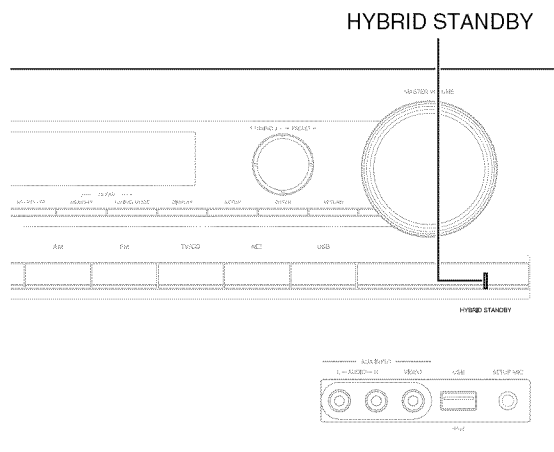

## Setup menu items

| Menu item                 | Setting target |
|---------------------------|----------------|
| HDMI Input<br>(→ page 45) | BD/DVD         |
|                           | CBL/SAT        |
|                           | GAME           |
|                           | PC             |
|                           | AUX            |
|                           | TV/CD          |

| Menu item                    | Setting target |
|------------------------------|----------------|
| Component<br>(→ page 45)     | BD/DVD         |
|                              | CBL/SAT        |
|                              | GAME           |
|                              | PC             |
|                              | AUX            |
|                              | TV/CD          |
| Digital Audio<br>(→ page 46) | BD/DVD         |
|                              | CBL/SAT        |
|                              | GAME           |
|                              | PC             |
|                              | AUX            |
|                              | TV/CD          |
| Sp Config<br>(→ page 46)     | Subwoofer      |
|                              | Front          |
|                              | Center         |
|                              | Surround       |
|                              | Crossover      |
|                              | Double Bass    |
| Sp Distance<br>(→ page 47)   | Unit           |
|                              | Left           |
|                              | Center         |
|                              | Right          |
|                              | Surround Right |
|                              | Surround Left  |
|                              | Subwoofer      |
|                              |                |
| Level Cal<br>(→ page 47)     | Left           |
|                              | Center         |
|                              | Right          |
|                              | Surround Right |
|                              | Surround Left  |
|                              | Subwoofer      |
|                              |                |
|                              |                |

| Menu item                    | Setting target                                      |
|------------------------------|---|
| Audio Adjust<br>(→ page 48)  | Input Ch (Mux)                                      |
|                              | Input Ch (Mono)                                     |
|                              | Panorama  |
|                              | Dimension   |
|                              | Center Width  |
|                              | Center Image  |
|                              | Listening Angle                                     |
| Source Setup<br>(→ page 49)  | Audyssey  |
|                              | Dynamic EQ [Reference Level]                        |
|                              | Dynamic Volume                                      |
|                              | A/V Sync  |
|                              | Name  |
|                              | Audio Selector [Fixed Mode]                         |
| Hardware<br>(→ page 51)      | Volume OSD  |
|                              | Remote ID   |
|                              | (North American models)                             |
|                              | AM/FM Freq Step                                     |
|                              | (European and Australian models)                    |
|                              | AM Freq Step  |
|                              | Auto Standby  |
|                              |   |
| HDMI Setup<br>(→ page 52)    | HDMI Ctrl (RIHD)                                    |
|                              | HDMI Through  |
|                              | Audio TV Out  |
|                              | Audio Return Ch                                     |
|                              | LipSync   |
|                              | InstaPrevue [Sub Window, Position]                  |
|                              |   |
| Network Setup<br>(→ page 53) | MAC Address   |
|                              | DHCP [IP Address, Subnet Mask, Gateway, DNS Server] |
|                              | Proxy URL [Proxy Port]                              |
|                              | Network Standby                                     |
|                              | Update Notice                                       |
|                              |   |



## HDMI Input



### Menu HDMI Input

If you connect a video component to an HDMI input, you must assign that input to an input selector. For example, if you connect your Blu-ray Disc/DVD player to **HDMI IN 2**, you must assign “**HDMI2**” to the “**BD/DVD**” input selector.

Here are the default assignments.

| Input selector | Default assignment |
|----------------|--------------------|
| BD/DVD         | HDMI1              |
| CBL/SAT        | HDMI2              |
| GAME           | HDMI3              |
| PC             | HDMI4              |
| AUX            | -----              |
| TV/CD          | -----              |

#### ■ BD/DVD, CBL/SAT, GAME, PC, AUX, TV/CD

- ▶ **HDMI1, HDMI2, HDMI3, HDMI4, HDMI5, HDMI6:**

Select the input to which the component has been connected.

- ▶ **-----:**

Select if you're not using the **HDMI OUT**.

Each HDMI input cannot be assigned to two input selectors or more. When **HDMI1 - HDMI6** have already been assigned, you must first set any unused input selectors to “-----” or you will be unable to assign **HDMI1 - HDMI6** to other input selectors.

### Note

- If no video component is connected to HDMI output (even if the HDMI input is assigned), the AV receiver selects the video source based on the setting of “Component (Component Video Input)”.
- When an **HDMI IN** is assigned to an input selector as explained here, the same **HDMI IN** will be set as a priority in the “**Digital Audio**” (→ page 46). In this case, if you want to use the coaxial or optical audio input, make the appropriate selection in the “**Audio Selector**” setting (→ page 50).
- Do not assign an **HDMI IN** to the **TV/CD** selector while “**HDMI Ctrl (RIHD)**” is set to “**On**” (→ page 52), otherwise appropriate CEC (Consumer Electronics Control) operation will not be guaranteed.
- If you assign “-----” to an input selector that is currently selected in “**HDMI Through**” (→ page 52), the “**HDMI Through**” setting will be automatically switched to “**Off**”.

## Component (Component Video Input)



### Menu Component

If you connect a video component to a component video input, you must assign that input to an input selector. For example, if you connect your Blu-ray Disc/DVD player to **COMPONENT VIDEO IN 2**, you must assign “**IN2**” to the “**BD/DVD**” input selector.

Here are the default assignments.

| Input selector | Default assignment |
|----------------|--------------------|
| BD/DVD         | IN1                |
| CBL/SAT        | IN2                |
| GAME           | -----              |
| PC             | -----              |
| AUX            | -----              |
| TV/CD          | -----              |

#### ■ BD/DVD, CBL/SAT, GAME, PC, AUX, TV/CD

- ▶ **IN1, IN2:**

Select the input to which the component has been connected.

- ▶ **-----:**

Select if you're not using the **COMPONENT VIDEO OUT**.



## Digital Audio (Digital Audio Input)



### Menu Digital Audio

If you connect a component to a digital audio input, you must assign that input to an input selector. For example, if you connect your CD player to the **OPTICAL IN 1**, you must assign "**OPTICAL1**" to the "**TV/CD**" input selector. Here are the default assignments.

| Input selector | Default assignment |
|----------------|--------------------|
| BD/DVD         | COAXIAL1           |
| CBL/SAT        | COAXIAL2           |
| GAME           | OPTICAL1           |
| PC             | -----              |
| AUX            | -----              |
| TV/CD          | OPTICAL2           |

#### ■ BD/DVD, CBL/SAT, GAME, PC, AUX, TV/CD

- ▶ COAXIAL1, COAXIAL2, OPTICAL1, OPTICAL2:

Select the input to which the component has been connected.

- ▶ -----:

Select if the component is connected to an analog audio input.

#### Note

- When an **HDMI IN** is assigned to an input selector in "**HDMI Input**" (→ page 45), the same **HDMI IN** will be set as a priority in this assignment. In this case, if you want to use the coaxial or optical audio input, make the appropriate selection in the "**Audio Selector**" (→ page 50).
- Supported sampling rates for PCM signals (stereo/mono) from a digital input (optical and coaxial) are 32/44.1/48/88.2/96 kHz/16, 20, 24 bit.

## Sp Config (Speaker Configuration)




### Menu Sp Config

Some of the settings in this section are set automatically by Audyssey 2EQ<sup>®</sup> Room Correction and Speaker Setup (→ page 30).

Here you can check the settings made by Audyssey 2EQ Room Correction and Speaker Setup function, or set them manually, which is useful if you change one of the connected speakers after using Audyssey 2EQ Room Correction and Speaker Setup function.

This section explains how to specify which speakers are connected and their sizes.

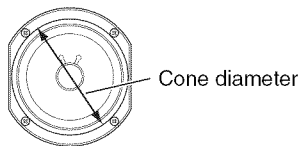

For speakers with a cone diameter larger than 6-1/2 inches (16 cm), specify **Large** (full band). For those with a smaller diameter, specify **Small** (default crossover 100Hz). The crossover frequency can be changed in "Crossover (Crossover Frequency)".

#### Note

- These settings are not available in either of the following cases:
  - A pair of headphones is connected.
  - The "**Audio TV Out**" setting is set to "**On**" (→ page 52).
  - "**HDMI Ctrl (RIHD)**" is set to "**On**" (→ page 52) and you're listening through your TV speakers.

#### ■ Subwoofer

- ▶ **Yes**
- ▶ **No**

#### ■ Front

- ▶ **Small:**
- ▶ **Large:**

Select based on the cone diameter.

#### Note

- If the "**Subwoofer**" setting is set to "**No**", this setting is fixed to "**Large**".

#### ■ Center\*1, Surround\*1

- ▶ **Small:**
- ▶ **Large:**

Select based on the cone diameter.

#### ▶ None

#### Note

- \*1 If the "**Front**" setting is set to "**Small**", the "**Large**" option cannot be selected.

#### ■ Crossover (Crossover Frequency)

This setting is advantageous for the speakers that you specified as "**Small**" in "Sp Config (Speaker Configuration)". To get the best bass performance from your speaker system, you need to set the crossover frequency according to the size and frequency response of your speakers.

- ▶ **40Hz, 50Hz, 60Hz, 70Hz, 80Hz, 90Hz, 100Hz, 120Hz, 150Hz, 200Hz**

Use the diameter of the smallest speaker in your system when choosing the crossover frequency.

| Speaker cone diameter            | Crossover frequency |
|----------------------------------|---------------------|
| Over 8 in. (20 cm)               | 40/50/60 Hz*        |
| 6-1/2 to 8 in. (16 to 20 cm)     | 70/80/90 Hz*        |
| 5-1/4 to 6-1/2 in. (13 to 16 cm) | 100 Hz              |
| 3-1/2 to 5-1/4 in. (9 to 13 cm)  | 120 Hz              |
| Under 3-1/2 in. (9 cm)           | 150/200 Hz*         |

\* Choose the setting matching your speaker.

↳ To be continued



**Note**

- For a more accurate setting, look up the frequency response in the manuals supplied with your speakers and set accordingly.
- Choose a higher crossover frequency if you want more sound from your subwoofer.

**Double Bass**

This setting is **NOT** set automatically by Audyssey 2EQ® Room Correction and Speaker Setup (→ [page 30](#)).

- ▶ **On**
- ▶ **Off**

Turn this setting on to boost bass output by feeding bass sounds from the front left, right, and center channels to the subwoofer.

**Note**

- When the “**Subwoofer**” setting is set to “**No**” or the “**Front**” setting to “**Small**”, this setting is fixed to “**Off**” (→ [page 46](#)).
- This setting is set to “**On**” automatically when the “**Subwoofer**” and “**Front**” settings are set for the first time to “**Yes**” and “**Large**” respectively.

**Sp Distance (Speaker Distance)****Menu Sp Distance**

This setting is set automatically by Audyssey 2EQ Room Correction and Speaker Setup (→ [page 30](#)).

Here you can specify the distance from each speaker to the listening position so that the sound from each speaker arrives at the listener’s ears as the sound designer intended.

**Note**

- These settings are not available in either of the following cases:
  - A pair of headphones is connected.
  - The “**Audio TV Out**” setting is set to “**On**” (→ [page 52](#)).
  - “**HDMI Ctrl (RIHD)**” is set to “**On**” (→ [page 52](#)) and you’re listening through your TV speakers.

**Unit**▶ **feet:**

Distances can be set in feet. Range: **1ft** to **30ft** in 1 foot steps.

▶ **meters:**

Distances can be set in meters. Range: **0.3m** to **9.0m** in 0.3 meter steps.

(The default setting varies from country to country.)

**Left, Center, Right, Surround Right, Surround Left, Subwoofer**

- ▶ Specify the distance from each speaker to your listening position.

**Note**

- Speakers that you set to “**No**” or “**None**” in “Sp Config (Speaker Configuration)” (→ [page 46](#)) cannot be selected.

**Level Cal (Level Calibration)****Menu Level Cal**

This setting is set automatically by Audyssey 2EQ Room Correction and Speaker Setup (→ [page 30](#)).

Here you can adjust the level of each speaker with the built-in test tone so that the volume of each speaker is the same at the listening position.

**Note**

- These settings cannot be calibrated in either of the following cases:
  - A pair of headphones is connected.
  - The “**Audio TV Out**” setting is set to “**On**” (→ [page 52](#)).
  - “**HDMI Ctrl (RIHD)**” is set to “**On**” (→ [page 52](#)) and you’re listening through your TV speakers.
  - The AV receiver is muted.

**Left, Center\*1, Right, Surround Right, Surround Left**

- ▶ **-12 dB** to **0 dB** to **+12 dB** in 1 dB steps.

**Subwoofer\*1**

- ▶ **-15 dB** to **0 dB** to **+12 dB** in 1 dB steps.

**Note**

- Speakers that you set to “**No**” or “**None**” in “Sp Config (Speaker Configuration)” (→ [page 46](#)) cannot be selected.

\*1 For the center speaker and subwoofer, the level settings made by using the Quick Setup are saved in this menu (→ [page 42](#)).

**Tip**

- If you’re using a handheld sound level meter, adjust the level of each speaker so that it reads 75 dB SPL at the listening position, measured with C-weighting and slow reading.



## Audio Adjust



Menu

Audio Adjust

With the Audio Adjust functions and settings, you can adjust the sound and listening modes as you like.

## Multiplex/Mono

### Multiplex

#### Input Ch (Mux)

- ▶ Main
- ▶ Sub
- ▶ Main/Sub

This setting determines which channel of a stereo multiplex source is output. Use it to select audio channels or languages with multiplex sources, multilingual TV broadcasts, and so on.

### Mono

#### Input Ch (Mono)

- ▶ Left+Right
- ▶ Left
- ▶ Right

This setting specifies the channel to be used for playing any 2-channel digital source such as Dolby Digital, or 2-channel analog/PCM source in the Mono listening mode.

## Dolby

### ■ PL II Music (2ch Input)

These settings apply to only 2-channel stereo sources.

#### Panorama

- ▶ On
- ▶ Off

With this setting, you can broaden the width of the front stereo image when using the Dolby Pro Logic II Music listening mode.

#### Dimension

- ▶ -3 to 0 to +3

With this setting, you can move the sound field forward or backward when using the Dolby Pro Logic II Music listening mode. Higher settings move the sound field backward. Lower settings move it forward.

If the stereo image feels too wide, or there's too much surround sound, move the sound field forward to improve the balance. Conversely, if the stereo image feels like it's in mono, or there's not enough surround sound, move it backward.

#### Center Width

- ▶ 0 to 3 to 7

With this setting, you can adjust the width of the sound from the center speaker when using the Dolby Pro Logic II Music listening mode. Normally, if you're using a center speaker, the center channel sound is output from only the center speaker. (If you're not using a center speaker, the center channel sound will be distributed to the front left and right speakers to create a phantom center). This setting controls the front left, right, and center mix, allowing you to adjust the weight of the center channel sound.

## DTS

### ■ Neo:6 Music

#### Center Image

- ▶ 0 to 2 to 5

With this setting, you can specify by how much the front left and right channel output is attenuated in order to create the center channel.

Changing the value from "0" to "5" will spread the sound of the center channel to left and right (outwards).

## Theater-Dimensional

### ■ Listening Angle


#### ▶ Wide:

Select if the listening angle is 40 degrees.

#### ▶ Narrow:

Select if the listening angle is 20 degrees.

With this setting, you can optimize the Theater-Dimensional listening mode by specifying the angle of the front left and right speakers relative to the listening position. Ideally, the front left and right speakers should be equidistant from the listening position and at an angle close to one of the two available settings.

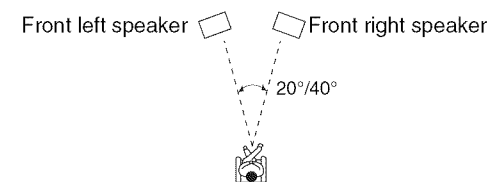



## Source Setup



Items can be set individually for each input selector.

### Preparation

Press the input selector buttons to select an input source.

### Menu

### Source Setup

## Audyssey®

The tone for each speaker is set automatically by Audyssey 2EQ® Room Correction and Speaker Setup. To enable the following settings, you must first perform the Room Correction and Speaker Setup (→ [page 30](#)).

- These technologies cannot be used when:
  - a pair of headphones is connected, or
  - either Pure Audio (**European and Australian models**) or Direct listening mode is selected.

### Audyssey

#### ▶ Off

#### ▶ Movie:

Select this setting for movie material.  
The **Audyssey** indicator will light.

#### ▶ Music:

Select this setting for music material.  
The **Audyssey** indicator will light.

### Note

- When “**Audyssey Quick Start**” has been used for measurement, “**Audyssey**” cannot be selected.
- Audyssey equalizing does not work with DSD sources.

### Dynamic EQ

#### ▶ Off

#### ▶ On:

Audyssey Dynamic EQ® becomes active.

The **Dynamic EQ** indicator will light.

With Audyssey Dynamic EQ, you can enjoy great sound even when listening at low volume levels.

Audyssey Dynamic EQ solves the problem of deteriorating sound quality as volume is decreased by taking into account human perception and room acoustics. It does so by selecting the correct frequency response and surround volume levels moment-by-moment so that the content sounds the way it was created at any volume level — not just at reference level.

### Reference Level

#### Audyssey Dynamic EQ Reference Level Offset

#### ▶ 0dB:

This should be selected for movie contents.

#### ▶ 5dB:

Select this setting for content that has a very wide dynamic range, such as classical music.

#### ▶ 10dB:

Select this setting for jazz or other music that has a wider dynamic range. This setting should also be selected for TV content as that is usually mixed at 10 dB below film reference.

#### ▶ 15dB:

Select this setting for pop/rock music or other program material that is mixed at very high listening levels and has a compressed dynamic range.

Movies are mixed in rooms calibrated for film reference. To achieve the same reference level in a home theater system each speaker level must be adjusted so that –30 dBFS band-limited (500 Hz to 2000 Hz) pink noise produces 75 dB sound pressure level at the listening position. A home theater system automatically calibrated by Audyssey 2EQ will play at reference level when the master volume control is set to the 0 dB position. At that level you can hear the mix as the mixers heard it.

Audyssey Dynamic EQ is referenced to the standard film mix level. It makes adjustments to maintain the reference response and surround envelopment when the volume is turned down from 0 dB. However, film reference level is not always used in music or other non-film content.

Audyssey Dynamic EQ Reference Level Offset provides three offsets from the film level reference (5 dB, 10 dB, and 15 dB) that can be selected when the mix level of the content is not within the standard.

### Note

- If “**Dynamic EQ**” setting is set to “**Off**”, this technology cannot be used.

### Dynamic Volume

#### ▶ Off

#### ▶ Light:

Activates Light Compression Mode.

#### ▶ Medium:

Activates Medium Compression Mode.

#### ▶ Heavy:

Activates Heavy Compression Mode. This setting affects volume the most. It quiets the loud parts, such as explosions, and boosts the quiet parts so they can be heard.

### Note

- If you make Dynamic Volume active, “**Dynamic EQ**” is set to “**On**”. The **Dynamic Vol** indicator will light.
- When “**Dynamic EQ**” is set to “**Off**”, “**Dynamic Volume**” is automatically switched to “**Off**”.



**About Audyssey Dynamic EQ®**

Audyssey Dynamic EQ solves the problem of deteriorating sound quality as volume is decreased by taking into account human perception and room acoustics. Dynamic EQ selects the correct frequency response and surround levels moment-by-moment at any user-selected volume setting. The result is bass response, tonal balance, and surround impression that remain constant despite changes in volume. Dynamic EQ combines information from incoming source levels with actual output sound levels in the room, a prerequisite for delivering a loudness correction solution.

Audyssey Dynamic EQ works well by itself. However, if Audyssey 2EQ® is on, the two technologies work in tandem to provide well-balanced sound for every listener at any volume level.

**About Audyssey Dynamic Volume®**

Audyssey Dynamic Volume solves the problem of large variations in volume level between television programs, commercials, and between the soft and loud passages of movies. Dynamic Volume looks at the preferred volume setting by the user and then monitors how the volume of program material is being perceived by listeners in real time to decide whether an adjustment is needed.

Whenever necessary, Dynamic Volume makes the necessary rapid or gradual adjustments to maintain the desired playback volume level while optimizing the dynamic range. Audyssey Dynamic EQ is integrated into Dynamic Volume so that as the playback volume is adjusted automatically, the perceived bass response, tonal balance, surround impression and dialog clarity remain the same whether watching movies, flipping between television channels or changing from stereo to surround sound content.

**A/V Sync****■ A/V Sync**

▶ **0 msec to 400 msec** in 10 msec steps.

When using progressive scanning on your Blu-ray Disc/DVD player, you may find that the picture and sound are out of sync. With this setting, you can correct this by delaying the audio signals.

To view the TV picture while setting the delay, press **ENTER**.

To return to the previous screen, press **RETURN**.

The range of values you can adjust will depend on whether your TV or display supports HDMI Lip Sync and if the “**LipSync**” setting is set to “**On**” or not (→ [page 53](#)).

**Note**

- A/V Sync is disabled when the Pure Audio (**European and Australian models**) or Direct listening mode is used with an analog input source.
- This setting cannot be used with the **NET** input selector.

**Preset Name For Input Selector****■ Name**

▶ **---, Blu-ray, DVD, HD DVD, VCR, DVR, Tivo, CableSTB, SAT STB, PS3, Wii, Xbox, PC, TV, CD, TAPE, iPod:**

To reset to the default, select “**---**”.

You can enter a preset name for each individual input selector for easy identification. When entered, the preset name will be displayed.

**Note**

- You can't assign the same preset name to multiple input selectors.
- This setting cannot be used for the **AM, FM, NET** or **USB** input selectors.

**Audio Selector****■ Audio Selector**

▶ **ARC:**

The audio signal from your TV tuner can be sent to **HDMI OUT** of the AV receiver.<sup>\*1</sup>

With this selection, the TV's audio can be automatically selected as a priority among other assignments.

▶ **HDMI:**

This can be selected when **HDMI IN** has been assigned as an input source. If both HDMI (**HDMI IN**) and digital audio inputs (**COAXIAL IN** or **OPTICAL IN**) have been assigned, HDMI input is automatically selected as a priority.

▶ **COAXIAL:**

This can be selected when **COAXIAL IN** has been assigned as an input source. If both coaxial and HDMI inputs have been assigned, coaxial input is automatically selected as a priority.

▶ **OPTICAL:**

This can be selected when **OPTICAL IN** has been assigned as an input source. If both optical and HDMI inputs have been assigned, optical input is automatically selected as a priority.

▶ **ANALOG:**

The AV receiver always outputs analog signals.

You can set priorities of audio output when there are both digital and analog inputs.

**Note**

- This setting can be made only for an input source that is assigned to **HDMI IN, COAXIAL IN, or OPTICAL IN**.
- \*1 You can select “**ARC**” if you select the **TV/CD** input selector. But you cannot if you've selected “**Off**” in the “**Audio Return Ch**” setting (→ [page 53](#)).



## Setting the Incoming Digital Signal (Fixed Mode)

### ■ Fixed Mode

#### ▶ Off:

The format is detected automatically. If no digital input signal is present, the corresponding analog input is used instead.

#### ▶ PCM:

Only 2-channel PCM format input signals will be heard. If the input signal is not PCM, the **PCM** indicator will flash and noise may also be produced.

#### ▶ DTS:

Only DTS (but not DTS-HD) format input signals will be heard. If the input signal is not DTS, the **dts** indicator will flash and there will be no sound.

When “**HDMI**”, “**COAXIAL**” or “**OPTICAL**” is selected in the “**Audio Selector**” setting, you can then specify the signal type in “**Fixed Mode**”.

Normally, the AV receiver detects the signal format automatically. However, if you experience either of the following issues when playing PCM or DTS material, you can manually set the signal format to PCM or DTS.

- If the beginnings of tracks from a PCM source are cut off, try setting the format to PCM.
- If noise is produced when fast forwarding or reversing a DTS CD, try setting the format to DTS.

#### Note

- The setting will be reset to “**Off**” when you change the setting in “**Audio Selector**” (→ page 50).

## Hardware



## Menu Hardware

### OSD

#### ■ Volume OSD

##### ▶ On

##### ▶ Off

Turn this setting on to display the volume level on the TV screen while it is adjusted.

### Remote ID

#### ■ Remote ID

##### ▶ 1, 2, or 3

When several Onkyo components are used in the same room, their remote ID codes may overlap. To differentiate the AV receiver from other components, you can change its remote ID from “**1**”, to “**2**” or “**3**”.

#### Note

- If you do change the AV receiver’s remote ID, be sure to change the remote controller to the same ID (see below), otherwise, you won’t be able to control it with the remote controller.

### Changing the remote controller’s ID

- 1 While holding down **RECEIVER**, press and hold down **Q SETUP** until the remote indicator lights (about 3 seconds).
- 2 Use the number buttons to enter ID 1, 2, or 3. The remote indicator flashes twice.

## Tuner

### ■ AM/FM Freq Step (North American models)

#### ▶ 10kHz/200kHz:

#### ▶ 9kHz/50kHz:

Select the frequency step according to your area.

### ■ AM Freq Step (European and Australian models)

#### ▶ 10kHz:

#### ▶ 9kHz:

Select the frequency step according to your area.

For AM/FM tuning to work properly, you must specify the AM/FM frequency step used in your area.

#### Note

- When this setting is changed, all radio presets will be deleted.

## Auto Standby

### ■ Auto Standby

#### ▶ Off

#### ▶ On

When “**Auto Standby**” is set to “**On**”, the **ASb** indicator lights and the AV receiver will automatically enter standby mode if there is no operation for 30 minutes with no audio and no video signal input.

“**Auto Standby**” will appear on the AV receiver’s display and OSD 30 seconds before the Auto Standby comes on.

Default setting: **On (European and Australian models)**, **Off (North American models)**

#### Note

- Set to “**On**”, the Auto Standby function may activate itself during playback with some sources.
- The Auto Standby function does not work when Zone 2 is on.



## HDMI Setup



Menu

HDMI Setup

### HDMI Ctrl (RIHD)

- ▶ **Off**
- ▶ **On**

Turn this setting on to allow **RIHD**-compatible components connected via HDMI to be controlled by the AV receiver (→ [page 72](#)).

#### Note

- When the setting is set to “**On**” and the menu is closed, the names of connected **RIHD**-compatible components and “**RIHD On**” are displayed on the AV receiver. “**Search...**” → “**(name)**” → “**RIHD On**”  
When the AV receiver cannot receive the name of the component, it is displayed as “**Player\*\***” or “**Recorder\*\***”, etc (“**\*\***” shows up and indicates the number of components, when two or more are received).
- When an **RIHD**-compatible component is connected to the AV receiver via an HDMI cable, the name of the connected component is displayed on the AV receiver display. For example, while you are watching TV broadcasting, if you operate a Blu-ray Disc/DVD player (being powered on) with the remote control of the AV receiver, the name of the Blu-ray Disc/DVD player will be displayed on the AV receiver.
- Set it to “**Off**” when a connected piece of equipment is not compatible or it is unclear whether the equipment is compatible or not.
- If operation is not normal when set to “**On**”, change the setting to “**Off**”.
- Refer to the connected component’s instruction manual for details.
- When the “**HDMI Ctrl (RIHD)**” setting is set to “**On**”, the power consumption in standby mode slightly increases. (Depending on the TV status, the AV receiver will enter standby mode as usual.)

- When the source equipment is connected with the **RI** connection, it may malfunction if “**HDMI Ctrl (RIHD)**” is set to “**On**”.

### HDMI Through

- ▶ **Off**
- ▶ **BD/DVD, CBL/SAT, GAME, PC, AUX, TV/CD:**  
Selects the input source for which the HDMI Through function is enabled.
- ▶ **Last:**

The HDMI Through function is activated on the input source selected at the time of setting the AV receiver to standby mode.

When enabling the HDMI Through function, regardless of whether the AV receiver is on or in standby, both audio and video streams from an HDMI input will be output to the TV or other components via HDMI connection. The **HDMI** indicator will be dimly-lit in standby mode. Note that the indicator may not light under certain conditions (→ [page 44](#)).

This setting is fixed to “**Auto**” automatically when the above “**HDMI Ctrl (RIHD)**” setting is set to “**On**”, resulting in automatic input source selection.

#### Note

- Only an input source assigned to an **HDMI IN** via “**HDMI Input**” is enabled (→ [page 45](#)).
- The power consumption in standby mode will increase during the HDMI Through function; however in the following cases, the power consumption can be saved:
  - The TV is in standby mode.
  - You are watching a TV program.
- Refer to the connected component’s instruction manual for details.
- Depending on the connected component, the correct input source may not be selected with the setting fixed to “**Auto**”.
- This setting is set to “**Off**” automatically when the “**HDMI Ctrl (RIHD)**” setting is set to “**Off**”.

### Audio TV Out

- ▶ **Off**
- ▶ **On**

This preference determines whether the incoming audio signal is output from the HDMI output. You may want to turn this preference on if your TV is connected to the HDMI output and you want to listen to the audio from a connected component through your TV’s speakers. Normally, this should be set to “**Off**”.

#### Note

- If “**On**” is selected and the audio can be output from the TV, the AV receiver will output no sound through its speakers. In this case, “**TV Speaker**” appears on the AV receiver’s display by pressing **DISPLAY**.
- When “**HDMI Ctrl (RIHD)**” is set to “**On**”, this setting is fixed to “**Auto**”.
- With some TVs and input signals, no sound may be output even when this setting is set to “**On**”.
- When “**Audio TV Out**” or “**HDMI Ctrl (RIHD)**” is set to “**On**” and you’re listening through your TV’s speakers (→ [page 15](#)), turning up the AV receiver’s volume control will make the sound be output from the AV receiver’s front left and right speakers. To stop the AV receiver’s speakers producing sound, change the settings, change your TV’s settings, or turn down the AV receiver’s volume.
- Listening mode cannot be changed when this setting is set to “**On**” and the input source is not HDMI.



## ■ Audio Return Ch (ARC)

### ▶ Off

### ▶ Auto:

The audio signal from your TV tuner can be sent to **HDMI OUT** of the AV receiver.

The audio return channel (ARC) function allows an ARC capable TV to send the audio stream to **HDMI OUT** of the AV receiver. To use this function, you must select the **TV/CD** input selector and your TV must be ARC capable.

The **ARC** indicator will light when the audio signal is detected. Default setting: “- - - -”

### Note

- This setting is fixed to “- - - -” when the “**HDMI Ctrl (RIHD)**” setting is set to “**Off**”.
- This setting is set to “**Auto**” automatically when the “**HDMI Ctrl (RIHD)**” setting is set to “**On**” for the first time.
- If you set “**Audio Return Ch**” to “**Auto**”, the “**Audio Selector**” settings of the **TV/CD** input selector will be automatically switched to “**ARC**” (→ page 50).

After changing the settings of the “**HDMI Ctrl (RIHD)**”, “**HDMI Through**” or “**Audio Return Ch**”, turn off the power on all connected pieces of equipment and then turn them on again. Refer to the user’s manuals for all connected pieces of equipment.

## ■ LipSync

### ▶ Off

### ▶ On

This function allows the AV receiver to automatically correct any delay between the video and the audio, based on the data from the connected monitor.

### Note

- This function works only if your HDMI-compatible TV supports HDMI Lip Sync.

## ■ InstaPrevue

These settings apply to “**InstaPrevue**” of the Home menu (→ page 38) and specify the preview display of HDMI video streams.

### Sub Window

#### ▶ Multi:

Displays preview thumbnails all at once.

#### ▶ Single:

Displays preview thumbnails one-by-one.

With this setting, you can set the number of preview thumbnails displayed.

### Position

(with “**Sub Window**” set to “**Multi**”)

#### ▶ Top, Bottom, Left, Right

(with “**Sub Window**” set to “**Single**”)

#### ▶ UpperL, UpperR, LowerL, LowerR

With this setting, you can set the position of preview thumbnails on the TV screen.

### Note

- Depending on video signals, the picture may not be properly rendered on the preview thumbnails of InstaPrevue.

## Network Setup



### Menu

### Network Setup

After modifying the network settings, you must confirm the changes by executing “**Save**”.

This section explains how to configure the AV receiver’s network settings manually.

If your router’s DHCP server is enabled, you don’t need to change any of these settings, as the AV receiver is set to use DHCP to configure itself automatically by default (i.e., DHCP is set to “**Enable**”). If, however, your router’s DHCP server is disabled (you’re for example using static IP), you’ll need to configure these settings yourself, in which case, a knowledge of Ethernet networking is essential.

### What’s DHCP?

DHCP (Dynamic Host Configuration Protocol) is used by routers, computers, the AV receiver, and other devices to automatically configure themselves on a network.

### What’s DNS?

The DNS (Domain Name System) translates domain names into IP addresses. For example, when you enter a domain name such as *www.onkyousa.com* in your Web browser, before accessing the site, your browser uses DNS to translate this into an IP address, in this case 63.148.251.142.

### ■ MAC Address

This is the AV receiver’s MAC (Media Access Control) address. This address cannot be changed.



## ■ DHCP

▶ **Enable**

▶ **Disable**

This setting determines whether or not the AV receiver uses DHCP to automatically configure its IP Address, Subnet Mask, Gateway, and DNS Server settings.

### Note

- If you select “**Disable**”, you must configure the “**IP Address**”, “**Subnet Mask**”, “**Gateway**”, and “**DNS Server**” settings yourself.

## ■ IP Address

▶ Class A:

“**10.0.0.0**” to “**10.255.255.255**”

▶ Class B:

“**172.16.0.0**” to “**172.31.255.255**”

▶ Class C:

“**192.168.0.0**” to “**192.168.255.255**”

Enter a static IP address provided by your Internet Service Provider (ISP).

Most routers use Class C IP addresses.

## ■ Subnet Mask

Enter the subnet mask address provided by your ISP (typically **255.255.255.0**).

## ■ Gateway

Enter the gateway address provided by your ISP.

## ■ DNS Server

Enter the DNS server address provided by your ISP.

## ■ Proxy URL

To use a Web proxy, enter its URL here.

## ■ Proxy Port

If you’re using a Web proxy, enter a proxy port number here.

## ■ Network Standby

▶ **On**

▶ **Off**

This setting enables or disables control over the network. When enabled, the **NET** indicator will be dimly-lit while the AV receiver is in standby mode. Note that the indicator may not light under certain conditions (→ [page 44](#)).

### Note

- When set to “**On**”, the power consumption slightly increases in standby mode.

## ■ Update Notice

▶ **Enable**

▶ **Disable**

When this setting is enabled, you will be notified if a firmware update via network is available.

### Note

- Selecting “**Never Remind me**” on the notification window will switch this setting to “**Disable**” (→ [page 19](#)).
- For details on the update notification, see “If the “Update New F/W” window appears.” (→ [page 19](#)).




## Zone 2

In addition to the main listening room, you can also enjoy playback in another room, or as we call Zone 2. And, you can select a different source for each room.

### Making Zone 2 Connections

#### Connecting the Zone Speakers to an Additional Amplifier

This setup allows 5.1-channel playback in your main listening room and 2-channel stereo playback in Zone 2.

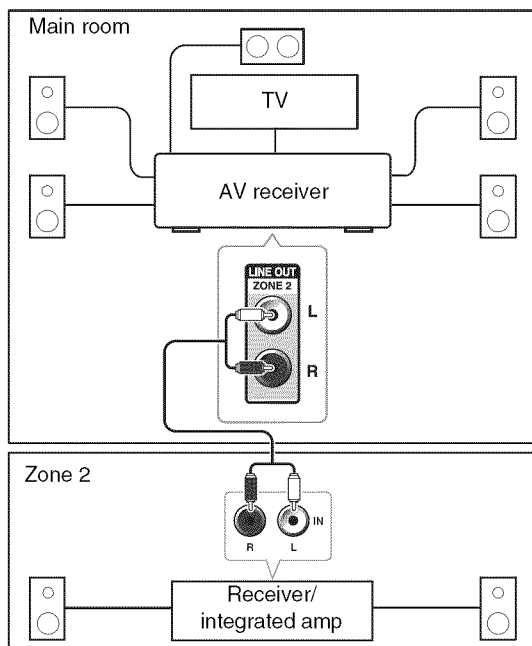


#### Note

- The volume of Zone 2 must be set on the Zone 2 amplifier.

### Controlling Zone 2 Components

#### Operating on the AV receiver

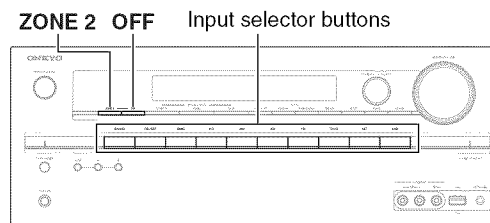

- To turn on Zone 2 and select an input source, press ZONE 2 followed by an input selector button within 8 seconds.**


Zone 2 turns on, the **Z2** indicator lights on the AV receiver's display.

To select the same source as the main room's, press **ZONE 2** twice. "**Z2 Sel: Source**" appears on the AV receiver's display.

- To turn off Zone 2, press OFF.**  
The zone is turned off.

#### Operating on the remote controller

To control Zone 2, you must press **ZONE2** on the remote controller first.

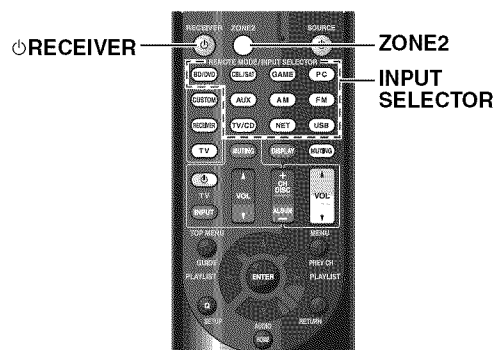

- Press ZONE2, then point the remote controller at the AV receiver and press  $\odot$ RECEIVER.**

Zone 2 turns on, the **Z2** indicator lights on the AV receiver's display.

- To select an input source for Zone 2, press ZONE2, followed by an INPUT SELECTOR button.**

- To turn off Zone 2, press ZONE2, followed by  $\odot$ RECEIVER.**

The zone is turned off.

#### Note

- Only analog input sources are output by the **ZONE 2 LINE OUT**. Digital input sources are not output. If no sound is heard when an input source is selected, verify that the source is connected to an analog input.
- You cannot select different AM or FM radio stations for your main room and Zone 2. The same AM/FM radio station will be heard in each room. Namely, if you have selected an FM station for the main room, that station will also be output in Zone 2.
- When you have selected **NET** or **USB** as the input selector, the last selector selected will be set for Main room and Zone 2.
- When Zone 2 is activated and its input selector is selected, the power consumption of standby mode slightly increases.
- While Zone 2 is on, **RI** functions will not work.
- When setting the AV receiver to standby mode while Zone 2 is active, the **Z2** indicator is dimly lit.
- Activating Zone 2 in the main room when the listening mode is set to Pure Audio (**European and Australian models**) will automatically switch it to Direct.



# iPod/iPhone Playback via Onkyo Dock

## Using the Onkyo Dock

The Dock is sold separately. Models sold are different depending on the region.

For the latest information on the Onkyo Dock components, see the Onkyo web site at:

<http://www.onkyo.com>

Before using the Onkyo Dock components, update your iPod/iPhone with the latest software, available from the Apple web site.

For supported iPod/iPhone models, see the instruction manual of the Onkyo Dock.

## RI Dock

With the RI Dock, you can easily play the music of your iPod/iPhone, or watch the slideshows and videos of your iPod/iPhone on a TV. In addition, the on-screen display (OSD) allows you to view, navigate, and select your iPod/iPhone model's contents on your TV, and with the supplied remote controller, you can control your iPod/iPhone from the comfort of your sofa. You can even use the AV receiver's remote controller to operate your iPod/iPhone.

### Note

- Enter the appropriate remote control code before using the AV receiver's remote controller for the first time (→ page 58).
- Connect the RI Dock to the AV receiver with an **RI** cable (→ page 17).
- Set the RI Dock's RI MODE switch to "HDD" or "HDD/DOCK".
- Set the AV receiver's Input Display to "DOCK" (→ page 40).

## System Function

Depending on your iPod/iPhone model and generation, some of the linked operations may not be available.

### System On

When you turn on the AV receiver, the RI Dock and iPod/iPhone turn on automatically. In addition, when RI Dock and iPod/iPhone are on, the AV receiver can be turned on by pressing **SOURCE**.

### Auto Power On

If you press the remote controller's **▶** (Playback) while the AV receiver is on standby, the AV receiver will automatically turn on, select your iPod/iPhone as the input source, and your iPod/iPhone will start playback.

### Direct Change

If you start iPod/iPhone playback while listening to another input source, the AV receiver will automatically switch to the input to which the RI Dock is connected.

## Other Remote Operations

You can use the remote controller that came with the AV receiver to control other iPod/iPhone functions. The available functionality depends on the AV receiver.

### Note

- If you use your iPod/iPhone with any other accessories, iPod/iPhone playback detection may not work.
- The System On function may not work depending on the RI Dock.

## iPod Alarm

If you use the Alarm function on your iPod to start playback, the AV receiver will turn on at the specified time and select your iPod as the input source automatically.

### Note

- This linked operation won't work while a video is being played or when the sound set for the alarm is a built-in sound (Beep).
- This linked operation won't work with models on which music files cannot be used to set the alarm sound.

## Operating Notes

- Use the AV receiver's volume control to adjust the playback volume.
- While your iPod/iPhone is inserted in the RI Dock, its volume control has no effect.
- If you do adjust the volume control on your iPod/iPhone while it's inserted in the RI Dock, be careful that it's not set too loud before you reconnect your headphones.





## Controlling Your iPod/iPhone

By pressing the **REMOTE MODE** button that's been programmed with the remote control code for your Dock, you can control your iPod/iPhone in the Dock with the buttons described further in this section.

See "Entering Remote Control Codes" for details on entering a remote control code (→ [page 58](#)).

See the Dock's instruction manual for more information.

### RI Dock

- Set the RI Dock's RI MODE switch to "HDD" or "HDD/DOCK".
- **SOURCE** may not work with a remote control code (without **RI**). In this case, make an **RI** connection and enter the remote control code **81993** (with **RI**).


#### ■ With the RI Control

Make an **RI** connection and enter the remote control code **81993** (with **RI**).

- Set the AV receiver's Input Display to "DOCK" (→ [page 40](#)).

#### ■ Without the RI Control

You must enter the remote control code **82990** first (→ [page 59](#)).

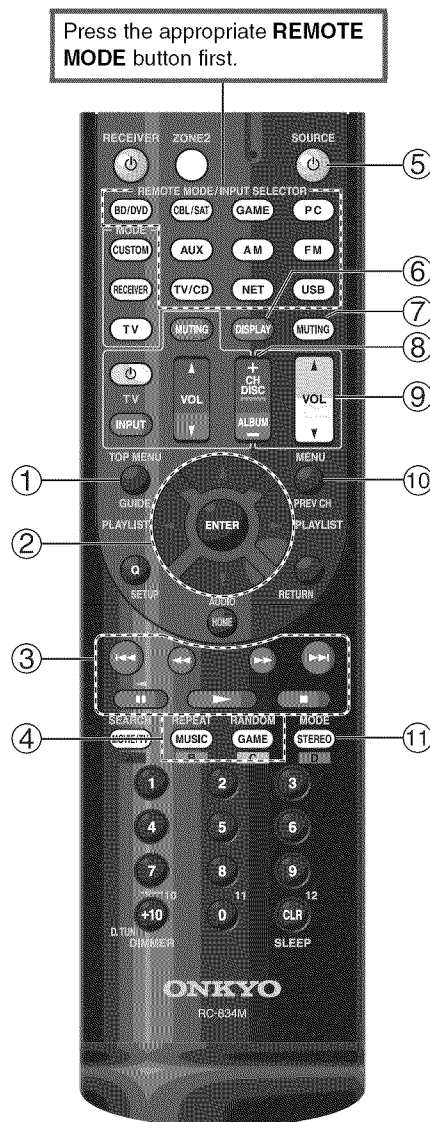

### ■ RI Dock operation

| Available buttons |                        |   |                       |
|-------------------|------------------------|---|-----------------------|
| ①                 | TOP MENU <sup>*1</sup> | ⑤ | SOURCE <sup>*2</sup>  |
| ②                 | ▲/▼/◀/▶, ENTER         | ⑥ | DISPLAY <sup>*3</sup> |
|                   | PLAYLIST ◀/▶           | ⑦ | MUTING                |
| ③                 | ▶, II, ■, ◀▶, ◀▶▶      | ⑧ | ALBUM +/-             |
|                   | ◀◀, ▶▶                 | ⑨ | VOL ▲/▼               |
| ④                 | REPEAT                 | ⑩ | MENU                  |
|                   | RANDOM                 | ⑪ | MODE <sup>*4</sup>    |

- With some iPod/iPhone models, generations and RI Docks, certain buttons may not work as expected.
  - For detailed operation of iPod/iPhone, please refer to the instruction manual of the RI Dock.
- <sup>\*1</sup> **TOP MENU** works as the mode button when used with the DS-A2 RI Dock.
- <sup>\*2</sup> This button does not turn the Onkyo DS-A2 or DS-A2X RI Dock on or off. Also, your iPod/iPhone may not respond the first time you press this button, in which case you should press it again. This is because the remote controller transmits the On and Standby commands alternately, so if your iPod/iPhone is already on, it will remain on when the remote controller transmits the On command. Similarly, if your iPod/iPhone is already off, it will remain off when the remote controller transmits the Off command.
- <sup>\*3</sup> **DISPLAY** turns on the backlight for a few seconds.
- <sup>\*4</sup> **Resume mode**  
With the Resume function, you can resume playback of the song that was playing when you removed your iPod/iPhone from the Onkyo DS-A2 RI Dock.



# Controlling Other Components

You can use the AV receiver's remote controller to control your other AV components. This section explains how to enter the remote control code for a component that you want to control: DVD, TV, CD, etc.

## Preprogrammed Remote Control Codes

The following **REMOTE MODE** buttons are preprogrammed with remote control codes for controlling the components listed. You do not need to enter a remote control code to control these components.

For details on controlling these components, see the indicated pages.

**BD/DVD** Onkyo Blu-ray Disc player (→ page 60)

**TV/CD** Onkyo CD player (→ page 59)

## Entering Remote Control Codes

You'll need to enter a code for each component that you want to control.

### 1 Look up the appropriate remote control code in the separate Remote Control Codes list.

The codes are organized by category (e.g., DVD player, TV, etc.).

### 2 While holding down the **REMOTE MODE** button to which you want to assign a code, press and hold down **DISPLAY** (about 3 seconds).

The remote indicator lights.

#### Note

- Remote control codes cannot be entered for **RECEIVER** and the multi zone button.
- Only TV remote control codes can be entered for **TV**.
- Except for **RECEIVER**, **TV**, and the multi zone button, remote control codes from any category can be assigned for the **REMOTE MODE** buttons. However, these buttons also work as input selector buttons (→ page 20), so choose a **REMOTE MODE** button that corresponds with the input to which you connect your component. For example, if you connect your CD player to the CD input, choose **TV/CD** when entering its remote control code.

### 3 Within 30 seconds, use the number buttons to enter the 5-digit remote control code.

The remote indicator flashes twice.

If the remote control code is not entered successfully, the remote indicator will flash once slowly.

#### Note

- Though the provided remote control codes are correct at the time of release, they are subject to change.

## Remapping Colored Buttons

You can change the configuration of colored buttons, with which **REMOTE MODE** buttons are preset.

### 1 While holding down the **REMOTE MODE** button that you want to program, press and hold down **A (Red)** until the remote indicator lights (about 3 seconds).

You can only change colored buttons for components whose codes belong to categories of the Remote Control Codes list (BD/DVD player, TV, cable set-top box, etc).

### 2 Within 30 seconds, press the colored buttons in the order that you want to reassign them.

The button presses are assigned to each button from left to right. The remote indicator flashes twice, indicating that the sequence has been successfully assigned. If the sequence is not successfully assigned, the remote indicator will flash once slowly.

#### Tip

- To reset the **REMOTE MODE** buttons to their default settings, see "Resetting the REMOTE MODE Buttons" (→ page 59).

#### Note

- If any other button than the colored buttons is pressed, the operation will be cancelled.
- This operation cannot be done while the AV receiver is in Receiver mode or when ZONE 2 is active.



## Remote Control Codes for Onkyo Components Connected via RI

Onkyo components that are connected via **RI** are controlled by pointing the remote controller at the AV receiver, not the component. This allows you to control components that are out of view, in a rack, for example.

- 1** Make sure the Onkyo component is connected with an **RI** cable and an analog audio cable (RCA). See “Connecting Onkyo **RI** Components” for details (→ page 17).
- 2** Enter the appropriate remote control code for a **REMOTE MODE** button, by referring to the previous section.
  - ▶ **42157**:  
Onkyo cassette tape deck with **RI**
  - ▶ **81993**:  
Onkyo Dock with **RI**
- 3** Press the **REMOTE MODE** button, point the remote controller at the AV receiver, and operate the component.

### Controlling Onkyo components without RI

If you want to control an Onkyo component by pointing the remote controller directly at it, or you want to control an Onkyo component that’s not connected via **RI**, use the following remote control codes:

- ▶ **30627**:  
Onkyo DVD player without **RI**
- ▶ **71817**:  
Onkyo CD player without **RI**
- ▶ **32900/33100/33500**:  
Onkyo Blu-ray Disc player
- ▶ **32901/33104/33504**:  
Onkyo HD DVD player

- ▶ **70868**:  
Onkyo MD recorder without **RI**
- ▶ **71323**:  
Onkyo CD recorder without **RI**
- ▶ **82990**:  
Onkyo Dock without **RI**

## Resetting the REMOTE MODE Buttons

You can reset a **REMOTE MODE** button to its default remote control code.

- 1** While holding down the **REMOTE MODE** button that you want to reset, press and hold down **HOME** until the remote indicator lights (about 3 seconds).
- 2** Within 30 seconds, press the **REMOTE MODE** button again.  
The remote indicator flashes twice, indicating that the button has been reset.  
Each **REMOTE MODE** button is preprogrammed with a remote control code. When a button is reset, its preprogrammed code is restored.

## Resetting the Remote Controller

You can reset the remote controller to its default settings.

- 1** While holding down **RECEIVER**, press and hold down **HOME** until the remote indicator lights (about 3 seconds).
- 2** Within 30 seconds, press **RECEIVER** again.  
The remote indicator flashes twice, indicating that the remote controller has been reset.

## Controlling Other Components

By pressing the **REMOTE MODE** button that’s been programmed with the remote control code for your component, you can control your component as described below.

For details on entering a remote control code for other components, see “Entering Remote Control Codes” (→ page 58).

### Controlling a TV

**TV** is preprogrammed with the remote control code for controlling a TV that supports the **RIHD**<sup>\*1</sup> (limited to some models). The TV must be able to receive remote control commands via **RIHD** and be connected to the AV receiver via HDMI. If controlling your TV via **RIHD** doesn’t work very well, program your TV’s remote control code into **TV** and use the TV remote mode to control your TV.

Use the following remote control codes:

- ▶ **11807/13100/13500**:  
TV with **RIHD**

### Controlling Apple TV

By programming the supplied remote controller with the appropriate remote control code, you can use it to operate your Apple TV.

Use the following remote control codes:

- ▶ **02615**:  
Apple TV



## Controlling a Blu-ray Disc/DVD Player, HD DVD Player or DVD Recorder


BD/DVD is preprogrammed with the remote control code for controlling a component that supports the **RIHD**\*1 (limited to some models). The component must be able to receive remote control commands via **RIHD** and be connected to the AV receiver via HDMI.

Use the following remote control codes:

▶ **32910/33101/33501/31612:**

Blu-ray Disc/DVD player with **RIHD**

\*1 The **RIHD** supported by the AV receiver is the CEC system control function of the HDMI standard.

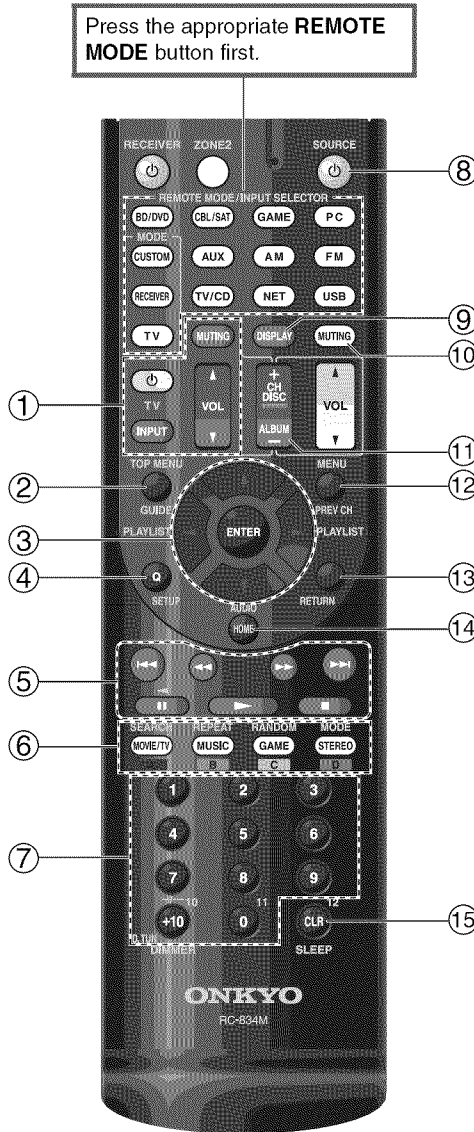

### TV operation

#### Available buttons

|   |  |   |                                    |
|---|--|---|------------------------------------|
| ① | ⏻, INPUT, TV VOL ▲/▼, MUTING                           | ⑦ | Number: 1 to 9, 0<br>Number: +10*1 |
| ② | GUIDE  | ⑨ | DISPLAY                            |
| ③ | ▲/▼/◀/▶<br>ENTER                                       | ⑪ | CH +/-                             |
| ④ | SETUP  | ⑬ | RETURN                             |
| ⑤ | ⏮, ⏪, ⏩, ⏭, ⏭*1<br>⏮*1, ⏭*1                            | ⑮ | AUDIO*1<br>CLR                     |
| ⑥ | A (Red)*1<br>B (Green)*1<br>C (Yellow)*1<br>D (Blue)*1 |   |                                    |


### Blu-ray Disc player / HD DVD player operation

#### Available buttons

|   |  |   |                    |
|---|--|---|--------------------|
| ② | TOP MENU                                       | ⑧ | ⏻SOURCE            |
| ③ | ▲/▼/◀/▶<br>ENTER                               | ⑨ | DISPLAY            |
| ④ | SETUP  | ⑩ | MUTING             |
| ⑤ | ⏮, ⏪, ⏩, ⏭, ⏭*1<br>⏮*1, ⏭*1                    | ⑪ | CH +/-<br>DISC +/- |
| ⑥ | A (Red)<br>B (Green)<br>C (Yellow)<br>D (Blue) | ⑬ | MENU<br>RETURN     |
| ⑦ | Number: 1 to 9, 0<br>Number: +10*1             | ⑭ | AUDIO*1            |
|   |  | ⑮ | CLR                |



Press the appropriate **REMOTE MODE** button first.

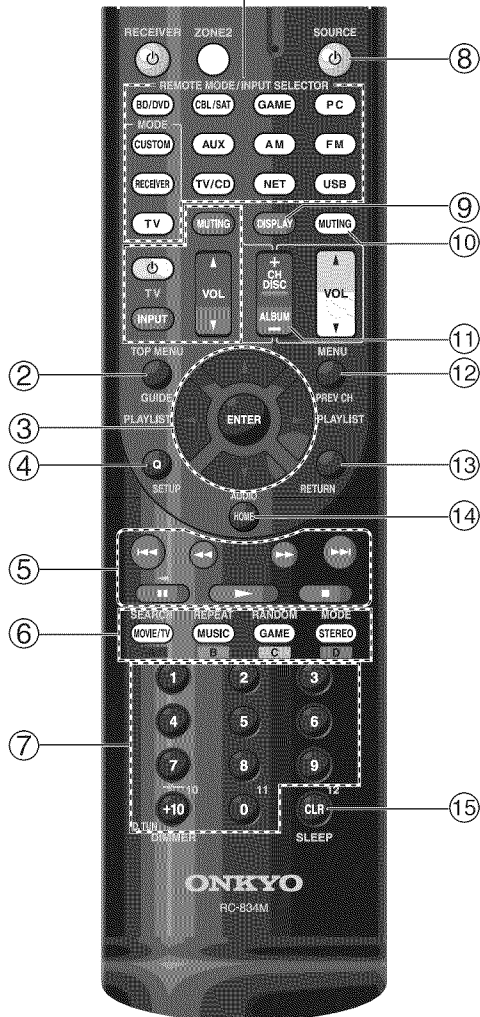

### DVD player / DVD recorder operation

| Available buttons                                      |                      |
|--|----------------------|
| ② TOP MENU   | ⑧ SOURCE             |
| ③ ▲/▼/◀/▶<br>ENTER                                     | ⑨ DISPLAY            |
| ④ SETUP  | ⑩ MUTING             |
| ⑤ ►, ■, ◀, ▶,  ◀◀, ▶▶                                  | ⑪ CH +/-<br>DISC +/- |
| ⑥ A (Red)*1<br>B (Green)<br>C (Yellow)*1<br>D (Blue)*1 | ⑫ MENU               |
|  | ⑬ RETURN             |
|  | ⑭ AUDIO*1            |
|  | ⑮ CLR                |
| ⑦ Number: 1 to 9, 0<br>Number: +10*1                   |                      |

### VCR/PVR operation

| Available buttons                  |                     |
|------------------------------------|---------------------|
| ② GUIDE                            | ⑧ SOURCE            |
| ③ ▲/▼/◀/▶<br>ENTER                 | ⑨ DISPLAY           |
| ④ SETUP                            | ⑩ MUTING            |
| ⑤ ►, ■, ◀, ▶,  ◀◀, ▶▶              | ⑪ CH +/-<br>PREV CH |
| ⑦ Number: 1 to 9, 0<br>Number: +10 | ⑫ RETURN            |
|                                    | ⑬ CLR               |

### Cassette tape deck operation

| Available buttons                             |          |
|---|----------|
| ⑤ ►, ◀ (Reverse Playback), ■, ◀◀, ▶▶,  ◀◀, ▶▶ | ⑧ SOURCE |
|   | ⑩ MUTING |

### Satellite receiver / Cable receiver operation

| Available buttons                                |   |
|--|---|
| ② GUIDE  | ⑦ Number: 1 to 9, 0<br>Number: +10        |
| ③ ▲/▼/◀/▶<br>ENTER                               | ⑧ SOURCE                                  |
| ④ SETUP  | ⑨ DISPLAY                                 |
| ⑤ ►, ■, ◀, ▶,  ◀◀, ▶▶                            | ⑩ MUTING<br>⑪ CH +/-                      |
| ⑥ A (Red)<br>B (Green)<br>C (Yellow)<br>D (Blue) | ⑫ PREV CH<br>⑬ RETURN<br>⑭ AUDIO<br>⑮ CLR |

### CD player / CD recorder / MD recorder operation

| Available buttons                    |                                    |
|--------------------------------------|------------------------------------|
| ③ ▲/▼/◀/▶<br>ENTER                   | ⑦ Number: 1 to 9, 0<br>Number: +10 |
| ④ SETUP                              | ⑧ SOURCE                           |
| ⑤ ►, ■, ◀, ▶,  ◀◀, ▶▶                | ⑨ DISPLAY<br>⑩ MUTING              |
| ⑥ SEARCH<br>REPEAT<br>RANDOM<br>MODE | ⑪ DISC +/-<br>⑫ CLR                |

#### Note

- With some components, certain buttons may not work as expected, and some may not work at all.
- See “Controlling Your iPod/iPhone” about the operation of iPod/iPhone (→ page 57).

\*1 The **RIHD** function is not supported. The **RIHD** supported by the AV receiver is the CEC system control function of the HDMI standard.




# Troubleshooting


If you have any trouble using the AV receiver, look for a solution in this section. If you can't resolve the issue yourself, contact your Onkyo dealer.

If you can't resolve the issue yourself, try resetting the AV receiver before contacting your Onkyo dealer.

**To reset the AV receiver to its factory defaults, turn it on and, while holding down CBL/SAT, press  $\odot$ ON/STANDBY. "Clear" will appear on the AV receiver's display and the AV receiver will enter standby mode.**

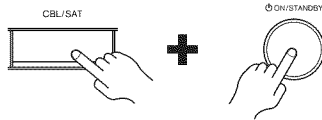

Note that resetting the AV receiver will delete your radio presets and custom settings.

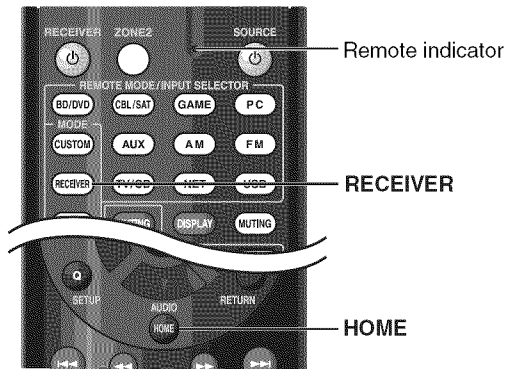

To reset the remote controller to its factory defaults, while holding down **RECEIVER**, press and hold down **HOME** until the remote indicator lights (about 3 seconds). Within 30 seconds, press **RECEIVER** again.

The on-screen menus appear only on a TV that is connected to **HDMI OUT**. If your TV is connected to other video outputs, use the AV receiver's display when changing settings.

## Power

### Can't turn on the AV receiver

Make sure that the power cord is properly plugged into the wall outlet. —

Unplug the power cord from the wall outlet, wait five seconds or more, then plug it in again. —

### The AV receiver turns off unexpectedly

The AV receiver will automatically enter standby mode when Auto Standby has been set and launches. 51

### The AV receiver turns off and after restoring the power, it turns off again

The protection circuit has been activated. Remove the power cord from the wall outlet immediately. Make sure that all speaker cables and input sources are properly connected, and leave the AV receiver with its power cord disconnected for 1 hour. After that, reconnect the power cord and turn the power on. If the AV receiver turns off again, unplug the power cord and contact your Onkyo dealer. Caution: If "CHECK SP WIRE" appears on the AV receiver's display, the speaker cables may be shorting. 13

### WARNING

If smoke, smell or abnormal noise is produced by the AV receiver, unplug the power cord from the wall outlet immediately and contact your Onkyo dealer.

## Audio

### There's no sound, or it's very quiet

Make sure that the digital input source is selected properly. 46

Make sure that all audio connecting plugs are pushed in all the way. 14

Make sure that the inputs and outputs of all components are connected properly. 15-17

Make sure that the polarity of the speaker cables is correct, and that the bare wires are in contact with the metal part of each speaker terminal. 13

Make sure that the input source is properly selected. 20

Make sure that the speaker cables are not shorting. 13

Check the volume. The AV receiver is designed for home theater enjoyment. It has a wide volume range, allowing precise adjustment. —

If the **MUTING** indicator is flashing on the AV receiver's display, press the remote controller's **MUTING** button to unmute the AV receiver. 40

While a pair of headphones is connected to the **PHONES** jack, no sound is output from the speakers. 40

If there's no sound from a DVD player connected to an **HDMI IN**, check the DVD player's output settings, and be sure to select a supported audio format. —

Check the digital audio output setting on the connected device. On some game consoles, such as those that support DVD, the default setting is off. —

With some DVD-Video discs, you need to select an audio output format from a menu. —

If your turntable uses an MC cartridge, you must connect an MC head amp, or an MC transformer. —

Make sure that none of the connecting cables are bent, twisted, or damaged. —

Not all listening modes use all speakers. 33

Specify the speaker distances and adjust the individual speaker levels. 47

If the input signal format is set to "PCM" or "DTS", Set it to "Off". 51



### ■ Only the front speakers produce sound

When the Stereo or Mono listening mode is selected, only the front speakers and subwoofer produce sound. 36

Check the Speaker Configuration. 46

### ■ Only the center speaker produces sound

If you use the Dolby Pro Logic II Movie, Dolby Pro Logic II Music, or Dolby Pro Logic II Game listening mode with a mono source, such as an AM radio station or mono TV program, the sound is concentrated in the center speaker. —

Make sure the speakers are configured correctly. 46

### ■ The surround speakers produce no sound

When the T-D (Theater-Dimensional), Stereo or Mono listening mode is selected, the surround speakers produce no sound. —

Depending on the source and current listening mode, not much sound may be produced by the surround speakers. Try selecting another listening mode. 33

Make sure the speakers are configured correctly. 46

### ■ The center speaker produces no sound

When the Stereo or Mono listening mode is selected, the center speaker produces no sound. —

Make sure the speakers are configured correctly. 46

### ■ The subwoofer produces no sound

When you play source material that contains no information in the LFE channel, the subwoofer produces no sound. —

Make sure the speakers are configured correctly. 46

### ■ There's no sound with a certain signal format

Check the digital audio output setting on the connected device. On some game consoles, such as those that support DVD, the default setting is off. —

With some DVD-Video discs, you need to select an audio output format from a menu. —

Depending on the input signal, some listening modes cannot be selected. 33-37

### ■ Can't select the Pure Audio listening mode

(European and Australian models) The Pure Audio listening mode cannot be selected while Zone 2 is on. —

### ■ Can't get 5.1 playback

Depending on the number of connected speakers, it is not always possible to select all of the listening modes. 33-37

### ■ The speaker volume cannot be set as required

After the volume level of each individual speaker has been adjusted, the maximum volume may be reduced. 47

If the volume level of each individual speaker has been adjusted to high positive values, then the maximum master volume possible may be reduced. Note that the individual speaker volume levels are set automatically after the Audyssey 2EQ® Room Correction and Speaker Setup has been performed. 30, 47

### ■ Noise can be heard

Using cable ties to bundle audio cables with power cords, speaker cables, and the like may degrade the audio performance, so refrain from doing it. —

An audio cable may be picking up interference. Try repositioning your cables. —

### ■ The Late Night function doesn't work

Make sure the source material is Dolby Digital, Dolby Digital Plus, and Dolby TrueHD. 42

### ■ About DTS signals

When DTS program material ends and the DTS bitstream stops, the AV receiver remains in DTS listening mode and the **dts** indicator remains on. This is to prevent noise when you use the pause, fast forward, or fast reverse function on your player. If you switch your player from DTS to PCM, you may not hear any sound because the AV receiver does not switch formats immediately. In such case, you should stop your player for about three seconds and then resume playback. —

With some CD and LD players, you won't be able to playback DTS material properly even though your player is connected to a digital input on the AV receiver. This is usually because the DTS bitstream has been processed (e.g., output level, sampling rate, or frequency response changed) and the AV receiver doesn't recognize it as a genuine DTS signal. In such cases, you may hear noise. —

Playing DTS program material, using the pause, fast forward, or fast reverse function on your player may produce a short audible noise. This is not a malfunction. —

### ■ The beginning of audio received by an HDMI IN can't be heard

Since it takes longer to identify the format of an HDMI signal than it does for other digital audio signals, audio output may not start immediately. —



## Video

### ■ There's no picture

Make sure that all video connecting plugs are pushed in all the way. 14

Make sure that each video component is properly connected. 15, 16

If the video source is connected to a component video input, you must assign that input to an input selector, and your TV must be connected to **COMPONENT VIDEO OUT**. 16, 45

If the video source is connected to a composite video input, your TV must be connected to the corresponding composite video output. 16

If the video source is connected to an HDMI input, you must assign that input to an input selector, and your TV must be connected to **HDMI OUT**. 15, 45

(European and Australian models) While the Pure Audio listening mode is selected, the video circuitry is turned off and only video signals input through **HDMI IN** can be output. 33

On your TV, make sure that the video input to which the AV receiver is connected is selected. —

### ■ There's no picture from a source connected to an HDMI IN

Reliable operation with an HDMI-to-DVI adapter is not guaranteed. In addition, video signals from a PC are not guaranteed. 74

### ■ The on-screen menus don't appear

On your TV, make sure that the video input to which the AV receiver is connected is selected. —

When the AV receiver is not connected to a TV via **HDMI OUT**, on-screen menus are not displayed. —

## Tuner

### ■ Reception is noisy, FM stereo reception is noisy, or the FM STEREO indicator doesn't light

Relocate your antenna. —

Move the AV receiver away from your TV or computer. —

Listen to the station in mono. 27

When listening to an AM station, operating the remote controller may cause noise. —

Passing cars and airplanes can cause interference. —

Concrete walls weaken radio signals. —

If nothing improves the reception, install an outdoor antenna. —

## Remote Controller

### ■ The remote controller doesn't work

Before operating this unit, be sure to press **RECEIVER**. —

Make sure that the batteries are installed with the correct polarity. 5

Install new batteries. Don't mix different types of batteries, or old and new batteries. 5

Make sure that the remote controller is not too far away from the AV receiver, and that there's no obstruction between the remote controller and the AV receiver's remote control sensor. 5

Make sure that the AV receiver is not subjected to direct sunshine or inverter-type fluorescent lights. Relocate if necessary. —

If the AV receiver is installed in a rack or cabinet with colored-glass doors, the remote controller may not work reliably when the doors are closed. —

Make sure you've selected the correct remote controller mode. 11, 59

When using the remote controller to control other manufacturers' AV components, some buttons may not work as expected. —

Make sure you've entered the correct remote control code. 58

Make sure to set the same ID on both the AV receiver and remote controller. 51

### ■ Can't control other components

If it's an Onkyo component, make sure that the **RI** cable and analog audio cable are connected properly. Connecting only an **RI** cable won't be enough. 17

Make sure you've selected the correct remote controller mode. 11, 59

If you've connected an cassette tape deck to the **TV/CD IN** jack, or an **RI Dock** to the **TV/CD IN** or **GAME IN** jacks, for the remote controller to work properly, you must set the input display appropriately. 40

If you cannot operate it, you will need to enter the appropriate remote control code. 58

To control another manufacturer's component, point the remote controller at that component. 58

To control an Onkyo component that's connected via **RI**, point the remote controller at the AV receiver. Be sure to enter the appropriate remote control code first. 58

To control an Onkyo component that's not connected via **RI**, point the remote controller at the component. Be sure to enter the appropriate remote control code first. 59

The entered remote control code may not be correct. If more than one code is listed, try each one. —

## RI Dock for iPod/iPhone

### ■ There's no sound

Make sure your iPod/iPhone is actually playing. —

Make sure your iPod/iPhone is properly inserted in the Dock. —

Make sure the AV receiver is turned on, the correct input source is selected, and the volume is turned up. —

Make sure the plugs are pushed in all the way. —

Try resetting your iPod/iPhone. —





## ■ There's no video

Make sure that your iPod/iPhone model's TV OUT setting is set to On. —

Make sure the correct input is selected on your TV or the AV receiver. —

Some versions of the iPod/iPhone do not output video. —

## ■ The AV receiver's remote controller doesn't control my iPod/iPhone

Make sure your iPod/iPhone is properly inserted in the Dock. If your iPod/iPhone is in a case, it may not connect properly to the Dock. Always remove your iPod/iPhone from the case before inserting it into the Dock. —

The iPod/iPhone cannot be operated while it's displaying the Apple logo. —

Make sure you've selected the right remote mode. 57

When you use the AV receiver's remote controller, point it toward your AV receiver. —

If you still can't control your iPod/iPhone, start playback by pressing your iPod/iPhone model's Play button. Remote operation should then be possible. —

Try resetting your iPod/iPhone. —

Depending on your iPod/iPhone, some buttons may not work as expected. —

## ■ The AV receiver unexpectedly selects my iPod/iPhone as the input source

Always pause iPod/iPhone playback before selecting a different input source. If playback is not paused, the Direct Change function may select your iPod/iPhone as the input source by mistake during the transition between tracks. —

## ■ iPod/iPhone doesn't work properly

Try reconnecting your iPod/iPhone. —

## Zone 2

### ■ There's no sound

Only components connected to analog inputs can be played in Zone 2. —

## Music Server and Internet Radio

### ■ Can't access the server or Internet radio

Check the network connection between the AV receiver and your router or switch. 75

Make sure that your modem and router are properly connected, and make sure they are both turned on. —

Make sure the server is up and running and compatible with the AV receiver. 76

Check "Network Setup". 53

### ■ Playback stops while listening to music files on the server

Make sure your server is compatible with the AV receiver. 76

If you download or copy large files on your computer, playback may be interrupted. Try closing any unused programs, use a more powerful computer, or use a dedicated server. —

If the server is serving large music files to several networked devices simultaneously, the network may become overloaded and playback may be interrupted. Reduce the number of playback devices on the network, upgrade your network, or use a switch instead of a hub. —

### ■ Can't connect to the AV receiver from a Web browser

If you're using DHCP, your router may not always allocate the same IP address to the AV receiver, so if you find that you can't connect to a server or Internet radio station, recheck the AV receiver's IP address on the "Network Setup" screen. 54

Check "Network Setup". 53

## USB Device Playback

### ■ Can't access the music files on a USB device

Make sure the USB device is plugged in properly. —

The AV receiver supports USB devices that support the USB mass storage device class. However, playback may not be possible with some USB devices even if they conform to the USB mass storage device class. 76

USB memory devices with security functions cannot be played. —

## Others

### ■ Standby power consumption

In the following cases, the power consumption in standby mode may reach up to a maximum of 4.2 W: 52, 54

- The "HDMI Ctrl (RIHD)" setting is set to "On". (Depending on the TV status, the AV receiver will enter standby mode as usual.)
- The "HDMI Through" setting is set to other than "Off".
- The "Network Standby" setting is set to "On".

### ■ The sound changes when I connect my headphones

When a pair of headphones is connected, the listening mode is set to Stereo, unless it's already set to Stereo, Mono, Direct, or Pure Audio (European and Australian models). —

### ■ The speaker distance cannot be set as required

The values entered may be automatically adjusted with values best-suited for your home theater. —

### ■ The display doesn't work

The display is turned off when the Pure Audio (European and Australian models) listening mode is selected. —



### ■ How do I change the language of a multiplex source

Use the “**Input Ch (Mux)**” setting in the “**Audio Adjust**” menu to select “**Main**” or “**Sub**”. 48

### ■ The RI functions don't work

To use **RI**, you must make an **RI** connection and an analog audio connection (RCA) between the component and AV receiver, even if they are connected digitally. 17

While Zone 2 is selected, the **RI** functions don't work. 17

### ■ The functions System On/Auto Power On and Direct Change don't work for components connected via RI

These functions don't work when Zone 2 is turned on. 17

### ■ When performing “Automatic Speaker Setup”, the measurement fails and the message “Ambient noise is too high.” is displayed.

This can be caused by a malfunction in your speaker unit. Check if the unit produces normal sounds. —

### ■ The following settings can be made for the composite video inputs

You must use the buttons on the unit to make these settings.

On the AV receiver, press the input selector for the input source that you want to set and the **SETUP** button simultaneously. While holding down the input selector button, press **SETUP** until “**Video ATT :On**” appears on the AV receiver's display. Then, release both buttons. To turn the setting off, repeat the above process so that “**Video ATT :Off**” appears on the AV receiver's display, and release the buttons.

### • Video Attenuation

This setting can be made for the **BD/DVD**, **CBL/SAT**, **GAME**, **PC**, **AUX** or **USB** input.

If you have a game console connected to the composite video input, and the picture isn't very clear, you can attenuate the gain.

**Video ATT :Off**: (default).

**Video ATT :On**: Gain is reduced by 2 dB.

### ■ If the picture on your TV/monitor connected to the HDMI OUT is unstable, try switching the DeepColor function off

To turn off the DeepColor function, simultaneously press the **GAME** and **ON/STANDBY** buttons on the AV receiver. While holding down **GAME**, press **ON/STANDBY** until “**Deep Color:Off**” appears on the AV receiver's display. Then, release both buttons. To reactivate the DeepColor function, repeat the above process until “**Deep Color:On**” appears on the AV receiver's display and release the buttons.

The AV receiver contains a microcomputer for signal processing and control functions. In very rare situations, severe interference, noise from an external source, or static electricity may cause it to lockup. In the unlikely event that this happens, unplug the power cord from the wall outlet, wait at least five seconds, and then plug it back in.

Onkyo is not responsible for damages (such as CD rental fees) due to unsuccessful recordings caused by the unit's malfunction. Before you record important data, make sure that the material will be recorded correctly.

Before disconnecting the power cord from the wall outlet, set the AV receiver to standby.



# Firmware Update

To update the firmware of the AV receiver, you can choose from the following two methods: update via network, or update via USB storage. Choose the one that best suits your environment. Before proceeding with the update, please read the corresponding explanations carefully.

## ■ Update via network

You need a wired Internet connection to update the firmware.

## ■ Update via USB storage (→ page 69)

Please prepare a USB storage device such as a USB flash memory stick. You need at least 32 MB of available space to update the firmware.

### Note

- Check the network connection before updating.
- Do not touch any cable or device connected to the AV receiver during the update process.
- Do not attempt to access the AV receiver from your PC while it is being updated.
- Do not shutdown the power of the AV receiver while it is being updated.
- The storage media in the USB card reader may not work.
- If the USB device is partitioned, each section will be treated as an independent device.
- If the USB device contains a lot of data, the AV receiver may take a while to read it.
- Operation is not guaranteed for all USB devices, which includes the ability to power them.
- Onkyo takes no responsibility whatsoever for the loss or damage of data resulting from the use of a USB device with the AV receiver. Onkyo recommends that you back up your important music files beforehand.
- If you connect a USB hard disk drive to the USB port, Onkyo recommends that you use its AC adapter to power it.
- USB hubs and USB devices with hub functions are not supported. Do not connect your USB device via a USB hub.
- USB devices with security functions are not supported.

### Limitation of liability

The program and accompanying online documentation are furnished to you for use at your own risk. Onkyo will not be liable and you will have no remedy for damages for any claim of any kind whatsoever concerning your use of the program or the accompanying online documentation, regardless of legal theory, and whether arising in tort or contract. In no event will Onkyo be liable to you or any third party for any special, indirect, incidental, or consequential damages of any kind, including, but not limited to, compensation, reimbursement or damages on account of the loss of present or prospective profits, loss of data, or for any other reason whatsoever.

**See the Onkyo web site for latest information.**

## Updating the Firmware via Network

The AV receiver allows you to update the firmware using network connection on the rear panel.

### Note

- Make sure your AV receiver and TV are turned on and an Ethernet cable is connected to the rear panel of the AV receiver.
- Never unplug or turn off the AV receiver while it is being updated.
- Never plug or unplug an HDMI or Ethernet cable during the update process.
- Do not attempt to access the AV receiver from your PC while it is being updated.
- Never unplug the power cord during the update process.
- It takes up to 10 minutes to complete the firmware update.
- The AV receiver will retain all your settings after the update is finished.

## Before Starting

- Set the “HDMI Ctrl (RIHD)” setting to “Off” (→ page 52).
- Turn off the controller device connected via Ethernet cable.
- Turn off Multi Zone if this function is present.
- Stop playback of contents from Internet Radio, iPod/iPhone, USB or servers, etc.

↳ To be continued



## Update Procedure

- 1 Press **RECEIVER** followed by **HOME** on the remote controller.

The Home menu appears on the TV screen.

- 2 Select **“F/W Update”** and press **ENTER**.

Note that the **“F/W Update”** option will be grayed out for a short while after the AV receiver is turned on. Please wait until it becomes operable.

- 3 Select **“Update via NET”** and press **ENTER**.

Note that this option will not be available if there is no firmware file newer than the currently installed version.

- 4 Select **“Update”** and press **ENTER**.

The update process will begin.

During the update process, the on-screen display may disappear depending on the updated program. When this occurs, you can still view the update progress on the AV receiver’s display. The on-screen display will reappear after the update is complete, and upon turning the AV receiver off and on again.

- 5 The message **“Completed!”** appears on the AV receiver’s display, indicating that the update has been completed.

- 6 Turn off the AV receiver using **ON/STANDBY** on the front panel.

Do not use **RECEIVER** on the remote controller. Once turned off, the AV receiver will automatically turn on again.

Congratulations! You now have the latest firmware installed on your Onkyo AV receiver.

## Troubleshooting

### Case 1:

If an error occurs, **“Error!! \*-\*\*\*”** is displayed on the AV receiver’s display. (Alpha-numeric characters on the front display are denoted by asterisks.) Refer to the following table and take appropriate action.

### ■ Errors during an update via network

| Error Code             | Description  |
|------------------------|--|
| *-10, *-20             | The Ethernet cable was not detected. Reconnect the cable properly.   |
| *-11, *-13, *-21, *-28 | Internet connection error. Check the following items: <ul style="list-style-type: none"> <li>• Make sure the IP address, subnet mask, gateway address, and DNS server are configured properly.</li> <li>• Make sure the router is turned on.</li> <li>• Make sure the AV receiver and the router are connected with an Ethernet cable.</li> <li>• Make sure your router is configured properly. See the instruction manual of the router.</li> <li>• If your network allows only one client connection and there is any other device already connected, the AV receiver will not be able to access the network. Consult your Internet Service Provider (ISP).</li> <li>• If your modem does not function as a router, you will need a router. Depending on your network, you may need to configure the proxy server if necessary. See the document provided by your ISP. If you are still unable to access the Internet, the DNS or proxy server may be temporarily down. Contact your ISP.</li> </ul> |
| Others                 | Retry the update procedure from the beginning. If the error persists, please contact Onkyo Support (→ page 70) and provide the error code.   |

### Case 2:

If an error occurs during the update process, disconnect then reconnect the AC power cord and try again.

### Case 3:

If you do not have an Internet connection to the network, please contact Onkyo Support (→ page 70).



## Updating the Firmware via USB

The AV receiver allows you to update the firmware using a USB device.

### Note

- Never unplug or turn off the AV receiver during the update process.
- Never plug or unplug an HDMI cable or a USB device during the update process.
- Never unplug the USB storage device containing the firmware file or the AC power cord during the update process.
- Do not attempt to access the AV receiver from your PC while it is being updated.
- It takes up to 10 minutes to complete the firmware update.
- The AV receiver will retain all your settings after the update is finished.

### Before Starting

- Set the “HDMI Ctrl (RIHD)” setting to “Off” (→ page 52).
- Turn off the controller device connected via Ethernet cable.
- Turn off Multi Zone if this function is present.
- Stop playback of contents from Internet Radio, iPod/iPhone, USB or servers, etc.
- If there is any data in the USB device, remove it first.

## Update Procedure

- 1 Connect a USB device to your PC. If there is any data in the USB device, remove it first.**
- 2 Download the firmware file from the Onkyo web site. The file name is as follows:**  
ONKAVER\*\*\*\*\_\*\*\*\*\*.zip  
**Unzip the downloaded file. The following three files are created:**  
ONKAVER\*\*\*\*\_\*\*\*\*\*.of1  
ONKAVER\*\*\*\*\_\*\*\*\*\*.of2  
ONKAVER\*\*\*\*\_\*\*\*\*\*.of3
- 3 Copy the extracted files to the USB device. Be careful not to copy the zip file.**
- 4 Remove the USB device from your PC and connect it to the USB port on the AV receiver.**
- 5 Make sure the AV receiver and TV are turned on.**  
If the AV receiver is in standby mode, press **⏻ON/STANDBY** on the AV receiver to light up the front display.
- 6 Select the USB input source.**  
“Now Initializing...” appears on the AV receiver’s display and then the name of the USB device is displayed. It takes 20 to 30 seconds to recognize the USB device.
- 7 Press RECEIVER followed by HOME on the remote controller.**  
The Home menu appears on the TV screen.
- 8 Select “F/W Update” and press ENTER.**
- 9 Select “Update via USB” and press ENTER.**  
Note that this option will not be available if there is no firmware file newer than the currently installed version.

- 10 Select “Update” and press ENTER.**

The update process will begin.

During the update process, the on-screen display may disappear depending on the updated program. When this occurs, you can still view the update progress on the AV receiver’s display. The on-screen display will reappear after the update is complete, and upon turning the AV receiver off and on again.

Do not turn off the AV receiver and do not remove the USB device during the update process.

- 11 The message “Completed!” appears on the AV receiver’s display, indicating that the update has been completed.**

**Remove the USB device.**

- 12 Turn off the AV receiver using **⏻ON/STANDBY** on the front panel.**

Do not use **⏻RECEIVER** on the remote controller.

Once turned off, the AV receiver will automatically turn on again.

Congratulations! You now have the latest firmware installed on your Onkyo AV receiver.



## Troubleshooting

### Case 1:

If an error occurs, “**Error!! \*-\*\***” is displayed on the AV receiver’s display. (Alpha-numeric characters on the front display are denoted by asterisks.) Refer to the following table and take appropriate action.

#### ■ Errors during an update via USB

| Error Code | Description   |
|------------|---|
| *-10, *-20 | The USB device was not detected. Make sure the USB flash memory or USB cable is properly connected to the USB port. If the USB storage device has its own power supply, use it to power the USB device.   |
| *-14       | The firmware file was not found in the root folder of the USB device, or the firmware file is for another model. Retry and download the file on the support page of the web site, following the on-site instructions. If the error persists, please contact Onkyo Support and provide the error code. |
| Others     | Retry the update procedure from the beginning. If the error persists, please contact Onkyo Support and provide the error code.  |

### Case 2:

If an error occurs during the update process, disconnect then reconnect the AC power cord and try again.

#### Onkyo Sound & Vision Corporation

2-1, Nisshin-cho, Neyagawa-shi, OSAKA 572-8540, JAPAN  
<http://www.onkyo.com/>

#### The Americas

##### Onkyo U.S.A. Corporation

18 Park Way, Upper Saddle River, N.J. 07458, U.S.A.  
 For Dealer, Service, Order and all other Business Inquiries:  
 Tel: 201-785-2600  
 Fax: 201-785-2650  
 Hours: M-F 9am-5pm ET  
<http://www.us.onkyo.com/>

For Product Support Team Only:

1-800-229-1687  
 Hours: M-F 9am-8pm / Sat-Sun 10am-8pm ET  
<http://www.us.onkyo.com/>

#### Europe

##### Onkyo Europe Electronics GmbH

Liegnitzerstrasse 6, 82194 Groeben Zell, GERMANY  
 Tel: +49-8142-4401-0 Fax: +49-8142-4208-213  
<http://www.eu.onkyo.com/>

#### China, Hong Kong

##### Onkyo China Limited

Unit 1033, 10/F, Star House, No 3, Salisbury Road, Tsim Sha Tsui Kowloon, Hong Kong.  
 Tel: 852-2429-3118 Fax: 852-2428-9039  
<http://www.onkyochina.com>

#### Asia, Oceania, Middle East, Africa

Please contact an Onkyo distributor referring to Onkyo SUPPORT site.

<http://www.intl.onkyo.com/support/firmware/index.html>

The above-mentioned information is subject to change without prior notice. Visit the Onkyo web site for the latest update.



# Connection Tips and Video Signal Path

The AV receiver supports several connection formats for compatibility with a wide range of AV equipment. The format you choose will depend on the formats supported by your components. Use the following sections as a guide.

**The on-screen menus appear only on a TV that is connected to the HDMI OUT. If your TV is connected to other video outputs, use the AV receiver's display when changing settings.**


## Note

- The on-screen menus are displayed when:
  - There is no video input, or
  - The video input is 480p, 576p, 720p, 1080i, or 1080p.

## Video Connection Formats

Video components can be connected by using any one of the following video connection formats: composite video, component video, or HDMI, the latter offering the best picture quality.

When choosing a connection format, bear in mind that the AV receiver doesn't convert between formats, so only outputs of the same format as the input will output the signal.

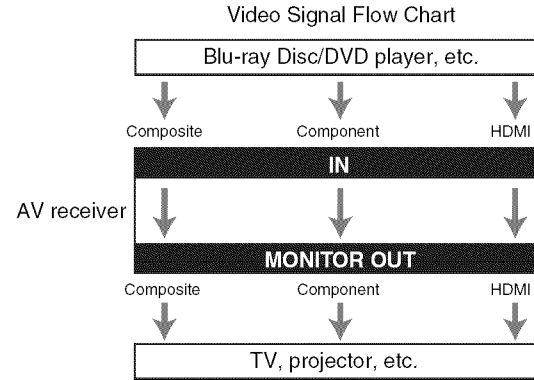


## Audio Connection Formats

Audio components can be connected by using any of the following audio connection formats: analog, optical, coaxial, or HDMI.

When choosing a connection format, bear in mind that the AV receiver does not convert digital input signals for analog line outputs and vice versa.

If signals are present at more than one input, the inputs will be selected automatically in the following order of priority: HDMI, digital, analog.

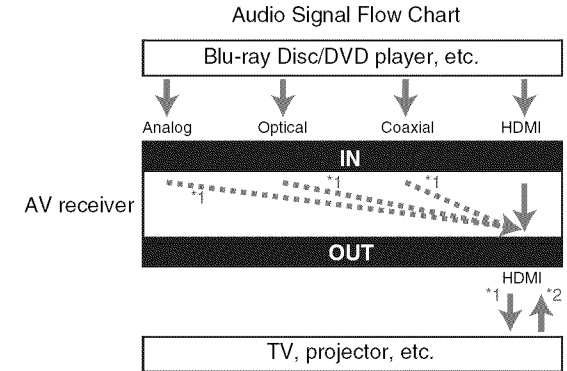

\*1 Depends on the "Audio TV Out" setting (→ page 52).

\*2 This is possible when "Audio Return Ch" is set to "Auto" (→ page 53), the TV/CD input selector is selected, and your TV is ARC capable.

## Tip

- When a signal is input via HDMI and the corresponding input selector is selected, the **HDMI** indicator lights. In the case of an optical or coaxial connection, the **DIGITAL** indicator lights. In the case of an analog connection, neither of the **HDMI** and **DIGITAL** indicators light.



# Using an RIHD-compatible TV, Player, or Recorder

**RIHD**, which stands for Remote Interactive over HDMI, is the name of the system control function found on Onkyo components. The AV receiver can be used with CEC (Consumer Electronics Control), which allows system control over HDMI and is part of the HDMI standard. CEC provides interoperability between various components, however, operation with components other than **RIHD**-compatible components cannot be guaranteed.

## About RIHD-compatible components

The following components are **RIHD**-compatible (As of January 2012).

### ■ TV

- Toshiba TV
- Sharp TV

### ■ Players/Recorders

- Onkyo and Integra **RIHD**-compatible players
- Toshiba players and recorders
- Sharp players and recorders (only when used together with Sharp TV)

\* Models other than those mentioned above may have some interoperability if compatible with CEC, which is part of the HDMI Standard, but operation cannot be guaranteed.

### Note

- For proper linked operations, do not connect more **RIHD**-compatible components than the quantities specified below, to the HDMI input terminal.
  - Blu-ray Disc/DVD players: up to three.
  - Blu-ray Disc/DVD recorders/Digital Video Recorders: up to three.
  - Cable/Satellite Set-top boxes: up to four.
- Do not connect the AV receiver to another AV receiver/AV amplifier via HDMI.
- Proper linked operations are not guaranteed when more **RIHD**-compatible components than the above-mentioned quantities are connected.

## Operations that can be performed with RIHD connection

### ■ For RIHD-compatible TV

The following linked operations are enabled by connecting the AV receiver to an **RIHD**-compatible TV.

- The AV receiver will enter standby mode when the TV is set to standby.
- You can set on the menu screen of the TV to either output the audio from the speakers connected to the AV receiver, or from the speakers of the TV.
- It is possible to output the audio coming from the tuner or auxiliary input of your TV to the speakers of the AV receiver. (A connection such as an optical digital cable or similar is required in addition to the HDMI cable.)
- Input to the AV receiver can be selected with the remote controller of the TV.
- Operations such as volume adjustment or similar for the AV receiver can be performed from the remote controller of the TV.

### ■ For RIHD-compatible players/recorders

The following linked operations are enabled by connecting the AV receiver to an **RIHD**-compatible player/recorder.

- When playback is started on the player/recorder, AV receiver will switch to the HDMI input of the player/recorder that is playing back.
- Operation of the player/recorder is possible using the remote controller supplied with the AV receiver.

\* Depending on the model used, not all operations may be available.

↳ To be continued






## ■ How to connect and setup

### 1 Confirm the connection and settings.

1. Connect the **HDMI OUT** jack to the HDMI input jack of the TV.

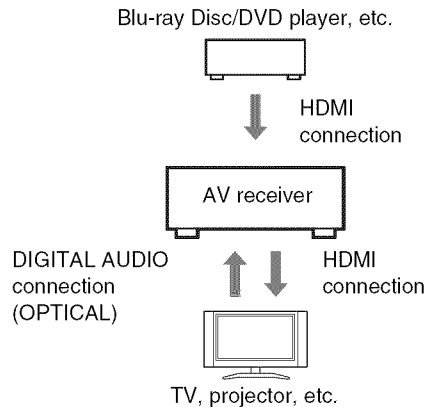

2. Connect the audio output from the TV to the **OPTICAL IN 2** jack of the AV receiver using an optical digital cable.

#### Note

- When the audio return channel (ARC) function is used with an ARC capable TV, this connection is not necessary (→ page 53).
3. Connect the HDMI output of the Blu-ray Disc/DVD player/recorder to the **HDMI IN 1** jack of the AV receiver.

#### Note

- It is necessary to assign the HDMI input when connecting the Blu-ray Disc/DVD player/recorder to other jacks (→ page 45). Do not assign an HDMI IN to the TV/CD selector at this time, otherwise appropriate CEC (Consumer Electronics Control) operation will not be guaranteed.

### 2 Change each item in the “HDMI Setup” menu according to the following settings:

- **HDMI Ctrl (RIHD): On**
- **Audio Return Ch (ARC): Auto**

See details of each setting (→ pages 52, 53).

### 3 Confirm the settings.

1. Turn on the power for all connected components.
2. Turn off the power of the TV, and confirm that the power of the connected components is turned off automatically with the link operation.
3. Turn on the power of the Blu-ray Disc/DVD player/recorder.
4. Start playback on the Blu-ray Disc/DVD player/recorder, and verify the following:
  - The AV receiver automatically turns on, and selects the input to which the Blu-ray Disc/DVD player/recorder is connected.
  - The TV automatically turns on, and selects the input to which the AV receiver is connected.
5. Following the operating instructions of the TV, select “Use the TV speakers” from the menu screen of the TV, and confirm that the audio is output from the speakers of the TV, and not from the speakers connected to the AV receiver.
6. Select “Use the speakers connected from the AV receiver” from the menu screen of the TV, and confirm that the audio is output from the speakers connected to the AV receiver, and not from the TV speakers.

#### Note

- Perform the above operations when you use the AV receiver for the first time, when the settings of each component are changed, when the main power of each component is turned off, when the power cable is disconnected from the power supply, or when there has been a power outage.

### 4 Operate with the remote controller.

For buttons that can be operated (→ page 60).

#### Note

- Audio from DVD-Audio or Super Audio CD may not output from the TV speakers. You will be able to output the audio from the TV speakers by setting the audio output of the DVD player to 2ch PCM. (It may not be possible depending on the player models.)
- Even if you set to output audio on the TV speakers, audio will be output from the speakers connected to the AV receiver when you adjust the volume or switch the input on the AV receiver. To output audio from the TV speakers, redo the corresponding operations on the TV.
- In case of an **RIHD** connection with **RI** and **RI** audio control compatible components, do not connect the **RI** cable at the same time.
- On the TV, when you select anything other than the HDMI jack to which the AV receiver is connected, the input on the AV receiver will be switched to “TV/CD”.
- The AV receiver will automatically power on in conjunction when it determines it to be necessary. Even if the AV receiver is connected to an **RIHD** compatible TV or player/recorder, it will not power on if it is not necessary. It may not power on in conjunction when the TV is set to output audio from the TV.
- Linked functions with the AV receiver may not work depending on the component model connected. In such cases, operate the AV receiver directly.



# About HDMI

Designed to meet the increased demands of digital TV, HDMI (High Definition Multimedia Interface) is a new digital interface standard for connecting TVs, projectors, Blu-ray Disc/DVD players, set-top boxes, and other video components. Until now, several separate video and audio cables have been required to connect AV components. With HDMI, a single cable can carry control signals, digital video, and up to eight channels of digital audio (2-channel PCM, multichannel digital audio, and multichannel PCM).

The HDMI video stream (i.e., video signal) is compatible with DVI (Digital Visual Interface)\*<sup>1</sup>, so TVs and displays with a DVI input can be connected by using an HDMI-to-DVI adapter cable. (This may not work with some TVs and displays, resulting in no picture.)

The AV receiver uses HDCP (High-bandwidth Digital Content Protection)\*<sup>2</sup>, so only HDCP-compatible components can display the picture.

The AV receiver's HDMI interface is based on the following:

Audio Return Channel, 3D, x.v.Color, DeepColor, Lip Sync, DTS-HD Master Audio, DTS-HD High Resolution Audio, Dolby TrueHD, Dolby Digital Plus, DSD and Multichannel PCM.

## Supported Audio Formats

- 2-channel linear PCM (32–192 kHz, 16/20/24 bit)
- Multichannel linear PCM (up to 7.1 ch, 32–192 kHz, 16/20/24 bit)
- Bitstream (DSD, Dolby Digital, Dolby Digital Plus, Dolby TrueHD, DTS, DTS-HD High Resolution Audio, DTS-HD Master Audio)

Your Blu-ray Disc/DVD player must also support HDMI output of the above audio formats.

## About Copyright Protection

The AV receiver supports HDCP (High-bandwidth Digital Content Protection)\*<sup>2</sup>, a copy-protection system for digital video signals. Other devices connected to the AV receiver via HDMI must also support HDCP.

\*<sup>1</sup> DVI (Digital Visual Interface): The digital display interface standard set by the DDWG\*<sup>3</sup> in 1999.

\*<sup>2</sup> HDCP (High-bandwidth Digital Content Protection): The video encryption technology developed by Intel for HDMI/DVI. It's designed to protect video content and requires a HDCP-compatible device to display the encrypted video.

\*<sup>3</sup> DDWG (Digital Display Working Group): Lead by Intel, Compaq, Fujitsu, Hewlett Packard, IBM, NEC, and Silicon Image, this open industry group's objective is to address the industry's requirements for a digital connectivity specification for high-performance PCs and digital displays.

### Note


- The HDMI video stream is compatible with DVI (Digital Visual Interface), so TVs and displays with a DVI input can be connected by using an HDMI-to-DVI adapter cable. (Note that DVI connections only carry video, so you'll need to make a separate connection for audio.) However, reliable operation with such an adapter is not guaranteed. In addition, video signals from a PC are not supported.
- The HDMI audio signal (sampling rate, bit length, etc.) may be restricted by the connected source component. If the picture is poor or there's no sound from a component connected via HDMI, check its setup. Refer to the connected component's instruction manual for details.



# Network/USB Features

## Connecting to the Network

The following diagram shows how you can connect the AV receiver to your home network. In this example, it's connected to a LAN port on a router, which has a 4-port 100Base-TX switch built-in.

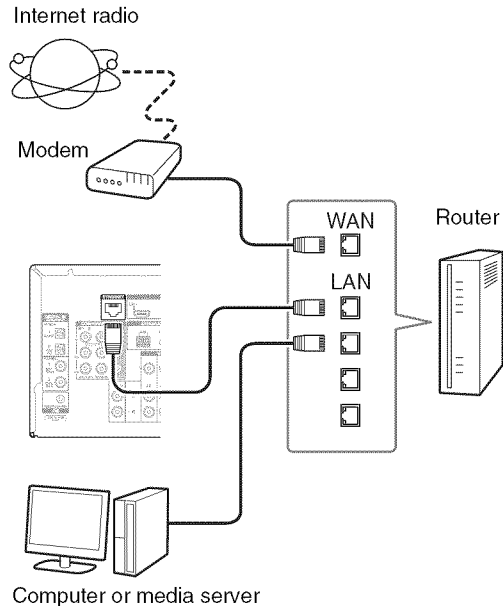

## Network Requirements

### ■ Ethernet Network

For the best results, a 100Base-TX switched Ethernet network is recommended. Although it's possible to play music on a computer that's connected to the network wirelessly, playback may be unreliable, so it is recommended to use wired connections.

### ■ Ethernet Router

A router manages the network, data-routing and supplying of IP addresses. Your router must support the following:

- NAT (Network Address Translation). NAT allows several networked computers to access the Internet simultaneously via a single Internet connection. The AV receiver needs Internet access for Internet radio.
- DHCP (Dynamic Host Configuration Protocol). DHCP supplies IP addresses to the network devices, allowing them to configure themselves automatically.
- A router with a built-in 100Base-TX switch is recommended.

Some routers have a built-in modem, and some Internet Service Providers (ISP) require you to use specific routers. Please consult your ISP or computer dealer if you're unsure.

### ■ CAT5 Ethernet cable

Use a shielded CAT5 Ethernet cable (straight-type) to connect the AV receiver to your home network.

### ■ Internet Access (for Internet radio)

To receive Internet radio, your Ethernet network must have Internet access. A narrowband Internet connection (e.g., 56K modem, ISDN) will not provide satisfactory results, so a broadband connection is strongly recommended (e.g., cable modem, xDSL modem, etc). Please consult your ISP or computer dealer if you're unsure.

### Note

- To receive Internet radio with the AV receiver, your broadband Internet connection must be working and able to access the Web.

Consult your ISP if you have any problems with your Internet connection.

- The AV receiver uses DHCP to configure its network settings automatically. If you want to configure these settings manually, see "Network Setup" (→ page 53).
- The AV receiver does not support PPPoE settings, so if you have a PPPoE-type Internet connection, you must use a PPPoE-compatible router.
- Depending on your ISP, you may need to specify a proxy server to use Internet radio. If your computer is configured to use a proxy server, use the same settings for the AV receiver (→ page 54).



## Server Requirements

### ■ Server playback

The AV receiver can play digital music files stored on a computer or media server and supports the following technologies:

- Windows Media Player 11
- Windows Media Player 12
- Windows Media Connect 2.0
- DLNA-certified media server

If the operating system of your computer is Windows Vista, Windows Media Player 11 is already installed. Windows Media Player 11 for Windows XP can be downloaded for free from the Microsoft web site.

- The computer or media server must be on the same network as the AV receiver.
- Up to 20,000 folders can be displayed, and folders may be nested up to 16 levels deep.

### Note

- Depending on the media server, the AV receiver may not recognize it, or may not be able to play its music files.

### Minimum system requirements for Windows Media Player 11 on Windows XP

#### Operating system

Windows XP Home Edition (SP2), Windows XP Professional (SP2), Windows XP Tablet PC Edition (SP2), Update Rollup 2 for Windows XP Media Center Edition 2005 (KB900325), October 2006 Update Rollup for Windows XP Media Center Edition (KB925766)

**Processor:** 233 MHz Intel Pentium II, Advanced Micro Devices (AMD), etc.

**Memory:** 64 MB

**Hard disk:** 200 MB of free space

**Drive:** CD or DVD drive

**Modem:** 28.8 kbps

**Sound card:** 16-bit sound card

**Monitor:** Super VGA (800 x 600)

**Video card:** 64 MB VRAM, DirectX 9.0b

**Software:** Microsoft ActiveSync (only when using a Windows Mobile-based Pocket PC or smartphone)

**Web browser:** Microsoft Internet Explorer 6 or Netscape 7.1

### ■ Remote playback

- Windows Media Player 12
- DLNA-certified (within DLNA Interoperability Guidelines version 1.5) media server or controller device. The setting varies depending on the media server or controller devices. Refer to your device's instruction manual for details.

If the operating system of your personal computer is Windows 7, Windows Media Player 12 is already installed. For more information, see the Microsoft web site.

## USB Device Requirements

- USB mass storage device class (but not always guaranteed).
- FAT16 or FAT32 file system format.
- If the storage device has been partitioned, each section will be treated as an independent device.
- Up to 20,000 folders can be displayed, and folders may be nested up to 16 levels deep.
- USB hubs and USB devices with hub functions are not supported.

### Note

- If the media you connect is not supported, the message “No Storage” will be displayed.
- If you connect a USB hard disk drive to the AV receiver's **USB** port, we recommend that you use its AC adapter to power it.
- The AV receiver supports USB MP3 players that support the USB Mass Storage Class standard, which allows USB devices to be connected to computers without the need for special drivers or software. Note that not all USB MP3 players support the USB Mass Storage Class standard. Refer to your USB MP3 player's instruction manual for details.
- Protected WMA music files on an MP3 player cannot be played.
- Onkyo accepts no responsibility whatsoever for the loss or damage to data stored on a USB device when that device is used with the AV receiver. We recommend that you back up your important music files beforehand.
- MP3 players containing music files that are managed with special music software are not supported.
- Operation is not guaranteed for all USB devices, which includes the ability to power them.
- Do not connect your USB device via a USB hub. The USB device must be connected directly to the AV receiver's **USB** port.
- If the USB device contains a lot of data, the AV receiver may take a while to read it.
- USB devices with security functions cannot be played.



## Supported Audio File Formats

For server playback and playback from a USB device, the AV receiver supports the following music file formats. Variable bit-rate (VBR) files are supported. However, playback times may not display correctly.

### Note

- With remote playback, the AV receiver does not support the following music file formats: FLAC and Ogg Vorbis.
- In the case of server playback, the above-mentioned file formats may not be played depending on the server type.

### MP3 (.mp3 or .MP3)

- MP3 files must be MPEG-1/MPEG-2 Audio Layer 3 format with sampling rates of 8 kHz, 11.025 kHz, 12 kHz, 16 kHz, 22.05 kHz, 24 kHz, 32 kHz, 44.1 kHz, 48 kHz and bitrates of between 8 kbps and 320 kbps. Incompatible files cannot be played.

### WMA (.wma or .WMA)

WMA stands for Windows Media Audio and is an audio compression technology developed by Microsoft Corporation. Audio can be encoded in WMA format by using Windows Media® Player.

- WMA files must have the copyright option turned off.
- Sampling rates of 8 kHz, 11.025 kHz, 12 kHz, 16 kHz, 22.05 kHz, 24 kHz, 32 kHz, 44.1 kHz, 48 kHz, bitrates of between 5 kbps and 320 kbps, and WMA DRM are supported.
- WMA Pro/Voice formats are not supported.

### WMA Lossless (.wma or .WMA)

- Sampling rates of 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz are supported.
- Quantization bit: 16 bit, 24 bit

### WAV (.wav or .WAV)

WAV files contain uncompressed PCM digital audio.

- Sampling rates of 8 kHz, 11.025 kHz, 12 kHz, 16 kHz, 22.05 kHz, 24 kHz, 32 kHz, 44.1 kHz, 48 kHz, 64 kHz, 88.2 kHz, 96 kHz, 176.4 kHz and 192 kHz are supported.
- Quantization bit: 8 bit, 16 bit, 24 bit

### AAC

(.aac/.m4a/.mp4/.3gp/.3g2/.AAC/.M4A/.MP4/.3GP or .3G2)

AAC stands for MPEG-2/MPEG-4 Audio.

- Sampling rates of 8 kHz, 11.025 kHz, 12 kHz, 16 kHz, 22.05 kHz, 24 kHz, 32 kHz, 44.1 kHz, 48 kHz, 64 kHz, 88.2 kHz, 96 kHz and bitrates of between 8 kbps and 320 kbps are supported.

### FLAC (.flac or .FLAC)

FLAC is a file format for lossless audio data compression.

- Sampling rates of 8 kHz, 11.025 kHz, 12 kHz, 16 kHz, 22.05 kHz, 24 kHz, 32 kHz, 44.1 kHz, 48 kHz, 64 kHz, 88.2 kHz, 96 kHz, 176.4 kHz and 192 kHz are supported.
- Quantization bit: 8 bit, 16 bit, 24 bit

### Ogg Vorbis (.ogg or .OGG)

- Sampling rates of 8 kHz, 11.025 kHz, 12 kHz, 16 kHz, 22.05 kHz, 24 kHz, 32 kHz, 44.1 kHz, 48 kHz and bitrates of between 48 kbps and 500 kbps are supported. Incompatible files cannot be played.

### LPCM (Linear PCM)

- Sampling rates of 8 kHz, 11.025 kHz, 12 kHz, 16 kHz, 22.05 kHz, 24 kHz, 32 kHz, 44.1 kHz, 48 kHz, 64 kHz, 88.2 kHz, 96 kHz, 176.4 kHz and 192 kHz are supported.
- Quantization bit: 8 bit, 16 bit, 24 bit

\* Only for playback via network.

## About DLNA

The Digital Living Network Alliance is an international, cross-industry collaboration. Members of DLNA develop a concept of wired and wireless interoperable networks where digital content such as photos, music, and videos can be shared through consumer electronics, personal computers, and mobile devices in and beyond the home. The AV receiver complies with the DLNA Interoperability Guidelines version 1.5.



# License and Trademark Information

“x.v.Color” is a trademark of Sony Corporation.



Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380; 6,226,616; 6,487,535; 7,212,872; 7,333,929; 7,392,195; 7,272,567 & other U.S. and worldwide patents issued & pending. DTS-HD, the Symbol, & DTS-HD and the Symbol together are registered trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.



Manufactured under license from Dolby Laboratories. Dolby, Pro Logic and the double-D symbol are trademarks of Dolby Laboratories.

Music Optimizer™ is a trademark of Onkyo Corporation.



“HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.”



InstaPrevue and the InstaPrevue logo are trademarks or registered trademarks of Silicon Image, Inc. in the United States and other countries.



iPhone, iPod, iPod classic, iPod nano, iPod shuffle, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

“Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

Apple TV is a trademark of Apple Inc., registered in the U.S. and other countries.



Manufactured under license from Audyssey Laboratories™, Inc. U.S. and foreign patents pending. Audyssey 2EQ®, Audyssey Dynamic EQ® and Audyssey Dynamic Volume® are registered trademarks of Audyssey Laboratories, Inc.

“DLNA®, the DLNA Logo and DLNA CERTIFIED™ are trademarks, service marks, or certification marks of the Digital Living Network Alliance.”

Windows and the Windows logo are trademarks of the Microsoft group of companies.



# Specifications

## Amplifier Section

|  |   |
|--|---|
| <b>Rated Output Power</b>                          | (North American)  |
| All channels:                                      | <b>80 watts minimum continuous power per channel, 8 ohm loads, 2 channels driven from 20 Hz to 20 kHz, with a maximum total harmonic distortion of 0.7% (FTC)</b><br>130 watts minimum continuous power per channel, 6 ohm loads, 1 channel driven at 1 kHz, with a maximum total harmonic distortion of 1%<br>(Others)<br>5 ch × 130 W at 6 ohms, 1 kHz, 1 ch driven of 1% (IEC) |
| <b>Dynamic Power*</b>                              |   |
| * IEC60268-Short-term maximum output power         |   |
|  | 180 W (3 Ω, Front)  |
|  | 160 W (4 Ω, Front)  |
|  | 100 W (8 Ω, Front)  |
| <b>THD+N (Total Harmonic Distortion+Noise)</b>     | 0.08% (20 Hz - 20 kHz, half power)  |
| <b>Damping Factor</b>                              | 60 (Front, 1 kHz, 8 Ω)  |
| <b>Input Sensitivity and Impedance (Unbalance)</b> | 200 mV/47 kΩ (LINE)   |
| <b>Rated RCA Output Level and Impedance</b>        | 200 mV/2.2 kΩ (LINE OUT)  |
| <b>Maximum RCA Output Level and Impedance</b>      | 2 V/2.2 kΩ (LINE OUT)   |
| <b>Frequency Response</b>                          | 5 Hz - 100 kHz/+1 dB, -3 dB (DSP bypass)  |
| <b>Tone Control Characteristics</b>                | ±10 dB, 50 Hz (BASS)<br>±10 dB, 20 kHz (TREBLE)   |
| <b>Signal to Noise Ratio</b>                       | 100 dB (LINE, IHF-A)  |
| <b>Speaker Impedance</b>                           | 6 Ω - 16 Ω  |

## Video Section

|   |  |
|---|--|
| <b>Input Sensitivity/Output Level and Impedance</b> | 1 Vp-p/75 Ω (Component Y)<br>0.7 Vp-p/75 Ω (Component Pb/Cb, Pr/Cr)<br>1 Vp-p/75 Ω (Composite) |
| <b>Component Video Frequency Response</b>           | 5 Hz - 100 MHz/+0 dB, -3 dB  |

## Tuner Section

|                                  |   |
|----------------------------------|---|
| <b>FM Tuning Frequency Range</b> | (North American) 87.5 MHz - 107.9 MHz<br>(Others) 87.5 MHz - 108.0 MHz, RDS |
| <b>AM Tuning Frequency Range</b> | 522/530 kHz - 1611/1710 kHz   |
| <b>Preset Channel</b>            | 40  |

## General

|                                   |   |
|-----------------------------------|---|
| <b>Power Supply</b>               | (North American)<br>AC 120 V, 60 Hz<br>(European and Australian)<br>AC 230 V, 50 Hz       |
| <b>Power Consumption</b>          | (North American) 4.2 A<br>(European and Australian) 400 W                                 |
| <b>No-sound Power Consumption</b> | 55 W  |
| <b>Stand-by Power Consumption</b> | (North American) 0.1 W<br>(Others) 0.2 W  |
| <b>Dimensions (W × H × D)</b>     | 435 mm × 173.5 mm × 328 mm<br>17-1/8" × 6-13/16" × 12-15/16"                              |
| <b>Weight</b>                     | (North American)<br>8.6 kg (19.0 lbs.)<br>(European and Australian)<br>9.0 kg (19.8 lbs.) |

## HDMI

|                         |   |
|-------------------------|---|
| <b>Input</b>            | IN 1, IN 2, IN 3, IN 4, IN 5, IN 6                                  |
| <b>Output</b>           | OUT   |
| <b>Video Resolution</b> | 1080p   |
| <b>Audio Format</b>     | Dolby True HD, DTS-HD Master Audio, DVD-Audio, DSD                  |
| <b>Supported</b>        | 3D, Audio Return Channel, DeepColor, x.v.Color, LipSync, CEC (RIHD) |

## Video Inputs

|                  |                                |
|------------------|--------------------------------|
| <b>Component</b> | IN 1, IN 2                     |
| <b>Composite</b> | BD/DVD, CBL/SAT, GAME, PC, AUX |

## Video Outputs

|                  |             |
|------------------|-------------|
| <b>Component</b> | OUT         |
| <b>Composite</b> | MONITOR OUT |

## Audio Inputs

|                |                                       |
|----------------|---------------------------------------|
| <b>Digital</b> | Optical: 2<br>Coaxial: 2              |
| <b>Analog</b>  | BD/DVD, CBL/SAT, GAME, PC, TV/CD, AUX |

## Audio Outputs

|                             |                        |
|-----------------------------|------------------------|
| <b>Analog</b>               | ZONE2 LINE OUT         |
| <b>Subwoofer Pre Output</b> | 1                      |
| <b>Speaker Outputs</b>      | Main (L, R, C, SL, SR) |
| <b>Phones</b>               | 1 (6.3 φ)              |

## Others

|                  |           |
|------------------|-----------|
| <b>Setup Mic</b> | 1         |
| <b>RI</b>        | 1         |
| <b>USB</b>       | 1 (Front) |
| <b>Ethernet</b>  | 1         |

Specifications and features are subject to change without notice.



# ONKYO

## Onkyo Sound & Vision Corporation

2-1, Nisshin-cho, Neyagawa-shi, OSAKA 572-8540, JAPAN  
Tel: 072-831-8023 Fax: 072-831-8163  
<http://www.onkyo.com/>

## Onkyo U.S.A. Corporation

18 Park Way, Upper Saddle River, N.J. 07458, U.S.A.  
Tel: 800-229-1687, 201-785-2600 Fax: 201-785-2650  
<http://www.us.onkyo.com/>

## Onkyo Europe Electronics GmbH

Liegnitzerstrasse 6, 82194 Groebenzell, GERMANY  
Tel: +49-8142-4401-0 Fax: +49-8142-4208-213  
<http://www.eu.onkyo.com/>

## Onkyo Europe Electronics GmbH (UK Branch)

The Coach House 81A High Street, Marlow, Buckinghamshire, SL7 1AB, UK  
Tel: +44-(0)1628-473-350 Fax: +44-(0)1628-401-700

## Onkyo China Limited

Unit 1033, 10/F, Star House, No 3, Salisbury Road, Tsim Sha Tsui Kowloon, Hong Kong.  
Tel: 852-2429-3118 Fax: 852-2428-9039  
<http://www.onkyochina.com/>

## Onkyo China PRC

1301, 555 Tower, No.555 West NanJin Road, Jin an, Shanghai,  
China 200041, Tel: 86-21-52131366 Fax: 86-21-52130396  
<http://www.cn.onkyo.com/>

SN 29401098EN-A

(C) Copyright 2012 Onkyo Sound & Vision Corporation Japan. All rights reserved.

Y1203-2




\* 2 9 4 0 1 0 9 8 E N - A \*




### Supplied Accessories

Make sure you have the following accessories.


#### Front speakers (SKF-680)

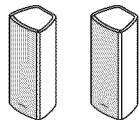

Front speakers

 


Speaker cables 11 ft. (3.5 m)

 


20 rubber stoppers\*1  
(For Front/Center/  
Surround speakers)

\*1 Configuration of the rubber stoppers may be different from the figure, such as being 2 sheets instead of 1 sheet, but the total number will be same.

#### Center speaker (SKC-680)

 


Center speaker

 


Speaker cable 10 ft. (3.0 m)

#### Surround speakers (SKR-680)

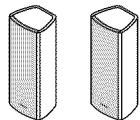


Surround speakers

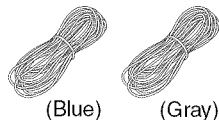


Speaker cables 26 ft. (8.0 m)


#### Powered subwoofer (SKW-791)

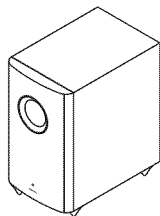

Subwoofer

 


4 floor pads

 

RCA cable 10 ft. (3.0 m)


### Part Names

 

Keyhole slot

Speaker terminals

SKF-680/SKR-680

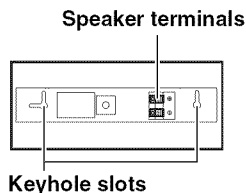

Speaker terminals


SKC-680

Keyhole slots

### Caution

- The front grilles are not designed to be removed so do not attempt to remove them forcibly, as this will damage them.


### Front

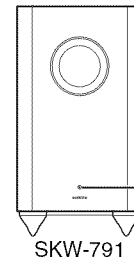

#### Status indicator

Off: Subwoofer in standby mode or disconnected from power source  
Blue: Subwoofer on  
With the Auto Standby function, the SKW-791 automatically turns on when an input signal is detected in standby mode. When there's no input signal for a while, the SKW-791 automatically enters standby mode.

### Rear

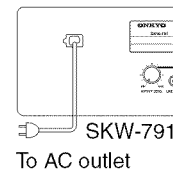

#### OUTPUT LEVEL control

This control is used to adjust the volume of the subwoofer.

#### LINE INPUT

This RCA input should be connected to the subwoofer pre out on your AV receiver with supplied RCA cable.

### Note



- The Auto Standby function turns the subwoofer on when the input signal exceeds a certain level. If the Auto Standby function does not work reliably, try slightly increasing or decreasing the subwoofer output level on your receiver.



## Before Using the Home Theater Speaker Package


### Using the Rubber Stoppers for a More Stable Platform

We recommend using the supplied rubber stoppers to achieve the best possible sound from your speakers. The rubber stoppers prevent the speakers from moving, providing a more stable platform.

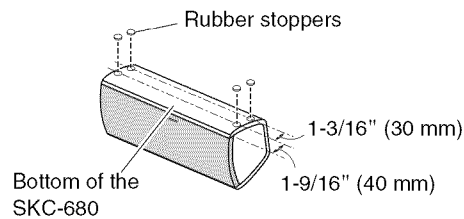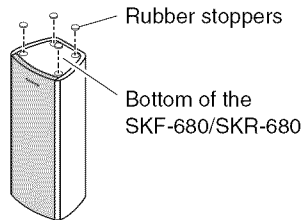

### Using the Floor Pads for Subwoofer

If the subwoofer is placed on a hard floor (wood, vinyl, tile, etc.) and playback is very loud, the subwoofer's feet may damage the flooring. To prevent this, place the supplied pads underneath the subwoofer's feet. The pads also provide a stable base for the subwoofer.

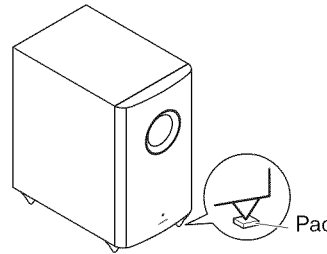


### Setting the Subwoofer Level

To set the level of the subwoofer, use the OUTPUT LEVEL control. Set it so that bass sounds are evenly balanced with the treble sounds from the other speakers. Because our ears are less sensitive to very low bass sounds, there's a temptation to set the level of the subwoofer too high. As a rule of thumb, set the subwoofer level to what you think is the optimal level, and then back it off slightly.




### Wall Mounting

To mount the front/surround speakers vertically, use the keyhole slot shown to hang each speaker on a screw that's securely screwed into the wall.

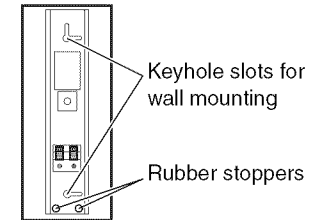

SKF-680/SKR-680

To mount the center speaker horizontally, use the two keyhole slots shown to hang the speaker on two screws that are securely screwed into the wall.

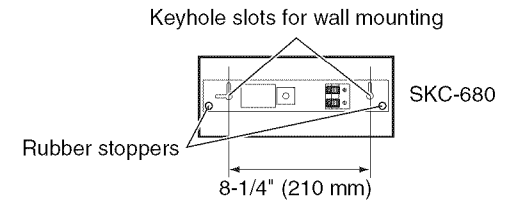


#### Tip

- If the center speaker is tilted, loosen the screw on the declined side to move upward so that the speaker could be adjusted vertically.





### Caution

- A mounting screw's ability to support a speaker depends on how well it's anchored to the wall. If you have hollow walls, screw each mounting screw into a stud. If there are no studs, or the walls are solid, use suitable wall anchors. Use screws with a head diameter of 5/16" (9 mm) or less and a shank diameter of 1/8" (4 mm) or less. With hollow walls, use a cable/pipe detector to check for any power cables or water pipes before making any holes.
- Leave a gap of between 5/32" (4 mm) and 5/16" (8 mm) between the wall and the base of the screw head, as shown (We recommend that you consult a home installation professional).

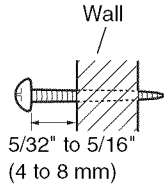

### ④ Subwoofer (SKW-791)

The subwoofer handles the bass sounds of the LFE (Low-Frequency Effects) channel and bass from the satellite speakers when a crossover is specified. The volume and quality of the bass output from your subwoofer will depend on its position, the shape of your listening room, and your listening position. In general, a good bass sound can be obtained by installing the subwoofer in a front corner, or at one-third the way along the front wall, as shown.

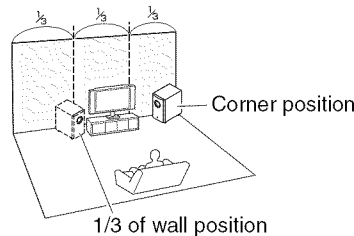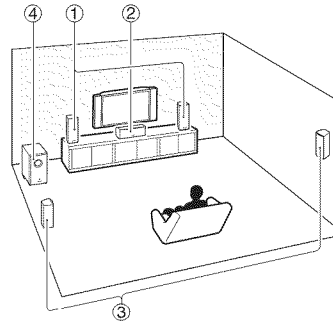

## Enjoying Home Theater

The Home Theater means that you can enjoy surround sound with a real sense of movement in your own home — just like being in a movie theater or concert hall.

### ① Front left and right speakers (SKF-680)

They should be positioned facing the listener at about ear level, and equally spaced from the TV. Angle them inward slightly so as to create a triangle, with the listener at the apex.

### ② Center speaker (SKC-680)

Position it close to your TV (preferably on top) facing forward at about ear level, or at the same height as the front left and right speakers.

### ③ Surround left and right speakers (SKR-680)

Position them at the sides of the listener, or slightly behind, about 2 to 3 feet (60 to 100 cm) above ear level. Ideally they should be equally spaced from the listener.

## Connecting the Speakers

### Speaker Connection Precautions

Read the following before connecting your speakers:


- Turn off your receiver before making any connections.

- Pay close attention to speaker wiring polarity.

Connect positive (+) terminals to only positive (+) terminals, and negative (-) terminals to only negative (-) terminals. If the speakers are wired incorrectly, the sound will be out of phase and will sound unnatural.



- Be careful not to short the positive and negative wires. Doing so may damage your amp.

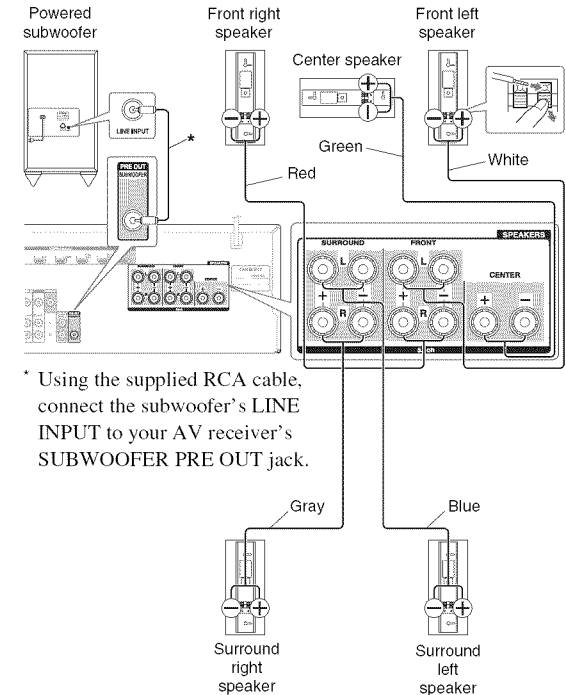

\* Using the supplied RCA cable, connect the subwoofer's LINE INPUT to your AV receiver's SUBWOOFER PRE OUT jack.

### Caution

- With other audio-video components, connect the subwoofer's LINE INPUT to the subwoofer pre out jack of your equipment. Never plug any kind of musical instrument to the subwoofer.



## Specifications

### ■ Powered Subwoofer (SKW-791)

|                             |   |
|-----------------------------|---|
| Type                        | Bass-reflex   |
| Input sensitivity/Impedance | 540 mV/20 kΩ  |
| Rated output Power (FTC)    | 120 watts minimum continuous power, 4 ohms, driven at 100 Hz with a maximum total harmonic distortion of 1% |
| Frequency response          | 25 Hz to 150 Hz   |
| Cabinet capacity            | 1.3 cubic feet (37 L)   |
| Dimensions (W × H × D)      | 10-13/16" × 19-15/16" × 17-1/4"<br>275 mm × 507 mm × 438 mm<br>(incl. projection)                           |
| Weight                      | 21.4 lbs. (9.7 kg)  |
| Audio Input                 | 1 (RCA analog mono)   |
| Drivers unit                | 10" (25 cm) Cone Woofer   |
| Power supply                | AC 120 V, 60 Hz   |
| Power consumption           | 35 W  |
| Other                       | Auto Standby function<br>Non-magnetic shielding   |

### ■ Front Speakers (SKF-680)

|                        |   |
|------------------------|---|
| Type                   | 2 Way Closed Box  |
| Impedance              | 6 Ω   |
| Maximum input power    | 130 W   |
| Sensitivity            | 81 dB/W/m   |
| Frequency response     | 60 Hz to 50 kHz   |
| Crossover frequency    | 4 kHz   |
| Cabinet capacity       | 0.074 cubic feet (2.1 L)  |
| Dimensions (W × H × D) | 4-3/4" × 11-7/16" × 4"<br>120 mm × 290 mm × 102 mm<br>(incl. grille and projection) |
| Weight                 | 2.4 lbs. (1.1 kg)   |
| Drivers unit           | 4" (10 cm) Cone Woofer<br>1" (2.5 cm) Balanced Dome                                 |
| Terminal               | Spring type color coded   |
| Keyhole slot           | Available   |
| Grille                 | Fixed   |
| Insert nut             | Available (1/4-20UNC)   |
| Other                  | Non-magnetic shielding  |

### ■ Center Speaker (SKC-680)

|                        |  |
|------------------------|--|
| Type                   | 2 Way Closed Box   |
| Impedance              | 6 Ω  |
| Maximum input power    | 130 W  |
| Sensitivity            | 81 dB/W/m  |
| Frequency response     | 60 Hz to 50 kHz  |
| Crossover frequency    | 4 kHz  |
| Cabinet capacity       | 0.074 cubic feet (2.1 L)   |
| Dimensions (W × H × D) | 11-7/16" × 4-13/16" × 4-7/16"<br>290 mm × 122 mm × 113 mm<br>(incl. grille and projection) |
| Weight                 | 2.4 lbs. (1.1 kg)  |
| Drivers unit           | 4" (10 cm) Cone Woofer<br>1" (2.5 cm) Balanced Dome  |
| Terminal               | Spring type color coded  |
| Keyhole slot           | Available  |
| Grille                 | Fixed  |
| Insert nut             | Available (1/4-20UNC)  |
| Other                  | Non-magnetic shielding   |

### ■ Surround Speakers (SKR-680)

|                        |   |
|------------------------|---|
| Type                   | Full Range Closed Box   |
| Impedance              | 6 Ω   |
| Maximum input power    | 130 W   |
| Sensitivity            | 79 dB/W/m   |
| Frequency response     | 90 Hz to 20 kHz   |
| Cabinet capacity       | 0.074 cubic feet (2.1 L)  |
| Dimensions (W × H × D) | 4-3/4" × 11-7/16" × 4"<br>120 mm × 290 mm × 102 mm<br>(incl. grille and projection) |
| Weight                 | 1.8 lbs. (0.8 kg)   |
| Drivers unit           | 3-1/4" (8 cm) Cone Speaker  |
| Terminal               | Spring type color coded   |
| Keyhole slot           | Available   |
| Grille                 | Fixed   |
| Insert nut             | Available (1/4-20UNC)   |
| Other                  | Non-magnetic shielding  |

Specifications and appearance are subject to change without prior notice.

### Note

#### For non-magnetic shielded speakers:

 
Try moving the speakers away from your TV or monitor. If discoloration should occur, turn off your TV or monitor, wait 15 to 30 minutes, and then turn it back on again. This normally activates the degaussing function, which neutralizes the magnetic field, thereby removing any discoloration effects.




## Accessoires fournis

Assurez-vous que le carton contient bien les accessoires suivants.


### Enceintes avant (SKF-680)



Enceintes avant

 

 
Câbles d'enceinte 3,5 m  
(Blanc) (Rouge)




20 bouchons de caoutchouc\*1  
(Pour enceintes avant/centrale/surround)

\*1 La configuration des bouchons de caoutchouc peut être différente de la figure, en comportant par exemple 2 feuilles au lieu d'une, mais leur nombre total est identique.

### Enceinte centrale (SKC-680)

 


Enceinte centrale

 


Câble d'enceinte 3,0 m  
(Vert)

### Enceintes surround (SKR-680)

 


Enceintes surround

 


Câbles d'enceinte 8,0 m  
(Bleu) (Gris)


### Subwoofer amplifié (SKW-791)

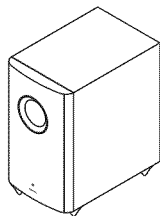

Subwoofer

 


Câble RCA 3,0 m

 

4 tampons de protection

### Noms des pièces

 


Encoche en trou de serrure

Bornes d'enceinte

SKF-680/SKR-680

 Bornes d'enceinte




SKC-680

Encoches en trou de serrure

### Mise en garde

- Les grilles avant ne sont pas faites pour être retirées, aussi n'essayez pas de les retirer de force, car ceci les endommagera.

### Avant

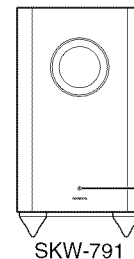


SKW-791

#### Indicateur d'état

Off : subwoofer en mode veille ou débranché de la source d'alimentation

Bleu : subwoofer allumé  
Grâce à la fonction de mise en veille automatique, la SKW-791 s'allume automatiquement lorsqu'un signal d'entrée est détecté en mode Veille. Lorsqu'aucun signal d'entrée n'est transmis pendant un certain temps, la SKW-791 passe automatiquement en mode Veille.

### Arrière

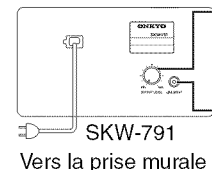

SKW-791

Vers la prise murale

#### Bouton OUTPUT LEVEL

Ce bouton sert à régler le volume sonore du subwoofer.

#### LINE INPUT

Cette entrée RCA doit être branchée à la pré-sortie du subwoofer de votre ampli-tuner AV à l'aide du câble RCA fourni.



### Remarque

- La fonction de mise en veille automatique allume le subwoofer lorsque le signal d'entrée dépasse un certain niveau. Si la fonction de mise en veille automatique ne fonctionne pas correctement, essayez d'augmenter ou de diminuer légèrement le niveau de sortie du subwoofer de votre récepteur.

## Avant d'utiliser l'Ensemble d'enceintes du Home cinéma


### Utilisation des bouchons en caoutchouc pour une meilleure stabilité

Nous vous recommandons d'utiliser les bouchons en caoutchouc fournis pour obtenir le meilleur son possible de vos enceintes. Les bouchons en caoutchouc empêchent les enceintes de bouger, en procurant une meilleure stabilité.

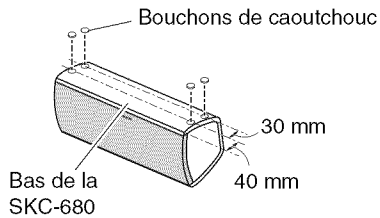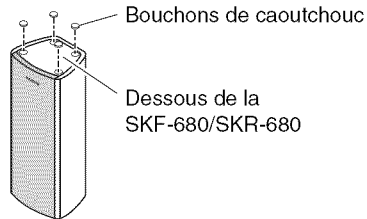

### Utilisation des tampons de protection pour le subwoofer

Si le subwoofer est placé sur un sol dur (bois, vinyle, carrelage, etc.) et si le niveau sonore de la lecture est élevé, les pieds du subwoofer peuvent endommager le sol. Pour empêcher ceci, placez les tampons fournis sous les pieds du subwoofer. Les tampons fournissent également une base stable au subwoofer.

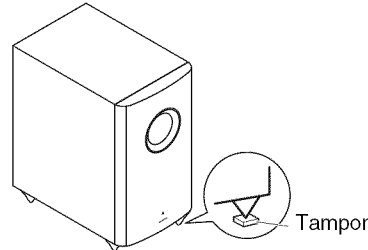


### Réglage du niveau sonore du subwoofer

Pour régler le niveau sonore du subwoofer, utilisez le bouton OUTPUT LEVEL. Réglez-le de façon à ce que les basses soient équilibrées avec les aigus provenant des autres enceintes. Étant donné que nos oreilles sont moins sensibles aux basses très faibles, vous pouvez être tenté de régler le niveau sonore du subwoofer trop haut. En règle générale, réglez le niveau sonore du subwoofer au niveau que vous estimez être optimal, et diminuez-le légèrement.



### Fixation au mur


Pour fixer les enceintes avant/surround de façon verticale, utilisez l'encoche en trou de serrure pour accrocher chaque enceinte sur une vis bien vissée au mur.

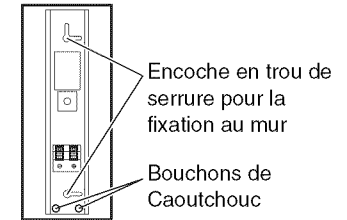

SKF-680/SKR-680

Pour fixer l'enceinte centrale de façon horizontale, utilisez les deux encoches en trou de serrure indiquées pour accrocher l'enceinte à deux vis bien fixées au mur.

Encoche en trou de serrure pour la fixation au mur

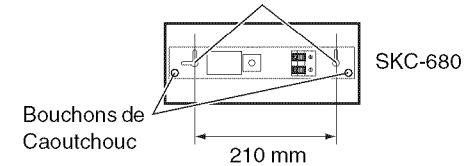


#### Conseil

- Si l'enceinte centrale est inclinée, dévissez la vis du côté incliné pour régler la position verticale de l'enceinte et la redresser.



## Mise en garde

- La capacité de la vis de fixation permettant de supporter une enceinte dépend de la façon dont elle est fixée au mur. Si vos murs sont creux, vissez chaque vis de fixation dans un montant. S'il n'y a aucun montant, ou si les murs sont pleins, utilisez des fixations murales adéquates. Utilisez des vis dont la tête a un diamètre de 9 mm maximum et un diamètre de la partie lisse de la tige de 4 mm maximum. Pour les murs creux, utilisez un détecteur de câbles/canalisation pour vérifier la présence éventuelle de câbles d'alimentation ou de canalisations d'eau avant d'effectuer des percements.
- Laissez un espace de 4 à 8 mm entre le mur et la base de la tête de la vis, comme indiqué (Nous vous recommandons de consulter un professionnel de l'installation domestique).

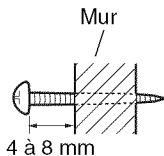

## Vivez une expérience cinématographique à domicile

Grâce au Home Cinema, vous pouvez profiter d'un son surround très réaliste à votre domicile — comme si vous étiez dans une salle de cinéma ou de concert.

### ① Enceintes avant gauche et droite (SKF-680)

Elles doivent être positionnées face à l'auditeur, à la hauteur des oreilles et être situées à distance égale du téléviseur. Orientez-les légèrement vers l'intérieur de manière à créer un triangle avec l'auditeur.

### ② Enceinte centrale (SKC-680)



Positionnez-la à proximité de votre téléviseur (de préférence dessus), face à vous, à la hauteur des oreilles ou à la même hauteur que les enceintes avant gauche et droite.

### ③ Enceintes surround gauche et droite (SKR-680)

Placez-les sur les côtés de l'auditeur, ou légèrement derrière lui, 60 à 100 cm environ au-dessus du niveau des oreilles. Idéalement, elles doivent se situer à égale distance de l'auditeur.

### ④ Subwoofer (SKW-791)

Le subwoofer gère les graves du canal chargé des effets LFE (effets basse fréquence) et les graves des enceintes satellites lorsqu'un crossover est spécifié. Le volume et la qualité des sons graves émis par le subwoofer dépendent de sa position, de la forme de la pièce où le système est installé et de votre position d'écoute. En général, il est possible d'obtenir un bon son grave en installant le subwoofer dans un coin situé devant l'auditeur ou à environ un tiers de la largeur du mur (cf. illustration).

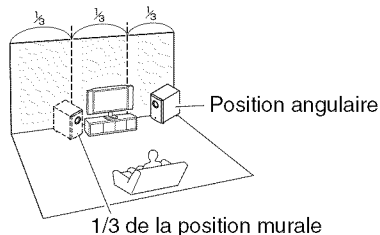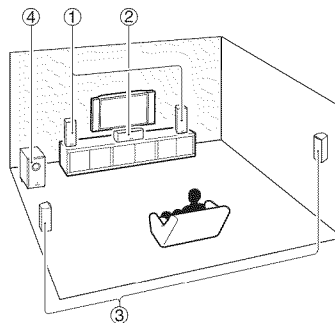


## Branchement des enceintes

### Précautions concernant le branchement des enceintes

Lisez ce qui suit avant de brancher vos enceintes :

- Éteignez votre récepteur avant d'effectuer les branchements.

- Faites très attention à respecter la polarité des câbles de vos enceintes. Ne branchez les bornes positives (+) que sur les bornes positives (+) et les bornes négatives (-) que sur les bornes négatives (-). Si les enceintes sont branchées de façon incorrecte, le son sera déphasé et ne semblera pas naturel.
- Veillez à ne pas mettre en court-circuit les fils positifs et négatifs. Vous risqueriez d'endommager votre amplificateur.

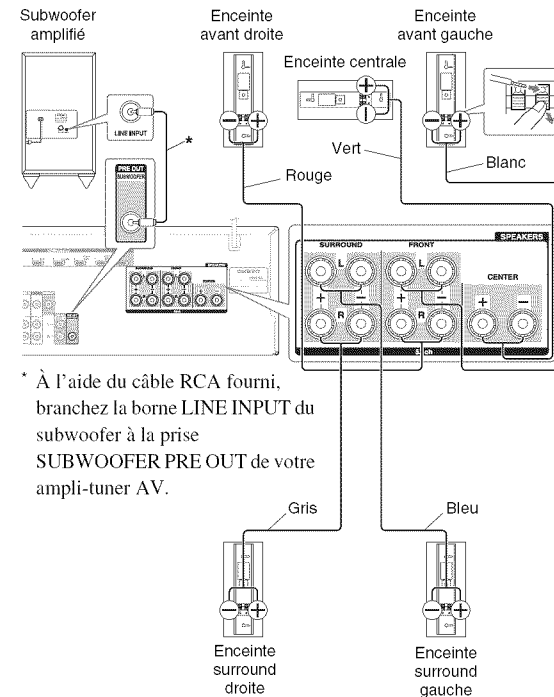

\* À l'aide du câble RCA fourni, branchez la borne LINE INPUT du subwoofer à la prise SUBWOOFER PRE OUT de votre ampli-tuner AV.

## Mise en garde

- Avec d'autres composants audio-vidéo, raccordez l'LINE INPUT du subwoofer à la prise pré-sortie du subwoofer de votre équipement. Ne branchez jamais un instrument de musique au subwoofer.



## Caractéristiques techniques

### ■ Subwoofer amplifié (SKW-791)

|                                    |   |
|------------------------------------|---|
| Type                               | Bass-reflex   |
| Sensibilité/impédance d'entrée     | 540 mV / 20 kΩ  |
| Puissance de sortie nominale (FTC) | Puissance continue de 120 watts minimum, 4 ohms, utilisant une fréquence de 100 Hz avec une distorsion harmonique totale maximale de 1% |
| Distorsion de fréquence            | 25 Hz à 150 Hz  |
| Capacité du coffrage               | 1,3 pieds cubiques (37 L)   |
| Dimensions (L × H × P)             | 10-13/16" × 19-15/16" × 17-1/4"<br>275 mm × 507 mm × 438 mm<br>(y compris la projection)  |
| Poids                              | 21,4 lbs. (9,7 kg)  |
| Entrée audio                       | 1 (mono analogique RCA)   |
| Amplificateur                      | Woofer conique de 10" (25 cm)   |
| Alimentation                       | 120 V CA, 60 Hz   |
| Consommation                       | 35 W  |
| Autre                              | Fonction de mise en veille automatique<br>Protection non-magnétique   |

### ■ Enceintes avant (SKF-680)

|                             |  |
|-----------------------------|--|
| Type                        | Coffrage fermé à 2 canaux  |
| Impédance                   | 6 Ω  |
| Puissance d'entrée maximale | 130 W  |
| Sensibilité                 | 81 dB/W/m  |
| Distorsion de fréquence     | 60 Hz à 50 kHz   |
| Fréquence de crossover      | 4 kHz  |
| Capacité du coffrage        | 0,074 pieds cubiques (2,1 L)   |
| Dimensions (L × H × P)      | 4-3/4" × 11-7/16" × 4"<br>120 mm × 290 mm × 102 mm<br>(y compris la grille et la projection) |
| Poids                       | 2,4 lbs. (1,1 kg)  |
| Amplificateur               | Woofer conique de 4" (10 cm)<br>Dôme équilibré de 1" (2,5 cm)                                |
| Borne                       | À ressort et à code couleur  |
| Encoche en trou de serrure  | Disponible   |
| Grille                      | Fixe   |
| Écrou d'insertion           | Disponible (1/4-20UNC)   |
| Autre                       | Protection non-magnétique  |

SN 29400974-SP

(C) Copyright 2012 Onkyo Sound & Vision Corporation Japan. All rights reserved.

### ■ Enceinte centrale (SKC-680)

|                             |   |
|-----------------------------|---|
| Type                        | Coffrage fermé à 2 canaux   |
| Impédance                   | 6 Ω   |
| Puissance d'entrée maximale | 130 W   |
| Sensibilité                 | 81 dB/W/m   |
| Distorsion de fréquence     | 60 Hz à 50 kHz  |
| Fréquence de crossover      | 4 kHz   |
| Capacité du coffrage        | 0,074 pieds cubiques (2,1 L)  |
| Dimensions (L × H × P)      | 11-7/16" × 4-13/16" × 4-7/16"<br>290 mm × 122 mm × 113 mm<br>(y compris la grille et la projection) |
| Poids                       | 2,4 lbs. (1,1 kg)   |
| Amplificateur               | Woofer conique de 4" (10 cm)<br>Dôme équilibré de 1" (2,5 cm)                                       |
| Borne                       | À ressort et à code couleur   |
| Encoche en trou de serrure  | Disponible  |
| Grille                      | Fixe  |
| Écrou d'insertion           | Disponible (1/4-20UNC)  |
| Autre                       | Protection non-magnétique   |

### ■ Enceintes surround (SKR-680)

|                             |  |
|-----------------------------|--|
| Type                        | Large bande à coffrage fermé   |
| Impédance                   | 6 Ω  |
| Puissance d'entrée maximale | 130 W  |
| Sensibilité                 | 79 dB/W/m  |
| Distorsion de fréquence     | 90 Hz à 20 kHz   |
| Capacité du coffrage        | 0,074 pieds cubiques (2,1 L)   |
| Dimensions (L × H × P)      | 4-3/4" × 11-7/16" × 4"<br>120 mm × 290 mm × 102 mm<br>(y compris la grille et la projection) |
| Poids                       | 1,8 lbs. (0,8 kg)  |
| Amplificateur               | Cône d'enceinte de 3-1/4" (8 cm)   |
| Borne                       | À ressort et à code couleur  |
| Encoche en trou de serrure  | Disponible   |
| Grille                      | Fixe   |
| Écrou d'insertion           | Disponible (1/4-20UNC)   |
| Autre                       | Protection non-magnétique  |

Les caractéristiques techniques et l'apparence de cet appareil sont susceptibles d'être modifiées sans préavis.

### Remarque

#### Pour enceintes blindées non magnétiques :

Essayez d'éloigner les enceintes de votre téléviseur ou de votre moniteur. Si une décoloration se produit, éteignez votre téléviseur ou votre moniteur, attendez 15 à 30 minutes, puis rallumez le téléviseur ou le moniteur. Ceci active normalement la fonction de démagnétisation, qui neutralise le champ magnétique, supprimant ainsi les effets de décoloration.

Y1203-1



\* 2 9 4 0 0 9 7 4 - S P \*



## Using Internet Radio

### Common Procedures in Internet Radio Menu

#### Note

- Available services may vary depending on the region.

#### 1 Press NET.

A list of the network services appears, and the **NET** indicator lights. If it flashes, verify that the Ethernet cable is firmly connected to the AV receiver.

#### 2 Select the desired service and press ENTER.

The top page of the selected service appears.

#### Using Multiple Accounts

The AV receiver supports multiple user accounts, which means you can freely switch between several logins. After registering user accounts, login is performed from the “Users” screen.

#### 1 Press MENU while the Users screen is displayed.

The following menu items appear:

**Add new user:**

**Remove this user:**

You can either store a new user account, or delete an existing one.

#### Tip

- Some of the services don't allow the use of multiple user accounts.
- You can store up to 10 user accounts.
- To switch between accounts you must first log out from the current account, and log in again on the “Users” screen.

|   |   |
|---|---|
| Pandora® internet radio –Getting Started (U.S. only) .....    | 2 |
| Using Rhapsody (U.S. only) .....                              | 3 |
| Using the SiriusXM Internet Radio (North American only) ..... | 4 |
| Using Last.fm Internet Radio .....                            | 5 |
| Using Slacker Personal Radio .....                            | 6 |
| Using MP3tunes .....  | 7 |



## Pandora® internet radio —Getting Started (U.S. only)

Pandora is a free, personalized Internet radio service that plays the music you know and helps you discover music you'll love.

### 1 Use ▲/▼ to select “I have a Pandora Account” or “I’m new to Pandora” and then press ENTER.

If you are new to Pandora select “I’m new to Pandora”. You will see an activation code on your TV screen. Please write down this code. Go to an Internet connected computer and point your browser to [www.pandora.com/onkyo](http://www.pandora.com/onkyo)

Enter your activation code and then follow the instructions to create your Pandora account and your personalized Pandora Internet radio stations. You can create your stations by entering your favorite songs and artists when prompted. After you have created your account and stations you can return to your Onkyo receiver and press enter to begin listening to your personalized Pandora Internet radio.

If you have an existing Pandora account, you can add your Pandora account to your Onkyo receiver by selecting “I have a Pandora Account” and logging in with your email and password.

#### Tip

- If you want to use multiple user accounts, see “Using Multiple Accounts” (→ page 1). Login can be made from the “Users” screen.

### 2 To play a station, use ▲/▼ to select the station from your station list, and then press ENTER.

Playback starts and the playback screen appears.

#### Create a New Station:

Enter the name of a song, artist, or genre and Pandora will create a unique radio station for you based on the musical qualities of that song, artist, or genre.

#### ■ Menu Items

##### I like this song:

Give a song “thumbs-up” and Pandora will play more music like it.

##### I don’t like this song:

Give a song “thumbs-down” and Pandora will ban that song from the current station.

##### Why is this song playing?:

Discover some of the musical attributes that Pandora uses to create your personal radio stations.

##### Don’t play the song for a month:

If you are tired of a song, you can put the song to sleep and Pandora will not play it for one month.

##### Create station from this artist:

Creates a radio station from this artist.

#### Delete this station:

This will permanently delete a station from your Pandora account. All of your thumbs feedback will be lost should you choose to re-create the station with the same song or artist.

#### Create station from this song:

Creates a radio station from this song.

#### Rename this station:

Lets you rename the current radio station.

#### Bookmark this artist:

Pandora will bookmark your favorite artist for your profile on [www.pandora.com](http://www.pandora.com).

#### Bookmark this song:

Pandora will bookmark the current song and allow you to buy them all from Amazon or iTunes in one step!

#### Add to My Favorites:

Adds a station to My Favorites list.

**PANDORA**  
internet radio

PANDORA, the PANDORA logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc. Used with permission.



## Using Rhapsody (U.S. only)

### 1 Use ▲/▼ to select “Sign in to your account” and then press ENTER.

To use Rhapsody, you need an account. If you don't have one yet, you can create a new account at [www.rhapsody.com/onkyo](http://www.rhapsody.com/onkyo)

If you have an existing Rhapsody account, select “Sign in to your account” and press ENTER.

Enter your user name (usually your email) and password in the next keyboard screen, or in Web Setup.

#### ■ Using the keyboard screen

1. Use ▲/▼/◀/▶ and ENTER to enter your user name and password.
2. Select “OK”.
3. Press ENTER. The “Confirm your entries” screen appears.
4. Press ENTER.

#### Tip

- If you want to use multiple user accounts, see “Using Multiple Accounts” (→ page 1). Login can be made from the “Users” screen.

### 2 Use ▲/▼ to select the menu, then press ENTER.

#### Search:

You can search for music by Artist, Album, or Track.

#### Music Guide:

You can play tracks from Genres, Top Artists, Top Albums, Top Tracks, New Releases, and Staff Picks.

#### Rhapsody Channels:

Listen to radio channels programmed by Rhapsody's top-notch editors.

#### Playlists:

Play your own personal playlists.

#### My Library:

Bookmark your favorite albums and tracks from the Rhapsody catalog using My Library.

#### Account Info:

Confirm your account information.

#### Sign Out:

Sign out from your Rhapsody account.

### 3 Use ▲/▼ to select a channel, and press ENTER or ▶ to start playback.

Playback starts and the playback screen appears.

You can control the tracks with the buttons on the remote control.

Enabled buttons: ▶, II, ■, ◀◀, ▶▶, ◀◀◀, ▶▶▶, **RANDOM, REPEAT**

#### Note

- On Rhapsody Channels, some of the buttons don't work.

#### ■ Menu Items

##### Add track to My Library:

Bookmark currently-playing tracks.

##### Add album to My Library:

Bookmark currently-playing albums.

##### Add playlist to My Library:

Bookmark currently-playing playlists.

##### Add channel to My Channels:

Bookmark currently-playing Rhapsody radio channels.

##### Add to My Favorites:

Adds a track, channel or playlist to My Favorites list.

#### Tip

- You can remove bookmarked tracks, albums, and Rhapsody Channels from My Library.



## Using the SiriusXM Internet Radio (North American only)

Your Onkyo AV receiver includes a free trial of SiriusXM Internet Radio. The “Account Info” screen shows how many days are left in your trial. After the trial period expires, if you want to continue listening to the service, you must subscribe. To subscribe go to [www.siriusxm.com/internetradio](http://www.siriusxm.com/internetradio) with your computer.

When you subscribe, you will be provided with a username and password which has to be entered into the AV receiver.

To use SiriusXM Internet Radio, you must have your AV receiver connected to the Internet. Using the remote control, follow these steps:

- 1 Use **▲/▼** to select “Sign In”, and then press **ENTER**. If you have an existing SIRIUS account, you can sign in by selecting “Sign In”. Enter your user name and password in the next keyboard screen, or in Web Setup. If you don’t know your username or password, call Sirius XM at (888) 539-7474 for assistance.

### Tip

- If you want to use multiple user accounts, see “Using Multiple Accounts” (→ page 1). Login can be made from the “Users” screen.

### ■ Using the keyboard screen

1. Use **▲/▼/◀/▶** and **ENTER** to enter your user name and password.
2. Select “OK”.
3. Press **ENTER**. The “Confirm your entries” screen appears.
4. Press **ENTER**.

“Please wait...” appears and then “SiriusXM Internet Radio” screen appears which displays the category available for selection.

- 2 Use **▲/▼** to select the category and then press **ENTER**.

The channel list screen for the selected category appears.

- 3 Use **▲/▼** to select the desired channel and then press **ENTER**.

The playback screen for the selected channel appears and you can listen to SiriusXM Internet Radio.

You can control the tracks with the buttons on the remote control.

Enabled buttons: **■, ||, ◀◀, ▶▶**

### ■ Menu Items

#### Add to My Favorites:

Adds a channel to My Favorites list.



SiriusXM Internet Radio subscriptions are sold separately and are governed by the Sirius Terms and Conditions (see [www.sirius.com](http://www.sirius.com)). Be sure to read this agreement before you purchase your subscription. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. and its subsidiaries. All rights reserved.



## Using Last.fm Internet Radio

### Last.fm is a music service that learns what you love...

Your new Onkyo AV receiver is very clever. If you have a free Last.fm account, it will keep track of all the songs you've just played. When you visit the Last.fm website, you can see personal charts of the music you've enjoyed, share them with friends and see what they like, too.

With thousands of biographies, reviews and an endless choice of personalised, ad-free radio stations, Last.fm is a great way to discover music. Pick up your free Last.fm account today at [www.last.fm/join](http://www.last.fm/join)

Get a subscription and you can enjoy the best of ad-free Last.fm Radio on your Onkyo AV receiver without a computer!

#### Recommended Radio:

Discover smart personalised recommendations that adapt as your tastes change.

#### Artist Radio:

Pick any artist and we'll play you a whole station of music inspired by your choice.

#### My Library:

Sit back and enjoy selections from all the music you've heard since you joined Last.fm.

#### Tag Radio:

Polish funk? Death pop? Think of a style and we'll entertain you with it for hours.

Start your free trial straight away when you create your account and see for yourself what it's like to have the world's music at your fingertips. Latest prices and full information are available at [www.last.fm/subscribe](http://www.last.fm/subscribe)

### 1 Use ▲/▼ to select "Sign in to your account", and then press ENTER.

If you have the existing Last.fm account, you can sign in to your account to select "Sign in to your account". Enter your user name and password in the next keyboard screen.

#### ■ Using the keyboard screen

1. Use ▲/▼/◀/▶ and the ENTER to enter your user name and password.
2. Select "OK".
3. Press ENTER. The "Confirm your entries" screen appears.
4. Press ENTER.

"Please wait..." appears and then "Last.fm Internet Radio" screen appears.

#### Tip

- If you want to use multiple user accounts, see "Using Multiple Accounts" (→ page 1). Login can be made from the "Users" screen.

### 2 Use ▲/▼ to select menu and then press ENTER.

#### Search Station:

You can search station by Artist, Tag, or User Name.

#### Top Artists Station:

You can play tracks of top-rated artists.

#### Top Tags Station:

You can play tracks of top-rated tags.

#### Personal Station:

- You can play tracks from personalized station ("Your Library", "Your Neighbourhood" and "Your Recommendations").

#### Profile:

You can play tracks from "Recently Listened Tracks", "Library" and "Neighbours".

#### Account Info:

Confirm your account information.

#### Sign Out:

It signs out from your account.

### 3 Use ▲/▼ to select a station, and press ENTER or ▶ to start playback.

Playback starts and the playback screen appears.

#### ■ Menu Items

##### I Love this track:

Track information is saved in Last.fm server, and playback frequency increases.

##### Ban this track:

Track information is saved in Last.fm server, and playback frequency reduces.

##### Add to My Favorites:

Adds a station to My Favorites list.

#### ■ Using scrobbling control

Use ▲/▼ to select "Enable", and then press ENTER.

- \* Internet radio services provided by a third party may be terminated with or without notice.  
Internet radio services may not be available in some areas.



## Using Slacker Personal Radio

- 1** If you do not have an account, create one on the Slacker website ([www.slacker.com](http://www.slacker.com)) with your computer.

If you already have a Slacker account, select “Sign in to your account” and then press **ENTER**.

The keyboard screen appears. You can enter information from the remote control or the keys on the main unit.

- 2** If there are no mistakes in the information you have entered, use **▲/▼/◀/▶** to select “OK” then press **ENTER**.

An account information confirmation screen appears.

- 3** If you do not have an account, select “Access without Sign In” and press **ENTER** to use a restricted version of the service.

Note that use will be restricted.

### Tip

- If you want to use multiple user accounts, see “Using Multiple Accounts” (→ page 1). Login can be made from the “Users” screen.

- 4** Use **▲/▼** to select a menu item and then press **ENTER**.

To sign out, use **▲/▼** to select “Sign out” from this screen and then press **ENTER**.

- 5** Use **▲/▼** to select a station and then press **ENTER** or **▶** to start playback from the station.

The playback screen appears.

- 6** You can control the tracks with the buttons on the remote control.

Enabled buttons: **▶**, **||**, **■**, **▶▶**

### ■ Menu Items

#### Rate Song as Favorite:

Stores information to server, making it more likely that the song will be played again.

#### Ban Song:

Stores information to server, making it less likely that the song will be played again.

#### Ban Artist:

Stores information to server, making it less likely that the songs from this artist will be played again.

#### Mark Favorite:

Adds the currently playing station to your favorites.

#### Unmark Favorite:

Deletes the currently playing station from your favorites.

#### Add song to Library:

Adds the currently playing track to your library.

#### Delete song from Library:

Deletes the currently playing track from your library.

#### Add to My Favorites:

Adds a station or song to My Favorites list.



## Using MP3tunes

Listen to your music collection on your home stereo in complete digital fidelity without a personal computer plus safely backup all your songs. Here's how:

### Creating an Account on your Computer

- 1 From your computer, open a web browser and go to: [www.mp3tunes.com/signup](http://www.mp3tunes.com/signup)
- 2 Create an account.
- 3 Click the Upload link ([www.mp3tunes.com/upload](http://www.mp3tunes.com/upload)) to add files to your Locker.
- 4 View, edit and listen to your files by clicking on Player ([www.mp3tunes.com/player](http://www.mp3tunes.com/player)).

### Playing Contents on the AV Receiver

#### Tip

- Before proceeding, you need to select the MP3tunes service as described in "Common Procedures in Internet Radio Menu" (→ page 1).

- 1 Use ▲/▼ to select "Sign in to your account", and then press ENTER.
- 2 Enter the e-mail address and password you used when creating your account, select "OK" and press ENTER.  
The keyboard screen appears. You can enter your user name and password from the remote controller or the buttons on the AV receiver.
- 3 If there are no mistakes in the information you have entered, select "OK" and press ENTER.  
An account information confirmation screen appears.

#### Tip

- If you want to use multiple user accounts, see "Using Multiple Accounts" (→ page 1). Login can be made from the "Users" screen.

- 4 Use ▲/▼ to select the menu, then press ENTER.
  - Music:**  
The place to find your Artists, Albums, and Playlists.
  - Shuffle:**  
Starts playing a random selection of tracks from your Locker.
  - Search:**  
Find a specific Album, Artist, or Song.
  - Account Info:**  
Your MP3tunes account information.
  - Sign Out:**  
Log out of your MP3tunes account.

The track at the top of the music list is automatically played back.

- 5 Use ▲/▼ to select a track and press ENTER or ► to start playback.

A playback screen appears.

You can control the tracks with the buttons on the remote control.

Enabled buttons: ►, II, ■, I◀◀, ▶▶

#### ■ Menu Items

##### Go to Menu:

Displays additional menu options.

- 6 You can view or change your MP3tunes account settings by going to [www.mp3tunes.com/account](http://www.mp3tunes.com/account).



# Utilisation d'une webradio

## Procédures courantes dans le menu de webradio

### Remarque

- Les services disponibles peuvent varier en fonction de la région.

### 1 Appuyez sur NET.

Une liste des services réseau s'affiche, et le témoin NET s'allume. S'il clignote, vérifiez que le câble Ethernet est fermement branché sur l'ampli-tuner AV.

### 2 Sélectionnez le service désiré et appuyez sur ENTER.

La page principale du service sélectionné s'affiche.

### Utilisation de plusieurs comptes

L'ampli-tuner AV prend en charge plusieurs comptes utilisateur, ce qui signifie que vous pouvez librement commuter entre plusieurs connexions. Après avoir enregistré des comptes utilisateur, l'identification est réalisée à partir de l'écran « Users ».

#### 1 Appuyez sur MENU lorsque l'écran Users est affiché.

Les éléments de menu suivants s'affichent :

**Add new user :**

**Remove this user :**

Vous pouvez soit stocker un nouveau compte utilisateur, soit en supprimer un existant.

### Conseil

- Certains des services ne permettent pas l'utilisation de plusieurs comptes utilisateur.
- Vous pouvez stocker jusqu'à 10 comptes utilisateur.
- Pour commuter entre les comptes, vous devez d'abord vous déconnecter du compte actuel, puis vous reconnectez depuis l'écran « Users ».

Pandora® internet Radio –Pour commencer (États-Unis uniquement)..... 2

Utilisation de Rhapsody (Etats-Unis uniquement)..... 3

Utilisation de SiriusXM Internet Radio (Amérique du Nord uniquement) ..... 4

Utilisation de la webradio Last.fm ..... 5

Utilisation de Slacker Personal Radio ..... 6





## Pandora® internet Radio –Pour commencer (États-Unis uniquement)

Pandora est un service de radio en ligne libre et personnalisé vous permettant de lire la musique que vous connaissez et de découvrir celle que vous aimez.

### 1 Utilisez ▲/▼ pour sélectionner « I have a Pandora Account » ou « I'm new to Pandora », puis appuyez sur ENTER.

Si vous ne connaissez pas Pandora sélectionnez « I'm new to Pandora ». Un code d'activation apparaîtra sur l'écran de votre téléviseur. Notez ce code. Utilisez un ordinateur branché sur Internet et connectez le navigateur à [www.pandora.com/onkyo](http://www.pandora.com/onkyo)

Saisissez votre code d'activation puis suivez les instructions pour créer votre compte Pandora et vos stations webradio Pandora personnalisées. Lorsque vous y êtes invités, vous pouvez créer vos stations en saisissant vos chansons et vos artistes préférés. Après la création de votre compte et de vos stations, vous pouvez retourner à votre récepteur Onkyo et appuyez sur entrée pour écouter votre webradio Pandora personnalisée.

Si vous disposez d'un compte Pandora, vous pouvez ajouter votre compte Pandora à votre récepteur Onkyo en sélectionnant « I have a Pandora Account » et y accéder en entrant votre adresse e-mail et votre mot de passe.

#### Conseil

- Si vous souhaitez utiliser plusieurs comptes utilisateur, consultez « Utilisation de plusieurs comptes » (→ page 1). L'identification peut être réalisée à partir de l'écran « Users ».

### 2 Pour lire une station, utilisez ▲/▼ pour sélectionner la station dans votre liste de stations, puis appuyez sur ENTER.

La lecture débute et l'écran de lecture s'affiche.

#### Create a New Station :

Saisissez le nom d'une chanson, d'un artiste ou d'un genre et Pandora créera une station radio unique pour vous en fonction des qualités musicales de la chanson, de l'artiste ou du genre choisi.

#### ■ Éléments du menu

##### I like this song :

Acceptez la chanson et Pandora lira d'autres musiques similaires.

##### I don't like this song :

Rejetez la chanson et Pandora éliminera cette chanson de la station courante.

##### Why is this song playing? :

Découvrez certains des attributs musicaux que Pandora utilise pour créer vos stations radio personnelles.

##### Don't play the song for a month :

Si vous en avez assez d'une chanson, vous pouvez mettre la chanson « au repos » et Pandora ne la lira plus pendant un mois.

##### Create station from this artist :

Permet de créer une station radio à partir de cet artiste.

#### Delete this station :

Ceci supprimera de façon permanente la station de votre compte Pandora. Au cas où vous décideriez de recréer la station avec les mêmes chansons ou les mêmes artistes, tous vos acceptations/rejets précédents seront perdus.

#### Create station from this song :

Permet de créer une station radio à partir de cette chanson.

#### Rename this station :

Vous permet de renommer la station radio actuelle.

#### Bookmark this artist :

Pandora marquera votre artiste préféré pour votre profil sur [www.pandora.com](http://www.pandora.com).

#### Bookmark this song :

Pandora marquera la chanson en cours et vous permettra de toutes les acheter sur Amazon ou iTunes en une étape !

#### Add to My Favorites :

Permet d'ajouter une station à la liste My Favorites.

**PANDORA®**  
internet radio

PANDORA, le logo PANDORA, et l'habillage commercial Pandora sont des marques commerciales ou des marques déposées de la société Pandora Media, Inc. Utilisées avec autorisation.



## Utilisation de Rhapsody (Etats-Unis uniquement)

### 1 Utilisez ▲/▼ pour sélectionner « Sign in to your account », puis appuyez sur ENTER.

Vous devez posséder un compte pour utiliser Rhapsody. Si vous ne disposez pas encore d'un compte, vous pouvez en créer un à partir de [www.rhapsody.com/onkyo](http://www.rhapsody.com/onkyo)

Si vous possédez déjà un compte Rhapsody, sélectionnez « Sign in to your account », puis appuyez sur ENTER.

Saisissez votre nom utilisateur (en général votre adresse électronique) et votre mot de passe dans l'écran clavier suivant ou dans Configuration Web.

#### ■ Utilisation de l'écran clavier

1. Utilisez ▲/▼/◀/▶ et ENTER pour saisir votre nom d'utilisateur et votre mot de passe.
2. Sélectionnez « OK ».
3. Appuyez sur ENTER. L'écran « Confirm your entries » s'affiche.
4. Appuyez sur ENTER.

#### Conseil

- Si vous souhaitez utiliser plusieurs comptes utilisateur, consultez « Utilisation de plusieurs comptes » (→ page 1). L'identification peut être réalisée à partir de l'écran « Users ».

### 2 Utilisez ▲/▼ pour sélectionner le menu, puis appuyez sur ENTER.

#### Search :

Vous pouvez rechercher des morceaux par artiste, par album ou par piste.

#### Music Guide :

Vous pouvez lire des pistes à partir des genres, des meilleurs artistes, des meilleurs albums, des meilleures pistes, des nouveautés et des sélections du personnel.

#### Rhapsody Channels :

Écoutez les canaux de radio programmée par les meilleurs éditeurs de Rhapsody.

#### Playlists :

Permet de jouer vos listes de lecture personnelles.

#### My Library :

Marquez vos albums et vos pistes personnelles dans le catalogue de Rhapsody à l'aide de My Library.

#### Account Info :

Vérifiez les informations de votre compte.

#### Sign Out :

Déconnectez-vous de votre compte Rhapsody.

### 3 Utilisez ▲/▼ pour sélectionner un canal, puis appuyez sur ENTER ou ▶ pour démarrer la lecture.

La lecture débute et l'écran de lecture s'affiche.

Vous pouvez contrôler les pistes avec les touches sur la télécommande.

Boutons activés : ▶, II, ■, ◀◀, ▶▶, ◀◀, ▶▶, **RANDOM, REPEAT**

#### Remarque

- Sur les canaux Rhapsody, certaines touches ne fonctionnent pas.

#### ■ Éléments du menu

##### Add track to My Library :

Marquez les pistes en cours de lecture.

##### Add album to My Library :

Marquez les albums en cours de lecture.

##### Add playlist to My Library :

Marquez les listes de lecture en cours de lecture.

##### Add channel to My Channels :

Marquez les canaux de radio Rhapsody en cours de lecture.

##### Add to My Favorites :

Permet d'ajouter une piste, un canal ou une liste de lecture à la liste My Favorites.

#### Conseil

- Vous pouvez supprimer des pistes, des albums et des canaux Rhapsody marqués de My Library.



## Utilisation de SiriusXM Internet Radio (Amérique du Nord uniquement)

Votre ampli-tuner AV Onkyo comprend un essai gratuit de SiriusXM Internet Radio. L'écran « Account Info » affiche le nombre de jours restants dans votre essai. Une fois la période d'essai expirée, si vous souhaitez continuer à écouter le service, vous devez vous abonner. Pour vous inscrire, accédez à l'adresse [www.siriusxm.com/internetradio](http://www.siriusxm.com/internetradio) à l'aide de votre ordinateur.

Lorsque vous vous inscrivez, vous devez fournir un nom et un mot de passe utilisateur qui doivent être saisis dans l'ampli-tuner AV.

Pour utiliser SiriusXM Internet Radio, l'ampli-tuner AV doit être connecté à Internet. Suivez les étapes ci-dessous à l'aide de la télécommande :

### 1 Utilisez ▲/▼ pour sélectionner « Sign In », puis appuyez sur ENTER.

Si vous possédez déjà un compte SIRIUS, vous pouvez y accéder en sélectionnant « **Sign In** ». Saisissez votre nom utilisateur et votre mot de passe dans l'écran clavier suivant ou dans Configuration Web. Si vous ne connaissez pas votre nom d'utilisateur ou votre mot de passe, appelez Sirius XM au (888) 539-7474 pour obtenir une assistance.

#### Conseil

- Si vous souhaitez utiliser plusieurs comptes utilisateur, consultez « Utilisation de plusieurs comptes » (→ **page 1**). L'identification peut être réalisée à partir de l'écran « Users ».

#### ■ Utilisation de l'écran clavier

1. Utilisez ▲/▼/◀/▶ et **ENTER** pour saisir votre nom d'utilisateur et votre mot de passe.
2. Sélectionnez « **OK** ».
3. Appuyez sur **ENTER**. L'écran « **Confirm your entries** » s'affiche.
4. Appuyez sur **ENTER**.

« **Please wait...** » s'affiche, puis l'écran « **SiriusXM Internet Radio** » affiche la catégorie que vous pouvez sélectionner.

### 2 Utilisez ▲/▼ pour sélectionner la catégorie, puis appuyez sur ENTER.

L'écran de la liste des canaux de la catégorie sélectionnée s'affiche.

### 3 Utilisez ▲/▼ pour sélectionner le canal de votre choix, puis appuyez sur ENTER.

L'écran de lecture du canal sélectionné s'affiche et vous pouvez écouter SiriusXM Internet Radio. Vous pouvez contrôler les pistes avec les touches sur la télécommande.

Boutons activés : ■, ■■, ◀◀, ▶▶

#### ■ Éléments du menu

##### Add to My Favorites :

Permet d'ajouter un canal à la liste My Favorites.



Les abonnements SiriusXM Internet Radio sont vendus séparément et sont subordonnés par les conditions Sirius (voir [www.sirius.com](http://www.sirius.com)). Assurez-vous de lire cet accord avant d'acquiescer votre abonnement. Sirius, XM et tous les logos et marques afférents sont des marques déposées de Sirius XM Radio Inc. et de ses filiales. Tous droits réservés.



## Utilisation de la webradio Last.fm

### Last.fm un service de musique qui apprend ce que vous aimez...

Votre nouvel ampli-tuner AV Onkyo est très intelligent. Si vous avez un compte Last.fm gratuit, il garde une trace de toutes les chansons que vous avez juste jouées. Quand vous vous rendez sur le site Web de Last.fm, vous pouvez voir les graphiques personnels de la musique que vous avez appréciée, les partagez avec vos amis et également voir ce qu'ils aiment.

Avec des milliers de biographies, de revues et un choix infini de stations de radio personnalisées et sans pub, Last.fm est excellent moyen de découvrir de la musique. Créez aujourd'hui votre compte Last.fm gratuit sur [www.last.fm/join](http://www.last.fm/join)

Inscrivez-vous et vous pourrez apprécier le meilleur de la radio sans pub Last.fm sur votre ampli-tuner AV Onkyo sans ordinateur !

#### Recommended Radio :

Découvrez les recommandations personnalisées fûtées qui changent en même temps que vos goûts.

#### Artist Radio :

Sélectionnez n'importe quel artiste et nous vous jouerons une station entière de musique inspirée par votre choix.

#### My Library :

Reposez-vous de retour et appréciez les sélections à partir de toute la musique que vous avez entendue depuis que vous avez joint Last.fm.

#### Tag Radio :

Funk polonaise ? Death pop ? Pensez à un style et nous vous divertirons avec pendant des heures.

Commencez votre essai gratuit immédiatement à la création votre compte et découvrez par vous-même ce que cela fait d'avoir la musique du monde au bouts des doigts. Les derniers prix et les informations complètes sont disponibles sur [www.last.fm/subscribe](http://www.last.fm/subscribe)

### 1 Utilisez ▲/▼ pour sélectionner « Sign in to your account », puis appuyez sur ENTER.

Vous possédez déjà un compte Last.fm, vous pouvez vous y connecter pour sélectionner « Sign in to your account ». Saisissez votre nom utilisateur et votre mot de passe dans l'écran clavier suivant.

#### ■ Utilisation de l'écran clavier

1. Utilisez ▲/▼/◀/▶ et le bouton **ENTER** pour saisir votre nom d'utilisateur et votre mot de passe.
2. Sélectionnez « **OK** ».
3. Appuyez sur **ENTER**. L'écran « **Confirm your entries** » s'affiche.
4. Appuyez sur **ENTER**. « **Please wait...** » apparaît puis l'écran « **Last.fm Internet Radio** » apparaît.

#### ■ Conseil

- Si vous souhaitez utiliser plusieurs comptes utilisateur, consultez « Utilisation de plusieurs comptes » (→ page 1). L'identification peut être réalisée à partir de l'écran « **Users** ».

### 2 Utilisez ▲/▼ pour sélectionner un menu puis appuyez sur ENTER.

#### Search Station :

Vous pouvez rechercher une station par artiste, par tag ou par nom d'utilisateur.

#### Top Artists Station :

Vous pouvez lire des pistes des artistes les mieux évalués.

#### Top Tags Station :

Vous pouvez lire des pistes des tags les mieux évalués.

#### Personal Station :

Vous pouvez lire des pistes de votre station personnalisée (« **Your Library** », « **Your Neighbourhood** » et « **Your Recommendations** »).

#### Profile :

Vous pouvez lire des pistes de « **Recently Listened Tracks** », « **Library** » et « **Neighbours** ».

#### Account Info :

Vérifiez les informations de votre compte.

#### Sign Out :

Pour vous déconnecter de votre compte.

### 3 Utilisez ▲/▼ pour sélectionner une station, puis appuyez sur ENTER ou ▶ pour démarrer la lecture.

La lecture débute et l'écran de lecture s'affiche.

#### ■ Eléments du menu

##### I Love this track :

L'information de la piste est sauvegardée dans le serveur Last.fm, et la fréquence de lecture augmente.

##### Ban this track :

L'information de la piste est sauvegardée dans le serveur Last.fm, et la fréquence de lecture diminue.

##### Add to My Favorites :

Permet d'ajouter une station à la liste My Favorites.

#### ■ Utilisation du contrôle Scrobbling

Utilisez ▲/▼ pour sélectionner « **Enable** », puis appuyez sur **ENTER**.

\* Les services de webradio fournis par un tiers peuvent être résiliés avec ou sans préavis.

Les services de webradio peuvent ne pas être accessibles dans certaines zones.



## Utilisation de Slacker Personal Radio

- 1** Si vous ne possédez pas de compte, créez-en un à partir du site Web de Slacker ([www.slacker.com](http://www.slacker.com)) à l'aide de votre ordinateur.

Si vous possédez déjà un compte Slacker, sélectionnez « Sign in to your account », puis appuyez sur ENTER.

L'écran clavier s'affiche. Pouvez saisir des informations à partir de la télécommande ou des touches sur l'appareil principal.

- 2** Si les informations que vous avez saisies ne comportent pas d'erreur, utilisez ▲/▼/◀/▶ pour sélectionner « OK », puis appuyez sur ENTER. L'écran de confirmation des informations du compte s'affiche.

- 3** Si vous ne possédez pas de compte, sélectionnez « Access without Sign In », puis appuyez sur ENTER pour utiliser une version restreinte du service.

Veillez noter que l'utilisation est restreinte.

### Conseil

- Si vous souhaitez utiliser plusieurs comptes utilisateur, consultez « Utilisation de plusieurs comptes » (→ page 1). L'identification peut être réalisée à partir de l'écran « Users ».

- 4** Utilisez ▲/▼ pour sélectionner un élément du menu, puis appuyez sur ENTER.

Pour vous déconnecter, utilisez ▲/▼ pour sélectionner « Sign out » depuis cet écran, puis appuyez sur ENTER.

- 5** Utilisez ▲/▼ pour sélectionner une station, puis appuyez sur ENTER ou ► pour démarrer la lecture depuis cette station.

L'écran de lecture apparaît.

- 6** Vous pouvez contrôler les pistes avec les touches sur la télécommande.

Boutons activés : ►, ||, ■, ►►

### ■ Éléments du menu

#### Rate Song as Favorite :

Permet de stocker des informations sur le serveur, et d'augmenter la probabilité que le morceau soit lu de nouveau.

#### Ban Song :

Permet de stocker des informations sur le serveur, et de diminuer la probabilité que le morceau soit lu de nouveau.

#### Ban Artist :

Permet de stocker des informations sur le serveur, et de diminuer la probabilité que les morceaux de cet artiste soient lus de nouveau.

#### Mark Favorite :

Permet d'ajouter la station en cours de lecture à vos favoris.

#### Unmark Favorite :

Permet de supprimer la station en cours de lecture de vos favoris.

#### Add song to Library :

Permet d'ajouter la piste en cours de lecture à votre bibliothèque.

#### Delete song from Library :

Permet de supprimer la piste en cours de lecture de votre bibliothèque.

#### Add to My Favorites :

Permet d'ajouter une station ou un morceau à la liste My Favorites.



# Uso de Internet Radio

## Procedimientos comunes en el menú Internet Radio

### Nota

- Los servicios disponibles pueden variar de una región a otra.

### 1 Pulse NET.

Aparecerá una lista de los servicios de red y se iluminará el indicador **NET**. Si parpadea, verifique que el cable Ethernet esté firmemente conectado al receptor de AV.

### 2 Seleccione el servicio deseado y pulse ENTER.

Aparecerá la página principal del servicio seleccionado.

### Uso de múltiples cuentas

El receptor de AV permite múltiples cuentas de usuario, lo que quiere decir que se puede cambiar libremente entre varios usuarios. Después de registrar las cuentas de usuario, el acceso se realiza desde la pantalla "Users".

#### 1 Pulse MENU cuando aparezca la pantalla de usuarios.

Aparecerán los siguientes elementos del menú:

**Add new user:**

**Remove this user:**

Puede guardar una nueva cuenta de usuario o borrar una existente.

### Consejo

- Algunos de los servicios no permiten el uso de múltiples cuentas de usuario.
- Puede guardar hasta 10 cuentas de usuario.
- Para cambiar entre cuentas debe antes cerrar sesión en la cuenta actual y acceder de nuevo en la pantalla "Users".

Pandora® Internet Radio –Primeros pasos  
(solo EE.UU.) ..... 2

Uso de Rhapsody (sólo EE.UU.)..... 3

Uso de SiriusXM Internet Radio (solo  
Norteamérica) ..... 4

Uso de Last.fm Internet Radio ..... 5

Uso de Slacker Personal Radio ..... 6



## Pandora® Internet Radio

### –Primeros pasos (solo EE.UU.)

Pandora es un servicio de radio por Internet gratuito y personalizado que reproduce la música que usted conoce y le ayudará a descubrir música que le encantará.

#### 1 Utilice ▲/▼ para seleccionar “I have a Pandora Account” o “I’m new to Pandora” y luego pulse ENTER.

Si no conoce Pandora seleccione “I’m new to Pandora”. Verá un código de activación en la pantalla del televisor. Tome nota de este código. Vaya a un ordenador conectado a Internet y dirija el navegador a [www.pandora.com/onkyo](http://www.pandora.com/onkyo)

Introduzca su código de activación y siga las instrucciones para crear su cuenta de Pandora y sus emisoras de radio por Internet personalizadas de Pandora. Puede crear sus propias emisoras introduciendo sus canciones y artistas favoritos cuando aparezca la solicitud correspondiente. Una vez creada su cuenta y sus emisoras, puede regresar al receptor Onkyo y pulsar Enter para empezar a escuchar su radio por Internet personalizada de Pandora.

Si ya dispone de una cuenta de Pandora, puede añadirla al receptor Onkyo seleccionando “I have a Pandora Account” e iniciando la sesión con su dirección de correo electrónico y contraseña.

#### Consejo

- Si desea utilizar múltiples cuentas de usuario, consulte “Uso de múltiples cuentas” (→ [página 1](#)). Se puede iniciar sesión desde la pantalla “Users”.

#### 2 Utilice ▲/▼ para seleccionar la emisora en la lista de emisoras y luego pulse ENTER.

Se inicia la reproducción y aparece la pantalla de reproducción.

##### Create a New Station:

Introduzca el nombre de una canción, artista o género; Pandora creará una emisora de radio exclusiva para usted basada en las cualidades musicales de esa canción, de ese artista o de ese género.

##### ■ Elementos del menú

##### I like this song:

Si aprueba (pulsar arriba) una canción, Pandora reproducirá más música parecida.

##### I don’t like this song:

Si no aprueba (pulsar abajo) la canción, Pandora eliminará dicha canción de la emisora actual.

##### Why is this song playing?:

Descubra algunos de los atributos musicales que Pandora utiliza para crear sus emisoras de radio personalizadas.

##### Don’t play the song for a month:

Si se cansa de una canción, puede “silenciarla” de modo que Pandora no la reproduzca durante un mes.

##### Create station from this artist:

Crea una emisora de radio a partir de este artista.

##### Delete this station:

Esto eliminará de forma permanente una emisora de su cuenta de Pandora. Toda la información sobre sus aprobaciones / desaprobaciones se perderá si quiere volver a crear la emisora con la misma canción o artista.

##### Create station from this song:

Crea una emisora de radio a partir de esta canción.

##### Rename this station:

Le permite renombrar la emisora de radio actual.

##### Bookmark this artist:

Pandora marcará su artista favorito para su perfil en [www.pandora.com](http://www.pandora.com).

##### Bookmark this song:

Pandora marcará la canción actual y le permitirá comprarlas todas en Amazon o iTunes con un solo paso.

##### Add to My Favorites:

Añade una emisora a la lista Mis favoritos.

## PANDORA<sup>®</sup>

internet radio

PANDORA, el logotipo de PANDORA logo, y la imagen corporativa de Pandora son marcas comerciales o marcas comerciales registradas de Pandora Media, Inc. Uso con permiso.



## Uso de Rhapsody (sólo EE.UU.)

### 1 Utilice ▲/▼ para seleccionar “Sign in to your account” y luego pulse ENTER.

Para utilizar Rhapsody, necesitará una cuenta. Si todavía no tiene una, puede crear una nueva en [www.rhapsody.com/onkyo](http://www.rhapsody.com/onkyo)

Si ya tiene una cuenta Rhapsody, seleccione “Sign in to your account” y pulse ENTER.

Escriba su nombre de usuario (normalmente el correo electrónico) y contraseña en la pantalla de teclado que aparece a continuación o en la configuración web.

#### ■ Utilización de la pantalla de teclado

1. Utilice ▲/▼/◀/▶ y ENTER para introducir su nombre de usuario y su contraseña.
2. Seleccione “OK”.
3. Pulse ENTER. Aparecerá la pantalla “Confirm your entries”.
4. Pulse ENTER.

#### Consejo

- Si desea utilizar múltiples cuentas de usuario, consulte “Uso de múltiples cuentas” (→ página 1). Se puede iniciar sesión desde la pantalla “Users”.

### 2 Utilice ▲/▼ para seleccionar el menú y luego pulse ENTER.

#### Search:

Puede buscar música por artista, álbum o canción.

#### Music Guide:

Puede reproducir canciones por géneros, artistas principales, álbumes principales o canciones principales, novedades, selección del sitio.

#### Rhapsody Channels:

Escuche las emisoras de radio programadas por los principales redactores de Rhapsody.

#### Playlists:

Reproduzca sus listas personales.

#### My Library:

Marque sus álbumes y canciones preferidas en el catálogo de Rhapsody, usando Mi biblioteca.

#### Account Info:

Confirme los datos de su cuenta.

#### Sign Out:

Salga de su cuenta Rhapsody.

### 3 Utilice ▲/▼ para seleccionar una emisora y luego pulse ENTER o ► para iniciar la reproducción.

Se inicia la reproducción y aparece la pantalla de reproducción.

Puede controlar las pistas con los botones del mando a distancia.

Botones activados: ►, II, ■, ◀◀, ▶▶, ◀◀◀, ▶▶▶, RANDOM, REPEAT

#### Nota

- En Rhapsody Channels, algunos de los botones no funcionan.

#### ■ Elementos del menú

##### Add track to My Library:

Marca las canciones que se están reproduciendo actualmente.

##### Add album to My Library:

Marca los álbumes que se están reproduciendo actualmente.

##### Add playlist to My Library:

Marca las listas de reproducción que se están reproduciendo actualmente.

##### Add channel to My Channels:

Marca las emisoras de Rhapsody que se están reproduciendo actualmente.

##### Add to My Favorites:

Añade una canción, emisora o lista de reproducción a la lista Mis favoritos.

#### Consejo

- Puede eliminar las canciones, los álbumes y las emisoras de Rhapsody marcados de Mi biblioteca.





## Uso de SiriusXM Internet Radio (solo Norteamérica)

Su receptor de AV Onkyo incluye una prueba gratuita de SiriusXM Internet Radio. La pantalla "Account Info" muestra los días que quedan de la prueba. Una vez que termine el período de prueba, si desea seguir escuchando este servicio, deberá contratarlo. Para suscribirse vaya a [www.siriusxm.com/internetradio](http://www.siriusxm.com/internetradio) con su ordenador.

Cuando se suscriba, recibirá un nombre de usuario y una contraseña que deberá introducir en el receptor de AV.

Para poder utilizar SiriusXM Internet Radio, el receptor de AV debe estar conectado a internet. Para usar el mando a distancia, siga este procedimiento:

### 1 Utilice ▲/▼ para seleccionar "Sign In", y luego pulse ENTER.

Si ya tiene una cuenta SIRIUS, puede acceder seleccionando "Sign In". Escriba su nombre de usuario y contraseña en la pantalla de teclado que aparece a continuación o en la configuración web. Si no sabe su nombre de usuario o la contraseña, llame a Sirius XM al número (888) 539-7474 para solicitar asistencia.

#### Consejo

- Si desea utilizar múltiples cuentas de usuario, consulte "Uso de múltiples cuentas" (→ página 1). Se puede iniciar sesión desde la pantalla "Users".

#### ■ Utilización de la pantalla de teclado

1. Utilice ▲/▼/◀/▶ y ENTER para introducir su nombre de usuario y su contraseña.
2. Seleccione "OK".
3. Pulse ENTER. Aparecerá la pantalla "Confirm your entries".
4. Pulse ENTER.

Aparecerá "Please wait..." y después la pantalla "SiriusXM Internet Radio", que muestra la categoría disponible para la selección.

### 2 Utilice ▲/▼ para seleccionar la categoría y luego pulse ENTER.

Aparece una pantalla con una lista de emisoras de la categoría seleccionada.

### 3 Utilice ▲/▼ para seleccionar la emisora deseada y luego pulse ENTER.

Aparecerá la pantalla de reproducción de la emisora seleccionada y ahora usted podrá escuchar SiriusXM Internet Radio.

Puede controlar las pistas con los botones del mando a distancia.

Botones activados: ■, II, |◀◀, ▶▶|

#### ■ Elementos del menú

##### Add to My Favorites:

Añade una emisora a la lista Mis favoritos.



Las suscripciones a SiriusXM Internet Radio se venden por separado y se rigen por las condiciones de Sirius (consulte [www.sirius.com](http://www.sirius.com)). Lea atentamente este acuerdo antes de comprar la suscripción. Sirius, XM y todas las marcas y logotipos relacionados son marcas comerciales de Sirius XM Radio Inc. y sus filiales. Todos los derechos reservados.



## Uso de Last.fm Internet Radio

### Last.fm es un servicio musical que sabe lo que le gusta...

Su nuevo receptor de AV Onkyo es muy inteligente. Si tiene una cuenta gratuita de Last.fm, hará un seguimiento de todas las canciones que acaba de escuchar. Cuando visite el sitio web de Last.fm, podrá ver listas personales de la música que ha disfrutado, compartirlas con sus amigos y también ver lo que les gusta a ellos.

Con sus miles de biografías, críticas y una infinita variedad de emisoras de radio personalizadas y sin publicidad, Last.fm es una forma excelente de descubrir música. Cree hoy mismo una cuenta gratuita de Last.fm en [www.last.fm/join](http://www.last.fm/join)

Si se suscribe podrá disfrutar de lo mejor de Last.fm Radio sin anuncios en su receptor de AV Onkyo sin necesidad de un ordenador.

### Recommended Radio:

Descubra nuestras interesantes recomendaciones personalizadas que se adaptan a sus gustos en cada momento.

### Artist Radio:

Escoja cualquier artista y podrá escuchar una emisora de radio inspirada exclusivamente en su elección.

### My Library:

Relájese y disfrute de selecciones de toda la música que ha escuchado desde que se registró en Last.fm.

### Tag Radio:

¿Polish funk? ¿Death pop? Piense en un estilo y podrá escucharlo durante horas.

Pruébalo gratis ahora mismo. Cree una cuenta y verá por sí mismo lo que significa tener toda la música del mundo al alcance de sus oídos. Puede consultar los precios actualizados y toda la información que desee en [www.last.fm/subscribe](http://www.last.fm/subscribe)

## 1 Utilice ▲/▼ para seleccionar “Sign in to your account”, y luego pulse ENTER.

Si ya tiene una cuenta de Last.fm, puede acceder a ella para seleccionar “Sign in to your account”. Introduzca su nombre de usuario y contraseña en la siguiente pantalla de teclado.

### ■ Utilización de la pantalla de teclado

1. Utilice ▲/▼/◀/▶ y ENTER para introducir su nombre de usuario y su contraseña.
2. Seleccione “OK”.
3. Pulse ENTER. Aparecerá la pantalla “Confirm your entries”.
4. Pulse ENTER.

Aparecerá “Please wait...” y después la pantalla “Last.fm Internet Radio”.

### Consejo

- Si desea utilizar múltiples cuentas de usuario, consulte “Uso de múltiples cuentas” (→ página 1). Se puede iniciar sesión desde la pantalla “Users”.

## 2 Utilice ▲/▼ para seleccionar un menú y luego pulse ENTER.

### Search Station:

Puede buscar emisoras por artista, etiquetas o nombre de usuario.

### Top Artists Station:

Puede reproducir canciones de los artistas mejor clasificados.

### Top Tags Station:

Puede reproducir canciones con las etiquetas mejor clasificadas.

### Personal Station:

Puede reproducir pistas de una emisora personalizada (“Your Library”, “Your Neighbourhood” y “Your Recommendations”).

### Profile:

Puede reproducir pistas de “Recently Listened Tracks”, “Library” y “Neighbours”.

### Account Info:

Confirme los datos de su cuenta.

### Sign Out:

Se desconecta de su cuenta.

## 3 Utilice ▲/▼ para seleccionar una emisora y luego pulse ENTER o ▶ para iniciar la reproducción.

Se inicia la reproducción y aparece la pantalla de reproducción.

### ■ Elementos del menú

#### I Love this track:

Se guarda la información sobre la canción en el servidor de Last.fm y aumenta la frecuencia con la que se reproduce.

#### Ban this track:

Se guarda la información sobre la canción en el servidor de Last.fm y se reduce la frecuencia con la que se reproduce.

#### Add to My Favorites:

Añade una emisora a la lista Mis favoritos.

### ■ Uso del control de scrobbling

Utilice ▲/▼ para seleccionar “Enable”, y luego pulse ENTER.

- \* Los servicios de radio por Internet suministrados por terceros pueden cancelarse con o sin aviso previo. Es posible que los servicios de radio por Internet no estén disponibles en algunas zonas.



## Uso de Slacker Personal Radio

- 1 Si no tiene una cuenta, cree una en el sitio web de Slacker ([www.slacker.com](http://www.slacker.com)) con su ordenador.  
Si ya tiene una cuenta de Slacker, seleccione “Sign in to your account” y pulse **ENTER**.  
Aparecerá la pantalla de teclado. Puede introducir información desde el mando a distancia o desde el teclado de la unidad principal.
  - 2 Si no hay errores en la información que ha introducido, utilice ▲/▼/◀/▶ para seleccionar “OK” y luego pulse **ENTER**.  
Aparecerá una pantalla de confirmación de la información de la cuenta.
  - 3 Si no tiene una cuenta, seleccione “Access without Sign In” y pulse **ENTER** para utilizar una versión restringida del servicio.  
Tenga en cuenta que el uso estará restringido.
- Consejo**
- Si desea utilizar múltiples cuentas de usuario, consulte “Uso de múltiples cuentas” (→ página 1). Se puede iniciar sesión desde la pantalla “Users”.
- 4 Utilice ▲/▼ para seleccionar un menú y luego pulse **ENTER**.  
Para salir, utilice ▲/▼ para seleccionar “Sign out” en esta pantalla y luego pulse **ENTER**.
  - 5 Utilice ▲/▼ para seleccionar una emisora y luego pulse **ENTER** o ▶ para iniciar la reproducción de la emisora.  
Aparecerá la pantalla de reproducción.

## 6 Puede controlar las pistas con los botones del mando a distancia.

Botones activados: ▶, ||, ■, ▶▶

### ■ Elementos del menú

#### Rate Song as Favorite:

Guarda información en el servidor, haciendo que sea más probable que la canción se vuelva a reproducir.

#### Ban Song:

Guarda información en el servidor, haciendo que sea menos probable que la canción se vuelva a reproducir.

#### Ban Artist:

Guarda información en el servidor, haciendo que sea menos probable que las canciones de este artista se vuelvan a reproducir.

#### Mark Favorite:

Añade la emisora que se está reproduciendo actualmente a los favoritos.

#### Unmark Favorite:

Elimina la emisora que se está reproduciendo actualmente de los favoritos.

#### Add song to Library:

Añade la canción que se está reproduciendo actualmente a su biblioteca.

#### Delete song from Library:

Elimina la canción que se está reproduciendo actualmente de la biblioteca.

#### Add to My Favorites:

Añade una emisora o canción a la lista Mis favoritos.



SN 29401189B

(C) Copyright 2012 Onkyo Sound & Vision Corporation Japan. All rights reserved.

Y1203-2



\* 2 9 4 0 1 1 8 9 B \*

## Using Internet Radio

### Common Procedures in Internet Radio Menu

#### Note

- Available services may vary depending on the region.

#### 1 Press NET.

A list of the network services appears, and the **NET** indicator lights. If it flashes, verify that the Ethernet cable is firmly connected to the AV receiver.

#### 2 Select the desired service and press ENTER.

The top page of the selected service appears.

### Using Multiple Accounts

The AV receiver supports multiple user accounts, which means you can freely switch between several logins. After registering user accounts, login is performed from the “Users” screen.

#### 1 Press MENU while the Users screen is displayed.

The following menu items appear:

**Add new user:**

**Remove this user:**

You can either store a new user account, or delete an existing one.

#### Tip

- Some of the services don't allow the use of multiple user accounts.
- You can store up to 10 user accounts.
- To switch between accounts you must first log out from the current account, and log in again on the “Users” screen.

Using Last.fm Internet Radio ..... 2



## Using Last.fm Internet Radio

### Last.fm is a music service that learns what you love...

Your new Onkyo AV receiver is very clever. If you have a free Last.fm account, it will keep track of all the songs you've just played. When you visit the Last.fm website, you can see personal charts of the music you've enjoyed, share them with friends and see what they like, too.

With thousands of biographies, reviews and an endless choice of personalised, ad-free radio stations, Last.fm is a great way to discover music. Pick up your free Last.fm account today at [www.last.fm/join](http://www.last.fm/join)

UK and Germany only:

Get a subscription and you can enjoy the best of ad-free Last.fm Radio on your Onkyo AV receiver without a computer!

### Recommended Radio:

Discover smart personalised recommendations that adapt as your tastes change.

### Artist Radio:

Pick any artist and we'll play you a whole station of music inspired by your choice.

### My Library:

Sit back and enjoy selections from all the music you've heard since you joined Last.fm.

### Tag Radio:

Polish funk? Death pop? Think of a style and we'll entertain you with it for hours.

Start your free trial straight away when you create your account and see for yourself what it's like to have the world's music at your fingertips. Latest prices and full information are available at [www.last.fm/subscribe](http://www.last.fm/subscribe)

## 1 Use ▲/▼ to select "Sign in to your account", and then press ENTER.

If you have the existing Last.fm account, you can sign in to your account to select "Sign in to your account". Enter your user name and password in the next keyboard screen.

### ■ Using the keyboard screen

1. Use ▲/▼/◀/▶ and the ENTER to enter your user name and password.
2. Select "OK".
3. Press ENTER. The "Confirm your entries" screen appears.
4. Press ENTER.

"Please wait..." appears and then "Last.fm Internet Radio" screen appears.

### Tip

- If you want to use multiple user accounts, see "Using Multiple Accounts" (→ page 1). Login can be made from the "Users" screen.

## 2 Use ▲/▼ to select menu and then press ENTER.

### Search Station:

You can search station by Artist, Tag, or User Name.

### Top Artists Station:

You can play tracks of top-rated artists.

### Top Tags Station:

You can play tracks of top-rated tags.

### Personal Station:

You can play tracks from personalized station ("Your Library", "Your Neighbourhood" and "Your Recommendations").

### Profile:

You can play tracks from "Recently Listened Tracks", "Library" and "Neighbours".

### Account Info:

Confirm your account information.

### Sign Out:

It signs out from your account.

## 3 Use ▲/▼ to select a station, and press ENTER or ▶ to start playback.

Playback starts and the playback screen appears.

Enabled buttons: ▶, ■, ▶▶▶

### ■ Menu Items

#### I Love this track:

Track information is saved in Last.fm server, and playback frequency increases.

#### Ban this track:

Track information is saved in Last.fm server, and playback frequency reduces.

#### Add to My Favorites:

Adds a station to My Favorites list.

### ■ Using scrobbling control

Use ▲/▼ to select "Enable", and then press ENTER.

- \* Internet radio services provided by a third party may be terminated with or without notice.  
Internet radio services may not be available in some areas.



# Internetradio verwenden

## Allgemeine Verfahren bei den Internetradio-Menüs

### Anmerkung

- Die verfügbaren Dienste sind länderabhängig verschieden.

### 1 Drücken Sie NET.

Es erscheint eine Liste der Netzwerkdienste und die NET-Anzeige leuchtet. Wenn sie blinkt, überprüfen Sie ob das Ethernet-Kabel fest im AV-Receiver eingesteckt ist.

### 2 Wählen Sie den gewünschten Service aus und drücken Sie ENTER.

Die oberste Seite des ausgewählten Services erscheint.

### Verwendung mehrerer Konten

Der AV-Receiver unterstützt mehrere Nutzerkonten, was bedeutet, dass Sie frei zwischen mehreren Logins umschalten können. Nach der Anmeldung der Nutzerkonten wird das Login vom „Users“ Bildschirm aus vorgenommen.

#### 1 Drücken Sie MENU während der Bildschirm des Nutzers angezeigt wird.

Das folgende Menü erscheint:

**Add new user:**

**Remove this user:**

Sie können entweder ein neues Nutzerkonto abspeichern oder ein bestehendes löschen.

### Tip

- Einige dieser Dienstleistungen lassen keine mehrfachen Nutzerkonten zu.
- Sie können bis zu 10 Nutzerkonten speichern.
- Um zwischen den Konten umzuschalten, müssen Sie sich zuerst aus Ihrem aktuellen Konto ausloggen und sich dann wieder auf dem „Users“ Bildschirm einloggen.

## Verwendung von Last.fm Internet Radio ..... 2



## Verwendung von Last.fm Internet Radio

### Last.fm ist ein Musikdienst, der sich Ihre Lieblingsmusik merkt...

Ihr neuer Onkyo AV-Receiver ist äußerst clever. Wenn Sie ein kostenloses Last.fm-Konto eingerichtet haben, werden darin alle kürzlich abgespielten Titel gespeichert. Wenn Sie die Last.fm-Website besuchen, können Sie Ihre persönlichen Charts der von Ihnen abgespielten Musik anzeigen; teilen Sie diese mit Freunden und sehen Sie auch, welche Musik Ihre Freunde mögen.

Mit tausenden von Biografien, Rezensionen und einer schier endlosen Auswahl an persönlich angepassten, werbefreien Radiosendern ist Last.fm eine großartige Gelegenheit, um Musik zu entdecken. Holen Sie sich Ihr kostenloses Last.fm-Konto noch heute unter [www.last.fm/join](http://www.last.fm/join)

Nur für Großbritannien und Deutschland:

Holen Sie sich ein Abonnement und Sie können auch ohne Computer die besten werbefreien Last.fm-Radiosender auf Ihrem Onkyo AV-Receiver hören!

### Recommended Radio:

Entdecken Sie smarte, persönlich angepasste Empfehlungen, die sich mit Ihrem Musikgeschmack verändern.

### Artist Radio:

Wählen Sie einen beliebigen Interpreten und wir spielen für Sie einen ganzen Radiosender mit durch Ihre Wahl inspirierter Musik.

### My Library:

Lehnen Sie sich zurück und erfreuen Sie sich an einer Auswahl aller Musik, die Sie seit Ihrer Mitgliedschaft bei Last.fm gehört haben.

### Tag Radio:

Polish Funk? Death Pop? Denken Sie an einen Musikstil und wir unterhalten Sie stundenlang damit.

Starten Sie Ihr kostenloses Probeabo direkt wenn Sie Ihr Konto erstellen und finden Sie selbst heraus wie es ist, jederzeit die Musik der ganzen Welt abrufen zu können. Die aktuellen Nutzungspreise und umfassende Infos sind unter [www.last.fm/subscribe](http://www.last.fm/subscribe) erhältlich

## 1 Verwenden Sie ▲/▼, um „Sign in to your account“ auszuwählen und dann drücken Sie ENTER.

Wenn Sie über einen bestehenden Last.fm Konto verfügen, können Sie sich anmelden und „Sign in to your account“ wählen. Geben Sie Ihre Benutzernamen und das Kennwort in der folgenden Tastaturanzeige ein.

### ■ Verwendung der Tastaturanzeige

1. Verwenden Sie ▲/▼/◀/▶ und den ENTER, um Ihren Nutzernamen und Passwort einzugeben.
2. Wählen Sie „OK“.
3. Drücken Sie ENTER. Die Anzeige „Confirm your entries“ erscheint.
4. Drücken Sie ENTER.

„Please wait...“ wird angezeigt und danach erscheint die „Last.fm Internet Radio“-Anzeige.

### ■ Tipp

- Falls Sie mehrere Nutzerkonten verwenden möchten, schlagen Sie bitte unter „Verwendung mehrerer Konten“ nach (→ Seite 1). Das Login kann vom „Users“-Bildschirm aus erfolgen.

## 2 Verwenden Sie ▲/▼, um das Menü auszuwählen und dann drücken Sie ENTER.

### Search Station:

Sie können einen Sender anhand Interpreten, Tags oder Benutzernamen suchen.

### Top Artists Station:

Sie können Titel der am besten bewerteten Interpreten wiedergeben.

### Top Tags Station:

Sie können Titel der am besten bewerteten Tags wiedergeben.

### Personal Station:

Sie können Titel aus einem persönlich angepassten Sender wiedergeben („Your Library“, „Your Neighbourhood“ und „Your Recommendations“).

### Profile:

Sie können Titel aus „Recently Listened Tracks“, „Library“ und „Neighbours“ wiedergeben.

### Account Info:

Bestätigen Sie Ihre Kontoinformation.

### Sign Out:

Zur Abmeldung aus Ihrem Konto.

## 3 Verwenden Sie ▲/▼, um einen Sender auszuwählen und dann drücken Sie ENTER oder ►, um die Wiedergabe zu starten.

Die Wiedergabe wird gestartet und die Wiedergabeanzeige erscheint.

Aktivierte Tasten: ►, ■, ►►

### ■ Menüsymbole

#### I Love this track:

Titel-Informationen werden auf dem Last.fm-Server gespeichert und die Häufigkeit der Wiedergabe wird erhöht.

#### Ban this track:

Titel-Informationen werden auf dem Last.fm-Server gespeichert und die Häufigkeit der Wiedergabe wird verringert.

#### Add to My Favorites:

Fügt einen Sender zu meiner My Favorites Liste hinzu.

### ■ Scrobbling-Steuerung verwenden

Verwenden Sie ▲/▼, um „Enable“ auszuwählen und dann drücken Sie ENTER.


\* Von Drittparteien zur Verfügung gestellte Internetradio-Dienste können unter Umständen ohne Vorankündigung eingestellt werden.

In bestimmten Gebieten sind Internetradio-Dienste eventuell nicht verfügbar.





# Remote Control Codes

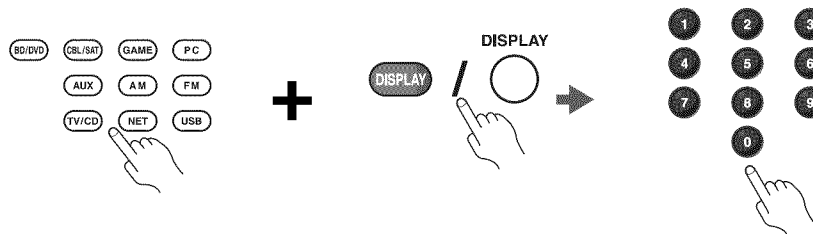

## 1 While holding down the REMOTE MODE button to which you want to assign a code, press and hold down [DISPLAY] (about 3 seconds).

The REMOTE MODE button/Remote indicator lights.

On Integra products, button names are capitalized. For example, “Remote Mode” button and “Display” button.

### Notes:

- Remote control codes cannot be entered for [RECEIVER] and the multi zone button.
- Only TV remote control codes can be entered for [TV].
- Except for [RECEIVER], [TV], and the multi zone button, remote control codes from any category can be assigned for the REMOTE MODE buttons. However, these buttons also work as input selector buttons, so choose a REMOTE MODE button that corresponds with the input to which you connect your component. For example, if you connect your CD player to the CD input, choose [TV/CD] when entering its remote control code.

## 2 Within 30 seconds, use the number buttons to enter the 5-digit remote control code.

The REMOTE MODE button/Remote indicator flashes twice.

If the remote control code is not entered successfully, the REMOTE MODE button/Remote indicator will flash once slowly.

### Notes:

- The flashing element of the remote controller will differ according to your AV receiver’s model.
- The remote controller is preconfigured with remote controller presets of different components. By entering a code from the Remote Control Code list, you can activate the relevant preset for that component.
- When there are multiple codes related to one manufacturer, try and enter them one-by-one until it matches your component.
- Depending on the model and year of your component, compatibility is not guaranteed.
- With some models, the remote controller may not work or its compatibility may be limited to part of the component’s functionality.
- Besides, it is not possible to add new codes to the existing remote controller presets.
- Though the provided remote control codes are correct at the time of printing, they are subject to change by the manufacturer.



## Codes de télécommande

### 1 Tout en maintenant enfoncé le bouton REMOTE MODE auquel vous souhaitez associer un code, pressez et maintenez enfoncé le bouton [DISPLAY] (pendant environ 3 secondes).

Le bouton REMOTE MODE/le témoin Remote s'allume.

Les noms de boutons sont en minuscules sur les produits Integra. Par exemple, le bouton « Remote Mode » et le bouton « Display ».

#### Remarques :

- Les codes de télécommande ne peuvent pas être entrés pour [RECEIVER] et le bouton multi zone.
- Seul les code de télécommande de téléviseurs peuvent être entrés pour [TV].
- À l'exception de [RECEIVER], [TV] et du bouton multi zone, vous pouvez affecter des codes de télécommande de n'importe quelle catégorie pour les boutons REMOTE MODE. Cependant, ces boutons font également office de bouton de sélecteur d'entrée : par conséquent, choisissez un bouton REMOTE MODE correspondant à l'entrée à laquelle vous souhaitez raccorder votre appareil. Par exemple, si vous raccordez votre lecteur CD à l'entrée CD, choisissez [TV/CD] lorsque vous saisissez le code de télécommande.

### 2 Vous disposez de 30 secondes pour saisir le code de télécommande à cinq chiffres à l'aide des boutons numérotés.

Le bouton REMOTE MODE/le témoin Remote clignote deux fois.

Si le code de télécommande n'a pas été saisi correctement le bouton REMOTE MODE/l'indicateur Remote ne clignote qu'une seule fois.

#### Remarques :

- L'élément clignotant de la télécommande différera selon le modèle de votre ampli-tuner AV.
- La télécommande est préconfigurée avec des préréglages de télécommande de différents appareils. En entrant un code de la liste des codes de télécommandes, vous pouvez activer le préréglage approprié pour cet appareil.
- Quand il y a de multiples codes liés à un fabricant, essayez-les et entrez-les un par un jusqu'à ce que cela corresponde à votre appareil.
- Selon le modèle et l'année de votre appareil, la compatibilité n'est pas garantie.
- Avec certains modèles, la télécommande peut ne pas fonctionner ou sa compatibilité peut être limitée à une partie de la fonctionnalité de l'appareil.
- En outre, il n'est pas possible d'ajouter de nouveaux codes aux préréglages de télécommande existants.
- Bien que les codes de télécommande fournis soient corrects au moment de l'impression de la liste, ils sont susceptibles d'être modifiés par le fabricant.

## Códigos de control remoto

### 1 Manteniendo pulsado el botón REMOTE MODE para el cual desea introducir un código, pulse y mantenga presionado el botón [DISPLAY] (aproximadamente 3 segundos).

Se iluminará el botón REMOTE MODE/indicador Remote.

En los productos Integra, los nombres de los botones aparecen con mayúsculas. Por ejemplo, el botón "Remote Mode" y el botón "Display".

#### Notas:

- No podrán introducirse códigos de mando a distancia para [RECEIVER] y el botón multizona.
- Únicamente podrán introducirse códigos de mando a distancia de televisor para el botón [TV].
- Con la excepción de [RECEIVER], [TV] y el botón multizona, se pueden asignar códigos de mando a distancia de cualquier categoría a los botones de REMOTE MODE. No obstante, estos botones también pueden funcionar como botones de selector de entrada; por tanto, seleccione un botón REMOTE MODE que se corresponda con la entrada a la cual está conectado el componente. Por ejemplo, si conecta un reproductor de CD a la entrada de CD, seleccione [TV/CD] cuando introduzca su código de mando a distancia.

### 2 Antes de que transcurran 30 segundos, utilice los botones numéricos para introducir el código de mando a distancia de 5 dígitos.

El botón REMOTE MODE/indicador Remote parpadeará dos veces.

Si el código de mando a distancia no se introduce correctamente, el botón REMOTE MODE/indicador Remote parpadeará una vez despacio.

#### Notas:

- El parpadeo del mando distancia será distinto según el modelo de receptor de AV.
- El mando a distancia está preconfigurado con los ajustes predeterminados de los distintos componentes. Al introducir un código de la lista de códigos del mando a distancia se puede activar el ajuste predeterminado de ese componente.
- Cuando hay múltiples códigos relacionados con un fabricante, pruebe a introducirlos uno a uno hasta que coincida con su componente.
- Dependiendo del modelo y el año de su componente, la compatibilidad no está garantizada.
- Con algunos modelos, es posible que el mando a distancia no funcione o que su compatibilidad esté limitada a una parte de las funciones del componente.
- Además, no es posible añadir nuevos códigos a los ajustes predeterminados existentes del mando a distancia.
- Los códigos de mando a distancia suministrados son correctos en el momento de la impresión, pero el fabricante puede realizar cambios.



## Codici del telecomando

### 1 Tenendo premuto il tasto REMOTE MODE al quale si desidera assegnare il codice, premere e tenere premuto [DISPLAY] (per circa 3 secondi).

Il tasto REMOTE MODE/l'indicatore Remote si accende.

Sui prodotti Integra, i nomi dei tasti sono scritti con l'iniziale maiuscola. Ad esempio, tasto "Remote Mode" e tasto "Display".

#### Note:

- I codici di controllo del telecomando non possono essere inseriti per [RECEIVER] e i tasti multi zona.
- Per [TV] è possibile immettere solo codici telecomando del televisore.
- Tranne che per [RECEIVER], [TV], e per il tasto multi zona, è possibile assegnare codici di controllo di ogni categoria per i tasti REMOTE MODE. Tuttavia, tali tasti fungono anche da tasti del selettore d'ingresso, quindi scegliere un tasto REMOTE MODE che corrisponda all'ingresso al quale viene collegato il dispositivo. Per esempio, se si collega il lettore CD all'ingresso CD, scegliere il [TV/CD] quando si immette il relativo codice telecomando.

### 2 Entro 30 secondi utilizzare i tasti numerici per inserire il codice telecomando a 5 cifre.

Il tasto REMOTE MODE/l'indicatore Remote lampeggia due volte.

Se il codice telecomando non viene inserito correttamente, il tasto REMOTE MODE/l'indicatore Remote lampeggia lentamente una volta.

#### Note:

- L'elemento lampeggiante del telecomando varia a seconda del modello del ricevitore AV.
- Il telecomando è preconfigurato con preselezioni per diversi apparecchi. Inserendo un codice dall'elenco dei codici telecomando, è possibile attivare la relativa preselezione per tale apparecchio.
- Se sono presenti più codici relativi allo stesso produttore, provare a inserirli uno a uno finché non si arrivi al codice corrispondente dell'apparecchio.
- A seconda del modello e dell'anno dell'apparecchio, la compatibilità non è garantita.
- Con alcuni modelli, il telecomando può non funzionare o la sua compatibilità può essere limitata a una parte della funzionalità dell'apparecchio.
- Inoltre, non è possibile aggiungere nuovi codici alle preselezioni esistenti del telecomando.
- I codici telecomando specificati sono validi alla data della stampa del presente documento, ma sono soggetti a variazioni da parte del produttore.

## Fernbedienungscodes

### 1 Halten Sie die REMOTE MODE-Taste gedrückt, für die Sie den Code eingeben möchten, und drücken Sie (ca. 3 Sekunden lang) die [DISPLAY]-Taste.

Die REMOTE MODE-Taste/Remote-Anzeige leuchtet.

Bei den Integra-Produkten werden die Namen der Tasten groß geschrieben. Zum Beispiel „Remote Mode“ (Fernbedienungsmodus)-Taste und „Display“-Taste.

#### Hinweise:

- Der Fernbedienungscodes kann nicht [RECEIVER] und der Multi-Zonen-Taste zugeordnet werden.
- Der Taste [TV] können nur Fernbedienungscodes für einen Fernseher zugeordnet werden.
- Abgesehen von [RECEIVER], [TV] und der Multi-Zone-Taste, können die Fernbedienungscodes jeder Kategorie den REMOTE MODE-Tasten zugewiesen werden. Allerdings dienen diese Tasten auch als Quellenwahltasten. Wählen Sie also nach Möglichkeit eine REMOTE MODE-Taste, die dem Eingang zugeordnet ist, an den Sie die betreffende Quelle angeschlossen haben. Wenn Sie z.B. einen CD-Player an den CD-Eingang anschließen, sollten Sie [TV/CD] wenn Sie den Fernbedienungscodes eingeben.

### 2 Geben Sie mit den Zifferntasten innerhalb von 30 Sekunden den 5-stelligen Herstellercode ein.

Die REMOTE MODE-Taste/Remote-Anzeige blinkt zwei Mal.

Wenn der Fernbedienungscodes nicht ordnungsgemäß eingegeben wurde, blinkt die REMOTE MODE-Taste/Remote-Anzeige einmal langsam.

#### Hinweise:

- Das blinkende Element auf der Fernbedienung unterscheidet sich je nach AV-Receiver-Modell.
- Die Fernbedienung ist mit den Voreinstellungen der Fernbedienung der verschiedenen Komponenten vorkonfiguriert. Indem ein Code aus der Liste der Fernbedienungscodes eingegeben wird, können Sie die entsprechende Voreinstellung für die Komponente aktivieren.
- Wenn es mehrere Codes gibt, die sich auf einen Hersteller beziehen, versuchen Sie sie einzeln einzugeben, bis einer mit Ihrer Komponente übereinstimmt.
- Dies hängt vom Modell und Herstellungsjahr Ihrer Komponente ab und die Kompatibilität ist nicht garantiert.
- Es kann sein, dass bei einigen Modellen die Fernbedienung nicht funktioniert oder ihre Kompatibilität sich auf nur auf Teile der Funktionalität der Komponente beschränkt.
- Abgesehen davon ist es nicht möglich, den bestehenden Voreinstellungen der Fernbedienung neue Codes hinzuzufügen.
- Obwohl die angegebenen Fernbedienungscodes dem Stand bei Drucklegung entsprechen, sind Änderungen durch den Hersteller vorbehalten.



## Afstandsbedieningscodes

### 1 Houd terwijl u de REMOTE MODE toets ingedrukt houdt waarvoor u een code wilt toewijzen de [DISPLAY] toets ingedrukt (ongeveer 3 seconden).

De toets REMOTE MODE (afstandsbedieningsmodus) / Het indicatielampje afstandsbediening gaat branden.

Op producten van Integra staan de namen van de toetsen in hoofdletters. Bijvoorbeeld, de toetsen "Remote Mode" en "Display".

#### Opmerkingen:

- Er kunnen geen afstandsbedieningscodes worden ingevoerd voor [RECEIVER] en de multi zone-toets.
- Alleen TV afstandsbedieningscodes kunnen worden ingevoerd voor [TV].
- Behalve voor [RECEIVER], [TV] en de multi zone-toets, kunnen afstandsbedieningscodes vanuit elke categorie worden toegewezen aan de REMOTE MODE toetsen. Deze toetsen werken overigens ook als ingangselectortoetsen, kies dus een REMOTE MODE toets die overeenkomt met de ingang waarop u uw component wilt aansluiten. Kies indien u bijvoorbeeld uw CD-speler aansluit op de CD-ingang de [TV/CD] toets bij het invoeren van de afstandsbedieningscode.

### 2 Gebruik binnen 30 seconden de cijfertoetsen om de 5-cijferige afstandsbedieningscode in te voeren.

De toets REMOTE MODE (afstandsbedieningsmodus) / Het indicatielampje afstandsbediening knippert tweemaal.

Indien de afstandsbedieningscode niet met succes wordt ingevoerd, zal de toets REMOTE MODE/Remote-indicator eenmaal traag knipperen.

#### Opmerkingen:

- Het knippergedeelte van de afstandsbediening zal verschillen ten opzichte van het model van uw AV-receiver.
- De afstandsbediening is voorgeprogrammeerd met voorkeuzetoetsen van verschillende componenten. Door het invullen van een code uit de afstandsbediening codelijst kunt u de voorkeuzetoets voor die component activeren.
- Wanneer er meerdere codes gerelateerd zijn aan één fabrikant, probeer deze dan een voor een totdat de juiste code overeenkomt met uw component.
- Afhankelijk van het model en het bouwjaar van uw component is de compatibiliteit niet gegarandeerd.
- Bij sommige modellen werkt de afstandsbediening mogelijk niet of is de compatibiliteit ervan beperkt tot een deel van de functionaliteit van de component.
- Daarnaast is het niet mogelijk om nieuwe codes aan de bestaande voorkeuzetoetsen van de afstandsbediening toe te voegen.
- Hoewel de gegeven afstandsbedieningscodes correct zijn op het moment van afdrukken, kunnen deze door de fabrikant gewijzigd worden.

## Fjärrstyrningskoder

### 1 Håll ned knappen för det REMOTE MODE som du vill tilldela en kod samtidigt som du trycker och håller ned [DISPLAY] (i cirka 3 sekunder).

REMOTE MODE-knapp/Fjärrindikatorlampa.

På Integra-produkter, är knappnamnens begynnelsebokstav en versal. Till exempel, "Fjärrläge"-knapp och "Display"-knapp.

#### Anmärkningar:

- Fjärrkontrollkoder kan inte anges för knapparna [RECEIVER] och flerzonsknappen.
- Endast fjärrkontrollkoder för tv kan anges för [TV].
- Förutom [RECEIVER], [TV] och flerzonsknappen, kan fjärrkontrollkoder för vilken som helst kategori tilldelas för knapparna REMOTE MODE. Dessa knappar fungerar dock även som ingångväljarknappar, så använd en knapp för REMOTE MODE som motsvarar ingången som du ansluter utrustningen till. Till exempel, om du ansluter din CD-spelare till CD-ingången ska du välja [TV/CD] när du anger dess fjärrkontrollkod.

### 2 Använd sifferknapparna för att ange den femsiffriga koden inom 30 sekunder.

REMOTE MODE-knapp/Fjärrindikatorlampa blinkar två gånger.

Om fjärrkontrollkoden inte ställdes in, blinkar REMOTE MODE-knappen/fjärrindikatorn långsamt en gång.

#### Anmärkningar:

- Det blinkande elementet på fjärrkontrollen skiljer sig åt beroende på din modell av AV-receiver.
- Fjärrkontrollen har förkonfigurerats med förvalda kanaler på fjärrkontrollen för olika komponenter. Genom att ange en kod från fjärrkontrollkodlistan, kan du aktivera relevanta förvalda kanaler för den utrustningen.
- När det finns flera olika koder för en tillverkare ska du försöka att ange dem en och en tills de stämmer överens med din utrustning.
- Beroende på utrustningens modell och årgång, går det inte att garantera kompatibilitet.
- På vissa modeller kan det hända att fjärrkontrollen inte fungerar eller så kan dess kompatibilitet vara begränsad till en del av utrustningens funktion.
- Dessutom går det inte att lägga till nya koder till fjärrkontrollens existerande förvalda kanaler.
- Även om erhållna fjärrkontrollkoder är korrekta vid tryckningen, kan de ändras av tillverkaren.



## 遙控代碼

**1** 在按住想指定編碼的 REMOTE MODE（遙控模式）按鈕時，同時按住 [DISPLAY]（顯示）（約 3 秒）。

REMOTE MODE（遙控模式）按鈕 / 遙控指示燈亮起。

在 Integra 系列產品上，按鈕名稱為大寫。例如，「Remote Mode」（遙控模式）按鈕和「Display」（顯示）按鈕。

注意：

- [RECEIVER]（接收機）和多區域按鈕不能輸入遙控編碼。
- 您只能為 [TV]（電視）輸入電視遙控編碼。
- 除 [RECEIVER]（接收機）、[TV]（電視）和多區域按鈕外，您可針對 REMOTE MODE（遙控模式）按鈕指定任何類別的遙控編碼。但是，這些按鈕仍可用作為輸入選擇器按鈕，因此，請選擇與您設備所連接輸入接口對應的 REMOTE MODE 按鈕。例如，如果要將 CD 播放機連接到 CD 輸入源上，則需在輸入遙控編碼時選擇 [TV/CD]。

**2** 在 30 秒內，使用數字按鈕輸入 5 位數的遙控編碼。

REMOTE MODE（遙控模式）按鈕 / 遙控指示燈閃爍兩次。

如果無法成功輸入遙控編碼，REMOTE MODE（遙控模式）按鈕 / 遙控指示燈會慢慢地閃爍一次。

注意：

- 視您的 AV 接收機型號而定，遙控器的閃爍元件會有不同。
- 遙控器已預先設定有不同設備的遙控器預設值。透過輸入遙控編碼清單中的編碼，您可啟用該設備的相關預設值。
- 當有多個編碼與單一製造商相關時，請嘗試一個接著一個輸入，直到與您的設備對應為止。
- 視設備的型號和年份而定，並不保證與本公司產品相容。
- 在某些型號上，遙控器可能無法作用，或是其相容性限於部份設備功能。
- 除此之外，您無法新增編碼至現有的遙控器預設值。
- 雖然所提供之遙控編碼在本文件列印時為正確，製造商仍可能會對其作出修改。

## 遙控代碼

**1** 按住想指定編碼的 REMOTE MODE（遙控模式）按鈕的同時，按住 [DISPLAY]（顯示）（大約 3 秒鐘）。

REMOTE MODE（遙控模式）按鈕 / 遙控指示燈亮起。

Integra 產品上的按鈕名稱單詞首字母大写。例如，“Remote Mode（遙控模式）”按鈕和“Display（顯示）”按鈕。

注意：

- [RECEIVER]（接收機）和多區域按鈕不能輸入遙控編碼。
- 只能為 [TV]（電視）輸入電視遙控編碼。
- 除 [RECEIVER]（接收機）、[TV]（電視）和多區域按鈕外，不能為 REMOTE MODE（遙控模式）按鈕指定任何類別的遙控編碼。但是，這些按鈕仍可用作為輸入選擇器按鈕，因此，選擇與設備所要連接的輸入端對應的 REMOTE MODE（遙控模式）按鈕。例如，如果要將 CD 播放機連接到 CD 輸入端，應在輸入遙控編碼時選擇 [TV/CD]（電視 / CD）。

**2** 在 30 秒內，使用數字按鈕輸入 5 位數的遙控編碼。

REMOTE MODE（遙控模式）按鈕 / 遙控指示燈閃爍兩次。

如果不能順利輸入遙控編碼，REMOTE MODE（遙控模式）按鈕 / 遙控指示燈會緩慢閃爍一次。

注意：

- 根據 AV 接收機產品類型的不同，遙控器閃爍元素將會不同。
- 遙控器採用不同設備的遙控器預設進行預配置。通過從遙控器編碼列表輸入編碼，便可激活相應設備的相關預設。
- 單個製造商關聯多個編碼時，請嘗試逐個輸入，直至符合當前設備。
- 根據設備的產品類型和年份的不同，無法保證相容性。
- 對於某些產品類型，遙控器可能無法工作或其相容性可能受到部分設備功能性的限制。
- 此外，可能無法將新的編碼追加到現有的遙控器預設。
- 儘管付印時所提供的遙控編碼是正確的，但製造商會隨時更改。



| Dedicated Onkyo Receiver |       |
|--------------------------|-------|
| Default                  | 62503 |
| Zone 2                   | 62506 |
| Zone 3                   | 62507 |

| Cable Set Top Box |                                   |
|-------------------|-----------------------------------|
| ADB               | 02254, 02769                      |
| Aon               | 02769                             |
| Arris             | 02187                             |
| AT&T              | 00858                             |
| Bright House      | 01376, 01877                      |
| BT Vision         | 02294                             |
| Cable & Wireless  | 01068                             |
| Cable One         | 01376, 01877                      |
| Cablecom          | 01582                             |
| Cablevision       | 01376, 01877                      |
| Charter           | 01376, 01877, 02187               |
| Cisco             | 01877, 00858, 01982, 02345, 02378 |
| Com Hem           | 00817, 00660, 01666, 02015, 02447 |
| Comcast           | 01376, 01877, 01982, 02187        |
| Cox               | 01376, 01877                      |
| Daeryung          | 01877                             |
| Digeo             | 02187                             |
| DX Antenna        | 01500                             |
| France Telecom    | 00817                             |
| Freebox           | 01482                             |
| Fujitsu           | 01497                             |
| Humax             | 00660, 02142, 02447, 03051, 03053 |
| Insight           | 01376, 01877                      |
| J:COM             | 03051, 03053                      |
| Knology           | 01877                             |
| Kreatel           | 01385                             |
| Macab             | 00817                             |
| Mediacom          | 01376, 01877                      |

| Cable Set Top Box  |  |
|--------------------|--|
| mio TV             | 02802                                    |
| Motorola           | 01376, 00858, 01562, 01982, 01998, 02378 |
| Moxi               | 02187                                    |
| NEC                | 01496                                    |
| Neuf TV            | 03107                                    |
| Noos               | 00817                                    |
| NTL                | 01068, 01060                             |
| Numericable        | 02767                                    |
| Ono                | 01068, 01562                             |
| Optus              | 01060                                    |
| Orange             | 00817                                    |
| Pace               | 01376, 01877, 01068, 01060, 01982        |
| Panasonic          | 01488, 01982                             |
| Philips            | 00817, 01582, 02294, 02767               |
| Pioneer            | 01877, 01500                             |
| RCN                | 01376                                    |
| Rogers             | 01877                                    |
| Sagem              | 00817                                    |
| Samsung            | 01877, 01060, 01666, 02015, 02774        |
| Scientific Atlanta | 01877, 00858, 01982, 02345               |
| SFR                | 03107                                    |
| Shaw               | 01376                                    |
| SingTel            | 01998, 02802                             |
| Sony               | 01460                                    |
| Stofa              | 02015                                    |
| Suddenlink         | 01376, 01877                             |
| Sumitomo           | 01500                                    |
| Telewest           | 01068                                    |
| TeliaSonera        | 01385                                    |
| Telus              | 02345                                    |
| Thomson            | 01582, 01982, 02769                      |
| Time Warner        | 01376, 01877, 02187                      |

| Cable Set Top Box |  |
|-------------------|--|
| Toshiba           | 01509                                    |
| UPC               | 01582                                    |
| Verizon           | 02378                                    |
| Videotron         | 01877                                    |
| Virgin Media      | 01068, 01060                             |
| Visiopass         | 00817                                    |
| VTR               | 01376                                    |
| WideOpenWest      | 01877                                    |
| Ziggo             | 00660, 01666, 02015, 02142, 02447, 02774 |

| Cable/PVR Combination |                            |
|-----------------------|----------------------------|
| Arris                 | 02187                      |
| Bright House          | 01376, 01877               |
| Cable One             | 01376, 01877               |
| Cablevision           | 01376, 01877               |
| Charter               | 01376, 01877, 02187        |
| Cisco                 | 01877, 01982               |
| Comcast               | 01376, 01877, 01982, 02187 |
| Cox                   | 01376, 01877               |
| Digeo                 | 02187                      |
| Freebox               | 01482                      |
| Humax                 | 02142, 03051, 03053        |
| Insight               | 01376, 01877               |
| J:COM                 | 03051, 03053               |
| Knology               | 01877                      |
| Mediacom              | 01376, 01877               |
| Motorola              | 01376                      |
| Moxi                  | 02187                      |
| Numericable           | 02767                      |
| Pace                  | 01877                      |
| Panasonic             | 01982                      |
| Philips               | 01582, 02767               |
| Pioneer               | 01877                      |
| Rogers                | 01877                      |

| Cable/PVR Combination |                     |
|-----------------------|---------------------|
| Samsung               | 01877               |
| Scientific Atlanta    | 01877, 01982        |
| Shaw                  | 01376               |
| Suddenlink            | 01376, 01877        |
| Thomson               | 01582               |
| Time Warner           | 01376, 01877, 02187 |
| UPC                   | 01582               |
| Videotron             | 01877               |
| VTR                   | 01376               |
| WideOpenWest          | 01877               |
| Ziggo                 | 02142               |

| IPTV               |                            |
|--------------------|----------------------------|
| ADB                | 02254, 02769               |
| Aon                | 02769                      |
| AT&T               | 00858                      |
| BT Vision          | 02294                      |
| Canal+             | 02657                      |
| Cisco              | 00858, 02345, 02378        |
| Kreatel            | 01385                      |
| mio TV             | 02802                      |
| Motorola           | 01376, 00858, 01998, 02378 |
| Neuf TV            | 03107                      |
| Pace               | 02657                      |
| Scientific Atlanta | 00858, 02345               |
| SFR                | 03107                      |
| SingTel            | 01998, 02802               |
| TeliaSonera        | 01385                      |
| Telus              | 02345                      |
| Thomson            | 02769                      |
| Verizon            | 02378                      |

| IPTV/PVR Combination |       |
|----------------------|-------|
| ADB                  | 02769 |
| Aon                  | 02769 |



| IPTV/PVR Combination |                     |
|----------------------|---------------------|
| AT&T                 | 00858               |
| BT Vision            | 02294               |
| Cisco                | 00858, 02345, 02378 |
| Kreatel              | 01385               |
| Motorola             | 00858, 02378        |
| Neuf TV              | 03107               |
| Philips              | 02294               |
| Scientific Atlanta   | 00858               |
| SFR                  | 03107               |
| Verizon              | 02378               |

| CD                        |              |
|---------------------------|--------------|
| Advantage                 | 70032        |
| AH!                       | 70157        |
| Aiwa                      | 70157        |
| Arcam                     | 70157        |
| Atoll Electronique        | 70157        |
| Audio Research            | 70157        |
| Audiolab                  | 70157        |
| Audiomeca                 | 70157        |
| Audioton                  | 70157        |
| AVI                       | 70157        |
| Balanced Audio Technology | 70157        |
| Cairn                     | 70157        |
| California Audio Labs     | 70029, 70303 |
| Cambridge                 | 70157        |
| Cambridge Audio           | 70157        |
| Carver                    | 70157        |
| CCE                       | 70157        |
| Cyrus                     | 70157        |
| Denon                     | 70626, 70766 |
| DKK                       | 70000        |
| DMX Electronics           | 70157        |
| Dynaco                    | 70157        |
| Genexxa                   | 70000, 70032 |

| CD            |                     |
|---------------|---------------------|
| Goldmund      | 70157               |
| Grundig       | 70157               |
| Harman/Kardon | 70157               |
| Hitachi       | 70032               |
| Integra       | 71817, 70101        |
| JVC           | 70072               |
| Kenwood       | 70626, 70157, 70036 |
| Krell         | 70157               |
| Linn          | 70157               |
| Loewe         | 70157               |
| Magnavox      | 70157               |
| Marantz       | 70626, 70029, 70157 |
| Matsui        | 70157               |
| MCS           | 70029               |
| Memorex       | 70032               |
| Meridian      | 70157               |
| Micromega     | 70157               |
| Miro          | 70000               |
| Mission       | 70157               |
| Myryad        | 70157               |
| NAD           | 70000, 70721        |
| Naim          | 70157               |
| NSM           | 70157               |
| Onkyo         | 71817               |
| Optimus       | 70000, 70032        |
| Panasonic     | 70029, 70303        |
| Philips       | 70626, 70157        |
| Pioneer       | 70032, 70101        |
| Polk Audio    | 70157               |
| Primare       | 70157               |
| Proton        | 70157               |
| QED           | 70157               |
| Quad          | 70157               |
| Quasar        | 70029               |
| Radiola       | 70157               |
| RCA           | 70032               |

| CD              |                     |
|-----------------|---------------------|
| Restek          | 70157               |
| Revox           | 70157               |
| Rotel           | 70157               |
| SAE             | 70157               |
| Sansui          | 70157               |
| SAST            | 70157               |
| Siemens         | 70157               |
| Silsonic        | 70036               |
| Simaudio        | 70157               |
| Sonic Frontiers | 70157               |
| Sony            | 70490, 70000        |
| Sylvania        | 70157               |
| TAG McLaren     | 70157               |
| Tandy           | 70032               |
| Technics        | 70029, 70303        |
| Thorens         | 70157               |
| Thule Audio     | 70157               |
| Traxdata        | 70626               |
| Universum       | 70157               |
| Victor          | 70072               |
| Wards           | 70000, 70032, 70157 |
| Yamaha          | 70490, 70032, 70036 |
| Zonda           | 70157               |

| CD-R    |              |
|---------|--------------|
| Denon   | 70626, 70766 |
| JVC     | 70072        |
| Kenwood | 70626        |
| Marantz | 70626        |
| Onkyo   | 71323        |
| Philips | 70626        |
| Sony    | 70000        |

| MD    |              |
|-------|--------------|
| Onkyo | 70868        |
| Sony  | 70490, 70000 |

| MD     |       |
|--------|-------|
| Yamaha | 70490 |

| Cassette Deck |              |
|---------------|--------------|
| Aiwa          | 40029        |
| Arcam         | 40076        |
| Audiolab      | 40029        |
| Carver        | 40029        |
| Denon         | 40076        |
| Grundig       | 40029        |
| Harman/Kardon | 40029        |
| Inkel         | 40070        |
| JVC           | 40244        |
| Kenwood       | 40070        |
| Magnavox      | 40029        |
| Marantz       | 40029        |
| Myryad        | 40029        |
| Onkyo         | 42157        |
| Optimus       | 40027        |
| Philips       | 40029        |
| Pioneer       | 40027        |
| Polk Audio    | 40029        |
| Radiola       | 40029        |
| RCA           | 40027        |
| Revox         | 40029        |
| Sansui        | 40029        |
| Sony          | 40243        |
| Thorens       | 40029        |
| Victor        | 40244        |
| Wards         | 40027, 40029 |
| Yamaha        | 40097        |

| Accessory |                     |
|-----------|---------------------|
| Apple     | 81115               |
| Jamo      | 82228               |
| Logitech  | 82182               |
| Onkyo     | 82990, 81993, 82351 |



| Accessory  |       |
|------------|-------|
| Polk Audio | 82228 |

| Video - Accessory  |                            |
|--------------------|----------------------------|
| ADB                | 02254, 02769               |
| Aon                | 02769                      |
| Apple              | 02615                      |
| AT&T               | 00858                      |
| BT Vision          | 02294                      |
| Canal+             | 02657                      |
| Cisco              | 00858, 02345, 02378        |
| Kreatel            | 01385                      |
| mio TV             | 02802                      |
| Motorola           | 01376, 00858, 01998, 02378 |
| Neuf TV            | 03107                      |
| Pace               | 02657                      |
| Philips            | 02294                      |
| Scientific Atlanta | 00858, 02345               |
| SFR                | 03107                      |
| SingTel            | 01998, 02802               |
| TeliaSonera        | 01385                      |
| Telus              | 02345                      |
| Thomson            | 02769                      |
| Verizon            | 02378                      |

| Receiver |       |
|----------|-------|
| Onkyo    | 52503 |

| Satellite Set Top Box |                     |
|-----------------------|---------------------|
| @sat                  | 01300               |
| @Sky                  | 01334               |
| Acoustic Solutions    | 01284               |
| ADB                   | 00642, 00887, 01259 |
| Akura                 | 01626               |
| Alba                  | 01284               |
| Allvision             | 01334               |

| Satellite Set Top Box    |                            |
|--------------------------|----------------------------|
| Amstrad                  | 00847, 01175, 01662, 01693 |
| Ansonic                  | 02418                      |
| Arnion                   | 01300                      |
| ASCI                     | 01334                      |
| AssCom                   | 00853                      |
| Astro                    | 00173, 01100               |
| Atlanta                  | 02418                      |
| Atsat                    | 01300                      |
| AtSky                    | 01334                      |
| Audiola                  | 02418                      |
| Aurora                   | 00879, 00642, 01433        |
| Austar                   | 00879, 00642, 01259        |
| Avanit                   | 01631                      |
| Awa                      | 02418                      |
| Axil                     | 01413, 01457, 02418        |
| Axitronic                | 01626                      |
| Balmet                   | 01457                      |
| Bell ExpressVu           | 00775                      |
| Belson                   | 02418                      |
| Big Sat                  | 01457                      |
| Black Diamond            | 01284                      |
| Blaupunkt                | 00173                      |
| Boshmann                 | 01413, 01631               |
| Boston                   | 01251                      |
| Boxer                    | 01458                      |
| British Sky Broadcasting | 00847, 01175, 01662        |
| BskyB                    | 00847, 01175, 01662        |
| Bush                     | 01284, 01291, 01626, 01645 |
| Canal Digital            | 00853, 01334               |
| Canal Satellite          | 00853, 02657               |
| Canal+                   | 00853, 02657               |
| CanalSat                 | 00853, 02657               |
| Centrex                  | 01457                      |

| Satellite Set Top Box  |                     |
|------------------------|---------------------|
| CGV                    | 01413, 01567        |
| Chess                  | 01334, 01626        |
| CityCom                | 01176               |
| Clatronic              | 01413               |
| Clayton                | 01626               |
| Com Hem                | 01176, 01915        |
| Comag                  | 01413               |
| Comsat                 | 01413               |
| Coship                 | 01457               |
| Crown                  | 01284               |
| CS                     | 01631               |
| Cyfra+                 | 01409               |
| Cyfrowy Polsat         | 00853, 02527        |
| D-box                  | 00723, 01114        |
| Dantax                 | 01626               |
| Denver                 | 02418               |
| Dgtec                  | 01242, 01631, 02418 |
| Dick Smith Electronics | 02418               |
| Digi Raum Electronics  | 01176               |
| Digitality             | 01334               |
| Digifusion             | 01645               |
| Digihome               | 01284               |
| DigiLogic              | 01284               |
| DigiQuest              | 01300, 01457, 01631 |
| Digisky                | 01457               |
| DigitalBox             | 01100, 01631        |
| Digiwave               | 01631               |
| DirecTV                | 01377, 00099        |
| Dish Network           | 00775               |
| Dishpro                | 00775               |
| DishTV                 | 01300               |
| DRE                    | 01176               |
| Dream Multimedia       | 01237               |
| DSE                    | 02280, 02418        |
| DSTV                   | 00879, 00642, 01433 |

| Satellite Set Top Box |  |
|-----------------------|--|
| Durabrand             | 01284                                    |
| Echostar              | 00775, 00853, 01323, 01409, 02527        |
| Eco-Star              | 01413                                    |
| Edision               | 01631                                    |
| Elap                  | 01413, 01567                             |
| Elbe                  | 02418                                    |
| Energy Sistem         | 01631, 02418                             |
| Engel                 | 01251                                    |
| EuroLine              | 01251                                    |
| Europhon              | 01334                                    |
| Europsat              | 01413, 01611                             |
| Expressvu             | 00775                                    |
| Fagor                 | 01611                                    |
| Ferguson              | 01291                                    |
| Finlux                | 01626                                    |
| Fly Com               | 01457                                    |
| FMD                   | 01413, 01457                             |
| Foxtel                | 00879, 01176, 01356                      |
| Freesat               | 02408                                    |
| Fuba                  | 00173, 01251                             |
| Galaxis               | 00853, 00879                             |
| General Satellite     | 01176                                    |
| Globo                 | 01251, 01334, 01626                      |
| GOI                   | 00775                                    |
| Gold Box              | 00853                                    |
| Gold Vision           | 01631                                    |
| GoldMaster            | 01334                                    |
| Goodmans              | 01284, 01291                             |
| Gradiente             | 00099, 00887                             |
| Grandin               | 01626                                    |
| Grococ                | 01409, 01457                             |
| Grundig               | 00847, 00853, 00173, 00879, 01284, 01291 |
| Haier                 | 02418                                    |
| Hallo                 | 01626                                    |





| Satellite Set Top Box |  |
|-----------------------|--|
| Hama                  | 01567  |
| Hanseatic             | 01100  |
| Hirschmann            | 00173  |
| Hitachi               | 01284  |
| Hornet                | 01300  |
| HTS                   | 00775  |
| Humax                 | 01377, 01176, 01427, 01675, 01808, 01882, 01915, 02144, 02408, 02616 |
| ID Digital            | 01176  |
| ID Sat                | 01334  |
| ILLUSION sat          | 01631  |
| Imperial              | 01195, 01334   |
| Indovision            | 00887  |
| iNETBOX               | 01237  |
| Inno Hit              | 01626  |
| Innova                | 00099  |
| inVion                | 02418  |
| iotronic              | 01413  |
| ISkyB                 | 00887  |
| ITT                   | 02418  |
| ITT Nokia             | 00723  |
| Jadeworld             | 00642  |
| Jaeger                | 01334  |
| JVC                   | 00775  |
| KabelBW               | 01195, 01882, 01915  |
| Kaon                  | 01300  |
| Kathrein              | 00173, 01561, 01567  |
| Kenwood               | 00853  |
| Koenig                | 01631  |
| Kreiling              | 01626  |
| Kreiselmeyer          | 00173  |
| L&S Electronic        | 01334  |
| LaSAT                 | 00173  |
| Lava                  | 01631  |

| Satellite Set Top Box |                                   |
|-----------------------|-----------------------------------|
| Leiko                 | 01626                             |
| Lemon                 | 01334                             |
| Lenoxx                | 01611                             |
| Linsar                | 01284                             |
| Listo                 | 01626                             |
| Lodos                 | 01284                             |
| Logik                 | 01284                             |
| Macab                 | 00853                             |
| Manhattan             | 01300                             |
| Maspro                | 00173                             |
| Matsui                | 00173, 01284, 01626               |
| Maximum               | 01334                             |
| Mediabox              | 00853                             |
| Mediacom              | 01206                             |
| MediaSat              | 00853                             |
| Medion                | 01334, 01626                      |
| MegaSat               | 01631                             |
| Metronic              | 01334, 01413, 01631, 02418        |
| Metz                  | 00173                             |
| Moserbaer             | 01251                             |
| Movistar              | 02527, 02761                      |
| Multichoice           | 00879, 00642, 01433, 02059, 02060 |
| MySky                 | 01356, 01693, 01850               |
| NEOTION               | 01334                             |
| Netsat                | 00099, 00887                      |
| Nikko                 | 00723                             |
| Nokia                 | 00853, 00723, 01223               |
| Nordmende             | 01611                             |
| NPG                   | 01631                             |
| Onn                   | 01284                             |
| Optex                 | 01413, 01611, 01626               |
| Optus                 | 00879, 01356                      |
| Orbis                 | 01334                             |
| Orbitech              | 01100, 01195                      |

| Satellite Set Top Box |  |
|-----------------------|--|
| Pace                  | 00847, 00853, 00887, 01175, 01323, 01356, 01423, 01662, 01693, 01850, 02059, 02060, 02211, 02657 |
| Pacific               | 01284  |
| Palcom                | 01409, 01611   |
| Panasat               | 00879, 01433   |
| Panasonic             | 00847, 01304, 01404, 03099   |
| Panda                 | 00173  |
| Pass                  | 01567  |
| peeKTON               | 01457, 02418   |
| Philips               | 00099, 00853, 00173, 01114, 00887, 00133, 02211  |
| Phoenix               | 02418  |
| Pino                  | 01334  |
| Pioneer               | 00853, 01308   |
| PMB                   | 01611  |
| Premiere              | 00723  |
| Pro Basic             | 00853  |
| Proline               | 01284  |
| QNS                   | 01404  |
| RCA                   | 01291  |
| Regal                 | 01251  |
| Roadstar              | 00853  |
| Rollmaster            | 01413  |
| Rownsonic             | 01567  |
| SAB                   | 01251, 01300, 01631  |
| Sagem                 | 01114  |
| Saivod                | 02418  |
| Samsung               | 01377, 00853, 01175, 01206, 01458, 01662, 02986  |
| Sansui                | 01251  |
| Sanyo                 | 01626  |
| Sat Control           | 01300  |

| Satellite Set Top Box |  |
|-----------------------|--|
| Sat Industrie         | 01611  |
| SAT+                  | 01409  |
| Satplus               | 01100  |
| SatyCon               | 01631  |
| Schaub Lorenz         | 02418  |
| Schneider             | 01206, 01251   |
| Schwaiger             | 01334, 01457, 01631                                    |
| Sedeae Electronique   | 01206, 01626   |
| SEG                   | 01251, 01284, 01626                                    |
| Servimat              | 01611  |
| ServiSat              | 01251  |
| Shark                 | 01631  |
| Sherwood              | 01409  |
| Siemens               | 00173, 01334, 01626, 02418                             |
| Sigmathek             | 02418  |
| SKY                   | 00099, 00847, 00887, 01175, 01662, 01693, 01850, 02754 |
| SKY Brazil            | 00887  |
| SKY Deutschland       | 02754  |
| SKY Italia            | 00853, 01693, 01850                                    |
| SKY New Zealand       | 02211  |
| SKY PerfecTV!         | 02299, 02616, 03099                                    |
| Sky XL                | 01251  |
| Sky+                  | 01175, 01662   |
| Skymaster             | 01334, 01409, 01567, 01611                             |
| Skymax                | 01413  |
| Skyplus               | 01175, 01334   |
| SkySat                | 01100  |
| Skyvision             | 01334  |
| SM Electronic         | 01409  |
| Smart                 | 01404, 01413, 01631                                    |
| SmartVision           | 01457  |
| Sony                  | 00847, 00853, 01558, 02299                             |



| Satellite Set Top Box |   |
|-----------------------|---|
| Star                  | 00887   |
| Stream System         | 01300   |
| Strong                | 00853, 00879, 01284, 01300, 01409, 01626, 02418 |
| Sunny                 | 01300   |
| Sunstar               | 00642   |
| Supernova             | 00887   |
| Supratech             | 01413   |
| Systec                | 01334   |
| Sytech                | 02418   |
| TBoston               | 01251, 02418                                    |
| Teac                  | 01251   |
| Technical             | 01626   |
| Technika              | 01284   |
| TechniSat             | 01100, 01195                                    |
| Technosat             | 01206   |
| Techwood              | 01251, 01284, 01626                             |
| TELE System           | 01251, 01409, 01611                             |
| Telefonica            | 02527, 02761                                    |
| Telestar              | 01100, 01195, 01251, 01334, 01626               |
| Televés               | 01300, 01334                                    |
| Televisa              | 00887   |
| Tevion                | 01409   |
| Thomson               | 00847, 00853, 01175, 01046, 01291, 01662        |
| Tonna                 | 01611   |
| Topfield              | 01206   |
| Toshiba               | 01284   |
| Trevi                 | 01251   |
| Triax                 | 00853, 01251, 01291, 01413, 01611, 01626, 01631 |
| Tricolor TV           | 01176   |
| True Visions          | 02408   |
| Twinner               | 01611   |

| Satellite Set Top Box |                            |
|-----------------------|----------------------------|
| UBC                   | 00642                      |
| UEC                   | 00879, 01356               |
| United                | 01251, 01626, 02418        |
| Unitymedia            | 01882                      |
| Universon             | 00173, 01251               |
| Variosat              | 00173                      |
| VEA                   | 02418                      |
| Vestel                | 01251, 01284               |
| Viasat                | 01195                      |
| Vision                | 01626                      |
| Visiosat              | 01413, 01457               |
| Vitecom               | 01413                      |
| Vivax                 | 02418                      |
| Volcasat              | 02418                      |
| Wavelength            | 01413                      |
| Wharfedale            | 01284                      |
| Wisi                  | 00173                      |
| Worldsat              | 01251                      |
| Woxter                | 02418                      |
| Xsat                  | 00847, 01323               |
| Xtreme                | 01300                      |
| Yakumo                | 01413                      |
| Yes                   | 00887                      |
| Zehnder               | 01251, 01334, 01413, 01631 |
| Zinwell               | 02280, 02761               |

| Satellite Set Top Box |       |
|-----------------------|-------|
| @sat                  | 01300 |

| SAT/PVR Combination      |                     |
|--------------------------|---------------------|
| @sat                     | 01300               |
| Amstrad                  | 01175, 01662, 01693 |
| Atsat                    | 01300               |
| Bell ExpressVu           | 00775               |
| British Sky Broadcasting | 01175, 01662        |

| SAT/PVR Combination |  |
|---------------------|--|
| BskyB               | 01175, 01662   |
| Bush                | 01645  |
| Canal Satellite     | 02657  |
| Canal+              | 02657  |
| CanalSat            | 02657  |
| Cyfrowy Polsat      | 02527  |
| Digifusion          | 01645  |
| DigiQuest           | 01300  |
| DirecTV             | 01377, 00099, 20739  |
| Dish Network        | 00775  |
| Dishpro             | 00775  |
| Dream Multimedia    | 01237  |
| Echostar            | 00775, 02527   |
| Edision             | 01631  |
| Expressvu           | 00775  |
| Foxtel              | 01356  |
| Humax               | 01176, 01427, 01675, 01808   |
| ID Sat              | 01334  |
| iNETBOX             | 01237  |
| Kaon                | 01300  |
| Kathrein            | 01561  |
| Maximum             | 01334  |
| Mediacom            | 01206  |
| MegaSat             | 01631  |
| Movistar            | 02527  |
| Multichoice         | 02059, 02060   |
| MySky               | 01356, 01693, 01850  |
| NEOTION             | 01334  |
| Pace                | 01175, 01356, 01423, 01662, 01693, 01850, 02059, 02060, 02211, 02657 |
| Panasonic           | 01304, 03099   |
| Philips             | 00099  |
| Samsung             | 01175, 01206, 01662  |
| Sat Control         | 01300  |

| SAT/PVR Combination |                                   |
|---------------------|-----------------------------------|
| Schneider           | 01206                             |
| Sedea Electronique  | 01206                             |
| SKY                 | 01175, 01662, 01693, 01850, 02754 |
| SKY Deutschland     | 02754                             |
| SKY Italia          | 01693, 01850                      |
| SKY New Zealand     | 02211                             |
| SKY PerfecTV!       | 02299, 03099                      |
| Sky+                | 01662                             |
| Skyplus             | 01175, 01334                      |
| Smart               | 01631                             |
| Sony                | 02299                             |
| Stream System       | 01300                             |
| Strong              | 01300                             |
| Sunny               | 01300                             |
| TechniSat           | 01195                             |
| Technosat           | 01206                             |
| Telefonica          | 02527                             |
| Telestar            | 01195                             |
| Thomson             | 01175, 01662                      |
| Topfield            | 01206                             |
| Viasat              | 01195                             |
| Xtreme              | 01300                             |

| Television         |              |
|--------------------|--------------|
| A.R. Systems       | 10556, 10037 |
| Accent             | 10037        |
| Acer               | 11339        |
| Acoustic Solutions | 11037, 11667 |
| Action             | 10650        |
| Addison            | 10653        |
| AEG                | 11037, 11324 |
| Agfaphoto          | 12719        |
| Aiko               | 10037        |
| Aim                | 10037, 10499 |



| Television     |   |
|----------------|---|
| Akai           | 10178, 10556, 10037, 10714, 10715, 10208, 11675               |
| Akiba          | 10037   |
| Akito          | 10037   |
| Akura          | 10171, 10037, 10714, 10668, 11037, 11363, 11585, 11667, 11709 |
| Alba           | 10037, 10714, 10668, 11037, 11585                             |
| Alien          | 11037   |
| Allstar        | 10037   |
| Amstrad        | 10171, 10037, 11037   |
| Anam           | 10037   |
| Anam National  | 10037, 10650  |
| Andersson      | 11585   |
| Anitech        | 10037   |
| Ansonic        | 10037, 10668  |
| AOC            | 10178, 10625, 11365   |
| Ardem          | 10037, 10714  |
| Arena          | 10037   |
| Aristona       | 10556, 10037  |
| ART            | 11037   |
| Art Mito       | 11585   |
| Asberg         | 10037   |
| Astra          | 10037   |
| ATD            | 10698   |
| Atlantic       | 10037   |
| Audiosonic     | 10037, 10714, 10715   |
| Audiovox       | 11564   |
| Audioworld     | 10698   |
| Aventura       | 10171   |
| Axxon          | 10714   |
| Baird          | 10208   |
| Bang & Olufsen | 10565   |
| Barco          | 10556   |

| Television    |  |
|---------------|--|
| Basic Line    | 10556, 10037, 10668, 11037   |
| Baur          | 10037, 10195, 10512  |
| Beaumarck     | 10178  |
| Beijing       | 10208  |
| Beko          | 10037, 10714, 10715, 11652   |
| Belson        | 10698  |
| Belstar       | 11037  |
| Beon          | 10037  |
| Berthen       | 10556, 10668   |
| Bestar        | 10037  |
| Bexa          | 12493  |
| Black Diamond | 11037  |
| Blaupunkt     | 10195  |
| Blue Sky      | 10556, 10037, 10625, 10714, 10668, 11037, 10715, 10499, 11324, 11363, 11652, 11709 |
| Boca          | 11652  |
| Boman         | 11324  |
| Bork          | 11363  |
| BPL           | 10037, 10208   |
| Brandt        | 10625, 10714, 10560  |
| Brimax        | 11709  |
| Brinkmann     | 10037, 10668   |
| Brionvega     | 10037  |
| Bush          | 10556, 10037, 10714, 10668, 11037, 10698, 10208, 11585, 11652, 11667, 12719        |
| Byd:sign      | 12140, 12209   |
| Camper        | 10037  |
| Carad         | 10668, 11037   |
| Carena        | 10037  |
| Carrefour     | 10037  |
| Cascade       | 10037  |

| Television |   |
|------------|---|
| Casio      | 10037   |
| Cathay     | 10037   |
| CCE        | 10037   |
| Centrum    | 11037   |
| Centurion  | 10037   |
| Changhong  | 10508   |
| Chimei     | 11666   |
| Clarivox   | 10037   |
| Classic    | 10499   |
| Clatronic  | 10037, 10714, 11324                             |
| Clayton    | 11037   |
| Condor     | 10037   |
| Conrowa    | 10698   |
| Contec     | 10037   |
| Cosmel     | 10037   |
| CPTEC      | 10625, 11363                                    |
| Crown      | 10037, 10714, 10668, 11037, 10715, 10208, 11652 |
| Cyberpix   | 11667   |
| D-Vision   | 10556, 10037                                    |
| Daewoo     | 10178, 10556, 10037, 10634, 10499, 12098        |
| Dansai     | 10037, 10208                                    |
| Dantax     | 10714, 11037, 10715, 11652                      |
| Datsura    | 10208   |
| Dawa       | 10037   |
| Daytron    | 10037   |
| De Graaf   | 10208   |
| DEC        | 11709   |
| Decca      | 10037   |
| Denver     | 10037, 11709                                    |
| Desmet     | 10037   |
| Diamant    | 10037   |
| Diamond    | 10698   |

| Television             |  |
|------------------------|--|
| Dick Smith Electronics | 10698  |
| Digatron               | 10037  |
| Digihome               | 11667  |
| Digiline               | 10037, 10668   |
| Digitek                | 11709  |
| Digitor                | 10037, 10698   |
| Dixi                   | 10037  |
| DL                     | 11363  |
| DMTech                 | 12001  |
| Domeos                 | 10668  |
| Drean                  | 10037  |
| DSE                    | 10698  |
| Dual                   | 10037, 11037, 11585, 11667                             |
| Durabrand              | 10178, 10171, 10714, 11037, 11652                      |
| Dux                    | 10037  |
| DX Antenna             | 11817, 13817   |
| Dynatron               | 10037  |
| Dynex                  | 12049  |
| e-motion               | 11709  |
| E-max                  | 11324  |
| Easy Living            | 11666, 11709   |
| ECE                    | 10037  |
| Elbe                   | 10556, 10037   |
| Electrograph           | 11755  |
| Element                | 11886  |
| Elfunk                 | 11037  |
| ELG                    | 10037  |
| Elin                   | 10037  |
| Elite                  | 10037  |
| Emerson                | 10178, 10171, 10037, 10714, 10668, 11394, 11864, 11886 |
| Envision               | 11365, 11506   |
| Epson                  | 11379  |



| Television      |  |
|-----------------|--|
| Erres           | 10037  |
| ESA             | 10171  |
| ESC             | 10037  |
| Euroman         | 10037  |
| Europa          | 10037  |
| Europhon        | 10037  |
| Evesham         | 11248, 11667   |
| Excello         | 11037  |
| Exquisit        | 10037  |
| Ferguson        | 10037, 10625, 10560, 10195, 11037, 11585               |
| Fidelity        | 10171, 10037, 10512                                    |
| Finlandia       | 10208  |
| Finlux          | 10556, 10037, 10714, 10715, 11248, 11667               |
| Firstline       | 10556, 10037, 10714, 10668, 11037, 10208, 11363        |
| Fisher          | 10208  |
| Flint           | 10037  |
| Formenti        | 10037  |
| Fraba           | 10037  |
| Friac           | 10037, 10499   |
| Fujicom         | 11709  |
| Fujitsu         | 10809  |
| Fujitsu Siemens | 10809, 11248, 11666                                    |
| Funai           | 10171, 10714, 10668, 11037, 11394, 11666, 11817, 13817 |
| G-Hanz          | 11363  |
| Gaba            | 11037  |
| Galaxi          | 10037  |
| Galaxis         | 10037  |
| Gateway         | 11755  |
| GE              | 10178, 11454, 10625, 10560                             |
| GEC             | 10037  |

| Television |   |
|------------|---|
| Genesis    | 10037   |
| Genexxa    | 10037   |
| GFM        | 10171, 11864, 11886   |
| Godrej     | 11585   |
| Goldfunk   | 10668   |
| GoldStar   | 10178, 10037, 10714, 10715  |
| Goodmans   | 10556, 10037, 10625, 10714, 10560, 10668, 10634, 11037, 10499, 11585, 11667 |
| Gorenje    | 11585   |
| Gradiente  | 10037   |
| Graetz     | 10714   |
| Granada    | 10037, 10560, 10208   |
| Grandin    | 10556, 10037, 10714, 10668, 11037, 10715, 11652                             |
| Grundig    | 10556, 10037, 10195, 11223, 11667, 12625                                    |
| GVA        | 11363, 12098  |
| H & B      | 12001   |
| Haier      | 10037, 10698, 10508   |
| Hallmark   | 10178   |
| Hankook    | 10178   |
| Hanseatic  | 10556, 10037, 10625, 10714, 10634, 10499, 12001                             |
| Hantarex   | 10037   |
| Hantor     | 10037   |
| Harwood    | 10037   |
| Hauppauge  | 10037   |
| HB         | 11324   |
| HCM        | 10037   |
| Highline   | 10037   |
| Hinari     | 10037, 10208  |
| Hisawa     | 10714   |

| Television     |  |
|----------------|--|
| Hisense        | 10556, 10508, 10208, 11363, 12098  |
| Hitachi        | 10150, 10178, 10037, 10634, 11037, 10508, 10499, 10578, 11576, 11585, 11643, 11667, 11691, 12433 |
| Hitachi Fujian | 10150  |
| Hitec          | 10698  |
| Hoehner        | 10714  |
| Hornophon      | 10037  |
| Hugoson        | 11666  |
| Humax          | 11295  |
| Hypson         | 10556, 10037, 10714, 10668, 11037, 10715   |
| Hyundai        | 11037, 10698   |
| Iberia         | 10037  |
| ICE            | 10037  |
| iLo            | 11394  |
| Imperial       | 10037  |
| Indiana        | 10037  |
| Ingelen        | 10714  |
| Inno Hit       | 11037, 11585   |
| Innova         | 10037  |
| Insignia       | 10171, 11423, 11564, 12049   |
| Integra        | 11807, 13100, 13500  |
| Interbuy       | 10037  |
| Interfunk      | 10037, 10512   |
| Internal       | 10556  |
| Intervision    | 10037  |
| Irradio        | 10037  |
| IRT            | 10698  |
| Isukai         | 10037  |
| ITS            | 10037  |
| ITT            | 10208  |
| ITT Nokia      | 10208  |

| Television     |   |
|----------------|---|
| ITV            | 10037   |
| JGC            | 11709   |
| Jinfeng        | 10208   |
| Jinxing        | 10556, 10037, 10698   |
| JMB            | 10556, 10634, 10499   |
| Jubilee        | 10556   |
| JVC            | 10650, 10653, 10508, 11428, 11601, 12271  |
| Kaisui         | 10037   |
| Karcher        | 10714, 11324  |
| Kathrein       | 10556   |
| Kendo          | 10037, 11037, 11585   |
| Kennex         | 11037   |
| Kioto          | 10556   |
| Kiton          | 10037, 10668  |
| KLL            | 10037   |
| Kneissel       | 10556, 10037, 10499   |
| Koenig         | 10037   |
| Kolin          | 10150, 10037, 11610, 11755  |
| Kolster        | 10037   |
| Konka          | 10037, 10714  |
| Korpel         | 10037   |
| Kosmos         | 10037   |
| Kunlun         | 10208   |
| L&S Electronic | 10714   |
| Lavic          | 11363   |
| Lavis          | 11037   |
| Lecson         | 10037   |
| Lenco          | 10037, 11037  |
| Leyco          | 10037   |
| LG             | 10178, 10556, 10037, 10714, 10715, 10698, 11423, 11768, 11840, 12182, 12358, 12424, 12834 |
| Liesenkoetter  | 10037   |



| Television        |  |
|-------------------|--|
| Lifetec           | 10037, 10714, 10668, 11037, 12001                      |
| Linsar            | 11585  |
| Local India TV    | 10208  |
| Local Malaysia TV | 10698  |
| Lodos             | 11037  |
| Loewe             | 10037, 10512, 11884                                    |
| Logik             | 11037, 10698   |
| Logix             | 10668  |
| Luma              | 11037  |
| Lumatron          | 10037, 10668   |
| Lumenio           | 10037  |
| Lux May           | 10037  |
| Luxor             | 11037, 10208   |
| LXI               | 10178  |
| M Electronic      | 10037, 10714, 10634, 10195, 10512, 11652               |
| Madison           | 10037  |
| Magnavox          | 10171, 11454, 11365, 11506, 11755, 11867, 12372        |
| Magnum            | 10037, 10714, 10715                                    |
| Manesth           | 10037  |
| Manhattan         | 10037, 10668, 11037                                    |
| Marantz           | 11454, 10556, 10037                                    |
| Mark              | 10037, 10714, 10715                                    |
| Master's          | 10499  |
| Mastro            | 10698  |
| Masuda            | 10037  |
| Matsui            | 10556, 10037, 10714, 10195, 11037, 10208, 11666, 11667 |
| Matsushita        | 10650  |
| Maxent            | 11755  |
| Maxess            | 12493  |
| Meck              | 10698  |
| Mediator          | 10556, 10037   |

| Television        |  |
|-------------------|--|
| Medion            | 10556, 10037, 10714, 10668, 11037, 10698, 10512, 11248, 11585, 11667, 12001, 12719 |
| Megatron          | 10178  |
| MEI               | 11037  |
| Memorex           | 10150, 10178, 11037  |
| Mercury           | 10037  |
| Mermaid           | 10037  |
| Metronic          | 10625  |
| Metz              | 10037, 10668, 10195, 11037, 11533  |
| MGA               | 10150, 10178   |
| Micromaxx         | 10037, 10714, 10668, 11037, 11324, 12001   |
| Microspot         | 11614  |
| Mikomi            | 11037, 11585   |
| Minato            | 10037  |
| Minerva           | 10195, 11248   |
| Ministry Of Sound | 11667  |
| Minoka            | 10037  |
| Mirai             | 11666  |
| Mitsubishi        | 10150, 11250, 10178, 10556, 10037, 11037, 10512, 11171                             |
| Mivar             | 10609  |
| Moree             | 10037  |
| Morgan's          | 10037  |
| Moserbaer         | 11585  |
| MTC               | 10512  |
| MTlogic           | 10714  |
| Mudan             | 10208  |
| Multitec          | 10037, 10668, 11037  |
| Multitech         | 10037  |
| Myrica            | 11666  |
| Myryad            | 10556  |
| NAD               | 10178, 10037   |

| Television |   |
|------------|---|
| Naiko      | 10037   |
| Nakimura   | 10037   |
| National   | 10508, 10208                                    |
| NEC        | 10178, 10653, 10508, 10499                      |
| Neckermann | 10556, 10037                                    |
| NEI        | 10037, 11037                                    |
| NEO        | 11324   |
| Netsat     | 10037   |
| NetTV      | 11755   |
| Neufunk    | 10556, 10037, 10714                             |
| New Tech   | 10556, 10037                                    |
| Newave     | 10178   |
| Nikkai     | 10037   |
| Nikkei     | 10714   |
| Nikko      | 10178   |
| Nokia      | 10208   |
| Norcent    | 11365   |
| Nordmende  | 10037, 10714, 10560, 10195, 11585, 11667, 12001 |
| Normerel   | 10037   |
| Nortek     | 10668   |
| Novatronc  | 10037   |
| Novita     | 11585   |
| Nu-Tec     | 10698   |
| O.K.Line   | 11037, 11324                                    |
| Oceanic    | 10208   |
| Odys       | 12719   |
| Okano      | 10037   |
| OKI        | 11585, 11667                                    |
| Olevia     | 11610, 12124                                    |
| Omni       | 10698   |
| Onei       | 11667   |
| Onida      | 10653   |
| Onimax     | 10714   |

| Television   |  |
|--------------|--|
| Onix         | 10698  |
| Onkyo        | 11807, 13100, 13500  |
| Onn          | 11667, 11709   |
| Onyx         | 11709  |
| Opera        | 10037, 10714   |
| Optimus      | 10650  |
| Orbit        | 10037  |
| Orion        | 10556, 10037, 10714, 11037, 12001  |
| Orline       | 10037  |
| Ormond       | 10668, 11037   |
| Osaki        | 10556, 10037   |
| Osio         | 10037  |
| Osume        | 10037  |
| Otto Versand | 10556, 10037, 10195, 10512   |
| Pacific      | 10556, 10714, 11037, 11324   |
| Palladium    | 10556, 10037, 10714  |
| Palsonic     | 10037, 10698   |
| Panama       | 10037  |
| Panasonic    | 11480, 10037, 10650, 10508, 10208, 11636, 12170                                    |
| Panavision   | 10037  |
| Panda        | 10698, 10508, 10208  |
| Pansonic     | 11636  |
| Penney       | 10178  |
| Perdio       | 10037  |
| Perfekt      | 10037  |
| Petters      | 10037  |
| Philco       | 10178, 10171, 10037, 11394   |
| Philips      | 10178, 10171, 11454, 10556, 10037, 10512, 10605, 10690, 11394, 11506, 11867, 12372 |
| Phocus       | 10714, 11652   |



| Television   |  |
|--------------|--|
| Phoenix      | 10037  |
| Phonola      | 10556, 10037   |
| Pioneer      | 10037, 10698, 10512, 11457, 11636, 12171   |
| Plantron     | 10037  |
| Playsonic    | 10037, 10714, 10715, 11652   |
| Powerpoint   | 10037, 10698   |
| Prinston     | 11037, 10715   |
| Profitronic  | 10037  |
| Proline      | 10037, 10625, 10634, 11037   |
| Prosonic     | 10037, 10714, 10668, 11324, 11585, 11667, 11709, 12001                             |
| Protech      | 10037, 10668, 11037  |
| Proton       | 10178  |
| ProVision    | 10556, 10037, 10714, 11324   |
| Pvision      | 12001  |
| Pye          | 10556, 10037   |
| Qingdao      | 10208  |
| Quasar       | 10650  |
| Quelle       | 10037, 10668, 10195, 11037, 10512  |
| R-Line       | 10037  |
| Radiola      | 10556, 10037   |
| Radiomarelli | 10037  |
| RadioShack   | 10178, 10037   |
| Radiotone    | 10037, 10668, 11037  |
| RCA          | 10178, 11454, 10625, 10560, 10618, 11781, 12247, 12403, 12429, 12434, 12746, 12932 |
| Realistic    | 10178  |
| Recor        | 10037  |
| Rectiligne   | 10037  |
| Redstar      | 10037  |

| Television    |  |
|---------------|--|
| Reflex        | 10037, 10668, 11037                                    |
| Relisys       | 11585  |
| Remotec       | 10171, 10037   |
| Reoc          | 10714  |
| Revox         | 10037  |
| RFT           | 10037  |
| Roadstar      | 10037, 10714, 10668, 11037, 10715                      |
| Rolson        | 12001, 12098   |
| Rowa          | 10037, 10698   |
| Saba          | 10625, 10714, 10560                                    |
| Sagem         | 10618  |
| Saivod        | 10037, 10668, 11037                                    |
| Salora        | 10208, 12001   |
| Sampo         | 10178, 10171, 10650, 11755                             |
| Samsung       | 10178, 10556, 10037, 10618, 10650, 10208, 12051        |
| Sansui        | 10171, 10037, 10714, 11248, 12001                      |
| Sanyo         | 11037, 10508, 10208, 11142, 11365, 11585, 11667, 11974 |
| SBR           | 10556, 10037   |
| Schaub Lorenz | 10714, 11324, 11363, 11667, 12001                      |
| Schneider     | 10556, 10037, 10714, 10668, 11037                      |
| Schoentech    | 11037  |
| Scotch        | 10178  |
| Scott         | 10178  |
| Sears         | 10178, 10171   |
| Seaway        | 10634  |
| Seelver       | 11037  |
| SEG           | 10037, 10668, 11037, 12719                             |
| SEI           | 10037  |

| Television      |                                   |
|-----------------|-----------------------------------|
| Sci-Sinudyne    | 10037                             |
| Serie Dorada    | 10178                             |
| Shanghai        | 10208                             |
| Sharp           | 10650, 10818, 11165, 11423, 11659 |
| Shintoshi       | 10037                             |
| Shivaki         | 10178, 10037                      |
| Siam            | 10037                             |
| Siemens         | 10037, 10195                      |
| Siera           | 10556, 10037                      |
| Silva           | 10037                             |
| Silva Schneider | 10037                             |
| Silver          | 10715                             |
| SilverCrest     | 11037                             |
| Sinudyne        | 10037                             |
| SKY             | 10037, 11614, 11775               |
| Skyworth        | 10037, 10698                      |
| Sliding         | 11324                             |
| SLX             | 10668                             |
| Solavox         | 10037                             |
| Soniko          | 10037                             |
| Soniq           | 12493                             |
| Sonitron        | 10208                             |
| Sonneclair      | 10037                             |
| Sonoko          | 10037                             |
| Sonolor         | 10208                             |
| Sontec          | 10037                             |
| Sony            | 10810, 11505, 11167, 11651, 11825 |
| Soundesign      | 10178                             |
| Soundwave       | 10037, 11037, 10715               |
| Sowa            | 10178                             |
| Squareview      | 10171                             |
| Standard        | 10037, 11037, 11709               |
| Starlite        | 10037                             |
| Strato          | 10037                             |

| Television |  |
|------------|--|
| SunBriteTV | 11610  |
| Sungoo     | 11248  |
| Sunny      | 10037  |
| Sunstar    | 10037  |
| Sunstech   | 12001  |
| Sunwood    | 10037  |
| Supersonic | 10208  |
| SuperTech  | 10556, 10037   |
| Supra      | 10178  |
| Svasa      | 10208  |
| Swisstec   | 11614, 11775   |
| Sylvania   | 10171, 11394, 11864, 11886   |
| Symphonic  | 10171, 11394   |
| Synco      | 10178, 11755   |
| Syntax     | 11610  |
| Sysline    | 10037  |
| Tacico     | 10178  |
| Talent     | 10178  |
| Tashiko    | 10650  |
| Tatung     | 10037, 11248, 11324  |
| TCL        | 10698, 12403, 12429, 12434, 13183  |
| TCM        | 10714, 12001   |
| Teac       | 10178, 10171, 10037, 10714, 10668, 11037, 10698, 10512, 11248, 11363, 11709, 11755 |
| Tec        | 10037  |
| Tech Line  | 10037, 10668   |
| Technica   | 11037  |
| Technics   | 10556, 10650   |
| Technika   | 11667  |
| TechniSat  | 10556  |
| Technisson | 10714, 11652   |
| Techno     | 11585  |



| Television     |  |
|----------------|--|
| Technosonic    | 10556, 10625, 10499, 11324   |
| Techvision     | 11709  |
| Techwood       | 11037, 11667   |
| Tecnimagen     | 10556  |
| Teco           | 10178, 10653   |
| Tedelex        | 10208, 11709   |
| Teknika        | 10150  |
| TELE System    | 11585  |
| Telecor        | 10037  |
| Telefunken     | 10037, 10625, 10714, 10560, 10698, 11585, 11667                      |
| Telefusion     | 10037  |
| Telegazi       | 10037  |
| Telemeister    | 10037  |
| Telesonic      | 10037  |
| Telestari      | 10556, 10037   |
| Teletech       | 10037, 10668, 11037  |
| Television     | 10037  |
| Tennessee      | 10037  |
| Tensai         | 10037, 11037, 10715  |
| Tesla          | 10556, 10037, 10714, 11037, 11652                                    |
| Tevion         | 10556, 10037, 10714, 10668, 11037, 11248, 11585, 11667               |
| Thomson        | 10037, 10625, 10560  |
| Thorn          | 10037, 10499, 10512  |
| Thorn-Ferguson | 10499  |
| TMK            | 10178  |
| Tokai          | 10037, 10668, 11037  |
| Tokaido        | 11037  |
| Topline        | 10668, 11037   |
| Toshiba        | 10195, 11037, 10618, 10650, 10508, 11169, 11508, 11524, 11652, 12203 |

| Television      |  |
|-----------------|--|
| Toyoda          | 11709                                    |
| TRANS-continent | 10556, 10037, 10668, 11037               |
| Transonic       | 10037, 10698, 10512, 11363               |
| Triad           | 10556                                    |
| Trio            | 11248                                    |
| Triumph         | 10556, 10037                             |
| TVTEXT 95       | 10556                                    |
| Uher            | 10037                                    |
| Ultravox        | 10037                                    |
| UMC             | 11614, 11775                             |
| Unic Line       | 10037                                    |
| Uniden          | 12122                                    |
| United          | 10556, 10037, 10714, 11037, 10715, 11652 |
| Unitek          | 11709                                    |
| Universal       | 10037, 10714                             |
| Universum       | 10037, 10668, 10195, 11037, 10618, 10512 |
| Univox          | 10037                                    |
| V7 Videoseven   | 11666, 11755                             |
| Vestel          | 10037, 10668, 11037, 11585, 11667        |
| Vexa            | 10037                                    |
| Victor          | 10650, 10653, 11428                      |
| Videocon        | 10037, 10508                             |
| VideoSystem     | 10037                                    |
| Vidtech         | 10178                                    |
| Viewsonic       | 11365, 11564, 11755, 12049               |
| Vision          | 10037                                    |
| Vistron         | 11363                                    |
| Vivax           | 11709                                    |
| Vizio           | 11758, 12209                             |
| Vortec          | 10037                                    |
| Voxson          | 10178, 10037                             |

| Television         |                                   |
|--------------------|-----------------------------------|
| VU                 | 11365, 12098                      |
| Walker             | 11667                             |
| Waltham            | 10037, 10668, 11037               |
| Wansa              | 12098                             |
| Wards              | 10178                             |
| Watson             | 10037, 10714, 10668, 11037        |
| Wega               | 10037                             |
| Welltech           | 10714, 11652                      |
| Weltstar           | 11037                             |
| Westinghouse       | 11755                             |
| Wharfedale         | 10556, 10037, 11324, 11667        |
| White Westinghouse | 10037                             |
| Wilson             | 10556                             |
| Windsor            | 10668, 11037                      |
| Windy Sam          | 10556                             |
| Wintel             | 10714                             |
| World-of-Vision    | 12001                             |
| Wyse               | 11365                             |
| Xenius             | 10634                             |
| Xiahua             | 10698                             |
| XLogic             | 10698                             |
| Xrypton            | 10037                             |
| Yamaha             | 10650, 11576                      |
| Yamishi            | 10037                             |
| Yokan              | 10037                             |
| Yoko               | 10037                             |
| YU-MA-TU           | 10037                             |
| Zenith             | 10178, 10037, 11365, 11423, 12358 |
| Zepto              | 11585                             |
| Zonda              | 10698                             |

| VCR      |       |
|----------|-------|
| DirecTV  | 20739 |
| Go Video | 20614 |

| VCR        |              |
|------------|--------------|
| Humax      | 20739        |
| Panasonic  | 20614, 20616 |
| Philips    | 20739        |
| ReplayTV   | 20614, 20616 |
| Sonic Blue | 20614, 20616 |
| Sony       | 20636        |
| TiVo       | 20636, 20739 |

| PVR        |              |
|------------|--------------|
| DirecTV    | 20739        |
| Go Video   | 20614        |
| Humax      | 20739        |
| Panasonic  | 20614, 20616 |
| Philips    | 20739        |
| ReplayTV   | 20614, 20616 |
| Sonic Blue | 20614, 20616 |
| Sony       | 20636        |
| TiVo       | 20636, 20739 |

| TV/VCR Combination |                     |
|--------------------|---------------------|
| Amstrad            | 10171               |
| Ferguson           | 10625               |
| Fidelity           | 10171               |
| GoldStar           | 10037               |
| Grundig            | 10556, 10037, 10195 |
| LG                 | 10178               |
| Mitsubishi         | 10556               |
| Philips            | 10556, 10037        |
| Radiola            | 10556               |
| Saba               | 10625               |
| Sanyo              | 11974               |
| Schneider          | 10556, 10037        |
| Sharp              | 10818               |
| Siemens            | 10037               |
| Sony               | 11505               |
| Teac               | 10178, 10171        |



| TV/VCR Combination |       |
|--------------------|-------|
| Technics           | 10556 |
| Thomson            | 10625 |

| DVD                   |              |
|-----------------------|--------------|
| 3D LAB                | 30539        |
| Accurian              | 30675        |
| Acoustic Solutions    | 30713        |
| AEG                   | 30675        |
| AFK                   | 31152        |
| Aiwa                  | 30533        |
| Akai                  | 30675        |
| Alba                  | 30539, 30713 |
| Ambiance              | 33052        |
| Amstrad               | 30713        |
| Anthem                | 32820        |
| Aristona              | 30539, 30646 |
| ASDA                  | 32213        |
| Audix                 | 30713        |
| Autovox               | 30713        |
| Awa                   | 32587        |
| Basic Line            | 30713        |
| Bel Canto Design      | 31571        |
| Black Diamond         | 30713        |
| Blue Parade           | 30571        |
| Blue Sky              | 30713        |
| Brandt                | 30503        |
| Bush                  | 30713        |
| C-Tech                | 31152        |
| California Audio Labs | 30490        |
| Cambridge Audio       | 32808        |
| Centrum               | 30675, 30713 |
| Changhong             | 30627        |
| Cinetec               | 30713        |
| Clatronic             | 30675        |
| Clayton               | 30713        |
| Crown                 | 30713        |

| DVD                    |                                   |
|------------------------|-----------------------------------|
| Dantax                 | 30539, 30713                      |
| Denon                  | 30490, 30634, 31634, 32258, 32748 |
| Dick Smith Electronics | 31152                             |
| Digihome               | 30713                             |
| DigiLogic              | 30713                             |
| Digix Media            | 31394                             |
| Disney                 | 30675                             |
| DSE                    | 30675, 31152                      |
| Dual                   | 30713                             |
| Durabrand              | 30675, 30713                      |
| Dynex                  | 32596                             |
| Dyon                   | 33052                             |
| eBench                 | 31152                             |
| Elfunk                 | 30713                             |
| Elite                  | 31152                             |
| Emerson                | 30675, 32213                      |
| EuroLine               | 30675                             |
| Ferguson               | 30713                             |
| Finlux                 | 30741                             |
| Firstline              | 30713                             |
| Foehn & Hirsch         | 33052                             |
| Funai                  | 30675                             |
| GE                     | 30522                             |
| GFM                    | 30675                             |
| Global Sphere          | 31152                             |
| Go Video               | 30741                             |
| GoldStar               | 30741                             |
| Goodmans               | 30713, 31152                      |
| GPX                    | 30741                             |
| Grandin                | 30713                             |
| Grundig                | 30539, 30713                      |
| H & B                  | 30713                             |
| Haaz                   | 31152                             |
| Hanseatic              | 30741                             |

| DVD           |   |
|---------------|---|
| Harman/Kardon | 30582, 31229, 33228                             |
| Henss         | 30713   |
| Hitachi       | 30573, 30713, 31664                             |
| Hoehner       | 30713   |
| HotMedia      | 31152   |
| Humax         | 30646   |
| Inno Hit      | 30713   |
| Insignia      | 30741, 30675, 32428, 32596                      |
| Integra       | 30503, 30571, 30627, 31612, 31634, 32147        |
| Irradio       | 30646   |
| JVC           | 30503, 30539, 30623, 30867, 31597, 31602, 32855 |
| Kendo         | 30713   |
| Kennex        | 30713   |
| Kenwood       | 30490, 30534                                    |
| Lenco         | 30713, 33052                                    |
| Lexicon       | 32545   |
| LG            | 30741, 31602                                    |
| Limit         | 33052   |
| Lodos         | 30713   |
| Loewe         | 30539, 30741, 32474, 32783                      |
| Logik         | 30713   |
| Lumatron      | 30741, 30713                                    |
| Lunatron      | 30741   |
| Luxman        | 30573   |
| Luxor         | 30713   |
| Magnavox      | 30503, 30539, 30646, 30675, 30713, 31354        |
| Manhattan     | 30713   |
| Marantz       | 30539, 32414, 32432, 33444                      |
| Mark          | 30713   |
| Matsui        | 30713   |

| DVD                 |   |
|---------------------|---|
| Maxim               | 30713   |
| MDS                 | 30713   |
| Medion              | 30630, 30741  |
| Memorex             | 32213   |
| Metz                | 30571, 30713  |
| Micromedia          | 30503, 30539  |
| Micromega           | 30539   |
| Microsoft           | 30522, 32083  |
| Minax               | 30713   |
| Mitsubishi          | 30713   |
| Momitsu             | 33052   |
| NAD                 | 30741   |
| NEC                 | 30741, 31602  |
| Onkyo               | 30503, 30627, 31612, 32147, 30571, 31634                                    |
| Oppo                | 30575, 32545  |
| Orion               | 30713   |
| Ormond              | 30713   |
| Pacific             | 30713   |
| Palladium           | 30713   |
| Panasonic           | 30503, 30490, 31579, 31641, 32523, 32710, 32859                             |
| Pelican Accessories | 30533   |
| Philco              | 30675   |
| Philips             | 30503, 30539, 30646, 30675, 30713, 31340, 31354, 32056, 32084, 32434, 32689 |
| Pioneer             | 30571, 30142, 30631, 31571, 32442, 32860                                    |
| Polk Audio          | 30539   |
| Presidian           | 30675   |
| ProAudio            | 31394   |
| Proscan             | 30522   |
| Proson              | 30713   |
| Pye                 | 30539, 30646  |





| DVD             |   |
|-----------------|---|
| Radionette      | 30741   |
| Radiotone       | 30713   |
| RCA             | 30522, 30571, 32213, 32587                                    |
| REC             | 30490   |
| Red             | 32213   |
| Redstar         | 31394   |
| Roadstar        | 30713   |
| Rotel           | 30623   |
| Salora          | 30741   |
| Samsung         | 30490, 30573, 30199, 30820, 31635, 32069, 32329, 32489, 33195 |
| Sanyo           | 30713   |
| Schneider       | 30539, 30646, 30713   |
| Schoentech      | 30713   |
| Scott           | 31394   |
| SEG             | 30713   |
| Semp            | 30503   |
| Sharp           | 30630, 30675, 30713, 32250, 32474, 32652, 32869               |
| Sherwood        | 30741, 33052  |
| Shinonic        | 30533   |
| Silva Schneider | 30741   |
| SilverCrest     | 31152   |
| Skantic         | 30539, 30713  |
| SM Electronic   | 31152   |
| Smart           | 30713   |
| Sony            | 30533, 30864, 31033, 31070, 31431, 31516, 31633, 32180        |
| Soundwave       | 30713   |
| Star Clusters   | 31152   |
| Strato          | 31152   |
| Strong          | 30713   |
| Supervision     | 31152   |

| DVD            |  |
|----------------|--|
| Sylvania       | 30630, 30675                             |
| Symphonic      | 30675                                    |
| Tamashi        | 31394                                    |
| Tandberg       | 30713                                    |
| Targa          | 30741                                    |
| Tchibo         | 30741                                    |
| TCL            | 32587                                    |
| TCM            | 30741                                    |
| Teac           | 30571, 30741, 30675, 31394               |
| Technica       | 30713                                    |
| Technics       | 30490                                    |
| Techwood       | 30713                                    |
| Teletch        | 30713                                    |
| Theta Digital  | 30571                                    |
| Thomson        | 30522                                    |
| Toshiba        | 30503, 31639, 32277, 32551, 32705, 33157 |
| Transonic      | 31394                                    |
| TVE            | 30713                                    |
| United         | 30675, 30713, 31152                      |
| Universum      | 30741, 30713                             |
| Urban Concepts | 30503                                    |
| Vestel         | 30713                                    |
| Victor         | 31597                                    |
| Vizio          | 32563                                    |
| Vtrek          | 32587                                    |
| Waltham        | 30713                                    |
| Wellington     | 30713                                    |
| Weltstar       | 30713                                    |
| Wharfedale     | 30713                                    |
| Windsor        | 30713                                    |
| Windy Sam      | 30573                                    |
| Xbox           | 30522, 32083                             |
| XLogic         | 31152                                    |

| DVD    |   |
|--------|---|
| Yamaha | 30490, 30539, 30646, 30817, 31354, 32298, 32299 |
| Zenith | 30503, 30741                                    |

| Blu-ray Disc    |   |
|-----------------|---|
| Ambiance        | 33052   |
| Anthem          | 32820   |
| Cambridge Audio | 32808   |
| Denon           | 32258, 32748                                    |
| Dyon            | 33052   |
| Foehn & Hirsch  | 33052   |
| Funai           | 30675   |
| Harman/Kardon   | 33228   |
| Insignia        | 30675, 32428, 32596                             |
| Integra         | 32147, 32900, 32910, 33100, 33101, 33500, 33501 |
| JVC             | 32855   |
| Lenco           | 33052   |
| Lexicon         | 32545   |
| LG              | 30741, 31602                                    |
| Limit           | 33052   |
| Loewe           | 32474, 32783                                    |
| Magnavox        | 30675   |
| Marantz         | 32414, 32432, 33444                             |
| Momitsu         | 33052   |
| Onkyo           | 32147, 32900, 32910, 33100, 33101, 33500, 33501 |
| Oppo            | 32545   |
| Panasonic       | 31641, 32523, 32859                             |
| Philips         | 32084, 32434, 32689                             |
| Pioneer         | 30142, 32442                                    |
| Samsung         | 30199, 33195                                    |
| Sharp           | 32250, 32474, 32652                             |
| Sherwood        | 33052   |

| Blu-ray Disc |                     |
|--------------|---------------------|
| Sony         | 31516, 32180        |
| Sylvania     | 30675               |
| Toshiba      | 32551, 32705, 33157 |
| Vizio        | 32563               |
| Yamaha       | 32298, 32299        |

| DVD-R     |  |
|-----------|--|
| Accurian  | 30675                                    |
| Aristona  | 30646                                    |
| Denon     | 30490                                    |
| Emerson   | 30675                                    |
| Funai     | 30675                                    |
| Go Video  | 30741                                    |
| GPX       | 30741                                    |
| Hitachi   | 31664                                    |
| Humax     | 30646                                    |
| Irradio   | 30646                                    |
| JVC       | 31597                                    |
| LG        | 30741                                    |
| Loewe     | 30741                                    |
| Magnavox  | 30646, 30675                             |
| Medion    | 30741                                    |
| Panasonic | 30490, 31579, 32523, 32710, 32859        |
| Philips   | 30646, 31340                             |
| Pioneer   | 30631, 32860                             |
| Pye       | 30646                                    |
| RCA       | 30522                                    |
| Samsung   | 30490, 31635                             |
| Schneider | 30646                                    |
| Sharp     | 30630, 30675, 32869                      |
| Sony      | 31033, 31070, 31431, 31516, 31633, 32180 |
| Sylvania  | 30675                                    |
| Targa     | 30741                                    |
| Toshiba   | 31639, 32277, 32551                      |



| DVD-R  |       |
|--------|-------|
| Victor | 31597 |
| Yamaha | 30646 |
| Zenith | 30741 |

| HD-DVD    |                    |
|-----------|--------------------|
| Integra   | 32901, 33104 33504 |
| LG        | 30741              |
| Microsoft | 32083              |
| Onkyo     | 32901, 33104 33504 |
| Xbox      | 32083              |

| TV/DVD Combination |                            |
|--------------------|----------------------------|
| Akai               | 11675                      |
| Black Diamond      | 11037, 30713               |
| Blue Sky           | 11037, 30713               |
| Bush               | 11037, 10698, 12719, 30713 |
| Centrum            | 11037, 30713               |
| Crown              | 11037, 30713               |
| DMTech             | 12001                      |
| Dual               | 11037, 30713               |
| Dynex              | 12049                      |
| Elfunk             | 11037, 30713               |
| Emerson            | 11394, 11864, 11886, 30675 |
| Ferguson           | 11037, 30713               |
| Goodmans           | 11037, 30713               |
| Grandin            | 30713                      |
| Grundig            | 30539                      |
| H & B              | 12001                      |
| Hanseatic          | 12001                      |
| Hitachi            | 11037, 11667, 30713        |
| Insignia           | 12049                      |
| JVC                | 12271                      |
| LG                 | 11423                      |
| Logik              | 11037, 30713               |
| Luxor              | 11037, 30713               |

| TV/DVD Combination |  |
|--------------------|--|
| Magnavox           | 12372                                    |
| Matsui             | 11037, 30713                             |
| Medion             | 12719                                    |
| Nordmende          | 12001                                    |
| Odys               | 12719                                    |
| Panasonic          | 12170                                    |
| Philips            | 11454, 10556, 11394, 30539               |
| Powerpoint         | 10698                                    |
| Prosonic           | 12001                                    |
| Pvision            | 12001                                    |
| RCA                | 12746, 12932                             |
| Schaub Lorenz      | 12001                                    |
| SEG                | 11037, 12719, 30713                      |
| Sharp              | 10818                                    |
| Soniq              | 12493                                    |
| Sunstech           | 12001                                    |
| Sylvania           | 10171, 11394, 11864, 11886, 30630, 30675 |
| Teac               | 10698                                    |
| Technica           | 11037, 30713                             |
| Telefunken         | 10698                                    |
| Teletech           | 11037, 30713                             |
| Thomson            | 10625                                    |
| Toshiba            | 11524                                    |
| United             | 11037, 30713                             |
| Universum          | 30713                                    |
| Vestel             | 11037                                    |
| Viewsonic          | 12049                                    |
| Weltstar           | 11037, 30713                             |



# Memo



SN 29401094

(C) Copyright 2012 ONKYO SOUND & VISION CORPORATION Japan. All rights reserved.

Y1112-1



\* 2 9 4 0 1 0 9 4 \*