



onn™



Universal Remote
Model: ONB13AV004

PRODUCT GUIDE

Table of Contents

- Introduction 2
- Battery Installation..... 3
 - Care and Maintenance 3
- Button Functions 4
- Programming Your Remote 6
 - Direct Code Entry 6
 - Auto Code Search 8
 - Controlling Combo Devices 9
- Master Volume Feature 10
- Reset to Factory Settings..... 11
- Troubleshooting 12
- FCC Statement..... 13
- Remote Code Section 14

Congratulations on your purchase of the ONN Universal Remote. This remote is capable of operating thousands of audio/video devices including TVs, DVD players, cable, satellite receivers, and more!

**IMPORTANT:
SAVE THIS MANUAL AND CODE LIST FOR
FUTURE REFERENCE**

QR Code

Scan the QR code to view our helpful demonstration video for programming your ONN remote.



Scan this to view remote setup video
Mira a ver el video de instalación remota
<http://www.myonnremote.com>

Battery Installation

Your universal remote requires two (2) AAA Alkaline batteries (not included).

To Install the Batteries:

1. Remove the battery compartment cover by sliding the cover down.
2. Match the (+) and (-) marks on the batteries to the (+) and (-) marks inside the battery compartment, then insert two (2) AAA Alkaline batteries. Be sure to use fresh batteries.
3. Slide the battery compartment cover back into place.

Note: *If your remote stops operating properly, replace the batteries with new ones. The remote will retain the codes you have programmed for up to 10 minutes after the batteries are removed.*

Battery Precautions:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (Ni-Cd, Ni-MH, etc.) batteries.
- Always remove old, weak or worn-out batteries promptly and recycle or dispose of them in accordance with local and national regulations.

Care and Maintenance

- Keep the remote away from moisture. If it gets wet, dry it immediately.
- Use and store the remote at normal household temperatures.
- Use a soft, damp cloth to clean the remote.
- If the remote is not going to be used for a long period of time, remove the batteries from the remote.
- Handle the remote with care.

Button Functions

TV, CBL/SAT, DVD/ VCR, AUX
Selects the device to control.

Red Indicator Light when any button is pressed.

ON•OFF Turns the device On or Off.

EXIT Exits On-Screen Menus.

 
MUTE Turns off the TV sound while the picture remains. In **SHIFT** mode **OK** Selects menu items for the device you are controlling.

INPUT Selects the video inputs from available viewing sources.

NUMBERS
Enter numbers for direct channel selection.

DOT: Used to select digital channels, for example: 4.1, 9.2.


RECORD, PLAY STOP, REWIND, FAST FORWARD, PAUSE

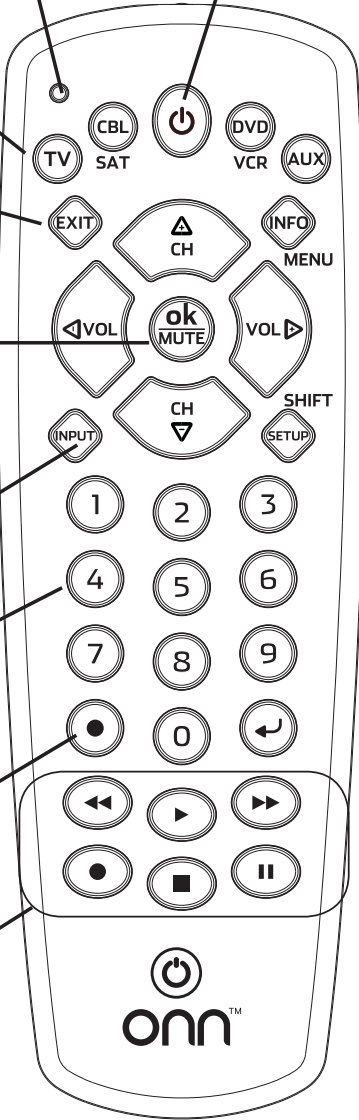

Button Functions, cont.

INFO displays/selects on-screen channel information, etc.

 MENU displays the Menu on the TV and other devices. Use the **SHIFT** button to access this feature.

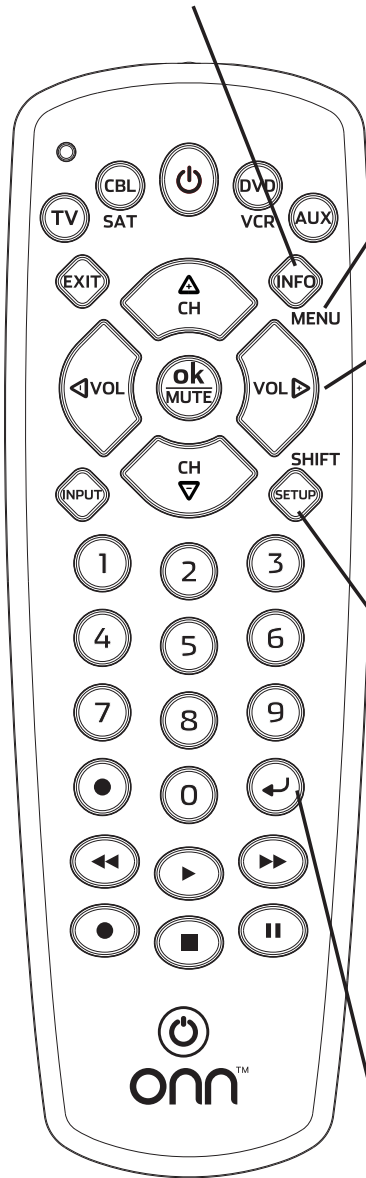

VOLUME UP/DOWN

Changes the volume level of the device, normally the TV.

CHANNEL UP/DOWN

Changes the channels. In **SHIFT** mode, these buttons navigate on-screen cursors and are used to make selections.

SETUP button is used to program the remote.

SHIFT is the alternative function of this button.

Use the **SHIFT** button to access the Menu and Navigation functions of your device. To enter the **SHIFT** mode press this button once. To exit the shift mode, press the **SHIFT** button again.

NOTE: The red indicator light will blink when the remote is in SHIFT mode.

ENTER

For some TV models, the **ENTER** button is used after a channel number is entered to immediately change to the selected channel.

Programming Your Remote

Your ONN universal remote control is designed to control up to 4 different audio/video devices such as TV, DVD, VCR, satellite, cable and audio using only one remote. To use this remote, you will need to program it to control the devices of your choice. There are two ways to program the remote - direct code entry or auto code search.

Direct Code Entry (Recommended)

1. Locate the Remote Code List provided in this manual. Find the **DEVICE CATEGORY** you wish to program (for example **TV, DVD, SAT, AUX**) and then find the **BRAND** of that device. Circle all the codes under that brand. Example: For a GE TV, locate the TV code section then circle all of the GE TV codes.

 
2. Manually turn on the device you wish to control.
3. Press and hold the **SETUP** button until the red indicator light stays on (approximately 2 seconds) and then release the **SETUP** button.



4. Press and release the desired device button on the remote (**TV, DVD, SAT, AUX**). The red indicator will blink once and then remain on.



5. Enter the first 4-digit code previously found in the code list using the number buttons on the remote. If the code entered is a valid code, the red indicator light will turn off. If the code entered is not a valid code, the red indicator light will flash and remain on allowing you to re-enter the code.

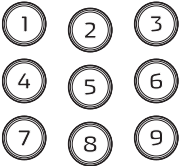

Note: *If no buttons are pressed for 35 seconds, the remote will exit the SETUP mode and you will have to*

Programming Your Remote

start over.



6. Point the remote at the device. Press the **POWER** button—if the device turns off, no further programming is required for that device. If the device does not turn off, return to step 3 and use the next code found in the code list. Continue this process until a code for your device is found.

To view a helpful demonstration video for programming your ONN remote, see QR code on page 2 of this manual.

Programming Notes

- If your device does not respond to the remote after trying all codes listed or your brand is not listed in the code list, use the Auto Code Search method to program your remote.
- Sometimes the first code that “works” with your device may operate only a few functions of your device. There may be another code in the code list that performs more functions. Try other codes from the code list for more functionality.
- You can use any device button to control other devices in your home entertainment system. For example, you can use the **AUX** device button to control an audio receiver or a DVD, VCR, satellite, etc.
- For combination devices, you may have to enter a code for each device. For example, for a VCR/DVD device, you may have to enter a code for the DVD under the **DVD** button and enter a code for the VCR using a different device button on the remote.
- Write down the code found to operate your device for future reference.

Programming Your Remote

Auto Code Search

The Auto Code Search searches automatically through all of the codes stored in this remote. Read all the following steps prior to starting the auto search as you will need to be prepared to lock-in the proper code when found.



1. Manually turn on the device you wish to control.
2. Press and hold the **SETUP** button until the red indicator light stays on (approximately 4 seconds) and then release the button.
3. Press and release the desired device button on the remote (**TV, DVD, SAT, AUX**). The red indicator will blink once and then remain on.
4. Point the remote at the device and press and release the **POWER** button (for TV) or **PLAY** button (for DVD, VCR, etc.) to start the search. The red indicator will flash (approximately every 2 seconds) as the remote searches. **Note:** *The remote must be pointed at the device for the duration of this search.*
5. Place your finger on the **#1** button so you are prepared to lock-in the code.
6. When the device shuts off or begins playing, press the **#1** button to lock-in the code. The red indicator light will turn off. **Note:** *You have approximately two seconds after the device shuts off or begins playing to lock-in the code.*
7. Point the remote at the device and check to see if the remote operates the device as desired. If it does, no further programming is required for that device. If it does not, return to step 2 and start the auto search.

Programming Your Remote

To view a helpful demonstration video for programming your ONN remote, see QR code on page 2 of this manual.

Programming Notes

- This process may take several minutes as the remote contains many codes.
- The **SETUP** button can be used during the search process to reverse the direction of the search of the remote codes. For example, if you miss the code for your device and the remote is continuing to search (as indicated by the blinking red light), press the **SETUP** button and the code search will reverse direction and return to the code.
- When using the Auto Code Search programming method, the device button corresponding to the type of device you want to control must be selected (for example, the **TV** device button must be selected in step 3 if you want to control a TV, the **DVD/VCR** device button for a DVD player, etc.)
- Sometimes the first code that “works” with your device may operate only a few functions of your device. There may be another code in the code list that performs more functions. Continue the code search as directed above until the best code is found.

Controlling Combo Devices

Some Combo devices (e.g. TV/VCR, TV/DVD, DVD/VCR, etc.) will require you to setup up two different Mode buttons to control both parts of the Combo device. For example, if you have a TV/DVD Combo, you might need to set up one code under the **TV** button to control the TV part AND a separate code (under any other Mode button) to control the DVD part.

Master Volume Feature

Master Volume Feature

The Master Volume Feature allows you to select a single device (TV or audio receiver) that the volume control always controls. For example, the remote can be in TV mode while the volume buttons control the volume on your audio receiver instead of your TV.

Enabling the Master Volume Feature



1. Press and hold the **SETUP** button until the red indicator stays on (approximately 4 seconds) and then release the button.



2. Press and release desired device button (**TV, DVD, SAT, AUX**) for the device you wish to setup to control the volume.



3. Press and release the **MUTE** button.



4. Press and release the **VOL +** button. The red indicator will blink twice and then go off.

To test the feature put the remote in another mode such as the TV mode if you programmed the audio receiver to be the Master Volume Device. Point the remote at the audio receiver, press and hold either the **VOL +** or the **VOL -** button. If the audio receiver volume changes then the remote is programmed correctly. If the TV volume changes and not the audio receiver, you will have to repeat the steps above and test again.



Disabling the Master Volume Feature

1. Press and hold the **SETUP** button until the red indicator stays on (approximately 4 seconds) and then release the button.

Master Volume Feature, cont.



2. Press and release the device button (**TV, DVD, SAT, AUX**) which is programmed to control the Master Volume Feature.



3. Press and release the **MUTE** button.



4. Press and release the **VOL - button**. The red indicator light will blink twice and go off.

To make sure the Master Volume Feature is disabled, put the remote in TV mode if you programmed the audio receiver to be the Master Volume Device. Point the remote at the TV and press a volume button. If the volume changes on the TV, the feature is disabled. If the volume on the audio receiver changes, and not the TV, you will have to repeat the steps above and test again.

Reset to Factory Settings



1. Press and hold the **SETUP** button until the red indicator stays on (approximately 4 seconds) and then release the button.



2. Press and release the **OK** button.



3. Press and release the number **#0** button. The red indicator light will flash twice.

Troubleshooting

Remote does not operate your device.

- Make sure the batteries are fresh and installed correctly.
- Aim the remote directly at your device, and make sure that there are no obstructions between the remote and device.
- Make sure you select the appropriate device on the remote you wish to control, for example, TV for TV, DVD for DVD, etc.
- Try programming the remote with a different code. See Direct Code Entry section.
- Remote may not be compatible with your device.

Remote does not operate some features of your device.

- Sometimes a particular code might operate a few features but not all. Try programming remote with a different code from the code list. See Direct Code Entry section.
- Remote may not be able to operate all features of your device or button names may be different than that of your original remotes.

Remote Code is not available for a combo device (e.g. TV/VCR, TV/DVD)

- Some Combo devices (e.g. TV/VCR, TV/DVD, DVD/VCR, etc.) will require you to set up two different Mode buttons to control both parts of the Combo device. For example, if you have a TV/DVD Combo, you might need to set up one code under the TV button to control the TV part AND a separate code (under any other Mode button) to control the DVD part.

BEFORE YOU RETURN THIS PRODUCT TO THE STORE, PLEASE VISIT THE WEBSITE www.myOnnRemote.com FOR FURTHER ASSISTANCE; Or, contact us at 1-800-654-8483 between 7:30AM—5:00PM CST.

FCC Statement

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Distributed by Wal-Mart Stores, Inc.
Bentonville, AR 72716
MADE IN CHINA

Code List – Lista de Códigos

TV

Abex	0401, 4021	Dell.....	0981
Acer	3291, 4001	1401, 2041, 3441, 3601, 3811
Acme	0471	Diamond Vision	1211
ADA	0461	1611, 2001, 4771, 4811
ADC	1431, 1661	Digimate	4301
Admiral	0371, 0681, 1441, 1661, 4991	Digistar	0381, 0581, 0871, 1061
Advent	3261, 0581	2451, 2471, 3811, 3881, 3901
.....	0631, 0871, 2131, 2891, 4931	Dimensia.....	1421, 1691, 3421
Adventura	0151	Dish Network.....	5491
Aiko.....	1011, 4321	Disney.....	0371, 1101
Aiwa.....	0411	Distar	3231
.....	0651, 0931, 1411, 4731, 4801	Dukane	1271, 1981
Akai.....	3215	Dumont.....	0001, 1771, 1781
.....	3111, 0331, 0351, 0781, 1901	Durabrand.....	0371, 0861
.....	4141, 4151, 4461, 5141, 5171	0921, 1381, 2271, 2291, 5121
Alleron.....	1711	Dynasty.....	1941
Amark	1441	Dynex	5311, 3141, 3161, 0371, 2891
Ames	1275	Electroband	0001, 1901
Amtron.....	2191	Electrohome ..	0001, 1221, 1921, 2151, 3431
AMW.....	0645, 0825	Elektra.....	1661
ANABA.....	1375	Element.....	5361, 5411, 2401, 4111
Anam National	0271	Elite Video.....	0901
.....	1941, 2151, 2191, 2331, 3431	Emerson	5341, 2761, 5221, 5231, 0001
AOC	0001, 0011, 0251, 0391	0021, 0031, 0041, 0271, 0281
.....	0611, 0891, 1221, 4221, 4261	0291, 0371, 0441, 0451, 0691
Apex	0045, 0191, 0245	0701, 0731, 0741, 0851, 0931
.....	0375, 0425, 0431, 0671, 1025	1221, 1251, 1261, 1371, 1381
.....	1105, 1891, 2911, 4841, 5111	1451, 1461, 1551, 1611, 1631
Archer	1441	1681, 1701, 1711, 1931, 1941
Aspect	1271	2171, 2191, 2361, 3451, 4701
Audiovox.....	2191, 2451, 4031, 4051, 4521	4731, 4751, 4761, 4831, 4911
Aurora.....	3061	Envision	5401
Axion.....	0881	0001, 0071, 1221, 3751, 4261
Bang&Olufsen.....	1591	ESA	1381
Belcor	0001	Fisher.....	1161, 1261
Bell&Howell ...	1261, 1421, 1661, 1691, 3421	1531, 1581, 1911, 3481, 5001
BenQ	1741, 1761, 2221, 3871	Fluid.....	2401, 2421, 2431
Bluesky	3511, 3921	Fujitsu	0901, 1711, 4241, 4341
Bradford	2191	Funai.....	0701, 0931, 1381
Broksonic	0211, 0371, 0851, 1631, 4951	1711, 1941, 2191, 4731, 4761
Brokwood	0001	Futuretec	1941, 2191
Candle	0001, 0151, 0961, 1221	Gateway	0501
Capehart.....	0391, 4221	GE.....	0001, 0041, 0051, 0141
CCE	3721	0261, 0361, 0791, 0811, 1221
Celebrity	1901	1421, 1691, 1921, 1951, 2111
Celera	0191	2151, 3421, 3431, 4011, 4921
Centrios	1361	Gibraltar.....	0001, 1771, 1781
Centurion.....	1221	Gold Star	0001, 0251, 0611, 0761, 0931
Cetomer.....	0001, 1631, 2901, 2961	1181, 1221, 1501, 1911, 4731
Cetronic	1941	GPX	4701
Changhong.....	0191, 1891, 4841	Gradiente.....	0001, 2291, 3661, 3951, 3961
Chimei	3071	Grundy.....	1711, 2191
Cineral	3511, 4321	Guestvision.....	1861
Citizen.....	0001, 0351	Gvision.....	4871
.....	0371, 0961, 1011, 1221, 1311	Haier	0671
.....	1381, 1661, 1941, 2191, 4321	0861, 0921, 1741, 3831, 4851
Clairtone	0011	Hallmark	0001, 1221
Classic.....	0191, 1891, 1941, 4841	Hannspree	5451, 5461, 5291
CLP	0061	Harvard.....	2191
CLP Classic.....	0001, 0041, 0161	Hauppauge.....	3791
COBY	3351, 2511, 2521	Hello Kitty	5391
.....	2531, 2541, 2551, 5091, 5191	HP.....	3491, 4881
Color voice	1431	Hisense.....	5331, 4671, 0671
Coloryme.....	0001, 1221, 1431	2081, 2211, 3671, 4381, 4391
Concerto.....	0001, 1221	Hitachi	3341
Concierge	1771, 1781	0001, 0841, 0931, 1041, 1221
Contec.....	0011, 1911, 1941, 2191	1271, 1341, 1371, 1481, 1661
Cornea.....	1471	1721, 1751, 1801, 1911, 1981
Craig	1941, 2191	2051, 3621, 4121, 4331, 4731
Crosley	1961	Hyundai	4651
Crown	1941, 2191	ILO.....	3215
CTX.....	1441	1141, 1381, 1971, 2391, 2481
Curtis Mathes	5351	3691, 4231, 5031, 5141, 5171
.....	5371, 0001, 0261, 0351, 1191	IMA	2191
.....	1221, 1261, 1311, 1421, 1551	Infinity	1171, 1961, 4791
.....	1661, 1691, 3421, 4011, 4941	InFocus.....	3421
CXC	1941, 2191	Initial	2481, 4231, 4821, 5031, 5041
Cybervision.....	3511	Insignia	0371, 0581, 0701, 0871
Daewoo	0001	0921, 1241, 1381, 2241, 2271
.....	0221, 0251, 0591, 0721, 0831	2891, 2921, 3761, 3841, 4371
.....	0971, 1011, 1081, 1221, 1231	4721, 4761, 5051, 5061, 5181
.....	1251, 1431, 1501, 1521, 1551	Integra	1841
.....	1561, 1941, 2181, 4321, 4681	Inteq	1771, 1781
Daytron.....	0001, 1221	ISymphony	3041
		Janeil	0151

Code List – Lista de Códigos

JBL.....	1961	2771, 2781, 2791, 5151, 5161
JC Penney.....	0001, 0051, 0251, 0261	Oncommand.....	1861, 3991
.....	0351, 0791, 0811, 0961, 1221	Onking.....	1941
.....	1311, 1421, 1451, 1691, 1911	Onkyo.....	3101
.....	1921, 1951, 3421, 3451, 4011	Onwa.....	1941, 2191
JCB.....	1901	Optimus.....	0201, 0401, 1571
Jensen.....	0001, 1221, 2271	1881, 3551, 4021, 4691, 5201
JVC.....	5281, 0311, 0481, 0771, 0901	Optoma.....	3121, 2441
.....	0941, 1281, 1481, 1801, 1911	Optonica.....	0341, 1441
.....	2381, 2751, 4121, 4201, 5071	Orion.....	0281, 0371, 1771, 1781
Kawasaki.....	4741	Panasonic National.....	5481, 3381, 3401
Kawasho.....	0001, 1221, 1901	0051, 0201, 0951, 1091, 1491
Kaypani.....	0391, 4221	1571, 1651, 1831, 1881, 1961
KEC.....	2191, 1941	2151, 2711, 2801, 3431, 3551
Kenwood.....	0001, 1221	3771, 4691, 4781, 4861, 5201
KLH.....	0191	Philco.....	0001, 0251, 0321, 0961
Kloss Novabeam.....	0151, 1021	1021, 1221, 1671, 1801, 1961
Kogi.....	4871	2151, 2321, 2941, 3431, 3931
Konka.....	5441, 0471, 0521	Philips.....	3031, 3131, 3151
.....	0751, 1241, 1671, 2121, 2191	3171, 3371, 3391, 0181, 0001
.....	2241, 2371, 4621, 4901, 4971	0161, 0321, 0421, 0541, 0661
KTV.....	0011, 1491, 1681, 1941, 2191	0701, 0791, 0911, 0961, 1021
Kurazai.....	1661	1151, 1171, 1381, 1391, 1601
KVWorld.....	2931	1741, 1801, 1961, 2151, 2321
Lasonic.....	1211, 1611, 4811	3431, 3541, 3591, 3861, 3911
Legend.....	0581	3971, 3981, 4191, 4761, 4791
LG.....	5501, 5511	Philips Magnavox.....	0181, 0681, 0911, 1171
.....	3001, 3021, 3091, 3221, 3281	1961, 2321, 3591, 4791, 4991
.....	3311, 5271, 0001, 0131, 0251	Pilot.....	0001
.....	0611, 0761, 0931, 1181, 1221	Pioneer.....	0001, 0401, 1221, 1371
.....	1471, 1501, 1911, 3811, 4731	1511, 1841, 1981, 4021, 4661
Liquidvideo.....	0881, 1111	PIVA.....	2411, 5021
Lodgenet.....	1421	Planar.....	4251
.....	1661, 1691, 2091, 3421, 4091	Polaroid.....	0191
Loewe.....	1871, 1961	0581, 1241, 2081, 2271, 2311
Logik.....	1421, 1661, 1691, 3421	2401, 2451, 3741, 4631, 5131
Luce.....	0301	Portland.....	0001
Luxman.....	0001, 1221	0251, 1011, 1081, 1221, 1551
Lxi.....	0001, 0261, 0811	Precision.....	0621
.....	0931, 1221, 1261, 1311, 1421	Price Club.....	0351
.....	1691, 1961, 3421, 4011, 4731	Prima.....	3011
Magnasonic.....	1711	0381, 0581, 0631, 0871, 2451
Magnavox.....	0001	Princeton Graphics.....	1301, 1441
.....	0321, 0681, 0701, 0961, 1021	Prism.....	0051
.....	1171, 1221, 1801, 1961, 2321	Proscan.....	0261, 0811, 1421
.....	4191, 4641, 4761, 4791, 4991	1691, 2061, 2301, 3421, 4011
Majestic.....	1421, 1661, 1691, 3421	Proton.....	0001, 0391, 0641, 1221
Manhattan.....	5381	1911, 2231, 4211, 4221, 4271
Marantz.....	0001, 1221, 1841, 1961	Protron.....	3731, 4301
Maxent.....	3361, 0501	Proview.....	2401, 2421, 2431
Medion.....	1101, 1141, 2351	Pulsar.....	0001, 1771, 1781
Megatron.....	0001, 1221, 1271	Pyle.....	3331
Mei.....	0011	Quasar.....	0051, 0201, 1091
Memorex.....	0001, 0211, 0371, 1161, 1221	1491, 1571, 1831, 1881, 1961
.....	1261, 1421, 1631, 1661, 1691	2151, 3431, 3551, 4691, 5201
.....	1711, 2401, 3421, 4251, 5001	Radio Shack.....	0001, 0141, 0341, 0931
MGA.....	0001, 0251, 1221	1001, 1221, 1261, 1421, 1571
.....	1581, 1711, 1801, 1911, 1921	1691, 1701, 1911, 1941, 2111
Midland.....	0051, 0261	2191, 3421, 3551, 4731, 4921
.....	0811, 1691, 1771, 1781, 4011	RCA.....	0001, 0051, 0091
Mintek.....	4231	0141, 0251, 0261, 0361, 0551
Minutz.....	1951	0811, 0891, 1001, 1131, 1221
Misakai.....	1381	1331, 1371, 1421, 1521, 1691
Mitsubishi.....	3271, 0001, 0251, 1221, 1581	1851, 1921, 2011, 2061, 2111
.....	1711, 1801, 1811, 1921, 2701	2151, 2251, 2301, 2851, 2951
Monivision.....	0491	3421, 3431, 3571, 4011, 4921
Montgomery Ward.....	1421, 1661, 1691, 3421	Realistic.....	0001, 0141
Moteva.....	1261, 3661	0341, 0931, 1001, 1221, 1261
Motorola.....	1441, 2151, 3431	1421, 1571, 1691, 1701, 1911
MTC.....	0001	1941, 2191, 3421, 3551, 4731
.....	0011, 0251, 0351, 1221, 1311	Rhapsody.....	0011
Multitech.....	2191	Runco.....	1771, 1781, 1841
Multivision.....	0081	Sampo.....	0001, 0121
Myron&Davis.....	2101	0391, 0501, 1221, 1911, 4221
NAD.....	0001, 0401, 1221, 1311, 4021	Samsung.....	5471, 5521, 3301, 3321
NEC.....	0001, 0251, 0341, 1221, 1431	2741, 2961, 0331, 0001, 0101
.....	1801, 1841, 2151, 3431, 4401	0251, 0261, 0351, 0531, 0571
Net TV.....	0121, 0501	0711, 0781, 1191, 1221, 1311
Nexxtech.....	0871, 1201	1501, 1911, 2071, 2141, 2721
Nikei.....	1941	3471, 3561, 4011, 4941, 4961
Nikko.....	0001, 1011, 1221, 4321	Samsux.....	1221
Niko.....	3581	Samtron.....	0351
Norcent.....	0511, 0671, 2181	Sansui.....	5551, 0211, 0371, 1631
NTC.....	1011, 4321	Santeca.....	0171
Olevia.....	3081, 2431	Sanyo.....	2981, 2991, 3051

Code List – Lista de Códigos

.....5251, 2871, 5241, 5261, 0001
0801, 1051, 1161, 1261, 1531
1581, 1911, 2881, 3481, 5001
 Sceptre.....3521, 4071, 5111
 Scotch.....0001, 1221
 Scott.....3215, 0001, 0021, 0281
1221, 1711, 1941, 2191, 5141
 Sears.....0001, 0211, 0261
0351, 0701, 0811, 1221, 1261
1291, 1311, 1381, 1421, 1531
1581, 1691, 1711, 1911, 1961
2021, 3421, 3481, 4011, 4761
 Selectron.....2471, 2491, 2501
 Semp.....3611
 Sharp.....5421, 3181, 3191, 3201
2731, 0001, 0341, 0461, 0681
0691, 1221, 1291, 1441, 2031
2201, 2261, 3461, 4751, 4991
 Shogun.....0001
 Signature.....1421, 1661, 1691, 2171, 3421
 Signet.....2811, 2821, 2861
 Simpson.....0961
 Sonic.....0011
 Sony.....5321
1071, 1641, 1731, 1901, 2161
2741, 3531, 3891, 4101, 4981
 Soundesign.....0001
0961, 1221, 1711, 1941, 2191
 Sova.....3631, 4431
 Soyo.....4611, 5101
 Spectra.....1611
 Spectravision.....2341
 Squareview.....1381
 SSS.....0001, 1941, 2191
 Star Sight.....0061
 Starlite.....2191
 Superscan.....0701, 1291, 2021, 4761
 Supersonic.....0241, 4701
 Supra.....0001, 1991
 Supremacy.....0151
 Supreme.....1901
 SVA.....0671, 2101
 Sylvania.....0001, 0321
0371, 0701, 0931, 0961, 1021
1221, 1381, 1801, 1821, 1961
2321, 2761, 3701, 4731, 4761
 Symphonic.....0021, 0701
0931, 1381, 2191, 4731, 4761
 Syntax.....2431, 5151, 5161
 Tandy.....1441
 Tatung.....1141, 1741, 2151, 3431
 TCL.....2851, 0091, 1421
1691, 1851, 2011, 2061, 2111
2301, 3421, 3431, 3571, 4921
 Technics.....0051
 Techwood.....0001, 0051, 1221
 Teknika.....0001, 0151, 0251
0351, 0961, 1011, 1221, 1311
1421, 1571, 1661, 1691, 1711
1911, 1941, 2191, 3421, 3551
 Telecaption.....0821
 Telerent.....1421, 1661, 1691, 3421
 Tera.....0001, 0641
 Tevion.....1141
 TMK.....0001, 1221
 Toshiba.....5531, 3211, 1311
0211, 0231, 0341, 0351, 0821
1121, 1191, 1261, 1351, 1541
1571, 1621, 1801, 1841, 1911
2691, 3551, 4891, 4941, 5081
 Trutech.....2461, 3821, 4551
 Universal.....0791, 1951
 Venturer.....3781
 Victor.....1481, 4121
 Videocon.....4061
 Vidtech.....0001, 0251, 1221
 View Sonic.....5301
0501, 1981, 3751, 3801, 4281
 Viking.....0151
 Viore.....5431, 2831, 2841, 3681
 Visteon.....3411
 Vizio.....5561, 5571, 5581, 5591
5601, 5611, 5621, 5631, 5641
5651, 5661, 5671, 5681, 5691
5701, 5711, 2901, 1471, 1741

.....2021, 3651, 3741, 3851, 4081
 Wards.....0001, 0021
0251, 0321, 0341, 0791, 0961
1021, 1221, 1321, 1421, 1661
1691, 1711, 1951, 1961, 3421
 Westinghouse.....3241, 3251
0111, 1901, 2281, 3711, 3851
 White-Westinghouse.....0601, 0931, 1081
1501, 1521, 1551, 3641, 4731
 Yamaha.....0001, 0251, 1221, 1571, 3551
 Zenith.....5281, 5271, 0001
0061, 0131, 0371, 0681, 0691
0931, 0941, 0991, 1011, 1031
1081, 1171, 1181, 1191, 1221
1251, 1271, 1471, 1631, 1661
1751, 1771, 1781, 1791, 2171
2291, 3501, 4201, 4321, 4731
4751, 4791, 4941, 4991, 5211

TV/VCR COMBOS

Admiral.....0302, 1682
 Aiwa.....0312, 0432, 0752
 Akai.....0032, 1592
 Broksonic.....(0851 & 0462)
(0851 & 0892), 0942, 1631
 Curtis mathes.....0652, 1522
 Daewoo.....(1081 & 0762)
(1251 & 0082), 1092
 Diamond vision.....(2001 & 0422)
 Durabrand.....(2291 & 0182)
 Electrohome.....0032, 1592
 Emerson.....(0851 & 0462), (0851 & 0892)
(1251 & 0082), 0032, 0192
0232, 0312, 0332, 0432, 0942
1092, 1172, 1432, 1592, 1631
 Fisher.....0602, 1712
 Funai.....0312, 0432
 GE.....1152, 1482
 Goldstar.....0312, 0432, 1181
 Gradiente.....(2291 & 0182)
 Hitachi.....0312, 0432
 Infinity.....0622
 JVC.....0452, 4201
 LG.....0312, 0432, 1181
 LXI.....0312, 0432
 Magnavox.....0302, 0412, 0622, 1682
 Memorex.....0602, 0942, 1631, 1712
 Mitsubishi.....0032, 1592
 Optimus.....1722, 0122, 1062, 1762
 Panasonic.....1722, 0122, 1062, 1762
 Philips.....0412, 0622
 Philips Magnavox.....0302, 0622, 1682
 Quasar.....1722, 0122, 1062
 Radio Shack.....0312, 0432, 1152, 1482
 RCA.....(1691 & 0242), 1152, 1482
 Realistic.....0312, 0432
 Samsung.....0652, 1522, 1535, 2141
 Sansui.....0942, 1631
 Sanyo.....0602, 1712
 Sharp.....1682, 0302, 0332
 Sony.....0972, 1292, 1652
 Sylvania.....0312, 0432
 Symphonic.....0312, 0432
 Toshiba.....0652, 0902, 1402, 1522
 White westinghouse.....(1081 & 0762)
0312, 0432
 Zenith.....(1081 & 0762)
(1251 & 0082), (2291 & 0182)
0302, 0312, 0332, 0432
0452, 0622, 0652, 0942, 1092
1181, 1522, 1631, 1682, 4201

TV/DVD COMBOS

Advent.....1515
 Akai.....(3215 & 3285), 4461
 Apex.....(0191 & 1245)
 Audiovox.....(4031 & 4481)
(4051 & 1135), 4521
 Axion.....(0881 & 1335)
 Broksonic.....0015, 0211
 Coby.....3475
 Changhong.....(0191 & 1245)

Code List – Lista de Códigos

Classic.....(0191 & 1245)
 Daewoo.....(1561 & 0065)
 Diamond Vision.....(1611 & 0855)
(2001 & 0422), 0455
 Durabrand.....(2291 & 3885), 0205
 Emerson.....0412, 0445
 Funai.....0412, 0445
 GPX.....0135
 Haier.....0315, 1257
 Ilo.....(3215 & 3285), 1945
 Initial.....0994, 1945, 2735
 Insignia.....(1241 & 0285), (2891 & 3335)
0412, 0445, 2805, 2815, 3305
 JVC.....1685, 3015
 Kawasaki.....0325
 Konka.....1425, 1605
 Lasonic.....(1611 & 0855)
 Liquidvideo.....(0881 & 1335)
 Magnavox.....0412, 0445
 Maxent.....3361
 Memorex.....0015, 0211
 Nexxtech.....1201, 2005
 Panasonic.....0552, 0595, 1195, 1346, 3401
 Philips.....3371
(1381 & 0702), 0412, 0445, 0795
 Piva.....1805
 Samsung.....1535
 Sansui.....0015, 0211
 Sears.....0015, 0211
 Sharp.....(1291 & 3115)
 Sova.....(3631 & 4431)
 Supersonic.....0135
 Sylvania.....(1381 & 0702), 0412, 0445
 Symphonic.....0412, 0445
 Toshiba.....0015, 0115, 0211, 3075
 Trutech.....4551
 Westinghouse.....(3711 & 2865)

SAT/CBL

ABC.....0004, 0074, 0134
0464, 0594, 0784, 0794, 1034
 ADB.....1933
 Adelphia.....1404
2023, 0514, 0574, 0744, 1523
 ADTH.....1393
 Akai.....1323, 1303
 Allegro.....0054, 0114
 Americast.....1594, 0254
 Amino.....2063
 Amplica.....0103
 Antronix.....0264, 0334
 Archer.....0264, 0334, 0404, 0474, 1044
 Arris Gateway.....1274
 Astro.....1273
 AT&T.....1963
2093, 0844, 1272, 0514, 0674
 Bell.....1963, 5491, 2073, 0173
2083, 2103, 0433, 0903, 0984
 Bell Expressvu.....0073
0173, 0343, 0433, 0903
 Bell South.....0254
 Bendbroadband.....1244
 Bright House.....1394, 0694
 Buckeye.....1233
 Cable One.....1384
 Cabletenna.....0264
 Cableview.....0264
 Cablevision.....1434
1404, 0514, 0654, 0694, 1523
 Cebride.....1374
 Century.....0474, 1723
 Cetomer.....0723, 1153
 Channel Master.....0283, 0393, 0483
 Chapparral.....0573, 0653
 Charter.....1304, 1404, 0824
1523, 0514, 0664, 0684, 0714
 Charter Communications.....1274
 Charter Digital.....1264
 Cheyenne.....0653
 Cisco.....1444
1444, 1464, 1474, 1484, 1494
 Citizen.....0474
 Clearmax.....1024

Cogeco.....1294, 0514
 Color Voice.....0534, 0604
 Comcast.....1544, 1554
1283, 0824, 1404, 0514, 0684
 Comtronics.....0014, 0084
 Contec.....0144, 1054
 Coolsat.....1733, 1913
 Cox.....0514, 0824
1324, 1334, 1364, 1404, 1444
1454, 1464, 1474, 1484, 1494
 Cox Digital Cable.....1404, 0514, 0734
 Digital Music Express.....0044
 Digital Stream.....1203, 1194
 Digiwav.....1953, 1923
 Director.....0514
 DirecTV.....1504, 1514, 0203, 0213, 0233
0303, 0333, 0353, 0443, 0523
0553, 0623, 0703, 0793, 0803
0853, 0873, 0983, 0993, 1073
1083, 1093, 1103, 1113, 1123
1133, 1143, 1153, 1163, 1173
1183, 1193, 1353, 1443, 1513
1533, 1773, 1783, 1793, 1893
 Dish Network.....2073
2083, 1613, 0073, 0173, 0343
0403, 0433, 0493, 0603, 0783
0903, 1003, 1013, 1023, 1033
1043, 1053, 1063, 1503, 1683
 Dishpro.....0073
0403, 0493, 0603, 1503, 1683
 Drake.....0023, 0293, 0733
 Dreambox.....2113, 2123, 1553
 DX Antenna.....0383, 0753
 Eastern.....0214
 Echosphere.....0433
 Echostar.....0903
0073, 0173, 0343, 0403, 0433
0493, 0603, 0783, 1503, 1683
 Emtec.....4411, 4441
 Entone.....2043, 2053
 Everquest.....0014
 Expressvu.....0073, 0173, 0343, 0433, 0903
 Fortec Star.....0083
0183, 0263, 0373, 0463, 0473
 Fujitsu.....0673, 0763
 Garrard.....0474
 GC Electronics.....0334
 GE.....0384, 0874, 0333
0543, 0643, 0723, 0793, 0803
0873, 1073, 1083, 1373, 1383
 Gemini.....0123, 0204, 0344
 General Instrument(GI).....0013
0004, 0093, 0163
0193, 0323, 0453, 0633, 0833
0893, 0953, 0963, 1573, 1583
1603, 0044, 0074, 0314, 0374
0464, 0514, 0594, 0634, 0784
0794, 0814, 0884, 0894, 1034
 Geosatpro.....2003
 Globecast.....0003, 1004
 Go Video.....1883
 Gold Star.....0924
 Hamlin.....0414, 0464, 0484, 0544, 0784
 Hitachi.....0594, 0303
0443, 0523, 0623, 1103, 1153
 HNS.....1153
 Hughes.....0593, 1343
 Hughes Network.....0303
0443, 0523, 0563, 0593
0703, 1093, 1103, 1153, 1343
 Humax.....1505
 Illico.....1354, 1404, 1523
 ILO.....1035
 Insight.....1284, 1314
 Jasco.....0474
 Jerrold.....0004, 0074, 0194
0314, 0324, 0444, 0464, 0514
0594, 0784, 0794, 0814, 1034
 JVC.....1145, 0433, 0783
 Kenwood.....0413
 Knology.....1424, 1344, 1284, 1564
 LG.....2925, 0303, 1103, 1153
 Liteon.....1035
 Luxor.....0503, 1653
 Macom.....0613

Code List – Lista de Códigos

Magnavox.....	0203, 0533, 0783, 0094, 1064	Star Sight.....	0244, 0863
Mediacom.....	1284, 1584	Star Trak	0423, 0184
Medion.....	1035	Starchoice	0163
Memorex	0154	0323, 0633, 1563, 1573, 1583
Microyal	1423	Starcom	0314, 0464, 0784
Mitsubishi	1534, 0303, 0443	Stargate.....	0014
.....	0523, 0623, 1093, 1103, 1153	STS.....	0383, 0583, 0663
Motorola	0453, 1573	Super Guide	0513
.....	1593, 1603, 1863, 0004, 0074	Sylvania	1903
.....	0194, 0314, 0374, 0514, 0594	Tandy	0434, 0974
.....	0634, 0684, 0794, 0814, 0824	Televue	0014
.....	0844, 0884, 0894, 0914, 1034	Telsat	1723
Movie Time.....	0224, 1074	Telus	1943
Moxi.....	1274	Texscan	0364
NEOSTAT	1413	Thomson.....	0803, 1753
NET	1543, 1713	Time Warner	1254, 1424, 1404
Norstat.....	0683	0514, 0694, 0724, 0824, 1523
Novaplex	0834, 0854	Tivax	1293
Nowtv	1473	Tivo.....	0092, 0252, 0353, 0982, 1052
NSC	0224, 1074	1162, 1492, 1502, 1505, 1542
OAK	0144, 0354, 1054	1745, 1223, 0704, 0754, 0764
Omegasat.....	1983	Tocom.....	0004
Onkyo	1243	0444, 0504, 0634, 0934, 1034
Orasat	1973	Toshiba	1735, 1745
Orion.....	1523	3325, 0154, 0063, 0143, 0303
Pace	1363	0443, 0523, 0623, 0713, 0743
.....	0053, 0133, 1593, 1673, 0904	0973, 1093, 1103, 1133, 1153
Panasonic.....	0545, 1272, 0304, 0394, 0954	TV86	0224, 1074
.....	1014, 0213, 0223, 0243, 1353	TVA	1703
Pansat	1993, 0033, 0883, 1403	Ultimate TV	0333, 0553, 0873
Paragon	0154, 0284	Uniden	0693, 0823, 0863
Philips.....	0092, 0252, 1052, 1163, 1492	Unika	0264, 0334, 0474
.....	1502, 1542, 0094, 0344, 0424	United	1663
.....	0474, 0494, 0554, 1064, 1084	United Cable.....	0464, 0784
.....	1094, 1104, 0203, 0303, 0443	Universal.....	0054, 0264, 0334
.....	0523, 0533, 0623, 0703, 0783	0404, 0474, 0564, 0944, 1044
.....	1093, 1103, 1153, 1633, 1753	Verizon.....	2033, 1404, 0514
Philips Magnavox.....	0203	1283, 0174, 0684, 0824, 1523
.....	0533, 0783, 0064, 0104	Video Cipher ii	0023
Pinnacle.....	1493, 1823, 1833	Video Tech.....	0454
Pioneer	1404, 0532, 0985, 2855	Videotron	1404, 1574, 1523
.....	1853, 0024, 0274, 0614, 0924	Videoway	0034
Polaroid	4561	Viewsat	1803
Primestar	1253, 0323, 0633, 1563, 1573	Viewstar	0084, 0094
Prosat	0813, 1333	0224, 0434, 0974, 1064, 1074
Proscan	0333, 0643, 0723	Visionetics	1483
.....	0803, 0873, 1073, 1083, 1383	Visiontec	1693
Pulsar	0154	Voom	2971
Quasar	0154	V-Tech.....	1813
Radio Shack	0064, 0104, 0114, 0964	Web TV.....	0113, 0783
RCA	0244, 0394	Zenith.....	0114
.....	0474, 1014, 1083, 0333, 0363	0154, 0474, 0524, 0584, 0624
.....	0543, 0643, 0723, 0793, 0803	0644, 0023, 0123, 0153, 0253
.....	0873, 1073, 1373, 1383, 1873	0293, 0313, 0733, 1173, 1593
RCN	0514, 0824	Zenith Network.....	0254
Realistic	0334, 0273, 0843, 1643	Zinwell	2013
Regal	0544		
Regency	0214		
Rembrandt.....	0594		
ReplayTV	1272		
Rogers	1344, 0174, 1523		
Runco	0154		
Samsonic.....	1433		
Samsung	4451, 1213		
.....	0043, 0233, 0853, 1113, 1123		
.....	1143, 1763, 0014, 0024, 0924		
Scientific Atlanta.....	1324		
.....	1334, 1364, 1404, 1414, 1444		
.....	1454, 1464, 1474, 1484, 1494		
.....	0124, 0134, 0164, 0234, 0294		
.....	0574, 0714, 0804, 0834, 0864		
Seiki	1263		
Sharp	1853		
Shaw.....	1524, 0514		
Sierra I II III.....	0653		
Signal.....	0014		
Signature	0594		
Sky Network	0053, 0133, 1363, 1593, 1673		
.....	1743, 1753, 1773, 1783, 1793		
SL Marx	0014		
Sonic Blue	1272		
Sony	1162, 1302, 2865, 2985, 3055		
.....	0113, 0353, 0553, 0773, 1893		
Sprucer.....	0394, 1014		
Standard.....	0364		

HDTV Set Top Boxes

Apex	2911
Charter	0174, 1523
Directv Models	0703
.....	0983, 1443, 1513, 1533
GE HDSTB.....	0874
Go Video Hdt100.....	2631
Hitachi 61hdx98b	1103, 2661
Hughes Hird E8	0303
.....	1103, 1153, 2591, 2651, 2661
Hughes Htl HD.....	0303
.....	1103, 1153, 2591, 2651, 2661
Insignia	2921
KWorld SA290QE	2931
LG HTL HD	0303
.....	1103, 1153, 2591, 2651, 2661
LG LSS 3200a	0303
.....	1103, 1153, 2591, 2651, 2661
Mitsubishi SRHD 400	1103, 2661
Mitsubishi SRHD 500	1103, 2661
Mitsubishi SR HD5	1103, 2661
Motorola HDT100	2601
Motorola HRT100	2601
Philco TB100HH9	2941
Philips DSHD800R	1103, 2661
Pioneer SH-D505	2561

Code List – Lista de Códigos

Proscan PSHD105.....	0803, 2581
RCA DTA800B1	2951
RCA DTC-100.....	0803, 2581
RCA DTC-210.....	0803, 2581
RCA HD65W20.....	2611
RCA PSHD105	0803, 2581
Samsung SIR-T165	1143, 2671
Samsung SIR-T351	1143, 2671
Samsung SIR-TS160.....	1123, 2621
Samsung SIR-TS360.....	1123, 2621
Sony SATHD100.....	2681
Sony SATHD200.....	2681
Sony SATHD300.....	2681
Sylvania 6900DTD.....	2641, 2941
Toshiba DST3100	0303, 1153, 2591, 2651
Toshiba DW65x91	0303, 1153, 2591, 2651
Toshiba DST3000	0303, 1153, 2591
Venturer	1164
Zenith DTV1080.....	1173, 2571
Zenith HDSTAT420	1173, 2571
Zenith HDSTAT520	1173, 2571

DTV

Access HD.....	1234
Airlink101.....	1174
Alpha Digital	1234
Amtc	1234
Apex	1114
Artec	1224
Cadence	1214
Channel Master	1204
Coship	1214
Digitalstream.....	1194
Dish Network.....	0073
Echostar	0073
GE.....	0874
Goodmind.....	0874
Gridlink	1144
iNet Access	1234
Insignia	1184
Kingbox	1224
Lasonic	1144
Magnavox.....	2941
Microgem	1154
Philco.....	2941
RCA.....	1083
Sansonic.....	1144
Skardin	1174
Sunkey.....	1134
Tivax.....	1234
Venturer	1164
Winegard	1164
Zenith.....	1184
Zentech	1174
Zinwell	1124

STREAMING MEDIA

Apple	5541, 4295
Asus.....	1684
Dlink.....	1614, 1724
HP.....	1624
Iomega.....	1744
LG.....	1714
Magnavox.....	1704
Netgear.....	1604, 4475
Niveus.....	1634
Philips	1654
Popcorn Hour.....	1664
RCA.....	1694
Roku	4395, 4355
Seagate	1674
Sling Media.....	1644
Vudu	1734
WD.....	4345, 4265
X-Box.....	4245, 4255

DVD

Acesonic.....	3135
Advent	1515
Afreyy	0575
Aiwa.....	0035, 0195, 0235, 3285, 3565

Allegro	3725, 3885
Ames	1275
AMW.....	0645, 0825
Anaba	1375
Apex	0045, 0245
.....	0375, 0425, 0615, 0845, 0945
.....	0965, 1025, 1065, 1105, 1235
.....	1245, 1405, 1675, 3825, 3895
Aspire	1695
Astar	3525
A-Trend.....	1585
Audiovox.....	1335, 3585, 3625
Axion.....	1335
B&K	0885
Blaupunkt.....	1105, 3895
Blue Sky	0215, 0245, 3155
Blue-Ray.....	2795, 2965, 2995, 3315
.....	3685, 3695, 3705, 3885, 3905
Body Sonic.....	0575
Bose	4455, 4465, 1475, 3955
Boss	1325
Boston Acoustic.....	3245
Britania	3675
Broksonic	0015, 0695, 1525, 3495
Cavs	2745
Centrios	0955, 1335, 1365, 1755, 1765
.....	1785, 1795, 1845, 1875, 1895
.....	1935, 1975, 2015, 3945, 3965
Cetomer.....	0075
Changhong.....	1245
Cine Vision.....	0205, 3885
Citech	2065
Citizen.....	2065
Classic.....	1245, 1275, 1965
COBY	3835, 0085, 0245, 0475
.....	0485, 0505, 0675, 0835, 2085
.....	2095, 2105, 2115, 2125, 2155
.....	2655, 2885, 3145, 3265, 3475
Concept.....	1105, 3895
Conia	0245
Contel.....	2915
Criterion.....	0785
Curtis International.....	0835, 1005, 2885
Curtis Mathes.....	4185
Cyber Home	4155, 0175, 1015, 1585, 2045
Cyber Vision	3595
Cytron.....	0435, 0725
Daewoo	0065, 0345, 1115, 1285, 1385
Denon	1075, 1265, 3315
Denzel.....	0765
Desay.....	0865
Diamond Vision	0465, 0855, 1485, 3755
Digitrex	0245
Digix.....	0125
Disney.....	0795, 3815
Drive	3535
Dual	0005
.....	0435, 0515, 0605, 0765, 3035
Durabrand.....	0205, 0435, 0955, 2685, 2935
.....	3515, 3525, 3885, 3925, 3945
DVD 2000	1415
Dynex	4235, 2455, 2255
Eigervision	3615
Element.....	4305
Elta.....	0055, 0235
Emerson	0205, 0445, 0795, 0975
.....	1185, 3745, 3815, 3855, 3885
Esa.....	0515
Escient.....	2845
Fahrenheit.....	1205
Fisher.....	0405, 2645
Funai.....	0445, 0795, 3745, 3815, 3855
GE.....	0915, 1105, 3895
Gold Star	0205, 3885
Go Video.....	0075, 0255
.....	0415, 0565, 0665, 1275
.....	1315, 1385, 1495, 3735, 3765
GPX	0135, 0495
Gradiente.....	0215, 3635, 3645
Greenhill	1105, 3895
Haaz	1295, 1465
Haier	0315, 4015
Harman/Kardon.....	0585
HD-DVD.....	2795, 2835, 2965
.....	3685, 3695, 3705, 3885, 3905

Code List – Lista de Códigos

Helios.....	2275
Hello Kitty.....	4195
Hitachi.....	0025, 0545
.....	0565, 0765, 0925, 1245, 3765
Hiteker.....	0245
Humax.....	1505
ILO.....	1035, 1945, 3285
Infinity.....	0575
Initial.....	1105, 1945, 2735, 3895, 3935
Insignia.....	4205
.....	2365, 0975, 0205, 0285, 0445
.....	0725, 1105, 1335, 1945, 2195
.....	2805, 2815, 2915, 3305, 3335
.....	3745, 3785, 3815, 3885, 3895
Integra.....	1435
IRT.....	2885
ISymphony.....	2525
JBL.....	0585
JVC.....	2385, 2535
.....	0155, 0395, 0755, 1145, 1685
.....	2025, 2945, 3015, 3795, 3805
Jwin.....	0275, 1065, 1655, 3275
Kawasaki.....	0325, 0955, 3945
Kenwood.....	0935, 1075
Kiss.....	0765
KLH.....	0375, 0465, 1105, 3895
Konka.....	0285, 1085, 1255, 1425, 1605
Koss.....	0215, 0725
KXD.....	0085, 2885
Lasonic.....	0855, 1295, 2825
Lenoxx.....	0235, 1345, 3515, 3525
LG.....	4285, 2335
.....	2555, 2565, 2635, 0205, 0635
.....	1565, 2925, 3785, 3885, 3915
Linn.....	1635, 2955
Liquid Video.....	1335
Liteon.....	0805, 1035, 1495, 1575, 1905
Magnavox.....	2425, 4105, 0975
.....	0105, 0295, 0445, 0735, 0745
.....	1045, 1055, 1225, 1395, 2945
.....	3025, 3715, 3745, 3795, 3815
Marantz.....	4105, 0205, 0735, 0745
.....	1395, 1615, 2945, 3795, 3885
Maxent.....	1665, 1685, 3015
Medion.....	0435
.....	0455, 1035, 1325, 1665, 3755
Memorex.....	2375
.....	0435, 1925, 2755, 3125, 3495
Meridian.....	0735, 3795
Microsoft.....	0915, 3255
Microvision.....	1325
Mintek.....	1105, 3895
Mitsubishi.....	2585, 1415, 3895
Mustek.....	1275
Myron&Davis.....	1555
NAD.....	0205, 1625, 3295, 3885
Nakamichi.....	1445
NEC.....	3885
Nesa.....	1105, 1555, 3895
Nexxtech.....	0125, 0145, 0335, 0515, 0725
.....	0955, 1025, 1545, 1755, 1765
.....	1785, 1815, 1835, 2005, 2055
.....	2915, 3505, 3825, 3945, 3965
Norcent.....	0305, 0485, 0655, 0835, 1575
Onkyo.....	2355
.....	2505, 0355, 1435, 3795, 3985
Optimus.....	0025, 1245, 2975
Orion.....	0015, 3495
Oritron.....	0215, 1935
Pacific.....	0435
Panasonic.....	4175
.....	2395, 2595, 2605, 0165, 0385
.....	0545, 0595, 1075, 1195, 1215
.....	2965, 3105, 3775, 3975, 4005
Philco.....	3605
Philips.....	2415
.....	2615, 2625, 4105, 0745, 0105
.....	0265, 0445, 0735, 0795, 1045
.....	1055, 1225, 1395, 1615, 2665
.....	2705, 2765, 2775, 2945, 3165
.....	3705, 3715, 3745, 3795, 3815
Philips Magnavox.....	4105, 0735, 0745
.....	1055, 1225, 1615, 2945, 3795
Pioneer.....	0025, 0525, 0705, 0875, 0985
.....	1245, 1595, 1775, 2675, 2695
.....	2855, 2895, 2975, 3695, 3905
Piva.....	1805
Polaroid.....	0185
.....	0685, 1025, 1485, 3665, 3825
Polk Audio.....	4105
.....	0735, 0745, 1395, 2945, 3795
Portland.....	0235, 1545
Power Acoustik.....	3575
Proline.....	0215
Proscan.....	0915, 1135
Prosonic.....	0485
Protron.....	0305
Pyle.....	2515, 1155
Radio Shack.....	0955
.....	0995, 1165, 1645, 2905, 3945
RCA.....	2465, 0215
.....	0915, 0955, 1105, 1135, 1165
.....	1645, 2755, 2905, 3895, 3945
Regent.....	1345, 3925
Reoc.....	1295
RIO.....	0205, 3885
RJ Technology.....	1825, 2715
Rosen.....	1175, 3035
Rotel.....	0395
Saba.....	0995
Sampo.....	0575
Samsung.....	4125, 2285, 2325, 2345
.....	2485, 4095, 0075, 0255, 0565
.....	1305, 1535, 1725, 2185, 2725
.....	2995, 3085, 3555, 3765, 3865
Sansui.....	0015, 0695, 3495
Sanyo.....	2495, 0095, 0405, 2205, 2215
.....	2225, 2235, 2245, 2645, 3945
Sears.....	0015, 0445, 3495, 3745
Seg.....	0765
Selectron.....	1855, 1885, 1915
.....	1955, 1995, 2035, 2075, 2875
Semp.....	0725
Sensory Science.....	1495
Sharp.....	4115
.....	4315, 4325, 4335, 2315, 2445
.....	0555, 0625, 0815, 2795, 3115
Sherwood.....	4225, 0225
Shinco.....	1105, 3895
Shinsonic.....	1105, 3895
Sonic Blue.....	0665
Sony.....	4165
.....	4275, 2305, 0365, 0535, 0715
.....	0725, 0895, 0905, 2165, 2865
.....	2985, 3055, 3685, 3825, 3995
Soundstorm.....	1155, 1325
Sova.....	3545
Spectroni.....	2575
Sungale.....	0675, 1715
Superscan.....	0445, 3745
Supersonic.....	0135
SV2000.....	0445, 3745
SVA.....	0245, 0815
Sylvania.....	4215, 2405, 0445
.....	0795, 3745, 3815, 3855, 3875
Symphonic.....	0445
.....	0795, 0975, 3745, 3815, 3855
Tascam.....	0395
TCL.....	2435
Teac.....	0025, 0955, 1245, 3885, 3945
Technics.....	1075
Techwood.....	1625, 1985, 2945, 3845
Terapin.....	1705
Tevion.....	0435, 0605
.....	0725, 0785, 1125, 1295, 1465
Theta Digital.....	0025, 1245
Tivo.....	0985, 1505
Toshiba.....	4145, 2295, 2475
.....	2545, 0015, 0115, 0735, 1735
.....	1745, 2135, 2145, 2175, 2835
.....	3065, 3075, 3325, 3495, 3795
Tredex.....	1355
Trutech.....	1385, 2045, 3655
United.....	0955, 3945
Venturer.....	0955, 3065, 3945
Vizio.....	4135, 4405
.....	4415, 4425, 4435, 4445, 2265
Westinghouse.....	2865
Wharfedale.....	0575, 1455
White Westinghouse.....	0795, 3815

Code List – Lista de Códigos

X-Box.....4245, 4255, 0915
 Xenius.....0725
 Yamaha.....4105, 0745, 1055, 1075
1095, 1225, 2785, 2945, 3005
 Yamakawa0765, 0775, 1865
 Zenith.....0205, 0635, 3785, 3795, 3885

Blu-Ray-DVD

Denon4035
 Dynex4235
 HP.....4085
 Insignia4205, 0975, 2635
 JVC.....2385
 LG.....4285, 2635, 2335
 Magnavox.....2425
 Memorex2375
 Onkyo.....2355
 Oppo.....4365, 4375, 4385, 4045
 Panasonic4175, 2395
 Philips.....2415
 Pioneer4055
 Samsung4125, 2325, 2345, 4095
 Sharp4115, 2315
 Sherwood4225, 4065
 Sony4165, 4275, 2305
 Sylvania4215, 2405
 TCL.....2435
 Toshiba2295
 Vizio.....4135, 4025
 Yamaha.....4075

DVD-R

Apex0845
 Aspire1695
 Astar2885
 Broksonic0695
 Centrios1365, 1935, 1975
 Coby2885
 Cyberhome.....1015
 Emerson1612
 Funai.....0412
 Go-Video1275, 1315, 1495
 Hitachi0545, 0925
 Humax1505
 Ilo.....1035
 Insignia0562
 JVC.....1145, 2025
 KXD2885
 LG.....0562
 Liteon.....0805, 1035, 1495
 Magnavox.....1055, 1225, 3025
 Medion.....1035, 1665
 Memorex1925, 3125
 Mustek.....1275
 Oritron1935
 Panasonic.....0545
 Philips.....1055, 1225, 2705, 3165
 Philips-Magnavox.....1055, 1225
 Pioneer0985, 2695, 2855
 Polaroid0185
 RCA0915
 Samsung1305, 4451
 Sanyo0095
 Selectron1955
 Sharp0625
 Sony2865, 2985, 3055
 Sylvania1612, 1672
 Symphonic1612
 Toshiba0682, 1735, 3325
 Trutech.....2045
 Yamaha.....1055, 1225
 Zenith.....0562

DVD/VCR COMBOS

Allegro(3885 & 0182)
 Apex0852, 1025
 Broksonic0015, 0211, 0695
 Cinevision(0205 & 0182)
 Daewoo1385
 Diamond Vision0422, 0455
 Durabrand.....(0205 & 0182)
 Emerson(0702 & 0312)

.....0412, 0432, 0445, 0795
 Fisher.....(0405 & 0472)
 Funai.....(0702 & 0312)
0412, 0432, 0445, 0795
 Go-Video0255
0402, 0415, 0542, 0565, 1385
 Hitachi(0925 & 0432)
 Insignia(0205 & 0182), 0562
 JVC0692, 0755, 1145, 2025
 LG.....0562, 0635
 Liteon.....1905
 Magnavox.....(0105 & 1642)
0342, 0412, 0445, 1045
 Medion.....0422, 0455
 Nexxtech(0486 & 0492)
0852, 0955, 1025, 2055
 Panasonic.....0552, 0595
 Philips.....(0105 & 1642)
0342, 0412, 0445, 1045, 1372
 Pioneer1775, 2695
 Polaroid0852, 1025
 RCA(0915 & 0162)
 Rio(0205 & 0182)
 Samsung0255, 1662, 1725
 Sansui.....0015, 0211, 0695
 Sanyo(0405 & 0472)
 Sears0015, 0211
 Sony0832
 Sylvania(0702 & 0312)
(0702 & 1392), 0312, 0412
0432, 0445, 0795, 1612, 1672
 Symphonic(0702 & 0312)
(1612 & 1392), 0312
0412, 0432, 0445, 0795, 0975
 Techwood1602, 1985
 Toshiba0115, 0682, 0735, 3075
 Trutech.....1385
 White Westinghouse.....(0795 & 0432)
 Zenith.....(0205 & 0182)

VCR

Accele.....0102
 Admiral0302, 1682
 Adventura0992
 Aiko.....0082, 1092
 Aiwa.....0182, 0312, 0432, 0752, 0992
 Akai.....0312
1362, 0032, 0432, 0502, 0582
0712, 0872, 0982, 1212, 1592
 Allegro0182
0452, 0792, 1182, 1732, 4201
 American High1112
 Apex0852
 Asha.....0102
 AT & T1272
 Audio Dynamics0012, 0392, 0522, 0532
 Audiovox.....0182
 Beaumark0102
 Bell & Howell0602, 1712
 Broksonic0132, 0211
0322, 0442, 0462, 0572, 0695
0772, 0892, 0942, 1562, 1631
 Calix.....0182
 Candle0012
0022, 0102, 0182, 0882, 1082
 Cannon0162, 0802, 1112
 Canon0162, 1112, 1552
 Capehart.....0792
 Carver0482
 CCE0082, 0362, 0372, 1092
 Cine Vision.....0182, 1732
 Citizen.....0012, 0022, 0082
0102, 0182, 0882, 1082, 1092
 Colorlyme.....0012
 Colt0362, 0372
 Craig0102, 0182, 0362, 0372, 0592
 Curtis Mathes0012, 0082
0102, 0162, 0312, 0432, 0482
0652, 0732, 1112, 1472, 1522
 Cybernex0102
 Daewoo0022, 0082, 0762, 0882, 0892
0992, 1082, 1092, 1385, 1472
 DBX0012, 0392

Code List – Lista de Códigos

Denon	0222	0392, 0522, 0532, 0602, 0732
Diamond Vision	0422	0772, 1012, 1122, 1212, 1712
Dimensia.....	0162	Nexxtech	0486, 0492, 0842, 0852, 2055
Durabrand.....	0182, 1732	Nikko	0182
Dynatech	0312, 0432, 0992	Noblex	0102
Electrohome	0032, 0182, 1592	Olympus	1112
Electroponic	0182	Onkyo	1382
Emerson	0032, 0082, 0102, 0182, 0192	Optimus.....	0102, 0122, 0182, 0302, 0722
.....	0232, 0312, 0322, 0332, 0412	1042, 1062, 1262, 1682, 1722
.....	0432, 0442, 0462, 0602, 0702	Optonica.....	0102, 0932
.....	0732, 0742, 0752, 0772, 0882	Orion.....	0322, 0942, 1562, 1631
.....	0892, 0912, 0922, 0942, 0952	Panasonic(National).....	0122, 0162, 0552, 1062
.....	0982, 0992, 1012, 1032, 1092	1112, 1262, 1272, 1642, 1722
.....	1102, 1112, 1172, 1192, 1422	Pentax	0012, 0812, 1142
.....	1432, 1562, 1592, 1631, 1712	Philco.....	0162, 0172, 0482, 1112
Fisher.....	0012	Philips.....	1352, 1372, 0092, 0105
.....	0042, 0052, 0472, 0482, 0592	0252, 0342, 0412, 0482, 0622
.....	0602, 1202, 1442, 1712, 2645	0672, 1052, 1112, 1282, 1642
Fuji.....	0712, 1112	Philips Magnavox	0302, 0482, 0622, 1682
Funai.....	0312, 0412, 0432, 0702, 0992	Pilot	0182
Garrard	0992	Pioneer	0222, 0392
GE.....	0102, 0162, 0242, 0612	0522, 0532, 0812, 1242, 2695
.....	1022, 1112, 1152, 1482, 1702	Polaroid	0852
Gold Star	0012, 0182	Portland.....	0022, 1082
.....	0312, 0432, 0792, 1181, 1632	Proscan	0162, 0642
Go Video.....	0102, 0255, 0272, 0292, 0402	Protec	0362, 0372
.....	0542, 0662, 1385, 1532, 1692	Pulsar	0792
Gradiente.....	0182, 0992	Quarter	0602, 1712
Harley-Davidson.....	0992	Quartz	0602, 1712
Harman/Kardon.....	0012, 0032, 1592	Quasar.....	0122, 0162
Harwood.....	0362, 0372	1062, 1112, 1262, 1642, 1722
Headquarter	0432	Radio Shack	0032, 0042
.....	0512, 0602, 1142, 1212, 1712	0102, 0162, 0182, 0302, 0312
HL-Q.....	0592	0432, 0502, 0592, 0602, 0722
Hitachi	0312	0932, 0992, 1042, 1112, 1152
.....	0512, 0812, 0925, 1142, 1212	1262, 1482, 1592, 1682, 1712
Infinity.....	0622	Radix	0182
Insignia	0182, 0562, 1732	Randex	0182
Instant Replay.....	0312, 0432, 1112	RCA	0062, 0102, 0162
Inteq	0182	0182, 0212, 0242, 0352, 0582
JC Penney	0012, 0102, 0162, 0182	0612, 0642, 0782, 0812, 0915
.....	0392, 0522, 0532, 0602, 0812	1022, 1112, 1132, 1142, 1152
.....	1112, 1142, 1212, 1242, 1712	1222, 1452, 1482, 1572, 1702
JCL.....	1112	Realistic	0032, 0042, 0102, 0162
Jensen	0812, 1212	0182, 0302, 0312, 0432, 0502
JVC.....	0012	0592, 0602, 0932, 0992, 1042
.....	0392, 0452, 0522, 0532, 0602	1112, 1262, 1592, 1682, 1712
.....	0692, 1212, 1712, 2025, 4201	ReplayTV	1272
Kenwood	0012, 0392	Ricoh	1252
.....	0522, 0532, 0602, 1212, 1712	Rio	0182, 0282, 1732
KLH.....	0362, 0372	Runco	0792
Kodak	0182, 1112	Samsung	0102
LG.....	0312, 0432, 0562, 0792, 1181	0255, 0292, 0502, 0652, 0812
Liteon.....	1905	0872, 0882, 1522, 1535, 1662
Lloyd.....	0312, 0432, 0992	Samtron	1692
Logik.....	0362, 0372	Sanky.....	0302, 0792, 1682
LXI	0182, 0312, 0432	Sansui.....	0132, 0211
Magnavox.....	0105	0322, 0392, 0522, 0532, 0572
.....	0142, 0162, 0172, 0302, 0312	0695, 0942, 1212, 1562, 1631
.....	0342, 0412, 0432, 0482, 0622	Sanyo	0052, 0102
.....	0792, 0862, 1112, 1642, 1682	0472, 0592, 0602, 1072, 1322
Magnin.....	0102	1332, 1342, 1442, 1712, 2645
Marantz.....	0012	Scott	0442, 0462, 0882
.....	0392, 0482, 0522, 0532, 0602	0892, 0922, 1032, 1192, 1422
.....	0772, 0802, 1112, 1552, 1712	Sears	0042, 0132, 0182, 0211, 0412
Marta	0182	0482, 0592, 0602, 0812, 1112
Matsushita.....	1112	1142, 1202, 1242, 1262, 1712
Medion.....	0422	Sharp	0032
MEI	1112	0302, 0312, 0332, 0432, 0932
Memorex	0052, 0102	0962, 1042, 1082, 1592, 1682
.....	0182, 0302, 0312, 0432, 0482	Shintom	0362, 0372
.....	0502, 0592, 0602, 0792, 0942	0522, 0712, 0812, 1252, 1512
.....	0992, 1112, 1631, 1682, 1712	Shogun	0102
MGA	0032, 0922, 1592	Signature	0312, 0432
MGN Technology.....	0102	Singer	0362, 0372, 1112
Midland.....	0612	Sonic Blue	1272
Minolta.....	0812, 1142	Sony	0072, 0112, 0262, 0382
Mitsubishi	0032, 0202, 0392, 0522	0712, 0822, 0832, 0972, 1006
.....	0532, 0632, 0812, 0922, 1592	1162, 1232, 1252, 1582, 1652
Montgomery Ward.....	1162, 0302, 0932	STS.....	0812, 1112, 1142
Motorola	1742, 0302, 1112, 1682	Superscan	0412
MTC.....	0102, 0312, 0432, 0992	Sylvania	0162, 0312
Multitech.....	0102, 0312	0412, 0432, 0482, 0702, 0922
.....	0362, 0372, 0432, 0612, 0992	0992, 1112, 1392, 1612, 1672
NEC	0012	Symphonic	0312, 0412

Code List – Lista de Códigos

.....0432, 0702, 0992, 1392, 1612
Tandy0312, 0432, 0602, 1712
Tashiko0182
Tatung1212
Teac0312, 0432, 0992, 1212
Technics1112
Techwood1602
Teknika0182
.....0232, 0312, 0432, 0992, 1112
Tivo1052, 1162
TMK0102, 0732, 1012
Toshiba0042
.....0152, 0482, 0652, 0682, 0812
.....0882, 0902, 0922, 1002, 1032
.....1312, 1402, 1412, 1522, 3075
Totevision0102, 0182
Trutech1385
Unitech0102
Vector Research0012
.....0392, 0522, 0532, 0882
Victor0392, 0522, 0532
Video Concepts0012, 0032
.....0392, 0522, 0532, 0882, 1592
Videosonic0102
Wards0032, 0102, 0162, 0182, 0302
.....0312, 0362, 0372, 0432, 0592
.....0812, 0882, 0932, 0992, 1032
.....1112, 1142, 1462, 1592, 1682
White Westinghouse 0312, 0432, 0702, 0762
XR-10000362, 0372, 0992, 1112
Yamaha0012, 0392, 0522, 0532, 1212
Zenith0082, 0182, 0302, 0312
.....0332, 0392, 0432, 0452, 0512
.....0522, 0532, 0622, 0652, 0662
.....0712, 0762, 0792, 0942, 1072
.....1092, 1181, 1182, 1252, 1522
.....1532, 1631, 1682, 1732, 4201

LASER DISC

Denon0222
Pioneer0222
Proscan0642
RCA0642
Sanyo1072
Sony1006, 1232
Zenith1072, 1232

CD

ADC0517, 1277
Adcom0027, 0777
Aiwa0357, 0966, 0987, 1007
Akai0167, 0377, 0757
Audio Technica0117
California Audio Labs0257
Captronic0527, 1623
Carver0197, 0207, 0317, 0417
Casio0397
Centrios1097
Citizen0277
Coby1287
Curtis Mathes0397
Denon0637
Emerson0777, 1017
Fisher0127, 0217
.....0317, 0327, 0457, 1137, 1157
Genexxa0427, 0577, 1017
Goldstar0687
Harmon Kardon0647, 0797
Hitachi0427
Inkel0787
Insignia1526
JC Penny0397, 0657
JVC0897, 1056, 1107
Kenwood0137, 0367, 0467, 0497
.....0537, 1016, 1027, 1147, 1167
Krell0207
Kyocera0517, 1277
Luxman0227, 0337, 0477, 0587
LXI0397
Magnavox0207, 0737, 0837
Marantz0207, 0437, 0547, 0947
MCS0397, 0657

MGA0797
Mission0207
Mitsubishi0797, 0907
NAD0766, 0827, 1026, 1087
Nakamichi0007, 0877, 1037
NEC0657
Nexxtech0097, 0487, 0536
.....0576, 0607, 0617, 0666, 0727
.....0856, 0887, 0916, 0967, 1217
Nikko0117, 0217, 1017
NSM0207
Onkyo0147
.....0237, 0816, 0867, 0937, 1177
Optimus0057, 0317
.....0347, 0387, 0417, 0427, 0447
.....0537, 0557, 0667, 0776, 0857
Panasonic0257
.....0696, 0707, 0747, 0997, 1077
Philips0197, 0207, 0837
Pioneer0057, 0307, 0407, 0427
.....0577, 0717, 0807, 0917, 1227
Proton0207
Quasar0257
Radio Shack0107, 0247, 0267
.....0307, 0417, 0507, 0717, 1227
RCA0087, 0107
.....0187, 0307, 0317, 0717, 0777
.....1047, 1067, 1117, 1207, 1227
Realistic0317, 0347, 0427, 0527
.....0547, 0557, 0777, 1017, 1623
Rotel0207
SAE0207
Samsung0847, 1396
Sansui0017, 0047, 0207, 1067
Sanyo0157, 0177
.....0317, 0457, 0957, 1127, 1197
Scott0777, 1017
Sears0397, 0537, 0547
Sharp0537, 0547
Sherwood0247
.....0447, 0547, 0606, 0627, 0787
Shure0657
Sony0077, 0357, 0737, 0977
STS0517, 1277
Sylvania0207
Symphonic0567
Teac0217, 0297, 0547, 0557
.....0567, 0646, 0677, 0817, 1187
Technics0257, 0696, 0747, 0997, 1077
Theta Digital0837
Toshiba0766, 0827
Victor0897
Yamaha0037, 0117, 0287, 0927, 1057
Zenith0067, 0217, 0516
.....0597, 0656, 0697, 0716, 0767

AUDIO

Aiwa0586
.....0726, 0846, 0966, 1296, 1386
Apex0425
Apple Ipod0186
Bose0886, 1237, 1606
Carver0197
Centrios1116, 1217, 1546, 1552, 1566
Citizen0277
Criterion0785
Delphi0376
Denon0316, 0976, 1046, 1136
Duraband1476
Fisher0026, 0826
Gold Star0216
Harman/Kardon0016, 0436
Insignia0725
Ipod0066
JVC0566, 0676, 1056
JWL1126
Kenwood0246, 0426, 0497
.....0616, 0956, 1016, 1416, 1596
Koda1552
Koss0215
Magnavox0026, 0206, 0226, 0295, 1266
Marantz0036, 0437
Mitsubishi0366

Code List – Lista de Códigos

NAD0496, 0766, 1026
 Nelson1217
 NEO0076
 Nexxtech0487, 0536, 0576, 0666
0725, 0856, 0916, 1116, 1217
 Norcent.....0835
 Onkyo1186, 1246, 1256
0116, 0816, 0936, 0996, 1376
 Optimus.....0006, 0317, 0386, 0387, 0506
0776, 0896, 1036, 1446, 1486
 Panasonic.....1206, 1236, 0056
0126, 0686, 0746, 0796, 0876
1066, 1096, 1346, 1436, 1466
 Philips.....1196, 0026, 0036
0197, 0265, 1066, 1266, 1576
 Pioneer0266, 0356
0407, 0476, 0776, 0896, 1106
1406, 1446, 1496, 1506, 2675
 Radio Shack0006
0166, 0176, 0236, 0247, 0266
0356, 0476, 0507, 0626, 1036
1316, 1406, 1446, 1486, 1506
 RCA0146, 0176, 0196, 0266, 0276
0326, 0356, 0476, 0486, 0626
0736, 0786, 0866, 0906, 0986
1165, 1207, 1276, 1286, 1306
1316, 1326, 1336, 1406, 1506
 Realistic0946
 Regent1476
 Rio3885, 0286
 Saba0995
 Samsung0075
 Sanyo0157, 1156, 1166, 1176
 Scott0396
 Sharp1616
1626, 1216, 0556, 0756, 1267
 Sherwood0236, 0247, 0466, 0606
 Sirius.....1247, 1267
 Skyfi.....0076
 Sony1226, 0046
0106, 0136, 0256, 0296, 0406
0416, 0526, 0546, 0636, 1006
1076, 1086, 1426, 1456, 1586
 TAO0076
 Teac0156, 0297, 0306, 0346, 0646
 Technics.....0056, 0126, 0686
0696, 0796, 1066, 1096, 1436
 Tevion0785
 Venturer0086
 Vizio1636, 1646
 Wonder1566
 XM Radio.....0076, 0376
 Yamaha.....0076, 0287
0336, 0446, 0456, 0596, 0706
0806, 0836, 0926, 1146, 1536
 Zenith.....3885
0026, 0067, 0096, 0216, 0217
0286, 0506, 0516, 0656, 0716

Apex0425
 Bose4455, 0886, 1475
 Boston Acoustic.....3245
 Centrios0486, 0955, 1116, 1785, 1845
 Classic.....1965
 Criterion.....0785
 Durabrand.....3885, 0205
0486, 0955, 1476, 2685, 2935
 Dynex0038
 Emerson1185
 Insignia0725
 JVC0155
 KLH.....0465
 Koss.....0215
 Lenoxx.....1345
 LG4285, 1463, 1565
 Magnavox.....(0105 & 1266), (2945 & 1266)
0206, 0295, 0745, 1045
 Myron & Davis1555
 NESA1555
 Nexxtech0486, 0725, 0955, 1116, 1785
 Norcent.....0835
 Onkyo0048, 0058, 0355, 1376
 Panasonic.....0165, 1466
 Philips.....(0105 & 1266)
(2665 & 1266), (2945 & 1576)
0206, 0265, 1045, 2765
 Pioneer(2675 & 1496), 0525, 0875, 2895
 Radio Shack(0003 & 1316)
0085, 0275, 0486
0626, 0955, 0995, 1165, 1645
 RCA(0003 & 1316)
0486, 0626, 0955, 1165, 1645
 Regent.....1345, 1476
 Rio(0205 & 0286)
 Saba0995
 Samsung0075, 1535, 2725
 Selectron1885, 2075
 Sony0365, 1426
 Techwood1602, 1985
 Tevion0785
 Zenith.....(0205 & 0286)

TV/VCR/DVD COMBO

Broksonic1525
 Diamond Vision(2001 & 0422), 0455
 Magnavox.....0445, 0412
 Panasonic.....0595, 0552
 Philips.....0445, 0412
 Samsung1535
 Sears0445, 0412
 Superscan0445, 0412
 Sylvania0445, 0412
 Toshiba.....0115, 3075

HOME AUTOMATION

GE Homeminder.....0008
 Lutron1516
 X10 Home Automation0018
 X10 NEC.....0028
 Vizio0068

MEDIA CENTER PC

MCE.....3255
 Microsoft3255
 Vista.....3255

HTIB

(HOME THEATER IN A BOX)

Aiwa.....(0586 & 0035)
 Amw0825