



Option

Quick Start Guide

*OPTION NV, Gaston Geenslaan 14, B-3001 Leuven
Tel +32 16 317 411 Fax +32 16 207 164 <http://www.option.com>*

Option Confidential



About this document

Overview and Purpose

This document describes how to use the hardware, software and gives some installation instructions.

Confidentiality

All data and information contained or disclosed by this document is confidential and proprietary of Option NV, and all rights therein are expressly reserved. By accepting this document, the recipient agrees that this information is held in confidence and in trust and will not be used, copied, reproduced in whole or in part, nor its contents revealed in any manner to others without prior and written permission of Option NV.

Version History

Date	Version	Author(s)	Revision(s)	Remarks
May 31, 2006	V01 – D1	R. Biesemans		Initial version
August 21, 2006	V02	J. Boeckx		Adapted to use for certification
December 1, 2006	V03	J. Elebaut		Added some information

Author: R. Biesemans
Creation Date: Dec 05, 2006

Version: V01 – D1
Page: 1 of 18

Option Confidential: *This document is Option Confidential - it may not be duplicated, neither distributed externally without prior and written permission of Option NV.*



Table of contents

1	Driver installation	3
2	Hyperterminal	6
3	Set up a data call	9
4	Set up a voice call	15
5	When card doesn't register	15
6	Additional AT commands	17
7	cradle mode.....	18

1 DRIVER INSTALLATION

Note: depending on the actual product you are trying to install the names may differ in some parts !

Following drivers are available for WinXP, Win2K and Win XP x64 edition:

- Multifunction Adapter : Globetrotter Module 3G+ Bus
- Modem : Globetrotter Module 3G+ Modem
- Network : Globetrotter Module 3G+ Network Card
- Ports : Globetrotter Module 3G+ Application Port
- Ports : Globetrotter Module 3G+ Diagnostics Port
- Smart Card : Globetrotter Module 3G+ Smart Card Interface (if applicable)

Installation procedure:

1. If you have not already done so, install and connect the cradle. The unit shall be connected correctly only if the "Welcome to the Found New Hardware Wizard" appears.
2. By connecting the unit to the PC, Windows will detect new hardware and will ask to install the drivers. Insert the CD and install the drivers following the windows driver installation wizard. As there are 4 drivers the "Found new hardware" wizards needs to run 4 times. Further installation instructions will be given for Windows XP.
3. For Windows XP: on the first dialog ("connect to Windows Update ?") select No, not this time:

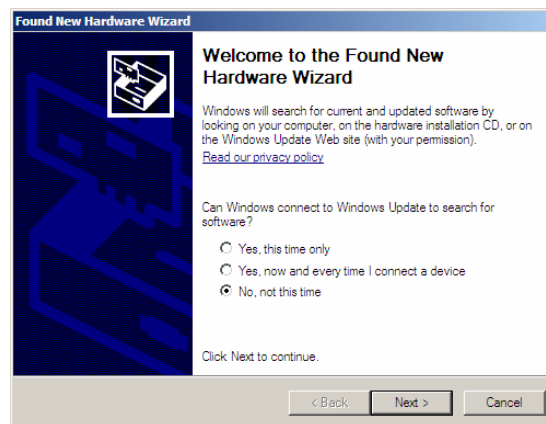


Figure 1: Hardware wizard

4. On the next dialog, select "Install software automatically":

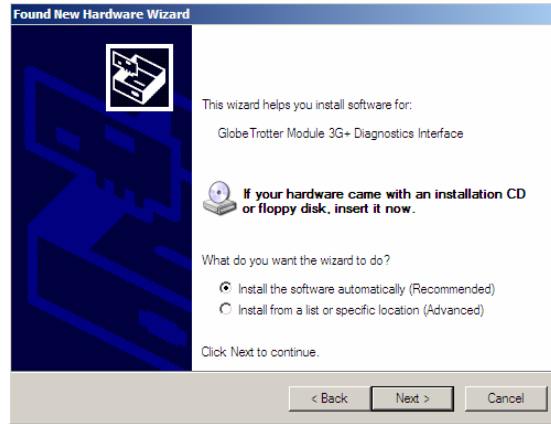


Figure 2: automatic search for driver

If Windows does not automatically find the correct driver, you should select Install from a list or specific location and browse to the folder "DriverXP_2000" on the CD

5. For the driver signing warning, click "Continue Anyway":

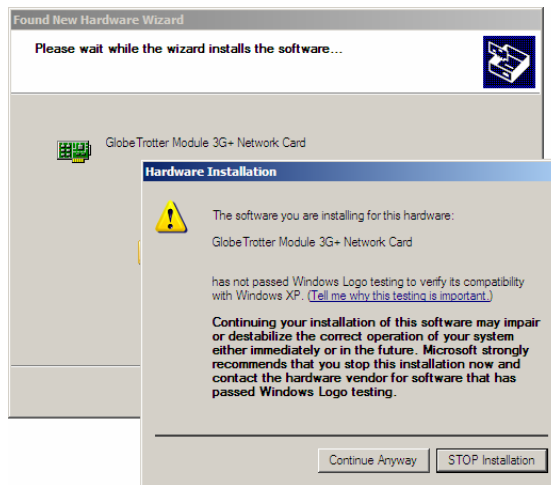


Figure 3: Not signed driver warning

6. In total, five or six devices will be detected:
 - Globetrotter Module 3G+ Bus
 - Globetrotter Module 3G+ Modem
 - Globetrotter Module 3G+ Network Card
 - Globetrotter Module 3G+ Application Interface
 - Globetrotter Module 3G+ Diagnostics Interface
 - Globetrotter Module 3G+ Smart Card Interface (if available)

Repeat steps 3 through 5 for the 3 remaining devices to complete the installation.

On successful installation of the drivers, the four GT devices should show up in the device manager:

Author:	R. Biesemans	Version:	V01 – D1
Creation Date:	Dec 05, 2006	Page:	4 of 18
Option Confidential:	<i>This document is Option Confidential - it may not be duplicated, neither distributed externally without prior and written permission of Option NV.</i>		

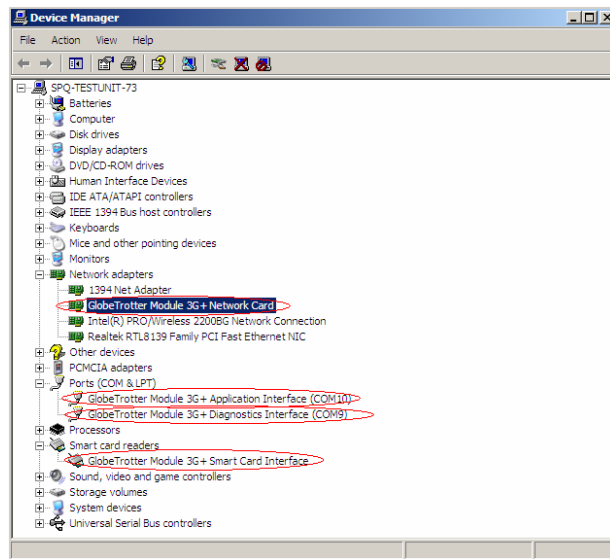


Figure 4: Device manager

2 HYPERTERMINAL

This section describes briefly how to setup HyperTerminal to enter AT commands.

1. Go to device manager, and check which port is the Application port.
On my PC, the application port is COM6

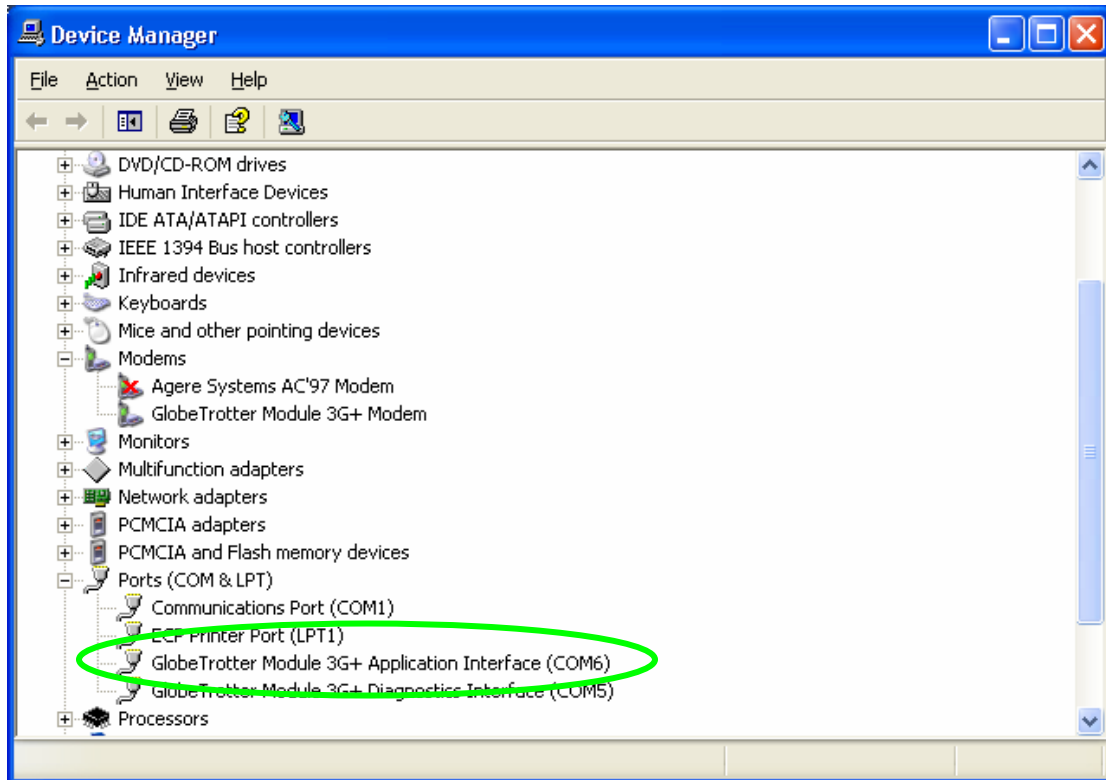


Figure 5: Device manager

2. Open HyperTerminal
Therefore you can follow the following path:
Start → Programs → accessories → Communication → HyperTerminal
3. Enter a name for your HyperTerminal Connection and press OK.



Figure 6: Connection Description

4. In the next window, change the connecting using field to the Application Port (COM6 for my PC). Click on OK.



Figure 7: Connection port

5. Now the next window will appear. Modify the Bit per second field to 115200 and Click the OK button.

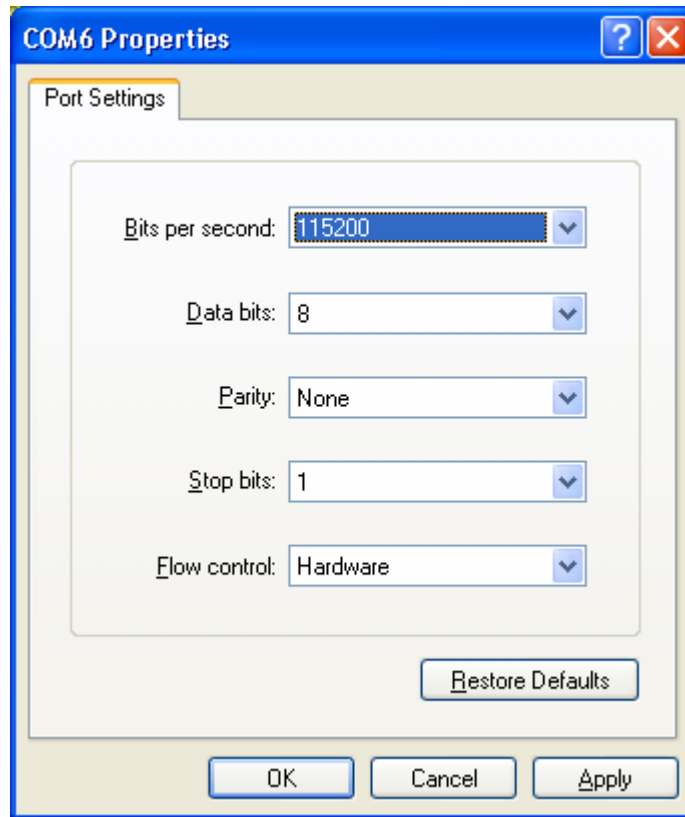


Figure 8: Connection Properties

Now HyperTerminal is configured. You are now ready to check some basic settings.

3 SET UP A DATA CALL

Besides using dashboard applications, it is also possible to set up a data call using windows dial up networking. This section explains how to set up a dial up connection.

1. Go to Start → Control Panel → Network Connections and click on the icon “New Connection Wizard”.

The following screen will appear:



Figure 9: Network connections

2. Click the ‘next’ button and Figure 10 will appear.
Select “connect to the internet”, and click next. Now Figure 11 will appear.

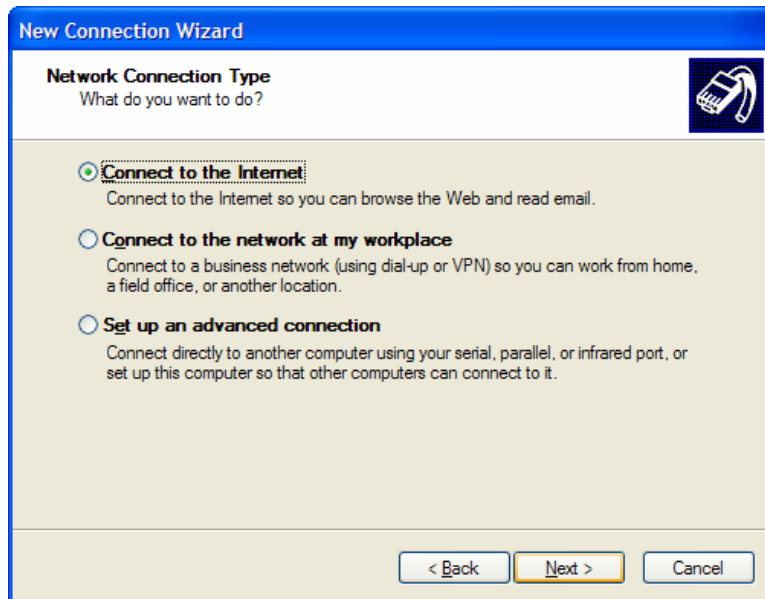


Figure 10: New network connection

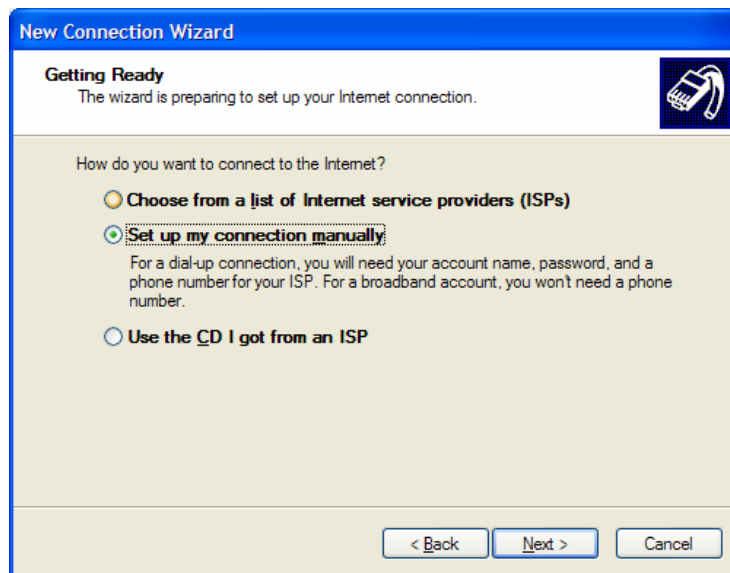


Figure 11: Manual connection setup

3. Select “Set up the connection manually”, and click the NEXT button.
Choose the Connect using a dial-up modem option, and click the NEXT button.

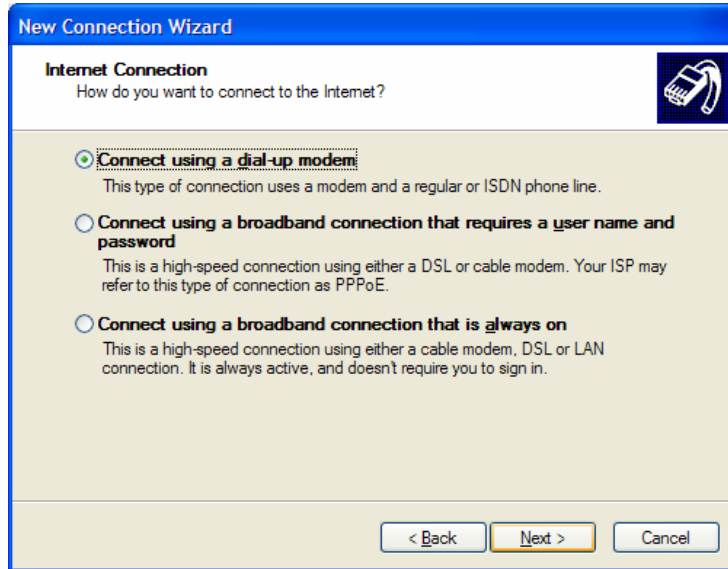


Figure 12: Connection with dial-up modem

4. Select the correct modem (Modem - Globetrotter 3G+ modem interface), and click the ‘next’ button.


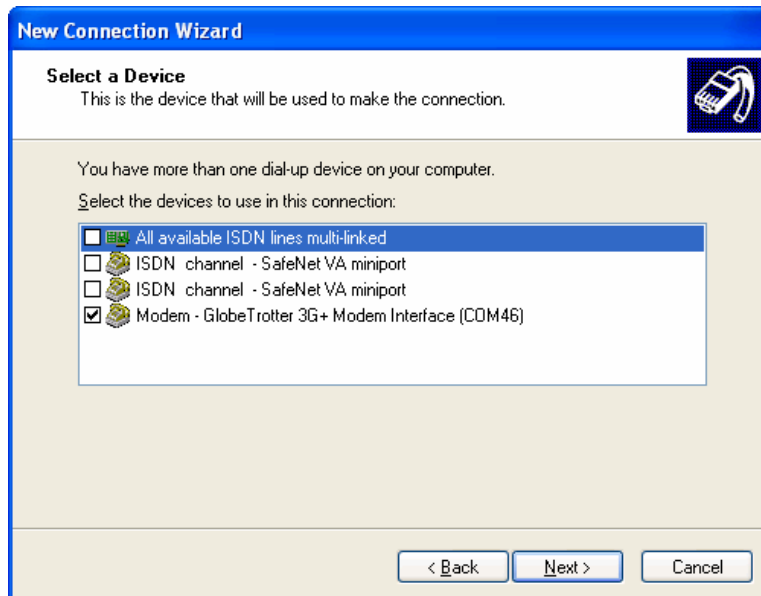


Figure 13: Select modem


5. Type a name for the connection, which you will select the next time you need this dial-up connection, and click the 'next' button.

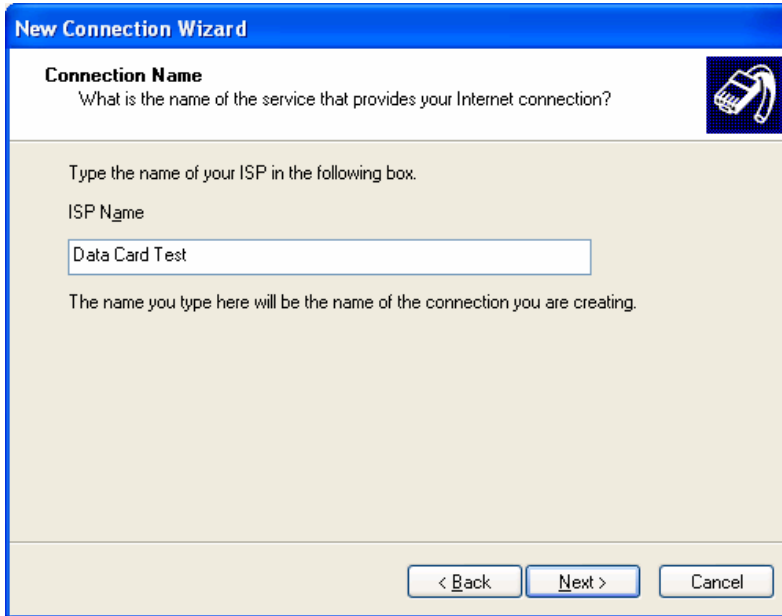

The screenshot shows a Windows-style dialog box titled "New Connection Wizard". The main heading is "Connection Name". Below it, the text asks "What is the name of the service that provides your Internet connection?". There is a small icon of a mobile phone in the top right corner. The main area contains the instruction "Type the name of your ISP in the following box." followed by "ISP Name" and a text input field containing "Data Card Test". Below the input field, it says "The name you type here will be the name of the connection you are creating." At the bottom, there are three buttons: "< Back", "Next >", and "Cancel".

Figure 14: Connection name

6. Type in the Phone number to dial, which is *99#, and click the 'next' button.

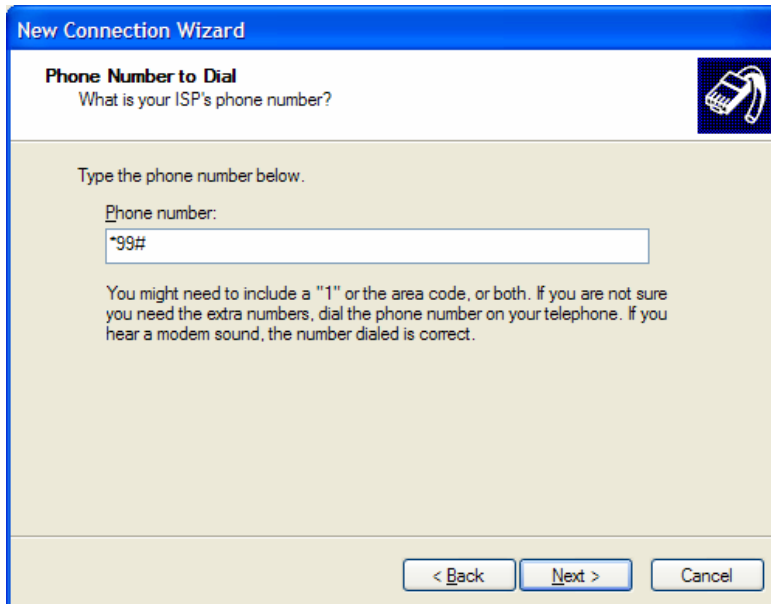

The screenshot shows a Windows-style dialog box titled "New Connection Wizard". The main heading is "Phone Number to Dial". Below it, the text asks "What is your ISP's phone number?". There is a small icon of a mobile phone in the top right corner. The main area contains the instruction "Type the phone number below." followed by "Phone number:" and a text input field containing "*99#". Below the input field, there is a paragraph of text: "You might need to include a '1' or the area code, or both. If you are not sure you need the extra numbers, dial the phone number on your telephone. If you hear a modem sound, the number dialed is correct." At the bottom, there are three buttons: "< Back", "Next >", and "Cancel".

Figure 15: Number to dial

- Choose the option you like, and then click the 'next' button.

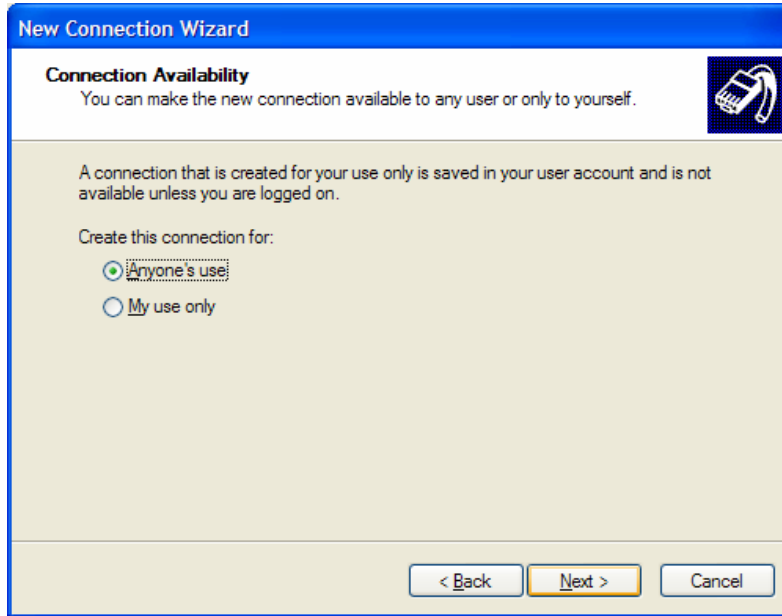


Figure 16: Connection availability

- If your service provider requests to enter username and password for setting up a PS data call connection, please enter it using the screen below.

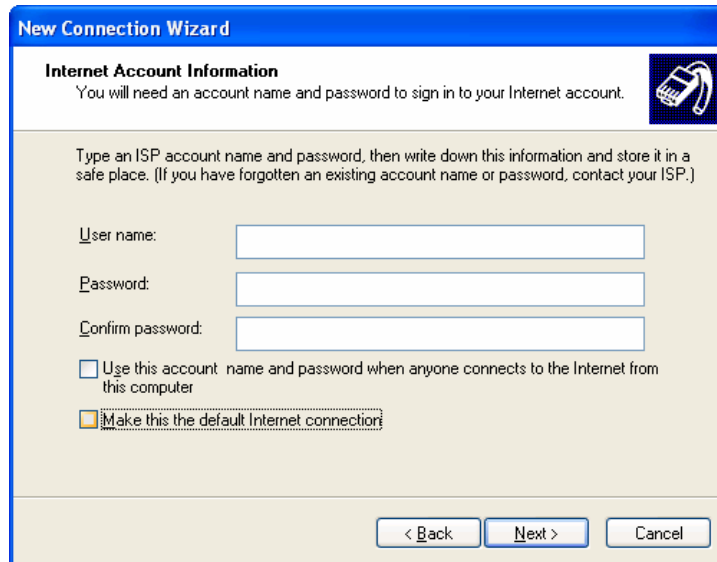


Figure 17: Internet Account Information

- The connection is set up and ready to used. Click the 'finish' button to close the wizard window.

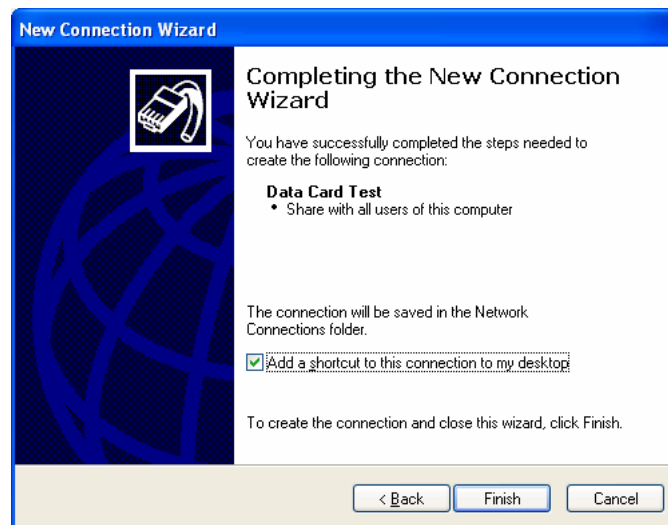


Figure 18: Connection complete

10. If your card is registered on the network, you can use the just configured dial-up connection to activate a PDP context.
Go to Start → Connect to → “Your Connection name here” and select it.
Click the Dial button. After a while, a connection to the internet is made.



4 SET UP A VOICE CALL

Voice calls can be set up using HyperTerminal. In chapter 2 a description is given how HyperTerminal can be configured. Here the necessary AT commands are specified to make a voice call.

1. **AT_ODO=0**
With this AT command circuit switched data transfer, which is needed for voice calls, is enabled
The response on this AT command should be: OK
2. **AT_OPCMENABLE=1**
As a default the voice part of the firmware is disabled. To enable digital voice, the command above must be set.
The response on this AT command should be: OK
3. **AT_OPCMCONFIG=0,0,0,256,0,1,4**
When this AT command is entered, the PCM voice codec on the module/datacard is configured correctly.
The response on this AT command should be: OK
4. **ATD<phone number>;**
To set up the call, the ATD command followed by a phone number must be used.
NOTE: Do not forget the semi don (;) at the end of the AT command!!!
The response on this AT command should be: OK

5 WHEN CARD DOESN'T REGISTER

When the module/datacard doesn't register, you can try to evaluate following settings:

1. **At_opbm**

When not working in a shielded environment, all life networks could interfere with the signal coming from the CMU. When the simulated network is not in the same band as the surrounding life networks, this problem can be avoided by deselecting all other basebands but the one you are working in.

This could be done using the at_opbm command:

Extract from datasheet:

Preferred Band Mode _OPBM

Command	Possible response(s)
_OPBM=<band>,<n>	OK
_OPBM=?	_OPBM: (list of supported <band>s)
_OPBM?	<band>: <n>[<CR><LF><band>: <n>[...]]

Description

This command is used to disable/enable specific frequency bands.

Author: R. Biesemans
Creation Date: Dec 05, 2006

Version: V01 – D1
Page: 15 of 18

Option Confidential: This document is Option Confidential - it may not be duplicated, neither distributed externally without prior and written permission of Option NV.



Defined Values

<band>	
"ANY"	: any band
"EGSM"	: EGSM (900MHz) band
"DCS"	: DCS (1800MHz) band
"PCS"	: PCS (1900MHz) band
"G850"	: GSM 850MHz band
"U2100"	: WCDMA 2100MHz band
"U1900"	: WCDMA 1900MHz band
"U1700"	
"U17IV"	
"U850"	: WCDMA 1900MHz band
<n>	
0	: disable
1	: enable

Eg: if you use GSM1900 (PCS) band, select only this band. All other bands have to be deselected. It is also very important to deselect EVERY UMTS band when trying to connect to a GSM network and vice versa:

```
At_opbm = "PCS",1 (selection of PCS band)
At_opbm = "DCS",0 (deselection of DCS band)
Same for the other bands, also the UMTS bands!!!
```

To check if the band is really (de)selected, use "at_opbm?". The bands showing 0 are deselected, the bands showing 1 are selected.

2. AT_OPSYS

When the band settings did not work, try the OPSYS command: this command selects the UTRAN and the packet and/or circuit switched domain.

Extract from datasheet:

Preferred SYSTEM "AT_OPSYS"

Command	Possible Response(s)
_OPSYS=[<mode>[,<domain>]]	OK
_OPSYS?	_OPSYS: <mode>,<domain>
_OPSYS=?	_OPSYS: (0-5),(0-6)

Description

This command changes the preferred system, GSM/WCDMA, the acquisition order and the service domain preference PS/CS.

Defined values

Author:	R. Biesemans	Version:	V01 – D1
Creation Date:	Dec 05, 2006	Page:	16 of 18

Option Confidential: This document is Option Confidential - it may not be duplicated, neither distributed externally without prior and written permission of Option NV.



<mode>:
 0 GSM only
 1 WDMA only
 2 GSM first
 3 WCDMA first
 4 No change
 5 Auto

<domain>:
 0 Acquire only circuit-switched systems
 1 Acquire only packet-switched systems
 2 Acquire circuit-and/or packet-switched systems
 3 Any domain will do; no preference

Eg: at_opsys=0,2 selects options:
 GSM only and CS & PS domains

6 ADDITIONAL AT COMMANDS

This section contains some basic at commands you may need when using our datacard/modules.

1. at_osec

This command sets the RRC security setting.
 Please note that a hard reset of the card is required before the setting will take effect.

Extract from datasheet:

SECURITY “AT_OSEC”

Command	Possible Response(s)
_OSEC=[<sec>]	OK
_OSEC?	_OSEC: <sec>
_OSEC=?	_OSEC: (list of supported <sec>s)

Description

This command sets the RRC security setting.
 Please note that a hard reset of the card is required before the setting will take effect.

Defined values

<sec>:
 0 None
 1 Integrity

Author: R. Biesemans
Creation Date: Dec 05, 2006

Version: V01 – D1
Page: 17 of 18

Option Confidential: *This document is Option Confidential - it may not be duplicated, neither distributed externally without prior and written permission of Option NV.*



- 2 Ciphering
 - 3 Fake Security
 - 4 Integrity and Ciphering
2. ata

This commands accepts a MT call.

3. at+chup

This commands terminates a call.

7 CRADLE MODE

Datacards : Nominal voltage = 3,5V

Modules: Nominal voltage = 3,3V

Changing card from cradle mode to laptop mode and vica versa is done with the port change command at_opos. For cradles with a usb connection this is normally not needed.

It is important to use the port settings as described in the hyperterminal section otherwise it will not be possible to make a connection with the card.

Use “at_opos?” to see the current value.

- a. From cradle mode to laptop mode

You can communicate with the cradle through COM1 (or whatever the name is of the port you attached the cradle to)

At_opos=x,x,1,x

➔ when in cradle: at_opos=2,10

- b. From laptop to cradle mode

You can communicate with the cradle through the application port or modem port. You can see their port numbers when you doubleclick the safe removal button.

At_opos=x,x,10,x

➔ to change the card to laptop mode, you can change the opos parameters by using at_opos=2,1. Now you CAN'T CONNECT through modem-port.

For fujiGT there are some different settings:

- a. From cradle mode to laptop mode

At_opos=1,4

- b. From laptop mode to cradle mode

At_opos=1,1

Author: R. Biesemans
Creation Date: Dec 05, 2006

Version: V01 – D1
Page: 18 of 18

Option Confidential: *This document is Option Confidential - it may not be duplicated, neither distributed externally without prior and written permission of Option NV.*
