

Magnesium™

Upright Vacuum

Magnesium™ | Magnesium™ RS | Magnesium™ SW | Magnesium™ RF

User's Manual



POWERFUL
LIGHTWEIGHT
EASY TO USE
MULTI-SURFACE



ORECK®

Important!
Read this manual carefully, and keep for future reference.

Magnesium™

Upright Vacuum

Enjoy

Thank you for purchasing the Oreck Magnesium™ upright vacuum cleaner. The inner bag is already installed. Simply install the handle and you are ready to enjoy your new Oreck Magnesium Upright Vacuum Cleaner.

Welcome to our **Call. Click. Visit.** customer service program. To speak with an Oreck representative call or click using the information below.



Call
USA: 1•800•989•3535
Canada: 1•888•676•7325



Click
www.oreck.com



 
Visit
Visit one of our many
Oreck store locations.

Contents

Parts.....	2
Safety.....	2
Operation.....	3
Use & Maintenance.....	5
Troubleshooting & Parts.....	6
French.....	7
Spanish.....	11

Parts

- | | | |
|---------------------------------|----------------|---------------------|
| 1 Handle with soft comfort grip | 7 Carry Handle | 15 Outer Bag |
| 2 On/Off Switch | 8 Zipper | 16 Power Head |
| 3 Cord Release | 9 Main Bumper | 17 Inner Filter Bag |
| 4 Magnesium™ Handle | 10 Power Cord | 18 Swivel |
| 5 Deflector | 11 Lower Tube | 19 Edge Brushes |
| 6 Bag Dock | 12 Fan Housing | 20 Battery Door |
| | 13 Rear Wheels | |
| | 14 Cover | |

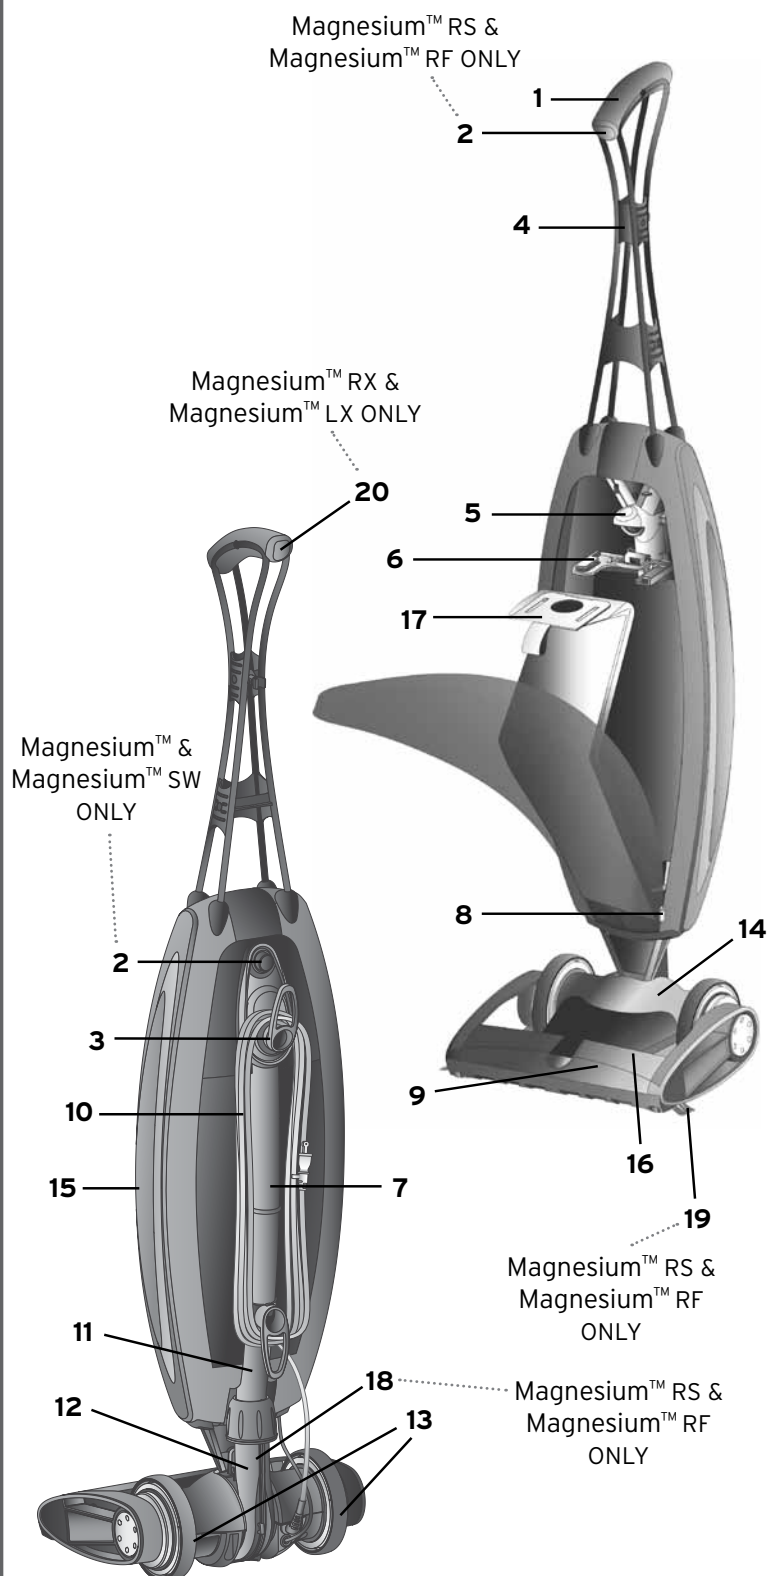



The Federal Communications Commission Radio Frequency Interference Statement includes the following:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protections against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC (RSS-210) Rules.

Operation is subject to the following two conditions: (1) The device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION!

Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT NOTE:

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Transmitter specification

*Carrier frequency: 434MHz

*RF output power: -10dBm

General Warnings



IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER

⚠ WARNING!: To reduce the risk of fire, electric shock, or injury:

- Do not leave appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not operate the unit while in the upright and locked position.
- Do not let the unit run while in any one stationary position for any period of time. Keep the unit moving while in operation.
- Do not allow to be used as a toy. Close attention is necessary when used near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center or call customer service at: US: 1-800-989-3535 Canada: 1-888-676-7325
- Do not pull or carry by cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners.
- Keep cord away from heated surfaces.
- Do not run appliance over cord.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Always test a small area to determine if surface is suitable for the cleaner.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow.
- Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
- Do not use to pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without disposable inner bag assembly in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline or lighter fluid, or use in areas where they may be present.
- Do not use appliance in an enclosed space where flammable, explosive or toxic vapors are given off by oil base paint, paint thinner, some mothproofing substances, or in an area where flammable dust is present.
- Do not pick up toxic material such as chlorine bleach, drain cleaner, gasoline, etc. with this appliance.
- Use caution when vacuuming over area rug edges and fringe.
- Product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

CAUTION!

 
Wood Floors, Soft (Vinyl, Asphalt Tile, etc.) Floor Surfaces and Polished Floor Finishes

Use low speed on hard floor surfaces. Use floor and floor finish manufacturer's recommended methods of cleaning. The brushroll may also scuff very soft finishes. Do not operate the vacuum while in the upright and locked position. Do not let the vacuum run while in any one stationary position for any period of time. Keep the vacuum moving while in operation.

SAVE THESE INSTRUCTIONS

Household Use Only

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not alter the plug in any way.

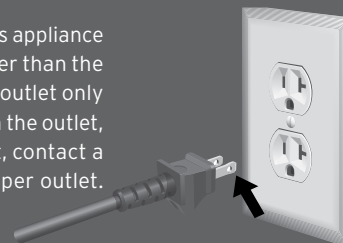

ORECK[®] OPERATION

Assembling the Handle

1. Align the four connector tabs at the bottom of the Magnesium[™] handle with the four receiving ports at the top of the outer bag and insert until a “snap” is heard.
2. Snap cord assembly into the cord clip located on the back of the Magnesium[™] handle. Leave excess cord at the power head to allow movement.
3. Remove the protector (Mylar Tab) sheet for the Magnesium[™] RS and RF.

Operating the Oreck Magnesium[™] & Magnesium[™] SW

Make sure the disposable inner bag is in place. Do not operate the vacuum without a disposable inner bag. Plug the power cord into an electrical outlet and press the ON/OFF switch on the back of the vacuum when ready to operate. Press the button once to turn the unit on high, press a second time for low speed, and a third time to turn the unit off.

 
 
 
 
 
4. **Up-Position Lock** - Place foot on power head and lean handle back gently to release lock for vacuum use. Return handle to the full upright position to engage lock. **NOTE:** Do not operate the vacuum while in the upright and locked position. Do not let the vacuum run while in any one stationary position for any period of time. Keep the vacuum moving while in operation.
5. **Cord Release** - To remove cord, twist cord release 1/2 turn. Slide cord off cord release.
6. **Easy Power Cord Storage** - Turn cord release to the up position, wrap power cord around cord release and lower cord bracket located below the carry handle.
7. **Carry Handle** - The carry handle is located on back of the vacuum for easy lifting and carrying.

Operating the Oreck Magnesium[™] RF & RS

Make sure the disposable inner bag is in place. Do not operate the vacuum without a disposable inner bag. Plug the power cord into an electrical outlet. Press the ON/OFF switch (top) on the handle and the unit turns ON in high speed. Press the Low Switch (bottom) to change to low speed operation. Press the High Switch (middle) to return to high speed operation. Press ON/OFF switch (top) again to turn the unit off.



4. **Up-Position Lock** - Place foot on power head and lean handle back gently to release lock for vacuum use. Return handle to the full upright position to engage lock. **NOTE:** Do not operate the vacuum while in the upright and locked position. Do not let the vacuum run while in any one stationary position for any period of time. Keep the vacuum moving while in operation.
5. **Cord Release** - To remove cord, twist cord release 1/2 turn. Slide cord off cord release.

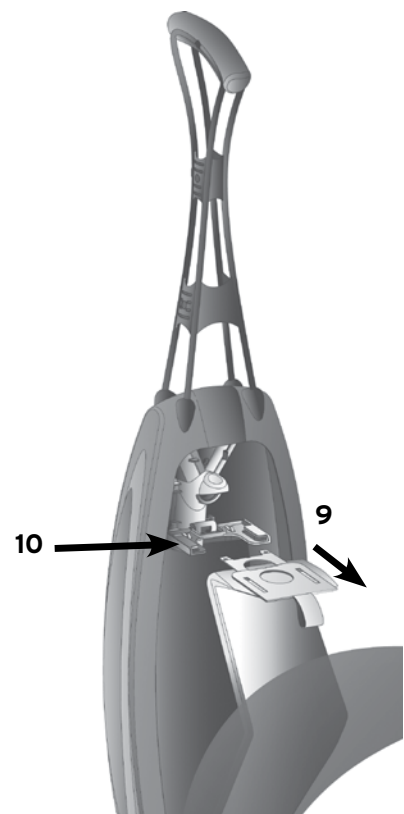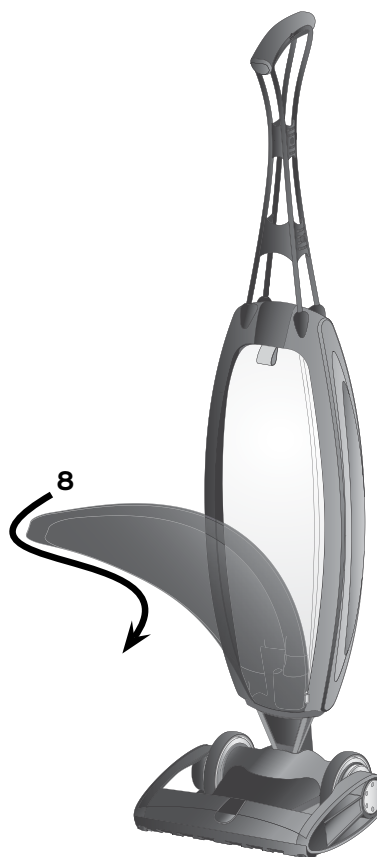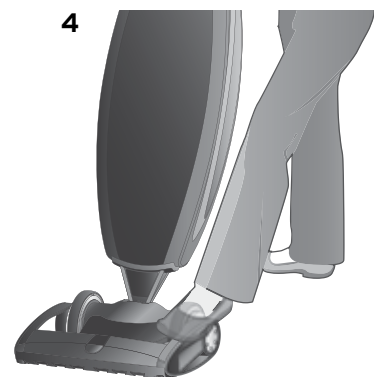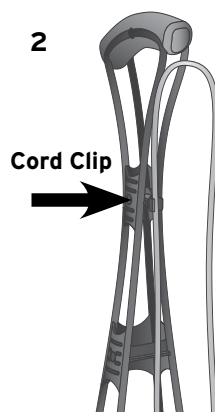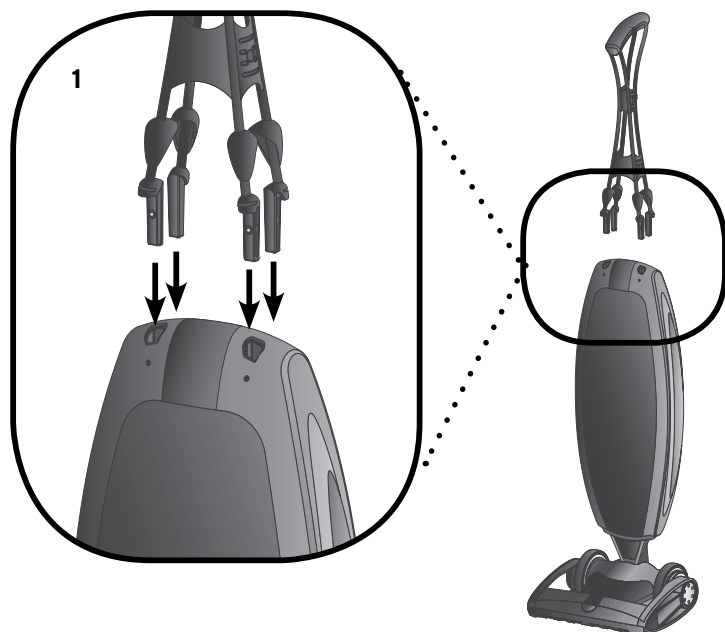

ORECK OPERATION

6. **Easy Power Cord Storage** - Turn cord release to the up position, wrap power cord around cord release and lower cord bracket located below the carry handle.
7. **Carry Handle** - The carry handle is located on back of the vacuum for easy lifting and carrying.

Inner Bag Removal

8. Unzip outer bag completely.
9. Pull tab on bag to release bag dock from connector. Bag dock door will hinge downward.
10. Gently pull bag cardboard collar outward from bag dock. The Saniseal® dust seal will close automatically.

Inner Bag Installation

11. Slide the cardboard collar completely onto bag dock door.
12. Firmly push bag dock door with both thumbs on indication point until it snaps.

The performance of your new vacuum greatly depends upon care and maintenance. The instructions in this manual will guide you in performing basic care and maintenance. To obtain the most satisfying years of service read the instructions and keep them handy for future reference.

Inner Filter Bag

Your Oreck includes an HEPA Odor Fighting Inner Bag. The disposable inner bag plays a very important role in the efficiency of your ORECK vacuum. The purpose of the disposable inner bag is to trap dirt, but at the same time it must be porous enough to allow air to pass through. If the disposable inner bag becomes clogged, no air can pass through the vacuum and cleaning cannot take place, regardless of the vacuum's power.

To keep your upright vacuum operating at maximum efficiency, change the disposable inner bag frequently. **DO NOT FILL ABOVE THE LINE INDICATED ON THE DISPOSABLE INNER BAG.**

Be sure the disposable inner bag is installed properly. NOTE: All disposable inner bags are not the same. Oreck offers HEPA and non-HEPA inner bags. Your Oreck HEPA or non-HEPA inner bags have been designed to be used with the ORECK Upright vacuum. Using bags other than genuine Oreck HEPA or non-HEPA disposable inner bags will affect the cleaning ability of your vacuum and could cause damage to it.

