

# ORECK<sup>®</sup> XL<sup>®</sup>

SIMPLY AMAZING<sup>™</sup>



**USER'S GUIDE**

**ORECK<sup>®</sup>**  
*Steamer<sup>™</sup>*  
CARPET CLEANER

**XLS465**  
**XLS465A**

**•IMPORTANT•**  
**SAVE THIS BOOKLET!**

Includes:

- Warranty
- Safety Warnings
- Parts List
- Operating Instructions
- Accessories List
- Trouble Diagnosis

# BEFORE OPERATING CLEANER, READ ALL INSTRUCTIONS IN THIS MANUAL CAREFULLY.

## Table of Contents

Maintenance and Customer Service, Important Safety Instructions . . . . .	page 2
Warranty, Troubleshooting Guide . . . . .	page 3
Parts Check List, Features . . . . .	page 4
To Assemble Cleaner . . . . .	page 5
Servicing of Double-Insulated Appliances, A.L.C.I., To Set Up Cleaner . . . . .	page 6
To Set Up Cleaner, To Prepare Carpet, Operating Instructions . . . . .	page 7
Operating Instructions . . . . .	page 8-9
To Clean Carpet Cleaner, To Store Cleaner, Things To Do . . . . .	page 10
To Replace Belt, Accessories . . . . .	page 11

## Maintenance and Customer Service

Your ORECK vacuum cleaner is a product of precise engineering. The motor bearings are permanently lubricated and should not be oiled. If you require additional information or have problems with your ORECK appliance, you may call ORECK customer service at:

**USA** 1-800-989-3535  
**Canada** 1-888-676-7325

Please specify the model number and serial/code number which can be found on the data plate on the back of the vacuum.

Save your sales or purchase slip. Should your ORECK appliance require warranty service in the U.S.A., present this slip to the Authorized Service Center as your proof of purchase date or, in Canada, call customer service.

# IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

## READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER



## WARNING

### To reduce the risk of fire, electric shock, or injury:

- Do not leave appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Use indoors only.
- Do not immerse motorized nozzle, use only on carpet moistened by cleaning process.
- Do not allow to be used as a toy. Do not allow infants or children around the machine during operation.
- Use only as described in this manual. Use only manufacturer's recommended attachments and accessories.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, or left outdoors, return it to an Authorized ORECK Service Center. ORECK will provide all parts and labor without charge, during the warranty period, to place this appliance in correct operating condition. or call customer service at  
US: 1-800-989-3535  
CANADA: 1-888-676-7325
- Do not pull or carry by cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not run appliance over cord.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow.
- Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
- Do not use to pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline or lighter fluid, or use in areas where they may be present.
- Immediately switch off and unplug appliance if water or cleaning solution is observed leaking from machine during operation.
- To prevent over filling the recovery water tank, empty the recovery water tank every time the clean water tank is filled.
- Always turn off the appliance before connecting or disconnecting motorized nozzle.

## SAVE THESE INSTRUCTIONS Household Use Only

### Polarized Plug Notice

This product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact an electrician to replace the obsolete outlet. Do not defeat the purpose of the polarized plug.

## Warranty

ORECK MANUFACTURING COMPANY: (ORECK gives you the following limited warranty for this product only if it was originally purchased for use, not resale, from ORECK or an ORECK Authorized Retail Dealer.)

ORECK will repair or replace, free of charge, to the original purchaser, any part which is found to be defective in material or workmanship within one (3) years of the date of purchase. This limited warranty applies to normal domestic use. Any commercial use of this product will void this limited warranty.

Drive belts, revolving brushes, bulbs, disposable bags, and other parts subject to normal wear are not covered by this limited warranty.

This limited warranty does not apply to any part subjected to accident, abuse, commercial use, alteration, misuse, damage caused by fire or act of God, the use of voltages other than indicated on the serial number plate of this product or service of this product by other than ORECK or an ORECK Factory Authorized Service Center.

ORECK does not authorize any person or representative to assume or grant any other warranty obligation with the sale of this product.

ORECK's limited warranty is valid only if you retain proof of purchase from ORECK or an ORECK Authorized Retail Dealer for this product. If you purchase this product from any other source, your purchase is "AS IS," which means ORECK grants you no warranty, and that you, not ORECK, assume the entire risk of the quality and performance of this product, including the entire cost of any necessary servicing or repairs of any defects.

ORECK's liability for damages to you for any costs whatsoever arising out of this statement of limited warranty shall be limited to the amount paid for this product at the time of original purchase, and ORECK shall not be liable for any direct, indirect, consequential or incidental damages arising out of the use or inability to use this product.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD, AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THIS PERIOD.

Some states do not allow limitations on the duration of implied warranties, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

**CALL CUSTOMER SERVICE HOT LINE  
US: 1-800-989-3535  
CANADA: 1-888-676-7325**

Whenever calling, please be sure to have your model and serial number from data plate.

## Troubleshooting Guide



**WARNING: Unplug cord from electrical outlet before servicing.**

PROBLEM	SOLUTION
Water and cleaning solution is not dispensing onto carpet or upholstery.	<ul style="list-style-type: none"> <li>Check that the upper supply tank is partially filled with lukewarm water. Caution: Do not overfill.</li> <li>Check that a cleaner cartridge is installed and that the white lever is locked in the downward position. Due to pressurization, the cleaner will not properly operate without a cleaner cartridge in place. If the cleaner cartridge is empty, replace it with a full cartridge.</li> <li>Check that the spray tips are not clogged. Use a towel or damp cloth to clean.</li> <li>For above-the-floor cleaning, check that the hand-held nozzle and hose assembly is properly connected to the cleaner neck. Also insure that the button lock has been engaged.</li> </ul>
Not removing certain stains. Heavy traffic area spots.	<ul style="list-style-type: none"> <li>For best results, use a stain pretreatment, such as STEEMER Full Release™ Professional Spot &amp; Stain PreCleaner. These solutions loosen and break down most common household grease, oil, and food stains.</li> <li>Make several slow passes over the stain from different angles.</li> </ul>
Carpet is excessively wet after cleaning. <b>Note:</b> Under normal conditions, a carpet may take up to four hours or longer to completely dry. Drying time depends on a combination of various factors including: carpet type, carpet pile thickness, temperature, humidity, air circulation and the number of wet passes.	<ul style="list-style-type: none"> <li>Make at least one additional pass over the wet carpet without pressing the cleaner button.</li> <li>Check that the handle trigger lock is not engaged.</li> <li>With each pass, slowly pull the unit toward you to extract any remaining liquid in the carpet. To speed drying, gently push the nozzle deep into the carpet pile.</li> <li>Check for airpath obstructions in the stair/upholstery hose, cleaner neck and in the nozzle. Check to insure that the inlet screen is free of debris.</li> </ul>
Excessive foaming at spray tips.	<ul style="list-style-type: none"> <li>Check that the upper supply tank has water.</li> </ul>
Dark streaks on carpet after cleaning.	<ul style="list-style-type: none"> <li>Operate the machine more slowly; you will achieve better results with one slow pass than several fast strokes.</li> <li>Overlap each pass to provide maximum cleaning without streaking.</li> <li>In high traffic or heavily soiled carpets, it is occasionally beneficial to allow the carpet to dry and repeat the process as needed to achieve optimal cleaning.</li> </ul>
STEEMER brush roll will not turn.	<ul style="list-style-type: none"> <li>Check that the STEEMER power cord is completely connected to the main unit.</li> <li>If an obstruction stalls the brush roll, the belt is designed to burn through so as to protect the motor. Please insure through inspection that the brush roll is free of obstructions and is free to turn. Secondly, make sure that the belt is in good working order. Replace the belt if needed.</li> <li>If the belt and the brush roll become excessively wet, momentary slippage can occur. By running the unit on a dry section of carpet for a minute or less, the belt will function properly.</li> </ul>
Cleaner will not run or suddenly stops.	<ul style="list-style-type: none"> <li>Reinsert the plug, if it has slipped out of the outlet.</li> <li>The A.L.C.I. may have tripped off due to fluctuations in household current. Press the reset button and restart the unit.</li> </ul>

**ALL OTHER SERVICING SHOULD BE DONE BY AN ORECK AUTHORIZED SERVICE CENTER.**

## Parts Checklist

Read all instructions thoroughly before assembly/use. Please unpack carton, removing all parts and packages. Check that all parts required for assembly are present by referencing the list below.

### ORECK STEEMER® BASIC PARTS, Quantity ( )

1. ORECK STEEMER Unit (1)
2. Handle (1)
3. ORECK STEEMER Power Nozzle (1)
4. Wheels (2)
5. STEEMER Full Release™ Cartridge (1)
6. Screws (4)
7. Hand-held Nozzle and Hose Assembly (1)

## Features

### ORECK STEEMER® MODELS

4. Large nonmarring, easy-to-steer Wheels
5. Easy Lock-in Cleaner Cartridge
7. Hand-held Nozzle and Hose Assembly
8. 25' Power Cord
9. A.L.C.I. – Safety Plug with Reset and Test Buttons
10. Shampoo/Cleaner Spray Button
11. Translucent Upper Supply Tank
12. Translucent Lower Recovery Tank
13. Tank Latch
14. Transparent Nozzle Cover
15. Motorized Scrubbing Brush
16. Quick-connect fitting for Nozzle and Hose
17. Convenient quick-release Cord Wrap

### RED OPERATOR CONTROLS

9. A.L.C.I. Plug Reset Button
13. Tank Latch
18. On/Off Power Switch
19. Nozzle Change Button
20. Hand-held Nozzle Trigger

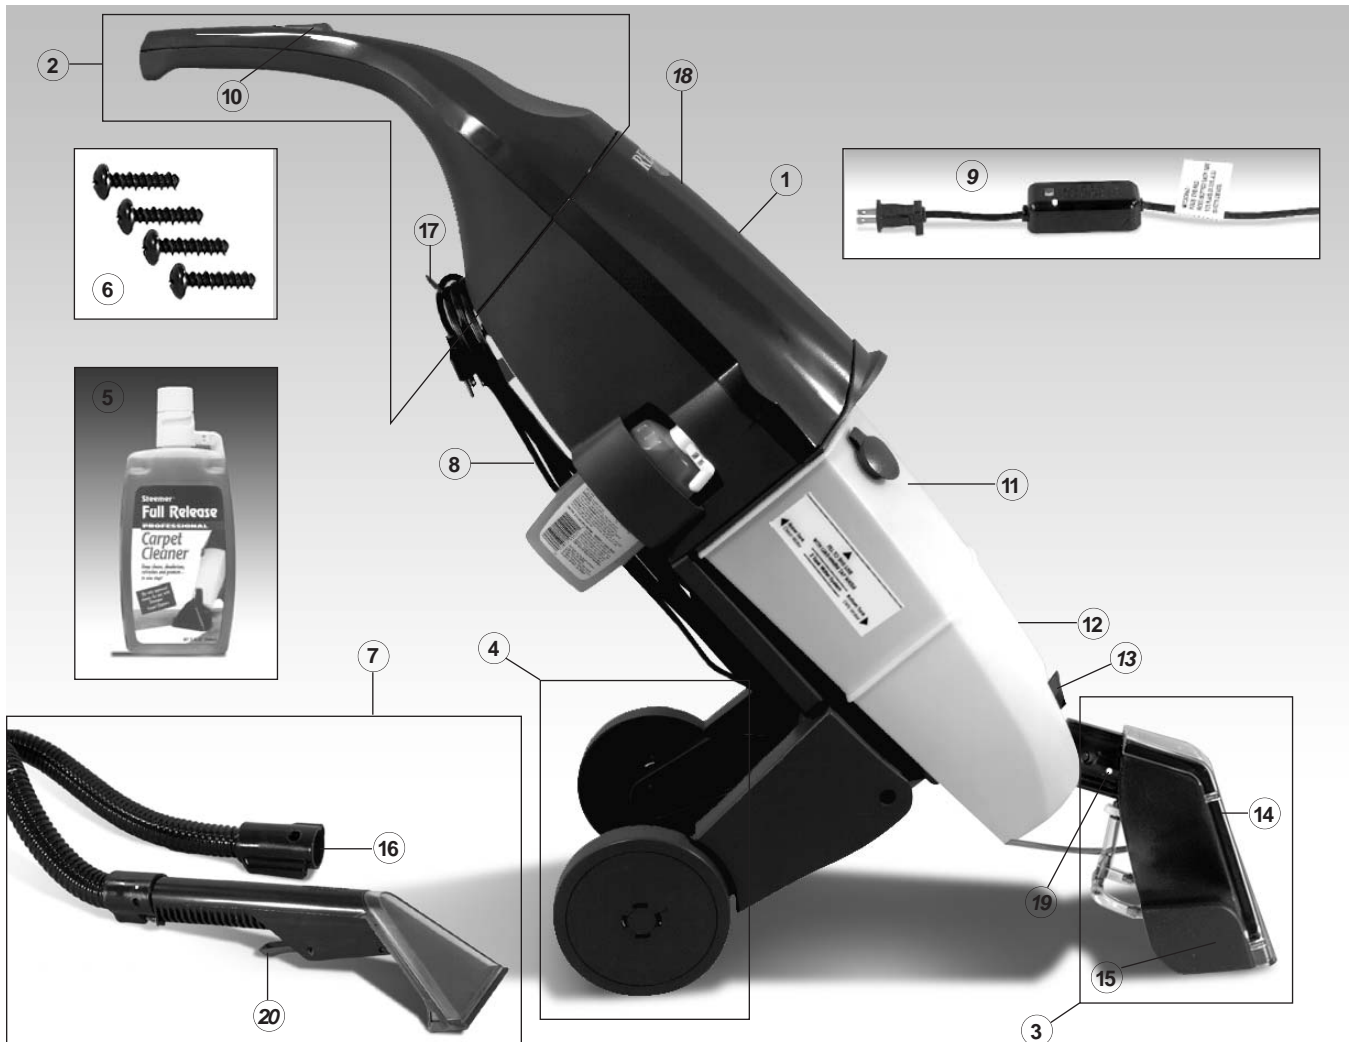


Figure 1

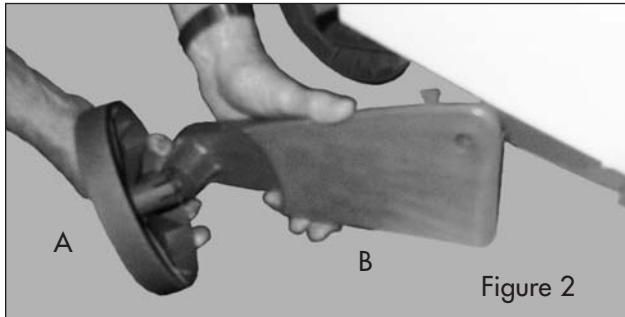
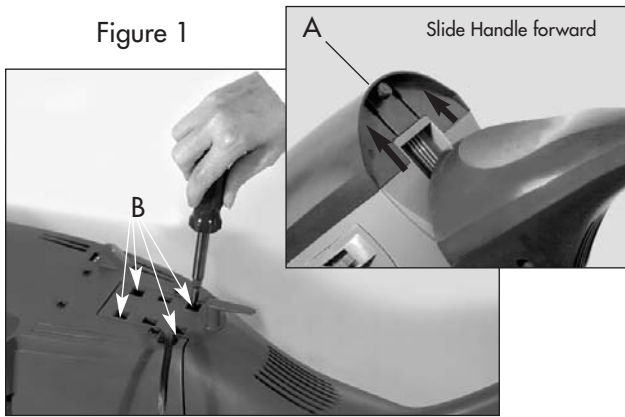


Figure 2

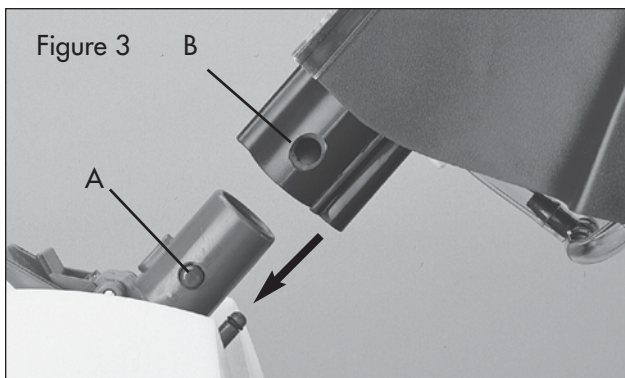


Figure 3

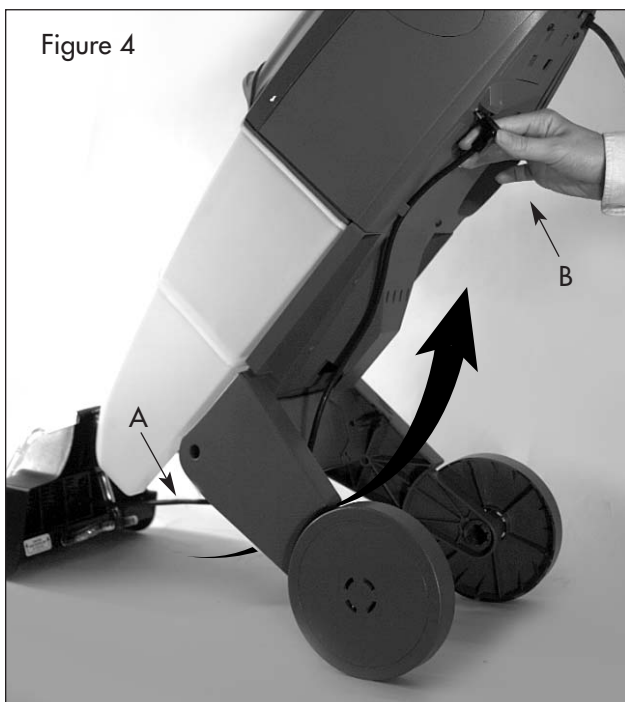


Figure 4

## To Assemble Cleaner

THE ONLY TOOL YOU WILL NEED IS A PHILLIPS-TYPE SCREWDRIVER!

### ASSEMBLY STEP ONE (Figure 1):

#### Attach Handle to Cleaner

1. Lay the cleaner on a flat surface with the tank side down or to its side.
2. Slide handle into cleaner body until interlock is secured (Figure 1-A).
3. Insert four  $\frac{5}{8}$ " screws into the four cavities in the handle base and tighten (Figure 1-B).

### ASSEMBLY STEP TWO (Figure 2):

#### Attach Wheels

1. Locate two wheels and two support legs.
2. Insert the wheels (A) into the support legs (B) by pushing the wheels in until they snap into place.

### ASSEMBLY STEP THREE (Figures 3 and 4):

#### Attach Nozzle

1. Turn the unit so that the tank is face up.
2. Align the nozzle so the red nozzle change button (Figure 3-A) is in line with the corresponding hole in the nozzle (Figure 3-B).
3. Depress the small red nozzle change button (Figure 3-A) and slide the nozzle over the unit shaft until the button locks into place.
4. Plug the small power cord connected to the nozzle (Figure 4-A) into the receptacle in the back of the unit (Figure 4-B).

**NOTE:** Before using, please read the important safety and operating instructions.



## Servicing of Double-Insulated Appliances

A double-insulated appliance is marked with one or more of the following: The words "Double Insulation" or "Double Insulated" or the double-insulation symbol (■). In a double-insulated appliance, two systems of insulation are provided instead of grounding. No grounding means is provided on a double-insulated appliance, nor should a means for grounding be added to the appliance. Servicing a double-insulated appliance requires extreme care and knowledge of the system and should be done only by qualified service personnel. Replacement parts for a double-insulated appliance must be identical to the parts they replace.

### POLARIZATION INSTRUCTIONS

To reduce the risk of electric shock, the ORECK STEEMER model is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into a polarized outlet only one way. This is a safety feature. If you are unable to fit the plug fully into an outlet, try reversing the plug. If the plug should still fail to fit, contact a qualified electrician to replace the obsolete outlet. Do not defeat the purpose of the polarized plug in any way.




Polarized Plug

## A.L.C.I

The ORECK STEEMER is made to double-insulated specifications and is equipped with an A.L.C.I. (Appliance Leakage Circuit Interrupter). The A.L.C.I. shuts off the unit in potentially hazardous situations. The A.L.C.I. has a Test and Reset button which should be operated each time the unit is plugged in. Do not remove the tag which provides test instructions from around the cord at the A.L.C.I. (A.L.C.I. may vary from illustration).


**DANGER:** Improper installation of A.L.C.I. can result in electric shock.

Do not modify or by-pass the A.L.C.I. Do not replace any electrical component in this product with anything other than an authorized ORECK replacement part. The risk of electric shock can result if used in the vicinity of improperly grounded stationary appliances (stove, refrigerator, washer, etc.).

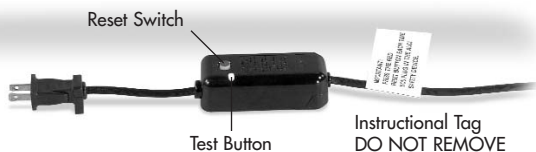


## To Set-Up Cleaner

The ORECK STEEMER cleaner is designed for fast and easy set-up:

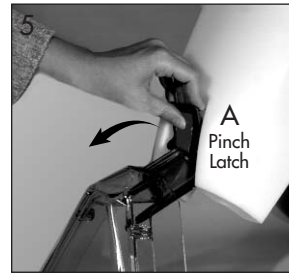

**STEP 1:** Swing the wheels away from the nozzle into the operating position. Remove the two-tier tank from the cleaner by pinching the gray and red latch together, and then gently lowering the latch toward the nozzle.

**Do Not Force!** (Figure 5)

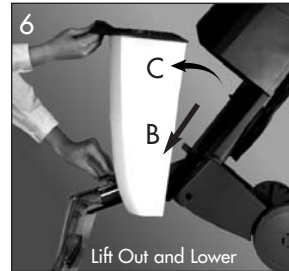


**STEP 2:** Push the two-tier tank downward toward the nozzle and lift out (Figure 6).



**STEP 3:** To fill the supply tank with clean water, open the gray tank cap. Fill the tank with lukewarm tap water to the fill line, as noted on the side of the tank (Figure 7).

**CAUTION:** Do not overfill tank or use water that is too hot to touch. Do not put any type of shampoo/cleaner into the supply tank. Other carpet shampoo will leave residues in the cleaner that will over a short period of time clog the dispensing system and void your warranty. Use only STEEMER Full Release™ Professional Carpet Cleaner cartridges, which are specifically formulated to be residue-free.

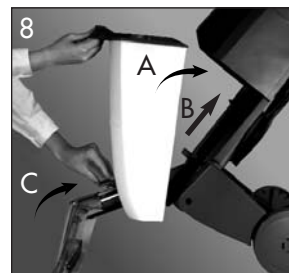


**STEP 4:** Close gray cap and place the tank back on the cleaner (Figure 8). Lift the gray latch to slide the tank upward into position until you hear a "click," signaling that the tank is securely locked into place.

## To Set-Up Cleaner



**STEP 5:** Unscrew the cleaner cartridge cap from a STEEMER Full Release™ Carpet Cleaner cartridge. Insert the cleaner cartridge into the docking bay (Figure 9) on the side of the cleaner. The directions on the cleaner cartridge must be facing you. Rotate the white locking lever on the cartridge from left to right to lock and seal the cartridge in the cleaner.

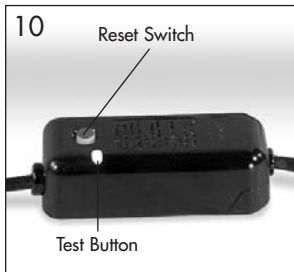

**STEP 6:** Plug in the power cord. Test and reset the A.L.C.I. located near the plug. To test, press the test button to shut off power. To reset the A.L.C.I., simply push in the red reset button on the plug (Figure 10).

## To Prepare Carpet

**Always vacuum thoroughly before using the ORECK STEEMER carpet cleaner. It provides excellent carpet cleaning on carpeted surfaces that are free of surface debris.**

To achieve best results, high traffic areas and carpet stains should be pretreated prior to cleaning. We recommend STEEMER Full Release™ Professional Spot & Stain PreCleaner.


**CAUTION:** Before cleaning a carpet for the first time, test a small area for color fastness.

Pour a small amount of STEEMER Full Release™ Professional Carpet Cleaner on a clean white cloth and blot carpet. Examine this cloth for color removal; if color appears on the cloth, the carpeting is not colorfast and should not be cleaned with the ORECK STEEMER wet extraction process.

**This product is not recommended for use on carpets made from silk, velvet, wool and some cotton blends.**

## Operating Instructions

### TO CLEAN CARPET (Figures 11 and 12)

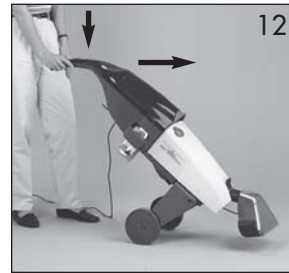


#### **WARNING:**

Do not push forward! Pull the cleaner towards you to clean. This cleaner has been specifically designed to place the nozzle deep into the carpet. (Figure 11).


Push down gently on the handle to lift the nozzle out of the carpet, to move forward and reposition the cleaner (Figure 12).

**IMPORTANT:** Adjust the speed of the cleaning stroke to your carpet conditions. Heavily soiled or stained carpets will require slower strokes. Avoid oversaturating the carpet.

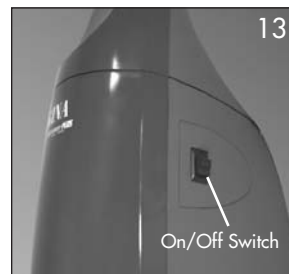

**STEP 1:** Place On/Off power switch in the "On" position. (Figure 13).

**STEP 2:** To clean the carpet, press the gray button in the handle (Figure 14) and slowly pull the cleaner backwards (Figure 11). Pressing the button releases the cleaner and water mixture onto the carpet. As you pull the nozzle over the sprayed carpet, the nozzle extracts the solution from the carpet and stores the dirty water in the recovery tank. To move forward, slightly tilt the nozzle off the floor and roll the cleaner forward (Figure 12). Repeat Step 2 working in small overlapping rows for even cleaning until the entire room has been completed.

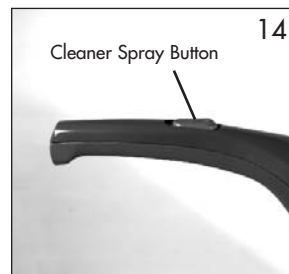

# Operating Instructions

To shorten the drying time, go back over the carpet pulling slowly backwards without depressing the gray button (Figure 14). Repeat this procedure until you do not see water being pulled from the carpet through the nozzle.

**CAUTION:** Do not allow the lower recovery tank to overflow. Damage to the unit can result. Empty the recovery tank when full and whenever clean water is added to the upper supply tank.

To empty the recovery tank, simply release the tank latch by squeezing the red and gray latch together (Figure 5). Lift the tank out and carry it to a sink or drain. Turn the tank upside down and pour the dirty water out. Refill the supply tank with clean lukewarm water. Replace cleaner cartridge as needed.

**CAUTION:** Cleaner will not operate without a cleaner cartridge locked into the docking bay (Figure 19).


For heavily soiled carpets, it may be necessary to clean the carpet from several directions to insure that the nap of the carpet is thoroughly cleaned.

**Keep young children and pets away from the cleaned carpets until dry.**

## TO CLEAN CARS/STAIRS (Figures 15 through 17)



For above-the-floor cleaning, please follow these simple steps:

1. Unplug the cleaner from the electrical outlet.
2. Remove the two-tier tank from the cleaner.
3. You will first need to unplug the separate power cord that connects the STEEMER nozzle to the cleaner (Figure 4).
4. Remove the nozzle by depressing the red button located on the side of the neck (Figure 15-A). Pull the nozzle (Figure 15-B) straight back and off the neck without twisting.

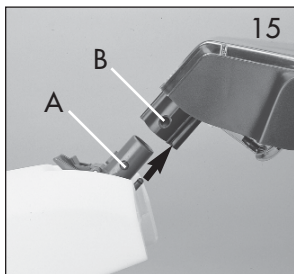

5. Lower cleaner onto floor stand.

6. Open gray tank cap. Fill with warm tap water, close tank cap and replace tank onto cleaner.

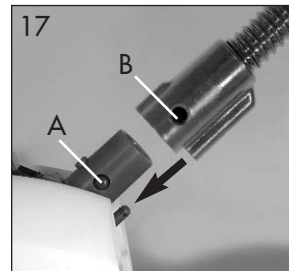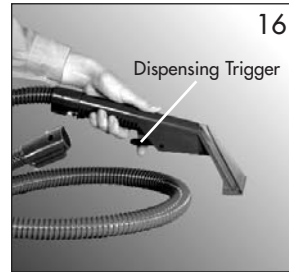

7. Locate the hand-held nozzle and hose assembly (Figure 16). Remove and discard the yellow tape.
8. Attach the hand-held nozzle and hose assembly to the cleaner neck by carefully aligning guide knob located on the top of the unit's neck (Figure 17-A) with guide knob located on the top center of the hose quick-connect fitting (Figure 17-B).

Depress the red button and push the hose collar onto the unit until the button locks securely into the hole in the hose quick-connect fitting.

9. To use the hand-held nozzle and wand assembly, turn the cleaner on by moving the red power switch on the side of the unit into the "On" position (Figure 13).
10. Press the gray button in the handle and push forward to lock (Figure 14).
11. Press the red cleaner dispensing trigger on the hand-held nozzle (Figure 16) to release cleaner.

## TO PREPARE UPHOLSTERY

**IMPORTANT:** Prior to cleaning any upholstered furniture read the following instructions very carefully.

Most modern upholstery fabrics may be safely cleaned by wet cleaning methods; yet there are exceptions to this, as some delicate or unusual fabrics require "dry cleaning." If you are in doubt about the type of fabric, we suggest that you check with the manufacturer or dealer where the furniture was purchased. Most fabrics are wear coded by the manufacturer which details cleaning methods for a particular fabric. If necessary, bring in a cushion or arm cover to your dealer.




# Operating Instructions

- Cleaning upholstery which is covered with fabrics that are not compatible with wet cleaning may result in damage to the fabric. Know what the fabric is and how it may be cleaned before using the ORECK STEEMER cleaner.
- Check the stuffing material if possible. Look inside cushions and underneath the furniture. If the filling is colored, it may bleed through and discolor the furniture. Most modern stuffing material is light colored and colorfast.
- To remove loose dirt, vacuum upholstery thoroughly with a ORECK vacuum cleaner or other vacuum cleaner.
- If the upholstery is being cleaned for the first time, CHECK FOR COLORFASTNESS. Test a small, area several hours before starting to clean upholstery. Pour a small amount of STEEMER Full Release™ Professional Upholstery Shampoo on a clean white cloth and blot upholstery. Examine the cloth for color removal. If color appears on cloth, the upholstery is not colorfast and should not be cleaned with wet extraction methods. Let test area dry completely. Inspect for changes in color, bleeding, stretching or shrinkage. Test another area if in doubt. **This product is not recommended for use on silk, velvet, wool and some cotton blends.**

## TO CLEAN UPHOLSTERY

1. Plug cord into an electrical outlet.

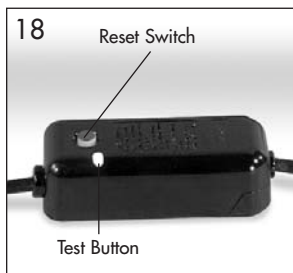


2. Test and reset A.L.C.I. on the plug (Figure 18).



3. Insert a specially formulated STEEMER Full Release™ Professional Upholstery Cleaner Cartridge (Figure 19).

4. Turn cleaner on by placing the On/Off power switch in the "On" position (Figure 13).

5. Lock the gray cleaner button by pressing and sliding the button forward on the main handle (Figure 14).

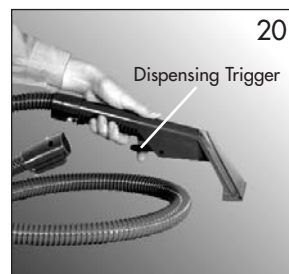

6. Depress the red dispensing trigger on the hand-held nozzle (Figure 20) and slowly drag the nozzle towards you. Make a second pass at right angles to the first. This will minimize any streaking or uneven appearance.

## SMALL SPILL PICK-UPS

Small spills are typical household events. When liquid is accidentally spilled within the home, the liquid usually spreads out quickly into a wide area in a thin sheet.

In such cases, the ORECK STEEMER can be a fast and easy tool to assist in most types of spill pick-ups.


Several key precautions must be followed to insure operator safety:

1. Always test and reset the STEEMER A.L.C.I. plug.
2. Do not immerse the power nozzle of the ORECK STEEMER.
3. Do not allow the lower recovery tank to overfill.
4. Do not pick up corrosive, combustible, or flammable liquids such as acids, gasoline, alcohol, or use this product in areas where vapors from these types of materials are present.
5. Do not use to clean out bathtubs, flooded basements or any place where the liquid depth exceeds 1/8".


## To Clean Carpet Cleaner

**WARNING: To reduce the risk of electric shock or injury from moving parts, unplug before servicing.**

1. Before turning the cleaner off, tilt the cleaner back, raising the nozzle off the carpet for 15-20 seconds. This prevents extracted water in the nozzle from dripping back onto the carpet after you turn the cleaner off.
2. Place the red power switch in the "Off" position. Unplug the power cord from the outlet.
3. Remove the cleaner cartridge by rotating the locking white lever upwards. **Do not store with a cleaner cartridge attached.**

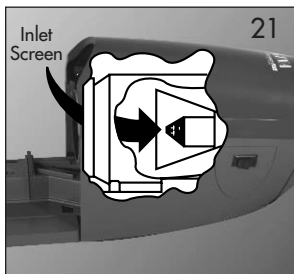

4. Remove and empty the tank. Rinse out the lower recovery tank with warm water. Wipe off the inlet screen to remove accumulated dirt, lint and debris (Figure 21). Replace tank (Figure 8).

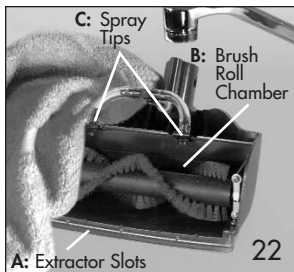

5. If you have been operating the cleaner at length, it may be necessary to clean the nozzle from time to time, particularly if the carpet is brand new or very dirty, or if long-haired pets frequently use the carpeted area (Figure 22).

6. Unplug cleaner and examine several areas on the power nozzle (Figures 22-23) to see if debris has built up:

**A:** Extractor slots  
(Figure 22-A)


**B:** Brush roll chamber  
(Figure 22-B)

**C:** Spray Tips  
(Figure 22-C)

7. To clean the STEEMER extractor slots, place a cloth or towel over the motor cover to shield and protect the motor from water damage. Run hot tap water through the nozzle until clean (Figure 22).
8. To clean the brush chamber and spray tips, take a towel or damp cloth and wipe clean. (Figure 23).



## To Store Cleaner

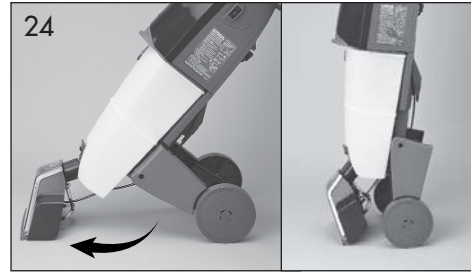

1. Pull the wheel assembly forward toward nozzle for compact storage (Figure 24).
2. Do not store the cleaner in freezing conditions.
3. Do not store the cleaner with water in the tank.
4. Do not store the cleaner with cleaner cartridge attached.

## Things To Do


**Use only manufacturer recommended attachments and accessories.**

- Keep free of dust, lint, and hair.
- Turn off all controls before unplugging.
- Test the A.L.C.I. plug with every use.
- Empty the recovery tank when full and whenever clean water is added to the supply tank.
- Keep young children and pets away from cleaned carpets until dry.
- Check carpets and upholstery for color fastness.
- Clean nozzle periodically.

## To Replace Belt

**WARNING: To reduce the risk of electric shock or injury from moving parts, unplug before servicing.**

1. Replacement belts (Part No. OR114) for ORECK STEEMERS are available from ORECK.  
Call Toll-Free 1-888-742-6769.
2. Be sure that your cleaner is unplugged from the electrical outlet!
3. Unplug the power cord leading from the power head to the rear of the main cleaner (Figure 4).
4. Remove the power nozzle from the main cleaner (Figure 15).

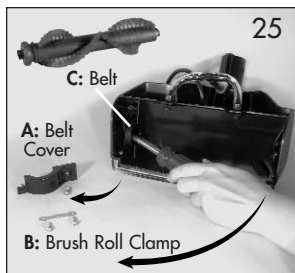

5. Remove screw from belt cover (Figure 25-A).
6. Remove two (2) screws holding the brush roll clamp in place and remove clamp (Figure 25-B).
7. Remove and replace the old belt if broken or if excessive wear is noted (Figure 25-C).

8. To install a new belt, remove brush roll and insert the new belt into the rectangular cavity. Using a long screwdriver, loop belt around motor shaft. Pull and stretch belt over crowned end of the brush roll.
9. Replace brush roll into the power nozzle and rotate brush to properly align belt.
10. Replace belt cover, brush roll clamp and screws.
11. Reconnect power cords and test.

## Accessories

Call your authorized ORECK Home Care Center, your authorized ORECK dealer, or call the Home Care Hotline toll free at 1-888-742-6769.



STEEMER Full Release™ Professional Spot & Stain PreCleaner (Item FRSS131)



STEEMER Full Release™ Professional Carpet Cleaner (Twin Pack) (Item FRC124)



STEEMER Full Release™ Professional Upholstery Cleaner (Twin Pack) (Item FRU125)



STEEMER Valu-6-Pack (Item FRC132)  
5 Carpet Cleaners and 1 Spot & Stain PreCleaner

ORECK STEEMER Belts (Item OR114)  
2 Pack