

# MEEP!

My Tablet. My World!




## Quick Start Guide




## 1 How to start MEEP!

default content

- Slide the power button until the light turns blue. This may take a few seconds.

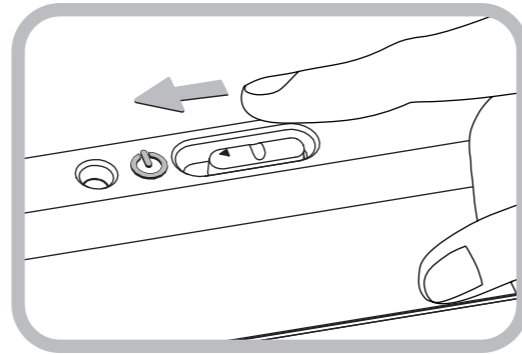

 - You can now enjoy the MEEP's default content. If you wish to experience the full power of MEEP!, you need the help of a grown-up to setup Wi-Fi access and register accounts!

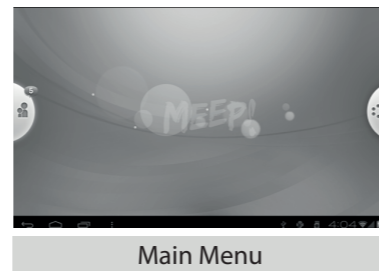

## 2 How to Unleash MEEP!

- Setting up a Wi-Fi Connection

1 Press the right wheel button.	
2 Tap on 'Settings!'.	
3 Tap on Wi-Fi to turn it on. Then select the available Wi-Fi Source.	


## B Setting up an Account

1 Ask the MEEP! owner (a grown-up) to register an owner's account by visiting <a href="https://portal.meeptablet.com">https://portal.meeptablet.com</a>	
2 Create a new MEEP! Account on the MEEP! Together Parent Portal.	
3 Enter your MEEP! Product Code(Serial Number) and personal data . Finally, enter your payment to meet the certain age requirements.	

4 Check your email and click on the provided link to confirm the registration.	
5 Login to MEEP! Together.	
6 Register the MEEPPer Account (Kid Account).	
7 Invite another grown-up to become the MEEPervisor (kid supervisor).	
8 Setup the control settings on MEEP!	


## 3 How to charge MEEP!

- Plug the adaptor to the MEEP!


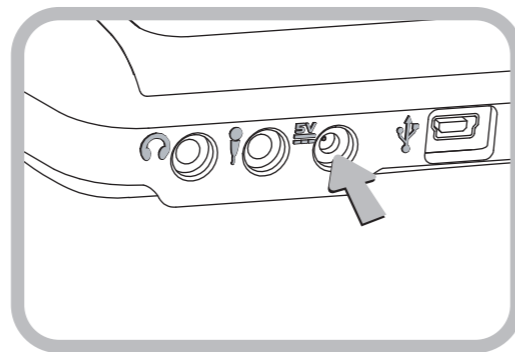


- Ask a grown-up to plug the other end of the adaptor to a wall outlet.

- The red light on the top of the MEEP! indicates that the MEEP! is charging. It will be turned off after it is fully charged.

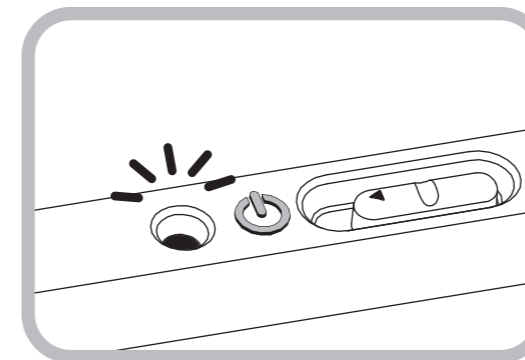


- If you charge the MEEP! when it is ON, you should see a battery icon on the screen.
- If you charge the MEEP! when it is OFF, a charging icon will promptly be shown on the screen.

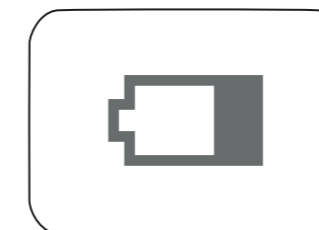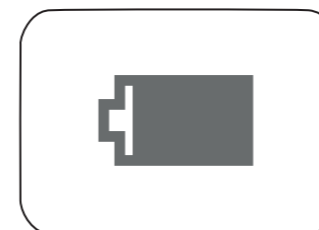


## How to connect monitors

- Ask a grown-up to plug the TV cable (not included) to the MEEP! before connecting it to a monitor / TV that supports HDMI functions.

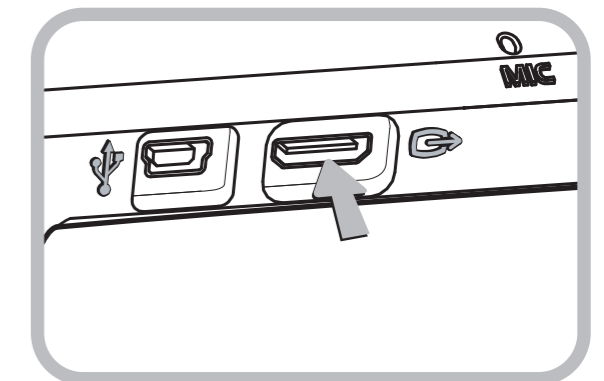


## How to Use the Headphone

- 1 Plug the headphone (not included / sold separately) to the MEEP!

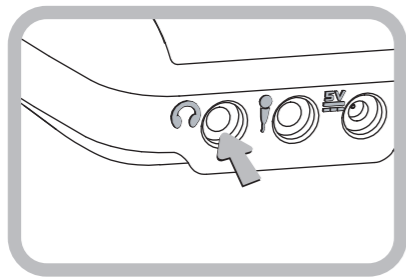

## How to Use the Microphone

- 1 Plug the microphone (not included / sold separately) to the MEEP!

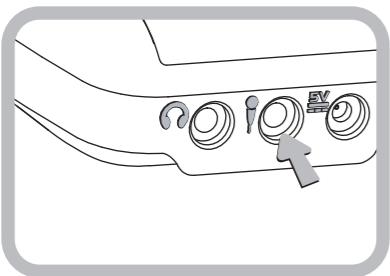

8


Conforms to safety requirements of ASTM F963, EN71 Parts 1, 2 & 3 and EN62115. In an effort to continually improve our products, the actual screen display on the product may differ slightly from the diagrams shown. Please retain this manual for future reference.

Oregon Scientific (UK) Ltd.  
Unit 1, Switchback, Gardner Road,  
Maidenhead, Berkshire SL6 7RJ.  
Hotline number: 0871 222 1966  
Email: Technical@oregonuk.com  
Website: www.oregonscientific.co.uk


12

## How to Plug In the Memory Card

- 1 The memory card (not included) has already been plugged into the memory card slot under the cover of the MEEP!

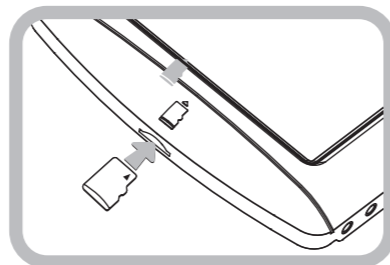

 - 2 The memory card is exchangeable with any other memory card up to 32 GB. Ask a grown-up to press the card to release it and replace it.

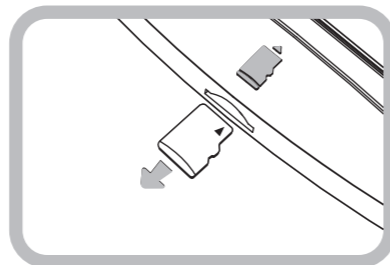

9


- CAUTIONS : Children 8 years old and below should not be permitted to access the battery charger. Before allowing a child to use the battery charger, always ensure that they receive thorough explanations on how to handle the device in the safest manner. Please explain that the battery charger is not a toy and must only be used for its intended purpose.
- Instruct the child not to recharge non-rechargeable batteries because of the danger of eruption;
- Examine the battery charger regularly for damage, especially the cord, plug and enclosure. If the battery charger is damaged, it must not be used until it has been repaired.
- The toy must only be used with the recommended transformer.

Maximum output voltage  $\leq 150\text{mV}$

13

## System Hang-Ups

- 1 Ask a grown-up to use a pin or any other narrow item to press on the 'Reset' button. Please remember that any unsaved progresses will be lost during the reset.

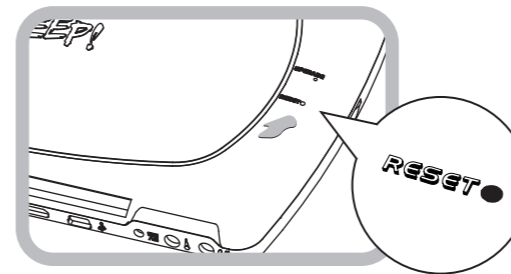

- 2 When the screen has turned off, you can turn on the MEEP! again.

## Others

Please visit <http://www.meeptablet.com> for more instructions.

10

- **Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **Warning! Not suitable for children under 36 months. Small parts. Choking hazard.**



**DISPOSAL**  
Do not dispose of this product as unsorted municipal waste. Such waste should be collected separately for special treatment.

14

## Troubleshooting

At Oregon Scientific, we take our passion for developing new learning products seriously. Every effort has been made to ensure the accuracy and appropriateness of the information behind the core of every product. Nonetheless, errors can sometimes occur. We stand behind our innovations, and we encourage you to call our Consumer Services Department with any problems and/or suggestions you might have. Our service representatives are always on hand to respond to your needs. Before contacting our authorised service representative at 0871 222 1966, you may wish to try following our troubleshooting guide below. It contains quick solutions to some of the most common issues our users encounter.

In an environment prone to static discharge, the unit may malfunction.

To reset, press the reset button at the back of the laptop.

11

15