

Wireless Palm Style Keyboard with Touchpad

User's Manual

Version 1.0 2010/11

ID NO:

About This Manual

This manual is designed to assist you in installing and using the Wireless palm style Keyboard. Information in this document has been carefully checked for accuracy; however, no guarantee is given to the correctness of the contents. The information in this document is subject to change without notice.

Edition

1st Edition,

Copyright

© Copyright 2010

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic or other means, in any form, without prior written permission of the manufacturer.

FEDERAL COMMUNICATIONS COMMISSION STATEMENT

This Equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ◆ Reorient or relocate the receiving antenna.
- ◆ Increase the separation between the equipment and receiver.
- ◆ Connect the equipment into and outlet on a circuit different from that to which the receiver is connected.
- ◆ Consult the dealer or an experienced radio/TV technician for help.

WARNING

A shielded-type power cord is required in order to meet FCC emission limits and to prevent interference to nearby radio and television reception. It is essential that only the supplied power cord be used.

Use only shielded cables to connect I/O devices to this equipment.

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

15.21

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

15.105(b)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Operation is subject to the following two conditions:

- 1) this device may not cause interference and
- 2) this device must accept any interference, including interference that may cause undesired operation of the device.

1. INTRODUCTION

Thank you for purchasing the **Wireless Mini Keyboard with Touchpad**. This User's Manual contains information that will help you to operate your keyboard as well as answer questions about certain special keys and buttons.

- **MCE Buttons:** My Music, My Videos, My Pictures, My TV, My Radio, DVD.
- **Internet Buttons:** WWW, E-mail, Back, Forward
- **Multimedia Buttons:** Volume down, Volume up, Mute, Pre track, Next track, Play/Pause and Stop

Note: All the MCE buttons need to work under MCE application. If press in Windows XP or Vista, will not work.

2. SYSTEM REQUIREMENTS













- Microsoft Windows[®] XP with MCE/ Vista/Windows 7 operating system
- Microsoft Internet Explorer 6.0 or later.

3. INSTALLATION













- Connect the receiver to your PC USB port.
- A Windows dialog box, New Hardware Found.
- Install the battery to your keyboard and turn it on.
- Start to use your wireless keyboard.

Note: After 30 minutes non-operation, the keyboard will go to sleep mode. Please press any key to wake up.

4. Keyboard Button Functions


Function Name		Function Description
	Start	Open the MCE application.
	Back	Goes back to a previous item that was already viewed in programs that support the “Back” command, such as a Web browser
	Forward	Goes to the next item—if it was previously viewed in the same session, in programs that support the “Forward” command, such as a Web browser.
	WWW	Starts the default Web browser and goes to the home page. If the Web browser is active, it opens the home page.
	Email	Starts the default e-mail program.
	Play/Pause	Switches between Play and Pause of DVD/VCD/MP3/Audio media. Once Pause is pressed, pressing this button again resumes play.
	Stop	Stops playing the media.
	V-	Decreases the computer’s sound volume. Hold down to decrease volume more quickly.
	V+	Increases the computer’s sound volume. Hold down to increase volume more quickly.
	Mute	Mutes the computer’s sound volume. Press it again to turn the system volume back on.
	Next track	Switches to the next media track. Press once for each subsequent media track.
	Pre-track	Switches to the previous media track. Press once for each preceding media track.

Enhanced Function Keys: (12 Embedded MCE Hotkeys that are controlled by the “Fn Key”)


<i>Fn</i>	Fn key	Enables the 12 Embedded Keys, press the Fn key with the hotkey.
	1: My Music	Open My Music application
	2: My Video	Open My Videos application.
	3: My Picture	Open My Pictures application.
	4: My Radio	Open My Radio application.
	5: My TV	Open My TV application.
	6: DVD	Open DVD menu application.
	7: Close	Close the active Windows® application.
	8: Win Select	Call the Win Select function.
	9:Zoom in	Zoom in the picture.
	0:Zoom out	Zoom out the picture.
	-: Minimum	Minimum all current windows. Press again to recover.
	=: Flip 3D	Call the Flip 3D function

5. Touch pad

To adjust the touchpad, you can go to **【Control Panel】** → **【Mouse】** → **【Pointer Options】** to select a pointer speed.

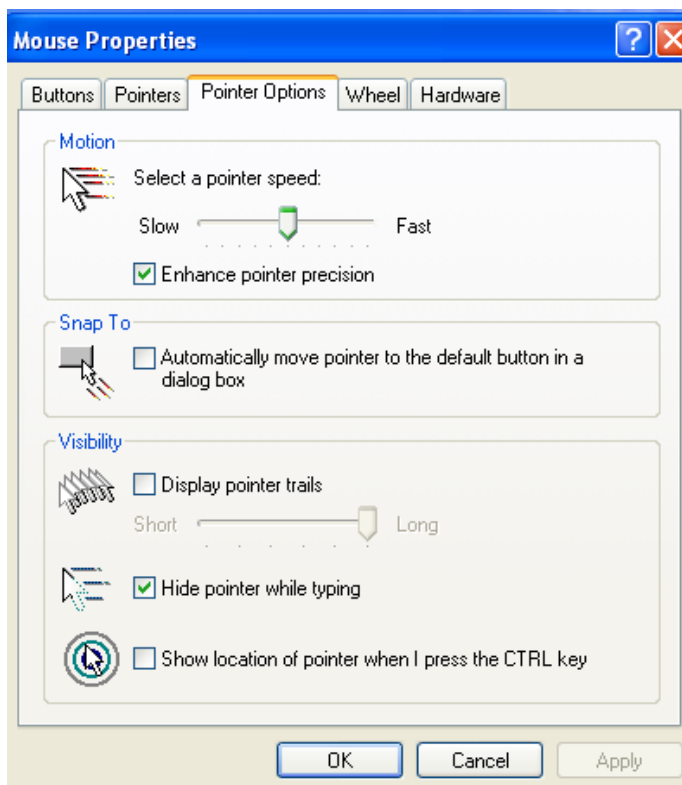

Scroll function: Using two fingers on the touchpad up and down.

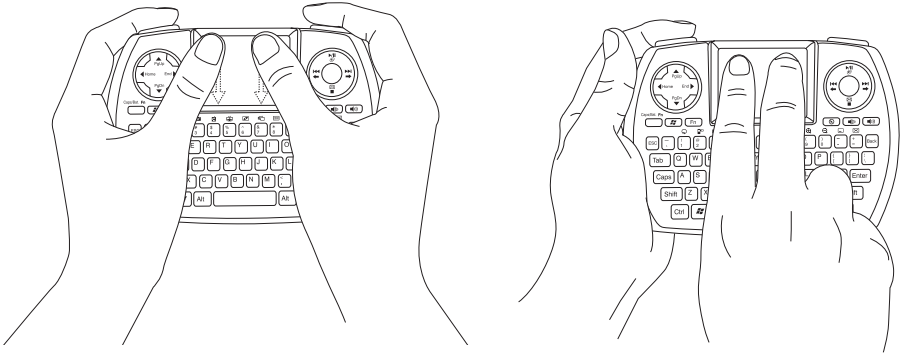

6. Troubleshooting

➤ **Wireless Product Does Not Work**

- Make sure you have connected the receiver correctly.
- Make sure you have installed the batteries correctly. Check to make sure the batteries you have installed are not dead. Try the batteries in another device.
- Try unplugging then reconnecting the receiver to the computer and press the ID button at back of the keyboard.
- When it connected, the led of the receiver will start flashing.

➤ **RF Distance Does Not Reach 10M**

It is possible that computer monitor (or a large metal object) may be interfering with the receiver's radio reception. Also, the batteries may be low. Check the batteries status. You may also need to re-establish the connection between the keyboard and receiver.