

# **Wireless Touchpad Keyboard User's Manual**

Version 1.0 2007/01

ID NO:

## **About This Manual**

This manual is designed to assist you in installing and using the Wireless Touchpad Keyboard. Information in this document has been carefully checked for accuracy; however, no guarantee is given to the correctness of the contents. The information in this document is subject to change without notice.

## **Edition**

1<sup>st</sup> Edition,

## **Copyright**

© Copyright 2007

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic or other means, in any form, without prior written permission of the manufacturer.

## **FEDERAL COMMUNICATIONS COMMISSION STATEMENT**

15.21

### **Federal Communications Commission (FCC) Statement**

**You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.**

15.105(b)

### **Federal Communications Commission (FCC) Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

### **Operation is subject to the following two conditions:**

- 1) this device may not cause interference and

2) this device must accept any interference, including interference that may cause undesired operation of the device.

**FCC RF Radiation Exposure Statement:**

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- ◆ This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

**WARNING**

A shielded-type power cord is required in order to meet FCC emission limits and to prevent interference to nearby radio and television reception. It is essential that only the supplied power cord be used.

Use only shielded cables to connect I/O devices to this equipment.

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

## 1. INTRODUCTION

Thank you for purchasing the **Wireless Touchpad Keyboard**. This User's Manual contains information that will help you to operate your keyboard as well as answer questions about certain special keys and buttons.

- **MCE Buttons:** My Music, My Videos, My Pictures, My TV, My Radio, DVD.
- **Internet Buttons:** WWW, E-mail, Back, Forward
- **Multimedia Buttons:** Hot Keys: Volume down, Volume up, Mute, Pre track, Next track, Play/Pause, Stop and Record.
- **Application hotkeys:** My Computer, Calculator

**Note: All the MCE buttons need to work under MCE application. If press in Windows XP or Vista, will not work.**











 

## 2. SYSTEM REQUIREMENTS



- Microsoft Windows® XP with MCE/ Vista operating system
- Microsoft Internet Explorer 6.0 or later.

## 3. INSTALLATION













- Connect the receiver to your PC USB port.
- A Windows dialog box, New Hardware Found.
- The system will install the driver automatically and complete the installation.
- Start to use your wireless touchpad keyboard.

## 4. Keyboard Button Functions

Function Name		Function Description
<b>Start</b>	Start	Open the MEC application.
	Back	Goes back to a previous item that was already viewed in programs that support the “Back” command, such as a Web browser
	Forward	Goes to the next item—if it was previously viewed in the same session, in programs that support the “Forward” command, such as a Web browser.
	WWW	Starts the default Web browser and goes to the home page. If the Web browser is active, it opens the home page.
	Email	Starts the default e-mail program.
	My Computer	Opens My Computer.
	Calculator	Starts Microsoft Calculator
	Record	Record the TV or copy the media to PC.
	Play/Pause	Switches between Play and Pause of DVD/VCD/MP3/Audio media. Once Pause is pressed, pressing this button again resumes play.
	Stop	Stops playing the media.
	V-	Decreases the computer’s sound volume. Hold down to decrease volume more quickly.
	V+	Increases the computer’s sound volume. Hold down to increase volume more quickly.
	Mute	Mutes the computer’s sound volume. Press it again to turn the system volume back on.

	Next track	Switches to the next media track. Press once for each subsequent media track.
	Pre-track	Switches to the previous media track. Press once for each preceding media track.

Enhanced Function Keys: (12 Embedded Vista Keys that are controlled by the “Fn Key”)

<i><b>Fn</b></i>	<b>Fn key</b>	<b>Enables the 12 Embedded Office Keys. By default, the function is OFF.</b>
	F1: My Music	Open My Music application
	F2: My Video	Open My Videos application.
	F3: My Picture	Open My Pictures application.
	F4: My Radio	Open My Radio application.
	F5: My TV	Open My TV application.
	F6: DVD	Open DVD menu application.
	F7: Close	Close the active Windows <sup>®</sup> application.
	F8: Win Select	Call the Win Select function.
	F9: Zoom in	Zoom in the picture.
	F10: Zoom out	Zoom out the picture.
	F11: Gatget	Open the Gatget application.
	F12: Flip 3D	Call the Flip 3D function

## 5. Troubleshooting

### ➤ **Wireless Product Does Not Work**

- Make sure you have connected the receiver correctly.
- Make sure you have installed the batteries correctly. Check to make sure the batteries you have installed are not dead. Try the batteries in another device.
- Try unplugging then reconnecting the receiver to the computer and press the ID button at back of the keyboard.

### ➤ **Screen Cursor Does Not Move Properly**

It is possible that the receiver may be too far from the keyboard. Or the computer monitor (or a large metal object) may be interfering with the receiver's radio reception. Also, the batteries may be low. Check the batteries status. You may also need to re-establish the connection between the keyboard and receiver.