

Wireless Entertainment Smart Pad Keyboard

User's Manual



Version 1.0 2008/12

ID NO: PAKL-231B2001-00

About This Manual

This manual is designed to assist you in installing and using the Wireless Touchpad Keyboard. Information in this document has been carefully checked for accuracy; however, no guarantee is given to the correctness of the contents. The information in this document is subject to change without notice.

Edition

1st Edition,

Copyright

© Copyright 2008

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic or other means, in any form, without prior written permission of the manufacturer.

FEDERAL COMMUNICATIONS COMMISSION STATEMENT

This Equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ◆ Reorient or relocate the receiving antenna.
- ◆ Increase the separation between the equipment and receiver.
- ◆ Connect the equipment into and outlet on a circuit different from that to which the receiver is connected.
- ◆ Consult the dealer or an experienced radio/TV technician for help.

WARNING

A shielded-type power cord is required in order to meet FCC emission limits and to prevent interference to nearby radio and television reception. It is essential that only the supplied power cord be used.

Use only shielded cables to connect I/O devices to this equipment.

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

15.21

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

15.105(b)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference and
- 2) this device must accept any interference, including interference that may cause undesired operation of the device.

1. INTRODUCTION

Thank you for purchasing the **Wireless Entertainment Smart Pad Keyboard**. This User's Manual contains information that will help you to operate your keyboard as well as answer questions about certain special keys and buttons.

- **MCE Buttons:** My Music, My Videos, My Pictures, My TV, My Radio, DVD.
- **Internet Buttons:** WWW, E-mail, Back, Forward
- **Multimedia Buttons:** Hot Keys: Volume down, Volume up, Mute, Pre track, Next track, Play/Pause, Stop and Record.
- **Application hotkeys:** My Computer, Calculator

Note: All the MCE buttons need to work under MCE application. If press in Windows XP or Vista, will not work.

2. SYSTEM REQUIREMENTS







 






- Microsoft Windows® XP with MCE/ Vista operating system
- Microsoft Internet Explorer 6.0 or later.



3. INSTALLATION

- Connect the receiver to your PC USB port.
- A Windows dialog box, New Hardware Found.
- The system will install the driver automatically and complete the installation.
- Put the driver CD into your CD-Rom and install the driver.
- After the installation, please reboot your computer.
- Install the battery to your keyboard and turn it on.
- Start to use your wireless touchpad keyboard.













Note: After 30 minutes non-operation, the keyboard will go to sleep mode. Please press any key to wake up.

4. Keyboard Button Functions






Function Name		Function Description
	Start	Open the MCE application.
	Back	Goes back to a previous item that was already viewed in programs that support the “Back” command, such as a Web browser
	Forward	Goes to the next item—if it was previously viewed in the same session, in programs that support the “Forward” command, such as a Web browser.
	WWW	Starts the default Web browser and goes to the home page. If the Web browser is active, it opens the home page.
	Email	Starts the default e-mail program.
	My Computer	Opens My Computer.
	Calculator	Starts Microsoft Calculator
	Record	Record the TV or copy the media to PC.
	Play/Pause	Switches between Play and Pause of DVD/VCD/MP3/Audio media. Once Pause is pressed, pressing this button again resumes play.
	Stop	Stops playing the media.
	V-	Decreases the computer’s sound volume. Hold down to decrease volume more quickly.
	V+	Increases the computer’s sound volume. Hold down to increase volume more quickly.
	Mute	Mutes the computer’s sound volume. Press it again to turn the system volume back on.






	Next track	Switches to the next media track. Press once for each subsequent media track.
	Pre-track	Switches to the previous media track. Press once for each preceding media track.


Enhanced Function Keys: (12 Embedded Vista Keys that are controlled by the “Fn Key”)

<i>Fn</i>	Fn key	Enables the 12 Embedded Keys. By default, the function is OFF.
	F1: My Music	Open My Music application
	F2: My Video	Open My Videos application.
	F3: My Picture	Open My Pictures application.
	F4: My Radio	Open My Radio application.
	F5: My TV	Open My TV application.
	F6: DVD	Open DVD menu application.
	F7: Close	Close the active Windows® application.
	F8: Win Select	Call the Win Select function.
	F9: Zoom in	Zoom in the picture.
	F10: Zoom out	Zoom out the picture.
	F11: Gatget	Open the Gatget application.
	F12: Flip 3D	Call the Flip 3D function

5. Smart-Pad Function List

Two Finger Function		
Gesture	Application Program	Function Description
 <p>Tapping</p>	All Program	Tap two fingers on the pad simultaneously; you can simulate the mouse's middle key. You also can define different function in driver.
 <p>Magnifier</p>	All Program	First tap and hold the pad with one Finger and then tap it again twice with another finger. When the rectangular magnifying glass appeared, drag the portion of the window you wish to magnify. Tap the pad again to deactivate the feature.
 <p>Rotate</p>	<ul style="list-style-type: none"> • ACDsee • Windows picture and fax viewer • Adobe Reader 	You can perform the rotation by touch and rotate two fingertips on the pad in the desired direction. You can also tap and hold one finger on pad to set a rotation axis and rotate the other finger around the axis in the desired direction.
 <p>Room In/Out</p>	<ul style="list-style-type: none"> • ACDsee • Windows picture and fax viewer • Internet Explore • Microsoft Office 	To zoom in, place two fingers on the pad and move it away from each other, and vice versa, move it toward each other for zoom out.
 <p>Vertical Scroll</p>	<ul style="list-style-type: none"> • Adobe Reader • Internet Explore • Microsoft Office 	This operation is done by dragging two fingertips on the Smart-Pad. Simply tap the pad and drag the window you wish to scroll. Drag up or down to perform

 <p>Horizontal Scroll</p>	<ul style="list-style-type: none"> • My computer 	<p>vertical scrolling. Similarly, drag left or right to scroll horizontally.</p>
<p>Three Finger Function</p>		
<p>Gesture</p>	<p>Application Program</p>	<p>Function Description</p>
 <p>Tapping</p>	<p>All Program</p>	<p>Tap three fingers on the pad simultaneously; you can simulate the mouse's middle key. You also can define different function in driver</p>
 <p>Switch Window</p>	<p>All Program</p>	<p>Tap three fingers on the pad, continue moving down until active window switch menu, and then choose the desired window by moving one finger. After you release finger from the pad, the desired window shows.</p>
 <p>My Computer</p>	<p>All Program</p>	<p>Tap three fingers simultaneously on the pad, continue moving up until active "My computer" window, and then you can release fingers from the pad.</p>
 <p>Page down</p>	<ul style="list-style-type: none"> •ACDsee •Windows picture viewer •Adobe Reader •Internet Explore •Power Point • Excel •My computer 	<p>To view the next page (page down), simply swipe 3-fingertips once from left to the right</p>

	<ul style="list-style-type: none"> •ACDsee •Windows picture viewer •Adobe Reader •Internet Explore •Power Point \ Excel •My computer 	<p>To view the previous page (page up), simply swipe 3-fingertips once from right to the left</p>
---	--	---

Note: To get more information about the Smart Pad function, just double click the icon on the system tray.

Number Pad function:

Press the TP/Num button to switch touchpad or Num pad function. When the Num pad led on, it means that you can input the numeric from touchpad. Don't need to turn on the number lock.



6. Switch Numeric

Press the NumLock key to switch on/ off.

NUMLOCK OFF	NUM LOCK ON	NUMLOCK OFF	NUM LOCK ON
7 &	7	J	1
8 *	8	K	2
9 (9	L	3
0)	*	; :	+
U	4	M	0
I	5	> .	.
O	6	? /	/
P	-		

7. Troubleshooting

➤ **Wireless Product Does Not Work**

- Make sure you have connected the receiver correctly.
- Make sure you have installed the batteries correctly. Check to make sure the batteries you have installed are not dead. Try the batteries in another device.
- Try unplugging then reconnecting the receiver to the computer and press the ID button at back of the keyboard.
- When it connected, the led of the receiver will start flashing.

➤ **Screen Cursor Does Not Move Properly**

It is possible that the receiver may be too far from the keyboard. Or the computer monitor (or a large metal object) may be interfering with the receiver's radio reception. Also, the batteries may be low. Check the batteries status. You may also need to re-establish the connection between the keyboard and receiver.