

5 Software Installation

Installing Network Drivers

You must install a network driver to allow the NIC to work with your network operating system. The LFE-8139ATX NIC provides various network drivers in the driver diskette. The following provides you with the installation procedures for different network drivers.

For detail information of each NOS installation please refer to README (.TXT) file on driver diskette.

Software Installation Examples

Before you start to install the driver programs, please refer to each directory that contains a README file which provides you with detailed installation instructions.

Or to execute the **HELP8139.EXE** help file viewer in DOS. The utility will then present you with a screen showing the information about how to install the network driver needed for the LFE-8139ATX NIC to work with your operating system.