


# Panasonic®

Operating Instructions  
42"/50" Class 1080p Plasma HDTV  
(41.6/49.9 inches measured diagonally)

Model No. **TH-42PZ80Q**  
**TH-50PZ80Q**

## Quick Start Guide

(See page 6-17)

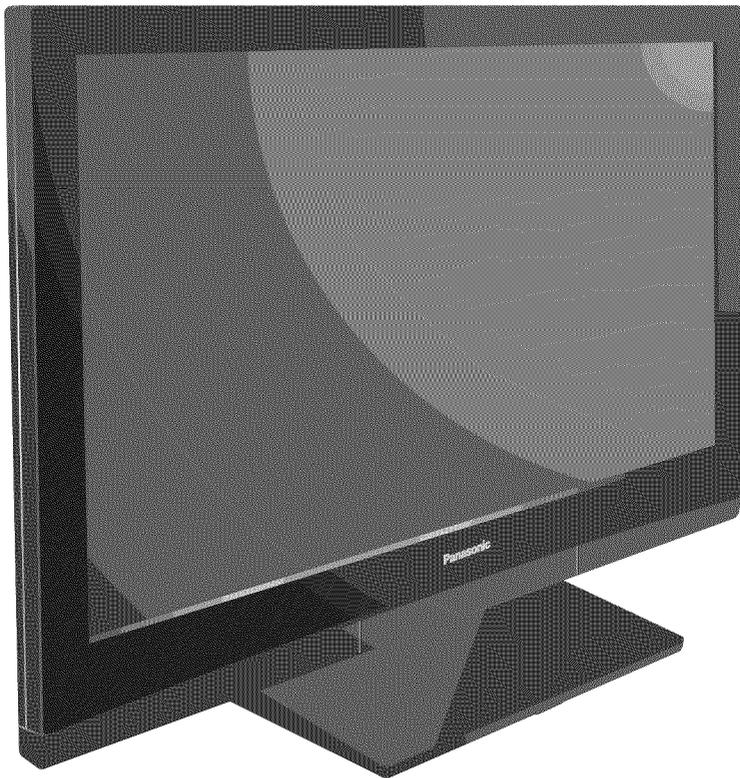

■ For assistance (U.S.A./Puerto Rico), please call:  
**1-877-95-VIERA (958-4372)**  
or visit us at [www.panasonic.com/contactinfo](http://www.panasonic.com/contactinfo)



<tru2way>




English

Please read these instructions before operating your set and retain them for future reference.  
The images shown in this manual are for illustrative purposes only.

TQB2AA0798

Turn your own living room into a movie theater!  
 Experience an amazing level of multimedia excitement

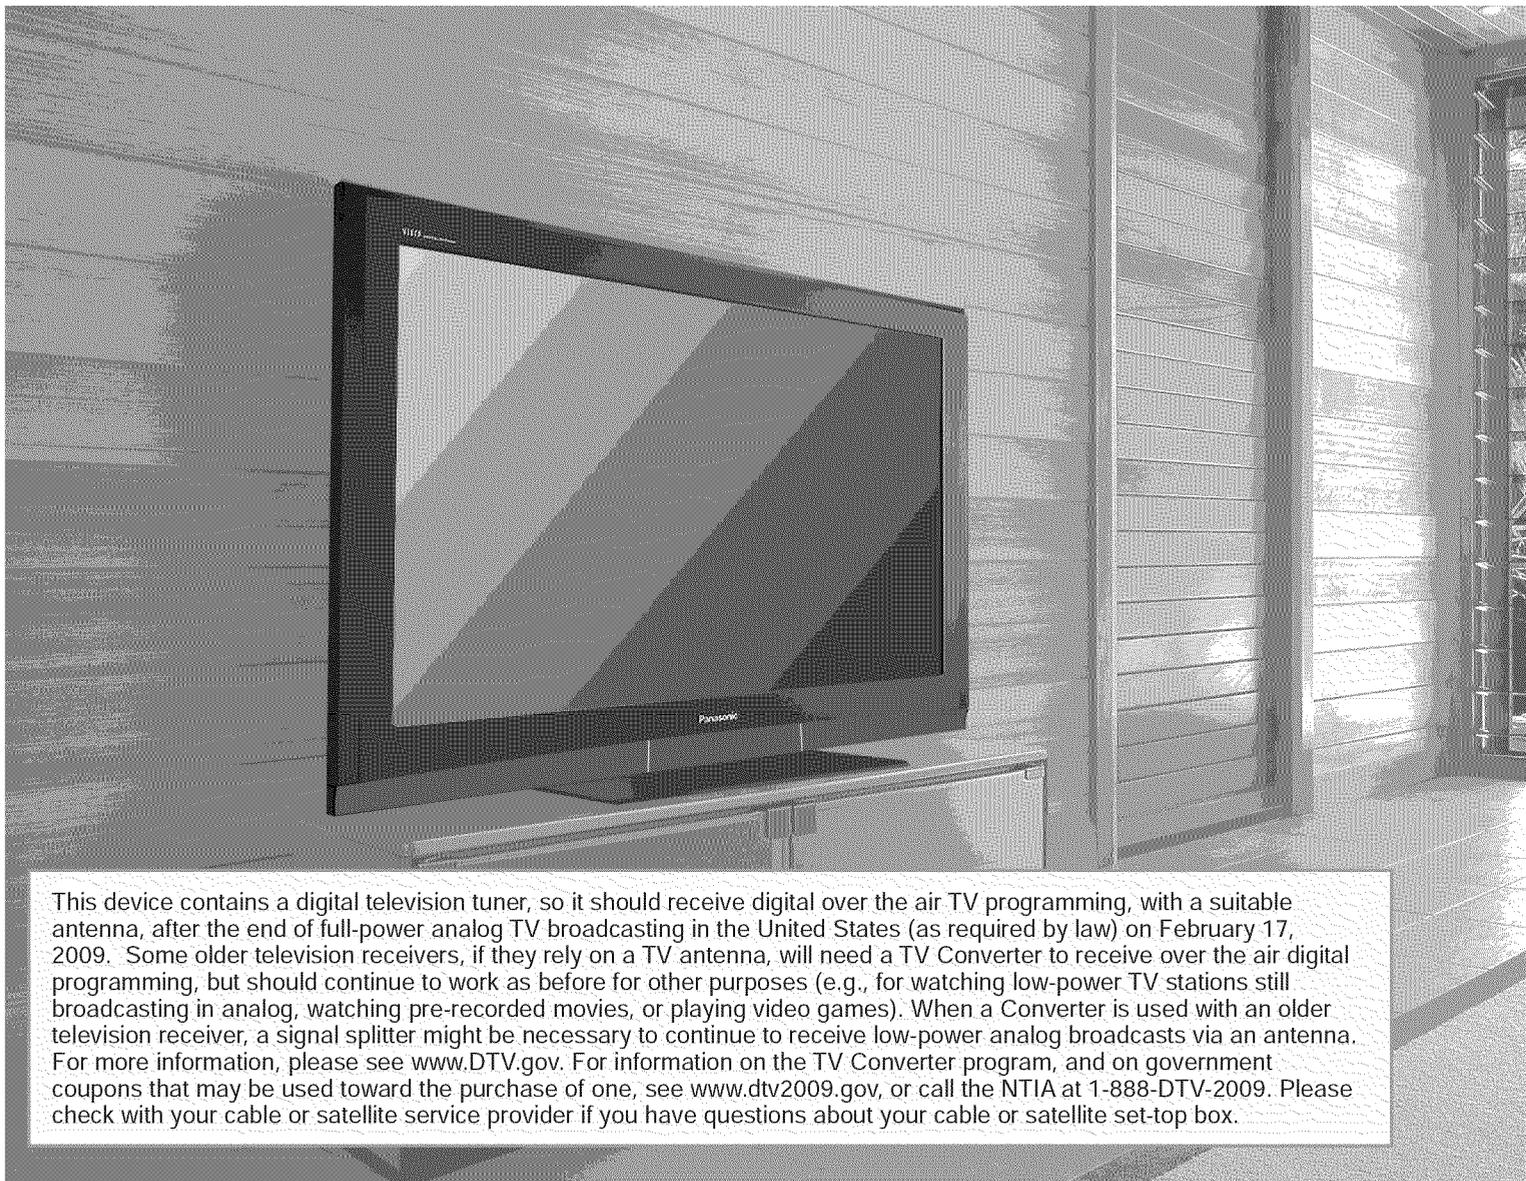

This device contains a digital television tuner, so it should receive digital over the air TV programming, with a suitable antenna, after the end of full-power analog TV broadcasting in the United States (as required by law) on February 17, 2009. Some older television receivers, if they rely on a TV antenna, will need a TV Converter to receive over the air digital programming, but should continue to work as before for other purposes (e.g., for watching low-power TV stations still broadcasting in analog, watching pre-recorded movies, or playing video games). When a Converter is used with an older television receiver, a signal splitter might be necessary to continue to receive low-power analog broadcasts via an antenna. For more information, please see [www.DTV.gov](http://www.DTV.gov). For information on the TV Converter program, and on government coupons that may be used toward the purchase of one, see [www.dtv2009.gov](http://www.dtv2009.gov), or call the NTIA at 1-888-DTV-2009. Please check with your cable or satellite service provider if you have questions about your cable or satellite set-top box.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

 tru2way™ is a trademark of Cable Television Laboratories, Inc.	 SDHC Logo is a trademark.	 Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.
 VIERA Link™ is a trademark of Panasonic Corporation.	 HDAVI Control™ is a trademark of Panasonic Corporation.	

# Contents

## Please read before using the unit

- Safety Precautions ..... 4
- Notes ..... 5

## Quick Start Guide

- Accessories/Optional Accessory ..... 6
- Basic Connection ..... 9
- Identifying Controls ..... 13
- Enjoy tru2way™ TV ..... 14
- First Time Setup ..... 16

## Enjoy your TV!

### Basic Features


- Watching TV ..... 18
- Viewing from SD Card ..... 20
- Watching Videos and DVDs ..... 22

### Advanced Features


- How to Use Menu Functions (picture, sound quality, etc.) ..... 24
- VIERA Link™ "HDAVI Control™" ..... 28
- Lock ..... 32
- Editing and Setting Channels ..... 34
- Closed Caption ..... 36
- Input Labels/Monitor Out ..... 37
- Using Timer ..... 38
- Programming the Remote to Operate Peripheral Equipment ..... 39
- Recommended AV Connections ..... 40

### FAQs, etc.

- Remote control operation/codelist ..... 42
- Ratings List for Lock ..... 45
- Technical Information ..... 46
- Care and Cleaning ..... 50
- Specifications ..... 51
- FAQ ..... 52
- Limited Warranty (for U.S.A. and Puerto Rico only) ..... 54
- Customer Services Directory (for U.S.A. and Puerto Rico) ..... 55

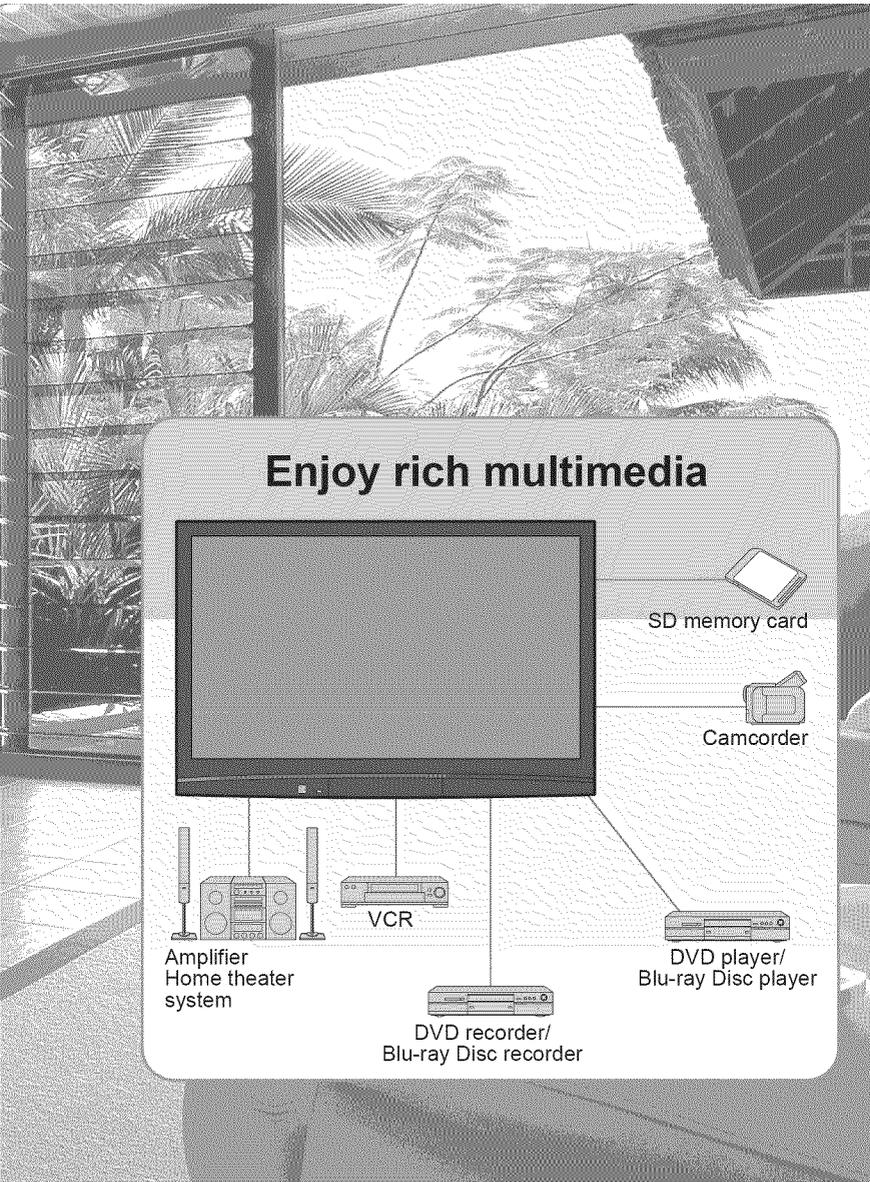

### Enjoy rich multimedia

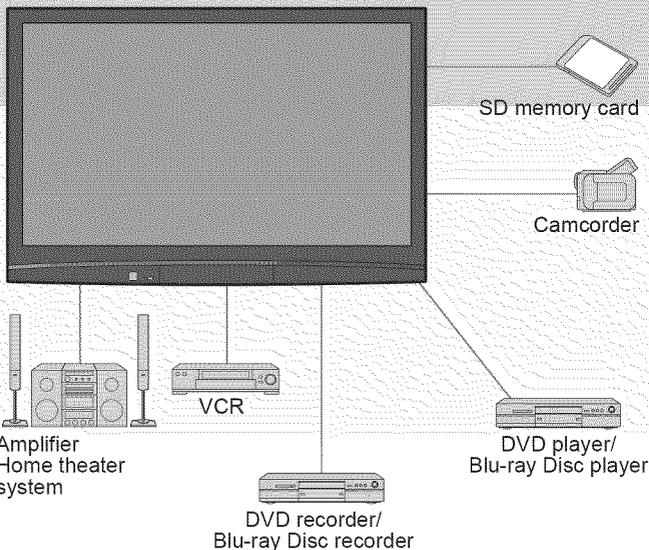

CableCARD™ is a trademark of Cable Television Laboratories, Inc.





HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

Manufactured under license from Dolby Laboratories. DOLBY and the double-D symbol are trademarks of Dolby Laboratories.



EZ Sync™ is a trademark of Panasonic Corporation.

# Safety Precautions

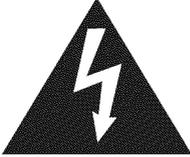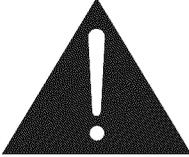	<b>CAUTION</b> <b>RISK OF ELECTRIC SHOCK</b> <b>DO NOT OPEN</b>	
<b>WARNING: To reduce the risk of electric shock, do not remove cover or back. No user-serviceable parts inside. Refer servicing to qualified service personnel.</b>		



The lightning flash with arrowhead within a triangle is intended to tell the user that parts inside the product are a risk of electric shock to persons.



The exclamation point within a triangle is intended to tell the user that important operating and servicing instructions are in the papers with the appliance.

**WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Do not place liquid containers (flower vase, cups, cosmetics, etc.) above the set (including on shelves above, etc.).

## Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments / accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over. 
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) To prevent electric shock, ensure the grounding pin on the AC cord power plug is securely connected.

## FCC STATEMENT

This equipment has been tested and found to comply with the limits for an Other Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the Panasonic Service Center or an experienced radio/TV technician for help.

### FCC Caution:

**To assure continued compliance, follow the attached installation instructions and use only shielded interface cables when connecting to peripheral devices. Any changes or modifications not expressly approved by Panasonic Corp. of North America could void the user's authority to operate this device.**

Responsible Party: Panasonic Corporation of North America  
One Panasonic Way, Secaucus, NJ 07094  
Contact Source: Panasonic Consumer Electronics Company  
1-877-95-VIERA (958-4372)  
email: consumerproducts@panasonic.com

## WARNING/CAUTION

### WARNING

Small parts can present choking hazard if accidentally swallowed.

Keep small parts away from young children. Discard unneeded small parts and other objects, including packaging materials and plastic bags/sheets to prevent them from being played with by young children, creating the potential risk of suffocation.

#### ■ Set up

**Do not place the Plasma TV on sloped or unstable surfaces.**

- The Plasma TV may fall off or tip over.

**Do not place any objects on top of the Plasma TV.**

- If water spills onto the Plasma TV or foreign objects get inside it, a short-circuit may occur which could result in fire or electric shock. If any foreign objects get inside the Plasma TV, please consult an Authorized Service Center.

**This Plasma TV is for use only with the following optional accessories. Use with any other type of optional accessories may cause instability which could result in the possibility of injury.**

(All of the following accessories are manufactured by Panasonic Corporation.)

- Wall-hanging bracket (Vertical) TY-WK42PV3U  
TY-WK42PV4W
- Wall-hanging bracket (Angled) TY-WK42PR3U  
TY-WK42PR4W

**Always be sure to ask a qualified technician to carry out set-up.**

- Two or more people are required to install and remove the television. If two people are not present, the television may be dropped, and personal injury may result.

**Transport only in upright position!**

- Transporting the unit with its display panel facing upright or downward may cause damage to the internal circuitry.

#### ■ AC Power Supply Cord

**The Plasma TV is designed to operate on 120 V AC, 60 Hz. Securely insert the power cord plug as far as it will go.**

- If the plug is not fully inserted, heat may be generated which could cause fire. If the plug is damaged or the wall socket plate is loose, they should not be used.

**The included power cord is for use with this unit only.**

**Do not use any power cord other than that provided with this TV.**

- Doing so may cause fire or electric shocks.

**Do not handle the power cord plug with wet hands.**

- Doing so may cause electric shocks.

**Do not do anything that might damage the power cord. When disconnecting the power cord, hold the plug, not the cord.**

- Do not make any modifications to, place heavy objects on, place near hot objects, heat, bend, twist or forcefully pull the power cord. Doing so may cause damage to the power cord which can cause fire or electric shock. If damage to the cord is suspected, have it repaired at an Authorized Service Center.

#### ■ If problems occur during use

**If a problem occurs (such as no picture or no sound), or if smoke or an abnormal odor is detected from the Plasma TV, unplug the power cord immediately.**

- Continued use of the TV under these conditions might cause fire or permanent damage to the unit. Have the TV evaluated at an Authorized Service Center. Servicing of the TV by any unauthorized personnel is strongly discouraged due to its high voltage dangerous nature.

**If water or foreign objects get inside the Plasma TV, if the Plasma TV is dropped, or if the cabinet becomes damaged, disconnect the power cord plug immediately.**

- A short may occur, which could cause fire. Contact an Authorized Service Center for any repairs that need to be made.

### CAUTION

**Do not cover the ventilation holes.**

- Doing so may cause the Plasma TV to overheat, which can cause fire or damage to the Plasma TV.

**Leave a space of 3 15/16" (10 cm) or more at the top, left and right, and 2 3/4" (7 cm) or more at the rear.**

**When using the pedestal, keep the space between the bottom of the TV and the floor surface.**

#### ■ When using the Plasma TV

**Be sure to disconnect all cables before moving the Plasma TV.**

- Moving the TV with its cables attached might damage the cables which, in turn, can cause fire or electric shock.

**Disconnect the power plug from the wall outlet as a safety precaution before carrying out any cleaning.**

- Electric shocks can result if this is not done.

**Clean the power cord plug regularly to prevent it from becoming dusty.**

- Built-up dust on the power cord plug can increase humidity which might damage the insulation and cause fire. Unplug the cord from the wall outlet and clean it with a dry cloth.

**This Plasma TV radiates infrared rays; therefore, it may affect other infrared communication equipment.**

**Install your infrared sensor in a place away from direct or reflected light from your Plasma TV.**

**Do not climb up onto the television or use it as a step.**

**(Young children should be made particularly aware of this caution.)**

- If the unit falls over or becomes damaged through misuse, injury may result.

**The TV will still consume some power as long as the power cord is inserted into the wall outlet.**

## Notes

#### ■ Do not display a still picture for a long time

This causes the image to remain on the plasma screen ("Image retention"). This is not considered a malfunction and is not covered by the warranty.

#### Typical still images

- Channel number and other logos
- Image displayed in 4:3 mode
- SD Card photo
- Video game
- Computer image



To prevent "Image retention", the screen saver is automatically activated after a few minutes if no signals are sent or no operations are performed. (p. 53)

#### ■ Set up

- Do not place the unit where it's exposed to sunlight or other bright light (including reflections).
- Use of some types of fluorescent lighting may reduce the remote control's transmission range.

# Accessories/Optional Accessory

## Accessories

 
Check you have all the items shown.

### Accessories


- Remote Control Transmitter  
● N2QAYB000294




- Batteries for the Remote Control Transmitter (2)  
● AA Battery




- Cable clammer

 

- AC cord

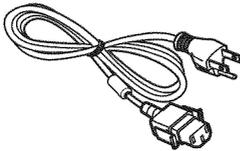

- Pedestal  
● TBLX0036 (TH-42PZ80Q)  
● TBLX0037 (TH-50PZ80Q)

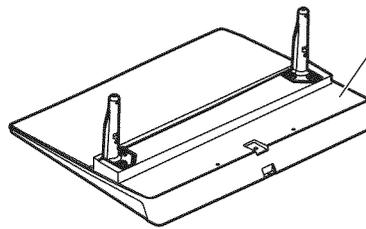


How to assemble (p.7)


- Operating Instructions  
 Quick Setup Guide  
(For viewing HD programming)

- Product Registration Card (U.S.A.)  
 Customer Care Plan Card (U.S.A.)

### Optional Accessory

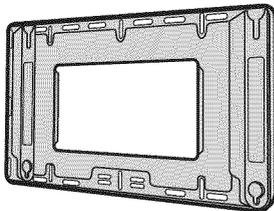

- Wall-hanging bracket (vertical)**  
● TY-WK42PV3U  
● TY-WK42PV4W

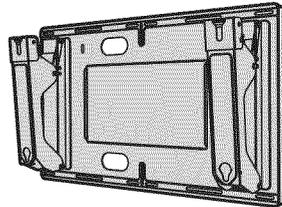


- (angle)**  
● TY-WK42PR3U  
● TY-WK42PR4W

#### Note


- In order to maintain the TV's performance and safety, be absolutely sure to ask your dealer or a licensed contractor to secure the wall-hanging brackets.
- Carefully read the instructions accompanying the plasma TV stand or pedestal, and be absolutely sure to take steps to prevent the TV from tipping over.
- Handle the TV carefully during installation since subjecting it to impact or other forces may cause its panel to crack.

## Installing the remote's batteries

1

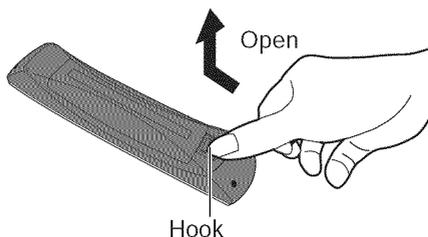

2

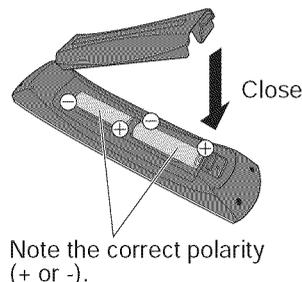


#### Caution

- Incorrect installation may cause battery leakage and corrosion, resulting in damage to the remote control.
  - Do not mix old and new batteries.
  - Do not mix different battery types (such as alkaline and manganese batteries).
  - Do not use rechargeable (Ni-Cd) batteries.
- Do not burn or break batteries.
- Make a note of the remote control codes before changing batteries in case the codes are reset. (p. 39)

## Attaching the pedestal to TV


### ■ Assembling the pedestal

- Fix securely with assembly screws (A). (Total 4 screws)
- Tighten screws firmly.

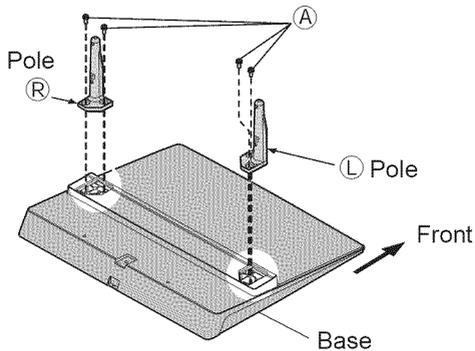

### ■ Set-up

- Carry out work on a horizontal and level surface.
- Tighten screws firmly.

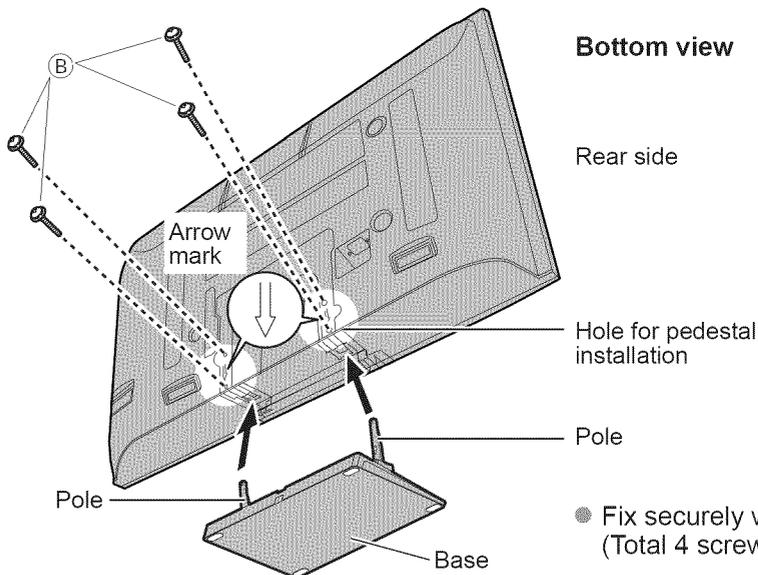


### Accessories

Assembly screws  
(4 of each)




Poles (2)

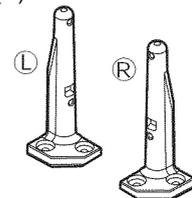

● L or R is printed at the bottom of the poles.

Base (1)

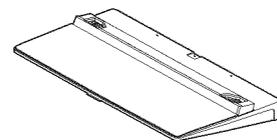

#### Warning

**Do not disassemble or modify the pedestal.**

- Otherwise the TV may fall over and become damaged, and personal injury may result.

#### Caution

**Do not use any other TV and displays.**

- Otherwise the TV may fall over and become damaged, and personal injury may result.

**Do not use the pedestal if it becomes warped or physically damaged.**


- If you use the pedestal when it is physically damaged, personal injury may result. Contact your nearest Panasonic Dealer immediately.

**During set-up, make sure that all screws are securely tightened.**


- If sufficient care is not taken to ensure screws are properly tightened during assembly, the pedestal will not be strong enough to support the TV, and it might fall over and become damaged, and personal injury may result.

# Accessories/Optional Accessory (Continued)

## AC Cord Connection

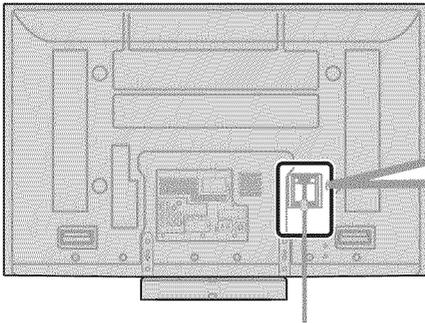


### To attach

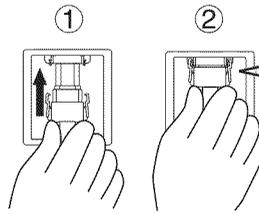


Insert it firmly until the tabs on both sides click into place.

### To remove

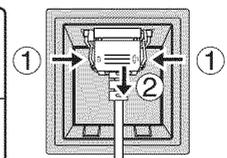


Press both tabs and pull the AC cord plug away from the TV.


## Cable Binding Instructions

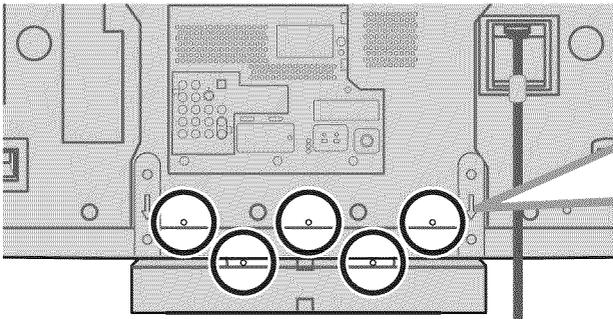


### To attach

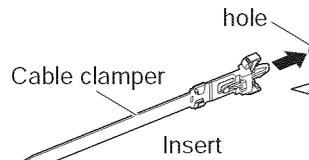


### To remove

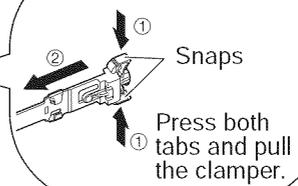

### To bundle

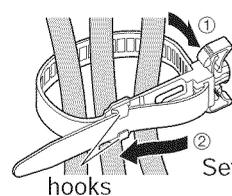


### To loosen

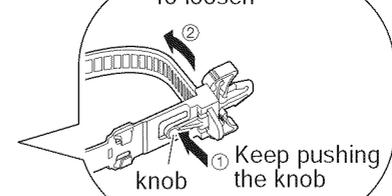

- Do not bundle the RF cable and AC cord together (could cause distorted image).
- Fasten the cables with the Cable clamer as necessary.
- When using the optional accessories, follow their assembly manuals to fix cables.


## Reference of connection

### Antenna terminal

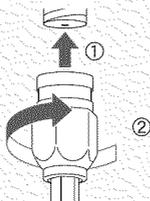


- Firmly tighten by hand.

### Pin terminals

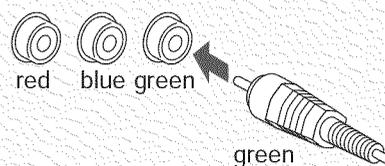

- Match colors of plugs and terminals.
- Insert firmly.

### HDMI terminal

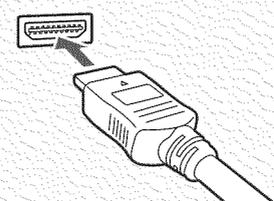


- Insert firmly.

# Basic Connection

## Example 1 Connecting Antenna (To watch TV)


TV

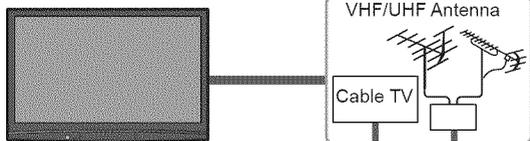

### VHF/UHF Antenna

- NTSC (National Television System Committee): Conventional broadcasting
- ATSC (Advanced Television Systems Committee): Digital TV Standards include digital high-definition television (HDTV), standard-definition television (SDTV), data broadcasting, multi-channel surround-sound audio and interactive television.

## To connect the antenna terminal

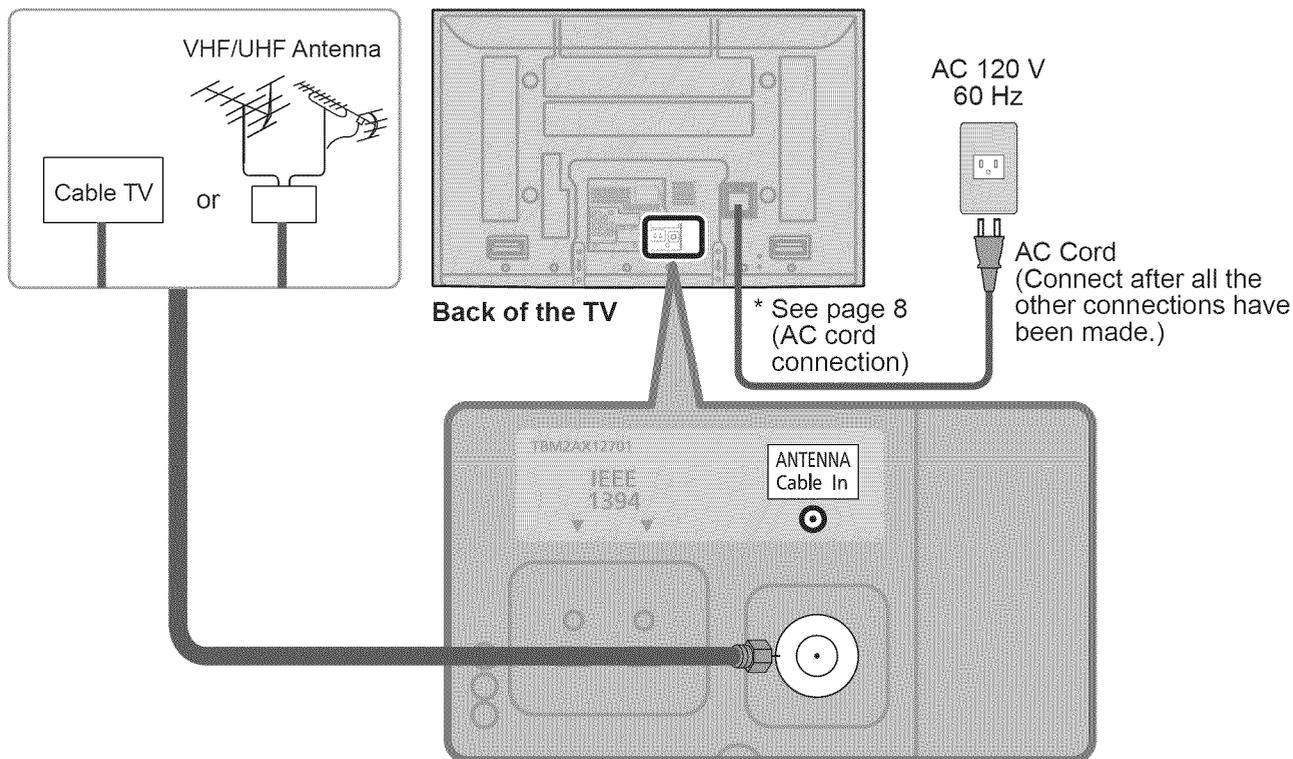

- You need to subscribe to a cable TV service to enjoy viewing their programming.
- You can enjoy high-definition programming by subscribing to a high-definition cable service. The connection for high-definition can be done with the use of HDMI or Component Video cable. (p. 12)
- To view high-definition programming, select the correct video input. (p. 22)

### Note

- Not all cables and external equipment shown in this book are supplied with the TV.
- For the details of the external equipment's connections, please refer to the operating manuals for the equipment.
- When disconnecting the power cord, be absolutely sure to disconnect the power cord plug from the wall outlet first.
- For additional assistance, visit us at: [www.panasonic.com](http://www.panasonic.com)

# Basic Connection (Continued)

## Example 2 Connecting DVD recorder (VCR) (To record/playback)

TV




DVD Recorder

If this source has higher resolution through interlace or progressive signal, connection can be done with the use of Component Video or HDMI cable. (p. 12)


VCR

Connection can be done with the use of an RF cable and Composite Video/S Video cable. (p. 12)

### To connect the antenna terminal and DVD recorder or VCR

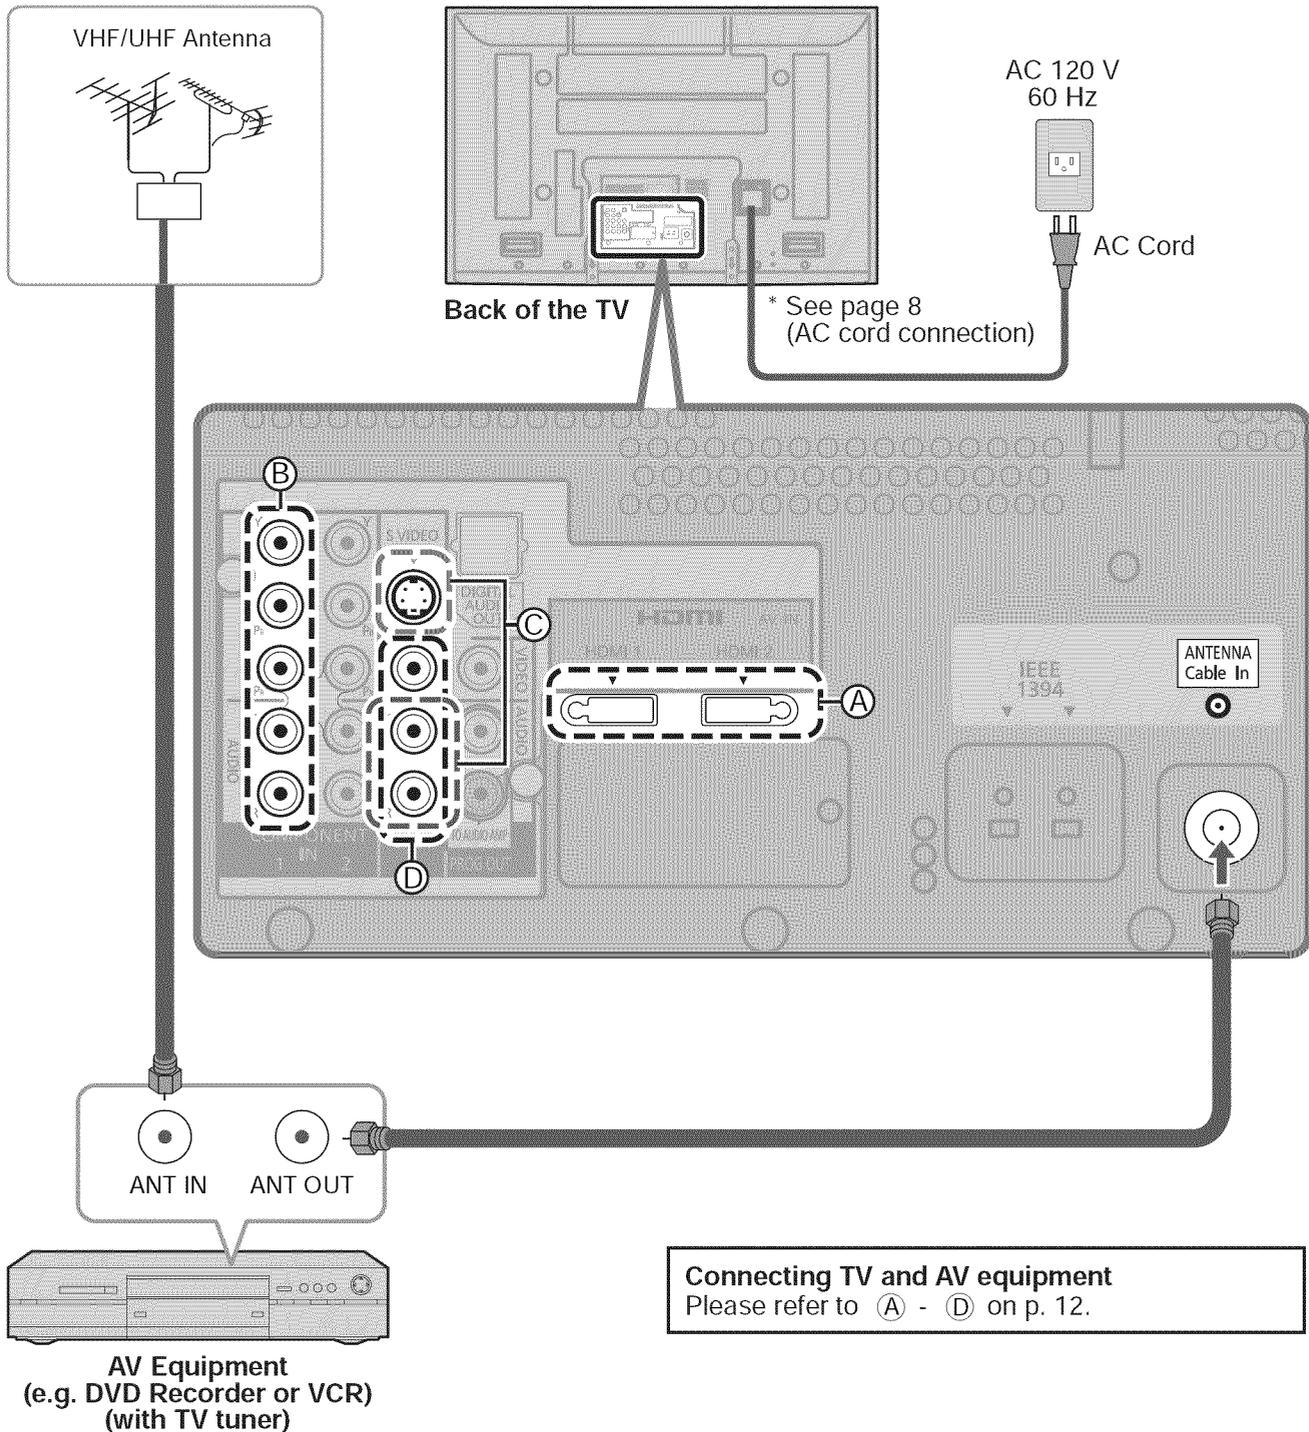


### Example 3 Connecting DVD recorder (VCR) and satellite receiver

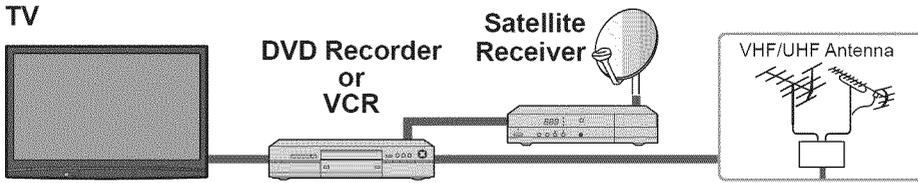

You can enjoy high-definition programming by subscribing to high-definition satellite service. Connection can be done with the use of HDMI or Component Video cable. (p. 12)

### To connect the antenna terminal and Satellite Receiver and DVD recorder or VCR

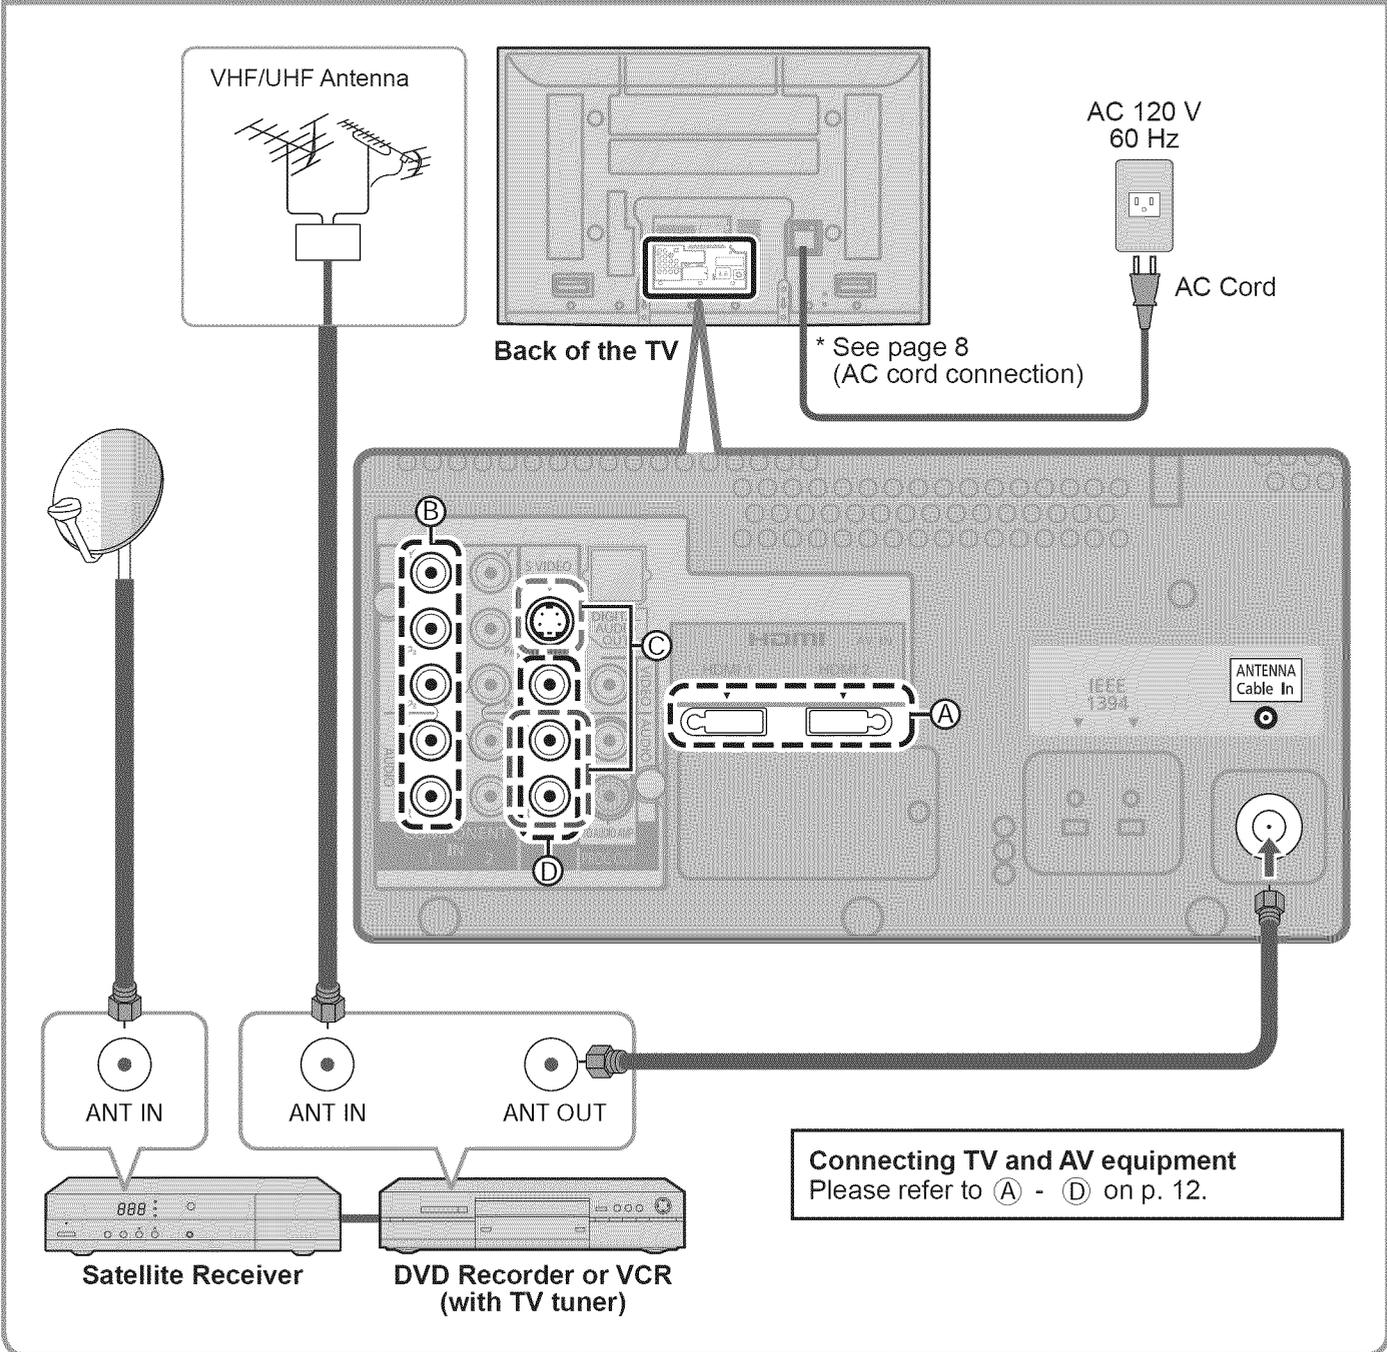

**Note**


● For details of external equipment connections, please refer to the operating manuals for the equipment.

# Basic Connection (Continued)

## AV cable connections


High-Definition

### A To use HDMI terminals

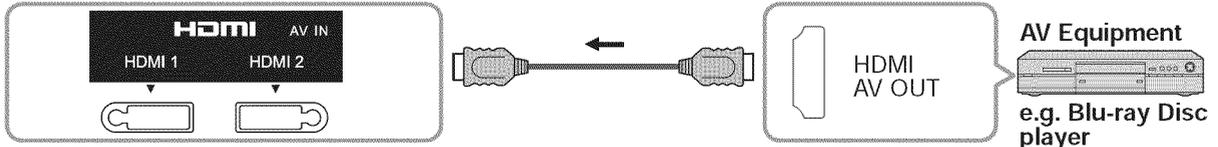

- Connecting to HDMI terminals will enable you to enjoy high-definition digital images and high-quality sound.
- For "VIERA Link™ connections", please refer to p. 41.


### B To use COMPONENT terminals

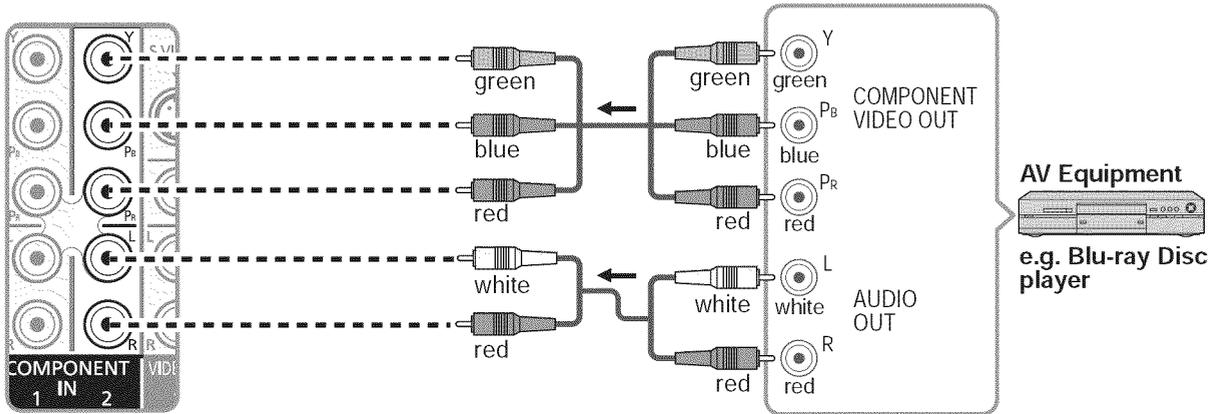


- Recorders may also be connected to COMPOSITE or S VIDEO terminals. (see below)

Standard-Definition

### C To use S VIDEO terminals

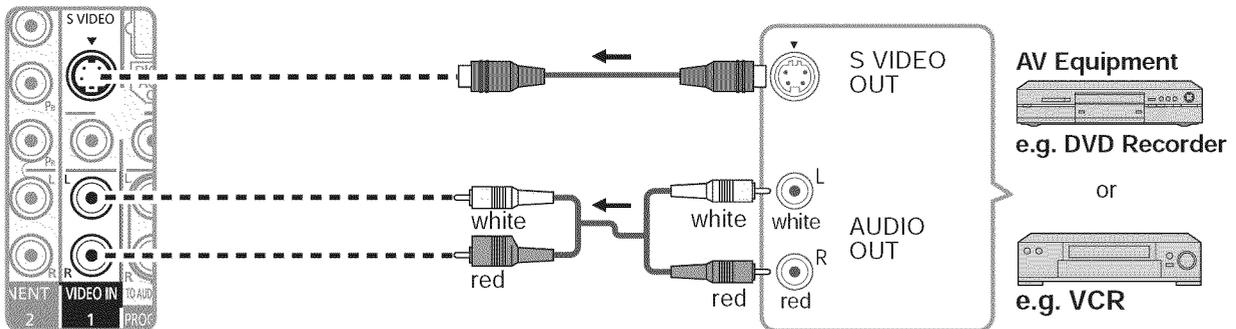

### D To use COMPOSITE terminals

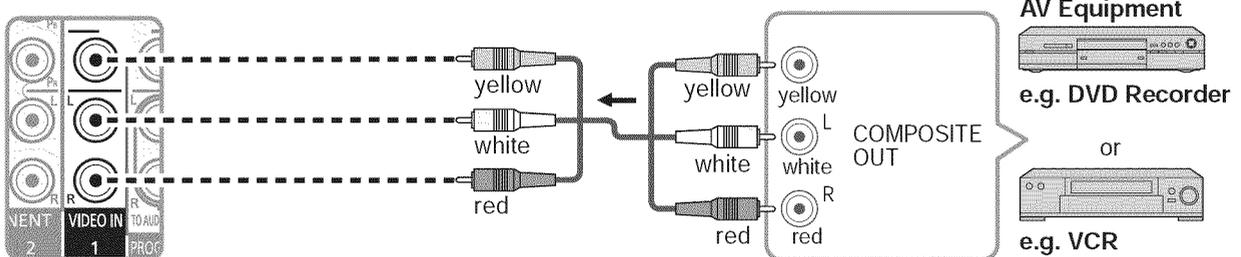


- The S Video input will override the composite video signal when S Video cable is connected. Connect either S Video or Video cable.
- Connecting to S VIDEO terminals will enable you to enjoy greater picture quality than using Composite terminals.

#### Note

- Some programs contain a copyright protection signal to prevent VCR recording.
- When the copyright protection program is displayed, do not connect the other TV monitor through a VCR. Video signals fed through VCRs may be affected by copyright protection systems and the picture will be distorted on the other TV monitor.
- For the details of the external equipment's connections, please refer to the operating manuals of this equipment.

# Identifying Controls


## TV controls/indicators

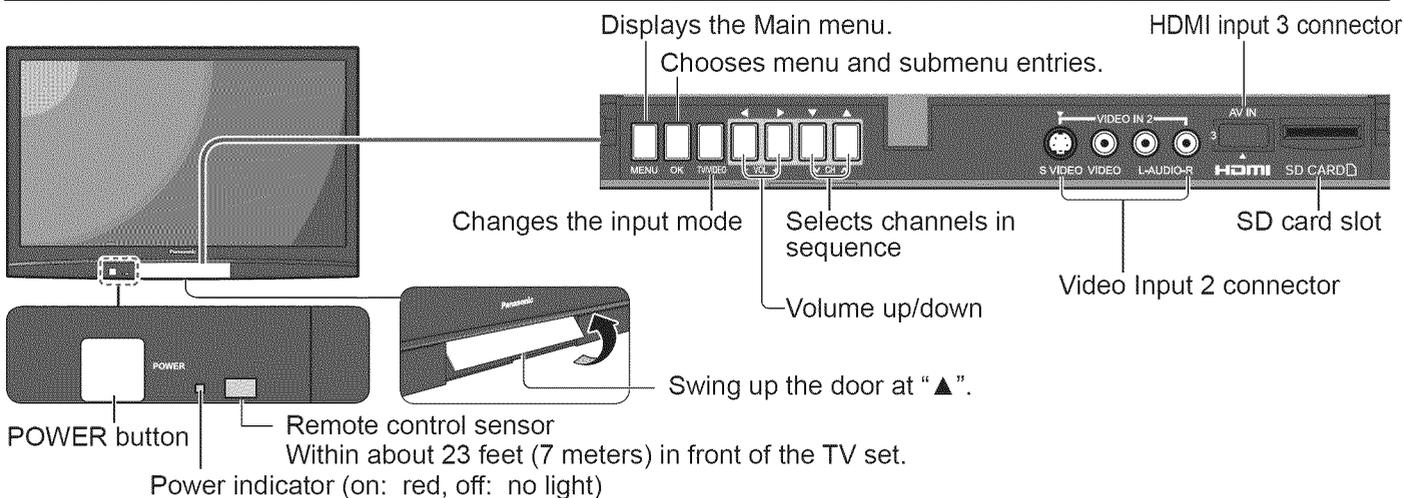

### Note

- The TV consumes a limited amount of power as long as the power cord is inserted into the wall outlet.


## Remote control

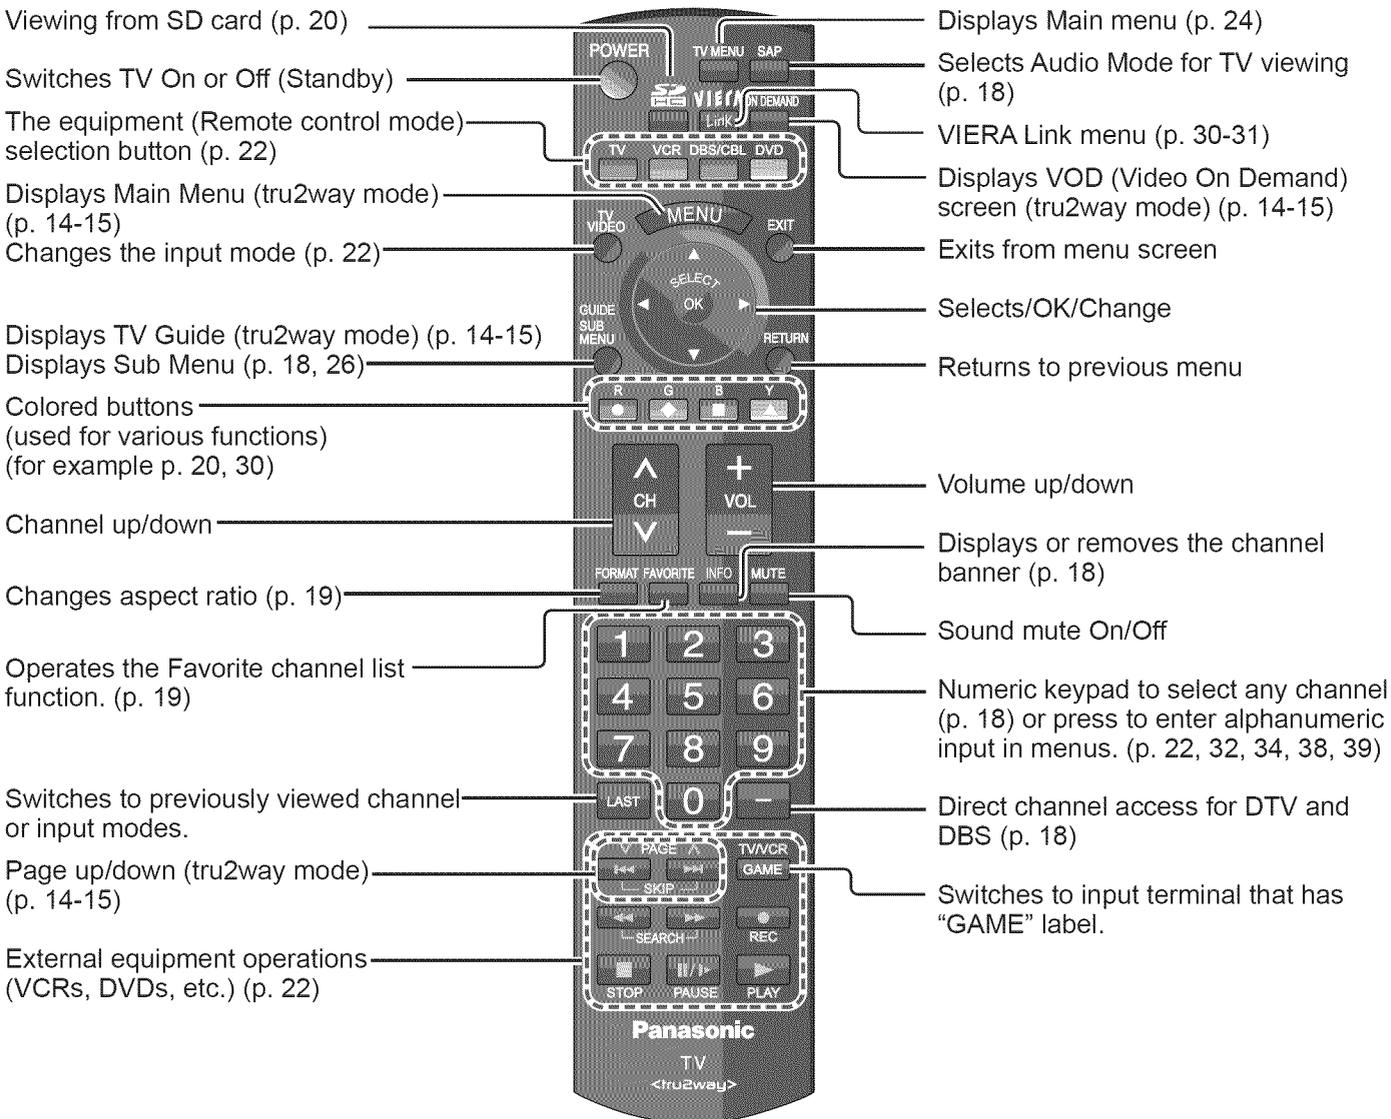

# Enjoy tru2way™ TV

You can enjoy a variety of advanced interactive, two-way services like VOD (Video on Demand), EPG (Electronic Program Guide), home banking, interactive games, as well as other e-Commerce applications on your TV with just the TV remote control.

## Preparing/Switching the TV to tru2way mode

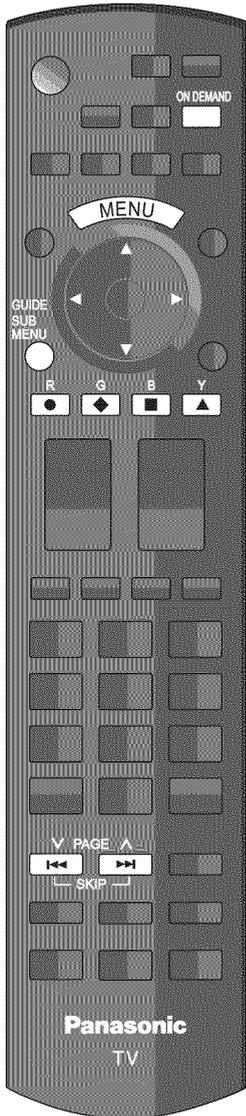

Follow steps ① and ② switch the TV to tru2way mode in order to use the service. Steps ①② are not necessary if the setup has been completed with your cable company.

### ① Insert a CableCARD™

Consult your cable company for the CableCARD connection.

### ② Switch the TV to tru2way mode by restarting

Follow the message on the screen.

- It is not possible to change the mode by just turning the TV off and on.

#### Note

- During initial setup and switch to tru2way mode, new application software must be downloaded from the cable company. The download time will vary based on the speed and size of the download.
- If you experience a front panel control or remote control function hang-up when using a CableCARD, unplug the TV and plug it back in and try the controls again. If this condition persists, please call Panasonic Customer Call Center for further instructions.
- Do not insert a PCMCIA card into the CableCARD slot. This may damage the TV.

### Returning to conventional TV mode from tru2way mode

You can also use the TV conventionally in non tru2way service areas.

- Please consult your cable service company or local Panasonic dealer for this process.
- Steps ①② are not necessary if the setup has been completed with your cable company or local Panasonic dealer.

#### ① Remove the CableCARD

Follow the directions on the screen.

#### ② Reboot to return to conventional TV mode

#### ③ Using the TV in conventional mode

You can enjoy various functions in conventional TV mode with these Operating Instructions.

## Using tru2way service

- Available services will vary depending on the cable service company.
- For more details about the service, please ask your cable service company.

### ■ Available TV's remote control buttons


	Display Main menu
	Display VOD(Video On Demand) screen.
	Display TV Guide
	Page up/down
	Available when the function of the keys is displayed on screen

#### Note

- **These Operating Instructions are described primarily for the conventional TV. For the tru2way mode, operations, menus and functions will vary depending on the cable service company.**
- IEEE1394 terminals are only available when the tru2way application supports it.


# First Time Setup

"First time setup" is displayed only when the TV is turned on for the first time after the power cord is inserted into a wall outlet and when "Auto power on" (p. 26-27) is set to "No".

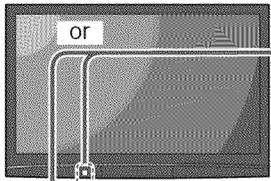


1

## Turn the TV On with the POWER button

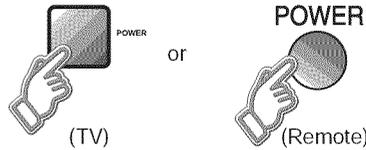

\* This setting will be skipped next time if you select "Home".

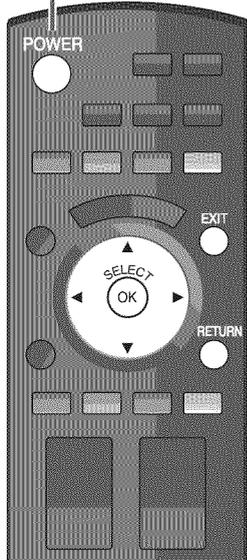

### Press to exit from a menu screen

EXIT



### Press to return to the previous screen

RETURN



### Note

- To change setting (Language/Clock/Auto program) later, go to Menu screen (p. 26)

### 1 Select your language



### 2 Be sure to select "Home"



- Please confirm your selection (Home) before pressing OK button.



### If you select "Store" by mistake in 2, confirmation screen will be displayed.




- Select "No" and return to previous screen 2.
- If you select "Yes", Screen enters store demonstration mode. Displays "Please select your viewing environment" screen once again as shown below. Reselect "Home".
  - Unplug the TV and plug it again.
  - Press and hold down the front POWER button.


2

## Adjust the clock

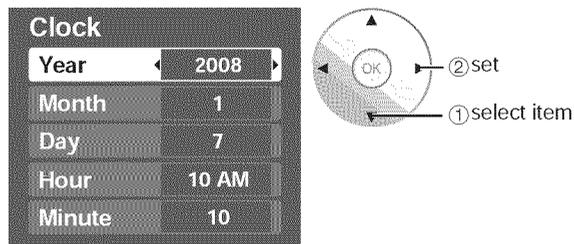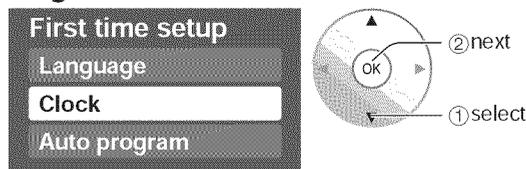


Year: Select the year  
 Month: Select the month  
 Day: Select the day  
 Hour: Adjust the hour  
 Minute: Adjust the minute

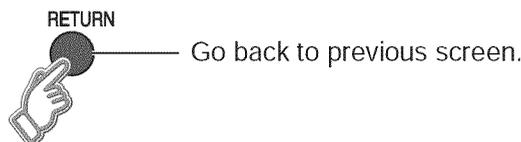


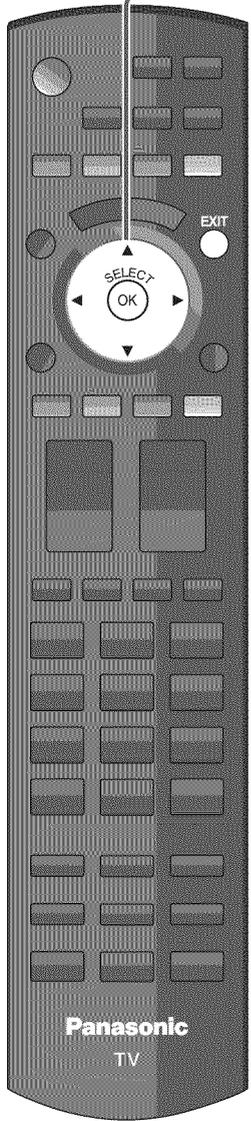


### 3 Auto channel setup

#### ① Select "Auto program"


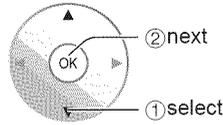


#### ② Select "ANT in"


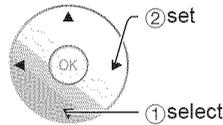
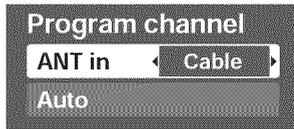


**ANT in**  
Cable: Cable TV  
Antenna: Antenna

#### ③ Select "Auto"

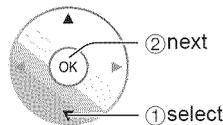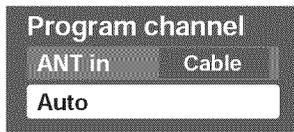

#### ④ Select scanning mode (ALL channels/Analog only/Digital only)

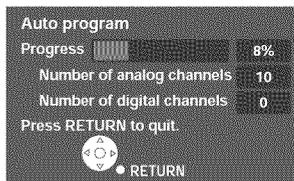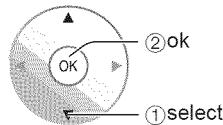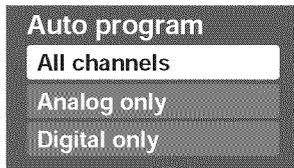

#### Start scanning the channels

- Available channels (analog/digital) are automatically set.



All channels: Scans digital and analog channels  
Analog only: Scans Analog channels only  
Digital only: Scans Digital channels only

■ Press to exit from a menu screen

EXIT



#### ⑤ Confirm registered channels

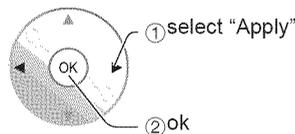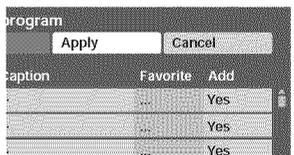

- If OK is not pressed after selecting "Apply", the channels will not be saved. The channels will be saved when no operation is performed for 60 seconds and the "Manual program" menu will also exit automatically.
- If you perform scanning more than twice, previously saved channels are erased.

#### Note

- About broadcasting systems


**Analog (NTSC):** Conventional broadcasting

**Digital (ATSC):** New programming that allows you to view more channels featuring high-quality video and sound


# Watching TV

Connect the TV to a cable, satellite box, or antenna cable (p. 9-12)

## To watch TV and other functions

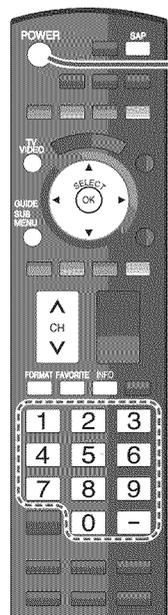


### 1 Turn power on

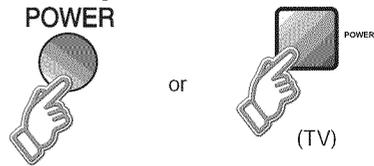

#### Note

● If the mode is not TV, press and select TV. (p. 22)

### 2 Select a channel number

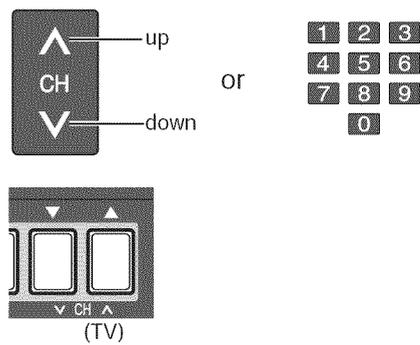

#### To directly input the digital channel number

When tuning to a digital channel, press the to enter the minor number in a compound channel number.

example: CH15-1:

#### Other Useful Functions (Operate after 2)

### Listen with SAP (Secondary Audio Program)


#### Select Audio Mode for watching TV



- **Digital mode**  
Press SAP to select the next audio track (if available) when receiving a digital channel.
- **Analog mode**  
Press SAP to select the desired audio mode.  
• Each press of SAP will change the audio mode. (Stereo/SAP/Mono)


### Display the SUB MENU

#### Press SUB MENU to show sub menu screen. (p. 26)

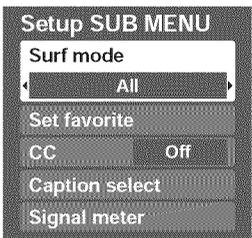


### Information Recall

#### Displays or removes the channel banner.

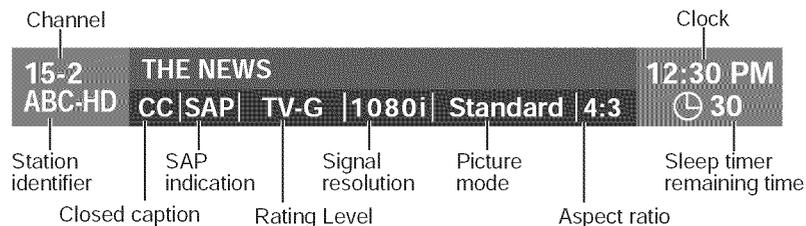

## Change aspect ratio

■ Press **FORMAT** to cycle through the aspect modes. (p. 46)

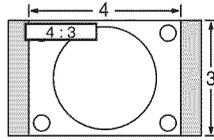

- 480i, 480p: FULL/JUST/4:3/ZOOM
- 1080p, 1080i, 720p: FULL/H-FILL/JUST/4:3/ZOOM

## Call up a favorite channel



### ■ FAVORITE

Channel numbers registered in Favorite are displayed on the favorite tune screen. Select the desired broadcast station by using the cursor or number buttons. (see below)





### Note

- Reselect "Cable" or "Antenna" in "ANT in" of "Program channel" to switch the signal reception between cable TV and antenna. (p. 17, 35)
- The channel number and volume level remain the same even after the TV is turned off.


## Favorite Feature

### ■ Set Favorite Feature


1 Display the SUB MENU.

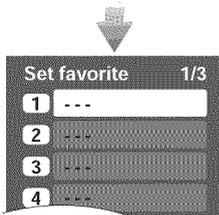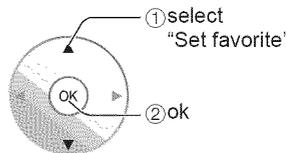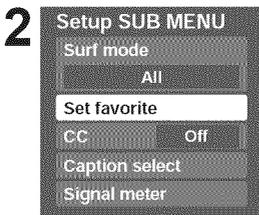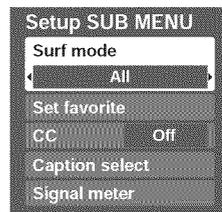

- Press **FAVORITE** repeatedly to change between pages (1/3, 2/3, 3/3, or exit).

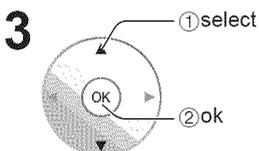

Press **▲▼** to highlight a position on the list. Then, press **OK** to save the displayed channel in that position.

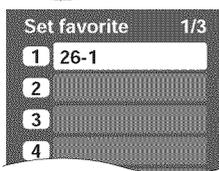

- You can also use the **NUMBER** buttons (1-9 and 0) to select a list number (1-9 and 0). By doing so, the displayed channel will be saved on that list number without pressing **OK**.

### ● To delete a favorite channel

A saved channel can be removed from the list by holding down **OK** while its position is highlighted.

### ● To change the page

Pressing **◀** changes the page backward.

Pressing **▶** changes the page forward.



### ■ Use Favorite Feature

1 **FAVORITE**




Press **FAVORITE**.

- Press **FAVORITE** repeatedly to change between pages (1/3, 2/3, 3/3, or exit).

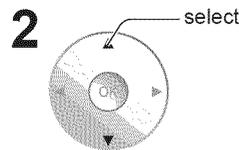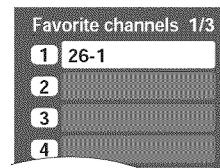

Press **▲▼** or a Numbered key (1-9 and 0) to highlight a channel on the list.

- Selecting a channel number from the list with the number button will display the channel directly.

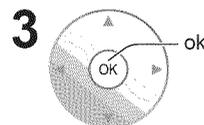

Press **OK** to display the highlighted channel.


# Viewing from SD Card

You can view photos taken with a digital camera or digital video camera and saved on an SD card.  
(Media other than SD Cards may not be reproduced properly.)

## Photo viewer

**1 Insert the SD card and select "Play SD card now"**

- "SD card setting" will be displayed automatically each time a SD card is inserted for the first time.

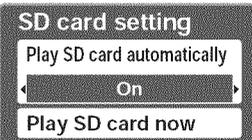

**SD card setting**  
Play SD card automatically  
On  
Play SD card now

**Play SD card automatically:** Set it to playback the data when SD card is inserted.


**On:** When SD card is inserted, the data play automatically from next time.

**Off:** The data can be played manually.


**Press the SD key or select "SD card" on the Menu.**


- You can skip this step when "Play SD card now" is selected or "On" is set in "Play SD card automatically" setting.


or

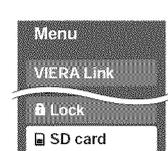→


**2 Select the data to be viewed**

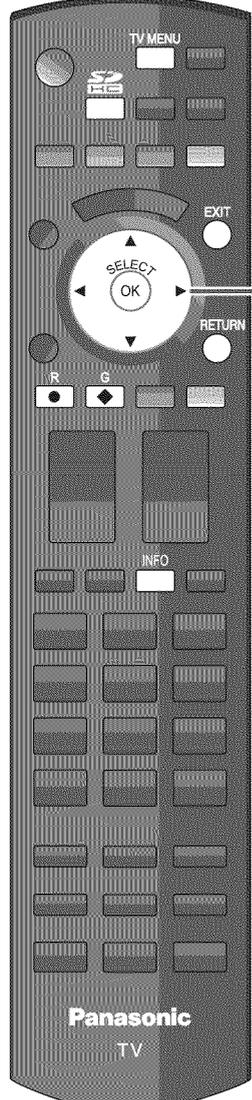

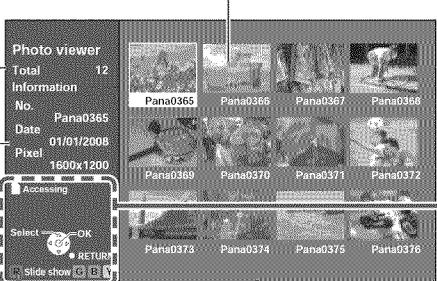


Thumbnail view


Photo viewer  
Total Information 12  
No. Pana0365  
Date 01/01/2008  
Pixel 1600x1200

Selected picture information is displayed.  
**No.:** Image number or file name is displayed.  
**Date:** Date of recording is displayed.  
**Pixel:** Display resolution is displayed.

Total number of images

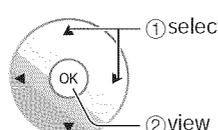

① select  
② view

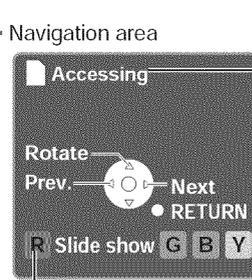


Navigation area

Rotating dial: Rotate, Prev., Next, RETURN

Buttons: R Slide show, G B Y

(to Slide show)

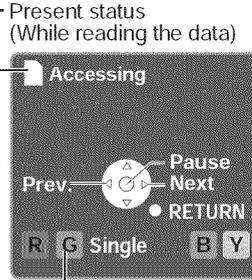

Present status (While reading the data)

Rotating dial: Rotate, Prev., Pause, Next, RETURN


Buttons: R G Single, B Y


(to Single photo display)

**Note**

- Depending on the JPEG format, "Information" contents may not be displayed correctly. Refer to p. 47 (Data format for SD card browsing) for details.

**3 View**

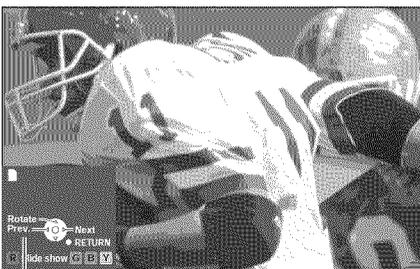

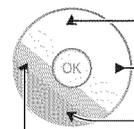

- Rotate 90 degrees (counter-clockwise)
- To next photo
- Rotate 90 degrees (clockwise)
- To previous photo


Displays one at a time

- To display/hide Navigation area → INFO


- Press to exit from a menu screen  
EXIT
- Press to return to the previous screen  
RETURN

## SD Card

- Insert the card

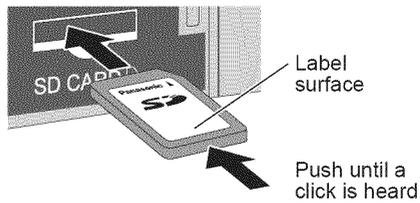

- Remove the card
  - ➔ Press in lightly on SD Card, then release.

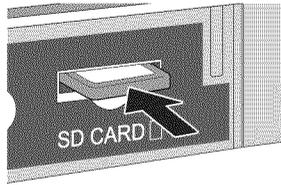


- Compliant card type (maximum capacity): SDHC Card (16 GB), SD Card (2 GB), miniSD Card (1 GB) (requiring miniSD Card adapter)
- For cautions and details on SD Cards (p. 47)

## To change the view (slide show mode, adjusting images, etc.)


 
### ■ To set up the slide show mode

In ② or ③



#### 1 Display "Photo menu"



#### 2 Select "Setup slide show"

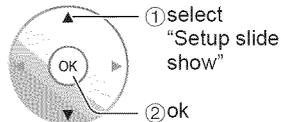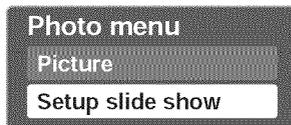

#### 3 Select the item and adjust

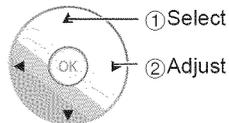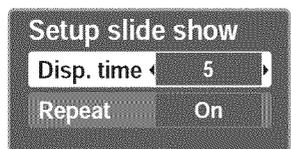

<b>Disp. time</b>	You can set how many seconds each image is displayed in Slide show mode. (1-10/15/20/30/45/60/120 sec)
<b>Repeat</b>	Turn the slide show Repeat function On or Off.

#### Note

- For large image sizes, the display time will be longer than the number of seconds set.
- To stop in mid-cycle ➔ Press **RETURN**



### ■ To adjust picture

In ② or ③



#### 1 Display "Photo menu"



#### 2 Select "Picture"

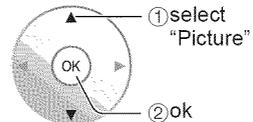
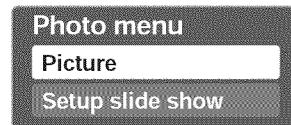


#### 3 Select the item

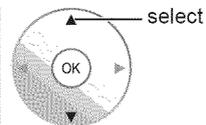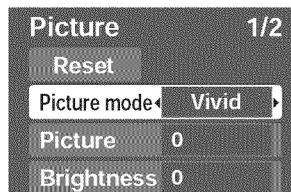

Picture menu (p. 24)

#### 4 Adjust or select

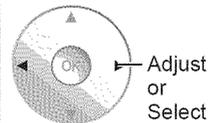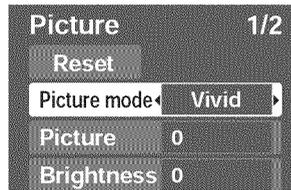


# Watching Videos and DVDs

If you have applicable equipment connected to the TV, you can easily watch videos and DVDs using the TV's remote control.

## Input Select

You can select the external equipment to access.


To operate other manufacturers' equipment, you need to register the code of the equipment. (p. 39)

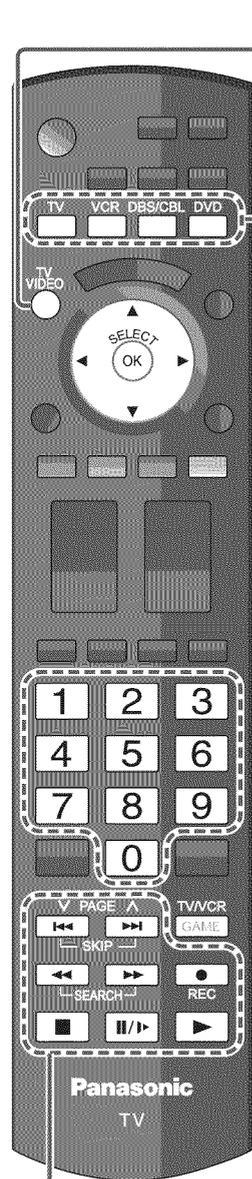


**1** With the connected equipment turned On  
**Display the Input select menu**



**2** **Select the input mode**

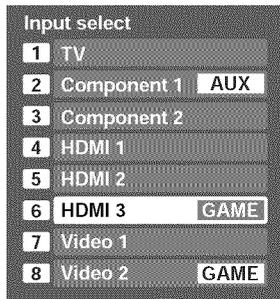

OR

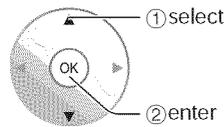

Press corresponding NUMBER button on the remote control to select the input of your choice.

Select the input of your choice, then press OK.

- During the selection, if no action is taken for several seconds, the "Input select" menu disappears.

(example)



Terminal Label

(example)


- The terminal and label of the connected equipment are displayed. To label each of the inputs, please refer to p. 37.

### Note


- The input label will be displayed on "Input select" screen if Input label is set on p. 37.
- For front input terminals (HDMI 3/Video 2), "GAME" input label is set as default. (Picture mode is set to "Game", refer to p. 48.)
- For more details for picture mode setting, refer to p.48. For Input label, refer to p. 37.

### ■ Press Game to switch to the game screen

Switches to Input terminal that has "GAME" label.

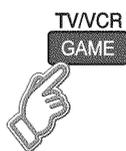

- Cycle through the input terminals if there are multiple Input terminals that have "GAME" label. (p. 37)
- If there is no Input terminal with "GAME" label, you cannot switch the input terminal to any other input terminal than the one currently selected.

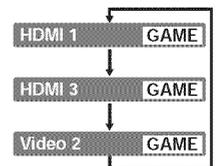

### ■ To return to TV



**3** **Select the remote control mode**

Press the key to select

**4** **Operate the connected equipment, pointing TV's remote control at the equipment.**

(example)

### Note


- For details, see the manual of the connected equipment.

	VCR MODE	DVD MODE		VCR MODE	DVD MODE
	VCR Record	Record		Stop	Stop
	—	Skip Reverse/Forward		Pause	Pause
	Rewind/Fast Forward	Reverse/Forward		Play	Play

(For other operations, see p. 42)

## VIERA Link™ Setting



If you connect equipment that has “HDAVI Control” function to this TV with HDMI cable, you can use more convenient functions. Please refer to p. 28-31. Before using these functions, you need to set “VIERA Link” setting to “On” as shown below.

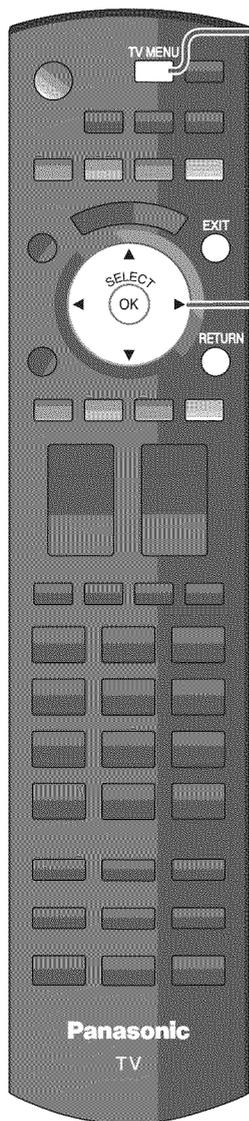



### 1 Display menu





### 2 Select “Setup”

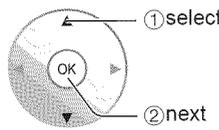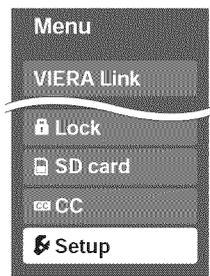


### 3 Select “VIERA Link setting”

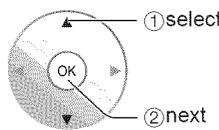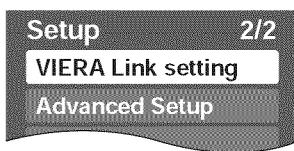

### 4 Select “VIERA Link”

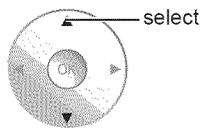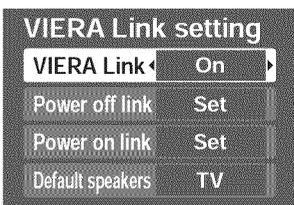

### 5 Select “On” (default is On)

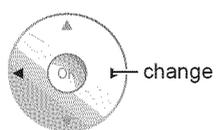

■ Press to exit from a menu screen



■ Press to return to the previous screen



Now you can set each “VIERA Link” function according to your preference (p. 28-29)

#### Note


- If no HDMI equipment is connected or standard HDMI equipment (non- “VIERA Link”) is used, set it to “Off”.
- For the details on the external equipment’s connections, please refer to the operating manuals for the equipment.

Viewing

● Watching Videos and DVDs

# How to Use Menu Functions

Various menus allow you to make settings for the picture, sound, and other functions so that you can enjoy watching TV best suited for you.

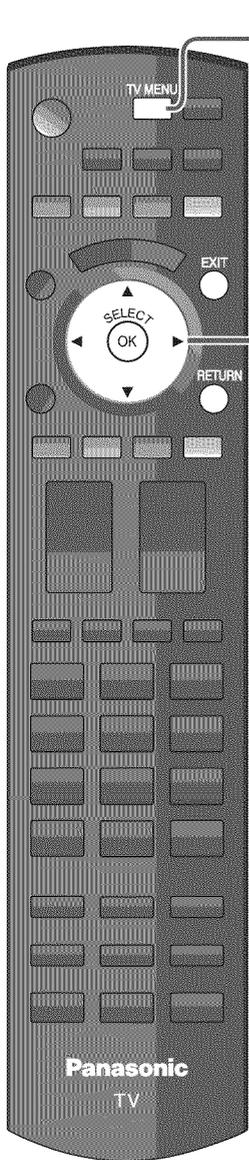

1



## Display menu



- Displays the functions that can be set (varies depending on the input signal)



2

## Select the menu

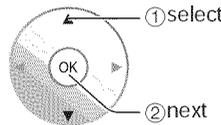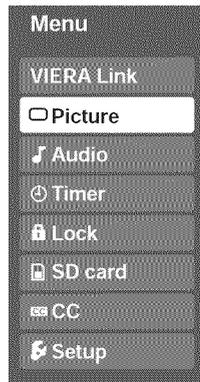

3



## Select the item

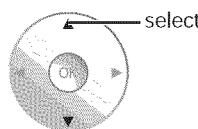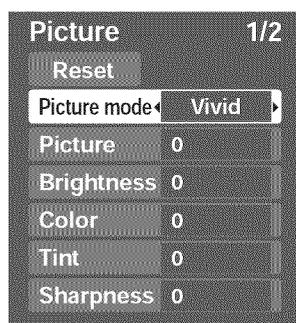

(example: Picture menu)

4

## Adjust or select

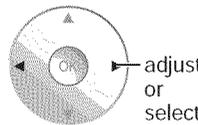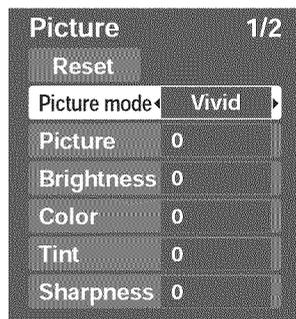

(example: Picture menu)

■ Press to exit from a menu screen

EXIT



■ Press to return to the previous screen

RETURN



## Menu list

Menu	Item		
VIERA Link	Record now		
	Stop recording		
	VIERA Link control		
	Speaker output		
	Picture	Reset	
		Picture mode	
		Picture, Brightness, Color, Tint, Sharpness	
		Color temp.	
		Color mgmt.	
		x.v.Color	
Zoom adjust			
Advanced picture		Video NR	
		3D Y/C filter	
		Color matrix	
	MPEG NR		
	Black level		
HD size			
Audio	Reset		
	Bass		
	Treble		
	Balance		
	Advanced audio	AI sound	
		Surround	
		Bass boost	
		Audio leveler	
		Speaker output	
	HDMI 1 in		
HDMI 2 in			
HDMI 3 in			
Timer	Sleep, Timer 1-5		
Lock			
SD Card	SD card		
CC	CC		


## Adjustments/Configurations (alternatives)

<b>[Record now/Stop recording]</b> Records programs on the recorder immediately with the TV's remote control (p. 30-31).							
<b>[VIERA Link control]</b> Selects equipment to access and operate. ( <b>Recorder/Home theater/Player/Camcorder</b> ) (p.30-31)							
<b>[Speaker output]</b> Selects an audio output. ( <b>Home theater/TV</b> ) (p. 30-31) ● VIERA Link menu is accessible directly by pressing the VIERA Link button on the remote control. ➔  (p. 30)							
Resets all picture adjustments to factory default settings except for "Advanced picture".	<input type="button" value="Reset"/>						
Basic picture mode ( <b>Vivid/Standard/Cinema/Game/Custom</b> ) (p. 48)	<input type="button" value="Picture mode"/> <input type="button" value="Vivid"/>						
Adjusts color, brightness, etc. for each picture mode to suit your taste ● Display range <b>Picture/Brightness/Color/Sharpness:</b> 0 - 100 <b>Tint:</b> -50 - +50	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%;"><input type="text" value="Picture"/> <input type="text" value="+20"/></td> <td style="width: 50%;"><input type="text" value="Tint"/> <input type="text" value="0"/></td> </tr> <tr> <td><input type="text" value="Brightness"/> <input type="text" value="0"/></td> <td><input type="text" value="Sharpness"/> <input type="text" value="0"/></td> </tr> <tr> <td><input type="text" value="Color"/> <input type="text" value="0"/></td> <td></td> </tr> </table>	<input type="text" value="Picture"/> <input type="text" value="+20"/>	<input type="text" value="Tint"/> <input type="text" value="0"/>	<input type="text" value="Brightness"/> <input type="text" value="0"/>	<input type="text" value="Sharpness"/> <input type="text" value="0"/>	<input type="text" value="Color"/> <input type="text" value="0"/>	
<input type="text" value="Picture"/> <input type="text" value="+20"/>	<input type="text" value="Tint"/> <input type="text" value="0"/>						
<input type="text" value="Brightness"/> <input type="text" value="0"/>	<input type="text" value="Sharpness"/> <input type="text" value="0"/>						
<input type="text" value="Color"/> <input type="text" value="0"/>							
Selects a choice of Cool(blue), Normal, or Warm(red) color. ( <b>Cool/Normal/Warm</b> )	<input type="button" value="Color temp."/> <input type="button" value="Cool"/>						
On: Enhances green and blue color reproduction, especially outdoor scenes. ( <b>On/Off</b> )	<input type="button" value="Color mgmt."/> <input type="button" value="On"/>						
Auto: Provide the appropriate picture when images corresponding to "x.v.Color" are input via the HDMI input of this TV. ( <b>Off/Auto</b> )	<input type="button" value="x.v.Color"/> <input type="button" value="Auto"/>						
Adjusts vertical alignment and size when aspect setting is "ZOOM" (p. 46)	<input type="button" value="Zoom adjust"/>						
Reduces noise, commonly called snow. Leave it off when receiving a strong signal. ( <b>Off/On</b> )	<input type="button" value="Video NR"/> <input type="button" value="Off"/>						
Minimizes noise and cross-color in the picture. ( <b>On/Off</b> )	<input type="button" value="3D Y/C filter"/> <input type="button" value="On"/>						
Selects image resolution of component-connected devices ( <b>HD/SD</b> ) ● SD: Standard Definition HD: High Definition ● Only 480p signal accepted; regular TV (NTSC) is not available.	<input type="button" value="Color matrix"/> <input type="button" value="SD"/>						
Reduces noise of specific digital signals of DVD, etc. ( <b>On/Off</b> )	<input type="button" value="MPEG NR"/> <input type="button" value="Off"/>						
Selects Dark or Light. Valid only for external input signals. ( <b>Dark/Light</b> )	<input type="button" value="Black level"/> <input type="button" value="Light"/>						
Selects between 95 % (Size 1) or 100 % (Size 2) for the scanning area with High-definition signal. ( <b>Size 1/ Size 2</b> ) Select "Size 1" if noise is generated on the edges of the screen. ● Size 1: Selected item for "HD size". Scanning 95% ● Size 2: Selected item for "HD size". Scanning 100%	<input type="button" value="HD size"/> <input type="button" value="Size1"/>						
Resets Bass, Treble and Balance adjustments to factory default settings.	<input type="button" value="Reset"/>						
Increases or decreases the bass response.	<input type="text" value="Bass"/> <input type="text" value="0"/>						
Increases or decreases the treble response.	<input type="text" value="Treble"/> <input type="text" value="0"/>						
Emphasizes the left / right speaker volume.	<input type="text" value="Balance"/> <input type="text" value="0"/>						
Equalizes overall volume levels across all channels and external inputs. ( <b>On/Off</b> )	<input type="button" value="AI sound"/> <input type="button" value="On"/>						
Enhances audio response when listening to stereo. ( <b>On/Off</b> )	<input type="button" value="Surround"/> <input type="button" value="Off"/>						
Enhances bass sound and provides powerful sound. ( <b>On/Off</b> ) ● This setting will not function if "off" is set in "Speaker output".	<input type="button" value="Bass boost"/> <input type="button" value="Off"/>						
Minimizes volume disparity after switching to external inputs	<input type="text" value="Audio leveler"/> <input type="text" value="0"/>						
Switch to "Off" when using external speakers ( <b>On/Off</b> ) ● "AI sound", "Surround", and "Audio leveler" do not work if "Off" is selected	<input type="button" value="Speaker output"/> <input type="button" value="On"/>						
The default setting is "Digital" for HDMI connection. (Digital input signal) Select audio input terminal when DVI cable is connected. (Analog audio input signal) <b>(Digital/Component 1/Component 2/Video 1/Video 2)</b>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%;"><input type="button" value="HDMI1 in"/></td> <td style="width: 50%;"><input type="button" value="Digital"/></td> </tr> <tr> <td><input type="button" value="HDMI2 in"/></td> <td><input type="button" value="Digital"/></td> </tr> <tr> <td><input type="button" value="HDMI3 in"/></td> <td><input type="button" value="Digital"/></td> </tr> </table>	<input type="button" value="HDMI1 in"/>	<input type="button" value="Digital"/>	<input type="button" value="HDMI2 in"/>	<input type="button" value="Digital"/>	<input type="button" value="HDMI3 in"/>	<input type="button" value="Digital"/>
<input type="button" value="HDMI1 in"/>	<input type="button" value="Digital"/>						
<input type="button" value="HDMI2 in"/>	<input type="button" value="Digital"/>						
<input type="button" value="HDMI3 in"/>	<input type="button" value="Digital"/>						
The TV can automatically turn On/Off at the designated date and time (p. 38)	<input type="button" value="Sleep"/> <input type="text" value="60"/>						
Locks the channels and programs (p. 32)							
Displays SD card data (p. 20-21)	<input type="button" value="SD card"/>						
Displays subtitles (Closed Caption) (p. 36)	<input type="button" value="CC"/>						

● In AV mode, the Audio menu and Setup menu give fewer options.

# How to Use Menu Functions

Various menus allow you to make settings for the picture, sound, and other functions so that you can enjoy watching TV best suited for you.

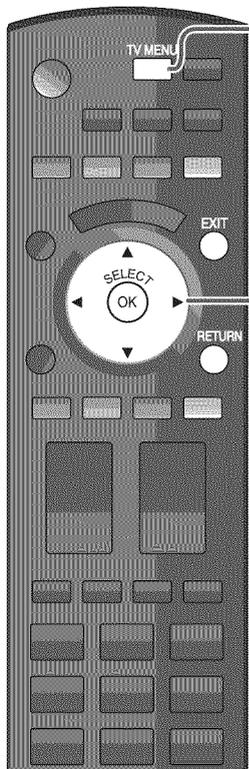

1


## Display menu



- Displays the functions that can be set (varies depending on the input signal)



2

## Select "Setup"

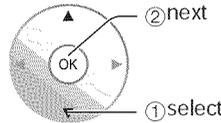

3


## Select the item

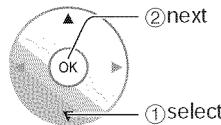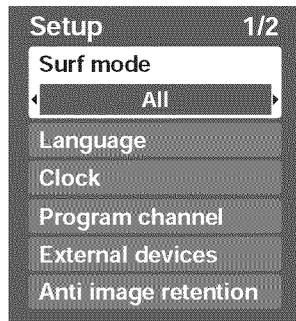

- Press to exit from a menu screen



- Press to return to the previous screen

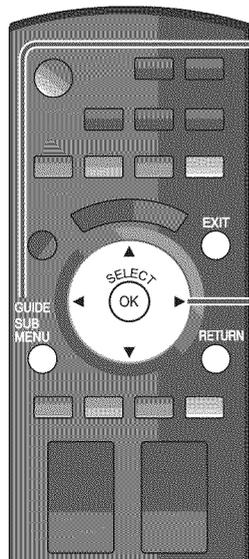



1

## Display Sub Menu



2

## Select the item

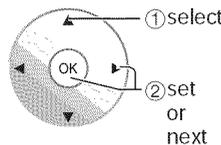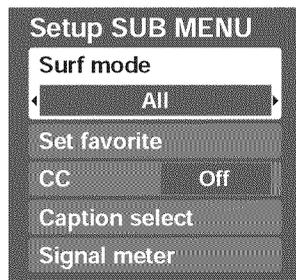

## Menu list

Menu	Item		
Setup	Surf mode		
	Language		
	Clock		
	Program channel		
	External devices	Input labels	
		Monitor out	
	Anti image retention	Pixel orbiter	
		Time	
		Side bar	
	VIERA Link setting	Scrolling bar	
		VIERA Link	
		Power off link	
	Advanced setup	Power on link	
		Default speakers	
		Auto power on	
No signal shut-off			
No action shut-off			
	Play SD card automatically		
	About		
	Reset		

## Sub menu list

Menu	Item	
Setup SUB MENU	Surf mode	
	Set favorite	
	CC	
	Caption select	
	Signal meter	

# (Continued)

## Adjustments/Configurations (alternatives)

Sets the mode to select the channel with Channel up/down button <b>(All/Favorite/Digital Only/Analog only)</b> ● Favorite: Only channels registered as FAVORITE (p. 19)	Surf mode <input type="text" value="All"/>
Selects the screen menu language (p. 16)	Language <input type="text"/>
Adjusts the clock (p. 16)	Clock <input type="text"/>
Sets channels (p. 34)	Program channel <input type="text"/>
Selects the terminal and label of the external equipment (p. 37)	
<b>[Component 1/Component 2/HDMI 1/HDMI 2/HDMI 3/Video 1/Video 2]</b> To prevent howling and image oscillation, stops output of the pictures and audio specified in this menu. (p. 37) <b>(On/Off)</b>	
Prevents "Image retention" with Wobbling. <b>(Automatic/Force)</b> ● Automatic: Shifts the display image automatically. ● Force: Shifts the display image every (1/2/3/4) minutes according to what was set in the "Time" menu.	Pixel orbiter <input type="text" value="Automatic"/>
Sets the time for "Pixel orbiter-Force" setting. <b>(1/2/3/4)</b>	Time <input type="text" value="4"/>
Change the brightness of the side bar <b>(Off/Dark/Mid/Bright)</b> (4:3 mode only) ● The recommended setting is "Bright" to prevent panel "Image retention". (p. 49)	Side bar <input type="text" value="Bright"/>
Press "OK" to start "Scrolling" on the screen (p. 49)	Scrolling bar <input type="text"/>
Controls equipment connected to HDMI terminals (p. 28) <b>(On/Off)</b> ● "Power off link", "Power on link", and "Default speakers" cannot be selected if "Off" is set.	VIERA Link <input type="text" value="On"/>
Sets "Power off link" of HDMI connection equipment (p. 28) <b>(Set/No)</b>	Power off link <input type="text" value="Set"/>
Sets "Power on link" of HDMI connection equipment (p. 28) <b>(Set/No)</b>	Power on link <input type="text" value="Set"/>
Selects the default speakers (p. 28) <b>(TV/Theater)</b>	Default speakers <input type="text" value="TV"/>
Turns TV On automatically when a connected device is turned On <b>(No/Set)</b> ● The "Sleep" timer, "On / Off timer", and "First time setup" will not function if "Auto power on" is set. (p. 38)	Auto power on <input type="text" value="No"/>
To conserve energy, the TV automatically turns off when NO SIGNAL and NO OPERATION is performed for more than 10 minutes. <b>(Set/No)</b> <b>Note</b> ● Not in use when setting "Auto power on", "On/Off Timer", "Lock", "SD Mode", or Digital channel. ● "No signal shut-off was activated" will be displayed for about 10 seconds when the TV is turned on for the first time after turning the power off by "No signal shut-off". ● The on-screen display will flash 3, 2 and 1 to indicate the last three (3) remaining minutes prior to the shut-off.	No signal shut-off <input type="text" value="Set"/>
To conserve energy, the TV automatically turns off when no operation of remote or front panel key continues for more than 3 hours. <b>(No/Set)</b> <b>Note</b> ● Not in use when setting "Auto power on" or "On/Off Timer". ● "No action shut-off was activated" will be displayed for about 10 seconds when the TV is turned on for the first time after turning the power off by "No action shut off". ● The on-screen display will flash 3, 2 and 1 to indicate the last three (3) remaining minutes prior to the shut-off.	No action shut-off <input type="text" value="No"/>
Set "On" to play back SD cards automatically. <b>(On/Off)</b>	Play SD card automatically <input type="text" value="On"/>
Displays TV version, software license and cableCARD™.	About <input type="text"/>
Performing Reset will clear all items set with Setup, such as channel settings. (p. 34)	Reset <input type="text"/>

## Adjustments/Configurations (alternatives)

Sets the mode to select the channel with Channel up/down button <b>(All/Favorite/Digital Only/Analog only)</b>	
Sets favorite channels. (p. 19)	
Displays Closed Caption. (p. 36) <b>(Off/On)</b>	
Changes the station identifier. (p. 35)	
Checks the signal strength if interference or freezing occurs on a digital image. (p. 35)	

# VIERA Link™ "HDAVI Control™"

\* Simultaneously control all Panasonic "HDAVI Control" equipped components using one button on one remote.

VIERA Link™ is a new name for EZ Sync™.

Enjoy additional HDMI Inter-Operability with Panasonic products which have "HDAVI Control".

This TV supports "HDAVI Control 3" function.

Connections to the equipment (DVD recorder DIGA, HD Camcorder, Player theatre, RAM theater, Amplifier, etc.) with HDMI cables allow you to interface them automatically.

The equipment with "HDAVI Control" function enables the following operations:

- Automatic Input Switching (p. 29)
- Power on link (p. 29)
- Power off link (p. 29)
- Default speakers (p. 29)
- One-touch theater playback (p. 29)
- Speaker control (p. 31)

The equipment with "HDAVI Control 2" (or more) function enables the following operations:

- VIERA Link control only with the TV's remote control (for "HDAVI Control 2" or "HDAVI Control 3") (P. 31)
- Providing the setting information (for "HDAVI Control 3") (p. 29)
- Automatic lip-sync function (for "HDAVI Control 3") (p. 29)
- Direct TV Recording (for "HDAVI Control 3") (p. 31)

VIERA Link "HDAVI Control", based on the control functions provided by HDMI which is an industry standard known as HDMI CEC (Consumer Electronics Control), is a unique function that we have developed and added. As such, its operation with other manufacturers' equipment that supports HDMI CEC cannot be guaranteed.

Please refer to the individual manuals for other manufacturers' equipment supporting the VIERA Link function.

■ **For the first time / when adding new equipment, reconnecting equipment or changing the setup after the connection, turn the equipment on and then switch the TV on.**

**Select the input mode to HDMI1, HDMI2 or HDMI3 (p. 22), and make sure that an image is displayed correctly.**


## ■ HDMI cable

This function needs an HDMI compliant (fully wired) cable. Non-HDMI-compliant cables cannot be utilized. It is recommended that you use Panasonic's HDMI cable. Recommended part number:



RP-CDHG10 (3.3 ft/1.0 m), RP-CDHG15 (4.9 ft/1.5 m), RP-CDHG20 (6.6 ft/2.0 m), RP-CDHG30 (9.8 ft/3.0 m), RP-CDHG50 (16.4 ft/5.0 m)

\* For more details on the external equipment's connections, please refer to the operating manuals for the equipment.

**1** Follow direction ① - ⑤ in "VIERA Link setting" (p. 23)

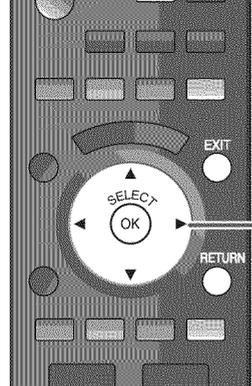

**2** Select settings

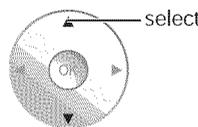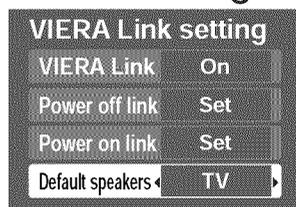



■ Press to exit from a menu screen



■ Press to return to the previous screen



**3** Set

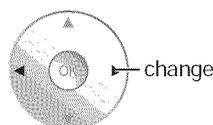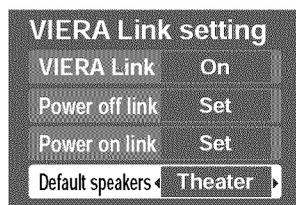

Automatic Input Switching

Power on link

Power off link

Default speakers

One-touch theater playback

Providing the setting information (for "HDAVI Control 3")

Automatic lip-sync function (for "HDAVI Control 3")

At the start of the DIGA, Player theater, or RAM theater playback, the TV's input automatically switches to the input based on the playback equipment.

- For the RAM theater, the speakers automatically switch to the theater system.  
If using the DIGA operation, the TV's input automatically switches to the DIGA and DIGA menu is displayed.

When “Set” is selected (p. 27), TV is turned on automatically and switches to the appropriate HDMI input whenever VIERA Link compatible equipment is initially turned on and Play mode is selected.

When “Set” is selected (p. 27) and the TV is turned off, all connected VIERA Link compatible equipment is also automatically turned off.

- DIGA (Panasonic DVD Recorder) will not turn off if it is still in rec mode.
- Caution:** The TV remains on even if the VIERA Link compatible equipment is turned off.

“TV” is the default setting. To set the Home Theater system as default speakers, change the default speakers setting from “TV” to “Theater”. Sound will be output from the Home Theater whenever the TV is powered on.

If the “ONE TOUCH PLAY” key is pressed on the remote control for Panasonic Home Theater system, the following sequence of operations is performed automatically.

- ① Home Theater power switches On, and playback begins.
- ② TV power switches On, and the playback screen is displayed.
- ③ Audio is muted on the TV and switches to the theater system.

The following information about the TV settings can be transmitted to each equipment (Recorder/Home theater/Player) that has “HDAVI Control 3” function connected to a TV with HDMI piece of cable.

Transmittable data		Recorder	Home theater	Player
①	On Screen Display Language setting (English/Español/Français)	○	○	○
②	Panel Aspect Ratio (16:9 fixed)	○	○	○
③	Closed caption information			
	mode	○	---	---
	CC type	○	---	---
	Digital setting	○	---	---
④	Channel information			
	Input signal	○	---	---
	Channel list	○	---	---
	Caption information	○	---	---

**Note**

- There is a possibility that all the GUI language information might be set from equipment that has HDMI CEC function connected to TV with HDMI cable. Depending on operating conditions or the specification for each piece of equipment the setting may or may not be applied.
- For details on the external equipment's operation, please refer to the operating manuals for the equipment.


**[For Recorder]**

- You cannot operate other functions while transmitting TV's information above except Power On/Off key operation. When you turn off this unit, the transmission will be interrupted (only when you are transmitting ④ Channel information).


Minimizes lip-sync delays between the picture and audio when you connect to a Panasonic theater system or Amplifier.

# VIERA Link™ "HDAVI Control™"


You can enjoy more convenient operation with the "HDAVI Control" function in the "VIERA Link" menu.  
For more details on the "HDAVI Control" function, refer to p. 28

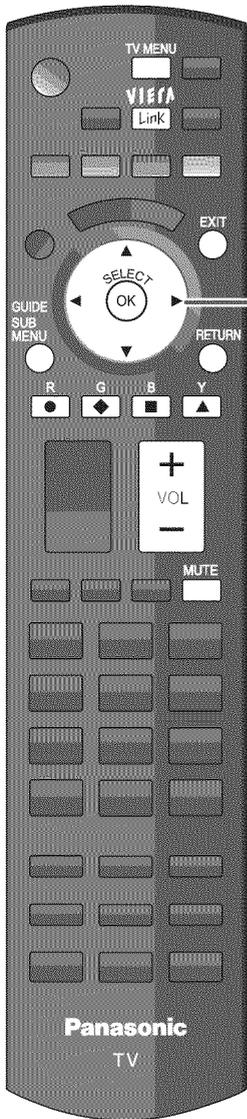


## 1 Display VIERA Link menu

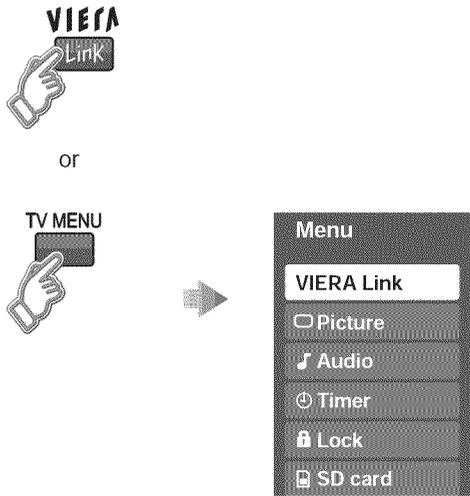

## 2 Select the item

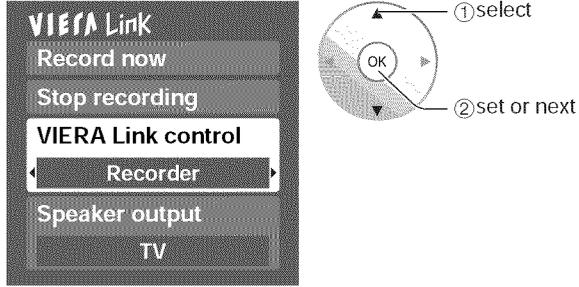

## 3 Select

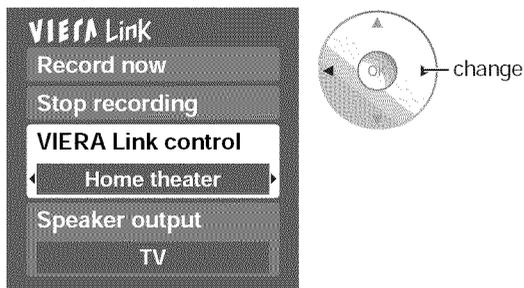

## 4 Set

■ Press to exit from a menu screen



■ Press to return to the previous screen



Speaker control


VIERA Link Control only with the TV's remote control (for "HDAVI Control 2" or "HDAVI Control 3")

Direct TV Recording (for "HDAVI control 3")


# (Continued)

You can select Home theater or TV speakers for audio output.  
Control theater speakers with the TV's remote control.  
This function is available only when Panasonic Amplifier or Player theater is connected.

- ① Select "Speaker output"
- ② Select "Home theater" or "TV"

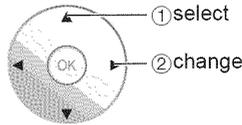

### ■ Home theater: Adjustment for equipment

 


- The sound of the TV is muted.
- When the equipment is turned off, the TV speakers take over.
- Selecting "Home theater" turns the equipment on automatically if it is in standby mode.

### ■ TV: The TV speakers are on.

In the VIERA Link menu, you can select HDMI connected equipment and access it quickly. Continue using your TV's remote control to operate the equipment, pointing it at the TV.

- ① Select "VIERA Link Control"
- ② Select the equipment you want to access.  
(Recorder/Home theater/Player/Camcorder)

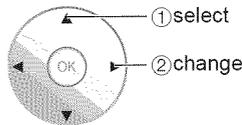

You can select available items only.

### ■ Available TV's remote control buttons


	Move the cursor/Select
	Set/Access
	Return to the previous menu
	Display the Functions menu on the equipment
	Available when the purpose of the keys is displayed on screen

- ③ Operate the equipment with the TV's remote control, pointing it at the TV.


- To operate the equipment, read the manual of the equipment.

Records the current program on the recorder immediately.

- ① Select "Record now"

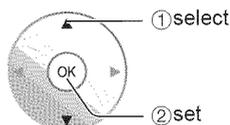

- ② Select "Stop recording", when you want to stop recording

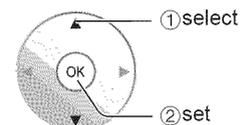


- For optimal recording, the settings of the recorder might be required. For details, read the manual of the recorder.

- Recording will not stop automatically when the program is finished.

# Lock


You can lock specified channels or shows to prevent children from watching objectionable content.

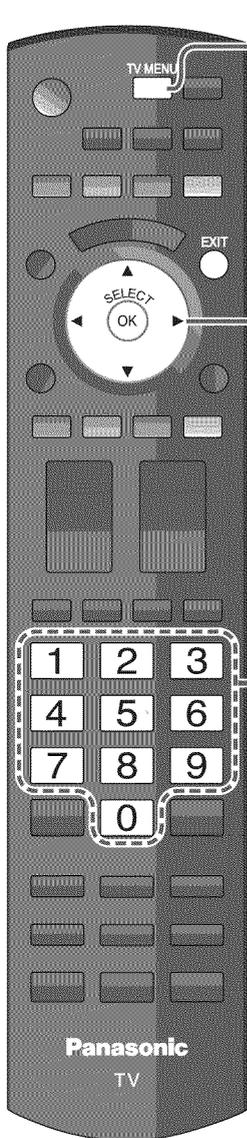

## 1 Display menu




## 2 Select "Lock"

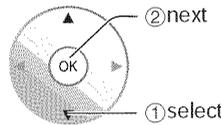

You will be asked to enter your password each time you display the Lock menu.



## 3 Input your 4-digit password

A 4-digit code must be entered to view a blocked program or change rating settings.

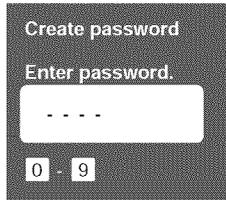



- If it is your first time entering the password, enter the password twice in order to register it.

## 4 Select the Lock mode

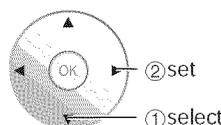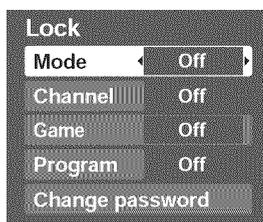


- Off: Unlocks all the lock settings of "Channel", "Game" and "Program".
- All: Locks all the inputs regardless of the lock settings of "Channel", "Game" and "Program".
- Custom: Locks specified inputs of "Channel", "Game" and "Program".

## 5 Select the item

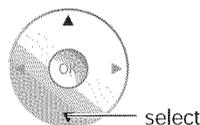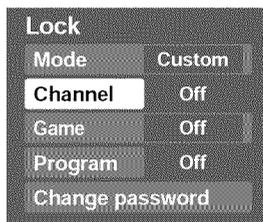

- "Channel", "Game" and "Program" will grey out unless "Custom" is selected in "Mode".

## 6 Set

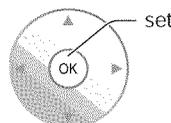

### Press to exit from a menu screen



### Caution

- Make a note of your password in case you forget it. (If you have forgotten your password, consult your local dealer.)

### Note



- When you select a locked channel, a message will be displayed that allows you to view the channel if you input your password.

■ To select the channel or the rating of the program to be locked

**Channel lock**

Select up to 7 (1-7) channels to be blocked. These channels will be blocked regardless of the program rating.

- ① Select "Mode" and set to "Custom"
- ② Select channel to lock.

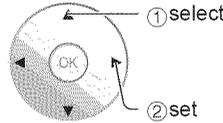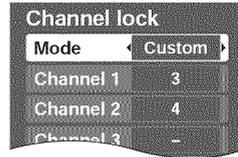


- To lock/unlock all channels: Select "Mode" and set to "All" or "Off".

All: Locks all channels  
Off: Unlocks all channels

**Game lock**

Locks Channel 3, Channel 4 and external inputs.

- ⑤ Select "Game" in ⑤ and set to "On".

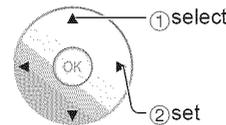



On: Locks  
Off: Unlocks

**Program lock**



■ To set a rating level

"V-chip" technology enables restricted shows to be locked according to TV ratings.

- ① Select "Mode" and set to "On".

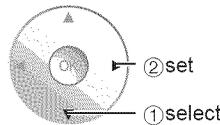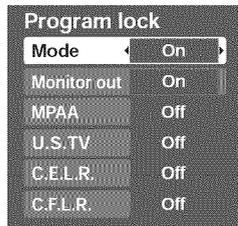


- ② Select the rating category you wish to follow

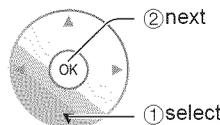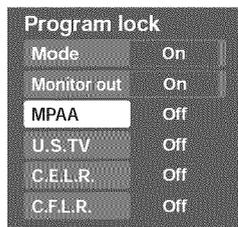

MPAA: U.S movie ratings  
U.S.TV: U.S TV program ratings  
C.E.L.R.: Canadian English ratings  
C.F.L.R.: Canadian French ratings

- ③ Select the rating to be locked

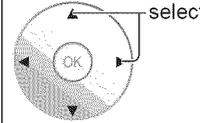



Example of "MPAA" (U.S movie ratings)

NR	No rating
G	General Audience: All ages admitted
PG	Parental Guidance Suggested
PG-13	Parents Strongly Cautioned: Inappropriate for children under 13
R	Restricted: Under 17 requires accompanying parent or adult guardian
NC-17	No one 17 and under admitted
X	Adults only

- To get more information (p. 45)

■ To disable recording of the locked program


- ➔ Select "Monitor out" and set to "Off".

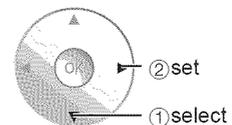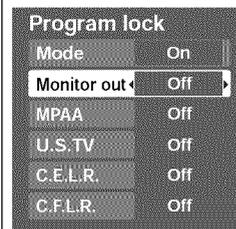

**Change password**

■ To change the password

- ① In ④, select "Change password" and press OK
- ② Input the new 4-digit password twice

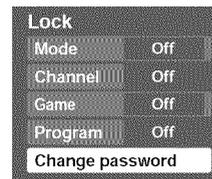


**Note**


- This television is designed to support the "Downloadable U.S. Region Rating System" when available. (Available only in U.S.A.)
- The Off rating is independent of other ratings.
- When placing a lock on a specific-age-based-rating level, the Off rating and any other more restrictive ratings will also be blocked.

# Editing and Setting Channels


The current channel settings can be changed according to your needs and reception conditions.

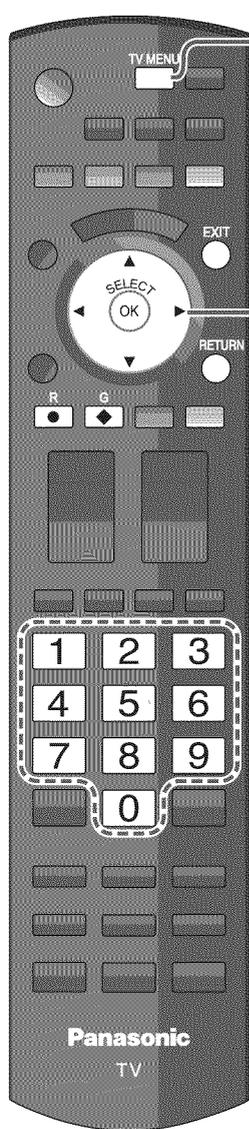



## 1 Display menu

 



## 2 Select "Setup"

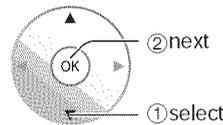

## 3 Select "Program channel"

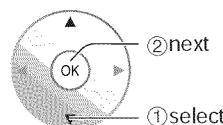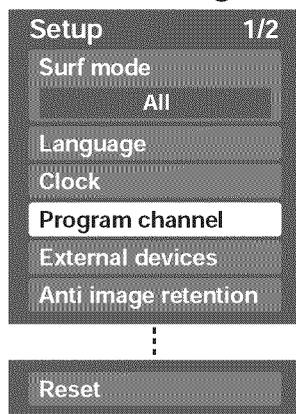

## 4 Select the function

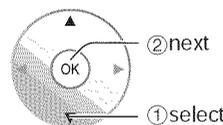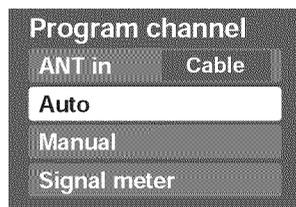

## 5 Set

■ Press to exit from a menu screen  
EXIT

- To reset the settings of setup menu
- ① Select "Reset" in Setup menu (3) and press OK
  - ② Input your 4-digit password with number buttons
  - ③ Select "YES" on the confirmation screen and press OK

Auto

Set automatically

Manual

Set manually

Signal meter



Check signal strength

Automatically searches and adds available channels to the memory.



① Select "ANT in"

➔ Select Cable or Antenna (p. 17)

② Select "Auto"

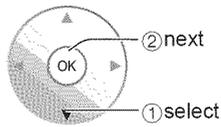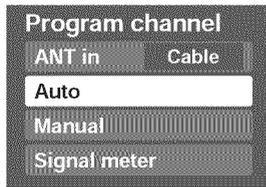

③ Select a scanning mode (p. 17)

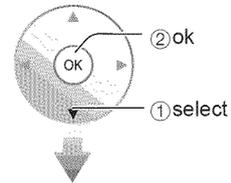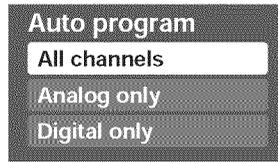



Settings are made automatically

- After the scanning is completed, select "Apply". (see below ⑤).
- All previously saved channels are erased.



Use this procedure when changing the channel setup or changing the channel display. Also, use this to add or skip channels from the channel list manually.

You can select a channel tuning mode (Digital only/ Analog only) in "Surf mode"(p. 26)


① Select "Edit"

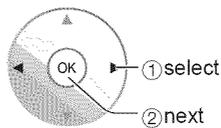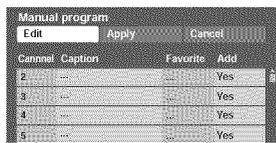

② Select the item to be edited

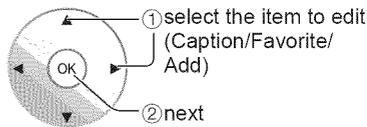
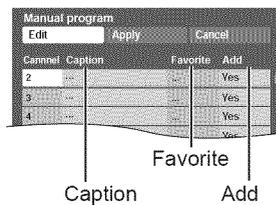


- Caption: Changes the station identifier
- Favorite: Registers channel to Favorite List
- Add: Adds or skips channels

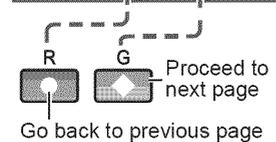

③ Edit

● Caption

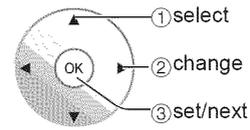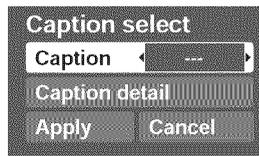



**Caption**

Select the station identifier

**Caption detail**

Rename (maximum 7 characters available)

 ● Favorite

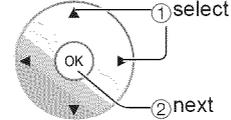



**Set favorite** Select the number

● Add



Press OK to select "Yes (add)" or "No (skip)" ➔






 
④ Move cursor to channel number

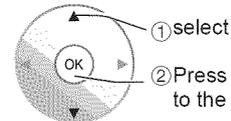



⑤ Select "Apply"

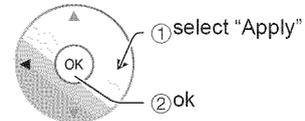 

To cancel the Edit

 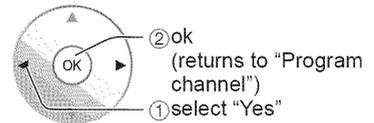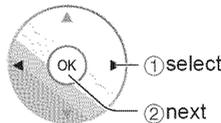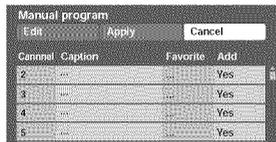

Check the signal strength if interference is found or freezing occurs on a digital image.

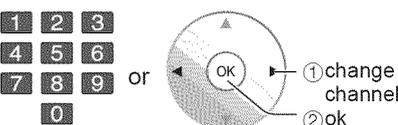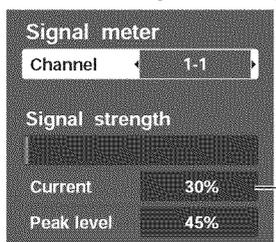


- If the signal is weak, check the antenna. If no problem is found, consult your local dealer.

**Note**

- Not available if "Cable" is selected in "ANT in" (see above).
- Available only for digital antenna channels.

● If "Lock" (p. 32) is activated and "Program channel" is selected, "Enter password." will be displayed.


# Closed Caption

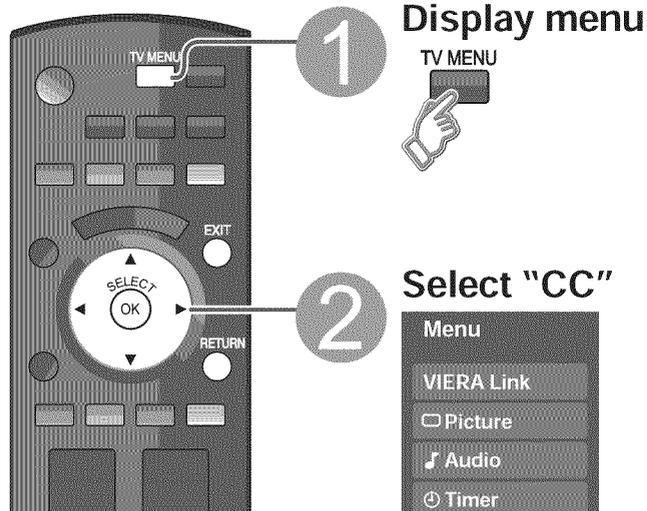

**1 Display menu**





**2 Select "CC"**

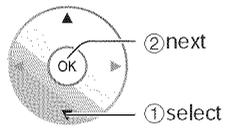

■ Press to exit from a menu screen  
EXIT

The television includes a built-in decoder that is capable of providing a text display of the audio. The program being viewed must be transmitting Closed Caption (CC) information. (p. 46)

■ **Select the item and set**

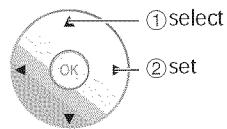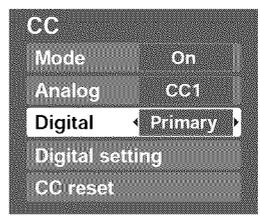

● The settings in "Analog" or "Digital" depend on the broadcaster.

**Mode** Select "On" (when not using, select "Off").

**Analog** (Choose the Closed Caption service of Analog broadcasting.)

CC1-4: Information related to pictures (Appears at bottom of screen)

T1-4: Textual information (Appears over entire screen)

**Digital** (The Digital Closed Caption menu lets you configure the way you choose to view the digital captioning.)



Select the setting.

● "Primary", "Second.", "Service 3", "Service 4", "Service 5", "Service 6"

■ **To make more in-depth display settings in digital programs**

① Select "Digital setting" and press OK

② Select the item and set

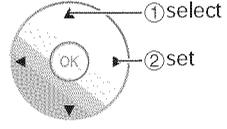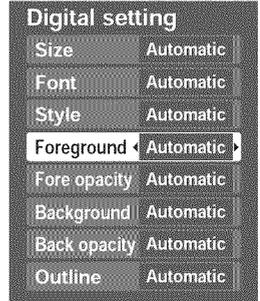

- Size: Text size
- Font: Text font
- Style: Text style (Raised, Depressed, etc.)
- Foreground: Color of text
- Fore opacity: Opacity of text
- Background: Color of text box
- Back opacity: Opacity of text box
- Outline: Outline color of text  
(Identify the setting options on the screen.)

■ **To reset the settings**

Select "CC reset" and press OK

**CC**  
**Display Closed Caption**

# Input Labels/Monitor Out

**1 Display menu and select "Setup"**

TV MENU → Menu  
 Menu  
 VIERA Link  
 Lock  
 SD card  
 CC  
 Setup

**2 Select "External devices"**

Setup 1/2  
 Surf mode  
 All  
 Language  
 Clock  
 Program channel  
 External devices  
 Anti image retention

**3 Select "Input labels" or "Monitor out"**

External devices  
 Input labels  
 Monitor out

■ Press to exit from a menu screen  
 EXIT



## Input labels

### Display labels of external devices

Devices connected to external input terminals can be labeled for easier identification during input selection. (In selecting input mode from p. 22 ②)

#### ■ Select the terminal and label of the external equipment

Input labels	
Component 1	
Component 2	
HDMI 1	
HDMI 2	
HDMI 3	GAME
Video 1	
Video 2	GAME

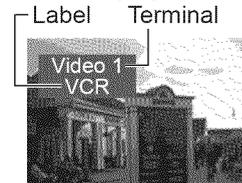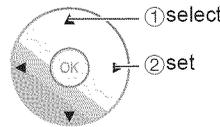

[example]

- Terminals: Comp. 1-2/HDMI 1-3/Video 1-2
- Label: SKIP\*/VCR/DVD/CABLE/DBS/PVR/GAME/AUX/RECEIVER/[BLANK]
- \* If "SKIP" is selected, the TV/VIDEO button press will skip its input.
- Each selected labels will be displayed on "Input select" screen. (p. 22)


## Monitor out

### Stop output of the picture and audio

To prevent howling and image oscillation, stops output of the pictures and audio specified in this menu. (p. 27)

#### ■ Select the terminal and set "Off"

Monitor out	
Component 1	On
Component 2	On
HDMI 1	On
HDMI 2	On
HDMI 3	On
Video 1	Off
Video 2	On

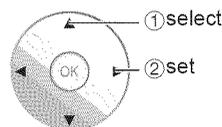


- Select "Off" to stop output of picture and audio. (Video 1/Video 2)
- Component 1/Component 2/HDMI 1/HDMI 2/HDMI 3 cannot output video signals regardless of "Monitor out" setting. When equipment (DVD, etc.) is connected to HDMI or COMPONENT terminals, only audio signals can be obtained. From the output terminals, no video signals can be passed.

# Using Timer

The TV can automatically turn On/Off at the designated date and time.



- The Clock must be set before On time/Off time settings. (p. 16)
- The "Sleep" timer and "On / Off timer" will not work if the "Auto power on" (p. 27) is set.

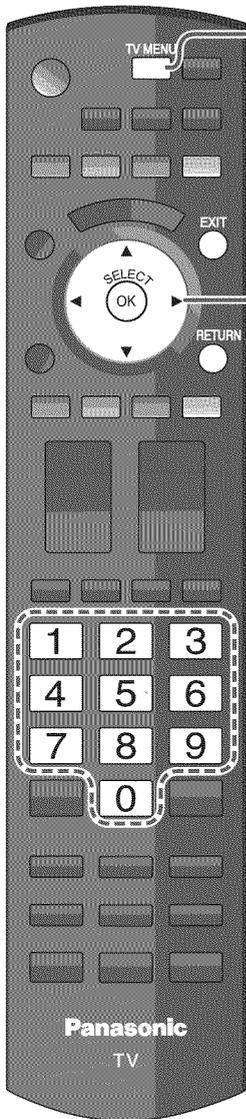



## 1 Display menu



## 2 Select "Timer"

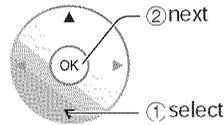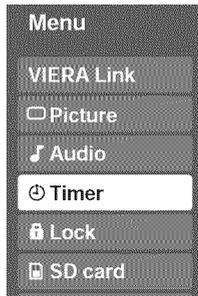

## 3 Select the timer to set

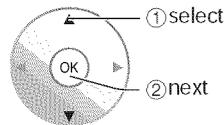
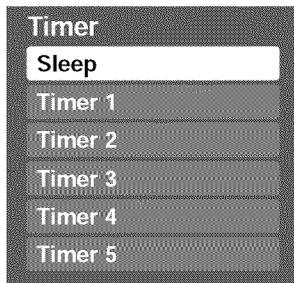


- Sleep** Turns Off automatically
- Timer 1** Turns On/Off automatically (5 timers can be set.)
- Timer 5**

## 4 Set the timer
 
### ■ To set "Sleep" (Off Timer)


Set to shut the unit off after a pre-selected amount of time.

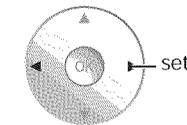

- 0/30/60/90 (minutes)

### ■ To set "Timer 1-5" (On/Off Timer)

Select the item and set

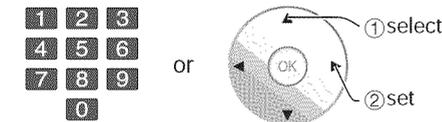

**Channel** Select the channel

**Day** Select the day

SUN/MON/TUE/WED/THU/FRI/SAT  
(displays the nearest future date)  
MON-FRI/SAT-SUN/DAILY/EVR SUN/EVR MON/  
EVR TUE/EVR WED/EVR THU/EVR FRI/ EVR SAT

**On time** The time to turn On

**Off time** The time to turn Off

**Set** Timer setting (On/Off)

### ■ Press to exit from a menu screen

EXIT



### ■ Press to return to the previous screen

RETURN




### Note

- The TV automatically turns Off after 90 minutes when turned On by the Timer. This operation will be cancelled if the Off time is selected or if a key is pressed.

# Programming the Remote to Operate Peripheral Equipment

You can operate other manufacturers' equipment using this TV's remote control.

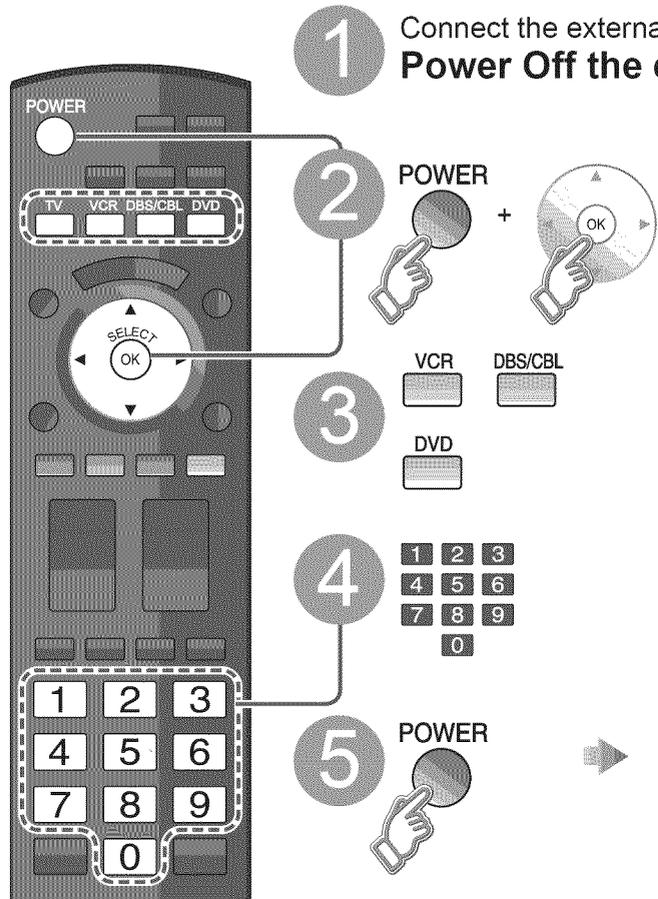

**1** Connect the external equipment to the TV and **Power Off the external equipment**

**2** **Press both buttons simultaneously for more than 3 seconds.**

**Press both buttons simultaneously for more than 3 seconds.**

- Release the buttons when the equipment selection buttons start flashing.

**3**

**Select the equipment**

with the equipment selection button

- The selected button remains lit (other buttons are not lit).

**4**

**Input the equipment's 4-digit remote control code** (p. 43-44)

**5**

**Operate the equipment with the remote control** (p. 42)

- The external equipment turns On.

■ **Press to return to the TV mode**




**Caution**

- Registration will fail if the wrong code is input or it takes more than 30 seconds to register.

**To find a code not listed in the code list**

This procedure searches all codes and is called the "sequence method."


**① After step ③ above, change the code and test**

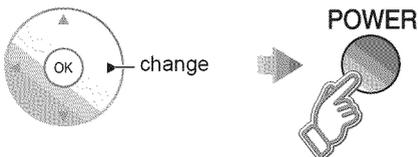

➔ Operate the equipment with the remote control (p. 42)


- Repeat until the code is found
- It may take many attempts before the correct code is found

**② When the correct code is found**

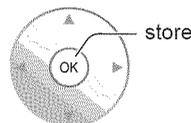

# Recommended AV Connections

These diagrams show our recommendations on how to connect the TV unit to your various equipment. For other connections, consult the instructions for each piece equipment and its specifications. For additional assistance, please visit our website at: [www.panasonic.com](http://www.panasonic.com)

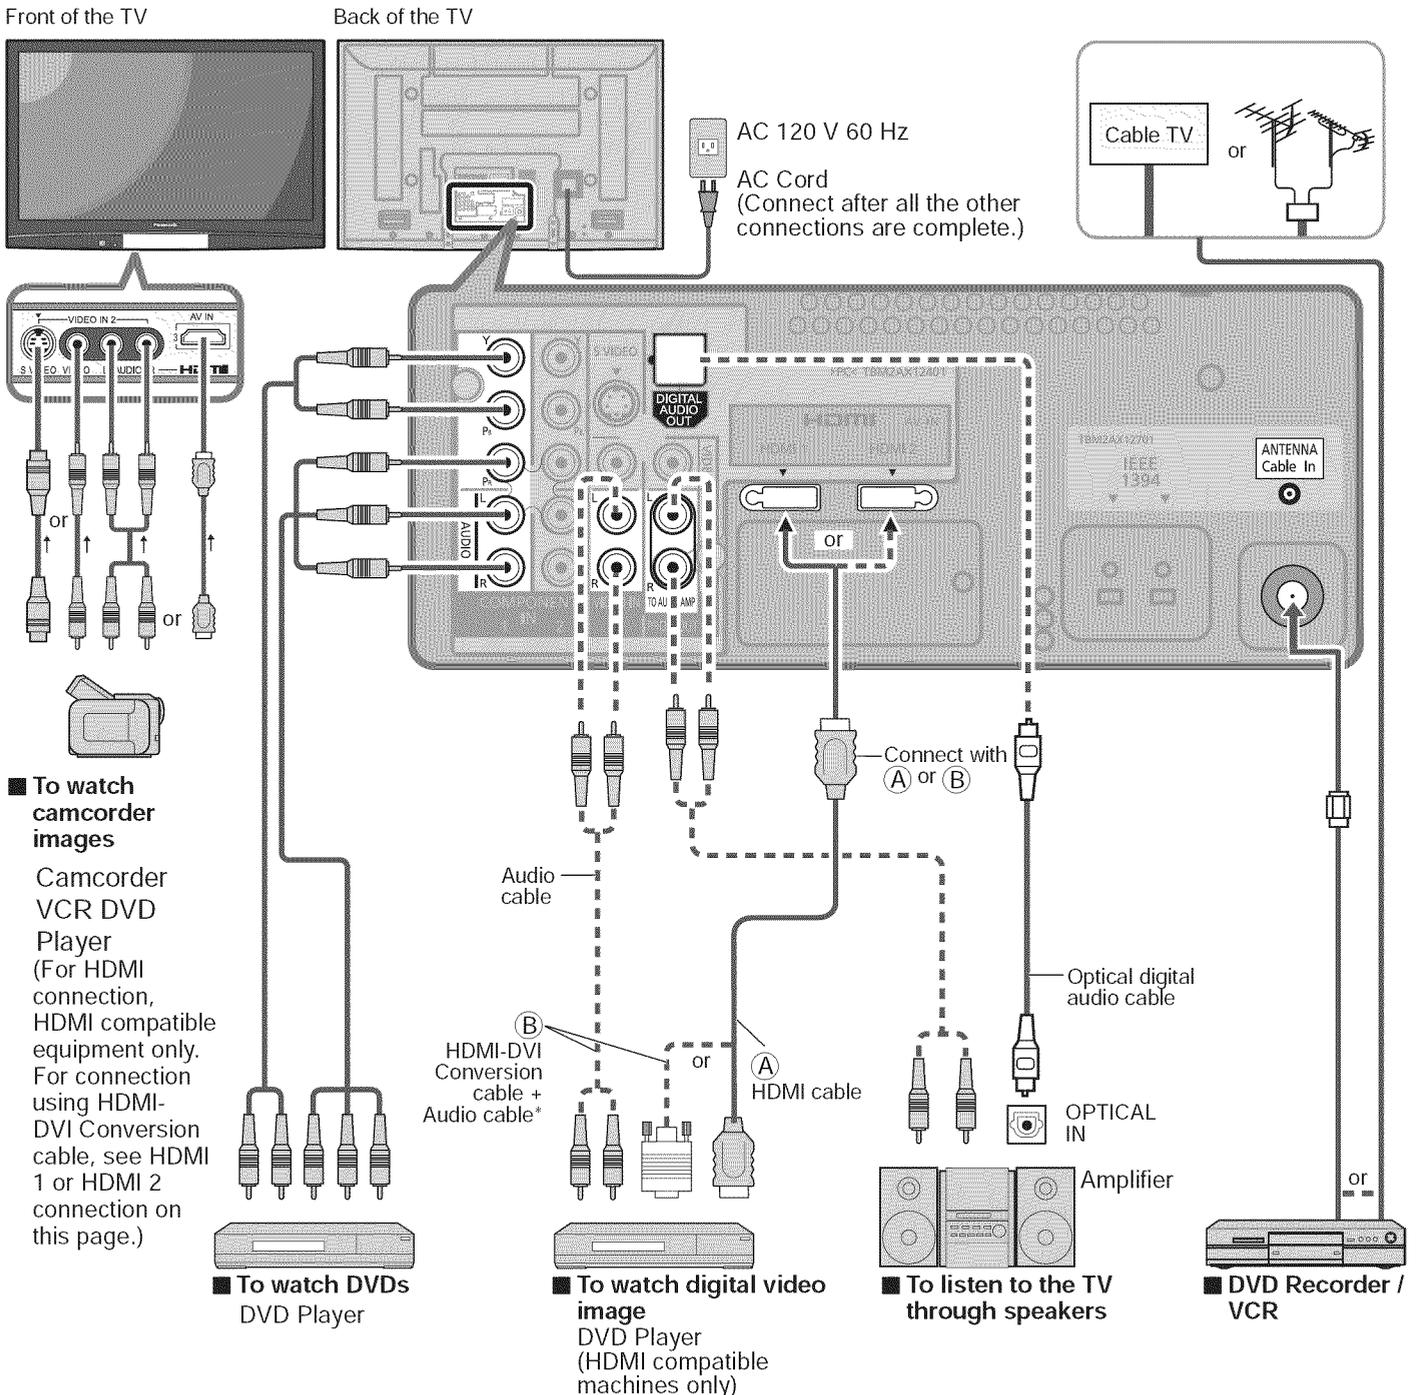

## Note

- The picture and audio input signals connected to a terminal specified in "Monitor out" (p. 37) cannot be output from "PROG OUT" terminals. However, audio output can be obtained from "DIGITAL AUDIO OUT" terminal.
  - To prevent howling and image oscillation, set the "Monitor out" setting when connecting the VCR with loop-connection. (p. 26, 37)
  - When equipment (DVD, etc.) is connected to HDMI or COMPONENT terminals, no video signals can be passed through PROG OUT terminal.
  - When receiving digital channel signals, all digital formats are down-converted to composite NTSC video to be output through the PROG OUT terminals.
- \* Please see p. 24-25 for setup when using an external analog audio cable with an HDMI to DVI cable.

## VIERA Link™ Connections

Follow the connection diagrams below for HDAVI control of a single piece of AV equipment such as a DVD recorder (DIGA), RAM theater, or Player theater system. Refer to page 28-31 for Setup Menu settings and additional control information.

- Optional HDMI and/or optical cables are not included.

If connection (or setting) of equipment compatible with HDAVI control is changed, switch the power of this unit Off and On again while the power of all equipment is On (so that the unit can correctly recognize the connected equipment) and check that the DVD recorder (DIGA), RAM theater, and Player theater playback operate.

### Note

- HDMI 1 is recommended.


When connecting to HDMI 2/HDMI 3, set the input mode to HDMI 2/HDMI 3 (p. 22) initially before connecting to HDMI 2/HDMI 3. After connection, confirm the HDMI control functions (p. 28-31).

### ■ Connecting this unit to the DVD recorder (DIGA), RAM theater, or Player theater

- For DVD recorder (DIGA): Connect with HDMI cable
- For RAM theater and Player theater: Connect with the HDMI and audio cables. If audio cable is not connected, you cannot listen to the TV program through the theater system.

### ■ Connecting this unit to a DVD recorder (DIGA) AV amp

When using an "VIERA Link" audio-video amplifier and a compatible DVD recorder (DIGA) use a daisy chain connection as shown below.

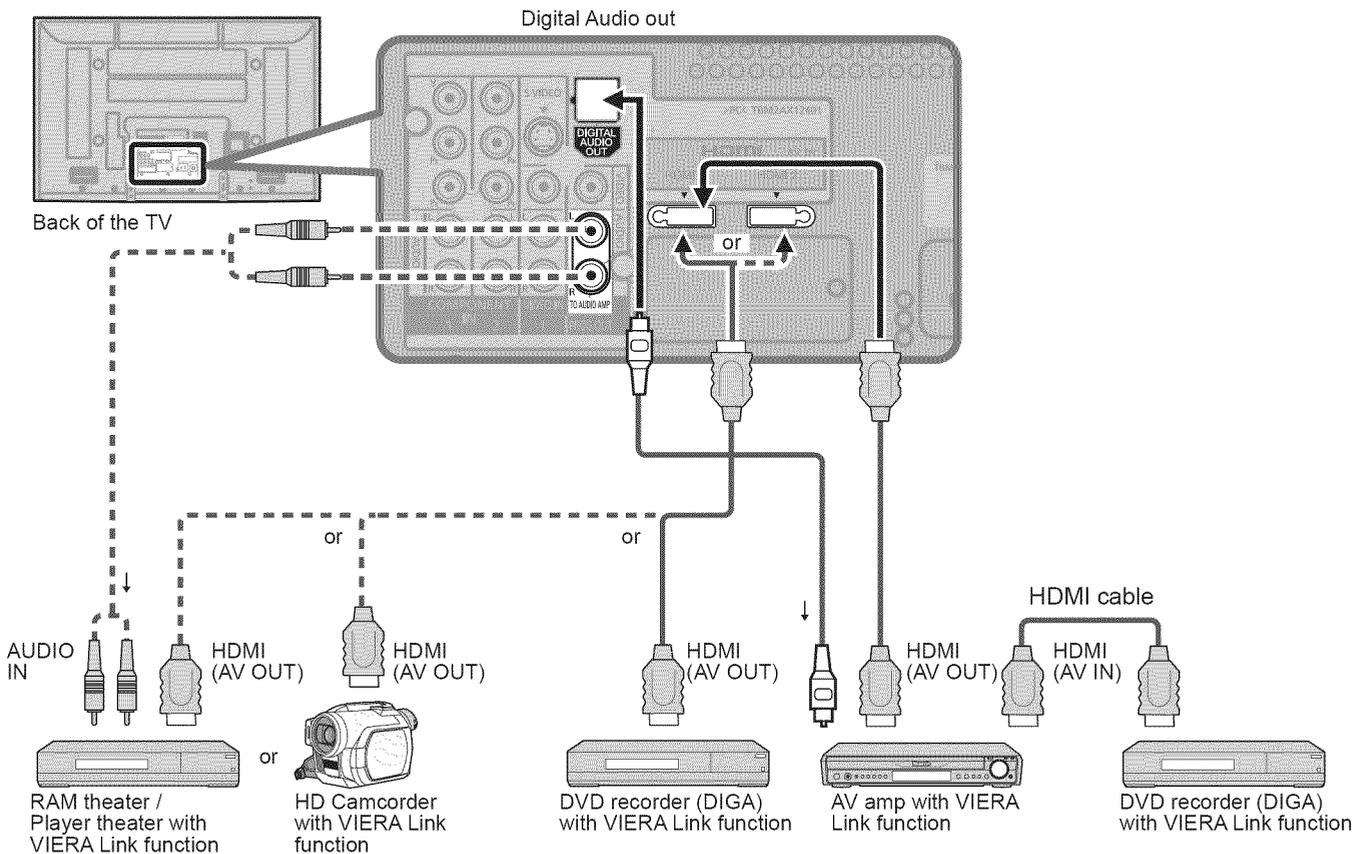

- One AV amp and one DVD recorder (DIGA) can be operated with this unit.
- Be sure to connect the AV amp between this unit and the DVD recorder (DIGA).

### ■ Setting of this unit after connection

After making connections as shown above, set "VIERA Link" (under "VIERA Link setting") to "On" using the Setup menu. (p. 23, 28-29).

### Note

- Individual HDMI equipment may require additional menu settings specific to each model. Please refer to their respective operating instruction manuals.
- When audio from other equipment connected to this unit via HDMI is output using "DIGITAL AUDIO OUT" of this unit, the system switches to 2CH audio. (When connecting to an AV amp via HDMI, you can enjoy higher sound quality.)
- About HDMI cable for connecting Panasonic HD camcorder, read the manual of the equipment.

# Remote Control Operation/Code List

The following explains how to operate external devices with the TV's remote control.

- Register the remote control codes (p. 39) if you want to operate an external device from another manufacturer. (p. 43-44)

## Note

- Operation may not be possible depending on the available memory size of the remote control.  
This remote control is not designed to cover operation of all functions of all models.

## Remote Control Operation List

This chart defines which keys are operational after programming (if needed) while in the selected remote control mode, CABLE, DBS, VCR, or DVD.

KEY NAME	VCR MODE	DBS/CBL MODE		DVD MODE
		(DBS)	(CBL)	
POWER	Power	Power	Power	Power
SAP	—	LIST	LIST	DVD AUDIO
TV VIDEO	TV Input Switch	TV Input Switch	TV Input Switch	TV Input Switch
TV MENU	—	Menu	Menu	Functions
EXIT	—	Exit	Exit	—
SELECT OK	—	Up/Down/Left/Right	Up/Down/Right/Left	Up/Down/Right/Left
	—	Select	Select	Enter
GUIDE SUB MENU	—	Guide	Guide	Sub Menu
RETURN	—	PPV/VOD	PPV/VOD	Return
R	—	Red	A	Red
G	—	Green	B	Green
B	—	Blue	C	Blue
Y	—	Yellow	D	Yellow
CH	Channel Up/Down	Channel Up/Down	Channel Up/Down	Channel Up/Down
VOL	TV Volume Up/Down	TV Volume Up/Down	TV Volume Up/Down	TV Volume Up/Down
FORMAT	—	Aspect	Aspect	—
FAVORITE	—	Favorite	Favorite	Direct Navigator
INFO	Onscreen Display	Info	Info/Display/OSD	Onscreen Display
MUTE	TV Mute	TV Mute	TV Mute	TV Mute
0-9	0-9	0-9	0-9	0-9
LAST	—	Last Channel	Last Channel	Drive Select
—	—	Sub Channel	Music	PROG (Sub Channel)
PAGE SKIP	—	Page Down/Up	Page Down/Up	Skip Reverse/Forward
TV/VCR GAME	TV/VCR Switch	TV/DBS Switch	TV/CBL Switch	—
REWIND FAST FORWARD	Rewind/Fast Forward	Rewind/Fast Forward	Rewind/Fast Forward	Reverse/Forward
REC	VCR Record	PVR Record *1	PVR Record *1	Record
STOP	Stop	Stop	Stop	Stop
PAUSE	Pause	Pause	Pause	Pause
PLAY	Play	Play	Play	Play

\*1: Combination type

## Remote Control Code List

### Cable Converter (C) ( )

Brand	Code	Brand	Code	Brand	Code	Brand	Code
ABC	0003, 0007, 0008	Hytex	0007	Philips	0317, 1305	Supercable	0276
ADB	2092	I3 Micro	1602	Pioneer	0144, 0533, 0877, 1877	Supernax	0883
Americast	0899	Jerrold	0003, 0012, 0276, 0476, 0810	Pulsar	0000	Thomson	1256
Amino	1602, 1822	Memorex	0000	Quasar	0000	Tocom	0012, 0059
Bell South	0899	Motorola	0276, 0476, 0810, 1106, 1187, 1254, 1376, 1951	RadioShack	0883	Tox	0003
ClearMaster	0883	MTS	1951	RCA	0021, 1256	Toshiba	0000
ClearMax	0883	Multitech	0883	Regal	0273, 0279	Tristar	0883
Contec	0019	Myrio	1802, 1822	Runco	0000	United Artists	0007
Coolmax	0883	Oak	0007, 0019	Samsung	0144	V2	0883
Digeo	1187	Optimus	0021	Scientific Atlanta	0008, 0477, 0877, 1877	Viewmaster	0883
Director	0476	Pace	0008, 0237, 1877	Sejin	1802	Vision	0883
General Instrument	0003, 0276, 0476, 0810	Panasonic	0000, 0021, 0107, 0823	Sony	1006	Vortex View	0883
GoldStar	0144	Paragon	0000	Spurrier	0021	Zenith	0000, 0525, 0899
Hamlin	0009, 0273			Starcom	0003		

### Cable/PVR Combination (C) ( )

Americast	0899	Jerrold	0810	Pioneer	0877, 1877	Supercable	0276
Amino	1822	Motorola	0810, 1106, 1187, 1376	RCA	1256	Thomson	1256
Digeo	1187	Myrio	1822	Scientific Atlanta	0877, 1877	Zenith	0899
General Instrument	0810	Pace	0237, 1877	Sony	1006		

### Satellite Receiver (S) ( )

AlphaStar	0772	GE	0568	Magnavox	0722, 0724	RCA	0143, 0566, 0855, 1392
Bell ExpressVu	0775, 1170	General Instrument	0899	Memorex	0724	Samsung	1108, 1109, 1276, 1377, 1442, 1609
Chaparral	0216	GOI	0775, 1775	Mitsubishi	0749	Sanyo	1219
Coolsat	1806	Goodmans	1246	Motorola	0869	Sony	0639, 1639, 1640
Crossdigital	1109	Hisense	1535	NEC	1270	Star Choice	0869
DirectTV	0099, 0247, 0392, 0566, 0839, 0724, 0749, 0819, 1076, 1108, 1109, 1142, 1189, 1377, 1392, 1414, 1442, 1443, 1444, 1609, 1639, 1640, 1749, 1856	Hitachi	0819, 1250	Next Level	0889	Tivo	1142, 1442, 1443, 1444
Dish Network System	0775, 1005, 1170, 1505, 1775	HTS	0775, 1775	Panasonic	0152, 0247, 0701, 1189, 1786	Toshiba	0749, 0790, 1285, 1749
Dishpro	0775, 1005, 1505, 1775	Hughes Network Systems	0749, 1142, 1442, 1443, 1444, 1749	Pansat	1807	UltimateTV	1392, 1640
Echostar	0775, 1005, 1170, 1505, 1775	Humax	1781, 1790	Paysat	0724	Ultrasat	1806
Expressvu	0775, 1775	ILo	1535	Philips	0099, 0722, 0724, 0749, 0856, 1076, 1142, 1442, 1749	Uniden	0722, 0724
Fortec Star	1821, 1948	Jansel	0152	Proscan	0392, 0566	US Digital	1535
		JVC	0775, 1170, 1775	Proton	1535	USDTV	1535
		LG	1228, 1414	RadioShack	0869	Voom	0869
						Zenith	1810, 1856

### DBS/PVR Combination (S) ( )

Bell ExpressVu	0775, 1170	Echostar	0775, 1170, 1505	Motorola	0869	Sony	0639, 1640
DirectTV	0099, 0392, 0639, 1076, 1142, 1377, 1392, 1442, 1443, 1444, 1640	Expressvu	0775	Philips	1142, 1442	Star Choice	0869
Dish Network System	0775, 1505	Hughes Network Systems	1142, 1442, 1443, 1444	Proscan	0392	Tivo	1142, 1442, 1443, 1444
Dishpro	0775, 1505	JVC	1170	RCA	1392	Zenith	1810
				Samsung	1442		

### VCR (V) ( )

ABS	1972	GE	0035, 0060, 0202, 0240, 0761, 0807, 1039, 1060, 2613	Multitech	0000, 0072	Sanyo	0048, 0047, 0104, 0159, 0240
Accurian	0000	Go Video	0432, 0526, 0614, 0643, 1137	NEC	0038, 0040, 0041, 0050, 0067, 0104	Scott	0043, 0045, 0121, 0184, 0212
Admiral	0048, 0209	GoldStar	0037, 0038, 1137, 1237	Nikko	0037	Sears	0000, 0035, 0037, 0042, 0046, 0047, 0104, 0105, 1237
Adventura	0000	Gradiente	0000	Nikon	0034	Sharp	0048, 0807, 0848
Aiko	0278	Harley Davidson	0000	Niveus Media	1972	Shintom	0072
Aiwa	0000, 0037, 0124, 0307, 0468	Harman/Kardon	0038, 0075, 0081	Northgate	1972	Shogun	0240
Akai	0041, 0061, 0106, 0175, 0242	Harwood	0068, 0072	Olympus	0035, 0226	Singer	0072
Alienware	1972	Headquarter	0046	Onkyo	0222	Sonic Blue	0614, 0616, 1137
Allegro	1137	Hewlett Packard	1972	Optimus	0037, 0048, 0104, 0162, 0432, 0593, 1048, 1062, 1162, 1262	Sony	0000, 0032, 0033, 0034, 0035, 0636, 1032, 1972
America Action	0278	Hi-Co	0047	Orion	0002, 0184, 0209, 0479, 1479	Stack 9	1972
American High	0035	Hitachi	0000, 0041, 0042, 0089, 0105, 2613	Panasonic	0035, 0077, 0102, 0162, 0225, 0226, 0227, 0246, 0378, 0485, 0514, 0516, 0837, 1035, 1062, 1162, 1244, 1262, 1562, 1807, 1808, 1809	STS	0042
Asha	0240	Howard Computers	1972	Panasonic	0035, 0077, 0102, 0162, 0225, 0226, 0227, 0246, 0378, 0485, 0514, 0516, 0837, 1035, 1062, 1162, 1244, 1262, 1562, 1807, 1808, 1809	Sylvania	0000, 0035, 0043, 0081, 0110, 0593, 1593, 1781
Audio Dynamics	0040	HP	1972	Penney	0035, 0037, 0038, 0040, 0042, 0240, 1035, 1237	Symphonic	0000, 0593, 1593
Audiovox	0037, 0278	Hughes Network Systems	0042, 0739	Pentax	0042, 0105,	Systemax	1972
Beaumarck	0240	Humax	0739, 1797, 1888	Philco	0035	Tagar Systems	1972
Bell & Howell	0104	Hush	1972	Philips	0035, 0081, 0110, 0618, 0739, 1081, 1181	Tashiko	0037
Broksonic	0002, 0121, 0184, 0209, 0348, 0479, 1479	IBUYPOWER	1972	Pilot	0037	Tatung	0041
Calix	0037	Instant Replay	0035, 0226	Pioneer	0067, 1337	Teac	0000, 0041
Canon	0035, 0102	Jensen	0041	Polk Audio	0081	Technics	0035, 0162, 0246
Captive Works	2167	JVC	0008, 0041, 0067, 2079	Presidian	1593	Teknika	0000, 0035, 0037
Carver	0081	KEC	0037, 0278	Profrontronic	0240	Thomas	0000
CCE	0072, 0278	Kenwood	0038, 0041, 0067	Proscan	0060, 0202, 0761, 1060	Tivo	0618, 0636, 0739, 1337, 1996
CineVision	1137	KLH	0072	Protect	0072	TMK	0208, 0240
Citizen	0037, 0278, 1278	Kodak	0035, 0037	Pulsar	0039	Toshiba	0043, 0045, 0212, 0845, 1008, 1145, 1972, 1988, 1996
Colt	0072	LG	1037, 1137, 2010	Quarter	0046	Totevision	0037, 0240
Craig	0037, 0047, 0072, 0240	Linksys	1972	Quartz	0046	Touch	1972
Curtis Mathes	0035, 0041, 0060, 0162, 1035	Lloyd's	0000, 0208	Quasar	0035, 0077, 0162, 1035, 1162	Unitech	0240
Cybermax	0240	Logik	0072	RadioShack	0000, 1037	Vector	0045
CyberPower	1972	LXI	0037	Radix	0037	Vector Research	0038, 0040
Daewoo	0045, 0278, 0561, 0637, 1137, 1278	Magnasonic	0593, 1278	Randex	0037	Video Concepts	0040, 0045, 0081
DBX	0040, 0050	Magnavox	0000, 0035, 0039, 0081, 0110, 0149, 0563, 0593, 1335, 1593, 1781	RCA	0042, 0060, 0077, 0105, 0106, 0149, 0202, 0240, 0761, 0807, 0890, 1035, 1060, 2613	Videomagic	0037
Dell	1972	Magnin	0240	Realistic	0000, 0035, 0037, 0046, 0047, 0048, 0104	Videosonic	0240
Denon	0042	Maraantz	0035, 0081	ReplayTV	0614, 0616	Vision	1972
Dimensia	2613	Marta	0037	Ricovision	1972	Villain	0000
DirectTV	0739	Media Center PC	1972	Ricoh	0034	Voodoo	1972
Durabrand	0038, 0039	MEI	0035	Rio	1137	Wards	0000, 0035, 0042, 0047, 0048, 0060, 0072, 0081, 0149, 0212, 0240
Dynatech	0000	Memorex	0000, 0035, 0037, 0039, 0046, 0047, 0048, 0104, 0162, 0209, 0240, 0307, 0348, 0479, 1037, 1162, 1237, 1262	Runco	0039	White Westinghouse	0072, 0209, 0637
Electrohome	0037	MGA	0043, 0061, 0240	Salora	0075	XR-1000	0000, 0035, 0072
Electrosonic	0037	MGN Technology	0240	Samtron	0643	Yamaha	0038
Emerex	0032	Microsoft	1972	Sanky	0039, 0048	Zenith	0000, 0033, 0034, 0039, 0209, 0479, 0637, 1137, 1139, 1479
Emerson	0000, 0002, 0037, 0043, 0061, 0068, 0121, 0184, 0208, 0209, 0212, 0278, 0479, 0561, 0593, 0637, 1278, 1479, 1593	Mind	1972	Sansui	0000, 0041, 0067, 0209, 0479, 1479		
ESA	1137	Mincolta	0042, 0105				
Fisher	0047, 0104	Mitsubishi	0043, 0061, 0067, 0075, 0173, 0214, 0242, 0443, 0807				
Fuji	0033, 0035	Motorola	0035, 0048				
Funai	0000, 0593, 1335, 1593	MTC	0000, 0240				
Garrard	0000						
Gateway	1972						

# Remote Control Operation/Code List (Continued)

## Remote Control Code List

### DBS/PVR Combination (V) ( )

Brand	Code	Brand	Code	Brand	Code	Brand	Code
DirectTV	0739	Hughes Network Systems	0739	Philips	0739	Tivo	0739
				Samsung	0739		

### DVD-Recorder (V) ( )

Magnavox 0000

### PVR (V) ( )

ABS	1972	Hughes Network Systems	0739	Northgate	1972	Tagar Systems	1972
Alienware	1972			Panasonic	0614, 0616, 1807, 1808, 1809	Tivo	0618, 0636, 0739, 1337
Captive Works	2167	Humax	0739, 1797, 1988	Philips	0618, 0739	Toshiba	1008, 1972, 1988, 1996
CyberPower	1972	Hush	1972	Pioneer	1337	Touch	1972
Dell	1972	iBUYPOWER	1972	RCA	0880	Viewsonic	1972
DirectTV	0739	LG	2010	ReplayTV	0614, 0616	Woodoo	1972
Gateway	1972	Linksys	1972	Samsung	0739	ZT Group	1972
Go Video	0614	Media Center PC	1972	Sonic Blue	0614, 0616		
Hewlett Packard	1972	Microsoft	1972	Sony	0636, 1972		
Howard Computers	1972	Mind	1972	Stack 9	1972		
HP	1972	Niveus Media	1972	Systemax	1972		

### DVD (Y) ( )

Accurian	0675, 1072, 1416	Emerson	0591, 0675, 1268	Malata	0782, 1159	Sampo	0698, 0752
Adcom	1094	Enterprise	0591	Marantz	0539	Samsung	0199, 0490, 0573, 0820, 0899, 1044, 1075, 1470
Aiwa	0641	ESA	1268	McIntosh	1273	Sansui	0695
Akai	0695, 0770, 0899, 1089	Fisher	0670	Memorex	0695, 0831, 1270	Sanyo	0670, 0695, 0873
Alco	0790	Funai	0675, 1268, 1334	Microsoft	0522, 1708, 2083	Sensory Science	1158
Alliegro	0869	Gateway	1073, 1077, 1158	Mintek	0717, 0839, 1472	Sharp	0630, 0675, 0752, 1256
Amphion Media Works	0872, 1245	GE	0522, 0717, 0815	Mitsubishi	0521, 1521	Sharper Image	1117
AMW	0872, 1245	Go Video	0715, 0741, 0744, 0783, 0833, 0869, 1044, 1075, 1099, 1144, 1158, 1304, 1730	Momitsu	1082	Sherwood	0633, 0770, 1043, 1077
Apex Digital	0672, 0717, 0755, 0794, 0796, 0797, 1004, 1020, 1056, 1061, 1100	Go Vision	1072	NAD	0692, 0741	Shinonic	0533, 0839
Arrgo	1023	GoldStar	0741	NEC	0785	Sigma Designs	0674
Aspire Digital	1168, 1407	GPX	0699, 0769	Nesa	0717	Sonic Blue	0869, 1099
Astar	1678, 1679	Greenhill	0717	Next Base	0826	Sony	0533, 0854, 1033, 1069, 1070, 1431, 1432, 1433, 1516, 1533, 1536, 1548, 1791, 1824, 1892, 1903, 1904, 1934, 1981, 2020, 2043
AudioLogic	0736	Harman/Kardon	0582, 0702	NexxTech	1402	Sova	1122
Audiovox	0790, 1041, 1072, 1121, 1122	Helios	2080	Norcent	0872, 1003, 1107, 1265	Sungale	1074
Axon	1072	Hello Kitty	0831	Nova	1517	SVA	0860, 1105
B & K	0655, 0662	Hitachi	0573, 0664, 1247	Onkyo	0503, 0627, 0792, 1769	Sylvania	0675, 1268
BBK	1224	Hiteker	0672	OptoMedia Electronics	0896	Symphonic	0675
Bel Canto Design	1571	Humax	1500, 1588	Ortron	0651	TAG McLaren	0894
Blaupunkt	0717	iLo	1348, 1472	Panasonic	0458, 0490, 0632, 0703, 1010, 1011, 1362, 1462, 1464, 1490, 1641, 1762, 1907, 1908, 1909, 1910, 1925, 1986, 1990, 2017, 2060, 2061, 2062	Teac	0790
Blue Parade	0571	Initial	0717, 1472	Philco	0675	Technics	0490, 0703
Broksonic	0695, 1419	Insighia	1268, 2095	Philips	0503, 0539, 0646, 0675, 1267, 1340, 1354, 2056, 2084	Technosonic	0730
CAVS	1057	Integra	0627	Philips	0503, 0539, 0646, 0675, 1267, 1340, 1354, 2056, 2084	Techwood	0692
Cinea	0831	Jaton	1078	Pioneer	0142, 0525, 0571, 0631, 0632, 1571	Terapin	1031
Cinego	1399	JBL	0702	Polaroid	1020, 1061, 1086, 1245, 1316, 1478, 2130	Theta Digital	0571
CineVision	0833, 0869, 0876	JSI	1423	Polk Audio	0539	Tivo	1503
Citizen	0695, 1277, 1587, 2116	JVC	0558, 0623, 0867, 1164, 1275, 1550, 1602	Portland	0770	Toshiba	0503, 0695, 1045, 1154, 1503, 1588, 1608, 1769, 1854
Coby	0778, 0852, 1086, 1107, 1165, 1177, 1351, 1628	Kawasaki	1049, 1051, 1675	Presidian	0675, 1072	Tredex	0799, 0800, 0803, 0804
Craig	0831	Kenwood	0490, 0534, 0682	Princeton	0674	Urban Concepts	0503
Curtis Mathes	1087	KLH	0717, 0790, 1020, 1149	Proscan	0522	US Logic	0839
CyberHome	0816, 0874, 1023, 1024, 1117, 1129, 1502, 1537	Konka	0711, 0721	ProVision	0778	Venturer	0790
Daewoo	0705, 0784, 0833, 0869, 1169, 1172, 1234, 1242, 1441	Koss	0651, 0896, 1423	Qwestar	0651	Vizio	1064, 1226
Denon	0490, 0634, 1634	Landel	0826	RCA	0522, 0571, 0717, 0790, 0822, 1022, 1132, 1769	Vocopro	1027, 1360
Desay	1407	Lasonic	0798, 1173	Rio	0869	Xbox	0522, 1708, 2083
Diamond Vision	1316	Lennox	1127	RJTech	1360	Xwave	1001
Disney	0675, 1270	LG	0591, 0741, 0869	Rotel	0623, 1178	Yamaha	0490, 0497, 0539, 0545
Dual	1068, 1085	LiteOn	1058, 1158, 1416, 1440, 1656	Rova	0823	Zenith	0503, 0591, 0741, 0869
Durabrand	1127	Loewe	0511			Zoece	1265
DVD2000	0521	Magnavox	0503, 0539, 0646, 0675, 1268, 1354, 1472, 1506				
Electrohome	2116						

### DVD-Recorder (Y) ( )

Accurian	0675, 1416	Funai	0675, 1334	Panasonic	0490, 1010, 1011, 2060, 2061, 2062	Sony	1033, 1069, 1070, 1431, 1432, 1433, 1536
Apex Digital	1056	Gateway	1073, 1158	Philips	0646, 1340	Sylvania	0675
Aspire Digital	1168	Go Video	0741, 1158, 1304, 1730	Pioneer	0631	Toshiba	1588
Broksonic	1419	iLo	1348	Polaroid	1086, 2130	Zenith	0741
Citizen	2116	JVC	1164, 1275	RCA	0522		
Coby	1086	LG	0741	Samsung	0490, 1470		
CyberHome	1129, 1502	LiteOn	1158, 1416, 1440	Sensory Science	1158		
Electrohome	2116	Magnavox	0646, 0675, 1506	Sharp	0675		

### Blu-ray Disc (Y) ( )

LG	0741	Philips	2084	Samsung	0199
Panasonic	1641, 2061, 2062	Pioneer	0142	Sony	1516

### HD-DVD (Y) ( )

LG	0741	Onkyo	1769	RCA	1769	Toshiba	1769
----	------	-------	------	-----	------	---------	------

### HTiB (Y) ( )

Aiwa	0641	Panasonic	0458, 1779, 1907, 1908, 1909, 1910, 1925, 1990, 2017	Rio	0869	Teac	0790
Audiovox	0790			Sherwood	1077	Toshiba	1854
KLH	0790	Philips	1267	Sonic Blue	0869	Venturer	0790
Koss	0651	Polk Audio	0539	Sony	1824, 1892, 1903, 1904, 1934, 1981, 2020, 2043	Yamaha	0497
Ortron	0651	RCA	0790				

# Ratings List for Lock

“V-chip” technology enables you to lock channels or shows according to standard ratings set by the entertainment industry. (p. 33)

## U.S. MOVIE RATINGS (MPAA)

NR	NO RATING (NOT RATED) AND NA (NOT APPLICABLE) PROGRAMS. Movie which has not been rated or where rating does not apply.
G	GENERAL AUDIENCES. All ages admitted.
PG	PARENTAL GUIDANCE SUGGESTED. Some material may not be suitable for children.
PG-13	PARENTS STRONGLY CAUTIONED. Some material may be inappropriate for children under 13.
R	RESTRICTED. Under 17 requires accompanying parent or adult guardian.
NC-17	NO ONE 17 AND UNDER ADMITTED.
X	ADULTS ONLY.

## U.S. TV PROGRAMS RATINGS (U. S. TV)

Age-based Group	Age-based Ratings	Possible Content Selections	Description
NR (Not Rated)	TV-NR	<ul style="list-style-type: none"> <li>Viewable</li> <li>Blocked</li> </ul>	Not Rated.
Youth	TV-Y	<ul style="list-style-type: none"> <li>Viewable</li> <li>Blocked</li> </ul>	All children. The themes and elements in this program are specifically designed for a very young audience, including children from ages 2-6.
	TV-Y7	<ul style="list-style-type: none"> <li>FV Blocked</li> <li>Viewable</li> <li>Blocked</li> </ul>	Directed to older children. Themes and elements in this program may include mild physical or comedic violence, or may frighten children under the age of 7.
Guidance	TV-G	<ul style="list-style-type: none"> <li>Viewable</li> <li>Blocked</li> </ul>	General audience. It contains little or no violence, no strong language, and little or no sexual dialogue or situations.
	TV-PG	<ul style="list-style-type: none"> <li>D,L,S,V (all selected)</li> <li>Any combination of D, L, S, V</li> </ul>	Parental guidance suggested. The program may contain infrequent coarse language, limited violence, some suggestive sexual dialogue and situations.
	TV-14	<ul style="list-style-type: none"> <li>D,L,S,V (all selected)</li> <li>Any combination of D, L, S, V</li> </ul>	Parents strongly cautioned. This program may contain sophisticated themes, sexual content, strong language and more intense violence.
	TV-MA	<ul style="list-style-type: none"> <li>L,S,V (all selected)</li> <li>Any combination of L, S, V</li> </ul>	Mature audiences only. This program may contain mature themes, profane language, graphic violence, and explicit sexual content.

FV: Fantasy/Cartoon Violence. V: Violence S: Sex L: Offensive Language D: Dialogue with sexual content.

## CANADIAN ENGLISH RATINGS (C. E. L. R.)

E	Exempt - Exempt programming includes: news, sports, documentaries and other information programming, talk shows, music videos, and variety programming.
C	Programming intended for children under age 8. No offensive language, nudity or sexual content.
C8+	Programming generally considered acceptable for children 8 years and over. No profanity, nudity or sexual content.
G	General programming, suitable for all audiences.
PG	Parental Guidance suggested. Some material may not be suitable for children.
14+	Programming contains themes or content which may not be suitable for viewers under the age of 14. Parents are strongly cautioned to exercise discretion in permitting viewing by pre-teens and early teens.
18+	18+ years old. Programming restricted to adults. Contains constant violence or scenes of extreme violence.

## CANADIAN FRENCH RATINGS (C. F. L. R.)

E	Exempt - Exempt programming.
G	General - Programming intended for audience of all ages. Contains no violence, or the violence content is minimal or is depicted appropriately.
8 ans+	8+ General - Not recommended for young children. Programming intended for a broad audience but contains light or occasional violence. Adult supervision recommended.
13 ans+	Programming may not be suitable for children under the age of 13 - Contains either a few violent scenes or one or more sufficiently violent scenes to affect them. Adult supervision strongly suggested.
16 ans+	Programming may not be suitable for children under the age of 16 - Contains frequent scenes of violence or intense violence.
18 ans+	Programming restricted to adults. Contains constant violence or scenes of extreme violence.

### Caution

- The V-Chip system that is used in this set is capable of blocking “NR” programs (non rated, not applicable and none) as per FCC Rules Section 15.120(e)(2). If the option of blocking “NR” programs is chosen “unexpected and possibly confusing results may occur, and you may not receive emergency bulletins or any of the following types of programming:”
  - Emergency Bulletins (Such as EAS messages, weather warnings and others)
  - Locally originated programming • News • Political • Public Service Announcements • Religious • Sports • Weather

# Technical Information


## Closed Caption (CC)

- For viewing the CC of digital broadcasting, set the aspect to FULL (If viewing with H-FILL, JUST, ZOOM, or 4:3; characters might be cut off).
- The CC can be displayed on the TV if the receiver (such as a satellite receiver) has the CC set On using the Component or HDMI connection to the TV.
- If the CC is set On both the receiver and TV when the signal is 480i (except for the HDMI connection), the CC may overlap on the TV.
- If a digital program is being output in analog format, the CC data will also be output in analog format.
- If the recorder or output monitor is connected to the TV, the CC needs to be set up on the recorder or output monitor.

## Aspect Ratio (FORMAT)


Press the FORMAT button to cycle through the aspect modes, This lets you choose the aspect depending on the format of the received signal and your preference. (p. 19)  
(e.g.: in case of 4:3 image)

### ● FULL

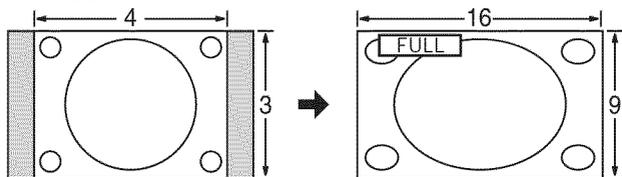


Enlarges the 4:3 image horizontally to the screen's side edges.  
(Recommended for anamorphic picture)

### ● JUST

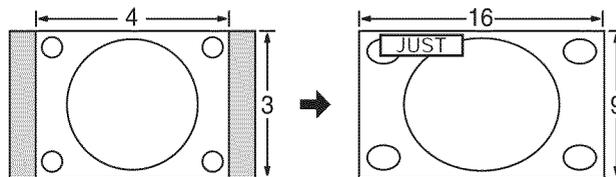


Stretches to justify the 4:3 image to the four corners of the screen.  
(Recommended for normal TV broadcast)

### ● H-FILL

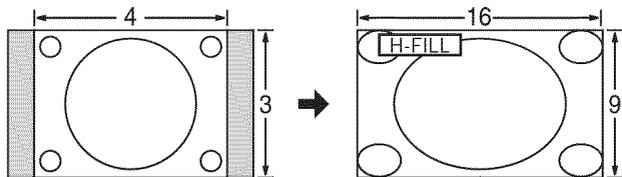


Enlarges the 4:3 image horizontally to the screen's side edges.  
The side edges of the image are cut off.

### ● 4:3

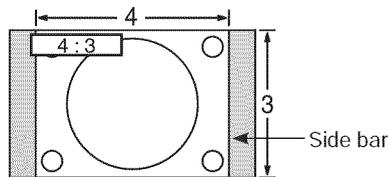

Standard  
(Note that "Image retention" of the side bar may occur from displaying it for a long time.)

### ● ZOOM

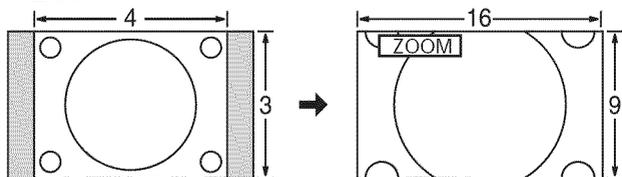

Enlarges the 4:3 image to the entire screen.  
(Recommended for Letter Box)

### Note

- 480i (4:3), 480i (16:9), 480p (4:3), 480p (16:9):  
FULL, JUST, 4:3 or ZOOM
- 1080p / 1080i / 720p:  
FULL, H-FILL, JUST, 4:3 or ZOOM

### ● Zoom adjust

Vertical image position and size can be adjusted in "ZOOM".

① Select "Zoom adjust" on the "Picture" menu. (p. 24-25)

② V-position: Vertical position adjustment

③ V-size: Vertical size adjustment



- To reset the aspect ratio →  (OK)

## Data format for SD Card browsing

Photo:	Still images recorded with digital still cameras compatible with JPEG files of DCF* and EXIF** standards
Data format:	Baseline JPEG (Sub-sampling: 4:4:4, 4:2:2 or 4:2:0)
Max. number of files:	9,999
Image resolution:	160 x 120 to 10,000,000


\* DCF (Design rule for camera file system): A Japan Electronics and Information Technology Industries Association's standard  
 \*\* EXIF (Exchangeable Image File Format)

### Caution

- A JPEG image modified with a PC may not be displayed.
- Partly degraded files might be displayed at a reduced resolution.

### Note

- Folder structure viewed in PC

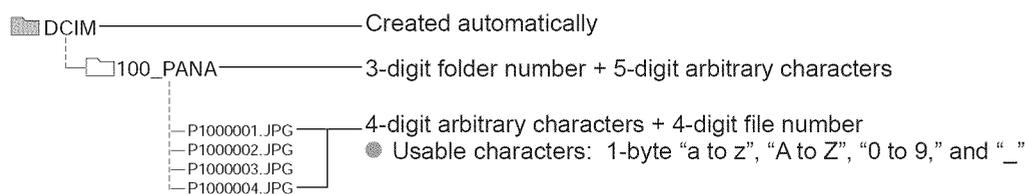

- The folder and file names may be different depending on the digital camera used.
- For the suitable SD Memory Cards, please confirm the latest information on the following website.  
<http://panasonic.co.jp/pavc/global/cs> (This site is in English only)

## Cautions in handling SD Card:

- Do not remove the card while the unit is accessing data (this can damage card or unit).
- Do not touch the terminals on the back of the card.
- Do not subject the card to a high pressure or impact.
- Insert the card in the correct direction (otherwise, card may be damaged).
- Electrical interference, static electricity, or erroneous operation may damage the data or card.
- Back up the recorded data at regular intervals in case of deteriorated or damaged data or erratic operation of the unit. (Panasonic is not liable for any deterioration or damage of recorded data.)

## SD Card warning messages

Message	Meaning
Is SD card in?	<ul style="list-style-type: none"> <li>● The card is not inserted.</li> </ul>
No file	<ul style="list-style-type: none"> <li>● The card has no data or this type of data is not supported.</li> </ul>
Cannot read file	<ul style="list-style-type: none"> <li>● The file is broken or unreadable.</li> <li>● The TV does not support the format.</li> </ul>

# Technical Information (Continued)

## VIERA Link "HDAVI Control™"

HDMI connections to some Panasonic equipment allow you to interface automatically. (p. 28)

- This function may not work normally depending on the equipment condition.
- The equipment can be operated by other remote controls with this function on even if TV is in Standby mode.
- Image or sound may not be available for the first few seconds when the playback starts.
- Image or sound may not be available for the first few seconds when Input mode is switched.
- Volume function will be displayed when adjusting the volume of the equipment.
- If you connect the same kind of equipment at once (for example: one DIGA to HDMI 1 / another DIGA to HDMI 2), VIERA Link is available for the terminal with the smaller number.
- If you connect equipment that has "HDAVI Control 2" (or more) function to the TV with HDMI cable, the sound from DIGITAL AUDIO OUT terminal can be output as multi channel surround.
- "HDAVI Control 3" is the newest standard (current as of December, 2007) for the HDAVI Control compatible equipment. This standard is compatible with the conventional HDAVI equipment.

## HDMI connection

HDMI (high-definition multimedia interface) allows you to enjoy high-definition digital images and high-quality sound by connecting the TV unit and the devices.

HDMI-compatible equipment (\*1) with an HDMI or DVI output terminal, such as a DVD player, can be connected to the HDMI connector using an HDMI compliant (fully wired) cable.

- HDMI is the world's first complete digital consumer AV interface complying with a non-compression standard.
- If the external equipment has only a DVI output, connect to the HDMI terminal via a DVI to HDMI adapter cable (\*2).
- When the DVI to HDMI adapter cable is used, connect the audio cable to the audio input terminal.
- Audio settings can be made on the "HDMI 1 in", "HDMI 2 in" or "HDMI 3 in" menu screen. (p. 24)

Applicable audio signal sampling frequencies (L.PCM): 48 kHz, 44.1 kHz, 32 kHz

(\*1): The HDMI logo is displayed on an HDMI-compliant device.

(\*2): Enquire at your local digital equipment retailer shop.

### Caution

- Use with a PC is not assumed.
- All signals are reformatted before being displayed on the screen.
- If the connected device has an aspect adjustment function, set the aspect ratio to "16:9".
- These HDMI connectors are "type A".
- These HDMI connectors are compatible with HDCP (High-Bandwidth Digital Content Protection) copyright protection.
- A device having no digital output terminal may be connected to the input terminal of either "COMPONENT", "S VIDEO", or "VIDEO" to receive analog signals.
- The HDMI input terminal can be used with only the following image signals: 480i, 480p, 720p, 1080i and 1080p. Match the output setting of the digital device.
- For details of the applicable HDMI signals, see below.

## Input signals that can be displayed

\* Mark: Applicable input signal for Component (Y, Pb, Pr) and HDMI

	horizontal frequency (kHz)	vertical frequency (Hz)	COMPONENT	HDMI
525 (480) / 60i	15.73	59.94	*	*
525 (480) /60p	31.47	59.94	*	*
750 (720) /60p	45.00	59.94	*	*
1,125 (1,080) /60i	33.75	59.94	*	*
1,125 (1,080)/60p	67.43	59.94	*	*
1,125 (1,080)/60p	67.50	60.00	*	*
1,125(1,080)/24p	26.97	23.98	*	*
1,125(1,080)/24p	27.00	24.00	*	*

### Note

- Signals other than those shown above may not be displayed properly.
- The above signals are reformatted for optimal viewing on your display.

## Picture mode

- Vivid: Provides enhanced picture contrast and sharpness for viewing in a well-lit room.
- Standard: Recommended for normal viewing conditions with subdued room lighting.
- Cinema: For watching movies in a darkened room. It provides a soft, film-like picture.
- Game: For playing video game. This mode will be set automatically if "GAME" is selected from Input label setting (p. 37)
- Custom (Photo): Customizes each item according to your taste. Photo is displayed in JPEG menu.

### Note

- Picture mode will be automatically set to "Standard" if you change the Input label from "GAME" to other labels.
- Picture mode will be automatically set to "Game" if you change from an Input label other than "GAME" to "GAME" label.

## DIGITAL AUDIO OUT terminals

You can enjoy your home theater by connecting a Dolby Digital (5.1 channel) decoder and "Multi Channel" amplifier to the DIGITAL AUDIO OUT terminals.


### Caution

- Depending on your DVD player and DVD-Audio software the copyright protection function may operate and disable optical output.
- External speakers cannot be connected directly to PROG OUT terminals.
- When an ATSC channel is selected, the output from the DIGITAL AUDIO OUT jack will be Dolby Digital. When an NTSC channel is selected, the output will be PCM.  
See pages 40-41 for more information.

## Side Bar

Do not display a picture in 4:3 mode for an extended period, as this can cause "Image retention" to remain on either or both sides of the display field.  
To reduce the risk of such "Image retention", change the brightness of the side bars.  
See pages 26-27 for more information.


- The side bar may flash (alternate black/white) depending on the picture. Using Cinema mode will reduce such flashing (See below).

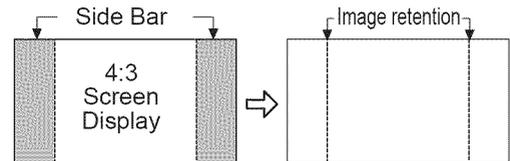

## Scrolling bar

Scrolling bar: To prevent "Image retention", scrolls white horizontal bar from top to bottom on a black screen.

- Press any key except the POWER key to return to previous screen.
- You will return to the previous screen if any key operation has not been performed for 15 minutes.  
See pages 26-27 for more information.

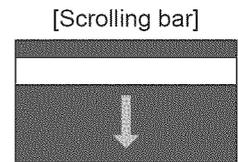

# Care and Cleaning

First, unplug the Power cord plug from the wall outlet.

## Display panel

The front of the display panel has been specially treated. Wipe the panel surface gently using only a cleaning cloth or a soft, lint-free cloth.

- If the surface is particularly dirty, soak a soft, lint-free cloth in diluted mild liquid dish soap (1 part mild liquid dish soap diluted by 100 times the amount of water) and then wring the cloth to remove excess liquid. Use this cloth to wipe the surface of the display panel, then wipe it evenly with a dry cloth of the same type until the surface is dry.
- Do not scratch or hit the surface of the panel with fingernails or other hard objects. Furthermore, avoid contact with volatile substances such as insect sprays, solvents, and thinner; otherwise, the quality of the surface may be adversely affected.

## Cabinet

If the cabinet becomes dirty, wipe it with a soft, dry cloth.

- If the cabinet is particularly dirty, soak the cloth in a weak mild liquid dish soap solution and then wring the cloth dry. Use this cloth to wipe the cabinet and then wipe it dry with a dry cloth.
- Do not allow any mild liquid dish soap to come into direct contact with the surface of the Plasma TV. If water droplets get inside the unit, operating problems may result.
- Avoid contact with volatile substances such as insect sprays, solvents, and thinner; otherwise, the quality of the cabinet surface may be adversely affected or the coating may peel off. Furthermore, do not leave it for long periods in contact with articles made from rubber or PVC.

## Pedestal

### ● Cleaning

Wipe the surfaces with a soft, dry cloth. If the unit is particularly dirty, clean it using a cloth soaked with water to which a small amount of mild liquid dish soap has been added and then wipe with a dry cloth.


Do not use products such as solvents, thinner, or household wax for cleaning, as they can damage the surface coating. (If using a chemically-treated cloth, follow the instructions supplied with the cloth.)

- Do not attach sticky tape or labels, as they can make the surface of the pedestal dirty. Do not allow long-term contact with rubber, vinyl products, or the like. (Doing so will cause deterioration.)


# Specifications

		TH-42PZ80Q	TH-50PZ80Q
<b>Power Source</b>		AC 120 V, 60 Hz	
<b>Power Consumption</b>	<b>Maximum</b>	583 W	700 W
	<b>Standby condition</b>	0.2 W (With CableCARD : 30.0 W)	0.2 W (With CableCARD : 34.0 W)
<b>Plasma Display panel</b>	<b>Drive method</b>	AC type	
	<b>Aspect Ratio</b>	16:9	
	<b>Visible screen size (W × H × Diagonal)</b>	42" class (41.6 inches measured diagonally) 36.2" × 20.4" × 41.6" (922 mm × 518 mm × 1,057 mm)	50" class (49.9 inches measured diagonally) 43.5" × 24.4" × 49.9" (1,106 mm × 622 mm × 1,269 mm)
	<b>(No. of pixels)</b>	2,073,600 (1,920 (W) × 1,080 (H)) [5,760 × 1,080 dots]	
<b>Sound</b>	<b>Audio Output</b> 20 W [ 10 W + 10 W ] ( 10 % THD )		
<b>Channel Capability (Digital/Analog)</b>		VHF/ UHF: 2 - 69, CATV: 1 - 135	
<b>Operating Conditions</b>		Temperature: 32 °F – 104 °F (0 °C – 40 °C) Humidity: 20 % – 80 % RH (non-condensing)	
<b>Connection Terminals</b>	<b>VIDEO IN 1-2</b>	VIDEO: RCA PIN Type × 1 1.0 V [p-p] (75 Ω) S-VIDEO: Mini DIN 4-pin Y: 1.0 V [p-p] (75 Ω) C: 0.286 V [p-p] (75 Ω) AUDIO L-R: RCA PIN Type × 2 0.5 V [rms]	
	<b>COMPONENT INPUT 1-2</b>	Y: 1.0 V [p-p] (including synchronization) Pb, Pr: ±0.35 V [p-p] AUDIO L-R: RCA PIN Type × 2 0.5 V [rms]	
	<b>HDMI 1-3</b>	TYPE A Connector × 3 ● This TV supports "HDAVI Control 3" function.	
	<b>IEEE1394</b>	IEEE 1394 Standard, 4pin, S400, MPEG2-TS	
	<b>Card slot</b>	SD CARD slot × 1, CableCARD slot × 1	
	<b>AV PROG OUT</b>	VIDEO: RCA PIN Type × 1 1.0 V [p-p] (75 Ω) AUDIO L-R: RCA PIN Type × 2 0.5 V [rms]	
	<b>DIGITAL AUDIO OUT</b>	PCM / Dolby Digital, Fiber Optic	
<b>FEATURES</b>		3D Y/C FILTER CLOSED CAPTION V-Chip CableCARD slot Photo viewer HDAVI Control 3 tru2way-ready TV	
<b>Dimensions (W × H × D)</b>	<b>Including pedestal</b>	41.3" × 28.7" × 12.9" (1,048 mm × 727 mm × 327 mm)	49.0" × 33.3" × 15.3" (1,244 mm × 844 mm × 387 mm)
	<b>TV Set only</b>	41.3" × 26.8" × 3.8" (1,048 mm × 679 mm × 95 mm)	49.0" × 31.2" × 3.8" (1,244 mm × 790 mm × 95 mm)
<b>Mass</b>	<b>Including pedestal</b>	70.6 lb. (32 kg)	90.4 lb. (41 kg)
	<b>TV Set only</b>	66.1 lb. (30 kg)	86.0 lb. (39 kg)

[TH-42PZ80Q]

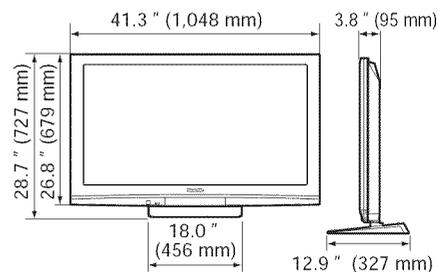

[TH-50PZ80Q]

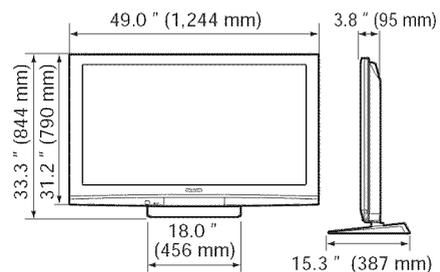

**Note**

● Design and Specifications are subject to change without notice. Mass and Dimensions shown are approximate.



● Specifications  
● Care and Cleaning

FAQs, etc.

# FAQ

Before requesting service or assistance, please follow these simple guides to resolve the problem.  
If the problem still persists, please contact your local Panasonic dealer or Panasonic Service Center for assistance.  
For details (p. 55)  
For additional assistance, please contact us via the website at:  
[www.panasonic.com/contactinfo](http://www.panasonic.com/contactinfo)

## White spots or shadow images (noise)

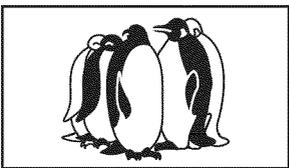
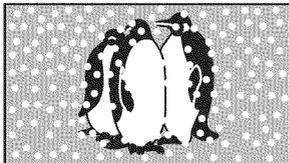


- Check the position, direction, and connection of the antenna.

## Interference or frozen digital channels (intermittent sound)



- Change the direction of antenna for digital channels.
- Check "Signal meter" (p. 35). If the signal is weak, check the antenna and consult your local dealer.

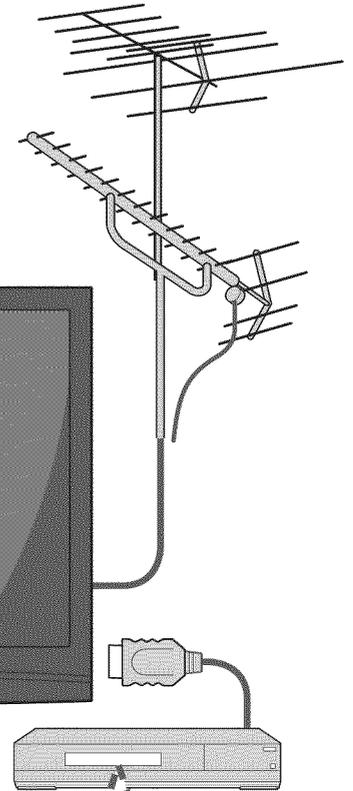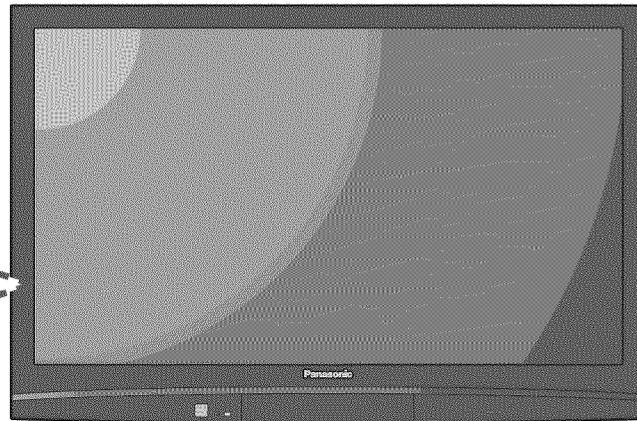

## Pictures from external equipment are distorted when the unit is connected via HDMI

- Is the HDMI cable connected properly? (p. 40, 41)
- Turn Off the TV unit and equipment, then turn them On again.
- Check an input signal from the equipment. (p. 48)
- Use equipment compliant with EIA/CEA-861/861B.

## Recording does not start immediately

- Check the settings of the recorder. For details, read the manual of the recorder.

## The remote control does not work

- Are the batteries installed correctly? (p. 6)
- Are the batteries new?
- Select the correct remote control mode (p. 13, 22)

If there is a problem with your TV, please refer to the table below to determine the symptoms, then carry out the suggested check. If this does not solve the problem, please contact your local Panasonic dealer, quoting the model number and serial number (both found on the rear of the TV).

	Problem	Actions
Screen	<b>“Press any key to return” moves on the screen</b>	<ul style="list-style-type: none"> <li>The function to prevent “Image retention” is activated. (Not a faulty symptom)               <ul style="list-style-type: none"> <li>The screen saver is activated if the TV unit is not operated for a certain time in SD mode.</li> <li>“Image retention” (p. 5)</li> </ul> </li> </ul>
	<b>Some spots remain bright or dark</b>	<ul style="list-style-type: none"> <li>The Plasma panel is made up of a few million pixels and is produced with advanced technology through an intricate process. However, sometimes a few pixels may be bright or dark. These pixels do not indicate a defective panel and will have no impact on the performance of the TV.</li> </ul>
	<b>Chaotic image, noisy</b>	<ul style="list-style-type: none"> <li>Check nearby electrical products (car, motorcycle, fluorescent lamp).</li> </ul>
	<b>No image can be displayed</b>	<ul style="list-style-type: none"> <li>Check Picture menu (p. 24)</li> <li>Check the cable connections. (p. 9-12)</li> <li>Check that the correct input has been selected. (p. 22)</li> </ul>
	<b>Only spots are displayed instead of images</b>	<ul style="list-style-type: none"> <li>Check the channel settings. (p. 34)</li> <li>Check the antenna cables.</li> </ul>
	<b>Neither image nor sound is produced</b>	<ul style="list-style-type: none"> <li>Is the AC power cord plugged into the outlet?</li> <li>Is the TV unit turned On?</li> <li>Check Picture menu (p. 24) and volume.</li> <li>Check the AV cable connections. (p. 9-12)</li> <li>Check that the correct input has been selected. (p. 22)</li> </ul>
	<b>Black Box appears</b>	<ul style="list-style-type: none"> <li>Change settings of Closed Caption (CC). (p. 36)</li> </ul>
Sound	<b>No sound is produced</b>	<ul style="list-style-type: none"> <li>Are the speakers' cables connected correctly? (p. 40)</li> <li>Is “Sound Mute” active? (p. 13)</li> <li>Is the volume set to the minimum?</li> <li>Is “Speaker output” set to “Off”? (p. 24)</li> <li>Change “SAP” settings. (p. 18)</li> <li>Check “HDMI 1 in”, “HDMI 2 in” or “HDMI 3 in” settings. (p. 24)</li> </ul>
	<b>Sound is unusual</b>	<ul style="list-style-type: none"> <li>Set “SAP” setting to “Stereo” or “Mono.”</li> <li>Check the HDMI device connected to the unit.</li> <li>Set the audio setting of the HDMI device to “Linear PCM.”</li> <li>If digital sound connection has a problem, select analog sound connection.</li> </ul>
	<b>Unknown sound heard</b> <b>1- Sounds from TV cabinet</b> <b>2- Whirring sound</b> <b>3- Tick/Click sound</b> <b>4- Buzzing sound</b>	<ol style="list-style-type: none"> <li>Changes in the temperature and humidity of the room may cause the TV's cabinet to expand or contract and produce metallic sounds. This is not a sign of faulty operation or a malfunction.</li> <li>The TV may have a cooling fan that makes a soft whir. This is not a sign of faulty operation or a malfunction.</li> <li>When the TV is powered on, an electrical component in the TV activates producing a tick/click sound. This is not a sign of faulty operation or a malfunction.</li> <li>Electrical circuits are active while the TV set is on. This is not a sign of faulty operation or a malfunction.</li> </ol>
	<b>Parts of the TV set become hot.</b>	<ul style="list-style-type: none"> <li>Even when the temperature of parts of the front, top and rear panels has risen, these temperature rises will not pose any problems in terms of performance or quality.</li> </ul>

● Frequently Asked Questions

FAQs, etc.

# Limited Warranty (for U.S.A. and Puerto Rico only)

PANASONIC CONSUMER ELECTRONICS COMPANY,  
DIVISION OF  
PANASONIC CORPORATION OF NORTH AMERICA  
One Panasonic Way  
Secaucus, New Jersey 07094

## Panasonic Color Television Limited Warranty

### Limited Warranty Coverage

If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company (referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("Limited Warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

CATEGORIES	ALL PARTS EXCEPT GLASS PANEL OR CRT	LABOR	GLASS PANEL OR CRT	GLASS PANEL OR CRT LABOR	SERVICE
PLASMA DISPLAY	1 (ONE) YEAR	1 (ONE) YEAR	GLASS PANEL - 2 (TWO) YEARS	1 (ONE) YEAR	ON-SITE OR CARRY-IN

During the "Labor" Limited Warranty period there will be no charge for labor. During the "Parts" Limited Warranty period, there will be no charge for parts.

You must carry-in your product or arrange for on-site service during the Limited Warranty period. If non-rechargeable batteries are included, they are not warranted. This Limited Warranty only applies to products purchased and serviced in the United States or Puerto Rico. This Limited Warranty is extended only to the original purchaser and only covers product purchased as new. A purchase receipt or other proof of the original purchase date is required for Limited Warranty service.

### On-Site or Carry-in Service

For On-Site or Carry-In Service in the United States and Puerto Rico call 1-877-95-VIERA (1-877-958-4372).

On-site service where applicable requires clear, complete and easy access to the product by the authorized servicer and does not include removal or re-installation of an installed product. It is possible that certain on-site repairs will not be completed on-site, but will require that the product or parts of the product, at the servicer's discretion be removed for shop diagnosis and/or repair and then returned.

### Limited Warranty Limits And Exclusions

This Limited Warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage, nor does it cover markings or retained images on the picture tube resulting from viewing fixed images (including, among other things, letterbox pictures on standard 4:3 screen TV's, or non-expanded standard 4:3 pictures on wide screen TV's, or onscreen data in a stationary and fixed location). The Limited Warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, bug infestation, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, or commercial use (such as in a hotel, office, restaurant, or other business), rental use of the product, service by anyone other than a Factory Service Center or other Authorized Servicer, or damage that is attributable to acts of God.

**THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY.** (As examples, this excludes damages for lost time, cost of having someone remove or re-install an installed unit if applicable, or travel to and from the servicer. The items listed are not exclusive, but are for illustration only.) **ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE LIMITED WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied Limited Warranty lasts, so the exclusions may not apply to you.

This Limited Warranty gives you specific legal rights and you may also have others rights which vary from state to state. If a problem with this product develops during or after the Limited Warranty period, you may contact your dealer or Service Center. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

**PARTS AND SERVICE (INCLUDING COST OF AN ON-SITE SERVICE CALL, WHERE APPLICABLE) WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY ARE YOUR RESPONSIBILITY.**

# Customer Services Directory (for U.S.A. and Puerto Rico)

## Customer Services Directory (United States and Puerto Rico)

Obtain Product Information and Operating Assistance; locate your nearest Dealer or Service Center; purchase Parts and Accessories; or make Customer Service and Literature requests by visiting our Web Site at:

<http://www.panasonic.com/help>

or, contact us via the web at:

<http://www.panasonic.com/contactinfo>

You may also contact us directly at:

1-877-95-VIERA (958-4372)

Monday-Friday 9 am-9 pm; Saturday-Sunday 10 am-7 pm, EST.

■ For hearing or speech impaired TTY users, TTY: 1-877-833-8855

## Accessory Purchases (United States and Puerto Rico)

Purchase Parts, Accessories and Instruction Books on line for all Panasonic Products by visiting our Web Site at:

<http://www.pstc.panasonic.com>

or, send your request by E-mail to:

[npcparts@us.panasonic.com](mailto:npcparts@us.panasonic.com)

You may also contact us directly at:

1-800-332-5368 (Phone) 1-800-237-9080 (Fax Only) (Monday - Friday 9 am to 9 pm, EST.)

Panasonic Service and Technology Company

20421 84th Avenue South,

Kent, WA 98032

(We Accept Visa, MasterCard, Discover Card, American Express, and Personal Checks)

■ For hearing or speech impaired TTY users, TTY: 1-866-605-1277

**Customer's Record**

The model number and serial number of this product can be found on its back cover. You should note this serial number in the space provided below and retain this book, plus your purchase receipt, as a permanent record of your purchase to aid in identification in the event of theft or loss, and for Warranty Service purposes.

Model Number \_\_\_\_\_

Serial Number \_\_\_\_\_

---

**Panasonic Consumer Electronics Company,  
Division of Panasonic Corporation of North America**  
One Panasonic Way, Secaucus  
New Jersey 07094 U.S.A.