


Tutorials, FAQS, spare parts, support: parrot.com/help/hydrofoil

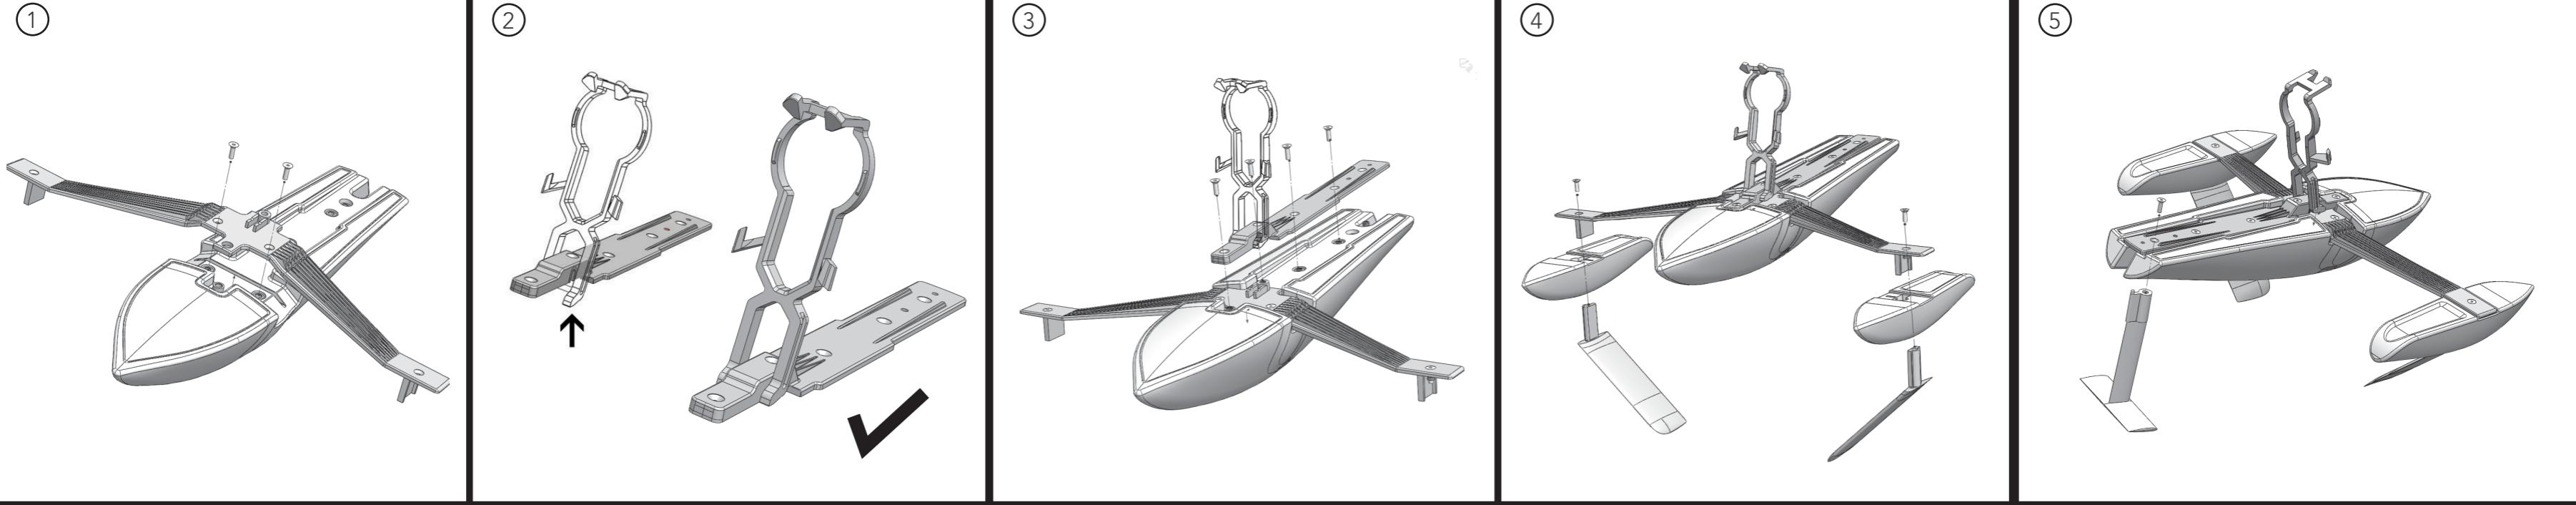

QUICK START GUIDE

This Hydrofoil guide gives you the main instructions. You will find full documentation on our Website:
www.parrot.com/uk/support/hydrofoil-drone

ASSEMBLING THE HYDROFOIL

You will need the T10 screwdriver provided to assemble the Hydrofoil. Do not over-tighten the screws.

1. Remove the elastic band from the hull.
2. Screw the arm onto the hull with 2 screws (diagram 1).

3. Insert the MiniDrone support into the slot on the central spindle (diagram 2).

4. Screw the central spindle onto the hull with 4 screws (diagram 3).

5. Insert the two lateral floats into the ends of the arm.

6. Insert then screw the two lateral foils into the floats with 2 screws (diagram 4).

7. Insert then screw the tail fin into the slot located at the rear of the hull with 1 screw (diagram 5).

In order to avoid any risk of the Hydrofoil losing its shape, keep it on its original support.

CHARGING THE BATTERY

- Insert the battery into the compartment provided (photos A and B).
- Plug the MiniDrone (photos C and D):

- Into a charger with minimum power rating of 2.4 A. The charging time is approximately 25 minutes.
- Into a computer using the USB cable. The charging time for the battery is approximately 1 hour 30 minutes.

To remove the battery, lift up the flap located underneath the battery and slide it to the rear.

DOWNLOADING THE APP

Connect to the App StoreSM or Google PlayTM and download the FreeFlight3 app free of charge.

SETTING UP THE MINIDRONE ON THE HYDROFOIL

- Insert the front of the MiniDrone into the support. The head of the MiniDrone towards the front of the Hydrofoil. Ensure that the two front lugs on the support are inserted into the front arms of the MiniDrone (photo E).
- Fasten the clip on the rear of the MiniDrone (photo F).

In order to avoid any risk of the Hydrofoil losing its shape, keep it on its original support.

SWITCHING ON THE MINIDRONE

- Press the On/Off button located under the MiniDrone (photo G).

CONNECTING A SMARTPHONE

You need a smartphone or tablet which supports Bluetooth[®] 4.0 to use the MiniDrone. Check whether your smartphone is compatible on www.parrot.com/uk/compatibility.

- Activate the Bluetooth[®] function on your smartphone.
- Run the FreeFlight3 app. The MiniDrone will connect to your smartphone automatically.
- Choose the piloting mode corresponding to the Hydrofoil.

PILOTTING

Press Take Off to start the Hydrofoil.

Press the left-hand joystick and slide your finger upwards to increase the speed of your Hydrofoil. On the right of screen, slide the joystick left or right to steer the Hydrofoil to the left or right.

Watch the video tutorials on how to fly on our Website: www.parrot.com/uk/support/hydrofoil-drone

- Fasten the clip on the rear of the MiniDrone (photo F).

TAKING A PHOTO

Press the camera icon to take a photo.

GENERAL INFORMATION

ACCESSORIES AND SPARE PARTS

Accessories and spare parts are available from your Parrot retailer or from our website store.parrot.com.

PRECAUTIONS FOR USE AND MAINTENANCE

The Hydrofoil is not suitable for children under 14 years of age.

The Hydrofoil is an model aircraft designed for recreational and leisure purposes. The pilot must always maintain direct visual contact with the Hydrofoil and control its flight path. The Hydrofoil should only be used in areas suitable for it so you are always able to ensure the safety of person, animals and property. There are some public places (stations, airports etc.) and roads where you may not be permitted to use your Hydrofoil.

While operating, the propellers of the Hydrofoil can cause injury to people and property. Don't touch the Hydrofoil when you start it up. Wait until the propellers have completely stopped before handling the MiniDrone.

Where you are using the MiniDrone alone, please ensure you do so in accordance with the civil aviation rules in your country. Keep the MiniDrone away from high voltage power lines, buildings or any other potentially dangerous areas.

Only use accessories specified by the manufacturer.

The Hydrofoil and all its components are fragile and should be handled with care.

Only use the Hydrofoil on fresh water. If sand, sea salt, seaweed or any other environmental matter gets into the Hydrofoil, irreversible damage may be caused and it will not be able to operate properly. Do not use the Hydrofoil in adverse meteorological conditions (rain, strong wind, snow) or in poor visibility conditions (at night).

Ensure you keep the Hydrofoil within a reasonable distance to maintain the Bluetooth[®] connection to your smartphone. Ensure you anticipate how long you can use your Hydrofoil and how far it can go according to the battery life, so you can recover it safely.

While operating, the propellers of the Hydrofoil can cause injury to people and property. Don't touch the Hydrofoil when you start it up. Wait until the propellers have completely stopped before handling the MiniDrone.

Do not leave the Hydrofoil in direct sunlight.

WARRANTY

For the warranty conditions please refer to the retailer's General Conditions of Sale where you purchased your MiniDrone.

Only use accessories specified by the manufacturer.

The Hydrofoil and all its components are fragile and should be handled with care.

Only use the Hydrofoil on fresh water. If sand, sea salt, seaweed or any other environmental matter gets into the Hydrofoil, irreversible damage may be caused and it will not be able to operate properly. Do not use the Hydrofoil in adverse meteorological conditions (rain, strong wind, snow) or in poor visibility conditions (at night).

Ensure you keep the Hydrofoil within a reasonable distance to maintain the Bluetooth[®] connection to your smartphone. Ensure you anticipate how long you can use your Hydrofoil and how far it can go according to the battery life, so you can recover it safely.

While operating, the propellers of the Hydrofoil can cause injury to people and property. Don't touch the Hydrofoil when you start it up. Wait until the propellers have completely stopped before handling the MiniDrone.

Do not leave the Hydrofoil in direct sunlight.

RECYCLING THIS PRODUCT

The symbol on this product and on its literature shows that at the end of its life, it is not to be disposed of with household waste. The uncontrolled disposal of waste is harmful to the environment; please separate this from other types of waste and dispose of responsibly. Private individuals are invited to contact the retailer who sold them the product or to ask advice from their local authority to find out how and where it can be recycled.

DECLARATION OF CONFORMITY

Parrot SA, 174 quai de Jemmapes, 75010 Paris, France, declare under their sole responsibility that the product described in this user guide complies with technical standards EN 301489-17, EN300328, EN71-1, EN71-2, EN62115 following the provision of the Radio Equipment, Telecommunication Equipment directive (1999/5/EC &R&TE), and of the General Safety directive (2001/95/EC). The Declaration of Conformity is available on our website: www.parrot.com/fr/ce/hydrofoil-drone

REGISTERED TRADEMARKS

Parrot, Parrot MiniDrones and the Parrot logo are trademarks of PARROT SA. App Store is a service mark of Apple Inc. Google Play is a trademark of Google Inc. The Bluetooth[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Parrot SA is under license. All other trademarks mentioned in this guide are protected and are the property of their respective owners.

This equipment complies with Part 15 of the FCC Rules with Industry Canada License-exempt RSS standards. Operation is subject to the following two conditions: This equipment may not cause harmful interference. This equipment must accept any interference received, including

interference that may cause undesired operation. Modifications not authorized by the manufacturer may void the user's authority to operate this device.

CAUTION: EXPOSURE TO RADIO FREQUENCY RADIATION

The installer of this radio equipment must ensure that the antenna is located or pointed such that it does not emit RF field in excess of Health Canada limits for the general population; consult Safety Code 6, obtainable from Health Canada's website at <http://www.hc-sc.gc.ca>

The user is required to apply for Localised Radiocomm Station Licence in Singapore. Applicants can apply online for the Localised Radiocomm Station Licence through <http://www.hc-sc.gc.ca>

Failure to comply with instructions may cause permanent damage to the battery, its environment and may cause injury. Always use a LiPo battery charger. Never charge via a discharge lead. Never trickle charge or below 2.5 V. Never allow the battery temperature to exceed 60°C (140°F). Never disassemble or modify the wiring in the battery pack or puncture the battery cell. Never place the battery on top of combustible materials or leave it unattended during charging. Always charge in a fireproof location. Always make sure that the charger output voltage corresponds to the battery voltage. Always keep out of the reach of children. Incorrect use of the battery can cause fires, explosions or other damage.

The battery terminals should not be allowed to short-circuit. The product should be connected only to class II appliances which display the symbol.

Failure to respect these instructions may cause permanent damage to the battery, its environment and may cause injury. Always use a LiPo battery charger. Never charge via a discharge lead. Never trickle charge or below 2.5 V. Never allow the battery temperature to exceed 60°C (140°F). Never disassemble or modify the wiring in the battery pack or puncture the battery cell. Never place the battery on top of combustible materials or leave it unattended during charging. Always charge in a fireproof location. Always make sure that the charger output voltage corresponds to the battery voltage. Always keep out of the reach of children. Incorrect use of the battery can cause fires, explosions or other damage.

The symbol on the product and on its literature shows that at the end of its life, it is not to be disposed of with household waste. The uncontrolled disposal of waste is harmful to the environment; please separate this from other types of waste and dispose of responsibly. Private individuals are invited to contact the retailer who sold them the product or to ask advice from their local authority to find out how and where it can be recycled.

The symbol on the product and on its literature shows that at the end of its life, it is not to be disposed of with household waste. The uncontrolled disposal of waste is harmful to the environment; please separate this from other types of waste and dispose of responsibly. Private individuals are invited to contact the retailer who sold them the product or to ask advice from their local authority to find out how and where it can be recycled.

The symbol on the product and on its literature shows that at the end of its life, it is not to be disposed of with household waste. The uncontrolled disposal of waste is harmful to the environment; please separate this from other types of waste and dispose of responsibly. Private individuals are invited to contact the retailer who sold them the product or to ask advice from their local authority to find out how and where it can be recycled.

The symbol on the product and on its literature shows that at the end of its life, it is not to be disposed of with household waste. The uncontrolled disposal of waste is harmful to the environment; please separate this from other types of waste and dispose of responsibly. Private individuals are invited to contact the retailer who sold them the product or to ask advice from their local authority to find out how and where it can be recycled.

The symbol on the product and on its literature shows that at the end of its life, it is not to be disposed of with household waste. The uncontrolled disposal of waste is harmful to the environment; please separate this from other types of waste and dispose of responsibly. Private individuals are invited to contact the retailer who sold them the product or to ask advice from their local authority to find out how and where it can be recycled.

The symbol on the product and on its literature shows that at the end of its life, it is not to be disposed of with household waste. The uncontrolled disposal of waste is harmful to the environment; please separate this from other types of waste and dispose of responsibly. Private individuals are invited to contact the retailer who sold them the product or to ask advice from their local authority to find out how and where it can be recycled.

The symbol on the product and on its literature shows that at the end of its life, it is not to be disposed of with household waste. The uncontrolled disposal of waste is harmful to the environment; please separate this from other types of waste and dispose of responsibly. Private individuals are invited to contact the retailer who sold them the product or to ask advice from their local authority to find out how and where it can be recycled.

The symbol on the product and on its literature shows that at the end of its life, it is not to be disposed of with household waste. The uncontrolled disposal of waste is harmful to the environment; please separate this from other types of waste and dispose of responsibly. Private individuals are invited to contact the retailer who sold them the product or to ask advice from their local authority to find out how and where it can be recycled.

The symbol on the product and on its literature shows that at the end of its life, it is not to be disposed of with household waste. The uncontrolled disposal of waste is harmful to the environment; please separate this from other types of waste and dispose of responsibly. Private individuals are invited to contact the retailer who sold them the product or to ask advice from their local authority to find out how and where it can be recycled.

The symbol on the product and on its literature shows that at the end of its life, it is not to be disposed of with household waste. The uncontrolled disposal of waste is harmful to the environment; please separate this from other types of waste and dispose of responsibly. Private individuals are invited to contact the retailer who sold them the product or to ask advice from their local authority to find out how and where it can be recycled.

The symbol on the product and on its literature shows that at the end of its life, it is not to be disposed of with household waste. The uncontrolled disposal of waste is harmful to the environment; please separate this from other types of waste and dispose of responsibly. Private individuals are invited to contact the retailer who sold them the product or to ask advice from their local authority to find out how and where it can be recycled.

The symbol on the product and on its literature shows that at the end of its life, it is not to be disposed of with household waste. The uncontrolled disposal of waste is harmful to the environment; please separate this from other types of waste and dispose of responsibly. Private individuals are invited to contact the retailer who sold them the product or to ask advice from their local authority to find out how and where it can be recycled.

The symbol on the product and on its literature shows that at the end of its life, it is not to be disposed of with household waste. The uncontrolled disposal of waste is harmful to the environment; please separate this from other types of waste and dispose of responsibly. Private individuals are invited to contact the retailer who sold them the product or to ask advice from their local authority to find out how and where it can be recycled.

The symbol on the product and on its literature shows that at the end of its life, it is not to be disposed of with household waste. The uncontrolled disposal of waste is harmful to the environment; please separate this from other types of waste and dispose of responsibly. Private individuals are invited to contact the retailer who sold them the product or to ask advice from their local authority to find out how and where it can be recycled.

The symbol on the product and on its literature shows that at the end of its life, it is not to be disposed of with household waste. The uncontrolled disposal of waste is harmful to the environment; please separate this from other types of waste and dispose of responsibly. Private individuals are invited to contact the retailer who sold them the product or to ask advice from their local authority to find out how and where it can be recycled.

The symbol on the product and on its literature shows that at the end of its life, it is not to be disposed of with household waste. The uncontrolled disposal of waste is harmful to the environment; please separate this from other types of waste and dispose of responsibly. Private individuals are invited to contact the retailer who sold them the product or to ask advice from their local authority to find out how and where it can be recycled.

The symbol on the product and on its literature shows that at the end of its life, it is not to be disposed of with household waste. The uncontrolled disposal of waste is harmful to the environment; please separate this from other types of waste and dispose of responsibly. Private individuals are invited to contact the retailer who sold them the product or to ask advice from their local authority to find out how and where it can be recycled.

The symbol on the product and on its literature shows that at the end of its life, it is not to be disposed of with household waste. The uncontrolled disposal of waste is harmful to the environment; please separate this from other types of waste and dispose of responsibly. Private individuals are invited to contact the retailer who sold them the product or to ask advice from their local authority to find out how and where it can be recycled.

The symbol on the product and on its literature shows that at the end of its life, it is not to be disposed of with household waste. The uncontrolled disposal of waste is harmful to the environment; please separate this from other types of waste and dispose of responsibly. Private individuals are invited to contact the retailer who sold them the product or to ask advice from their local authority to find out how and where it can be recycled.

The symbol on the product and on its literature shows that at the end of its life, it is not to be disposed of with household waste. The uncontrolled disposal of waste is harmful to the environment; please separate this from other types of waste and dispose of responsibly. Private individuals are invited to contact the retailer who sold them the product or to ask advice from their local authority to find out how and where it can be recycled.

The symbol on the product and on its literature shows that at the end of its life, it is not to be disposed of with household waste. The uncontrolled disposal of waste is harmful to the environment; please separate this from other types of waste and dispose of responsibly. Private individuals are invited to contact the retailer who sold them the product or to ask advice from their local authority to find out how and where it can be recycled.

The symbol on the product and on its literature shows that at the end of its life, it is not to be disposed of with household waste. The uncontrolled disposal of waste is harmful to the environment; please separate this from other types of waste and dispose of responsibly. Private individuals are invited to contact the retailer who sold them the product or to ask advice from their local authority to find out how and where it can be recycled.

KURZANLEITUNG

Diese Anleitung für das Hydrofoil enthält die wichtigsten Bedienungsanweisungen. Die kompletten Bedienungsunterlagen finden Sie auf unserer Website:
www.parrot.com/de/support/hydrofoil-drone

MONTAGE DES HYDROFOIL

- Der für die Montage des Hydrofoil benötigte Schraubenzieher T10 ist im Lieferumfang enthalten. Ziehen Sie die Schrauben nicht zu fest an.
1. Entfernen Sie das Gummiband vom Rumpf.
 2. Schrauben Sie die Querachse mit zwei Schrauben am Rumpf fest (Abb. 1).
 3. Schieben Sie die Halterung für die MiniDrone in den Schlitz der Mittelachse (Abb. 2).
 4. Schrauben Sie die Mittelachse mit vier Schrauben am Rumpf fest (Abb. 3).
 5. Stecken Sie die zwei seitlichen Schwimmer in die Endpunkte der Querachse.
 6. Stecken Sie die zwei Seitensteuerflügel in die Schwimmer und schrauben Sie sie mit zwei Schrauben fest (Abb. 4).
 7. Stecken Sie den hinteren Steuerflügel in den Schlitz im hinteren Bereich des Rumpfes und schrauben Sie ihn mit einer Schraube fest

(Abb. 5).

Bewahren Sie das Hydrofoil in seiner Originalverpackung auf, um jegliche Verformung zu vermeiden.

LADEN DES AKKUS

1. Legen Sie den Akku in das dafür vorgesehene Fach ein (Fotos A und B).
2. Schließen Sie die MiniDrone an (Fotos C und D):

- An ein Ladegerät mit einer Leistung von mindestens 2,4 A. Die Ladezeit beträgt ca. 25 Minuten.
- Per USB-Kabel an einen Computer. Die Ladezeit des Akkus beträgt ca. 1,5 Stunden.

Zum Entfernen des Akkus die über dem Akku befindliche Lasche anheben, den Akku nach hinten schieben und herausnehmen.

HERUNTERLADEN DER ANWENDUNG

Melden Sie sich im App StoreSM oder bei Google PlayTM an und laden Sie die kostenlose Anwendung FreeFlight3 herunter.

MONTAGE DER MINIDRONE AUF DAS HYDROFOIL

1. Stecken Sie das Vorderteil der MiniDrone in die Halterung. Der Kopf der MiniDrone zeigt zur Vorderseite des Hydrofoils. Vergewissern Sie sich, dass die beiden vorderen Stifte der

Halterung in die Vorderachsen der MiniDrone eingesteckt sind (Foto E).

2. Klippen Sie das Hinterteil der MiniDrone fest (Foto F).

EINSCHALTEN DER MINIDRONE

Der Ein-/Aus-Schalter befindet sich unter der MiniDrone (Foto G).

ANSCHLIESSEN EINES SMARTPHONES

Für die Benutzung der MiniDrone benötigen Sie ein Smartphone oder Tablet, das Bluetooth® 4.0 unterstützt. Prüfen Sie die Kompatibilität Ihres Smartphones auf:

www.parrot.com/de/compatibility

1. Aktivieren Sie an Ihrem Smartphone die Bluetooth®-Funktion.
2. Starten Sie die Anwendung FreeFlight3. Die Verbindung zwischen dem Smartphone und der MiniDrone wird automatisch hergestellt.

3. Wählen Sie den Hydrofoil-Steuermodus.

STEUERUNG

Drücken Sie auf Take Off, um das Hydrofoil zu starten.

Drücken Sie auf den Joystick links und gleiten Sie zur Beschleunigung des Hydrofoils mit dem Finger nach oben.

supporto (foto F).

RICARICA DELLA BATTERIA

1. Inserire la batteria nell'apposito alloggiamento (foto A e B).

2. Collegare il MiniDrone (foto C e D):

- Ad un caricatore che abbia una potenza di almeno 2,4 A. Il tempo di caricamento è di circa 25 minuti.
- Ad un computer tramite un cavo USB. Il tempo di carica della batteria è di circa un'ora e mezza.

Per rimuovere la batteria, sollevare la linguetta situata sopra la batteria, facendola scorrere all'interno.

DOWNLOAD DELL'APPLICAZIONE

Connetersi all'App StoreSM o a Google PlayTM e scaricare gratuitamente l'applicazione FreeFlight3.

3. Inserire le due galleggianti laterali alle estremità del braccio.

4. Inserire e poi avvitare le due derive laterali nei galleggianti con 2 viti (schema 4).

5. Inserire e poi avvitare la deriva posteriore nella tacca situata sul retro della scocca con 1 vite (schema 5).

Per evitare qualsiasi rischio di deformazione dell'Hydrofoil, si prega di conservarlo nel proprio

SNELSTARTGIDS

Deze handleiding voor de Hydrofoil geeft de belangrijkste instructies. De volledige documentatie is te vinden op onze website www.parrot.com/nl/support/hydrofoil-drone.

DE HYDROFOIL MONTEREN

De voor de montage van de Hydrofoil benodigde T10-schroevendraaier is bijgeleverd. Draai de schroeven niet te vast aan.

1. Verwijder het elastiek van de romp.

2. Schroef de armen op de romp met 2 schroeven (figuur 1).

3. Steek de steun van de MiniDrone in de uitsparing van de middelen (figuur 2).

4. Schroef de middelen op de romp met 4 schroeven (figuur 3).

5. Steek de twee drijvers op de uiteinden van de armen.

6. Steek de twee zijzaagwanden in de vlotters en schoof ze vast met 2 schroeven (figuur 4).

7. Steek het achterwaard in de opening aan de achterkant van de romp en schoof het vast met 1 schroef (figuur 5).

Houd de Hydrofoil in de originele steun om verforming te voorkomen.

GUIA DE INICIAÇÃO RÁPIDA

Este guia do Hydrofoil fornece-lhe as principais instruções. Encontrará a documentação completa no nosso website www.parrot.com/uk/support/hydrofoil-drone.

MONTAR O HYDROFOIL

É fornecida a chave de fendas T10 necessária para montar o Hydrofoil. Não force o parafuso.

1. Retire o elástico da estrutura.

2. Enrosque o braço sobre a estrutura com 2 parafusos (esquema 1).

3. Insira o suporte do MiniDrone no encaixe do eixo central (esquema 2).

4. Aperte o eixo central na estrutura com 4 parafusos (esquema 3).

5. Insira dois flutuadores laterais nas extremidades do braço.

6. Insira e, de seguida, aperte as duas bolas laterais nos flutuadores com 2 parafusos (esquema 4).

7. Insira e, de seguida, aperte a bolina situada no encaixe situado na traseira da estrutura com 1 parafuso (esquema 5).

De modo a evitar qualquer risco de deformação do Hydrofoil, mantenha-o no seu suporte de origem.

CARREGAR A BATERIA

1. Insira a bateria no local previsto para este efeito (Imagens A e B).

2. Conete o MiniDrone (Imagens C e D):

- Um um carregador com uma potência mínima de 2,4 A. O tempo de carregamento é de cerca de 25 minutos.
- A um computador, utilizando o cabo USB. O tempo de carregamento da bateria é de cerca de 1 hora e 30 minutos.

Onde a accu te verwijderen, tilt u het lipje boven de accu op en schuif u de accu naar achteren.

DE APP DOWNLOADEN

Ga naar de App StoreSM of Google PlayTM en download de gratis app FreeFlight3.

DE MINIDRONE DE HYDROFOIL INSTALLEEREN

1. Plaats de neus van de MiniDrone op de steun. De neus moet naar de voorkant van de Hydrofoil wijzen. Steek de twee pennen aan de voorkant van de steun in de voorste armen van de MiniDrone (foto E).
2. Klik de achterkant van de MiniDrone vast (foto F).

Zie de instructievideo's op onze website: www.parrot.com/nl/support/hydrofoil-drone

CARREGAR A BATERIA

1. Insira a bateria no local previsto para este efeito (Imagens A e B).

2. Conete o MiniDrone (Imagens C e D):

- Um um carregador com uma potência mínima de 2,4 A. O tempo de carregamento é de cerca de 25 minutos.
- A um computador, utilizando o cabo USB. O tempo de carregamento da bateria é de cerca de 1 hora e 30 minutos.

Onde a accu te verwijderen, tilt u het lipje boven de accu op en schuif u de accu naar achteren.

INSTALAR O MINIDRONE NO HYDROFOIL

1. Plaats de neus van de MiniDrone op de steun. De neus moet naar de voorkant van de Hydrofoil wijzen. Steek de twee pennen aan de voorkant van de steun in de voorste armen van de MiniDrone (foto E).

2. Steek de achterkant van de MiniDrone vast (foto F).

Zie de instructievideo's op onze website: www.parrot.com/nl/support/hydrofoil-drone

LIGAR O MINIDRONE

O botão de ligar/desligar encontra-se na parte inferior do MiniDrone (Imagem G).

CONETAR UM SMARTPHONE

Para utilizar o MiniDrone, tem de ter um Smartphone ou tablet que suporta Bluetooth® 4.0. Verifique a compatibilidade do seu Smartphone com o dispositivo Apple ou Android presente no nosso site: www.parrot.com/nl/compatibility.

1. Active a função Bluetooth® no seu Smartphone.

2. Inicie a aplicação FreeFlight3. A conexão é estabelecida automaticamente entre o Smartphone e o MiniDrone.

3. Escolha o modo de pilotagem correspondente ao Hydrofoil.

Prima Take Off para ligar o Hydrofoil.

Prima o manipulo da esquerda e deslide o dedo para cima para acelerar o Hydrofoil.

Só pode controlar o Hydrofoil quando estiver ligado.

4. Insira a parte dianteira do MiniDrone no suporte. A frente do MiniDrone virada para a frente do Hydrofoil. Certifique-se de que os dois esporões à frente do suporte são inseridos nos braços dianteiros do MiniDrone (Imagem E).

5. Fixe a parte traseira do MiniDrone (Imagem F).

Consulte os tutoriais de pilotagem no nosso website: www.parrot.com/uk/support/hydrofoil-drone

INFORMAÇÕES GERAIS

ACESSÓRIOS E PEZES SOBRESELENTE

Os acessórios e peças sobresselentes disponíveis no seu revendedor Parrot ou no nosso website: www.store.parrot.com

VOORZORGSMAAZREGELEN EN ONDERHOUD

O Hydrofoil não é adequado para crianças com menos de 14 anos.

O Hydrofoil é um aeromodelo projetado a finais recreativos e de lazer. O piloto deve manter constantemente o contacto visual com o Hydrofoil e controlar a sua trajetória. Deve inoltre ter cura de utilizá-lo exclusivamente nos locais onde sia sempre garantida a segurança para as pessoas, animais e bens. Prima dell'Hydrofoil in uno spazio pubblico, verificare se ciò è consentito.

Le eliche dell'Hydrofoil in volo possono causare danni a persone o oggetti. Non toccare l'Hydrofoil nella fase di accensione. Attendere l'arresto totale delle eliche prima di maneggiare l'apparecchio.

Non lasciare l'Hydrofoil al sole.

Gebruik alleen door de fabrikant aanbevolen accessoires. De Hydrofoil en alle onderdelen ervan zijn kwetsbaar en dienen voorzichtig te worden behandeld.

Gebruik de Hydrofoil alleen op zoet water. Indien er zand, zeezout, algen of een ander omgevingselement in de Hydrofoil oordringt, kan dat onherstelbare schade veroorzaken. Gebruik de Hydrofoil niet bij slecht weer (regen, hevige wind, sneeuw) of slecht zicht (nacht).

Houd de Hydrofoil op een redelijke afstand om de Bluetooth®-verbinding met uw smartphone in stand te houden. Houd bij het gebruik en het bedienen van de vliegroute rekening met de gebruiksduur van de accu, zodat u de Hydrofoil veilig terug kunt halen.

De propellers van de Hydrofoil kunnen letsel of schade veroorzaken. Raak de Hydrofoil niet aan tijdens het starten. Wacht tot de propellers uitgedraaid zijn voor gebruik.

De propellers van de Hydrofoil kunnen letsel of schade veroorzaken. Raak de Hydrofoil niet aan tijdens het starten. Wacht tot de propellers uitgedraaid zijn voor gebruik.

De propellers van de Hydrofoil kunnen letsel of schade veroorzaken. Raak de Hydrofoil niet aan tijdens het starten. Wacht tot de propellers uitgedraaid zijn voor gebruik.

De propellers van de Hydrofoil kunnen letsel of schade veroorzaken. Raak de Hydrofoil niet aan tijdens het starten. Wacht tot de propellers uitgedraaid zijn voor gebruik.

De propellers van de Hydrofoil kunnen letsel of schade veroorzaken. Raak de Hydrofoil niet aan tijdens het starten. Wacht tot de propellers uitgedraaid zijn voor gebruik.

De propellers van de Hydrofoil kunnen letsel of schade veroorzaken. Raak de Hydrofoil niet aan tijdens het starten. Wacht tot de propellers uitgedraaid zijn voor gebruik.

De propellers van de Hydrofoil kunnen letsel of schade veroorzaken. Raak de Hydrofoil niet aan tijdens het starten. Wacht tot de propellers uitgedraaid zijn voor gebruik.

De propellers van de Hydrofoil kunnen letsel of schade veroorzaken. Raak de Hydrofoil niet aan tijdens het starten. Wacht tot de propellers uitgedraaid zijn voor gebruik.

De propellers van de Hydrofoil kunnen letsel of schade veroorzaken. Raak de Hydrofoil niet aan tijdens het starten. Wacht tot de propellers uitgedraaid zijn voor gebruik.

De propellers van de Hydrofoil kunnen letsel of schade veroorzaken. Raak de Hydrofoil niet aan tijdens het starten. Wacht tot de propellers uitgedraaid zijn voor gebruik.

De propellers van de Hydrofoil kunnen letsel of schade veroorzaken. Raak de Hydrofoil niet aan tijdens het starten. Wacht tot de propellers uitgedraaid zijn voor gebruik.

De propellers van de Hydrofoil kunnen letsel of schade veroorzaken. Raak de Hydrofoil niet aan tijdens het starten. Wacht tot de propellers uitgedraaid zijn voor gebruik.

De propellers van de Hydrofoil kunnen letsel of schade veroorzaken