



Clear and Simple Quick Start Guide

 
Alcatel QUICKFLIP™

Getting to Know your Alcatel QUICKFLIP™



Phone setup

1. Remove back cover by gently pulling up on the indentation on the bottom left of the cover
2. Remove battery by gently pulling up on the indentation on the upper right of the battery
3. Insert the SIM card by carefully sliding it into the "SIM" slot on the right with the gold contacts facing down and the slanted corner to the right
4. Insert the microSD card (not included) into the "microSD" slot on the right, ensuring that the gold contacts are facing down and the flat edge is facing the top. Reattach back cover of phone

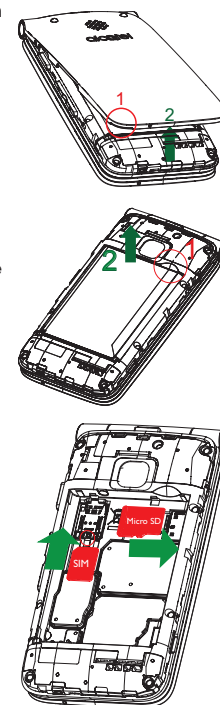

Please see illustration to verify correct card insertion orientation. To remove the SIM or microSD card, push down on the plastic spring and pull the SIM or microSD card out.

WARNING: To avoid damage to the phone, only use a standard nano-SIM card provided by your service provider.

Personalize

Set wallpaper

1. From the Home screen, press **OK**
2. Use the **Navigation ring** to scroll down and to the right until **Settings** is highlighted. Press **OK** to select **Settings**
3. Scroll right to the Personalization menu, and then scroll down to Display and press **OK** to select
4. Press **OK** once more and then scroll to select Wallpaper picture location. Press **OK** to select
5. Use the **Navigation ring** to scroll through photos. When you have one you like, press the **Right Soft** key to save to your Home screen



Lock and unlock your screen

To create a passcode

1. From the Home screen, press **OK**
2. Use the **Navigation ring** to scroll down and to the right until **Settings** is highlighted. Press **OK** to select **Settings**
3. Use the **Navigation ring** to the right until Privacy & Security is highlighted
4. Use the **Navigation ring** to scroll down until Screen Lock is highlighted. Press **OK** to select Screen Lock
5. Within the Lock Screen menu, use the **Navigation ring** to scroll down until Screen Lock is highlighted. Press **OK** to select Screen Lock once again.
6. Press **OK** to select On to turn on enable passcode
7. Create a passcode using the dial pad, enter passcode once again to confirm the passcode
8. Press the **Right Soft** key to create



To lock the phone screen

Closing the phone will lock the screen.

To unlock the phone screen

Open the phone and enter your password using the dial pad to unlock the screen.

 
Calls and Voicemail

HD voice

HD Voice means clearer conversations with reduced background noise when both participants are using HD Voice compatible phones and the call is made over Cricket's LTE network or a compatible network*.


Make a call

1. From the Home screen, press **OK**
2. Enter the desired number then press the **Call** key to place the call
3. You can also press the **Call** key to access your call log. Use the **Navigation ring** to scroll down and select the desired number
4. Once the desired number is highlighted, press **OK** to place the call
5. If you make a mistake, press the **Back/Clear** key to delete the incorrect digits
6. To end the call, press the **End/Power** key

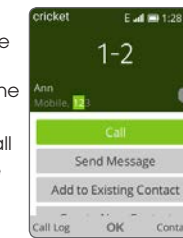

Check voicemail

 - Simply press and hold the **1** key

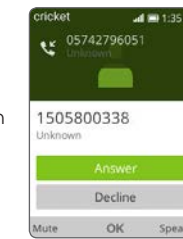

Call waiting

Call waiting allows you to answer a second call while you are on an existing call. While on a call, your phone will vibrate if another call comes in.

- Use the **Navigation ring** to scroll up to answer or scroll down to decline. Press **OK** to select
- Press the **Left Soft** key to mute
- Press the **Right Soft** key to enable speaker

* To experience Cricket HD Voice, both callers must have a compatible HD Voice capable smartphone and make the call over Cricket's LTE Network or a compatible network. Cricket's LTE coverage is not equivalent to its overall network coverage. HD Voice calls made on a compatible device and on the LTE network may not experience an HD Voice connection at times of network congestion. Other carriers' networks may interoperate with Cricket's LTE network to support an HD Voice call.

Text and picture messaging

 
Send a text message

1. From the Home screen, press **OK**
2. Use the **Navigation ring** to scroll down and until **Messages** is highlighted. Press **OK** to select **Messages** or press the **Messages** key from home screen to enter Messages
3. Press the **Left Soft** key to select New Message.
4. Enter the phone number of the recipient in the **To** bar or press the **Right Soft** key to add a contact
5. Scroll down to the **Message** bar using the **Navigation ring** to compose the message
6. Press the **Left Soft** key to send text message



Send a picture message

1. Follow steps 1-4 above
2. Press the **Right Soft** key to access options menu, then press **OK** to add an attachment
3. Select **Gallery** to choose your desired picture or **Camera** to take a picture to attach.
4. Using the **Navigation ring** scroll up or down to the image you would like to attach. Once the image is highlighted, press **OK** to select then confirm by pressing **Right Soft** key
5. Once your image has been attached, press the **Left Soft** key to send the message

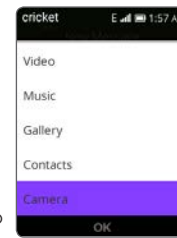

WARNING: Please don't text and drive.

Useful Tools

Use these tools to keep you organized and entertained.

Notices: From the homescreen, press the **Left Soft** key to see missed calls, text message, calendar reminders and other notifications.

Alarm: Set alarms, use the timer or stopwatch to keep you on track.

Gallery: View photos and organize your photos.

Calendar: Keep your schedule in your pocket. Track your events with notes and get schedule reminders.

Music: Listen to music loaded on or downloaded to your phone.

My Cricket: Sign in to view your account, features.

Calculator: Figure out tips, add up your bills and other calculations.

FM Radio: Listen to your favorite radio stations on the go (Wired headset required).

More information

On the web

Detailed support information including device specifications and troubleshooting are available at www.cricketwireless.com/support/devices.

On the phone

- Call Customer Care at **1-855-246-2461** or
- Dial **611** from your cell phone

Accessories

For more information about accessories, please visit your local Cricket store or go to www.cricketwireless.com/shop/accessories.



Note: Store and online inventories may vary.

Product meets FCC Radio Frequency Exposure Guidelines—FCC ID 2ACCJN012. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

© 2017 Cricket Wireless LLC. All rights reserved. Cricket and the Cricket logo are registered trademarks under license to Cricket Wireless LLC. Other marks are the property of their respective owners. microSDHC logo is a trademark of SD-3C, LLC.

 
Alcatel is a trademark of Alcatel-Lucent and is used under license by TCL Communication Ltd. © Copyright 2017 TCL Communication Ltd. All rights reserved. TCL Communication Ltd. reserves the right to alter material or technical specification without prior notice.

All "Signature" ringtones embedded in this phone have been composed, arranged and mixed by NU TROPIC (Amar Kabouche).

Camera and video


Take a picture

1. Press the **Camera** key or press **OK**
2. Use the **Navigation ring** to scroll to the right until **Camera** is highlighted. Press **OK** to select **Camera**
3. Press the **Right Soft** key to display camera options and settings
4. Zoom in and out by tapping the **Navigation ring** up (+) to zoom in, tap **Navigation ring** down (-) to zoom out
5. Press **OK** to take a picture. After taking the picture, press the **Left Soft** key to preview

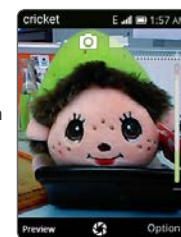

Take a video

 1. Press the **Camera** key or press **OK** from the Home screen and select **Camera**
2. Use the **Navigation ring** to scroll to the right until **Camera** is highlighted. Press **OK** to select **Camera**
3. Use the **Navigation ring** to scroll to the right to switch to Video mode
4. Press **OK** to start and stop recording video

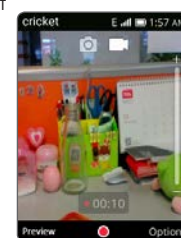

View pictures

1. From the Home screen, press **OK** to open the Main Menu
2. Use the **Navigation ring** to scroll down and to the right until **Gallery** is highlighted. Press **OK** to select **Gallery**
3. Press **OK** to view the selected picture



 
Send a picture

1. In **Gallery**, use the **Navigation ring** to scroll up or down to select a picture to send
2. Once your desired picture has been selected press the **Right Soft** key to open options menu
3. Use the **Navigation ring** to scroll down to **Share** and press **OK**
4. Using the **Navigation ring** choose to send picture via E-mail, Messages, or Bluetooth then press **OK** to make your selection

E-mail

Email setup (Hotmail™, Gmail™, Yahoo!®, etc.)

1. From the Home screen, press **OK**
2. Use the **Navigation ring** to scroll down until **Email** is highlighted. Press **OK** to select **Email**
3. Press the **Right Soft** key to navigate to **Next** menu to set up your email account
4. Enter you email name, address, and password by scrolling up or down using the **Navigation ring**. Once complete, press **Right Soft** key **Next** to set up account

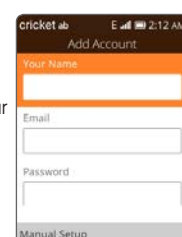

Note: To set up corporate email, contact your IT administrator.

Create and send an email message

1. From the Home screen, press **OK**
2. Use the **Navigation ring** to scroll down until **E-mail** is highlighted. Press **OK** to select **E-mail**
3. Press the **Left Soft** key to compose a new email from the Inbox screen
4. Scroll down using the **Navigation ring** to enter a subject, scroll down once more to enter an email message
5. To attach files to the email message, press the **Right Soft** key and make your selection
6. To attach a file to your email message, press the **Right Soft** key to enter the options menu. Using the **Navigation ring** scroll up or down to select Add Attachment then press **OK** to select file type, once your file type is highlighted, press **OK** to select
7. Using the **Navigation ring** scroll up or down to select the file you would like to attach to the email message, once highlighted press **OK**. Press **Right Soft** key once more to attach file to email message

