



blur

GET ON TRACK.

Welcome

The MOTOROLA **CHARM™** with MOTOBLUR™ has a compact design—pocketability, easy handling, and many smartphone features its bulkier competitors tout.

- Sleek design and pinch-to-zoom touch screen
- BACKTRACK™ pad for navigating without blocking the screen
- All your messages and status updates in your MOTOBLUR **Happenings** and **Messages** widgets



Your phone

Most of what you need is in the touchscreen and three simple keys on the front:

- **Home:** Go to the home screen.
- **Menu:** Open menu options.
- **Back:** Go back one screen.

Note: Your phone might look a little different.



Let's go

Let's get you up and running.

Caution: Before assembling, charging or using your phone for the first time, please read the important legal and safety information packaged with your product.



Touch tips

Create or log into a MOTOBLUR account. Use an existing email account and a memorable password—these will become your MOTOBLUR account ID and password. Registration is secure and should only take a few minutes.

Note: This phone supports data-intensive apps and services. It is strongly recommended that you purchase a data plan that meets your needs. Contact your service provider for details.

 


Make a note:
Your MOTOBLUR ID: _____
Your MOTOBLUR password: _____

Home screen

It's all in the touch:

- **Touch:** Choose an icon or option.
 - **Touch & Hold:** Open options.
 - **Drag:** Scroll or move slowly.
 - **Flick:** Scroll or move quickly.
 - **Pinch:** Zoom in on maps, Web pages, or photos.
- If your screen goes to sleep, press Power .

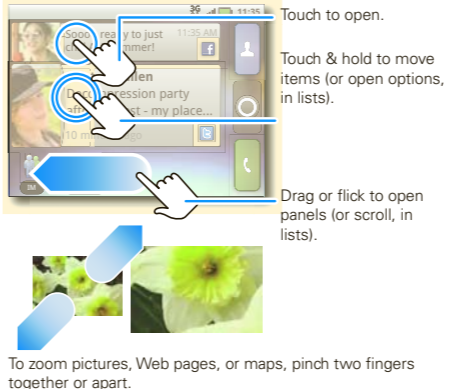


App tray

You can find all of your apps in one place. From the home screen, just touch or touch Home to open and close the app menu.

Want more? No problem: To download more apps, touch > **Market**.

 Your phone can tell you when there's an updated app or other phone software. To install the update, just follow the instructions on your screen.

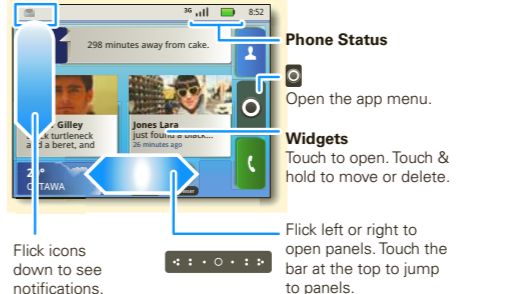


App tray

You can find all of your apps in one place. From the home screen, just touch or touch Home to open and close the app menu.

Want more? No problem: To download more apps, touch > **Market**.

 Your phone can tell you when there's an updated app or other phone software. To install the update, just follow the instructions on your screen.

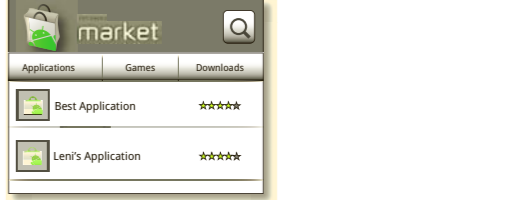

Certain features, services and applications are network dependent and may not be available in all areas; additional terms, conditions and/or charges may apply. Contact your service provider for details.

All features, functionality, and other product specifications, as well as the information contained in this guide, are based upon the latest available information and believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA, the Stylized M Logo, MOTOBLUR, and the MOTOBLUR logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. The Bluetooth trademarks are owned by their proprietor and used by Motorola Mobility, Inc. under license. WiFi is a Certification Mark of the Wireless Fidelity Alliance, Inc. Google, YouTube, Picasa, Gmail, and the Google logo are trademarks of Google, Inc. Facebook is a trademark of Facebook, Inc. All other product or service names are the property of their respective owners.

© 2010 Motorola Mobility, Inc. All rights reserved.
Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.
MOTOROLA CHARM with MOTOBLUR (MB502)
Manual Number: 68000202951-B

 


Calls

Your dial pad and call lists are just a touch or two away—no menus needed. Just touch **Dialer** in the home screen.

During a call, touch Menu to wake up the touchscreen. Your touchscreen sleeps to avoid accidental touches.

Tip: You can touch Home or Back to hide the call display. To reopen it, touch **Dialer**.

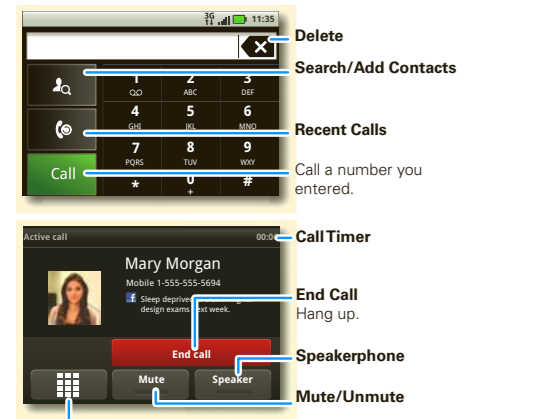


Enter numbers during a call.

Contacts

Contacts like never before—downloaded from your accounts and backed up on MOTOBLUR. View, search, and use them your way. Touch **Contacts** in the home screen.

To edit a contact, open it and touch Menu > **Edit**.

 
Tip: To search the list, just type a name. When you flick or drag this list, a scroll bar appears on the right. Drag the scroll bar to move the list faster.

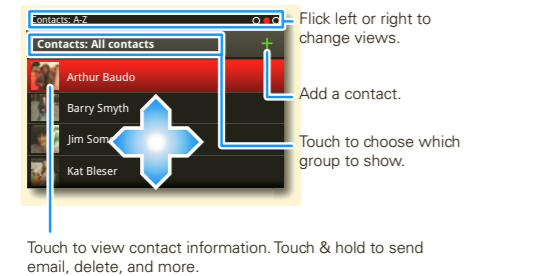

Messages

All of your messages stay in one place—text, IM, email, Facebook, and more. Touch > **Messaging** > **Universal Inbox**.

 
- To see other messages in your inbox, flick or drag up.
- To forward, save attachments, and more, open a message, then **touch and hold** it to open options.
- To enter names and text with **voice recognition** touch > **Voice Dialer**.

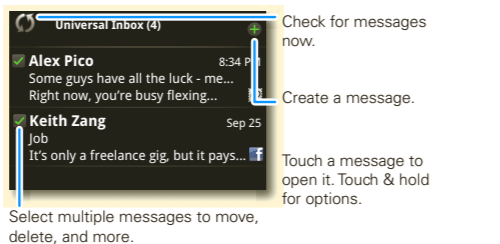

Personalize

Go ahead, add your personal touch. Change your widgets, wallpaper, ringtone, and more—make it yours.

 
- Home screen:** Touch and hold an empty spot until you see the **Add to Home screen** menu.
- Tip:** To move or delete something, touch and hold it, then drag it to another spot, panel, or the trash can.
- Ringtones & sounds:** Touch Menu > **Settings** > **Sound & display**.

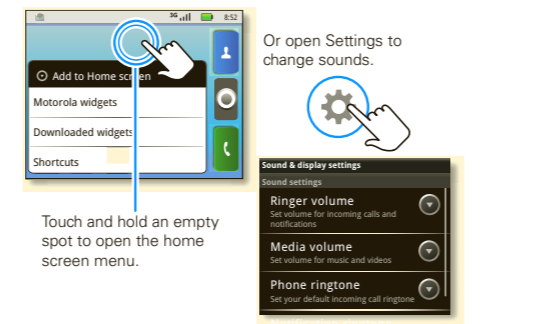

Media

See it, capture it, share it! Then, relax with some music.

 - Photos:** touch > **Camera**.
- Videos:** touch > **Camcorder**. To see what you've taken, touch > **Gallery**.
- Music:** touch > **Music** to access apps like **My Music, Radio, Music Videos, Community, and Song Identification**.

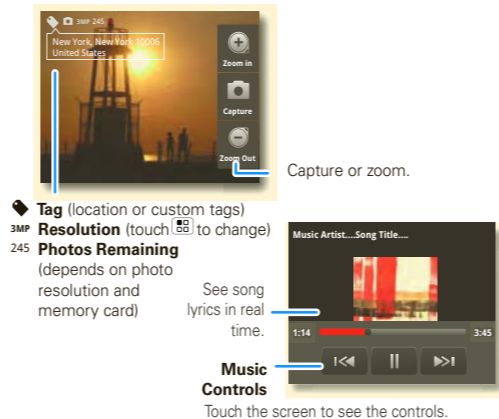

Web

 
Browse, download, and search (of course).

Note: You might not have this feature. For details, ask your service provider.

Press > **Browser**

To **enter a Web page address** in the browser or your home screen, just start typing.

Note: If you can't connect, contact your service provider.

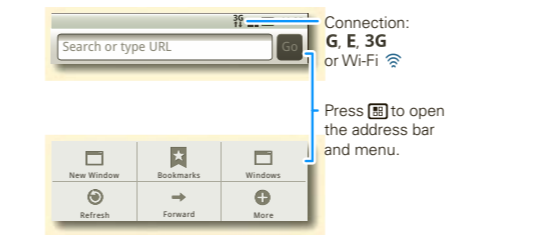


Social networking

The first time you turned on your phone, you registered for a MOTOBLUR account that manages your messages, contacts, and more. You can log into this account from a computer: www.motorola.com/mymotoblur

Note: You can add your **Facebook, MySpace, Twitter,** or other accounts to your phone. If you don't have accounts, you can visit their Web sites to set them up.

 
Press > **Accounts** > **Add account**

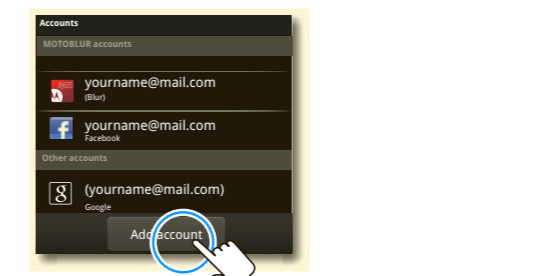

Go wireless

Lose the wires—to connect a Bluetooth™ headset or car kit, or a Wi-Fi™ network for fast Internet access, touch Menu > **Settings** > **Wireless & networks** > **Bluetooth settings** or **Wi-Fi settings**.

 Note: Your phone's Wi-Fi features and power levels are not allowed for outdoor operation in France. To avoid unlawful interference with radio signals, do not use the Wi-Fi features in France unless you are indoors.

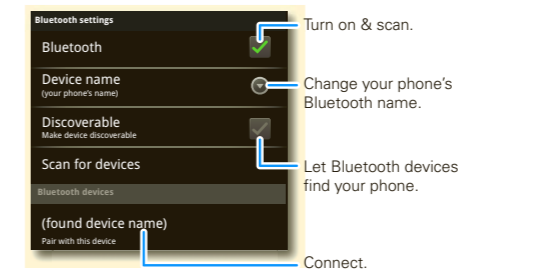

Tips & tricks

A few handy hints.

To...	
Return to the home screen	Touch Home .
Open option menus	Touch and hold an item, or touch Menu , to see all of your options.
See recently dialed numbers	Touch Dialer > .
Show last few apps used	Touch and hold Home .

To start getting the most out of your battery, touch Menu > **Settings** > **Battery Manager** > **Battery Profile:**

- Performance Mode** for constant data transfer and battery use
- Battery Saver Mode** when your battery is low
- Smart Mode** to limit your data and wireless connections during off-peak hours

In **Battery Manager**, you can also see what's been using the most battery.

Want more?

Accessories, free stuff, and help. We're here for you.

- Answers:** Touch > **Help Center**.
- Updates:** Phone updates, PC software, online help, *User Guide*, and more at www.motorola.com/mycharm.
- MOTOBLUR:** After you create a MOTOBLUR account, open it at www.motorola.com/mymotoblur.
- Accessories:** Find accessories for your phone at www.motorola.ca.

