





SPH-m800 PORTABLE Dual-Mode TELEPHONE

User Guide
Please read this manual before operating your phone, and keep it for future reference.







m800_UG_EN_07222008_D5














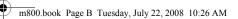



Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating thereto (the "Phone System"), is proprietary to Samsung and protected under federal laws, provincial laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Copyright

© 2008 Samsung Electronics Canada, Inc.. SAMSUNG is a registered trademark of Samsung Electronics Co., Ltd. and its related entities.

Licensed by Qualcomm Incorporated under one or more of the following patents: U.S. Patent No. 4, 901, 307; 5, 056, 109; 5, 099, 204; 5, 101, 501; 5, 103, 459; 5, 107, 225; 5, 109, 390. Printed in China

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Samsung Electronics Canada, Inc. is under license. Other trademarks and trade names are those of their respective owners.




















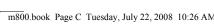







Except as set forth in the express warranty contained on the warranty page enclosed with the product, the purchaser takes the product "as is", and Samsung makes no express or implied warranty of any kind whatsoever with respect to the product, including but not limited to the merchantability of the product or its fitness for any particular purpose or use; the design, condition or quality of the product; the performance of the product; the workmanship of the product or the components contained therein; or compliance of the product with the requirements of any law, rule, specification or contract pertaining thereto. Nothing contained in the instruction manual shall be construed to create an express or implied warranty of any kind whatsoever with respect to the product. In addition, Samsung shall not be liable for any damages of any kind resulting from the purchase or use of the product or arising from the breach of the express warranty, including incidental, special or consequential damages, or loss of anticipated profits or benefits.



The privacy and copyright laws of Canada govern the disclosure, reproduction and distribution of data, media and other content, including music and video content. Certain activities, including downloads or transfer by any means (including, via cable, Bluetooth® or otherwise) of such content may be an infringement of privacy or copyright law. Neither Samsung Electronics Canada Inc. nor any of its affiliates shall be liable or responsible for any data or content disclosed, reproduced, downloaded or distributed by the user of this equipment.















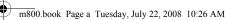










Table of Contents

Introduction
Your Device's Menu 2
Getting Started
Setting Up Your Device
Getting Help 9
Using Your Device
Device Basics
Phone
Settings
Security
Roaming
History
Contacts
Calendar
Speech to Action
microSD Card
Transferring Content to Your Device
Bluetooth 82
Data Services 87
Data Services: The Basics
Web and Data
Entertainment
Safety and Warranty Information 102
Index
















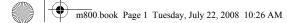





Introduction

This User Guide introduces you to the services and features of your new Samsung SPHm800. It's divided into four sections:

- Getting Started
- Using Your Device
- Data Services
- Safety and Warranty Information

Throughout this guide, you'll find tips that highlight special shortcuts and timely reminders to help you make the most of your new device and service. The Table of Contents and Index will also help you quickly locate specific information.



Please refer to the Important Safety Information section in Safety and Warranty Information (page 102) to learn about information that will help you safely use your device. Failure to read and follow the Important Safety Information in this User Guide may result in serious bodily injury, death, or property damage.


















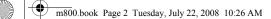





Your Device's Menu

The following table outlines your device's menu structure. For more information about using your device's menus, see "Navigating the Device Screens" on page 16.

To exit an active menu and return to the previous page:

■ Touching allows you to go back to a previous menu item.

Touching provides access to your device's Main Functions menu, such as:

- Favourites (🌋)
- Home (🚨)
- Fun (
- Web (

Favs
Touch > + to display the following options:
1: Application
1: Home 2: Fun 3: Web
2: Send Message/Email
3: Web Bookmarks
Home
Touch to display the following options:
1: Email

2: Messaging
1: Text 2: Picture
3: IM
4: VM
5: Calendar
6: Calculator
7: Notes
8: Clock
1: Alarm 2: Timer 3: Stopwatch 4: World Clock
9: Settings
1: Display

















m800.book Page 3 Tuesday, July 22, 2008 10:26 AM









- 2: Brightness
- 3: Backlight Dim
- 4: Backlight Off 5: Language
- 2: Volume
 - 1: Ringer Volume
 - 2: Always Vibrate
 - 3: System Volume
 - 4: Touch Vibrate
 - 5: Touch Tone
 - 6: Startup & Shutdown
- 3: Ringers
- 1: Voice Calls
 - 2: Voicemail
 - 3: Messages
- 4: Alarm/Calendar/Timer
 - 5: Voice Notification
- 4: General
 - 1: Phone Information
 - 2: Memory Status
 - 3: Connect to PC
 - 4: Airplane Mode 5: Location
 - 6: One Hand Operation
 - 7: TTY
 - 8: Touch Sensitivity 9: Calibration
 - 5: Bluetooth
 - - 1: Bluetooth 2: Visibility
 - 3: Trusted Devices
 - 4: Device Info
 - 5: Device Name
 - 6: Web Browser

- 1: Browser Mode
- 2: Launch Page 3: Clear Privacy Data
- 4: Clear Cache
- 5: Clear Cookies
- 6: Clear History
- 7: Privacy Mode
- 8: Javascript
- 9: Show Images
- 10: Send Referrer
- 7: Speech to Action
 - 1: Confirmation
 - 2: Adaptation
 - 3: Mode
 - 4: About
- 8: Lock
 - 1: Auto Lock
 - 2: Change Lock Code
 - 3: Show Alerts
- 9: Reset
 - 1: Reset Settings
 - 2: Delete Contents 3: Reset Phone
- 10: Parental Controls
 - 1: Parental Controls
 - 2: Change Parental Control Code
 - 3: Restriction

11: Roaming

- 1: Roaming Mode
- 2: Call Guard
- 3: Set NAM

Fun

to display the following Touch options:





















1: Music
2: TV
3: Radio
4: Navigator
5: Games & Apps 1. Get New Games 2. Get New Apps
6: Camera
7: My Albums 1. CAMERA 2. SAVED
8: Bluetooth
Web
Touch to display the following options:
1: Web
2: Search
3: News
4: Sports
5: Ringtones
6: Wallpapers

In Use Menu

While on an active call, touch the corresponding onscreen button to activate a feature:

- 1: Mute/UnMute
- 2: Speaker
- 3: Add Call
- 4: Contacts 5: Dialer

Once the call has been ended, touch the corresponding onscreen button to activate a feature:

- 1: Redial
- 2: Save
- 3: Done















m800.book Page 5 Tuesday, July 22, 2008 10:26 AM







Touching provides access to your device's Phone Functions menu, such as:

- Speed Dial (🎎)
- Contacts (🚇)
- History (🚉)
- Dialer ()

Speed Dial
Contacts
Touch to display the following options:
1: My Info
2: Services
History
Dialer



























Setting up service on your new device is quick and easy. This section walks you through the necessary steps to set up and turn on your device, set up your voicemail, establish passwords, and contact your service provider for assistance with your wireless service.

Setting Up Your Device

- 1. Remove the battery cover.
 - Press down with thumbs as indicated below.
 - While applying pressure, slide cover away from the camera lens (as shown below).







6 Getting Started













m800.book Page 7 Tuesday, July 22, 2008 10:26 AM



- 2. Install the battery.
 - Insert the battery into the opening on the back of the device, making sure the connectors align (1). Gently press down to secure the battery (2).
 - Position the battery cover (3) and firmly slide it in until you hear a click (4).



3. Press and hold (0) to turn the device on.



Your device will turn on, search for service, and then show the unlock screen.


















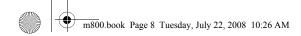





Note It is recommended that you Lock your device prior to insertion into a carrying case so that you do not accidentally activate any device features. Once the phone is securely installed into the case, you can then unlock the device.

- 4. Make your first call.
 - Press to access the *Phone Functions* menu.

 - Touch <a>C555-555-1234. (The phone number appears in the <a>C TALK button.)


Note

Your device's battery should have enough charge for you to turn your device on and find a signal, set up your voicemail, and make a call. You should fully charge your battery as soon as possible. See "Charging the Battery" on page 15 for details.







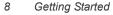
















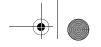

Getting Started



Getting Help

Client Care

From Your Phone's Dialer

- 1. Press and touch
- 2. Use the onscreen dial pad to enter * 6 1 1 and touch **611 ...

Directory Assistance

Directory Assistance gives you access to a variety of services and information. You can get up to three pieces of information per call, and the operator can automatically connect your call at no additional charge.

There is a per-call charge to use this service and you will be billed for airtime.

- 1. Press and touch
- 2. Use the onscreen dial pad to enter 4, 1 and touch 7411

Operator Service

Operator Service provides assistance when you place collect calls or when you place calls billed to a local telephone calling card or third party.

- 2. Use the onscreen dial pad to enter 0. and touch 70




















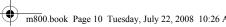







Device Basics

- Your Device (page 11)
- Viewing the Display Screen (page 13)
- Turning Your Device On and Off (page 14)
- Using the Battery and Charger (page 15)
- Navigating the Device Screens (page 16)
- Entering Text (page 23)

Your device is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you. This section will guide you through the basic functions and calling features of your device.













10





















Device Basics











Using Your Device: Device Basics



11











- 1. **Earpiece** lets you hear the caller and automated prompts.
- 2. Signal Strength Indicator represents the signal strength by displaying bars. The more bars displayed, the better the signal strength.
- 3. Main LCD (display) displays all of the information needed to operate your device, such as the call status, the Contacts list, the date and time, and the signal and battery strength.
- 4. Home Functions Key allows you to access your device's Home Functions menu, such as Favourites, Home, Fun, and Web.
- 5. **Back Key** returns you to the previous menu and deletes characters from the display when you are in text entry mode. This key also allows you to return to the previous page in the Web browser during your Web session.
- 6. Phone Functions Key allows you to access your device's Phone Functions menu, such as Speed Dial. Contacts, History, and Dialer.
- 7. Camera Lens as part of the built-in 2M pixels camera, lets you take pictures and videos.
- 8. **Speaker** lets you hear the different ringers and sounds. The speaker also lets you hear the caller's amplified voice in speakerphone mode.
- 9. Headset Jack allows you to plug in either a stereo headset (included) or an optional headset for convenient, hands-free conversations. CAUTION! Inserting an accessory into the incorrect jack may damage the device.
- 10. Accessories/Power Cable Jack allows you to connect a travel adapter, headset, or a USB
 - CAUTION! Inserting an accessory into the incorrect jack may damage the device.
- 11. Volume Key allows you to adjust the ringer volume or adjust the voice volume during a call. The volume key can also be used to scroll up or down to navigate through the different menu options.
- 12. *Microphone* allows other callers to hear you clearly when you are speaking to them.
- 13. Camera Key () lets you access the camera and take pictures and videos. Press and release for camera. Press and hold for camcorder.
- 14. **Speech to Action Key** (() activates the Speech to Action function that lets you dial phone numbers by speaking a name or a phone number.



Using Your Device: Device Basics

























- 15. microSD Slot lets you use the microSD™ card to expand the memory of your device. Some features of your phone require a microSD™ card to operate. (See "microSD Card" on page 70.)
- 16. **Power/Lock Key** () lets you turn the device on or off, or lock the device.

Viewing the Display Screen

Your device's display screen provides information about your device's status and options. This list identifies the symbols you'll see on your device's display screen:



shows your current signal strength. (The more lines, the stronger the signal.)



means your device cannot find a signal.



indicates you are roaming.



indicates you have new text messages. (It also indicates when you have a missed call or a voicemail message.)



indicates you have an upcoming alarm event.



indicates the EV-DO connection is dormant.



indicates your data service connection is active (data is being transferred).



indicates your 1X web connection is active.



indicates audible ringer volume is set.



indicates ringer volume is set to Vibrate All.



indicates Silence All mode is set.



indicates battery charge level (icon shown is full).



indicates battery charge level (icon shown is empty).



























indicates a battery alert, device will shutdown in 5 minutes (~5% power remaining).



indicates Bluetooth technology is active and enabled.



indicates the Bluetooth device is connected to a wireless headset.



indicates a connection issue with a paired Bluetooth device.



indicates Bluetooth is actively transmitting or receiving data.

Turning Your Device On and Off

Turning Your Device On

Press and hold the Power/Lock key (), located at the top of the device.

Once your device is on, it may display "No Service." When your device finds a signal and an available network, you are ready to begin making and receiving calls.

If your device is unable to find a signal after 5 seconds of searching, a Power Save feature is automatically activated that searches for a signal periodically without your intervention. When a signal is found, your device automatically returns to the unlock screen. (You can also initiate a search for service by pressing any key when your device is turned on.)







The Power Save feature conserves your battery power when you are in an area where there is no signal.

Turning Your Device Off

Press and hold for two seconds until you see the powering down animation on the display screen.

Your screen remains blank while your device is off (unless the battery is charging).





















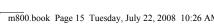





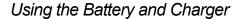



Use only Samsung-approved batteries and chargers with your device. The failure to do so may increase the risk that your device will overheat, catch fire, or explode, resulting in serious bodily injury, death, or property damage.

Installing the Battery

See "Setting Up Your Device" on page 6.

Removing the Battery

- 1. Make sure the power is off so that you don't lose any stored numbers or messages.
- 2. Press down on the end of the battery compartment cover (just below the embossed Samsung logo), slide the cover off, and remove the battery from the device.

WARNING

Do not handle a damaged or leaking Li-lon battery as you can be burned.

Charging the Battery

Charge your battery as soon as possible so you can begin using your device.

Keeping track of your battery's charge is important. If your battery level becomes too low, your device automatically turns off, and you will lose any information you were just working on. For a quick check of your battery level, glance at the battery charge indicator located in the upperright corner of your device's display screen. If the battery charge is getting too low, the battery) blinks and the device sounds a warning tone.

Always use a Samsung-approved desktop charger, travel adapter, or vehicle power adapter to charge your battery.




























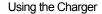

▶ Plug the flat end of the charger into the device's Accessories/Power Cable Jack and the other end into an electrical outlet.



Navigating the Device Screens

The SPH-m800 is a touch-sensitive device which allows you to not only select an onscreen option with a single touch, but also scroll through long menu lists by simply sliding up and down through the display with either a stylus or by using your fingertip. Avoid using sharp objects to prevent scratching or breaking the screen.

Accessing the Main Screens

When the device is locked and _____ is pressed, the SPH-m800 displays the unlock screen.

• To access the device's Phone Functions and Home Functions menus, you must first press and hold _____ to unlock the device (as described at the top of the unlock screen).

The **Phone Functions** menu is displayed first.

To access a menu:

- Press **a** to access the **Phone Functions** menus (Speed Dial, Contacts, History, Dialer).
 - or -
- Press to access the *Home Functions* menus (Favourites, Home, Fun, Web).

























Scrolling Through Screens

As you navigate through the device, options are presented onscreen as scrollable lists that allow up or down navigation.

Note

The One Hand Operation of the menus is set to Right Handed by default. See "Changing the One Hand Operation Setting" on page 19 to change to Left Handed.

To navigate through a scrollable menu:

- 1. Touch a desired onscreen menu tab (located at the bottom of the screen).
- 2. Touch and gently press an onscreen option.

qiT

The screen on your device is touch-resistive, which means that when you touch an item to select it or when you drag your finger to scroll, you have to press down slightly to activate the item. This helps avoid selecting menus or items unintentionally. You can adjust the touch sensitivity of your screen through the Settings menu. See "Touch Settings" on page 34 for details.

The smaller the contact point on your screen, the less pressure required. In this case, touch the screen with the tip of your finger, your fingernail, or the stylus.












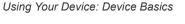













- 3. From the available list of options you can either:
 - Touch and gently press an entry to activate it.
 - Firmly press and slide your finger up or down the screen to scroll through lists of menu items. Scrolling on your SPH-m800 requires that your press more firmly on the screen than the gentle press required to open menu items.





When scrolling through a list (see illustration on the right above) make sure NOT to tap or press individual entries on the list. This action will open the list entry.

Selecting Items

As you navigate through the screens, you can select any option by pressing it with either your fingertip or a stylus.

For example, to view your text messages:



18 Using Your Device: Device Basics





















▶ Press and touch *Home* () > *Messaging*. (If you have any text messages, they are displayed.)

Displaying the Status Bar

This drop-down screen provides some quick device reference information such as: Date, Signal Strength, Ringer Status, Battery Charge Status, Power Vision status, as well as new messages and emails.

1. Touch the top line of the display screen.

Status Bar



2. Touch the popup screen once to close it or wait a few seconds for it to close automatically.

Changing the One Hand Operation Setting

The SPH-m800 allows you to configure the Power Search tab on screens such as those that display your Contacts entries or your music list, to be on either the right or left of the screen.

As an example, when the *Right Handed* option is selected, the Power Search tab is located along the right side of the screen (shown in the image on page 21) and Contacts entries are then selected by pressing their name fields along the left side of the LCD.












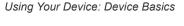














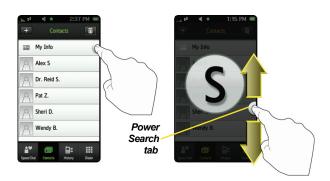



- 1. Press and touch Home () > Settings > General > One Hand Operation.
- Touch either Right Handed (to place the scrolling zone along the right of the LCD) or Left Handed (to place the scrolling zone along the left of the LCD).



20 Using Your Device: Device Basics

















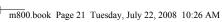





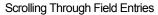

There are several pages where you'll be asked to make a field selection and then enter a value by either touching the up/down selection arrows or quickly sliding through these values by using either your fingertip or a stylus. One such example can be found within the Alarm page.


- 1. Press 🛖 and touch *Home* (🧱) > *Clock* > *Alarm* > 🛨
- 2. Touch the *Time* field and then adjust the hour and minutes values by using either the up/down input arrows or by quickly sliding over the numbers.









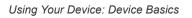



















Detaching Entries

The SPH-m800 allows you to detach an entry from a list and then either move its location (within that same list) or drag it into the Trash Bin for deletion.

- From a screen containing entries, touch and hold an entry.
 You will notice that it turns a lighter green as it detaches from the list.
- While still holding the entry, wait until it appears to detach from the current list and an outline forms over its current location.
- 3. Place it in a new location (as with a Speed Dial entry) by hovering between two existing entries and then releasing it.

Delete it by dragging the entry over the Trash Bin () and then releasing it. The entry then disappears into the icon.



































Backing Up Within a Menu

To go to the previous menu:

▶ Press 【— .



There might be cases where pressing this button will not exit the current menu. In these cases, try pressing another Functions menu button to "release" the current activity. For example, if you are in the dialer and pressing doesn't send you to the previous menu, press .

To return to the unlock screen:

 Press to lock the device (turn off the display) and then press again to reveal the unlock screen.

To exit out of your current application:

▶ Press ♠ or ♠

Entering Text

Selecting a Text Input Mode


Your device provides convenient ways to enter letters, numbers, and symbols whenever you are prompted to enter text (for example, when adding a Contacts entry or when text messaging).





- 1. From a screen where you can enter text, touch the text entry field.
- 2. From the onscreen keyboard, touch the button (shown above) to change the text input mode.
 - Touching 🛅, 🚄, or 🗔 changes the onscreen keyboard orientation between Portrait, Hand Writing, or Landscape views, respectively.
- 3. Touch one of the following options:
 - abc to enter alphabetic characters (both uppercase and lowercase) using the keyboard.



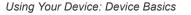













22

Device Basics









■ 123 !@# to enter numbers or symbols with the keyboard.

When entering text, touch Caps to change letter capitalization (ABC or abc).

Entering Text Using ABC Mode

- 1. Touch the abc button at the bottom left of the onscreen keyboard. (See "Selecting a Text Input Mode" on page 23.)
- 2. Enter the desired text using the corresponding keys. Change the case of the alphabetic characters by touching *Caps*. (Touch *Caps* twice for caps lock.)
 - If you make a mistake, press to erase a single character.
 - Press and hold to erase an entire word or line.
- 3. Insert a new paragraph by touching
- 4. When a current letter is capitalized, consecutive letters return to lowercase until the onscreen Caps key is touched again.
- 5. Touch **Done** to complete the text entry.

Entering Numbers and Symbols

- 1. Touch 123 !@#. When the keyboard displays both numbers and symbols, touch the appropriate key. (See "Selecting a Text Input Mode" on page 23.)
- 2. Access additional symbols by touching More.
 - Touch 123 to return to the Numbers keyboard.
- 3. Insert a new paragraph by touching
- 4. Touch **abc** to return to entering letters.
- 5. Touch *Done* to complete the numeric or symbol entry and exit the onscreen keyboard.

Using the Hand Writing Mode

The m800 device is capable of recognizing hand written characters etched onscreen.



To properly recognize the written characters and to prevent scratching of the LCD, it is recommended that you use the stylus pen.



Using Your Device: Device Basics



















- Touch to change the screen to portrait mode, if it isn't in portrait mode already.
- 2. Touch \(\rightarrow \) to change the screen to Hand Writing mode.
- 3. Use the stylus to write out each character.
- 4. Change the case of the alphabetic characters by touching
- 5. When a current letter is capitalized, consecutive letters return to lowercase until the onscreen Caps key is touched again.





Note

Numbers are not recognized in the hand writing mode.

- 6. Insert a new paragraph by touching
- 7. Touch **Done** to complete the numeric or symbol entry.





























Phone

- Displaying Your Phone Number (page 26)
- Making and Answering Calls (page 26)

Displaying Your Phone Number

▶ Press and touch *Home* > *Settings* > *General* > *Phone Information*. (Your phone number and other information about your device and account will be displayed.)

Making and Answering Calls

Making Calls

Placing a call from your device is as easy as making a call from any landline phone.

- 1. Make sure your device is on.
- 2. Press and touch Dialer (!!!).
- 3. Enter a phone number using the onscreen dial pad. (If you make a mistake while dialing, press to erase the numbers.)
- 4. Touch (*555-555-1234). (The phone number appears in the * TALK button.)
- 5. In a single motion, touch and slide Find Call to the right when you are finished.

To redial your last outgoing call, touch either Redial or access the History page and then touch the number from the list.

















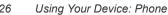



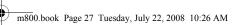







To answer a call while the device is active:

- 1. Make sure your device is on. (If your device is off, incoming calls go to voicemail.)
- 2. Touch Answer to answer an incoming call. Other options include:
 - Silent to mute the ringer.
 - Ignore (touch and slide to the right) to send the call to your voicemail box.

Your device notifies you of incoming calls in the following ways:

- The device rings or vibrates.
- The backlight illuminates.
- The screen displays an incoming call message.

If the incoming call is from a number stored in your Contacts, the entry's name is displayed. The caller's phone number or picture may also be displayed, if available.



























Answer

Ignore

416-356-8737

slide to answer





To answer a call while the device is locked:

When the device is locked, neither the screen nor side buttons are active. This prevents accidental activation of a device feature or screen.

When you receive an incoming call, your screen illuminates and indicates the Caller ID information.

If the caller has been previously entered into your Contacts list, the name, number, and associated photo (if available) will be displayed as a floating card on the screen.

- To answer the call, slide this virtual card up towards the Answer field.
- To ignore the call, slide this virtual card down towards the lanore field.

Ending a Call

▶ In a single motion, touch End Call ♦ and slide to the right.

Calling Emergency Numbers


You can place calls to 911, even if your device is locked or your account is restricted.

- 1. Press and touch *Dialer* (iii).
- 2. Enter 9 1 1 and touch 7911

Note

When you place an emergency call, your device automatically enters Emergency mode and remains in this mode until you manually exit.



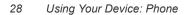



























In-Call Options

To select an in-call option, touch the corresponding onscreen button. The following options may be available:

- Mute or UnMute to toggle the onboard microphone's mute state (on/off).
 - Touch Mute during a call to mute the microphone.
 - Touch UnMute to unmute the microphone.
- On or Off to route the device's audio through the speaker or through the earpiece.
- Move the slider to **On** to route the device's audio through the speaker. (You can adjust the speaker volume using the volume keys on the side of the device.)
- Move the slider to **Off** to use the device's earpiece.

WARNING

Because of higher volume levels, do not place the device near your ear during speakerphone use.


- Add Call to initiate a three-way call.
- Contacts () to display your Contacts list.
- Dialer () to display the onscreen dial pad where you can choose End Call to end the call
 or Back to Call to cancel the current dialer operation.
- Press to access a variety of In Call Applications, without ending your current call, such
 - Contacts, Call History, Messaging, Notes, Calendar, Clock, Calculator, and Phone Info.









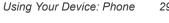















End-of-Call Options

After you receive or make a call, the device provides you with three end-of-call options:

- Redial to dial the last outgoing or received phone number.
- Save to store the current phone number into your Contacts list.

Note

If the current number has already been stored to your Contacts list, Save is replaced with Contacts.

- Contacts to go to the corresponding entry in your Contacts list.
- ▶ Press **Done** to exit from the end-of-call screen and display the Speed Dial screen.

If no action is taken after a few seconds, the device automatically returns to the Speed Dial screen.







Using Your Device: Phone







30









Settings

- Sound Settings (page 31)
- Display Settings (page 33)
- Touch Settings (page 34)
- Location Settings (page 35)
- Airplane Mode (page 36)
- TTY Mode (page 36)
- Favourites (page 37)
- Parental Controls (page 37)

You can customize your device to sound, look, and operate just the way you want it to. This section describes how to change your device's settings to best suit your needs. Take a few moments to review these options and to adjust or add settings that are right for you.

Sound Settings

Ringer Types

Ringer types help you identify incoming calls and messages. You can assign ringer types to individual Contacts entries, types of calls, and types of messages.

Selecting Ringer Types

Your device provides a variety of ringer options that allow you to customize your ring and volume settings. These options allow you to identify incoming calls, messages, and other alerts by the ring.

- 1. Press and touch *Home* () > *Settings* > *Ringers*.
- 2. Locate an alert type (Voice Calls, Voicemail, Messages, Alarm/Calendar/Timer).
 - Touch | ▶ | to play a sample of the current ringer.
- 3. Scroll through the list of available ringers.
 - Touch to play a sample of a highlighted ringer.
























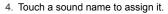

Activating Voice Notification

This feature will call out a phone number instead of using your assigned ringer.

- 1. Press and touch *Home* () > *Settings* > *Ringers*.
- 2. Locate the Voice Notification field.
- 3. Touch and drag the slider to either On or Off.

Volume Settings

Adjusting the Ringer Volume

- 1. Press and touch *Home* () > *Settings* > *Volume*.
- 2. Touch and drag the Ringer Volume slider left or right to adjust the volume level.
- 3. Touch and drag the Always Vibrate slider left or right to turn the feature either On or Off.
- Once you are done, press

Tip

You can adjust the ringer volume (or the earpiece volume during a call) by using the volume key on the left side of your device.

Adjusting the System Volume

- 1. Press and touch *Home* () > *Settings* > *Volume*.
- 2. Touch and drag the System Volume slider left or right to adjust the volume level.

















Adjusting Other Volume Settings

- 1. Press and touch Home () > Settings > Volume.
- 2. Touch and drag the corresponding sliders left or right to turn the feature either On or Off.
 - Choose from: Touch Vibrate, Touch Tone, and Startup & Shutdown.
- Once you are done, press

e, press

Silence All

Activating Silence All allows you to mute all sounds without turning your device off.

▶ Press and hold the volume key down until Silence All appears onscreen.

To deactivate Silence All:

▶ Press and hold the volume key up repeatedly to select a new volume level.

Display Settings

Backlight

Select how long the display screen remains backlit and time until it turns off after any action. *To set the backlight dim time:*

- 1. Press and touch *Home* () > *Settings* > *Display* > *Dim*.
- 2. Touch a time setting.

Note

Selecting **Never Dim** will remove the option to turn off the backlight. While this is beneficial for viewing long videos, for example, please set the **Dim** setting back to a shorter interval afterwards so that the battery charge can be maintained for other purposes.

Note

Long backlight settings reduce the battery's talk and standby times.

















Setti













To set the backlight deactivation time:

- 1. Press and touch *Home* () > *Settings* > *Display* > *Off*.
- 2. Touch a time setting.

Background

Choose what you see on the screen while powering on or off and when in the unlock screen.

- 1. Press and touch *Home* () > *Settings* > *Display*.
- 2. Touch the Background field.
- 3. Choose a source for your new image by touching the corresponding onscreen button. (A list of available images will be displayed.)
 - Choose from: Take Picture, Preset Images, My Albums, or Downloads.
- 4. Scroll through the images by sliding your fingertip or stylus across the screen.
- 5. With the selected image onscreen, touch Assign.

Brightness

Adjust your screen's brightness to suit your surroundings.


- 1. Press and touch *Home* () > *Settings* > *Display*.
- 2. Touch and drag the slider left or right to adjust the brightness level.

Touch Settings

Touch Sensitivity

The SPH-m800's touch screen requires a small amount of pressure to operate. The smaller the size of your contact point on the screen, the less the amount of pressure required. The tip of your finger will work better than the pad of your finger, and a fingernail or stylus will require even less pressure. Initially, you device's sensitivity is set to its highest level. Once you have discovered your preferred method for operating your touch screen, you may find that it is too sensitive for some applications. You can adjust how sensitive the device is to touch actions on the screen.



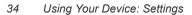























- 1. Press and touch *Home* () > *Settings* > *General* > *Touch Sensitivity*.
- 2. Touch and drag the slider left or right to adjust the sensitivity level.
 - Touch the onscreen *Touch here* button to gauge the response of the new sensitivity level.
- 3. Once you are done, touch Done.

Screen Calibration

Use this menu to re-align the screen's touch accuracy. This should only be done if the device does not appear to be responding properly to onscreén touches.

- 1. Press and touch *Home* () > *Settings* > *General* > *Calibration*.
- 2. Touch **OK** and follow the onscreen instructions.

Important

For this calibration process to complete successfully, it is recommended that you use a stylus to accurately set the new calibration touch points.

Location Settings

Your device is equipped with a Location feature for use in conjunction with location-based services. The Location feature allows the network to detect your position. Turning Location off will hide your location from everyone except 911.

Note

Turning Location on will allow the network to detect your position using GPS technology, making some applications and services easier to use. Turning Location off will disable the GPS location function for all purposes except 911, but will not hide your general location based on the cell site serving your call. No application or service may use your location without your request or permission. GPS-enhanced 911 is not available in all areas.











Using Your Device: Settings
















To enable your device's Location feature:

- 1. Press and touch *Home* () > *Settings* > *General*.
- 2. Touch and move the Location slider to **On**. Read the disclaimer and touch **OK**.
 - Move the Location slider to Off to disable this feature.

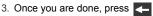

Airplane Mode

Airplane Mode allows you to use many of your phone's features, such as Games, etc., when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When your phone is in Airplane Mode, it cannot send or receive any calls or access online information. All incoming calls will be sent directly to your voicemail box.

To enable or disable Airplane Mode:

- 1. Press and touch *Home* () > *Settings* > *General* .
- Touch and move the Location slider to On. Read the disclaimer and touch OK. Move the Location slider to Off to disable this feature.
- 3. Once you are done, press

TTY Mode

Your device is Text Telephone-compatible. Connect the TTY equipment to the headset jack. Before you can use your phone with a TTY device, you'll need to enable TTY.


To enable TTY:

- 1. Press and touch *Home* () > *Settings* > *General* > *TTY*.
- Read the disclaimer and touch OK.
- 3. Touch TTY Full, TTY + Hear, or TTY + Talk.

To disable TTY:

1. Press and touch *Home* () > *Settings* > *General* > *TTY*.



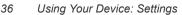

























- Read the disclaimer and touch OK.
- 3. Touch TTY Off.

Favourites

Your device offers you the option of assigning up to 12 shortcuts to favourite or often-used functions. You can use the trunction to quickly launch your personally designated shortcuts.

Press and touch Favs ().

To add an application as a Favourite Function:

- 1. Touch the onscreen **Tap to add** button.
- 2. Touch Application and choose from one of the following category types: Home, Fun, or
- 3. Touch an application from one of these three category functions to add it to the Favourites
- 4. Repeat this process to add other functions such as **Send Message/Email**, and **Web** Bookmarks.

Parental Controls

Your device offers Parental Control capability. One or more functions such as Voice, Messaging, Web Browser, and Camera can be restricted from use.

To turn on Parental Controls:

- 1. Press and touch *Home* () > Settings > Parental Controls.
- 2. Touch and move the Parental Controls slider to On.
- 3. Enter the Parental Control code and touch **Done**.

To change the Parental Control Code:


1. Press and touch Home () > Settings > Parental Controls > Change Parental Control Code.









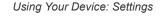














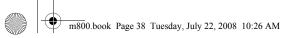





- 2. Enter the existing Parental Control code and touch *Done*.
- 3. Enter the new Parental Control code and touch **Done**.
- 4. Re-enter new code and touch Done.

To change the restriction of device functions:

- 1. Press and touch *Home* () > *Settings* > *Parental Controls.*
- 2. Enter the Parental Control code and touch **Done**.
- 3. Touch Restriction.
- Touch and move the slider to On for Voice, Messaging, Web Browser, or Camera. Touch Allowed Numbers for Voice and Messaging to select permitted contacts.







Using Your Device: Settings






















- Using the Lock Feature (page 39)
- Resetting Your Device's Settings (page 40)
- Deleting Your Device's Contents (page 40)
- Resetting Your Device (page 41)

By using the security settings on your device, you receive peace of mind without sacrificing flexibility. This section will familiarize you with your device's security settings. With several options available, you can customize your device to meet your personal needs.

Using the Lock Feature

Locking Your Device

When your device is locked, your screen turns off. Regaining access requires entering a lock code.

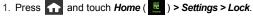

- 2. Touch and drag the **Auto Lock** slider to the **On** position.
- 3. Read the onscreen information and touch **OK**.
- Press to return to the previous screen.

Unlocking Your Device

- 1. Press on to turn the device on.
- 2. Enter your lock code.





























Changing the Lock Code

- 1. Press and touch Home () > Settings > Lock > Change Lock Code.
- 2. Use the onscreen dial pad to enter your new lock code and touch **Done**.
- 3. Re-enter your new lock code and touch Done.

Resetting Your Device's Settings

Resetting the device restores all of the factory defaults, including the ringer types and display settings. Onboard data such as Contacts, History, Scheduler, and Messaging are not affected.

- 1. Press and touch *Home* () > Settings > Reset > Reset Settings. (A disclaimer is displayed.)
- 2. Read the disclaimer and touch Proceed.
- 3. Use the onscreen dial pad to enter the lock code provided on the disclaimer.
- 4. Touch **Done** to restore all factory settings.

Deleting Your Device's Contents

You can delete the contents on your device such as Contacts, Downloads, Messages, Calendars, Speed Dials, and Favourites.

- 1. Press and touch Home () > Settings > Reset > Delete Contents.
- Touch Delete Contacts, Delete Downloads, Delete Messages, Delete Calendars, Delete Speed Dial, or Delete Favourites.
- 3. Read the prompt and touch Delete.
- 4. Use the onscreen dial pad to enter the lock code provided on the screen.
- 5. Touch **Done** to restore all factory settings.



40 Using Your Device: Security




















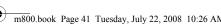







Resetting the device restores all of the factory defaults, including the ringer types and display settings and deletes all downloaded content stored on the phone.

- 1. Press and touch *Home* () > *Settings* > *Reset* > *Reset Phone*. (A disclaimer is displayed.)
- 2. Read the disclaimer and touch Proceed.
- 3. Use the onscreen dial pad to enter the lock code provided on the disclaimer.
- 4. Touch Done to restore all factory settings.

Note

Files saved on the memory card are not affected by the reset operations.






















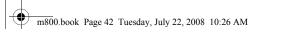






Roaming

- Understanding Roaming (page 42)
- Setting Your Device's Roam Mode (page 43)
- Using Call Guard (page 43)
- Setting NAM (page 44)

Roaming is the ability to make or receive calls when you're off the home network. Your new device works anywhere on your service provider's network and allows you to roam on other networks where your service provider has implemented roaming agreements with the other carriers. This section explains how roaming works as well as special features that let you manage your roaming experience.

Understanding Roaming

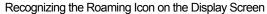


Your device's display screen always lets you know when you're off the network. Anytime you are roaming, the device displays the roaming icon (). If you are roaming on a digital system, the roaming icon will be displayed along with the text - Digital Roam -.



Remember, when you are using your device off the network, always dial numbers using 11 digits (1 + area code + number).



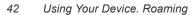



















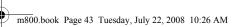



Roaming



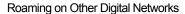

When you're roaming on digital networks, you may not be able to access certain features, depending on the available network.



If you're on a call when you leave the network, your call is dropped. If your call is dropped in an area where you think service is available, turn your device off and on again to reconnect to the network.

Setting Your Device's Roam Mode

Your device allows you to control your roaming capabilities. By using the Roaming menu option, you can determine which signals your device accepts.

Choose from two different settings on your device to control your roaming experience.

- 1. Press and touch *Home* () > *Settings* > *Roaming*.
- 2. Touch the *Roaming Mode* field and touch one of the following options:
 - Automatic: This setting seeks service. When service is unavailable, the phone searches for an alternate system.
 - Home Only: This setting allows you to access the home network only and prevents roaming on other networks.

Using Call Guard

Your device has two ways of alerting you when you are roaming off the home network: the onscreen roaming icon and Call Guard. Call Guard makes it easy to manage your roaming by requiring an extra step before you can place or answer a roaming call. (This additional step is not required when you make or receive calls while on your home network.)

To turn Call Guard on or off:

- 1. Press and touch Home () > Settings > Roaming.
- 2. Move the Call Guard slider to the **On** or **Off** position.






















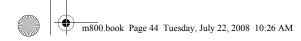





Setting NAM

Your device has multi-NAM (Number Assignment Module) capability.

To set NAM:

- 1. Press and touch *Home* () > *Settings* > *Roaming*.
- 2. Touch the Set NAM field.
- 3. Touch NAM1 or NAM2.







44 Using Your Device. Roaming





















- Viewing History (page 45)
- History Options (page 46)
- Making a Call From History (page 47)
- Saving a Phone Number From History (page 48)

History keeps track of incoming calls, outgoing calls, and missed calls. This section guides you through accessing and making the most of your History.

Viewing History


History is a list of up to 240 (80 incoming, 80 outgoing, and 80 missed) phone numbers (or Contacts entries) for calls you placed, accepted, or missed. History makes redialing a number fast and easy. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

When you place, accept, or miss a call, a record of the call is saved in the History list. When you view the numbers in the History list, an icon to the left of the number indicates the call type:

- Missed: Indicates any missed calls.
- Received: Indicates any received calls that were answered.
- Dialed: Indicates all outgoing calls made from your device.

Each entry contains the phone number (if it is available) and Contacts entry name (if the phone number is in your Contacts). Duplicate calls (same number and type of call) may only appear once on the list.

To view History:

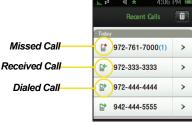























Note History records only calls that occur while the device is turned on. If a call is received while



History Options

- 2. Touch > to display an entry's options.

Tip An unknown entry only displays a contact number.

3. If the entry is not currently part of your Contacts list, touching > reveals the following options:

your device is turned off, it will not be included in the device's history.

- Save lets you store the entry into your Contacts list.
- Call dials the phone number for the entry.
- Message lets you send a text message to the entry.
- History provides a specific call history list for the current entry.

Tip A known entry (found within the Contacts list) is shown with the entry name and contact number.



46 Using Your Device: History

























- Caller's name (if the number is already in your Contacts).
- Edit Entry () lets you either edit the number (if already in your Contacts list) or create a new entry.
- Send New Text Message () lets vou send a text message to the entry.
- <Name's> history provides a specific call history list for the current entry.
- Send Contact delivers the current history entry information to an available user via a wireless Bluetooth connection. See "Bluetooth" on page 82.

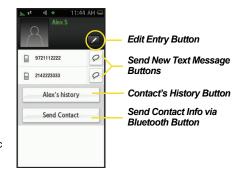

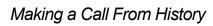

- 1. Press and touch *History* ().
- 2. Touch an entry's name or number.

Note

You cannot make calls from History to entries identified as No ID or Restricted.












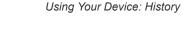













Saving a Phone Number From History

Saving a New Number from History

- 1. Press and touch *History* ().
- 2. Touch >.
- 3. Touch Save.
- 4. Follow the onscreen prompts to save the new entry.
- 5. Touch *Done* to save the new entry.

Note

You cannot save phone numbers already in your Contacts or from calls identified as No ID or Restricted.







Using Your Device: History














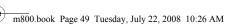







- Adding a New Contacts Entry (page 49)
- Saving a Phone Number (page 50)
- Finding a Contacts Entry and Making a Call (page 52)
- Contacts Entry Options (page 53)
- Deleting Contacts Entries (page 55)
- Assigning Speed Dial Entries (page 55)
- Assigning a Ringer Type to an Entry (page 57)
- Services Contacts (page 57)

Your device's Contacts list helps you stay in touch with family, friends, and colleagues by keeping track of all their contact information. This section explains how to use your device's Contacts list.

Adding a New Contacts Entry

Your device can store up to 600 Contacts entries. Contacts entries can store up to a total of 4200 phone numbers, and each entry's name can contain 64 characters.

- 2. Touch in the upper-left corner to begin creating a new Contacts entry.
- Touch the Enter Name field, use the onscreen keyboard to enter a name, and press Done. (See "Entering Text" on page 23.)
- Touch the Add Number field, use the onscreen numeric key pad to enter a phone number, and press Done.
- 5. Touch a label for the number (*Mobile*, *Home*, *Work*, *Pager*, or *Others*).

















Conta













- 6. Use your fingertip to scroll up and down the screen and touch any of the remaining fields to update their information and press *Done*. Available fields include:
 - <image icon> to assign a picture to the entry. Choose an option to select a picture:
 - Take Picture to use the camera to take a new picture and assign it to this entry.
 - My Albums to retrieve a previously stored image from your My Albums folder and assign it to this entry.
 - Downloads to access the Downloads folder and choose and assign a previously downloaded image.
 - Add Number to add a phone number to the entry.
 - Add Email to add an email address to the entry.
 - Enter Address to add a mailing address to the entry.
 - Set Ringer to assign a custom ring tone to the entry. This custom ring tone will be played when an incoming call from this entry is announced.
 - Enter URL to add a Web site's URL to the entry.
 - Enter Memo to add a note, street address, or other information.
- Touch *Done* to save the entry. Once saved, the new entry is displayed within the Contacts page. (See "Contacts Entry Options" on page 53.)



ICE - In Case of Emergency

To make it easier for emergency personnel to identify important contacts, you can list your local emergency contacts under "ICE" in your device's Contacts list. For example, if your mother is your primary emergency contact, list her as "ICE—Mom" in your Contacts list. To list more than one emergency contact, use "ICE1—____," "ICE2—___," etc.



You can transfer all of your contacts from your old compatible phone to your SPH-m800. See "Transferring Contacts" on page 75.

Saving a Phone Number

To save a number from the unlock screen:

1. Press (0) to unlock your device.



Using Your Device: Contacts






50









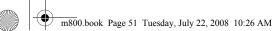



- 2. Press and touch *Dialer* (iii).
- 3. Enter a number and touch Save.
- 4. Touch either New Contact or Existing Contact.
- 5. Touch a label (Mobile, Home, Work, Pager, Others).
- 6. Touch the *Enter Name* field and use the keyboard to enter the new contact name.
- 7. Touch **Done** to store the new name.
- 8. Enter information into any of the other desired fields by using the keyboard/dial pad.
- 9. Touch **Done** to save the new entry.

To save a number from the end-of-call screen:

After you have received or made a call, the device displays end-of-call options.

- 1. Touch and slide End Call to the right to end the current call.
- 2. Touch Save.
- 3. Follow the onscreen prompts to save the number.
- 4. Touch Done to save the new entry.

To save a number from the History screen:

- 1. Press and touch *History* ().
- 2. Touch > adjacent to an entry.
- 3. Touch Save.
- 4. Follow the onscreen prompts to save the number.
- 5. Touch Done to save the new entry.































You can find a Contacts entry in the alphabetical listing of the names in your Contacts. Follow the steps below to find Contacts by name.

Note


Press and hold the Power Search tab shown below to scroll through the alphabet. Stop at the starting letter of the contact's name.

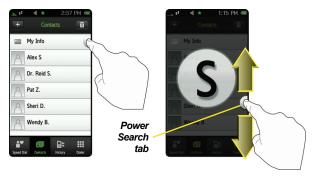

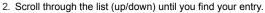

3. Touch the name you want to call from the list.



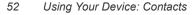






















To access the Contacts entry's options page:

- 1. Press and touch *Contacts* (
- 2. Touch an entry to display its available options page where you can edit the Contacts entry, send a new text message, view specific calling history or share information via

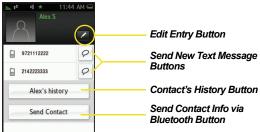



- 1. From the options page, touch to edit the Contacts entry information.
- 2. Touch a field and make changes to the information on this page.
- 3. Touch *Done* to save the new updates. See "Adding a New Contacts Entry" on page 49.

Using the Phone Number Options

- 1. From the options page, touch $\boxed{\mathcal{P}}$ to access the New Text Message screen where you can begin sending an SMS text message to a selected phone number.
- 2. Follow the onscreen instructions.


























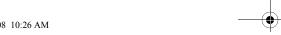





- From the options page, touch the contact's *history* button to view a list of those calls and text messages made and received from this entry.
 - This history list is specific to this entry and includes calls and text messages to and from all phone numbers used by this entry.

Sending Contact Information via Bluetooth

Prior to using this feature, Bluetooth must first be enabled (). See "Turning Bluetooth On and Off" on page 82.

- From the options page, touch the Send Contact button to begin searching for any visible and available Bluetooth device within your communication range.
- 2. Touch an available Bluetooth device entry from the list.

Note

To be detected by the SPH-m800, an external Bluetooth device must be both active and visible.

- Touch Send to begin the upload process. Follow the onscreen instructions. See "Bluetooth" on page 82.
- The recipient must then accept the incoming contact card.
 - Accepting places a copy of the incoming entry into their Contacts entry list.





Using Your Device: Contacts















To delete selected Contacts entries:

- 1. Press and touch Contacts (
- 2. Touch (to open the Delete menu.
- 3. Touch any Contacts entries you wish to delete. Selected entries are highlighted in green.
- 4. Touch and drag Delete Selected to the right.

Individual entries can also be deleted by touching and holding it until it detaches from the list, dragging it over the Delete icon, and then lifting your finger off the screen to release it into the Trash Bin.

Assigning Speed Dial Entries

Your device can store up to 99 phone numbers within the Speed Dial list.

Only phone numbers that are stored in Contacts can be added to the Speed Dial list.

You can also rearrange existing speed dial entries to appear in any desired order within the Speed Dial list.

To add a phone number to the speed dial list:

- 1. Press . The **Speed Dial** () screen appears by default.
- 2. To begin adding an existing number, touch either + or the onscreen *Tap to add* button.
- 3. Use your fingertip to scroll through the available list of Contacts entries.





























- 4. Touch the name of a Contacts entry.
 - The Assign a Speed Dial page then displays a list of available Contacts entries from which you can then select a desired phone number.



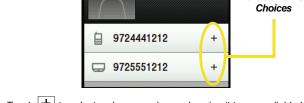

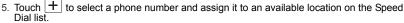

- The icons to the left of the phone number correspond to their previously selected label.
- Although the same name will appear in the Speed Dial list, the icon adjacent to the entry's name indicates which phone number was assigned.

Finding Speed Dial Numbers

- 1. Press . The **Speed Dial** () screen appears by default. See "Assigning Speed Dial Entries" on page 55.
- 2. Scroll down through speed dial entries by sliding your fingertip up or down.
 - Speed dial numbers are displayed in the order in which they were added but can be reorganized to appear in any order.
- 3. Touch the entry to dial the entry's default phone number.




















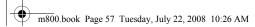



Assign a ringer type to a Contacts entry so you can identify the caller by the ringer type. (See "Ringer Types" on page 31.)

- 1. Press and touch **Contacts** (_____).
- Touch a Contacts entry.
- 3. Touch to play a sample of the current ringer, if one exists.
- Touch to edit the entry.
- 5. Scroll through the page by sliding your finger up and down on the screen until you locate the **Set Ringer** field.
- 6. Touch the entry within the Set Ringer field and scroll through the list of available ringer sounds.
 - Touch | left to play samples of selected ringers.
- Touch a ringer name to assign it.
- 8. Touch **Done** to save the new ringer type.

Services Contacts

You can dial preset Service numbers from the Contacts menu.

- 1. Press and touch Contacts () > Services.
- 2. Touch Telus Operator, Non Emergency, Air&Marine Rescue, Directory Assistance, Client Care, Client Care, Service for the Deaf, and Client Care.
- In a single motion, touch and slide Find Call to the right when you are finished.





























- Adding an Event to the Calendar (page 58)
- Event Alert Menu (page 59)
- Viewing Events (page 60)
- Erasing a Day's Events (page 60)
- Erasing Selected Events (page 60)
- Erasing All Events (page 61)
- Using Your Device's Alarm Clock (page 61)
- Using the Timer (page 62)
- Using the Stopwatch (page 63)
- Using the World Clock (page 63)
- Using Your Device's Notepad (page 65)
- Using the Calculator (page 65)

Your device is equipped with several personal information management features that help you manage your busy lifestyle. This section shows you how to use these features to turn your device into a time management planner that helps you keep up with your contacts, schedules, and commitments.

Adding an Event to the Calendar

Your Calendar helps you organize your time and reminds you of important events.

- 1. Press and touch *Home* () > *Calendar*.
- 2. Select the day to which you would like to add an event by touching a day on the calendar. Touch or to view a different month and then touch a day.
- Touch to open the New Event window.




















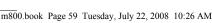





- 4. Touch Enter Title to create a new title for the event.
 - Enter the event title and touch Done to save the title.
- 5. Select a start and end time for the event by touching the **Start** and **End** fields.
- 6. Assign an hour and minute by either:
 - Scrolling through both reels (hour and minute) by sliding your finger up and down on the screen.
 - or –

Touching the arrows above or below each field.

Touching and holding down on the arrows (up or down) increases the speed at which the numbers scroll through each reel.

- Drag the slider to am or pm.
- Once you are done setting the times, touch Done.
- 7. Select an alert time for the event by touching the *Alert* field and selecting an option.
- 8. Select a repeating status for the event by touching the Repeat field and selecting an option.
- 9. Select a ringer type for the alarm by touching **Set Ringer**.
 - Touch | ▶ | to play a sound sample for a selected ringer.
 - If a ringer has been previously selected, scroll through the list of available ringer sounds and touch a ringer name to reassign it.
- 10. Touch Call Reminder to associate a Contacts entry with the event.
 - Scroll through the Contacts list and touch an entry to select it.
- 11. Touch Save to save the new event.

Event Alert Menu

When your device is turned on and you have an event alarm scheduled, your device alerts you and displays the event summary. By default, the alarm will sound ten minutes before the event, and then again on the event. There are several ways your device alerts you to scheduled events:



























- By playing the assigned ringer type.
- . By illuminating the backlight.

To silence the alarm and reset the schedule, touch the onscreen *Dismiss* button. (You can also silence the alarm by pressing the side volume key.)

To view additional options, press the appropriate onscreen button:

- View displays the event detail screen.
- Dismiss silences the alarm and replays it again at the time of the event.

Viewing Events

- 1. Press and touch *Home* () > *Calendar*.
- 2. Select the day for which you would like to view events by touching it. (If you have events scheduled for the selected day, they will be listed in chronological order.)

Tip In the calendar view, days with events scheduled are underlined.

3. To display an event's details, touch it.

Erasing a Day's Events

- 1. Press and touch *Home* () > *Calendar*.
- 2. Touch the day containing the event you would like to erase.
- 3. Touch iii and from the Delete page, select an option:
 - Delete All to erase all events for the selected day.
 - Delete Some to delete only selected events.

Erasing Selected Events

- 1. Press and touch *Home* () > *Calendar*.
- 2. Touch the day containing the event you would like to erase.

























- 4. Touch an event to highlight it and in a single motion, drag Delete Selected to the right.
 - Multiple entries can also be selected for deletion.

Erasing All Events

- 1. Press and touch *Home* () > *Calendar*.
- 2. Touch the day containing the events you would like to erase.
- 3. Touch | Till > Delete All.
- 4. Touch **Delete** from the Delete confirmation screen to erase all events for the currently selected day.

Using Your Device's Alarm Clock

Your device comes with a built-in alarm clock that has multiple alarm capabilities.

- 1. Press and touch *Home* () > *Clock* > *Alarm*.
- 2. Create a new alarm by touching Tap to Add.
- 3. Turn the alarm on or off by sliding the alarm activation slider to either **On** or **Off**.
- Select a time for the alarm by touching the time field.
 - Assign an hour and minute by either scrolling through both reels (hour and minute) or by touching the up or down arrows above/below each field.

Touching and holding down the arrows (up or down) increases the speed at which the numbers scroll through each reel.

- Drag the slider to either am or pm.
- Once you are done setting the times, touch Done.
- 5. Select a repeating status for the alarm by touching the *Repeat* field and then choosing from one of the following:
 - Daily, Once, Mon to Fri, or Sat & Sun.

Using Your Device: Calendar

























- 6. Select a ringer type for the alarm by touching the *Ring* field. (You can first touch | **>** | to play a sample of the current ringer.)
- 7. Scroll through the list of available ringer sounds and touch a ringer name to assign it.
 - Touch to play a sample of the ringer.
- 8. Select a snooze status for the alarm by touching the **Snooze** field and then choosing from one of the following:
 - 5 Minutes, 10 Minutes, 15 Minutes, or 20 Minutes.
- 9. Touch Save to save your new alarm.

Any stored alarms will appear on the Alarm page in the order in which they were created. Note

To turn alarm off (when sounding):

- 1. With the alarm sounding an alert, touch either:
 - Stop Alarm to permanently deactivate the alarm notification.
 - Snooze to temporarily deactivate the alarm for a few minutes until the next notification.

To delete all alarm events:

- 1. Press and touch Home () > Clock > Alarm.
- 2. Touch (upper-right) to access the Delete page.
- 3. Touch Delete All > Delete to delete all of the current alarm events.

To delete a specific alarm event:

- 1. Press and touch Home () > Clock > Alarm.
- Touch (upper-right) to access the Delete page.
- Touch Delete Some.
- 4. Touch an event to highlight and in a single motion, drag Delete Selected to the right.

Using the Timer

Use a timer to count down to an event based on a preset time length (hours, minutes, and seconds).



Using Your Device: Calendar



















- 1. Press and touch *Home* () > *Clock* > *Timer*.
- 2. Select a countdown time length for the alert by setting the Hours, Minutes, and Seconds
 - Assign the time by either scrolling through each of the three reels or by touching the up or down arrows above/below each field.

Touching and holding down the arrows (up or down) increases the speed at which the numbers scroll through each reel.

3. Touch Start to save the countdown.

Using the Stopwatch

Your device comes with a built-in stopwatch.

- 1. Press and touch Home () > Clock > Stopwatch.
- 2 Touch **Start** to turn on the timer.
- 3. Touch Lap to place a marker on the list. This helps you keep track on certain time segments.
 - or -

Touch Stop to stop the process.

- 4. Touch Restart to continue the stopwatch function from its last paused time marker.
 - or -

Touch **Reset** to stop the process and restart the counter back to zero.

Press to return to the previous screen.

Using the World Clock

To view the time in over 50 different locations:

1. Press and touch Home () > Clock > World Clock.































- 3. Touch a location on the world map to reveal a monocle that displays a magnified view of any available cities in that area.
 - If the selected city was incorrectly chosen, touch \(\infty \) from the upper-right of the map to exit.
- Touch an available city from within the monocle.
- 5. Touch the **Select <city>** button from the bottom of the world page.
- 6. Repeat the process to add additional cities.

To organize existing World Clock entries:

- 1. Press and touch Home () > Clock > World Clock.
- Touch to access the World Clock entries page.
- 3. Touch and hold $|\diamondsuit|$ to detach the entry.
- While still pressing the screen, drag the entry to its new location within the current list and then remove your finger/stylus from the screen.

To delete existing World Clock entries:

- 1. Press and touch Home () > Clock > World Clock.
- Touch to access the World Clock entries page.
- 3. Touch adjacent to an entry you would like to delete.
- 4. Touch **Done** to store the new changes.

To Assign Daylight Saving Time:

- 1. Press and touch Home () > Clock > World Clock.
 - 🌣 indicates Daylight Saving Time is On.
 - indicates Daylight Saving Time is Off.
- 2. Touch is to deactivate Daylight Saving Time.
 - or -

Touch to activate Daylight Saving Time.


























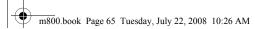







Your device comes with a notepad that you can use to compose and store reminders and notes to help keep you organized.

To compose a note:

- 1. Press and touch *Home* () > *Notes* > + .
- 2. Type your note using the keyboard and touch **Done** to save your note. (See "Entering Text" on page 23.)

To read a saved note:

- 1. Press and touch *Home* () > *Notes.*
- 2. Touch a note from the list.

To delete saved notes:

- 1. Press and touch *Home* () > *Notes.*
- 2. Touch and hold the note from the list (along the left side of the screen) until it detaches from the page.
- 3. While still pressing the screen, drag the selected note over in and release it by lifting your finger off the screen. See "Detaching Entries" on page 22.

Using the Calculator

Your device comes with a built-in calculator. This application becomes the default until another calculator option is chosen.

- 1. Press and touch *Home* () > *Calculator.*
- 2. Enter numbers using your dial pad. The onscreen functions just like any other physical calculator.
- Press equals (=) for the total.
- Press to return to the previous screen.









Using Your Device: Calendar























Speech to Action

- Running the Tutorial (page 66)
- Making a Call (page 67)
- Sending a Message (page 68)
- Launching an Application (page 69)
- Speech to Action Settings (page 69)

Your device's Speech to Action feature lets you place calls using your voice, store voice reminders, and record memos right on your device. This section includes easy-to-follow instructions for using voice-activated dialing and managing voice memos.

Important

The Speech to Action feature will not launch if you are currently in an active menu. It will only function if you are in the Phone Functions menu, or Home Functions menu.

Running the Tutorial

Speech to Action automatically plays an audio tutorial the first time you access the feature. Any time you wish to replay the tutorial, follow these instructions.

- 1. Press and hold ((located on the right of the device).
- 2. Touch Tutorial.


























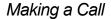

Calling Contacts Entries

- 1. Press on the side of your device. You will hear a prompt.
- 2. Say "Call' followed by the name and the label for the phone number you wish to call. For example, say "Call John Mobile." The device dials the phone number stored for the contact "John" with the label "Mobile."
 - If the location is not recognized or the name does not have a phone number stored in Contacts, your device will play the message "No match found," and then return you to the previous screen.
 - If a name has only a single number, or if you know the name but are not sure which number to call, say "Call" followed by the name only. If the name is recognized and there is only one number for the name, your device immediately places the call.
 - If there are multiple numbers stored for the contact, the device prompts you with "Which Number?" and displays a list of options. You can select an option by saying it or by touching the corresponding phone number onscreen.

Note

If the device does not hear a command within approximately eight seconds, it deactivates Speech to Action without taking any action.

Calling Phone Numbers (Digit Dialing)

- 1. Press on the side of your device. You will hear a prompt.
- 2. Say "Call' followed immediately by a 10-digit phone number, for example, say "Call 555 555 5555.**"**
- 3. If the correct number is repeated, say "Yes" to dial the number.
 - If the number is not recognized, the device will play the message "Did you say call?"
 - If the announced number is not correct, either say "Yes," "No," or "Cancel." When the correct number is announced, say "Yes" to dial the number.

Speak naturally and clearly and remember to speak one digit at a time—1-800 should be pronounced "One Eight Zero Zero."











Using Your Device: Speech to Action





67














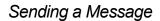

Use a single voice command to launch messaging on your device and specify a recipient for the message.

To send a text message:

- 1. Press
- 2. Say "Send Text to."
- 3. Say the name or phone number of the recipient. For example, say "John Smith" or "9725551212." The entry information for the specified contact is displayed.

Note

If a name contains multiple numbers and you do not specify the number type (work, mobile, etc.), your device chooses the mobile number by default.

- 4. If the device did not properly recognize the command, it prompts you with "Did you say, send text to ... '
- Respond by saying one of the following: Yes, No, Repeat, or Cancel.
- Use the device's onscreen keyboard to enter the text and touch Done.
- 7. Touch **Send** to complete the process.


To send a Picture Mail message:

- 1. Press
- 2. Sav "Send Picture to."
- 3. Say the name or phone number of the recipient. For example, say "John Smith" or "9725551212." The entry information for the specified contact is displayed.
- 4. If the device did not properly recognize the command, it prompts you with "Did you say, send picture to ... "
- Respond by saying one of the following: Yes, No, Repeat, or Cancel.

Note

To use this service, Picture Mail must be a part of your account plan.



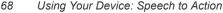




















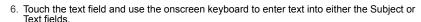

- 7. Once complete, touch Done.
- 8. Touch **Send** to complete the process.

Launching an Application

Open an application or access a menu by saying "Go To" followed by the name of the application or menu.

To see a list of possible choices:

- 1. Press
- 2. Say "Go To." A list of valid destinations is displayed and you are prompted with "Which shortcut?"
 - If the list is too long to fit on one screen, you can say the name of a destination.
 - Examples can include: News, Sports, and Search.
- 3. Say the name of the application you want the device to activate.

Speech to Action Settings

To configure the voice settings:

- 1. Press (4)
- 2. From the "Say a Command" page, touch Settings.

From the Settings page you can configure the verbal Confirmation, activate the training mode (Adaptation), configure the modes (Expert/Prompt/Readout), or get information about the software



The Adaptation option allows you to personalize the service to recognize your voice, especially if you have a heavy accent or other unusual voice characteristics. ONLY use the Adaptation mode if the system is frequently misrecognizing your speech. You can always restore the system to its original factory setting.

Using Your Device: Speech to Action




















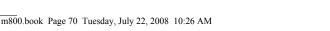







- Using Your Device's microSD Card and Adapter (page 70)
- Accessing the microSD Card via Computer (page 72)
- Connecting Your Device to Your Computer (page 72)

Your device lets you use a microSD™ card and adapter to expand the available memory space. This secure digital card enables you to exchange images, music, and data between SD-compatible devices.

This section details the features and options of your device's microSD functionality.

Using Your Device's microSD Card and Adapter

Using the microSD Card

Your device is equipped with an installed 2GB microSD (Secure Digital) memory card and its adapter to expand the device's available memory space. It allows you to store images, videos, music, and voice data in your device.



The Camera and Music features require that you must have microSD card installed. Although the SPH-m800 comes with a pre-installed 2GB card, it can support microSD cards of up to 8GB.



Compatibility with all microSD memory cards is not guaranteed.



















microSD Card







Removing the microSD Card

If you need to remove the microSD card for any reason, such as to transfer images to another dévice or replace the card, follow these instructions.

- 1. Flip up the microSD plastic cover on the right side of the device.
- 2. Firmly push the end of the card further into the device and release—the card should pop out from the memory card slot. If this does not work, repeat this process.





Note	The microSD card and its adapter can be easily damaged by improper operation. Please be
	careful when inserting, removing, or handling them.

Note DO NOT remove a microSD card while files are being accessed or transferred. Doing so will result in loss or damage of data.


Make sure your battery is fully charged before using the microSD card. Your data may become damaged or unusable if the battery runs out while using the microSD card.









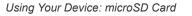















The microSD card can be accessed directly via your computer. Your computer provides access to the contents of the internal microSD card as if it were any other external storage device.

Connecting Your Device to Your Computer

Note

Connecting your device to your computer disables the radio transmission of your device. While connected, you will not be able to send or receive phone calls, or text messages.

Emergency calling will also not be available while connected to your computer.

Depending on your computer's operating system, a device driver may be needed. Please consult your computer's supplier for information.

- Connect one end of the included USB cable to an available USB port on your computer.
- 2. Plug the other end of the included USB cable into your Accessories/Power Cable Jack located on the side of the device.
- 3. Press and touch *Home* (Settings > General > Connect to PC.
- 4. Touch and move the Connect to PC slider to On.
- 5. Click the My Computer icon on the Windows desktop, and double-click the newly created drive letter (which may appear as an icon or text, depending on your View settings).
 - The default folders that appear are:
 - DCIM is the default location for pictures and videos taken by the device.

























microSD Card







- Media is the default location for both downloaded content and sideloaded videos.
- *Music* is the default storage location for downloaded and sideloaded music files. This location can also contain playlists.
- Others provides a separate storage area for data files and other miscellaneous information.
- 6. Double-click any folder to reveal the contents of the microSD card.

Transferring Data Directly to the microSD

The microSD card can be accessed and used just as easily as any other communicating storage device.

- From your Desktop, double-click My Computer > < Device Letter> entry to display the folders and files available on the internal microSD card.
- Open a folder and begin the transfer process of files from your computer to the microSD card's target folder.

To remove the connection:

When you have finished transferring data, click the USB device icon on your computer's taskbar, and follow the onscreen instructions to safely unplug the USB cable.

Creating Folders in the microSD Card

- 1. From your Desktop, double-click My Computer > < Device Letter >.
- 2. Right-click and select New > Folder.

WARNING

Do not alter or delete the four default folders. These are used by the SPH-m800 to sort the different file formats and contents.

Formatting the microSD Card

Formatting a microSD card permanently removes all files stored on the card.

- 1. From your Desktop, double-click *My Computer* > < Device Letter>.
- 2. Right-click and select *Format*. (A warning will be displayed.)
- If you are sure you wish to remove all the files from your microSD card, follow the onscreen instructions.



























The formatting procedure erases all the data on the microSD card, after which the files CANNOT be retrieved. To prevent the loss of important data, please check the contents before you format the card.

Note

When a formatted card is inserted into (or detected by) the SPH-m800, the four default folders will be created.

Important Connection Information

- To avoid loss of data, DO NOT remove the USB cable, the microSD card, or the battery while files are being accessed or transferred.
- DO NOT use your computer to change or edit folder or file names on the microSD, and do
 not attempt to transfer large amounts of data from the computer to the microSD card. Doing
 so may cause the microSD card to fail.
- DO NOT turn off or restart your computer, or return to the unlock screen, while using a mass storage device. Doing so will result in loss or damage of data.
- While your device is connected to the computer, your device's screen will display "Phone Off." You cannot make or receive calls while your device is using an active USB connection.
- If you connect a mass storage device to a peripheral device, your device may not work properly.
- The "Safely Remove Hardware" utility (for Windows-based computers) can be used to close
 the removable drive capability safely. Once the USB drive has been closed, the phone will
 switch back to normal phone operation mode even though the USB cable is still connected.
 To activate the mass storage capability again, just disconnect and reconnect the USB cable.



























- Transferring Contacts (page 75)
- Transferring Other Content (page 76)

Transfer contact information, music, pictures, and videos from your old phone to your SPHm800.

Transferring Contacts

All of your contacts from your old phone can be transferred to your device:

At the Store — Where you purchase your SPH-m800, the sales person may be able to help you transfer your contacts from your old device to the SPH-m800. Additional charges may

Bluetooth — Use the Bluetooth capabilities of your old phone to transfer all of your contacts to the device.

Transfer Contacts With Bluetooth

To set up your old phone and the SPH-m800 to transfer contacts:

- 1. Turn on your old phone and then activate the SPH-m800.
- 2. Activate Bluetooth on your old phone and set visibility to Visible for 1 minute.
- 3. Press and touch *Home* () > *Settings* > *Bluetooth* to activate Bluetooth on your new device.
- 4. Touch and drag the Bluetooth slider to the **On** position.
- 5. Touch Visibility and set your Bluetooth visibility to Visible for 1 minute.

To pair the two devices and send contacts to your SPH-m800:

- 1. On your SPH-m800, press and touch *Home* () > *Settings* > *Bluetooth* > *Trusted* Devices.
- 2. Touch in the upper-left corner to search for the old phone.
- 3. Enter a PIN of '0000' and touch **Done**.






















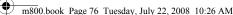



- 4. On your old phone, go to the Bluetooth function that allows you to send all of your contacts to the trusted device.
- 5. Select all of your contacts to send them all.
- Send the contacts.
- 7. On the SPH-m800, touch **Yes** to accept the incoming contact information.

To confirm that contacts have been transferred:

- 1. Press and touch **Contacts** () to view the transferred contacts.
- 2. Once you have confirmed that the contacts are transferred, turn off your old device.

To turn Bluetooth off:

- 1. Press and touch *Home* () > *Settings* > *Bluetooth*.
- Touch and drag the slider to the Off position.
- 3. To return to the *Home Functions* menu, press

Transferring Other Content

You can transfer content such as music, picture, and video files to your phone's memory card. To transfer music, picture, and video files existing on your computer to your phone's memory card:

- 1. Connect your device to your computer using a USB cable. For instructions, see "Connecting Your Device to Your Computer" on page 72.
- 2. Transfer the music and video files from your computer to your phone. For instructions, see "Transferring Data Directly to the microSD" on page 73.































- Taking Pictures (page 77)
- Recording Videos (page 80)

Your device's built-in camera gives you the ability to take full-color digital pictures, view your pictures using the device's display, and instantly send them to family and friends. It's fun, and it's as easy to use as a traditional point-and-click camera: just take a picture, view it on your device's display, and send it from your device to up to 10 people.

For information on sending pictures and videos with your device, see "Picture Mail" on page 91.

Important

You must have a microSD memory card installed to use the Camera. Your device comes with a pre-installed 2GB card; it can support microSD cards of up to 8GB.

Taking Pictures

Taking pictures with your device's built-in camera is as simple as choosing a subject, pointing the lens, and pressing a button.

To take a picture:

1. Press to activate camera mode.

Note Pressing and holding for more than 2 seconds launches the camcorder.

- 2. Using the device's display screen as a viewfinder, aim the camera lens at your subject.
- 3. Press until the shutter sounds. (The picture will automatically be saved into the DCIM folder of your internal microSD card.)
- 4. Take a few minutes to get familiarized with the layout of the Camera screen.




























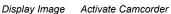



Pictures Remaining Fuzzy Image Warning View My Albums Folder

Using the My Albums Folder

- 1. Once the picture has been taken, touch to open the media screen in its default Thumbnail view.
- 2. Touch an image file from the media screen.





78 Using Your Device: Camera



















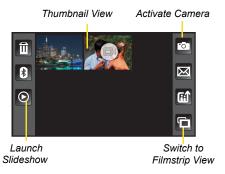

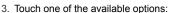

- **Delete** (iii) to delete the active file.
- Send via Bluetooth () to send the picture via Bluetooth. (You can also send pictures using Picture Mail. See "Picture Mail" on page 91.)
- Play Slideshow () to display a slideshow sequence of the current pictures and videos found in the My Albums folder.
- Magnify () to increase/decrease the magnification of the currently active file.
- Take New Picture () to return to camera mode to take another picture.
- Send () to send your picture using Picture Mail.
- Upload () to upload the picture to the Picture Mail Web site .
- Filmstrip View () to display the current images in a scrollable Filmstrip view.
- Assign Picture () to assign the selected picture to either a Picture ID image or as a Background.













Using Your Device: Camera





79











Recording Videos

In addition to taking pictures, you can also record, view, and send videos to your friends and family with your device's built-in video camera.

- Press and hold for at least 2 – 3 seconds to activate the video mode.
- 2. Using the device's main display screen as a viewfinder, aim the camera lens at your subject.
- 3. Touch the onscreen icon to change the recording length for the video segment:
 - Short Clip (lets you record video of up to 20 seconds (1MB) per segment that can then be wirelessly uploaded.
 - **Long Clip** () lets you record video segments with no preset time length. These videos are only limited by the available free storage remaining on the internal microSD card. (The available time length is displayed at the bottom left of the screen.)

Note

Any videos segments over [20 sec. or 1 MB] cannot be uploaded or sent wirelessly.

- 4. Press to begin recording.
- 5. Press to stop recording. (The video will automatically be saved into your My Albums folder.)





Using Your Device: Camera






















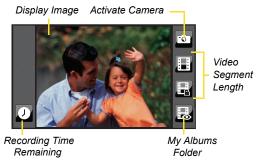




- Delete (iii) to delete either selected files or all files from the My Albums folder.
- Send via Bluetooth (1) to send the picture via Bluetooth. (You can also send videos using Picture Mail. See "Picture Mail" on page 91.)
- Play Slideshow () to display a slideshow sequence of the current pictures and videos found in the My Albums folder.
- Take New Video () to return to camcorder mode to shoot another video.
- Send () to send your picture via Picture Mail.
- Upload (M)) to upload the picture to the Picture Mail Web site.
- Filmstrip View () to display the current images in a scrollable Filmstrip view.









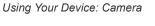










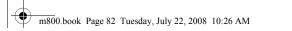





Bluetooth

- Turning Bluetooth On and Off (page 82)
- Using the Bluetooth Settings Menu (page 83)
- Pairing Bluetooth Devices (page 84)
- Sending Data via Bluetooth (page 85)

Your device features built-in Bluetooth technology, allowing you to share information more easily than ever before. Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless phones. The Bluetooth communication range is usually up to approximately 30 feet.

Turning Bluetooth On and Off

By default, your device's Bluetooth feature is turned off. Turning Bluetooth on makes your device "discoverable" by other in-range Bluetooth devices.

To turn Bluetooth on:

- 1. Press and touch *Home* () > *Settings* > *Bluetooth*.
- Touch and drag the slider to the *On* position. (The page then refreshes to reveal new functionality and options.)

To turn Bluetooth off:

- 1. Press 🛖 and touch *Home* (🚆) > *Settings* > *Bluetooth*.
- 2. Touch and drag the slider to the *Off* position to disable Bluetooth and hide all options.



Using Your Device: Bluetooth















Bluetooth Status Indicators


The following icons show your Bluetooth connection status at a glance:

Bluetooth is active (default status)





Bluetooth is actively transmitting or receiving data

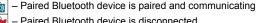

Paired Bluetooth device is disconnected

Using the Bluetooth Settings Menu

The **Bluetooth** menu allows you to configure your Bluetooth service.

To access the Bluetooth Settings menu:

- 1. Press and touch *Home* () > *Settings* > *Bluetooth*.
- 2. Set your Bluetooth options to:
 - Touch Visibility and select an option to set your Bluetooth visibility.
 - Touch *Device Info* to display your device's Bluetooth profiles and address.
 - Touch **Device Name** and use the keyboard to rename your device for Bluetooth usage.

Assigning a Bluetooth Name to Your Device

By default, your device is given the Bluetooth name "SPH-M800." You can easily change your device's Bluetooth name to avoid confusion with other nearby Bluetooth devices.

- 1. Press and touch *Home* () > *Settings* > *Bluetooth* > *Device Name*.
- 2. Touch the grey name field.
- 3. Press and hold to delete the default "SPH-M800" name.
- 4. Enter a new descriptive name for your device and touch **Done**.





Using Your Device: Bluetooth



























Viewing Information for Available Devices

You can review detailed information for any available devices.

- 1. Press and touch *Home* () > Settings > Bluetooth > Trusted Devices.
- 2. Touch the properties button (>) to view information for a selected device.
- Touch **Done** to return to the previous listing.

Pairing Bluetooth Devices

Paired Devices

The Bluetooth pairing process allows you to establish trusted connections between your device and another Bluetooth device. When devices are paired, a passkey is shared between devices, allowing for fast, secure connections while bypassing the discovery and authentication process.

To pair Bluetooth devices with your Note SPH-m800, make sure your SPHm800 is visible to other devices. See "Using the Bluetooth Settings Menu" on page 83.



To pair your device with another Bluetooth device:

- 1. Press and touch *Home* (Settings > Bluetooth > Trusted Devices. (Your device will display a list of discovered inrange Bluetooth devices.)
- 2. Scroll down the list and touch a device name to begin the pairing process.
- 3. Enter the passkey (PIN) for the external device and touch **Done**.



















4. Once the recipient enters the passkey/passcode for your SPH-m800, the pairing will be complete.



Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth-compatible devices.

Deleting Paired Devices

To delete a specific paired device:

- 1. Press and touch *Home* () > Settings > Bluetooth > Trusted Devices.
- 2. Touch (upper-right).
- 3. Touch **Delete Some** and touch and highlight an entry from the list.
- 4. Touch and drag Delete Selected to the right to delete the selected device.

To delete all paired devices:

- 1. Press and touch *Home* () > Settings > Bluetooth > Trusted Devices.
- 2. Touch (upper-right).
- 3. Touch **Delete All > Delete** to delete all of the currently paired devices.

Sending Data via Bluetooth

You can send data saved on your device to another Bluetooth device.

To send contacts information via Bluetooth:

- 1. Press and touch **Contacts** ().
- 2. Touch an entry and touch Send Contact. (The device begins searching for available Bluetooth devices. Bluetooth-capable phones appear in the list with a phone icon.)
- 3. From the list of Found Devices, touch the name field and touch **Send** to send the information to this recipient.


















































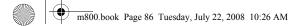



4. The recipient must select whether to accept or reject the incoming transfer.

To send pictures via Bluetooth:

- 1. Press and touch Fun () > My Albums > CAMERA.
- 2. Touch (left of the screen). (The device begins searching for available Bluetooth devices.)
- 3. Select a picture to send by touching it. (You can select multiple pictures which are then highlighted in green.)
 - To "deselect" a file, touch it again until it is no longer highlighted.
- 4. Touch Ok.
- 5. From the list of Found Devices, touch the name field to send the pictures.

Tip Touching > displays the properties of the selected Bluetooth device.

6. The recipient must select whether to accept or reject the incoming transfer.

Note If your old phone has Bluetooth capability, you can transfer Contacts from it to your SPHm800. See "Transfer Contacts With Bluetooth" on page 75.





























Data Services

Data Services: The Basics

- Voicemail (page 87)
- Text Messaging (SMS) (page 89)
- Picture Mail (page 91)

Now that you've explored your device's fundamentals, it's time to learn about the calling features that enhance your service. This section outlines your basic data service features.

Voicemail

All unanswered calls to your phone are automatically transferred to your Voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your Voicemail and personal greeting as soon as your phone is activated.

To set up your Voicemail:

- 1. Dial your wireless phone number.
- 2. Follow the system prompts to create your passcode, record your greeting, and record your name announcement.

























Voicemail Notification

There are several ways your device alerts you to a new message:

- By displaying a message on the screen.
- By sounding the assigned ringer type.
- By displaying at the top of your screen.

When you have a missed call or receive a new message (such as Voicemail, Text or Picture), your device alerts you and displays a *While you were out* () icon. This icon alerts you to either new messages (Text and Picture) or missed calls.

New Voicemail Message Alerts

When you receive a new voice message, your phone alerts you and prompts you to call your Voicemail.

To call your voicemail from any phone:

- 1. Dial your wireless phone number.
- 2. Enter your passcode.

Using the Menu on Your Device to Access Your Messages:

- 1. Press and touch Home () > VM > Dial Voicemail.
- 2. Enter your passcode.

Note

You are charged for airtime minutes when you are accessing your voicemail from your wireless device.

To display your Missed Log:

- 1. Press and touch *History* ().
- 2. Touch the entry's phone number to dial it.



Data Services: The Basics



















When you are roaming off the network, you may not receive notification of new Voicemail messages. It is recommended that you periodically check your Voicemail by dialing 1 + area code + your Phone Number. When your Voicemail answers, press the # key and enter your passcode. You will be charged roaming rates when accessing Voicemail while roaming off the network..

Your phone service accepts messages even when it is turned off. However, you are only notified of new messages when your phone is turned on and you are in a Service Area.

Retrieving Your Voicemail Messages

You can review your messages directly from your wireless device or from any other touch-tone phone.

- 1. Dial your wireless phone number.
- 2. Enter your passcode.

When you call into voicemail, you first hear the header information (date, time, and sender information) for the message. To skip directly to the message, press 4 during the header.

Clearing the Message Icon

Your phone may temporarily continue to display the message icon after you have checked your voice and text messages.

To clear the icon from the display screen:

- 1. Press and touch Home () > VM > Clear Icon.
- 2. Touch Delete.

Text Messaging (SMS)

With Text Messaging, you can send and receive instant text messages between your wireless device and another messaging-ready device. When you receive a new message, it will automatically display on your device's screen.




























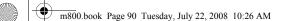





Composing Text Messages

- 1. Press 🛖 and touch *Home* (💆) > *Messaging* > *Text* (😭)
- Touch to compose a new text message.
 Select the contact entry method you prefer by touching an associated option:
 - Recent List to select a recipient from a list of recently sent messages.
 - Contacts to select a recipient from your Contacts (qualifying Contacts entries must contain a wireless phone number or an email address).
 - Manual Entry to manually enter a recipient by choosing either:
 - Enter Phone Number to use the onscreen dial pad to enter a wireless phone number.
 Touch Done to continue.
 - Enter Email Address to use the keyboard to enter the recipient's email address.
 Touch Done to continue.
- 4. Use the keyboard to enter a message.
- 5. Touch **Done** to save your text and return to your message.
- 6. Add more recipients by touching + and repeating step 3.
- 7. Review your message and touch Send.

Accessing Text Messages

To read a text message:

When you receive a text message, an announcement tone sounds and a \bigstar icon is displayed on the screen.

- ▶ Touch *Dismiss* to ignore the notification and return to the message at a later time.
 - or -

Touch View to read the new message.

- 1. Press and touch Home () > Messaging.
- 2. Touch a message entry from the list.

To reply to a text message:

- 1. While the message is open, touch Reply.
- 2. Compose your reply and press Done.





















3. Review your message and touch Send.

Deleting Messages

To delete all messages:

- 1. Press and touch Home () > Messaging.
- 2. Touch (to open the Delete menu.
- 3. Touch Delete All > Delete.

To delete selected messages:

- 1. Press and touch Home () > Messaging.
- 2. Touch (to open the Delete menu.
- 3. Touch Delete Some.
- 4. Touch any messages you wish to delete. Selected messages are highlighted in green.
- 5. Touch and drag the Delete Selected > slider to the right.

Picture Mail

Picture Mail lets you instantly send pictures from your device to wireless phone numbers and email addresses.

Sending Picture Mail From Messaging

- 1. Press and touch *Home* () > *Messaging* > *Picture* ().
- Touch to compose a new picture message.
- 3. Select the contact entry method you prefer by touching an associated option:
 - Recent List to select a recipient from a list of recently sent messages.
 - Contacts to select a recipient from your Contacts (qualifying Contacts entries must contain a wireless phone number or an email address).
 - Manual Entry to manually enter a recipient by choosing either:
 - Enter Phone Number to use the onscreen dial pad to enter a wireless phone number. Touch **Done** to continue.
























Data Services



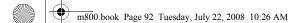





- Enter Email Address to use the onscreen keyboard to enter the recipient's email address. Touch Done to continue.
- 4. Add more recipients by touching + and repeating step 3.
- 5. From the New Message screen, select additional options.
 - Touch **Subject** and enter a subject for the message. Touch **Done** to continue.
 - Touch Text field and enter a text message to go with the pictures. Touch *Done* to continue.
 - Touch Add Voice to record and attach a voice memo.
 - Touch Add Image to select an album from which to select a picture (such as CAMERA Album, and SAVED Album). Touch a thumbnail image and then touch Ok.
 - Touch Add Slide to add a slide to your message.
- 6. When you have finished adding content, review your message and touch Send.







92 Data Services: The Basics





















Web and Data

- Web Access (page 93)
- Instant Messaging (page 98)
- Email (page 98)

Your device offers easy and amazing data services you will really use. These features including portable Web access, messaging, and email - let you have fun, stay in touch, and stay informed no matter where you go on the service provider's network.

Web Access

Launching a Web Connection

▶ Press and touch *Web* () > *Web*.

Data Connection Status and Indicators


Your device displays the current status of your data connection through indicators at the top of the screen. The following symbols are used:



Your device is connected to the high-speed network. When the triangles are animated, data is being transferred (for example, when you are opening a Web page); when the triangles are gray, you are connected to the network but data is not currently being transferred (for example, when you are viewing a Web page that is completely open). While data is being transmitted, you can make a call but can't receive one.



Your device is on and is connected to the 1x data network. When the arrows are animated, data is being transferred (for example, when you are opening a Web page) and you cannot receive calls. When the arrows are gray, you are connected to the network but data is not currently being transferred (for example, when you are viewing a Web page that is completely open), and you can receive calls.

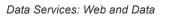



















93

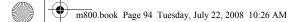





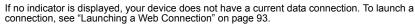

Navigating the Web

Navigating through menus and Web sites during a Web session is easy once you've learned a few basics. Here are some tips for getting around:

Using the Full Screen View

By default, both the Address Bar and Navigation toolbar will be visible onscreen. These items can be toggled off to reveal more of the current web page.

Touch a to switch the views from either Full screen or Normal view.

Scrolling Through a Web Page

As with other menu and list items on your device, scrolling is a simple matter of sliding your finger up or down through the page.

To scroll up or down through a Web page:

Slide your finger either up or down on the screen.

To move around a Web page:

Touch and drag across the screen in any direction.

Selecting Onscreen Items

Touch an onscreen item or hyperlink.

Links, which are displayed as underlined text, allow you to jump to Web pages, select special functions, or even place phone calls.

Entering Text Into a Search or Text Field

Touch an onscreen text field or Search field twice to display the text input screen. See "Entering Text" on page 23.

Going Back

To go back one page:

Touch from the left of the Address bar.

























Tip

To see the Navigation toolbar (and its associated buttons) you must be in the Normal viewing mode. See "Using the Full Screen View" on page 94.

Note

The __ is also used for deleting text (like a BACKSPACE key) when you are entering text.

Going Home

▶ Touch 🌇

Using the Web Toolbar

Press and touch Web () > Web.
 Options available from the Web toolbar include:

- Full Screen icon lets you maximize the visible area onscreen by hiding both the Address bar and Web toolbar (right).
- Change Mode icon lets you change the viewing mode of the current web page between
 Mobile Mode (screen is configured for viewing using standard mobile phone parameters)
 and Standard Mode (mimics how the page would appear on via a monitor). This default
 view mode is set from within Home () > Settings > Web Browser.
- Quick Navigation View icon (while in Standard Mode) lets you preview an image of the current web page from a "birds-eye" view. The green rectangle indicates the currently displayed area.
- 4. **Zoom view** lets you toggle the zoom view of the current Web page (1x, 2x or ½x).
- Address Bar lets you use an onscreen keyboard to navigate directly to a Web site by entering its URL (Web site address).
 - Using takes you forward in your history to a previously viewed page.
 - Using takes you back in your history to a previously viewed page.
- Web Search icon launches a Web search page where you can enter a keyword and then search for it using the full built-in browser.
- 7. Home icon returns the browser to the Web home page.
- Favourites icon allows you to access and manage your bookmarks. To navigate to a site, simply touch a previous bookmark from the Favourites list.























9. History icon displays a list of your recently visited web sites. To navigate to a site, simply touch an entry from the History list.

Going to a Specific Web Site

To go to a particular Web site by entering a URL (Web site address):

- 1. Press and touch **Web** () > **Web** (or **Search**).
- 2. Touch the Address bar and clear the existing address by pressing and holding
- Use the onscreen keyboard to enter a new URL and touch Done.

Not all Web sites are viewable on your device.

Creating a Bookmark

Bookmarks allow you to store the address of your favourite Web sites for easy access at a later time.

- Go to the Web page you want to mark.
- Touch to open the Web Bookmarks page.
- 3. Touch + > Add Bookmark to add the currently active web page to your current Favourites list.

Note

Bookmarking a page does not store the page contents, just its address.

Some pages cannot be bookmarked. Whether a particular Web page may be marked is controlled by its creator.

Accessing a Bookmark

From any Web page, touch to open the Web Bookmarks page and then touch an entry from the list to launch that Web page.

Note

The bookmark containing the Home icon indicates the current home page.



96 Data Services: Web and Data



















Using the Web Menu

The Web menu page on your SPH-m800 gives you quick access not only to the Web, but also to categorized information that's tailored to your location.

- 1. Press 🛖 and touch *Web* (🚇) to display the Web menu page.
- 2. Touch an option, such as Web, Search, News, Sports, Web Alerts, Ringtones, or Wallpapers.
- 3. Select categories and articles to view the information you want.















Data Services: Web and Data







Instant Messaging

You can use your device for instant messaging.

- 1. Press and touch *Home* () > *IM*.
- 2. Follow the onscreen instructions.

Email

You can use your device for sending and receiving email.

- 1. Press 🛖 and touch *Home* (🚨) > *Email.*
- 2. Follow the onscreen instructions.







Data Services: Web and Data






98









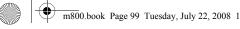







- Music (page 99)
- TV (page 100)
- Games & Apps (page 100)
- Radio (page 101)
- Navigator (page 101)

Music: TELUS mobile music lets you browse, preview and download music directly to your phone so you can listen to your favourite tunes while on the go. Touch the Music icon on the Fun screen to access TELUS mobile music and to choose from hundreds of thousands of songs. For more information on TELUS mobile music, please visit: www.telusmobility.com/ music

TV: TELUS mobile TV allows access to real-time TV on your phone. For more information on TELUS mobile TV, please visit: www.telusmobility.com/mobiletv.

The Games and Applications give you the ability to download and play games and applications on your device.

Radio: TELUS mobile radio allows access to a wide range of commercial free music. For more information on TELUS mobile radio, please visit: www.telusmobility.com/mobileradio.

Navigator: Get real-time, voice-prompted and visual turn-by-turn directions, find points of interest along your route, and view detailed coloured maps with TELUS Navigator. For more information, please visit: www.telusmobility.com/navigator.

Music

The Music menu provides a searchable catalog of music that can be previewed and purchased and downloaded to your phone. Once downloaded, you can use the TELUS mobile music player to listen to the music.

Accessing the Music Store

You can access the TELUS mobile music store right from your device's home menu.























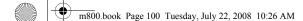



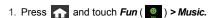

Follow the onscreen instructions to download songs or other audio tracks. A service charge may apply.

Accessing the Music Player

The TELUS mobile music store not only gives you access to great music, it also gives you a place to listen to and organize your music library.

- 1. Press and touch *Fun* () > *Music.*
- Use the onscreen control buttons to play, pause, forward to the next song in your playlist or return to the previous song.

TV

The TV application offers a wide variety of channels.

Note Available categories and content are subject to change.

Watching TV

- 1. Press and touch Fun () > TV.
- 2. Follow the onscreen instructions.

Games & Apps

You can play a variety of entertaining and graphically rich games and applications on your phone. New games and applications are easy to download and play.

Downloading Games and Applications

- 2. Touch Get New Games or Get New Apps.























3. Follow the onscreen instructions to download game or application.

Playing Games and Applications

- 1. Press and touch Fun () > Games & Apps.
- 2. Touch the game or application you wish to play.
- 3. Follow the onscreen instructions to play the game or application.

Radio

The Radio application offers a wide variety of channels.

Listening to the Radio

- 1. Press and touch *Fun* () > *Radio.*
- 2. Follow the onscreen instructions.

Navigator

The Navigator application offers real-time directions including coloured maps.

Using the Navigator

- 1. Press and touch *Fun* () > *Navigator.*
- 2. Follow the onscreen instructions.





























Getting the Most Out of Your Reception

Keeping Tabs on Signal Strength

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal. If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key. Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode

Knowing Radio Frequency Safety

The design of your phone complies with updated NCRP standards described below. In 1991-92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC



102 Safety and Warranty Information




















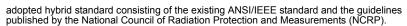

Maintaining Your Phone's Peak Performance

There are several simple guidelines for operating your phone properly and maintaining safe, satisfactory service.

- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get
 wet, immediately turn the power off and remove the battery. If it's inoperable, return it to a
 dealer store or call Customer Support for service.



For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.



FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE.

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS.

DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

FOR CONNECTION TO A SUPPLY NOT IN Canada, USE AN ATTACHMENT PLUG ADAPTER OF THE PROPER CONFIGURATION FOR THE POWER OUTLET.

UL Certified Travel Adapter

The Travel Adapter for this phone has met applicable UL safety requirements. Please adhere to the following safety instructions per UL guidelines.

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE.

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS.





























DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

FOR CONNECTIONS TO A SUPPY NOT IN NORTH AMERICA, USE AN ATTACHMENT PLUG ADAPTER OF THE PROPER CONFIGURATION FOR THE POWER OUTLET.

THIS POWER UNIT IS INTENDED TO BE CORRECTLY ORIENTED IN THE A VERTICAL OR HORIZONTAL OR FLOUR MOUNT POSITION.

Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

When using your phone in the car:

- Get to know your phone and its features, such as speed dial and re-dial.
- When available, use a hands-free device.
- Position your phone within easy reach.
- Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.
- Do not take notes or look up phone numbers while driving.
- Dial sensibly and assess the traffic; if possible, place calls when stationary or before pulling into traffic.
- Do not engage in stressful or emotional conversations that may divert your attention from the road.
- Dial 911 to report serious emergencies. It's free from your wireless phone.
- Use your phone to help others in emergencies.
- Call roadside assistance or a special non-emergency wireless number when necessary.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.



104 Safety and Warranty Information

















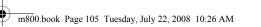





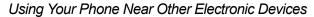

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems and/or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Always turn off the phone in health care facilities and request permission before using the phone near medical equipment.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn off your phone when in a blasting area or in other areas with signs indicating that two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn off your phone when you are in an area with a potentially explosive atmosphere. Although it is rare, your phone or its accessories could generate sparks. Sparks could cause an explosion or a fire resulting in bodily injury or even death. These areas are often, but not always, clearly marked. These areas include:

- Fueling areas such as gas stations.
- Below deck on boats.






















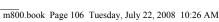





- Areas where the air contains chemicals or particles such as grain, dust or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.



Never transport or store flammable gas, liquid or explosives in the compartment of your vehicle that contains your phone or accessories.

Restricting Children's Access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone, dial 911 by mistake or make calls that increase your phone bill.

Caring for the Battery

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Use only Samsung approved batteries and desktop chargers. These chargers are designed to maximize battery life. Using other batteries or chargers voids your warranty and may cause damage.
- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° Č).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. When used correctly, the battery can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

























- -4° F to 140° F (-20° C to 60° C)
- More than one month: -4° F to 113° F (-20° C to 45° C)

Disposal of Lithium Ion (Lilon) Batteries

For safe disposal options of your Lilon batteries, contact your nearest service center.

Special Note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Note

For safety, do not handle a damaged or leaking Lilon battery.

Acknowledging Special Precautions and Industry Canada Notice

Only use approved batteries, antennas, and chargers. The use of any unauthorized accessories may be dangerous and will invalidate the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of hardware and can be broken. Use common-sense guidelines to avoid dropping, hitting, bending or sitting on it.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment, and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.



























Information to User

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient / relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rates (SAR) for Wireless Phones


The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the SPH-m800 are:

CDMA mode (Part 22) - Head: 1.07 W/kg; Body-worn: 1.22 W/kg PCS mode (Part 24) - Head: 1.46 W/kg: Body-worn: 0.964 W/kg

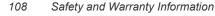

























Owner's Record

The model number, regulatory number and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: SPH-m800

Serial No.:

User Guide Proprietary Notice

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307 5,109,390 5,267,262 5,416,797

5,506,865 5,544,196 5,657,420 5,101,501

5,267,261 5,414,796 5,504,773 5,535,239

5,600,754 5,778,338 5,228,054 5,337,338

5,710,784 5,056,109 5,568,483 5,659,569

5,490,165 5,511,073

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.
















109



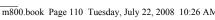







STANDARD LIMITED WARRANTY

What is Covered and For How Long? SAMSUNG Electronics Canada Inc. ("SAMSUNG") warrants to the original purchaser ("Purchaser") that SAMSUNG's phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone 1 Year

Batteries 1 Year


Leather Case/Pouch/Holster 90 Days

Game Pad 90 Days

Other Phone Accessories 1 Year

What is Not Covered? This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical or electromechanical stress, or modification of any part of Product, including antenna, or cosmetic damage; (b) equipment that has the serial number removed or made illegible; (c) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (d) malfunctions resulting from the use of Product in conjunction with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of Product; or (g) Product used or purchased outside Canada. This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if: (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery; (ii) any of the seals on the battery are broken or show evidence of tampering; or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's Obligations? During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to deliver the Product, call Samsung

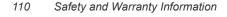

















Customer Care at 1-800-Samsung. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. Repaired/replaced leather cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period egual to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG. If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

What Are the Limits On SAMSUNG's Liability? EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED. HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS. EXPRESS OR IMPLIED. STATUTORY OR OTHERWISE. OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE:
- WARRANTIES OF TITLE OR NON-INFRINGEMENT:
- DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;
- THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR
- COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW. RULE. SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS. SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

























THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND SHALL BE PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS.

THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.



Samsung Electronics Canada, Inc.

©2008 Samsung Electronics Canada, Inc., SAMSUNG is a registered trademark of Samsung Electronics Co., Ltd. and its related entities.

No reproduction in whole or in part allowed without prior written approval.

Specifications and availability subject to change without notice.

#861826 v2 | 4032342




















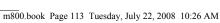





Index

ABC Mode 24 Address Bar 95 Airplane Mode 36 Alarm 21 Answer 27 Answering Calls 27 Device Active 27 Device Locked 28 Answering Options 27 В

Background 34 Backlight 33 Battery 15-16 Charging 15 Installing 15 Bluetooth 82-86 Deleting Paired Devices 85 Device Information 84

Device Name 83 Send Contacts 85 Sending Data 85 Transferring Contacts 75 Bookmarks Accessing 96

Creating 96 **Brightness**

Changing 34

C

Calculator 65 Calendar 58-61 Calibration 35 Camcorder 80-81 Camera 77-81 Change Mode 95 Charger Using 16 Clock 21 Computer Connecting via USB 72 Connecting To Your Computer 72 Contacts 49-57 Adding an Entry 49 Saving a Number 50 Sending via Bluetooth 54 Contacts Entries Editing 53 Deleting Your Device's Contents 40

D

Device (illus.) 11 Device Settings 31–38 Display Settings 33 Favourites 37 Location Settings 35 Parental Controls 37 Touch Settings 34 Dialer 26 Display Screen 13 Display Settings 33 Background 34 Backlight 33

Index

113















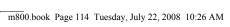

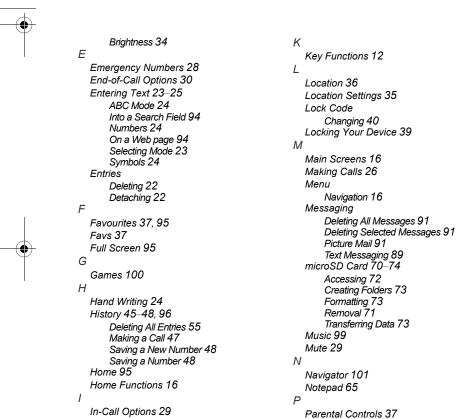









Phone Functions 16









```
Phone Number
      Displaying 26
      Saving 50
  Phone Number Options 53
  Picture Mail 91
      Sending 91
  Playing Music 100
  Power Search Tab 19
Q
  Quick Navigation View 95
R
  Radio 101
  Redial 30
  Resetting Your Device 41
  Resetting Your Device's Settings 40
  Ringer Types 31
  Ringer Volume
      Adjusting 32
  Roaming 42-44
  Save 30
  Screen Calibration 35
  Security 39-41
  Sensitivity 34
  Silence All 33
      Deactivating 33
  Silent 27
  SMS Text Messaging 89
  Sound Settings 31-33
  Sounds
      Ringer Volume 32
      System Volume 32
```

Speaker 29 Speech to Action 66-69 Launch Application 69 Make a Call 67 Send a Message 68 Settings 69 Speed Dial 55 Adding to List 55 Status Bar 19 Stopwatch 63 System Volume Adjusting 32 Text Messages Accessing 90 Composing 90 Deleting 91 Text Messaging 89 Three-way Call 29 Touch Calibration 35 Touch Sensitivity 34 Transfer Contacts 75 Content 76 Transfer Contacts Bluetooth 75 TTY Mode 36 Turning Your Phone On and Off 14 TV 100 IJ Unlock Screen 7, 16 Unlocking Your Device 39

Volume Settings 32















Index

