

PEGATRON

DaliW

Tablet Computer

Quick Guide

 
Features

Front View



#	Feature	#	Feature
1	LCD multi-touch screen	4	LED indicator
2	Front-facing camera	5	Ambient light sensor
3	Microphone	6	Home key


Rear View

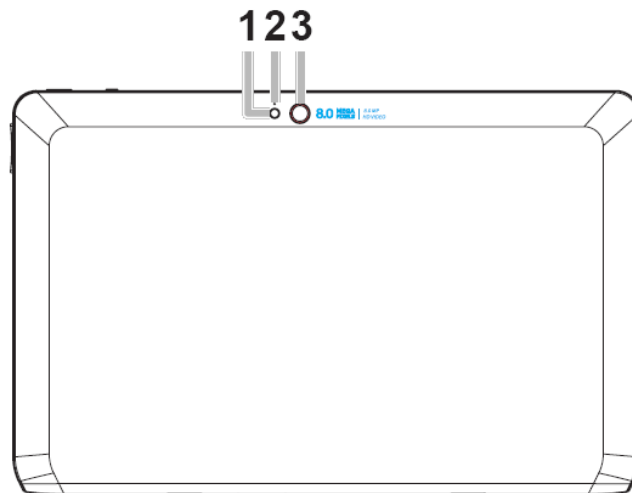

#	Feature
1	Camera flash
2	Microphone
3	Rear-facing camera

3

 Side Views

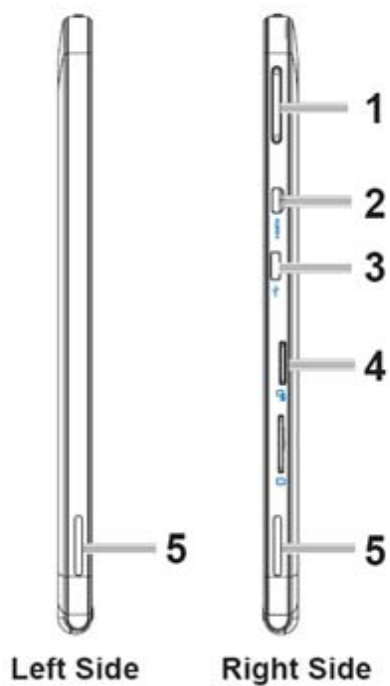


Left Side

Right Side

#	Feature
1	Volume increase/decrease key
2	Micro HDMI port
3	Micro USB port
4	microSD card slot
5	Stereo speakers

4

 Side Views (cont.)

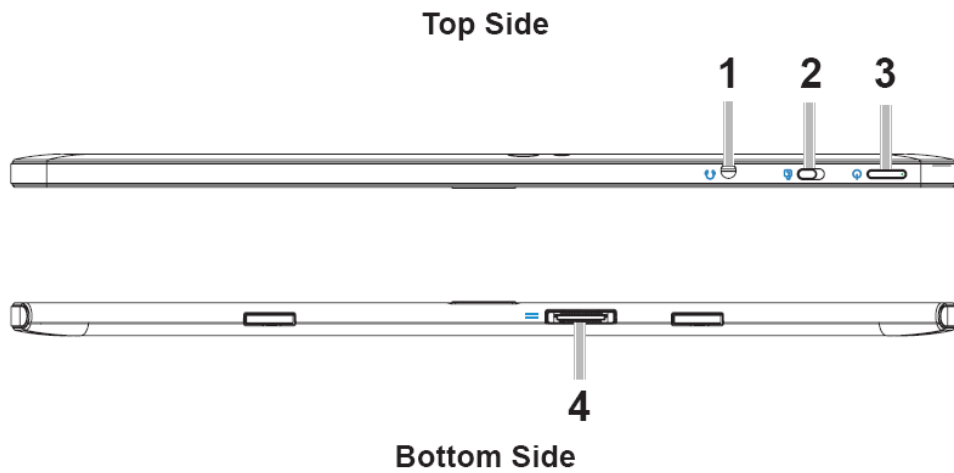

#	Feature	#	Feature
1	3.5" audio jack	3	Power key with power indicator
2	Rotation lock switch	4	Charger/docking port

5

Getting Started

Charging Your Tablet

WARNING: The battery comes partially charged. You must completely charge the battery before using your tablet for the first time. After the first charge you may use your device while charging.

CAUTION: When charging your tablet, make sure to use only the charger that came with your tablet.

1. Plug the charger to the Charger port at the bottom of your tablet.
2. Plug the charger to an electrical outlet to start charging the battery.



Installing a Memory Card

Your tablet includes an extendable microSD card slot that allows you extra storage.

To insert a Memory Card:

1. Insert the memory card into the memory card slot. Press the memory card in until it is fully inserted.



 
Powering On

1. Press and hold the Power key on the top side of your tablet to turn it on.

6

Powering Off


1. Press and hold the Power key on the top side of your tablet for several seconds.
2. Use the touchscreen to confirm that you want to Power off your tablet.

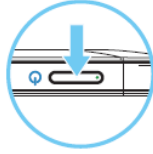

Understanding Your Tablet

USB Connection

 
A Micro USB connection allows you to transfer HD video, music, pictures, photos and other media content between your tablet and a computer. Use the USB cable that came with your tablet to make the connection and do the following:

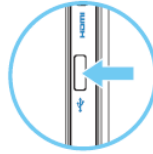

- Microsoft™ Windows™ XP, Windows Vista, and Windows 7 - On your computer, click Start, open your list of programs, and select Windows Explorer. Then drag and drop files from your computer to your tablet.
- Apple™ Macintosh™ - Use Android File Transfer. (You can download it from <http://www.android.com/filetransfer>.)

HDMI®

 Your tablet's Micro HDMI port allows you to connect it to other HDMI-enabled devices in order to share photos, videos, and other media content.

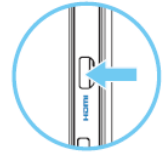

Troubleshooting

Forced Reboot

In the event that your tablet becomes unresponsive (either the display freezes, or the machine will not power on), you may try a forced reboot.

To force your tablet to reboot:

1. Press and hold the Power key until the device reboots.

Declarations and Safety Statements

Federal Communications Commission Statement

This device complies with FCC Rules Part 15. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING! *The use of a shielded-type power cord is required in order to meet FCC emission limits and to prevent interference to the nearby radio and television reception. It is essential that only the supplied power cord be used. Use only shielded cables to connect I/O devices to this equipment.*

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

(Reprinted from the Code of Federal Regulations #47, part 15.193, 1993. Washington DC: Office of the Federal Register, National Archives and Records Administration, U.S. Government Printing Office.)

FCC Radio Frequency (RF) Exposure Caution Statement

This equipment complies with FCC RF exposure limits set forth for an uncontrolled environment. To maintain compliance with FCC RF exposure compliance requirements, please follow operation instructions in the user guide.

IMPORTANT: *This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.*

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

NFC

Baud Rates: 9600, 28800, 115200, 230400, 460800

Transmission modes: ISO/IEC 14443 A, ISO/IEC 14443 B, MIFARE, Sony FeliCa

Operating ambient temp: 10°C to 70°C

RF Clock: 13.56MHz

This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.