



743 000
FOUR BUTTON REMOTE CONTROL

OWNER'S MANUAL

GUARANTEE

PFK ELECTRONICS (PTY) LIMITED WARRANTS THIS PRODUCT TO THE ORIGINAL CONSUMER PURCHASER TO BE FREE FROM DEFECTS WORKMANSHIP AND MATERIAL FOR A PERIOD OF TWO YEARS. SHOULD THIS PRODUCT BE FOUND TO BE DEFECTIVE, PFK ELECTRONICS SHALL REPAIR OR REPLACE THE PRODUCT OR ANY PART OF THE PRODUCT WHICH PFK ELECTRONICS AGREES IS DEFECTIVE WITHOUT CHARGE. THIS WARRANTY DOES NOT APPLY TO ANY PRODUCT WHICH HAS BEEN DAMAGED BY ACCIDENT, PHYSICAL OR ELECTRICAL ABUSE, ANY USE CONTRARY TO ITS INTENDED FUNCTION, UNAUTHORISED SERVICE (I.E. SERVICE BY ANYONE OTHER THAN PFK ELECTRONICS OR ITS AUTHORIZED AGENTS/SERVICE PERSONNEL), FIRE, FLOODING, LIGHTNING OR ACTS OF GOD.

**ADVANCED
SECURITY SYSTEMS**

A QUALITY
PRODUCT FROM
AUTOWATCH

CONGRATULATIONS!

Your remote control device designed to give years of trouble free operation, made with only the highest quality components and using state of the art technology you can be assured that your vehicle has the best electronic protection available.

Replacing the batteries in the remote control

Remove the screw at the back of the remote and separate the two housings. Be careful not to damage the electronics of the circuit board. Remove the battery carefully from the housing. Insert the new battery and note the polarity on the inside of the housing base.

(It is advisable to insert the negative end of the battery first then the positive).

To test the remote, press any of the four buttons and the LED should illuminate.

FCC Compliance


This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference and
- (2) This device must accept any interference received, including interference that may cause undesired Operation.

Note

"Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this device"

Remote Functions

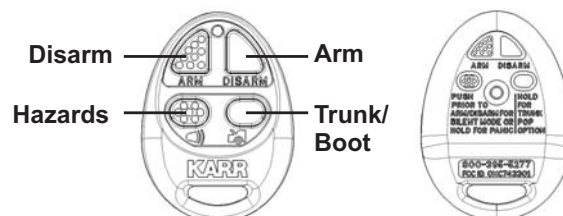

1. Arming the System

Simply press the arm button once to arm the system.

Silent Arming

Press the hazard button once, then the arm button within 2 seconds. The siren will not sound.

2. Disarming the System

Simply press the disarm button once to disarm the system.

Silent Disarming

Press the trunk button once, then the disarm button within 2 seconds. The siren will not sound.

3. Hazards

*Pressing this button twice turn the hazards on for a certain period depending on the alarm system used.
(Pressing the button again will clear the hazards.)*

4. Trunk/Hood

Pressing this button twice will open the vehicle trunk/hood provided the option has been connected.

5. Panic

Holding down any of the button for more than two seconds will sound the siren continuously.