

Register your product and get support at
www.philips.com/welcome

CD360

CD365

EN User manual

PHILIPS

Contents

Switch between uppercase and lowercase 23

1 Important	4
Safety	4

2 Get started	10
Connect the base station	10
Connect the charger	10
Wallmount the base station	11
Install the handset	12
Checking the battery level	12
Set the date and time	13
Set the date and time format	13
What is standby mode?	13
Check the signal strength	13
Switch your handset On/Off	13

3 Your CD360/CD365	14
What is in the box	14
Overview of the base station	15
Overview of the phone	15
Display icons	17

4 Calls	18
Make a call	18
End a call	18
Answer a call	18
Adjust the earpiece volume	19
Mute the microphone	19
Turn the speaker on or off	19
Make a second call	19
Answer a second call	19
Toggle between two calls	19
Make a conference call	20

5 Intercom and conference calls	21
Make a call to another handset	21
Transfer a call	21
Make a conference call	21

6 Text and numbers	23
Enter text and numbers	23

7 Phonebook	24
View the phonebook	24
Search a record	24
Access the phonebook during a call	24
Call from the phonebook	24
Add a record	24
Edit a record	25
Delete a record	25
Delete all records	25

8 Call log	26
View the call records	26
Return a call	26
Save a call record to the phonebook	26
Delete a call record	26
Delete all call records	26
Set the key tone	27

9 Redial list	28
View the redial records	28
Redial a call	28
Save a redial record to the phonebook	28
Delete a redial record	28
Delete all redial records	28

10 Self-defined settings	29
Personalize the phone display	29
Personalize the sounds	29

11 Call features	31
Auto hang up	31
Auto conference	31
Dial mode	31
Select the recall duration	31
Manage the area code	32
Auto prefix	32
First ring	32

12 Extra features	34
Alarm clock	34
Auto clock	34
Through the base	34

Keypad lock	34
Locate the handset	35
<hr/>	
13 Advanced settings	36
Register the handsets	36
Unregister the handsets	36
Restore default settings	36
<hr/>	
14 Telephone answering machine	38
Turn on the answering machine	38
Turn off the answering machine	38
Set the answering machine language	38
Set the answer mode	39
Outgoing messages (OGM)	39
Incoming messages (ICM)	40
<hr/>	
15 Default settings	43
<hr/>	
16 Technical data	44
<hr/>	
17 Frequently asked questions	45

 
1 Important

Safety

When the power fails, the phone cannot access emergency services.

Check the signal strength before you make a call or when you are in a call. (see 'Check the signal strength' on page 13)

Know these safety symbols

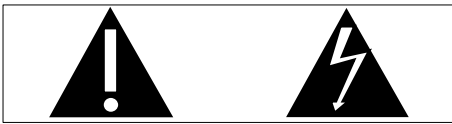

This 'bolt of lightning' indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

 
The 'exclamation point' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems. **WARNING:** To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Important Safety Instructions

- 1 Read these instructions.
- 2 Keep these instructions.

- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.



- 10 Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- ⑬ **Unplug this apparatus during lightning storms or when unused for long periods of time.**
- ⑭ **Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.**
- ⑮ **Battery usage CAUTION – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:**
 - Install all batteries correctly, + and - as marked on the unit.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Remove batteries when the unit is not used for a long time.
- ⑯ **Apparatus shall not be exposed to dripping or splashing.**
- ⑰ **Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).**
- ⑱ **This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org.**

FCC and IC statements

Equipment approval Information

Your telephone equipment is approved for connection to the public switched telephone network and is in compliance with parts 15 and 68, FCC Rules and Regulations and the Technical Requirements for Telephone Terminal Equipment published by ACTA.

Notification to the local telephone

On the bottom of this equipment is a label indicating, among other information, the US number and Ringer Equivalence Number (REN) for the equipment. You must, upon request,

provide this information to your telephone company.

The REN is useful in determining the number of devices you may connect to your telephone line and still have all of these devices ring when your telephone number is called. In most (but not all) areas, the sum of the RENs of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN,

you should contact your local telephone company.

A plug and jack used to connect this equipment to the premises wiring and telephone network

must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA.

A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

Note

- This equipment may not be used on coin service provided by the telephone company.
- Party lines are subject to state tariffs, and therefore, you may not be able to use your own telephone equipment if you are on a party line. Check with your local telephone company.
- Notice must be given to the telephone company upon permanent disconnection of your telephone from your line.
- If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this product does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

Rights of the phone company

Should your equipment cause trouble on your line which may harm the telephone network, the telephone company shall, where practicable, notify you that temporary discontinuance of

service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately.

In case of such temporary discontinuance, the telephone company must :

- 1 Promptly notify you of such temporary discontinuance;
- 2 Afford you the opportunity to correct the situation;
- 3 Inform you of your right to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68, FCC Rules and Regulations.

The telephone company may make changes in its communications facilities, equipment, operations or procedures where such action is required in the operation of its business and not inconsistent with FCC rules and Regulations. If these changes are expected to affect the use or performance of your

telephone equipment, the telephone company must give you adequate notice, in writing, to allow you to maintain uninterrupted service.

Interference information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions :

- 1 This device may not cause harmful interference; and
 - 2 This device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.
- However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Relocate the receiving antenna.
 - Increase the separation between equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

FCC RF radiation exposure statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

For hand held operation, this phone has been tested and meets the FCC RF exposure guidelines. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

Hearing Aid Compatibility (HAC)

This telephone system meets FCC and Industry Canada standards for Hearing Aid Compatibility.

Privacy

Privacy of communications may not be ensured when using this telephone.

Terminal equipment

Note

- This equipment meets the applicable Industry Canada Terminal Equipment Technical Specifications. This is confirmed by the registration number. The abbreviation, IC, before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment.

Note

- The Ringer Equivalence Number (REN) for this terminal equipment is marked on the equipment itself. The REN assigned to each terminal equipment provides an indication of the maximum number of terminals allowed to 42 FCC and IC statements be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed five.

Radio equipment

The term **IC** before the radio certification number only signifies that Industry Canada technical specifications were met. Operation is subject to the following two conditions:

- 1 This device may not cause interference; and
- 2 This device must accept any interference, including interference that may cause undesired operation of the device.

Do not attempt to repair or modify this equipment

Repairs to certified equipment should be made by an authorized maintenance facility designated by the supplier.



Warning

- Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 
Service Centers

USA and CANADA
Phone : 1-800-233-8413

Declaration of conformity

Hereby Philips Consumer Lifestyle, P&A, declares that the CD360/CD365 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. You can find the Declaration of Conformity on www.p4c.philips.com.

Recycling

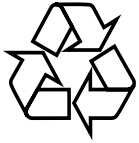

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health. The packaging of this product is intended to be recycled. Contact your local authorities for information about how to recycle the packaging.



When this logo is attached to a product, it means a financial contribution has been paid to the associated national recovery and recycling system. Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

The RBRC® seal

The RBRC® Seal on the nickel metal hydride battery indicates that Philips Royal Electronics is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States and Canada.

The RBRC® program provides a convenient alternative to placing used nickel metal hydride batteries into the trash or municipal waste, which may be illegal in your area. Philips's participation in RBRC® makes it easy for you to drop off the spent battery at local retailers participating in RBRC® program or at authorized Philips product service centers. Please call 1-800-8-BATTERY for information on Ni-MH battery recycling and disposal bans/restrictions in your area. Philips's involvement in this program is part of its commitment to protecting our environment and conserving natural resources.



RBRC® is a registered trademark of Rechargeable Battery Recycling Corporation.

Compliance with EMF

Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are

handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardisation for early integration in its products.

2 Get started

! Caution

- Ensure you have read the safety instructions in the "Important" section before you connect and install your handset.

Connect the base station

 
! Warning

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the phone.
- Use only the supplied power socket to charge the battery.


≡ Note

- The type plate is located on the bottom of the base station.

- 1 Connect the output plug of the power socket to the bottom of the base station.

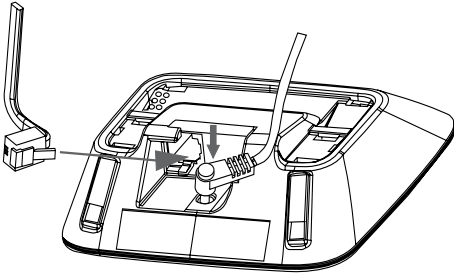

 - 2 Connect the power socket to a standard wall outlet.
- 3 Connect the telephone line cord to the phone socket at the bottom of the base station and the wall phone socket.

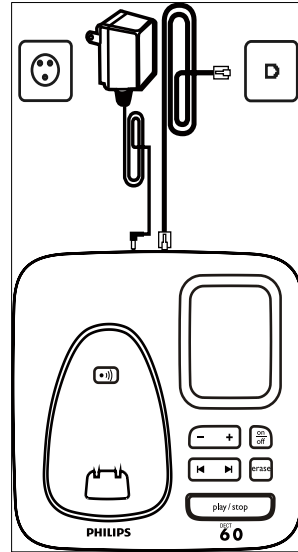


Connect the charger

≡ Note

- The instructions for charger connection below is only available for multi-pack models.

 - 1 Connect the output plug of the power socket to the bottom of the charger.

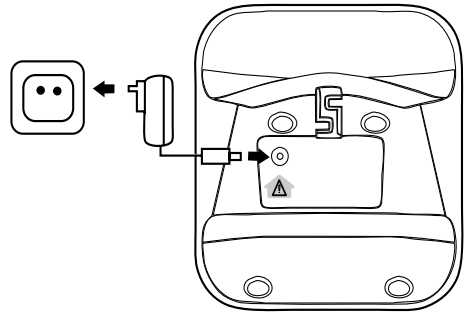

- 2 Connect the power socket to a standard wall outlet.

 
Wallmount the base station




Warning

- You must follow the instructions below to wallmount the base station.


- 1 Press the two latches on the top of the bracket.
↳ The bracket from the back of the base station is removed.

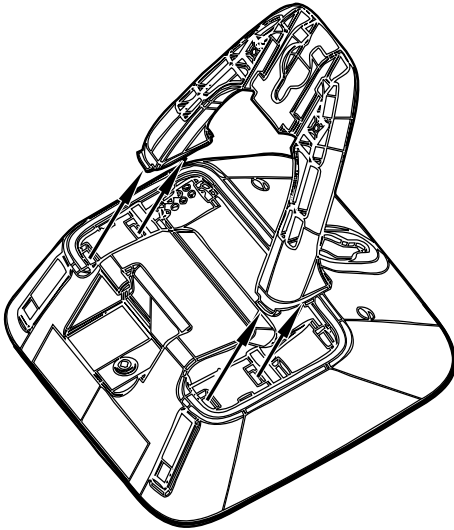


- 2 Turn the bracket around.

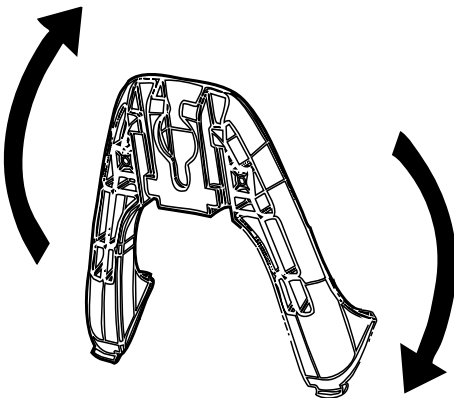 

 - 3 Re-insert the bracket into the back of the base station.
- 4 Insert screws (not included) into the wall.

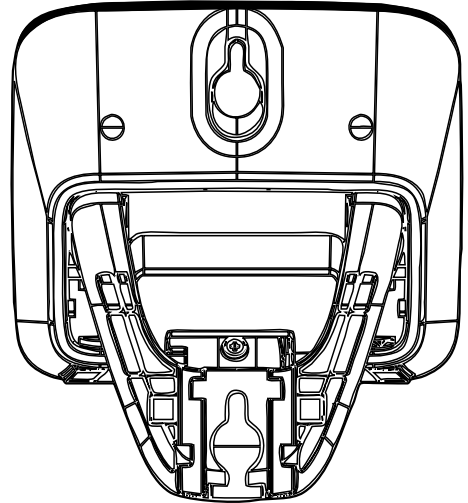

 - 5 Align the mounting holes on the back of the base station with the screws on the wall.
- 6 Slide the base station down into place.

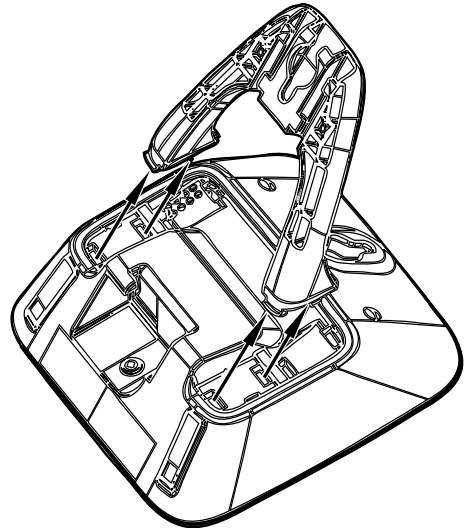

Install the handset

! Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Risk of decreased battery life! Never mix different brands or types of batteries.

 
☰ Note

- Charge the batteries for 24 hours before first use.


! Warning

- Check the battery polarity when inserting in the battery compartment. Incorrect polarity may damage the product.

- 1 The batteries are pre-installed in the handset. Pull the battery tape off from the battery door before charging.

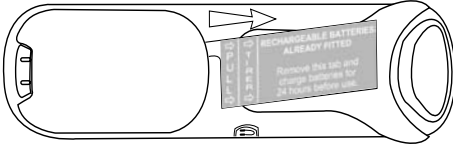

 - 2 Place the handset on the base station to power up.

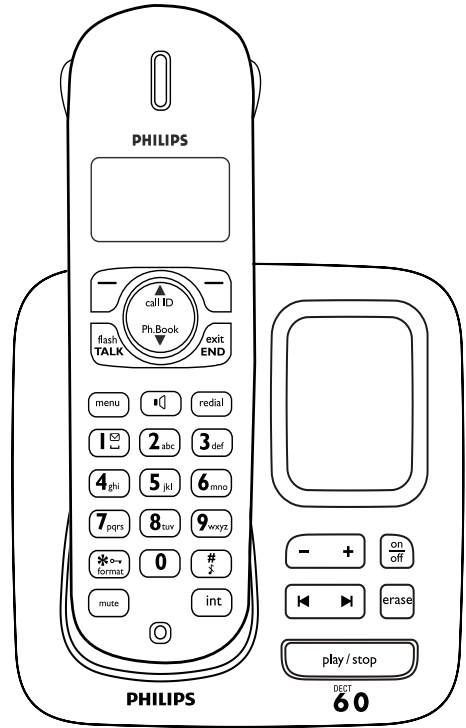

☰ Note

- If the handset becomes warm when the batteries are being charged, it is normal.

Checking the battery level

The battery icon displays the current battery level.

	The battery is full.
	The battery is empty. Charge it.

The handsets turn off if the battery is empty. If you are on the phone, you hear warning tones when the battery is almost empty. The call gets disconnected after the warning.

Set the date and time

- 1 Press **menu**.
- 2 Select **[CLOCK & ALARM] > [SET DATE/TIME]**, then press **[OK]** to confirm.
- 3 Press the numeric buttons to enter the date, then press **[OK]** to confirm.
 - ↳ On the handset, the time set menu is displayed.
- 4 Press the numeric buttons to enter the time.
 - If the time is in 12-hour format, press **▲ / ▼** to select **[AM]** or **[PM]**.
- 5 Press **[OK]** to confirm.

Set the date and time format

- 1 Press **menu**.
- 2 Select **[CLOCK & ALARM] > [SET FORMAT]**, then press **[OK]** to confirm.
- 3 Select **[DATE FORMAT]** or **[TIME FORMAT]**.
- 4 Select the setting. Select **[DD/MM][MM/DD]** as the date display and **[12 HOURS]** or **[24 HOURS]** as the time display. Then press **[OK]** to confirm.
 - ↳ The setting is saved.

What is standby mode?

Your phone is in standby mode when it is idle. The standby screen displays the handset name, handset number, date and time, signal icon, and battery icon.

Check the signal strength

- The signal icon displays the link status between the handset and base station. A steady icon means your handset and the base station are linked. A flashing icon means your handset and the base station are not linked.
- Ensure the handset is linked to the base station before you make or receive calls and carry out the phone functions and features.
- If you hear warning tones, the handset is almost out of battery or the handset is out of range. Charge the battery or move the handset nearer to the base station.

Switch your handset On/Off

- Press and hold **☰** to switch off the handset. The handset's screen turns off.



Note

- When the handset is switched off, no call can be received.
- Press **☰** to switch on the handset. It takes a few seconds for the handset to power up.