 


3 Your CD360/ CD365

 
Congratulations on your purchase and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.


What is in the box

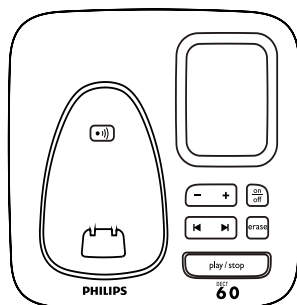


Base station with bracket

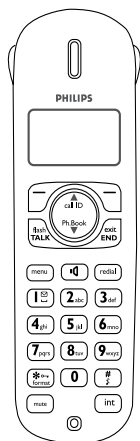


Headset

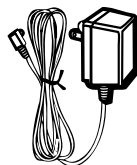 


Power supply

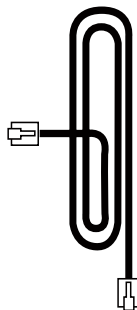 

Line cord

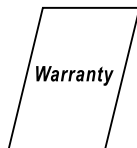 

Guarantee

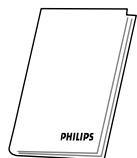 

User Manual



Quick start guide

 
Note

- In some countries, you have to connect the line adaptor to the line cord, then plug the line cord to the line socket.

Note

- In multi-handset packs, there are additional handsets and chargers with power supply units.


Overview of the base station

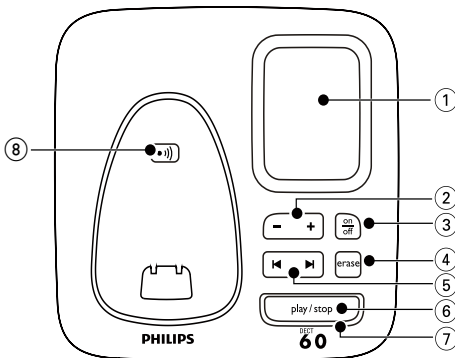


Key	Name	Descriptions
1	Loudspeaker	
2	Volume up/down key	Increase/decrease the speaker volume
3	On/Off key	Turn the answering machine on/off
4	Forward/backward key	Skip forward/backward during playback
5	Delete key	Delete messages
6	Play/Stop key	Play messages Stop message playback

7	LED indicator	<p>Slow flashing at 1 second interval: Unread messages</p> <p>Fast flashing at 0.5 second interval: The answering machine memory is full</p> <p>Steady On: The answering machine is on. Ongoing answering machine operation. Ongoing remote operation via the handset</p>
8	Paging key	<p>Find handset(s) Enter registration mode</p>

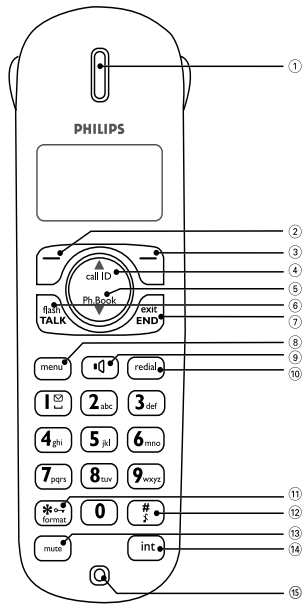 

 
 

 
 
 


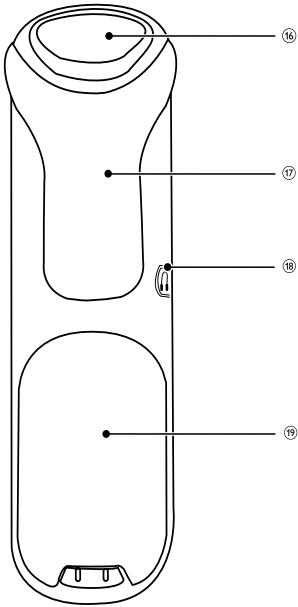



Overview of the phone





Key	Name	Descriptions
1	Earpiece	
2	OK key	Confirm the selection Enter the options menu
3	Back/Clear key	Delete the text or digits Cancel the operation View more information
4	Call Log/Up key	Scroll up on the menu Increase the earpiece/speaker volume Enter the call log
5	Phonebook/Down key	Scroll down on the menu Decrease the earpiece/speaker volume Enter the phonebook
6	Talk/Recall key	Make and receive calls Send the flash signal
7	End /On/Off key	End the call Exit the menu/operation Turn the handset on/off
8	Menu key	Access the main menu
9	Speaker key	Turn the speaker on/off
10	Redial key	Enter redial list and dial the recent number
11	Star/Keylock key	Lock/unlock keypad

Key	Name	Descriptions
12	Ringer Off/ Pause key	Press to enter a pause Turn the ringer on/off Switch between the lower and upper case during text editing
13	Mute key	Mute/unmute the microphone
14	Intercom/ Conference key	Make the intercom call Make the conference call
15	Microphone	
16	Loudspeaker	
17	Belt clip	
18	Headset jack	
19	Battery door	

Icon	Descriptions
	The battery is fully charged.
	The battery is empty.
	It indicates if your phone is registered with a network.
	The call is in progress.
	The alarm is activated.
	The speaker is on.
	The ringer is off.
	Call log
	Phonebook
	Answering machine
	There is unheard voice message.
	Scroll up for more options
	Scroll down for more options
	More digits or characters on the right.

Display icons

The icons tell you what features are available on your handset.

4 Calls


- When the power fails, the phone cannot access emergency services.
- Check the signal strength before you make a call or when you are in a call. (see 'Check the signal strength' on page 13)

Make a call


You can make a call in these ways:

- Quick call
- Dial before you call
- Redial the most recent number
- Call from the redial list.
- Call from the phonebook list
- Call from the call log


Quick call

- 1 Press .
- 2 Dial the phone number.
 - ↳ The number is dialed out.
 - ↳ The duration of your current call is displayed.

Dial before you call

- 1 Dial the phone number
 - To erase a digit, press **[BACK]**.
 - To enter a pause, press and hold **#**.
- 2 Press  to dial out the call.

Redial the most recent number

- 1 Press .
- 2 Press **redial**.
- 3 Press **[OK]**.
 - ↳ The most recent number is then dialed out.

Call from the redial list

You can make a call from the redial list. (see 'Redial a call' on page 28)

Call from the phonebook

You can make a call from the phonebook list. (see 'Phonebook' on page 24)

Call from the call log

You can return a call from the outgoing, received or missed call log. (see 'Call log' on page 26)

Note


- The call timer displays the talk time of your current call.

Note



- If you hear warning tones, the handset is almost out of battery or the handset is out of range. Charge the battery or move the handset nearer to the base station.

End a call

You can end a call in these ways:

- Press , or
- Place the handset to the base station or charging cradle.

Answer a call

When the phone rings. Press  or  to answer the call.

Warning

- When the handset rings or when the handsfree is activated, keep the handset away from your ear to avoid ear damage.

 Note

- The caller ID service is network dependent.

 Tip

- When there is a missed call, the handset displays a notification message.

Turn off the ringer for all incoming calls

There are two ways to turn off the ringer:

- 1 Press and hold **#** in standby mode.
 - ↳ **#** displays on the screen.
- 2 When the phone rings, press **exit**.

Adjust the earpiece volume

Press **▲** or **▼** to adjust the volume during a call, then press **[OK]** to confirm.

- ↳ The earpiece volume is adjusted and the phone is back to the call screen.

Mute the microphone

- 1 Press **↓** during a call.
 - ↳ The handset displays **[MUTE ON]**.
 - ↳ The caller cannot hear you, but you can still hear his voice.
- 2 Press **↓** again to unmute the microphone.
 - ↳ You can now communicate with the caller.

Turn the speaker on or off

Press **⌂**.

Make a second call

 Note

- This service is network dependent.

- 1 You can make a second call in these ways:
 - Press **☺** during a call; or
 - Press **[OK]**. Select **[START 2ND CALL]**, then press **[OK]** again to confirm.
 - The first call is put on hold.
- 2 Dial the second number.
 - ↳ The number displayed on the screen is dialed out.

Answer a second call

 Note

- This service is network dependent.

When there is a periodical beep to notify you of an incoming call, you can answer the call in these ways:

- 1 Press **☺** and **2nd** to answer the call.
 - ↳ The first call is put on hold, and you are now connected to the second call.
- 2 Press **☺** and **1st** to end the current call and answer the second call.

Toggle between two calls

You can toggle your calls in these ways:

- 1 Press **☺** and **2nd**; or
- 2 Press **[OK]** and select **[SWITCH CALLS]**, then press **[OK]** again to confirm.
 - ↳ The current call is put on hold, and you are now connected to the other call.

Make a conference call



Note

- This service is network dependent. Check with the service provider for additional charges.

When you are connected to two calls, press **[OK]**, select conference and then press **[OK]** again to confirm.

- ↳ The two calls are combined and a conference call is established.

5 Intercom and conference calls

An intercom call is a call to another handset that shares the same base station. A conference call involves a conversation among you, another handset user and the outside callers.

Make a call to another handset

Note

- If the base station only has 2 registered handsets, press **int** to make a call to another handset.

- 1 Press **int**. The handsets available for intercom are displayed.
- 2 Select or enter a handset number, then press **[OK]** to confirm.
 - ↳ The selected handset rings.
- 3 Press **☎** on the selected handset.
 - ↳ The intercom is established.
- 4 Press **☎** to cancel or end the intercom call.

Note

- If the selected handset is occupied in a call, you hear a busy tone.

While you are on the phone

You can go from one handset to another during a call:

- 1 Press **int**.
 - ↳ The current caller is put on hold.
- 2 Select or enter a handset number, then press **[OK]** to confirm.

- ↳ Wait for the other side to answer your call.

Toggle between calls

Press **int** to switch between the outside call and the intercom call.

Transfer a call

- 1 Press **int** during a call.
- 2 Select or enter the handset number, then press **[OK]** to confirm.
- 3 Press **☎** when the other side answers your call.
 - ↳ The call is now transferred to the selected handset.

Make a conference call

A 3-way conference call is a call between you, another handset user and the outside callers. It requires two handsets to share the same base station.

During an external call

- 1 Press **int** to initiate an internal call.
 - ↳ The handsets available for intercom are displayed.
 - ↳ The external caller is put on hold.
- 2 Select or enter a handset number, then press **[OK]** to confirm.
 - ↳ The selected handset rings.
- 3 Press on the selected handset.
 - ↳ The intercom is established.
- 4 Press and hold **int** on your handset.
 - ↳ You are now on a 3-way conference call with the external call and the selected handset.
- 5 Press **☎** to end the conference call.

 Note

- Press **int** to join an ongoing conference with another handset.

During the conference call

- 1** Press **int** to put the external call on hold and go back to the internal call.
↳ The external call is put on hold.
- 2** Press **int** to toggle between the external and internal call.
- 3** Press and hold **int** to establish the conference call again.

 Note

- If a handset hangs up during the conference call, the other handset remains connected to the external call.

7 Phonebook

This phone has a phonebook that stores up to 100 records. You can access the phonebook from the handset. Each record can have a name up to 14 characters long and a number up to 24 digits long.

View the phonebook

Note

- You can view the phonebook on one handset only each time.

- 1 Press **☰**.
- 2 Select a contact and view the available information.

Tip

- Press **[OK]** to access the phonebook options menu.

Search a record

You can search the phonebook records in these ways:

- Scroll the contacts list.
- Enter the first character of the contact.

Scroll the contact list

Access the phonebook menu, then press **☰** and **☑** to scroll through the phonebook entries.

Enter the first character of a contact

Access the phonebook menu and press the alphanumeric key that corresponds to the character.

- ↳ The first record that starts with this character is displayed.

Access the phonebook during a call

- 1 Press **[OK]**, select **[PHONEBOOK]** then press **[OK]** again to confirm.
- 2 Select the contact, then press **[OK]** to confirm.
 - ↳ The number can be viewed.

Call from the phonebook

- 1 Press **☰** to access the phonebook.
- 2 Select a contact in the phonebook list.
- 3 Press **☑** to make the call.

Add a record

Note

- If your phonebook memory is full, the handset displays a notification message. Delete some records to add new ones.

- 1 Press **menu**.
- 2 Select **[PHONEBOOK] > [NEW ENTRY]**, then press **[OK]** to confirm.
- 3 Enter the name then press **[OK]** to confirm (see 'Text and numbers' on page 23).
- 4 Enter the number, then press **[OK]** to confirm (see 'Text and numbers' on page 23).

Note

- The phonebook only saves new number.



Tip

- Press and hold # to insert a pause.

↳ Your new record is saved.

↳ All records are deleted.

Edit a record

- 1 Press **menu**.
- 2 Select [PHONEBOOK] > [EDIT ENTRY], then press [OK] to confirm.
- 3 Select the contact, then press [OK] to confirm.
- 4 Edit the name, then press [OK] to confirm.
- 5 Edit the number, then press [OK] to confirm.
 - ↳ The record is saved.

Delete a record

- 1 Press **menu**.
- 2 Select [PHONEBOOK] > [DELETE ENTRY?], then press [OK] to confirm.
- 3 Select a contact, then press [OK] to confirm.
 - ↳ The handset displays a confirmation request.
- 4 Press [OK] to confirm.
 - ↳ The record is deleted.

Delete all records

- 1 Press **menu**.
- 2 Select [PHONEBOOK] > [DELETE ALL], press [OK] to confirm.
 - ↳ The handset displays a confirmation request.
- 3 Press [OK] to confirm.