

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

SE655



US-EN Telephone Answering Machine

---


 

 
 

 


**Warning**

Use only rechargeable batteries.

Charge the handset for 24 hours before use.

**PHILIPS**

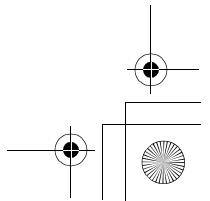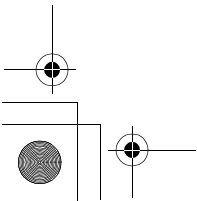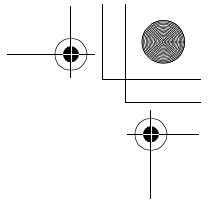

---

## Table of contents

<b>1</b>	<b>Important Safety Instructions</b>	<b>4</b>	5.1	What's in the box	14
			5.2	Overview of your phone	15
			5.3	Display icons and Messages	17
			5.4	Overview of the base station	18
<b>2</b>	<b>Environment and safety</b>	<b>6</b>	<b>6</b>	<b>Getting started</b>	<b>19</b>
2.1	Safety information	6	6.1	Connect the base station	19
2.2	Power requirements	6	6.2	Wall mounting the base	19
2.3	Battery requirements	6	6.3	Install your phone	20
2.4	Telephone connection	7	6.3.1	Install battery	20
2.5	Safety precautions	7	6.3.2	Charge battery	21
2.6	Conformity	8	6.4	Attach/Remove belt clip	21
2.7	Environmental care	8	6.5	Install optional headset	21
2.8	Equipment approval Information	8	6.6	Using multipacks	21
2.8.1	Notification to the local telephone company	8	6.7	Menu structure	22
2.8.2	Rights of the Phone Company	9	<b>7</b>	<b>Using your phone</b>	<b>27</b>
2.9	Interference Information	9	7.1	Make a call	27
2.10	Noise	10	7.1.1	Predialling	27
2.11	Hearing Aid Compatibility (HAC)	10	7.1.2	Direct dialling	27
2.12	FCC RF Radiation Exposure Statement	10	7.1.3	Call from redial list	27
			7.1.4	Call from the call log	27
			7.1.5	Call from the phonebook	28
<b>3</b>	<b>Important</b>	<b>11</b>	7.1.6	Call using Direct Access Memory	28
3.1	Power requirements	11	7.1.7	Enter a Dialing Pause	28
3.2	Electric, Magnetic and Electromagnetic Fields ("EMF")	12	7.2	Answer a call	28
3.3	Recycle your batteries	13	7.2.1	Handsfree answering	29
			7.3	End a call	29
<b>4</b>	<b>The RBRC® seal</b>	<b>13</b>	<b>8</b>	<b>Use more of your phone</b>	<b>30</b>
4.1	Service Centers	13	8.1	Switch the handset on/off	30
<b>5</b>	<b>Your phone</b>	<b>14</b>	8.2	Keypad lock/unlock	30

<b>8.3</b>	<b>Text or number entry</b>	<b>30</b>
<b>8.4</b>	<b>Call in progress</b>	<b>30</b>
8.4.1	Adjust earpiece or speaker volume	30
8.4.2	Mute/Unmute microphone	30
8.4.3	Activate/Deactivate loudspeaker mode	30
<b>8.5</b>	<b>Using your Phonebook</b>	<b>31</b>
8.5.1	Store a contact in the phonebook	31
8.5.2	Access phonebook	31
8.5.3	Modify a phonebook entry	31
8.5.4	Select phonebook melody	32
8.5.5	Delete a phonebook entry	32
8.5.6	Delete all phonebook entries	33
8.5.7	Direct Access Memory	33
<b>8.6</b>	<b>Using the Redial list</b>	<b>33</b>
8.6.1	Access Redial list	34
8.6.2	View redial number details	34
8.6.3	Save a redial number into the phonebook	34
8.6.4	Delete a redial number	34
8.6.5	Delete all redial numbers	34
<b>8.7</b>	<b>Call waiting</b>	<b>35</b>
<b>8.8</b>	<b>Using the Call log</b>	<b>35</b>
8.8.1	Access the Call log	35
8.8.2	Save call list entry into the phonebook	35
8.8.3	Delete a call list entry	36
8.8.4	Delete all call list entries	36
<b>8.9</b>	<b>Using the Intercom</b>	<b>36</b>
8.9.1	Intercom another handset	36
8.9.2	Transfer an external call to another handset	37
8.9.3	Answer an external call during intercom	37
8.9.4	Switch between an internal and external call	37

8.9.5	Establish a three-party conference call	37
<b>8.10</b>	<b>Paging</b>	<b>37</b>
<b>8.11</b>	<b>Clock and Alarm settings</b>	<b>38</b>
8.11.1	Set Date and Time	38
8.11.2	Set Time and Date Format	38
8.11.3	Set Alarm	38
8.11.4	Set Alarm Tone	39
<b>9</b>	<b>Personal settings</b>	<b>39</b>
<b>9.1</b>	<b>Change the Handset Name</b>	<b>39</b>
<b>9.2</b>	<b>Handset Tones</b>	<b>39</b>
9.2.1	Set the Ring Volume	39
9.2.2	Set the Ring Tones	40
9.2.3	Activate/Deactivate Key Beep	40
<b>9.3</b>	<b>Change the Display Language</b>	<b>40</b>
<b>9.4</b>	<b>Select the Display Wallpaper</b>	<b>41</b>
<b>9.5</b>	<b>Select the Color Theme</b>	<b>41</b>
<b>9.6</b>	<b>Set the Display Contrast</b>	<b>41</b>
<b>9.7</b>	<b>Set the Backlight Time</b>	<b>41</b>
<b>9.8</b>	<b>Deactivate/Activate Auto Hang-Up</b>	<b>41</b>
<b>10</b>	<b>Advanced settings</b>	<b>42</b>
<b>10.1</b>	<b>Easy Call</b>	<b>42</b>
10.1.1	Set Easy Call to On or Off	42
10.1.2	Set Easy Call number	42
<b>10.2</b>	<b>Auto Conference</b>	<b>43</b>
<b>10.3</b>	<b>Call Barring</b>	<b>43</b>
10.3.1	Set Call Barring Mode	43
10.3.2	Set a Call Barring number	43
<b>10.4</b>	<b>XHD Sound</b>	<b>44</b>
<b>10.5</b>	<b>Change PIN</b>	<b>44</b>
<b>10.6</b>	<b>Registration</b>	<b>44</b>
<b>10.7</b>	<b>Unregister</b>	<b>45</b>
<b>10.8</b>	<b>Reset Unit</b>	<b>45</b>

10.9	Set Area Code	46	14.4	Product behaviour	55
10.10	Set Auto Prefix	46			
10.11	Change the Dial Mode	47	<b>15</b>	<b>INDEX</b>	<b>57</b>
10.12	Set First Ring Detection	47			
10.13	Default Settings	47			
<b>11</b>	<b>Network Service</b>	<b>48</b>			
11.1	Voice Mail	48			
11.1.1	Access Voice Mail	48			
11.1.2	Set Voice Mail Number	48			
<b>12</b>	<b>Telephone answering machine (TAM)</b>	<b>49</b>			
12.1	Playing Messages	49			
12.1.1	Playback of messages via handset	49			
12.1.2	Functions available during playback	50			
12.2	Delete all messages	50			
12.3	Turn the Answering Machine On/Off	50			
12.4	Play, Record, or Delete an Outgoing Message	50			
12.5	Set the Answer mode	51			
12.6	Answering Machine Settings	51			
12.6.1	Ring Delay	51			
12.6.2	Remote Access	52			
12.6.3	Handset Screening	53			
12.6.4	Setting the Outgoing Message Language	53			
<b>13</b>	<b>Technical data</b>	<b>53</b>			
<b>14</b>	<b>Frequently asked questions</b>	<b>54</b>			
14.1	Connection	54			
14.2	Set-up	54			
14.3	Sound	55			

# 1 Important Safety Instructions

Some of the following information may not apply to your particular product; however, when using telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- 1** Read and understand all instructions.
- 2** Follow all warnings and instructions marked on the product.
- 3** Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 4** Telephones should not be used while you are in a bathtub, shower or pool. Immersion of the telephone or handset in water could cause an electrical shock.
- 5** Slots and openings in the cabinet back or bottom are provided for ventilation, to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on the bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation unless proper ventilation is provided.
- 6** This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
- 7** Do not allow anything to rest on the power cord. Do not locate this product where the cord will be abused by persons walking on it.
- 8** Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
- 9** Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock.  
Never spill liquid of any kind on the product.
- 10** To reduce the risk of electric shock, do not disassemble this product, but take it to a qualified service personnel when service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
- 11** Do not expose the product to extreme temperatures such as areas near a hot radiator or stove or in a hot car.
- 12** Do not place lighted candles, cigarettes, cigars, etc., on the telephone.
- 13** Never touch uninsulated telephone wires or terminals unless the

telephone line has been disconnected at the network interface.

- 14** Never install or modify telephone wiring during a lightning storm.
- 15** Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- 16** Use caution when installing or modifying telephone lines to prevent electrical shock and/or fire.
- 17** Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - A** When the power supply cord or plug is damaged or frayed.
  - B** If the product has been exposed to rain or water.
  - C** If the product does not operate normally by following the operating instructions.
  - D** If the product's cabinet has been damaged.
  - E** If the product exhibits a distinct change in performance.
- 18** Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- 19** Do not use the telephone to report a gas leak in the vicinity of the leak.
- 20** Do not place this product on an unstable cart, stand or table. The product may fall, causing serious damage to the product.

**IF YOUR PRODUCT UTILIZES BATTERIES, THE FOLLOWING**

**ADDITIONAL PRECAUTIONS SHOULD BE OBSERVED:**

- 1** Use only the type and size of battery(ies) specified in the user manual.
- 2** Do not dispose of the battery(ies) in fire. They may explode. Check with local codes for possible special disposal instructions.
- 3** Do not open or mutilate the battery(ies). Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
- 4** Exercise care in handling battery(ies) in order not to short out the battery(ies) with conducting materials such as rings, bracelets, and keys. The battery(ies) or conductor may overheat and cause burns.
- 5** Do not attempt to recharge the battery(ies) provided with or identified for use with this product that are not intended to be recharged. The battery(ies) may leak corrosive electrolyte or explode.
- 6** Do not attempt to rejuvenate the battery(ies) provided with or identified for use with this product by heating them. Sudden release of the battery(ies) electrolyte may occur causing burns or irritation to eyes or skin.
- 7** When replacing battery(ies), all batteries should be replaced at the same time. Mixing fresh and discharged batteries could increase internal cell pressure and rupture

the discharged battery(ies). (Applies to products employing more than one separately replaceable primary battery.)

- 8 When inserting battery(ies) into this product, the proper polarity or direction must be observed. Reverse insertion of battery(ies) can cause charging, and that may result in leakage or explosion.
- 9 Remove battery(ies) from this product if storing over 30 days because the battery(ies) could leak and damage the product.
- 10 Discard "dead" battery(ies) as soon as possible since "dead" batteries are more likely to leak in a product.
- 11 Do not store this product, or the battery(ies) provided with or identified for use with this product, in high temperature areas. Batteries that are stored in a freezer or refrigerator for the purpose of extending shelf life should be protected from condensation during storage and defrosting. Batteries should be stabilized at room temperature prior to use after cold storage.
- 12 If your product uses rechargeable battery(ies), charge the battery(ies) only in accordance with the instructions and limitation specified in the User Manual.

#### **SAVE THESE INSTRUCTIONS**

## 2 Environment and safety

### 2.1 Safety information

This telephone is not designed for making emergency telephone calls when the power fails. An alternative should be made available for access to emergency calling.

### 2.2 Power requirements

This product requires an electrical supply of 120 volts, single phase alternating current, excluding IT installations defined in standard UL 60950.

### 2.3 Battery requirements

The handset requires power source of two rechargeable NiMH batteries, size AAA 1.2V 750mAh (Hr11/45). **IF THE INCORRECT TYPE OF BATTERIES ARE USED, A WARNING MESSAGE WILL BE DISPLAYED.**

Use only Philips Multi-Life 750mAh rechargeable NimH batteries. For servicing or replacement, you can purchase a suitable headset through service centre or retail shop.

#### **⚠ Caution**

The electrical network is classified as dangerous according to criteria in the standard UL 60950. The only way to power down this product is by unplugging the power supply from the



electrical outlet. Ensure the electrical outlet is located close to the apparatus and is always easily accessible.

#### 2.4 Telephone connection

The voltage on the network is classified as TNV-3 (Telecommunication Network Voltages, as defined in the standard UL 60950). Following a power cut, the call in progress is lost.

##### ⚠ Caution

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

#### 2.5 Safety precautions

- Do not allow the handset to come into contact with liquids or moisture.
- Do not open the handset, base station or charger. This could expose you to high voltages.
- Do not allow the charging contacts of the charger or the battery to come into contact with extraneous conductive materials.
- There is a slight chance that the telephone could be damaged by an electrical storm. It is recommended that users unplug the phone from the USB socket and the phone line from the phone wall socket during a storm.

- Do not use the handset in an explosive hazard area such as where there is gas leaking.
- Young children should be supervised to ensure that they do not play with the telephone.
- Because the phone works by sending radio signals between the base unit and the handset, wearers of hearing aids may experience interference in the form of a humming noise.
- We advise that this phone should not be used near intensive care medical equipment or by persons with pacemakers.
- Your phone can interfere with electrical equipment such as answering machines, TV and radio sets if placed too close. It is recommended that you position the base unit at least one meter from such appliances.

##### ⚠ Caution

Use only the mains adapter supplied with this telephone. Incorrect adapter polarity or voltage can seriously damage the unit.

##### ⚠ Caution

**RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.**  
Never use non-rechargeable batteries; use recommended type supplied with this telephone. NiMH batteries must be disposed of in accordance with the applicable waste disposal regulations.

FCC CERTIFICATION NUMBER IS LOCATED ON THE CABINET BOTTOM

The term "IC:" before the certification number signifies that Industry Canada technical specifications were met. This certification means that the equipment meets certain radio communications and operational requirements.

## 2.6 Conformity

We, Philips declare that the product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. This product can only be connected to the analogue telephone networks of the countries mentioned on the packaging. You can find the Declaration of Conformity on [www.p4c.philips.com](http://www.p4c.philips.com).

## 2.7 Environmental care



Please remember to observe the local regulations regarding the disposal of your packaging materials, exhausted batteries and old phone and, where possible, promote their recycling.

**Philips has marked the packaging with standard symbols designed to promote the recycling and appropriate disposal of your eventual waste.**



A financial contribution has been paid to the associated national recovery & recycling system.



The labeled packaging material is recyclable.

## 2.8 Equipment approval Information

Your telephone equipment is approved for connection to the public switched telephone network and is in compliance with parts 15 and 68, FCC Rules and Regulations and the Technical Requirements for Telephone Terminal Equipment published by ACTA.

### 2.8.1 Notification to the local telephone company

On the bottom of this equipment is a label indicating, among other information, the US number and Ringer Equivalence Number (REN) for the equipment. You must, upon request, provide this information to your telephone company.

The REN is useful in determining the number of devices you may connect to your telephone line and still have all of these devices ring when your telephone number is called. In most (but not all) areas, the sum of the RENs of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company. A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a

compatible modular jack that is also compliant. See installation instructions for details.

#### Notes

- This equipment may not be used on coin service provided by the telephone company.
- Party lines are subject to state tariffs, and therefore, you may not be able to use your own telephone equipment if you are on a party line. Check with your local telephone company.
- Notice must be given to the telephone company upon permanent disconnection of your telephone from your line.
- If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this product does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

### 2.8.2 Rights of the Phone Company

Should your equipment cause trouble on your line which may harm the telephone network, the telephone company shall, where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue

service immediately. In case of such temporary discontinuance, the telephone company must:

- (1) promptly notify you of such temporary discontinuance;
  - (2) afford you the opportunity to correct the situation;
  - (3) inform you of your right to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68, FCC Rules and Regulations.
- The telephone company may make changes in its communications facilities, equipment, operations or procedures where such action is required in the operation of its business and not inconsistent with FCC rules and Regulations. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company must give you adequate notice, in writing, to allow you to maintain uninterrupted service.

### 2.9 Interference Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference; and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is “receiving” the interference).
- Reorient or relocate and increase the separation between the telecommunications equipment and receiving antenna.
- Connect the telecommunications equipment into an outlet on a circuit different from that to which the receiving antenna is connected.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio / television technician for additional suggestions.

Also, the Federal Communications Commission has prepared a helpful booklet, “How To Identify and Resolve Radio/TV Interference Problems”. This booklet is available from the U.S.

Government Printing Office,  
Washington, D.C. 20402.  
Please specify stock number 004-000-00345-4 when ordering copies.  
Notice: The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

---

### 2.10 Noise

Electrical pulse noise is present at one time or another. This is most intense during electrical storms. Certain kinds of electrical equipment, such as light dimmers, fluorescent bulbs, motors, fans, etc., also generate pulse noise. Because radio frequencies are susceptible to this, you may on occasion hear pulse noise through the receiver. This is usually only a minor annoyance and should not be interpreted as a defect of the unit.

---

### 2.11 Hearing Aid Compatibility (HAC)

This telephone system meets FCC and Industry Canada standards for Hearing Aid Compatibility.

---

### 2.12 FCC RF Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of

20 centimeters between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. For hand held operation, this phone has been tested and meets the FCC RF exposure guidelines. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe systems, if present, are connected together. This precaution may be particularly important in rural areas. CAUTION: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

NOTES: This equipment may not be used on coin service provided by the telephone company.

### 3 Important

Take time to read this user manual before you use your phone. It contains important information and notes regarding your phone.

NOTICE: This product meets the applicable Industry Canada technical specifications.

The equipment must be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

#### 3.1 Power requirements

- This product requires an electrical supply of 220-240 volts AC. In case of power failure, the communication can be lost.
- The Electrical network is classified as hazardous. The only way to power down the charger is to unplug the power supply from the electrical outlet. Ensure that the electrical outlet is always easily accessible.
- The voltage on the network is classified as TNV-3 (Telecommunication Network Voltages), as defined in the standard UL 60950.

#### Warning

To avoid damage or malfunction:

- Do not allow the charging contacts or the battery to come into contact with metal objects.

- Do not open it as you could be exposed to high voltages.
- Do not allow the charger to come into contact with liquids.
- Never use any other battery than the one delivered with the product or recommended by Philips: risk of explosion.
- Always use the cables provided with the product.
- Handsfree activation could suddenly increase the volume in the earpiece to a very high level: make sure the handset is not too close to your ear.
- This equipment is not designed to make emergency calls when the power fails. An alternative has to be made available to allow emergency calls.
- Do not expose the phone to excessive heat caused by heating equipment or direct sunlight.
- Do not drop your phone or allow objects to fall on your phone.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the set.
- Do not use the product in places where there are explosive hazards.
- Do not let small metal objects come into contact with the product. This can deteriorate audio quality and damage the product.
- Active mobile phones in the vicinity may cause interference.

About operating and storage temperatures:

- Operate in a place where temperature is always between 0 and 35° C (32 to 95° F).
- Store in a place where temperature is always between -20 and 45° C (-4 to 113° F).
- Battery life may be shortened in low temperature conditions.

### 3.2 Electric, Magnetic and Electromagnetic Fields ("EMF")

1. Philips Royal Electronics manufactures and sells many consumer oriented products which usually, as with any electronic apparatus, have the ability to emit and receive electro magnetic signals.
2. One of Philips' leading Business Principles is to take all necessary health and safety precautions for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.
3. Philips is committed to develop, produce and market products that cause no adverse health effects.
4. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.
5. Philips plays an active role in the development of international EMF

and safety standards, enabling Philips to anticipate further developments in standardisation for early integration in its products.

RBRC<sup>®</sup> program or at authorized Philips product service centers. Please call 1-800-8-BATTERY for information on Ni-MH battery recycling and disposal bans/restrictions in your area. Philips's involvement in this program is part of its commitment to protecting our environment and conserving natural resources. RBRC<sup>®</sup> is a registered trademark of Rechargeable Battery Recycling Corporation.

---

### 3.3 Recycle your batteries

Do not dispose your rechargeable batteries. Call the toll free number 1-800-822-8837 to get instructions on how to recycle your batteries.

---

### 4.1 Service Centers

US service center  
Philips Accessories & Computer  
Peripherals North America 1881 Route  
46 WestLedgeWood, NJ 07852  
Phone: (800) 233-8413  
E-mail support:  
<http://www.support.philips.com/support>

---

## 4 The RBRC<sup>®</sup> seal



The RBRC<sup>®</sup> Seal on the nickel metal hydride battery indicates that Philips Royal Electronics is voluntarily

participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States and Canada.

The RBRC<sup>®</sup> program provides a convenient alternative to placing used nickel metal hydride batteries into the trash or municipal waste, which may be illegal in your area.

Philips's participation in RBRC<sup>®</sup> makes it easy for you to drop off the spent battery at local retailers participating in the

The RBRC<sup>®</sup> seal

## 5 Your phone


Congratulations on your purchase and welcome to Philips!

To truly benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

### 5.1 What's in the box



**Handset**

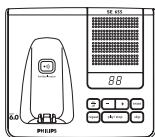

**Base Station with  
bracket**




**Battery door**



 
**Belt clip**



**2 AAA rechargeable  
batteries**



**Power supply**

 

**Line cord\***



**User manual**



**Guarantee**



**Quick Start Guide**


#### **Note**

\* You may find in the box the line adaptor delivered separately from the line cable. **In this case, you have to connect the line adaptor to the line cord first before plugging the line cord to the line socket.**

In multihandset packs, you will find one or more additional handsets, chargers with power supply units and additional rechargeable batteries.



## 5.2 Overview of your phone

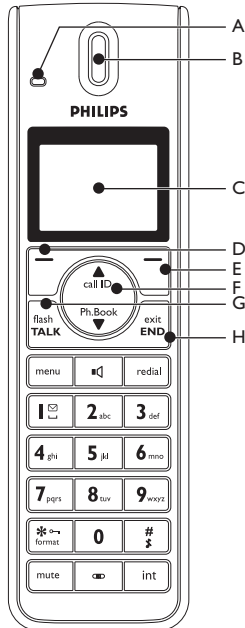

### A Event LED

The event LED on your handset blinks when there is a new message recorded on your telephone answering machine. If you have subscribed to Caller Line Identification, the event LED also blinks when there is a new call, or a new voice mail message.

### B Earpiece

### C Display

See section 5.3 for an overview of the display icons.

### D Select key

Select the function displayed on the screen or go to the next lower level in a menu. Also used to confirm entries (for example when setting date and time).

### E Back/Clear key

Press to clear (delete) a character or number when making an entry. Long press to clear all.

When navigating menus, press to move to the previous higher menu level (**Back** is displayed).

### F Navigation keys

In idle mode: Scroll up  $\blacktriangle$  call ID to access the Call log and scroll down  $\blacktriangledown$  Ph.Book to access the Phonebook.

During a call: Scroll  $\oplus$  to increase or decrease earpiece and speaker volume.

Editing and entry: Move to the previous character  $\blacktriangle$  call ID or next character  $\blacktriangledown$  Ph.Book.

In other modes: Scroll up  $\blacktriangle$  call ID and down  $\blacktriangledown$  Ph.Book a menu list or go to the previous or next record in the Phonebook, Redial list, or Call log.

### G Talk key

In idle mode: Make an external call or answer an incoming external or internal call.

During a call: Activate the flash function.

In other modes: Dial the selected number in the Phonebook, Redial list, or Call log.

### H Hang-up/Exit key

In idle mode: Long press (5 seconds) to switch off the handset.

When the handset is switched off: Long press (1 second) to switch it on.  
 During a call: Hang up a call.  
 In other modes: Press to return to idle mode.

**I Menu key** 

In idle mode: Go to the main menu.

**J Redial key** 

Access the Redial list in idle mode.

 
**K Loudspeaker key** 



In idle mode: Turn on the loudspeaker and dial the number. Answer an incoming call using handsfree mode.

During a call: Toggle the loudspeaker on/off.

**L Number keys**

Use to dial numbers and write characters.

  With key  a long press dials your voice mail subscriber access number.

With keys  to , a long press dials one of your direct memory access numbers.


**M \*/Keypad lock & Format key**



 In idle mode: Long press to lock/ unlock keypad.

Predialling or editing: Press to enter a “\*”.


Off hook: Long press to temporarily switch to tone (DTMF) dialling if using pulse.

**N Ringer off key** 

In idle mode: Long press to turn the ringer on/off.

Dialling or editing: Long press to insert a pause (during predialling) and short press to insert a “#”.

Editing: Short press to switch upper/ lower case.

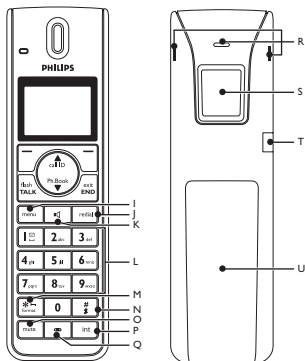

During call log display: Toggles area code and long distance display on/off.

**O Mute key** 

When off hook: Deactivate/activate the microphone.

**P Call transfer key & Intercom key** 

In idle mode: Initiate an internal call.

During a call: Short press to hold the line and page another handset. Long press to set up a conference between an external call and two handsets.

**Q Microphone**

**R Belt clip hole**

**S Loudspeaker**

**Warning**












Handsfree activation can suddenly increase the volume of the earpiece to a very high level. Make sure the handset is not too close to your ear.

**T Headset jack**


**U Battery door**

### 5.3 Display icons and Messages



- |  |   |   |  |
|--|---|---|--|
|   | <p>Indicates that the battery is fully charged. This icon blinks during charge and when the battery is low.</p> |  | <p>Steady on when the answering machine is on. Blinks when messages have been received by the answering machine; blinks rapidly when answering machine memory is full.</p> |
|   | <p>When the icon is empty the battery is practically discharged.</p>  |  | <p>Indicates that the handset is registered and within range of the base station. Icon blinks when the handset is out of range or is searching for a base.</p>             |
| <p><b>Note</b><br/>If <b>Warning Batt</b> flashes together with a blinking battery icon, batteries of the wrong type are installed in the handset. Replace with batteries of the correct type.</p> |   | <p><b>Select</b></p>  | <p>Appears when in the menu mode. Press the key directly below to move to the next menu level or to confirm a selection.</p>   |
|   | <p>If you subscribe to voice mail service, blinks when there are new messages.</p>                              | <p><b>OK</b></p>  | <p>Appears to request confirmation of an operation. Press the key directly below to confirm.</p>   |
|   | <p>Blinks when there is new voice mail.</p>   |  | <p>Indicates that more options are available in a scroll list, or that you can adjust the volume.</p>  |
|   | <p>Indicates new and missed calls in the call log records. Blinks when there are missed calls.</p>              | <p><b>Back</b></p>  | <p>Appears when in menu mode. Press the key directly below to return to the previous menu level.</p>   |
|   | <p>Appears when the alarm clock is activated. Blinks when the alarm time comes.</p>                             | <p><b>Clear</b></p>   | <p>Press the key directly below to clear (delete) a character or number when making an entry. Long press to clear all.</p>   |
|   | <p>Appears when the loudspeaker is activated.</p>   |   |  |
|   | <p>Appears when the ringer is off.</p>  |   |  |

## 5.4 Overview of the base station

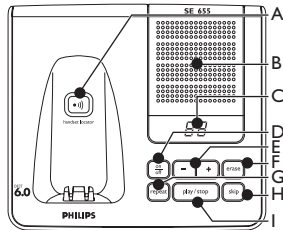

### A Handset locator key

Locate handset.

Long press to start registration procedure.

### B Speaker

### C Message counter

Steady ON: shows the number of old messages.

Blinking: Shows the number of new messages only.

Two horizontal bars "--" blinking:

Indicates that the answering machine memory is full.

Also shows the base volume level when adjusting the volume.

### D On/Off key

Short press to switch the answering machine on/off.

### E Volume keys

Increase or decrease the speaker volume.

There are 5 volume levels during playback. There are 5 volume levels plus OFF during idle mode and call screening.

### F Erase key

Short press to delete the current message during message playback.

Long press (2 seconds) when in idle mode to delete all old messages. (New messages will not be deleted.)

### G Previous key

Go to previous message if pressed within 1 second of current message playback.

Replay current message if pressed after 1 second of current message playback.

### H Next key

Skip to the next message during message playback.

### I Play/Stop key


Play phone messages (the first recorded will be played first). There will be a short beep between messages and a double beep when all messages have been played.

Stop message playback.


## 6 Getting started

### 6.1 Connect the base station

- 1** Place the base station in a central location near the telephone line socket and electricity socket.
- 2** Connect the line cord and the power cable to their corresponding connectors at the back of the base station.

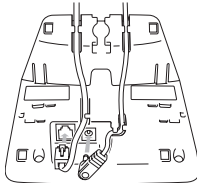

- 3** Connect the other end of the line cord and power cable to their respective sockets.

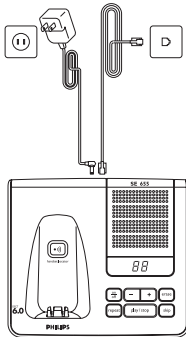

#### **Note**

The line adaptor may not be attached to the line cord. In this case, you have to connect the line adaptor to the line cord first before plugging the line cord to the line socket.

#### **Warning**


Avoid placing the base station too close to large metal objects such as filing cabinets, radiators or electrical appliances. This can impair the range and sound quality. Buildings with thick internal and external walls may impair transmission of signals to and from the base.

#### **Warning**


Power is applied when the power adaptor is plugged into the unit and connected to the electricity socket. The only way to power down the unit is to unplug the power adaptor from the electricity socket. Therefore, ensure that the electricity socket is easily accessible. The power adaptor and telephone line cord have to be connected correctly, as incorrect connection could damage the unit. Always use the telephone line cord supplied with the unit. Otherwise, you may not get a dial tone.

### 6.2 Wall mounting the base


The base is designed to support wall mounting. To wall mount the base, follow the instructions below.

- 1** Remove the bracket from the back of the base station by  pressing the two latches on the inside of the


bracket and ② rotating the bracket outward.

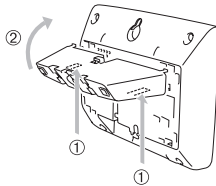


2 Turn the bracket around.

 

3 Attach the bracket to the opposite side of the base station.

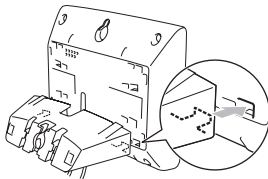

4 Use the pedestal wall mounting to plug your base station.

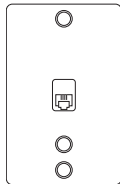

### 6.3 Install your phone

Before using the handset, the batteries have to be installed and fully charged.

#### ⚠ Warning

 
When the batteries are inserted for the first time, the unit will not be able to start normally due to the low battery. You must charge the batteries on the base station before you can use the handset.

#### 6.3.1 Install battery


##### ⚠ Warning

Always use AAA rechargeable batteries supplied with your unit. If alkaline batteries are used instead of rechargeable batteries, “**Warning Batt**” will show on the display and the battery icon will blink quickly.

1 Slide out the battery cover.



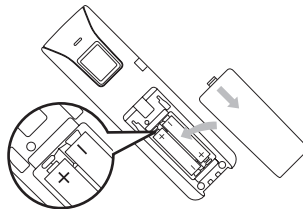

2 Place the batteries in the correct polarity as indicated and replace the cover.




### 6.3.2 Charge battery

#### Warning

The handset must be charged for at least 24 hours before using it for the first time. When the battery level becomes low, the low battery sensor warns you by blinking the battery icon. If the battery level becomes exceedingly low, the phone automatically switches off shortly after the icon starts blinking and any function in progress will not be saved.

- 1** Place the handset on the charging cradle of the base station. A beep is emitted if the handset is placed correctly.
- 2** The battery icon  on the display blinks during charge.
- 3** The battery icon  becomes steady when the handset is fully charged.

#### Note

Optimal battery life is reached after 3 cycles of complete charging (over 15 hours) and discharging, allowing approximately 12 hours of talk-time and 150 hours of stand-by time. The indoor and outdoor range of the phone is up to 50 metres and 300 metres respectively. When the handset moves beyond the operation range, the antenna icon  will blink.

 
#### Tip

When you reach the range limit the conversation may become crackly. Move closer to the base.

### 6.4 Attach/Remove belt clip

A belt clip allows you to carry your handset on your belt.

- 1** To attach the belt clip to your handset, fit the tabs on the belt clip into the slots at the back of the handset and push into place.



- 2** To remove the belt clip, simply pull the clip away from the handset.

### 6.5 Install optional headset

Your phone may be used with an optional headset. To use this feature, insert the headset plug into the headset jack. Your phone is ready for hands-free conversations.









### 6.6 Using multipacks

 

If you have purchased a multipack you will have additional handsets, chargers, power adaptors and AAA rechargeable batteries.



- 1** Plug the chargers into a power socket.
- 2** Install the batteries supplied into the handsets.
- 3** Place the handsets on the chargers to charge the batteries.

## 6.7 Menu structure

The SE655 has six menus as shown in the following table.


	Menu Name	Icon
1	Phonebook	
2	Personal Settings	
3	Clock and Alarm	
4	Advanced Settings	
5	Network Services	
6	Answer Machine	

Press the menu key  to enter menu mode. Use navigation keys  to navigate within the menus and all submenus.

Press  **Select** to enter the next lower menu level. Press  **Back** to go to the previous menu level.


The charts below show the menu trees of your phone.

### Phonebook

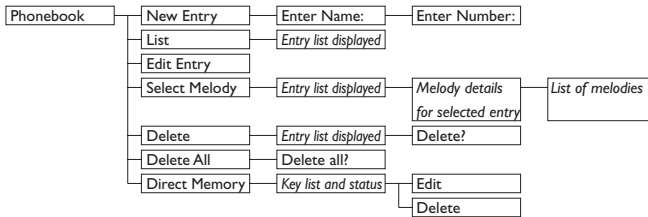





### Personal Settings

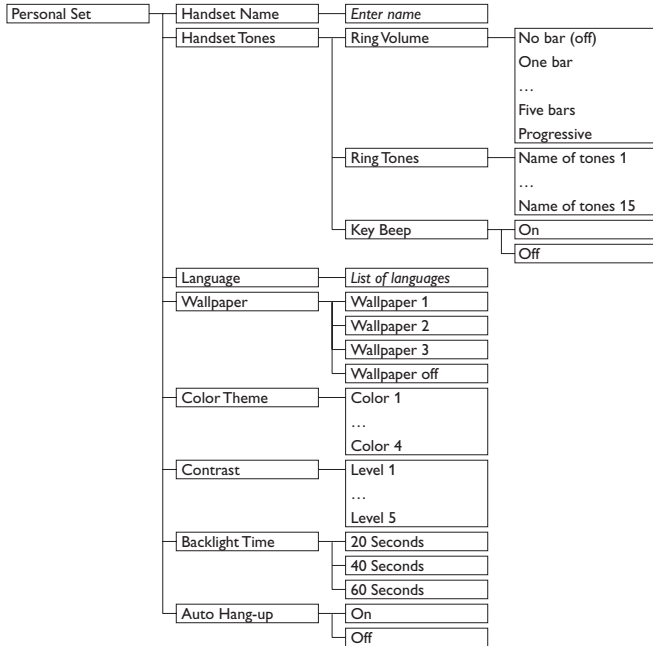


### Clock and Alarm

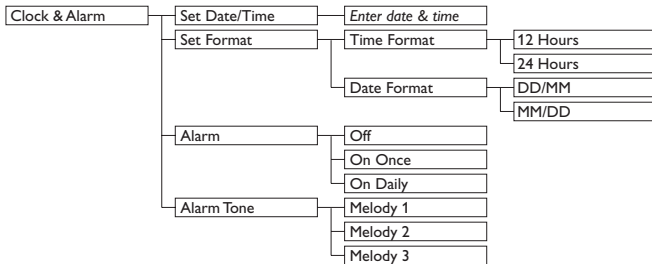


### Advanced Settings

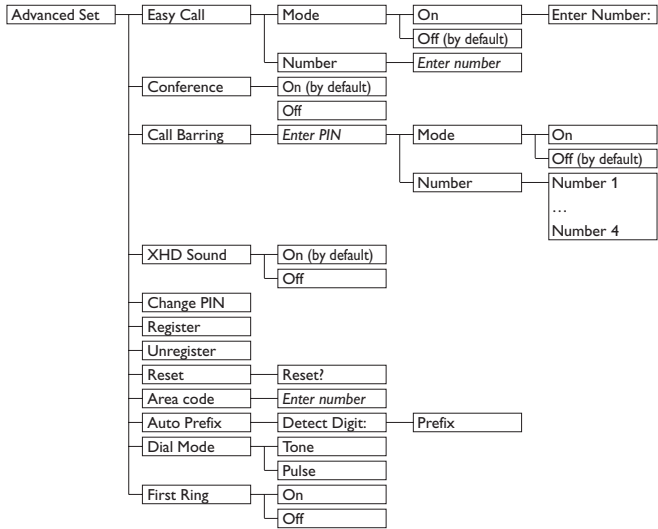

### Network Services

 

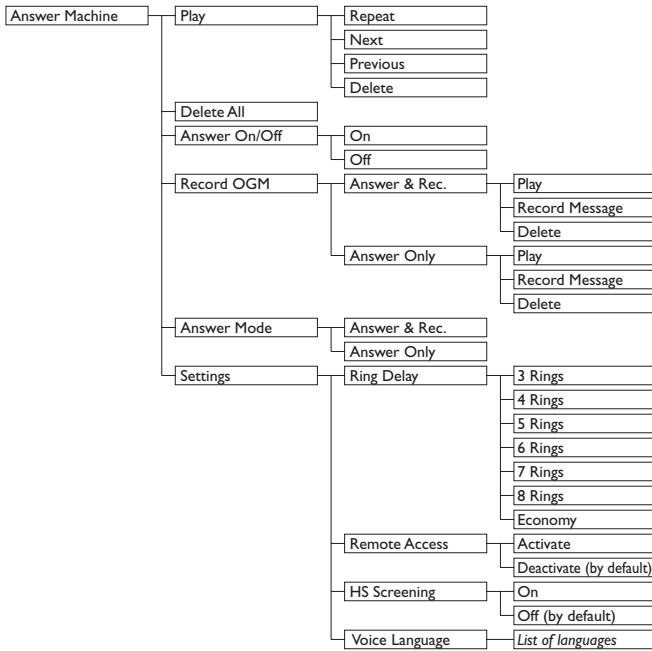

### Answer Machine




 
## 7 Using your phone

### 7.1 Make a call




#### 7.1.1 Predialling

- 1 Enter the number. (A maximum of 24 digits including \* and # are allowed. Press  **Clear** to delete the last digit.) Or long press to delete all.
- 2 Press .
  - The call is initiated.




 
#### 7.1.2 Direct dialling

- 1 Pick up the handset and press . (Or press  to start a call in speaker mode.)
- 2 Dial the number.
  - The call is initiated.

#### 7.1.3 Call from redial list

- 1 Press  in idle mode.
- 2 Scroll  to an entry in the redial list.
- 3 Press .
  - The call is initiated.

#### Note

You can also press  first and then press  **Redial** to enter the redial list. Then scroll  to select a number in the list and press  **Select**. The number is dialed automatically.

#### 7.1.4 Call from the call log



##### Note

You need to subscribe to Caller Line Identification service to be able to see the caller's number or name in the call log. See section 8.8.1 - "Access the Call log".

- 1 Press  in idle mode.
- 2 Press  **Select** to select **Call List**.




##### Note

If the list is already empty, then "List Empty" is displayed.

- 3 Scroll  to an entry in the call list.
- 4 Press .
  - The call is initiated.

#### 7.1.4.1 To choose the format for call log display

You must choose the correct format to dial the area code and number of the call log record chosen. The original incoming number from the call log will appear as a 7, 10 or 11-digit number. If it is a long distance call, the prefix digit 1 will automatically appear in front of the 10-digit local calls.

- 1 When viewing the call log, press  to change the format of the call log display as it should be dialed from your location. For example, if the call log entry appears as "234-567-8900":
  - Press  once to display "1-234-567-8900"
  - Press  twice to display "567-8900"

- Press 3 times to display “1-567-8900”
- Press 4 times to display “234-567-8900” again.

- 2** To dial the current displayed number, press key.
- The call is initiated.

### Note

You need to subscribe to Caller Line Identification service to be able to see the caller's number or name in the call log (see “Access the Call log” on page 35).

When you store an incoming number in the phonebook, the digits of the number will be saved exactly as they appear on the screen.

If the first 3 digits of the incoming number corresponds to the local area code set in your phone, they will be filtered automatically when you press the or key to dial. To change the local area code, please refer to “Set Area Code” on page 46.

### 7.1.5 Call from the phonebook

- 1** Press in idle mode.
  - 2** Scroll to a phonebook entry.
  - 3** Press .
- The call is initiated.

### Tip

Instead of scrolling to browse the phonebook entries, you can press the numeric key corresponding to the first letter of the entry you wish to locate. For example, pressing will show the entries starting with A. Pressing again will show the entries starting with B, etc.

### 7.1.6 Call using Direct Access Memory

Press a number key to for more than 2 seconds to dial a stored direct access memory number.

### Note

See section 8.5.7 for instructions on how to store, edit, and delete direct access memory numbers.

### 7.1.7 Enter a Dialing Pause

Make a long press after entering one or more digits to enter a pause in the dialling sequence. The pause is indicated by a P.

### 7.2 Answer a call

#### Danger

When the handset rings during an incoming call, please do not hold the handset too close to your ear as the volume of the ringing tone may damage your hearing.

When the phone rings, press the key.

- The call is established.

### Note

- Incoming call has priority over other events. Whenever there is an incoming call, other status in progress such as phone setting, menu navigation, etc will be aborted.

### Tip


You can mute the ring tone of an incoming call before answering by pressing on **Silent**.

---

### 7.2.1 Handsfree answering

#### **Danger**

Handsfree activation can suddenly increase the volume in the earpiece to a very high level. Make sure the handset is not too close to your ear.

When the phone rings, press .

- The handset loudspeaker is activated.

---

### 7.3 End a call

To end a conversation, press .

- The call ends.

#### **Tip**

When auto hang-up is on, you can simply place the handset back to its base station or charger to end the call. This feature is activated by default.

#### **Note**

The call duration (MM:SS) will be displayed on the handset screen for about 5 seconds.