

## 8 Use more of your phone

### 8.1 Switch the handset on/off

Press for at least one second to switch the handset on. To switch it off, press and hold in idle mode for at least 5 seconds.

### 8.2 Keypad lock/unlock

Press and hold for 3 seconds to lock/unlock the keypad in idle mode.

### 8.3 Text or number entry

When you select a field in which you can enter text, you can enter the letters that are printed on the keys by pressing the relevant key once or several times. For example, to enter the name "PAUL":

- 1 Press once: P
- 2 Press once: PA
- 3 Press twice: PAU
- 4 Press three times: PAUL

The table below gives you the character assignment during text or number entry:

Keys	Assigned characters
	. 0 , / : ; " ' ! ; ? ; * + - % \ ^ ~
	SPACE 1 @ _ # = < > ( ) & € £ \$ ¥ [ ] { } □ §
	a b c 2 â æ ä å
	d e f 3 é ê ë Æ
	g h i 4 i Γ
	j k l 5 Å

Keys	Assigned characters
	m n o 6 ñ õ ö
	p q r s 7 ß Π Θ Σ
	t u v 8 ù ü
	w x y z 9 ø Ω Ξ Ψ

#### Tip

- Press **Clear** to delete the last digit or character entered or long press to delete all.
- Short press to shift between lowercase and uppercase.
- Long press to insert a pause.

### 8.4 Call in progress

Some options are available to you during a call. The available options are :

#### 8.4.1 Adjust earpiece or speaker volume

During a call, press to select from level 1 to level 5.

#### 8.4.2 Mute/Unmute microphone

When the microphone is muted, your correspondent cannot hear you.


 
- 1 During a call, press to turn off the microphone.
- 2 Press again to turn on the microphone.

#### 8.4.3 Activate/Deactivate loudspeaker mode

##### Danger

Handsfree activation can suddenly increase the volume in the earpiece to a

very high level. Make sure the handset is not too close to your ear.

- 1 During a call, press  to activate the loudspeaker mode.
- 2 Press  again to return to deactivate the loudspeaker mode.

## 8.5 Using your Phonebook


 
 
 

Your phone can store up to 200 phonebook memories. Each phonebook entry can have a maximum of 24 digits for the phone number and 14 characters for the name.

All names and numbers in the phonebook must be unique.



### Note

If you have more than one handset, the phonebook can only be accessed by one user at a time.

### 8.5.1 Store a contact in the phonebook

- 1 Press  in idle mode. **Phonebook** is highlighted; press  **Select**.
- 2 **New Entry** is highlighted; press  **Select**.
- 3 **Enter Name** is displayed. Enter the name of the contact (maximum 14 characters) and press  **OK**.
- 4 **Enter Number** is displayed. Enter the number (maximum 24 digits) and press  **OK**.
  - A validation tone is emitted.





### Note

- Press  **Clear** to delete the last digit or character entered or long press to delete all.
- To return to the previous menu, press  **Back**.


 
 
### Tip



You cannot store a new phonebook entry when the memory is full. In this case, you have to delete existing entries to make space for new entries.

### 8.5.2 Access phonebook



- 1 Press  in idle mode and scroll  to browse the phonebook. (You can also access the phonebook through the menu mode.  → **Phonebook** → **List**)
  - The phonebook entries will be listed in alphabetical order.
- 2 To view the details, press  **View**.


 

 


 
### Tip

Instead of scrolling  to browse the phonebook entries, you can press the numeric key corresponding to the first letter of the entry you wish to locate. For example, pressing  will show the entries starting with A. Pressing  again will show the entries starting with B, etc.


- 3 Press  to dial the number. (Press  to return to idle mode.)

### 8.5.3 Modify a phonebook entry

- 1 Press  in idle mode. **Phonebook** is highlighted; press  **Select**.

- 2 Scroll  to **Edit Entry** and press  **Select**.
- 3 Scroll  to select an entry to edit.
- 4 Press  **Select** to display the name.
- 5 Press  **Clear** to erase the letters one by one.
- 6 Edit the name and press  **OK** to confirm.
- 7 Edit the number and press  **OK** to confirm.
  - A validation tone is emitted.

#### **Note**




 


 
While editing, press  **Clear** to delete the last digit or character entered or long press to delete all.


 
### 8.5.4 Select phonebook melody

With this function you can personalize the melody played when someone in the phonebook calls you.

#### **Note**

You need to subscribe to Caller Line Identification service to be able to benefit from this feature.

 
 

 

 



- 1 Press  in idle mode. **Phonebook** is highlighted; press  **Select**.
- 2 Scroll  to **Select Melody** and press  **Select**.
- 3 Scroll  to the entry you want to select a melody for, then press  **View**.
- 4 The screen shows the melody currently selected for that entry. Press  **Change** to change the melody.

- 5 Scroll  the list of melodies. (There are 15 melodies to choose from. The melodies play as you scroll through them.)
- 6 Press  **Select** to select the melody you prefer.
  - A validation tone is emitted and the screen returns to the **Phonebook** menu.


 

 

#### **Note**

When first ring detection is set **On**, a normal tone sounds first, then it changes to the personalized phonebook melody. When it is set **Off**, the personalized phonebook melody plays from the start. See Section 10.12 for how to set first ring detection **On** or **Off**.

 

### 8.5.5 Delete a phonebook entry

- 1 Press  in idle mode. **Phonebook** is highlighted; press  **Select**.
  - 2 Scroll  to **Delete** and press  **Select**.
  - 3 Scroll  to select an entry to delete and press  **Select**.
  - 4 **Delete?** is displayed on the screen. Press  **OK** to confirm deletion.
    - A validation tone is emitted.
-  **Note**  
Press  **Back** to discard the deletion. The screen returns to the phonebook list.



### 8.5.6 Delete all phonebook entries

- 1 Press  in idle mode.  
**Phonebook** is highlighted; press  **Select**.
- 2 Scroll  to **Delete All** and press  **Select**.
- 3 **Delete All?** is displayed on the screen. Press  **OK** to confirm deletion.
  - A validation tone is emitted.

 
 

 
### 8.5.7 Direct Access Memory


 
 
 

 
 


There are 7 direct access memories (Keys  to ) included in the phonebook memory. A long press on the keys in idle mode will automatically dial the stored phone number.

#### Note

 


 



 
Key  is reserved for use with Voicemail in the network services menu. If you subscribe to this service, this allows you to dial your voice mail access number using key .

#### 8.5.7.1 Add/Edit Direct Access Memory

- 1 Press  in idle mode.  
**Phonebook** is highlighted; press  **Select**.
- 2 Scroll  to **Direct Memory** and press  **Select**.
  - The current number stored in the direct access memory location will be displayed. If no number is stored, **No number** will be displayed.

- 3 Scroll  to the key you wish to edit (key  to ) and press  **Menu**.
- 4 Scroll  to **Edit** and press  **Select**.
- 5 The Phonebook list will be displayed. Scroll  to the Phonebook entry you wish to store in the selected direct access memory number and press  **Select**.
- 6 Press  **OK** to confirm.
  - A validation tone is emitted and the screen returns to the previous menu.

 


#### 8.5.7.2 Delete Direct Access Memory

- 1 Press  in idle mode.  
**Phonebook** is highlighted; press  **Select**.
- 2 Scroll  to **Direct Memory** and press  **Select**.
- 3 Scroll  to the key you wish to delete the memory from and press  **Menu**.
- 4 Scroll  to **Delete** and press  **Select**.
  - A validation tone is emitted and the screen returns to the previous menu.


### 8.6 Using the Redial list

 

The redial list stores the last 10 numbers dialed. A maximum of 32 digits can be displayed for each entry.

### 8.6.1 Access Redial list

 

- 1 Press  to go to the redial list and scroll  to browse the redial list.
  - The last number dialed will appear first in the redial list. If the redial number matches a phonebook entry, the name will be displayed instead.
- 2 To open the redial list options, press  **Menu**.

#### Note

 
 

 

 

Press  **Back** to return to the previous menu.

- 3 **Enter Name** is displayed. Enter the name of the contact (maximum 14 characters) and press  **OK**.
- 4 **Enter Number** is displayed and the selected number from the redial list appears in the number field. At this time you can edit the number if you wish to.
- 5 Press  **OK**. The screen returns to the redial list.


 

 
 


 
#### Note

Press  **Clear** to delete the last digit or character entered. Long press  **Clear** to clear the entire entry.

 


 

### 8.6.2 View redial number details

- 1 Press  in idle mode, scroll  to select an entry and press  **Select**.
- 2 **View** is highlighted on the screen; press  **Select** to display information about the number dialed.
- 3 Press  **Next** to display further information. Afterward, you can press  **Prev.** to return to the former screen. After viewing, press  **Back** to return to previous menu levels.



 


### 8.6.4 Delete a redial number

- 1 Press  in idle mode, scroll  to select an entry and press  **Select**.
  - 2 Scroll  to **Delete** and press  **Select**.
  - 3 **Delete?** is displayed on the screen.
  - 4 Press  **OK** to confirm deletion.
    - A validation tone is emitted.
-  **Note**  
Press  **Back** to discard the deletion. The screen returns to the previous menu.

### 8.6.3 Save a redial number into the phonebook

- 1 Press  in idle mode, scroll  to select an entry and press  **Select**.
- 2 **View** is highlighted on the screen. Scroll  to **Save Number** and press  **Select**.

### 8.6.5 Delete all redial numbers

- 1 Press  in idle mode, and press  **Select**.
- 2 Scroll  to **Delete All** and press  **Select**.
- 3 **Delete All?** is displayed on the screen.
- 4 Press  **OK** to confirm deletion.


- A validation tone is emitted.


### 8.7 Call waiting

If you have subscribed to Call Waiting services, the earpiece will emit a beep tone to inform you that there is a second incoming call. The number or name of the second caller will also be displayed if you have subscribed to Caller Line Identification service (CLI). Please contact your network provider for more information on this service.

To answer the second call, press .

### 8.8 Using the Call log






 

The call log stores the last 50 external calls and any new voice mail received. In idle mode, the  icon flashes on the display for new and unanswered calls. If you have subscribed to Caller Line Identification (CLI), and provided the identity of the caller is not withheld, the name (or number) of the caller will be displayed.

During CLI display, you can press  to toggle area code and long distance code display on/off.







 
#### Note

If the identity of the caller is withheld or the network does not provide the date and time information, then the information will not be displayed in the call log. If you have not subscribed to Caller Line Identification service, there will not be any caller information displayed in the call log.

### 8.8.1 Access the Call log

- 1 Press  in idle mode, press  **Select** to select **Call List**, and scroll  to browse the call log.
  - The calls (missed and received) are displayed in chronological order with the most recent call at the top of the list. If the call is unviewed and unanswered, **New** appears on the display. After you view the message, **New** disappears.
  - Press  to dial out the number of the selected call log entry.
- 2 To view the call details, press  **Menu** and then press  **View**. The display shows the caller information.
  - Press  **Back** at any time to return to the previous menu.

### 8.8.2 Save call list entry into the phonebook

- 1 Press  in idle mode, press  **Select** to select **Call List**, then scroll  to select an entry and press  **Menu**.
- 2 Scroll  to **Save Number** and press  **Select**.
- 3 **Enter Name** is displayed on the screen. Enter the name of the contact (maximum 14 characters) and press  **OK**.
- 4 **Enter Number** is displayed and the selected number from the call list appears in the number field. At this time you can edit the number if you wish to.

- 5** Press **OK**.
- A confirmation tone sounds and the screen returns to call log.

**Note**

Press **Clear** to delete the last digit or character entered or long press to delete all.

### 8.8.3 Delete a call list entry

- 1** Press in idle mode, press to select **Call List**, then scroll to select an entry and select **Menu**.
- 2** Scroll to **Delete** and press **Select**.
- 3** **Delete?** is displayed on the screen.
- 4** Press **OK** to confirm deletion.
- A validation tone is emitted, the call list entry is deleted, and the display goes to the next entry in the call list.

**Note**

Press **Back** to discard the deletion. The screen returns to the **Call List** menu.

### 8.8.4 Delete all call list entries

- 1** Press in idle mode, press to select **Call List**, and then press **Menu**.
- 2** Scroll to **Delete All** and press **Select**.
- 3** **Delete All?** is displayed on the screen. Press **OK** to confirm deletion.
- A validation tone is emitted. The display shows **List Empty** for 2

seconds and returns to the idle mode.

## 8.9 Using the Intercom

### **Warning**

Intercom and call transfer is only possible when you have at least 2 handsets registered to the same base station. It allows you to make free internal calls, transfer external calls from one handset to another and use the conference option.

### 8.9.1 Intercom another handset

**Note**



 


If the handset does not belong to SE650/655 range, this function may not be available.

- 1** Press in idle mode.
- Intercom is established immediately if there are only 2 registered handsets.
- 2** If there are more than 2 registered handsets, scroll to select the handset to call and press **OK**.
- Once the intercom call is answered the icon is displayed on both handsets.
- 3** Press on the called handset.
- The intercom is established.


**Note**

Pressing on any handset will exit intercom mode and return other handsets to idle mode. If an external call arrives during intercom mode and you want to accept this call, you must first exit intercom mode.



### 8.9.2 Transfer an external call to another handset

- 1 During the call, press  to put the external call on hold (the caller can no longer hear you).
  - The display shows the numbers of the handsets registered to the base.
- 2 Select  the handset number you wish to transfer your external call to and press  **Select**.
- 3 Press  on the called handset to answer the internal call, where both internal callers can talk.
  - Intercom is established.
- 4 Press  on the first handset to transfer the external call to the called handset.
  - The external call is transferred.


#### **Note**

If there is no answer from the called handset, press  to resume the external call.

### 8.9.3 Answer an external call during intercom

 

 


 
- 1 During intercom, a new call tone is emitted when there is an incoming external call.
- 2 Press  to exit intercom mode.
- 3 Press  to pick up the external call.

### 8.9.4 Switch between an internal and external call

During the call, press  to switch between an internal or external call.

 
 
### 8.9.5 Establish a three-party conference call

The conference call feature allows one external call to be shared with two handsets (in intercom). The three parties can share the conversation and no network subscription is required.

- 1 During the call, press  to put the external call on hold (the caller can no longer hear you).
  - The display shows the numbers of the handsets registered to the base.
- 2 Select  the number of the handset you wish to establish the conference call with and press  **Select**.
- 3 Press  on the called handset to answer the internal call, where both internal callers can talk.
  - Intercom is established.
- 4 Press  **Conf.** or long press  on the first handset to start the three-party conference.
  - **Conference** will be displayed on the screen once the conference call is established.

### 8.10 Paging

The paging feature enables you to locate a missing handset if the handset is in range and contains charged batteries.

- 1 Press the  on the base station.
  - All the registered handsets start to ring.
- 2 Press the  again to end the paging.



 

 



### **Note**

If there are no key presses within one minute, the handset and base station will automatically return to idle mode.

## 8.11 Clock and Alarm settings

This feature allows you to set the date, time and alarm settings for your phone.

### 8.11.1 Set Date and Time

- 1** Press  in idle mode, scroll  to **Clock & Alarm**, and press  **Select**.
- 2** **Set Date/Time** is highlighted. Press  **Select**.
- 3** The last stored date and time are displayed. Enter the current time and current date (HH:MM DD/MM/YY). If using the 12 hour format, use  to switch between AM and PM.
- 4** Press  **OK**.

 


- A validation tone is emitted and the screen returns to the idle mode.



 
 
 
### **Note**

You can change the format as shown in the next section.










### 8.11.2 Set Time and Date Format

#### 8.11.2.1 Set Time Format



 
 



- 1** Press  in idle mode, scroll  to **Clock & Alarm**, and press  **Select**.



- 2** Scroll  to **Set Format** and press  **Select**.
- 3** **Time Format** is highlighted in the display. Press  **Select**, then scroll  to select **12hours** or **24hours**.
- 4** Press  **Select** to select the option.
  - A validation tone is emitted and the screen returns to the **Set Format** menu.


#### 8.11.2.2 Set Date Format

- 1** Press  in idle mode, scroll  to **Clock & Alarm**, and press  **Select**.
- 2** Scroll  to **Set Format** and press  **Select**.
- 3** Scroll  to **Date Format** and press  **Select**.
- 4** Scroll  to select **DD/MM** or **MM/DD** and press  **Select** to select the option.
  - A validation tone is emitted and the screen returns to the **Set Format** menu.

### 8.11.3 Set Alarm

- 1** Press  in idle mode, scroll  to **Clock & Alarm**, and press  **Select**.
- 2** Scroll  to **Alarm** and press  **Select**.
- 3** Scroll  to **Off**, **On Once**, or **On Daily** and press  **Select**.
- 4** If you select **On Once** or **On Daily**, enter the time (HH-MM) for



 

 

 
the alarm. (If using the 12 hour format, you can switch between AM and PM by pressing  key.) Press  **OK** to confirm.

- A validation tone is emitted and the screen returns to the **Alarm** menu. And the alarm icon  is displayed.
- If you select **Off**, a validation tone is emitted and the screen returns to the **Clock & Alarm** menu.

#### **Note**

The alarm tone and alarm icon will sound/blink for 1 minute when the alarm time is reached. To mute the alarm tone, simply press any key on the handset.



 
 
 
 
#### 8.11.4 Set Alarm Tone

- 1 Press  in idle mode, scroll  to **Clock & Alarm**, and press  **Select**.
- 2 Scroll  to **Alarm Tone** and press  **Select**.
- 3 Scroll  to select the tone. (Three tones are available. The tones sound as you scroll.) Press  **Select** to confirm your selection.
  - A validation tone is emitted and the screen returns to the **Clock & Alarm** menu.

## 9 Personal settings

### 9.1 Change the Handset Name

You can name the handset and display the handset name in idle mode. The default handset name of your handset is Philips.

- 1 Press  in idle mode, scroll  to **Personal Set** and press  **Select**.
- 2 **Handset Name** is highlighted; press  **Select**.
- 3 The last stored name is displayed. Press  **Clear** to delete the characters one by one or a long press to delete all.
- 4 Enter the new name and press  **OK** to confirm.
  - A validation tone is emitted and the screen returns to the **Personal Set** menu.









### 9.2 Handset Tones

#### 9.2.1 Set the Ring Volume


##### **Danger**

When the handset rings during an incoming call, please do not hold the handset too close to your ear as the volume of the ringing tone may damage your hearing.

There are 5 ringer volume levels plus progressive and off. The default is level 3.

- 1 Press  in idle mode, scroll  to **Personal Set**, and press  **Select**.
- 2 Scroll  to **Handset Tones** and press  **Select**. **Ring Volume** is highlighted; press  **Select**.
- 3 Scroll  to your desired volume level. The ring tone sounds at each level.
- 4 Press  **OK** to confirm.
  - A validation tone is emitted and the screen returns to the **Handset Tones** menu.

#### **Note**






 



If ring volume is set to off, the  icon will be displayed on the screen.

If ring volume is set to progressive, the ringer will start at level 1 and go up one level volume every ring.

---

### 9.2.2 Set the Ring Tones

 

 


 



There are 15 ring tones available on your handset.

- 1 Press  in idle mode, scroll  to **Personal Set**, and press  **Select**.
- 2 Scroll  to **Handset Tones** and press  **Select**. Then scroll  to **Ring Tones** and press  **Select**.
- 3 Scroll  to your desired melody. The melodies will play as you scroll them.
- 4 Press  **OK** to set the ring tone.
  - A validation tone is emitted and the screen returns to the **Handset Tones** menu.

---

### 9.2.3 Activate/Deactivate Key Beep

 






A single beep tone is emitted when a key is pressed. You can enable or disable the key beep.

- 1 Press  in idle mode, scroll  to **Personal Set**, and press  **Select**.
- 2 Scroll  to **Handset Tones** and press  **Select**. Then scroll  to **Key Beep** and press  **Select**.
- 3 Scroll  to select **On** or **Off** and press  **OK** to confirm.
  - A validation tone is emitted and the screen returns to the **Handset Tones** menu.

---

### 9.3 Change the Display Language

Your handset can support different display languages.

 

 

 

 
- 1 Press  in idle mode, scroll  to **Personal Set**, and press  **Select**.
- 2 Scroll  to **Language** and press  **Select**.
- 3 Scroll  to your desired language and press  **OK** to confirm.
  - A validation tone is emitted and the screen returns to the **Personal Set** menu.

#### **Note**

Once the display language is set, the option menus on the handset will immediately switch to display in the selected language.

 

 

 

 
#### 9.4 Select the Display Wallpaper

There are 3 wallpaper images available on your handset as well as an option to set it off.

- 1 Press  in idle mode, scroll  to **Personal Set**, and press  **Select**.
- 2 Scroll  to **Wallpaper** and press  **Select**.
- 3 Scroll  to your desired wallpaper. The image on the display will change as you scroll.
- 4 Press  **Select** to confirm.
  - A validation tone is emitted and the screen returns to the **Personal Set** menu.

#### 9.5 Select the Color Theme

 

 
 



There are 4 color themes available on your handset.

- 1 Press  in idle mode, scroll  to **Personal Set**, and press  **Select**.
- 2 Scroll  to **Color Theme** and press  **Select**.
- 3 Scroll  to your desired color theme. The color theme used on the display will change as you scroll.
- 4 Press  **Select** to confirm.
  - A validation tone is emitted and the screen returns to the **Personal Set** menu.

#### 9.6 Set the Display Contrast

 

 



 
You can change the contrast of the text on the display. There are 5 contrast levels

available on your handset. The default is level 3.

- 1 Press  in idle mode, scroll  to **Personal Set**, and press  to **Select**.
- 2 Scroll  to **Contrast** and press  **Select**.
- 3 Scroll  to the desired display contrast, and press  **Select** to confirm.
  - A validation tone is emitted and the screen returns to the **Personal Set** menu.

#### 9.7 Set the Backlight Time

You can change the backlight timing for the display. There are 3 options available - 20, 40, or 60 seconds.

- 1 Press  in idle mode, scroll  to **Personal Set**, and press  to **Select**.
- 2 Scroll  to **Backlight Time** and press  **Select**.
- 3 Scroll  to the desired backlight time, and press  **Select** to confirm.
  - A validation tone is emitted and the screen returns to the **Personal Set** menu.



 

 

 
#### 9.8 Deactivate/Activate Auto Hang-Up

 

 

 

If auto hang-up is set to On, it will automatically release the line when the phone is put back on the cradle.

If auto Hang-up is set to Off, putting the handset back on the cradle while in talk

mode will switch the handset to hands free talk mode. This allows you to charge the handset during calls.


 


The default setting for auto hang up is On.

- 1 Press  in idle mode, scroll  to **Personal Set**, and press  **Select**.
- 2 Scroll  to **Auto Hang-up** and press  **Select**.
- 3 Scroll  to **On** or **Off** and press  **OK** to confirm.
  - A validation tone is emitted and the screen returns to the **Personal Set** menu.

- 3 **Mode** will be selected in the display. Press  **Select** again to select **Mode**, then scroll  to **On**.
- 4 Press  **Select** to confirm the selection.
  - If an Easy Call number has not been set, you will be prompted to input the Easy Call number.
  - If an Easy call number has already been set, the screen returns to idle mode. If you want to edit the number, press  **Cancel** and scroll to Number and press  **Select**, edit the new number and press  **Select**.


#### **Note**

When you switch Easy Call on, **Easy Call On** will be displayed on your screen in standby mode. You can still answer any incoming call as normal.

To switch Easy Call off from idle mode, press  **Cancel**. **Mode** will be selected in the display. Press  **Select** again to select **Mode**, and then scroll  to **Off**. Press  **Select** to confirm.



 
 
## 10 Advanced settings

### 10.1 Easy Call



 

 
 

When activated, this feature allows you to dial a preset number by pressing any key on the handset (except  **Cancel**). This feature is useful for fast access to emergency services.

#### 10.1.1 Set Easy Call to On or Off

Follow this procedure to switch Easy Call on. To switch Easy Call off, see the Note at the end of this function.

- 1 Press  in idle mode, scroll  to **Advanced Set** and press  **Select**.
- 2 **Easy Call** is highlighted. Press  **Select** to enter the Easy Call menu.

#### 10.1.2 Set Easy Call number

- 1 Press  in idle mode, scroll  to **Advanced Set** and press  **Select**.
- 2 **Easy Call** will be selected in the display. Press  **Select** to enter the Easy Call menu.
- 3 **Mode** will be selected in the display. Scroll  to **Number** and press  **Select**.
- 4 Input the Easy Call number.
- 5 Press  **OK** to confirm.

- A validation tone is emitted and the screen returns to the **Easy Call** menu.

### 10.2 Auto Conference

If activated, this feature allows another handset to join a conversation with an external call by simply pressing . The default setting is OFF.

- 1 Press in idle mode, scroll to **Advanced Set** and press to **Select**.
- 2 Scroll to **Conference** and press **Select**.
- 3 Scroll to select **On** or **Off** and press **Select** to confirm.
  - A validation tone is emitted and the screen returns to the **Advanced Set** menu.

### 10.3 Call Barring

If activated, this function prevents dialing out to numbers beginning with designated barring numbers. This is useful for preventing outgoing long distance calls or calls to specific prefixes. You can store up to four numbers, each with up to 4 digits.

#### Note

If you switch call barring on, **Call Barr On** is displayed on the screen in idle mode. By default call barring is off.

#### 10.3.1 Set Call Barring Mode

By default, Call Barring is **OFF**.




- 1 Press in idle mode, scroll to **Advanced Set** and press **Select**.
- 2 Scroll to **Call Barring** and press **Select**.
- 3 Enter the PIN number.
  - If you enter an incorrect PIN number, an error tone will sound and "Wrong PIN!" will be displayed. Then, the display will return to idle screen.
- 4 **Mode** will be selected in the display. Press **Select**.
- 5 Scroll to select **On** or **Off** and press **Select** to confirm.
  - If a Call Barring number has not been set, you will be prompted to input a Call Barring number.

#### Note

To switch Call Barring mode off again from idle mode, press **Cancel** and enter the PIN number. **Mode** will be selected in the display. Press **Select** to select **Mode**, then scroll to **Off** and press **Select**.

#### 10.3.2 Set a Call Barring number



 

 

 
- 1 Press in idle mode, scroll to **Advanced Set** and press **Select**.
- 2 Scroll to **Call Barring** and press **Select**.
- 3 Enter the PIN number.
- 4 **Mode** will be selected in the display. Scroll to **Number** and press **Select**.

- 5 Scroll  to select a call barring number location, and press  **Select** to confirm.
- 6 Input the call barring number (up to 4 digits) and press  **OK**.
  - A validation tone is emitted and the screen returns to the **Call Barring** menu.

#### 10.4 XHD Sound

XHD (extra high definition) Sound can increase voice quality when **On**. The default setting is **On**.

To turn it off:

- 1 Press  in idle mode, scroll  to **Advanced Set** and press  **Select**.
- 2 Scroll  to **XHD Sound** and press  **Select**.
- 3 Scroll  to select **On** or **Off** and press  **Select** to confirm.
  - A validation tone is emitted and the screen returns to the **Advanced Set** menu.



 


 
 

#### 10.5 Change PIN

The PIN is used for setting call barring numbers and registration/unregistration of handsets. The default PIN number is 0000. This PIN is also used to protect the settings of your handset. Your handset will prompt you whenever the PIN is required.

##### **Note**

The default PIN code is preset to 0000. If you change this PIN code, keep the PIN details in a safe place where you have

easy access to them. Do not lose the PIN code.

- 1 Press  in idle mode, scroll  to **Advanced Set** and press  **Select**.
- 2 Scroll  to **Change PIN** and press  **Select**.
- 3 **Old PIN:** will be displayed. Enter the current PIN and press  **OK**.
  - The PIN entered will be shown as asterisks (\*) on the screen.
  - If you enter an incorrect PIN number, an error tone will sound and "Wrong PIN!" will be displayed. Then, you will be prompted to enter the current PIN again.
- 4 **New PIN:** will be displayed. Enter the new PIN and press  **OK**.
- 5 **Confirm PIN:** will be displayed. Enter the new PIN again and press  **OK** to confirm PIN change.
  - A validation tone is emitted, **Saved!** is displayed and the screen returns to the **Advanced Set** menu.

##### **Tip**

If you forget your PIN, you will need to reset your phone to its default settings. For more details, see 10.8 - "Reset Unit."


#### 10.6 Registration

You must register your handset to the base station before you can use it. The procedure described below applies to your SE650/655 handset. The procedure may vary if you want to register some other handset. In that case, please refer

to the manufacturer of the additional handset. Additional handsets must be registered to the base station before you can use them. Up to 8 handsets can be registered to one base station. The PIN is required before you can register or unregister handsets.




 
 
 
#### Note

By default, the PIN is 0000.



 
- 1 On the base station, press and hold  for 3 seconds. A beep sounds to indicate that the base is ready to accept registration.


 


 
 
#### Note

If no action is taken on the handset within 90 seconds, the registration procedure will be aborted. If this happens, repeat from Step 1.

- 2 On the handset, press , scroll  to **Advanced Set** and press .
- 3 Scroll  to **Register** and press .
- 4 Enter the PIN when prompted and press  **OK** to confirm. **Registering...** is displayed on the screen.
  - Upon successful registration, a validation tone is emitted and the handset number (1 to 5) will be assigned by the base automatically.

### 10.7 Unregister

- 1 Press  in idle mode, scroll  to **Advanced Set** and press  to **Select**.

- 2 Scroll  to **Unregister** and press  **Select**.
- 3 Enter the PIN when prompted and press  **OK** to confirm.
- 4 Scroll  to select the handset number to unregister and press  **OK**. Press  **OK** again to confirm.
  - A validation tone is emitted to indicate successful unregistration and the screen shows **Unregistered**.

#### Note

If no action is taken on the handset within 30 seconds, the unregistration procedure will be aborted and the handset returns to idle mode. You can only use a SE650/655 handset to unregister a handset that does not belong to the SE650/655 range.

### 10.8 Reset Unit

You can reset your phone to its default settings with this feature. (see 10.13 "Default Settings")





 

#### Caution

Upon reset, all your personal settings, call log and redial list entries will be deleted and the phone will return to its default settings. However, your phonebook will remain unchanged after reset.

#### Note

You may have to configure your phone once again. In this case the welcome mode will appear again after master reset.



- 1 Press  in idle mode, scroll  to **Advanced Set** and press  **Select**.
- 2 Scroll  to **Reset** and press  **Select**.
- 3 **Reset?** is displayed on the screen. Press  **OK** to confirm.
  - A validation tone is emitted.
  - The unit is reset to its default settings. (See section 10.13 below.)

### 10.9 Set Area Code

This feature is useful when you have subscribed to Caller Line Identification service. It allows you to set an area code in your phone. Once the local area code is set, the phone automatically filters the area code for all incoming calls, by removing the area code for local calls and retaining the area code for calls from other areas.







If it is a local call, then only the phone number of the caller is displayed during an incoming call or when you call the number from the call log. If it is a long distance call, then both the area code and phone number will be displayed in a proper format to be dialed out directly from the call log, or saved into the phonebook.

#### **Note**

You can enter a maximum of 4 digits for the area code.

 





 
You need to subscribe to Caller Line Identification service to be able to see the caller's number or name in the call

log. See 7.1.4 "Call from the call log" for details.

- 1 Press  in idle mode, scroll  to **Advanced Set** and press  **Select**.
- 2 Scroll  to **Area Code** and press  **Select**.
- 3 **Area Code** will appear in the display. Input your area code and press  **OK** to confirm.
  - A validation tone is emitted and the screen returns to the **Advanced Set** menu.


### 10.10 Set Auto Prefix


This feature allows you to define a prefix number to be added to the beginning of a number during predialling (see "Predialling" - section 7.1.1). You may also use this feature to add a detect string to match and replace the first few digits of the number during predialing. You can enter up to a maximum of 5 digits for the detect string and 10 digits for the auto prefix number.

- 1 Press  in idle mode, scroll  to **Advanced Set** and press  **Select**.
- 2 Scroll  to **Auto Prefix** and press  **Select**.
- 3 **Detect Digit:** is displayed on the screen. Enter a detect string number (maximum 5 digits) and press  **OK** to confirm.
- 4 **Prefix Number:** is displayed on the screen. Enter the prefix number (maximum 10 digits) and press  **OK** to confirm.

- A validation tone is emitted and the screen returns to the **Advanced Set** menu.






 

### **Note**

If no detect string (blank) is entered, the prefix number will be automatically added to the predial number after  is pressed.

For numbers starting with \*, # or P, the prefix number will not be added to the predial number after  is pressed.

### 10.11 Change the Dial Mode

 

 




The default value for dial mode that is preset in your handset should be the best suited for your subscribed network and therefore you should not need to change it.

- 1 Press  in idle mode, scroll  to **Advanced Set**, and press  to **Select**.
- 2 Scroll  to **Dial Mode** and press  **Select**.
- 3 Scroll  to **Tone** or **Pulse** and press  **Select** to confirm.
  - A validation tone is emitted and the screen returns to the **Advanced Set** menu.

### 10.12 Set First Ring Detection

First ring detection allows the phone to ring upon reception of the first ring signal. It is recommended that you set first ring detection **Off** if you subscribe to caller line identification service. (When using personalized phonebook melodies, this will prevent a normal ring

tone from sounding before a melody starts playing.) If you do not subscribe to caller line identification service, it is recommended that you set first ring detection **On**. (See Section 8.5.4.)

- 1 Press  in idle mode, scroll  to **Advanced Set**, and press  to **Select**.
- 2 Scroll  to **First Ring** and press  **Select**.
- 3 Scroll  to **On** or **Off** and press  **Select** to confirm.
  - A validation tone is emitted and the screen returns to the **Advanced Set** menu.

### **Note**

The default setting for first ring detection is country dependent. In countries where the default setting is **On**, the setting automatically switches to **Off** when you receive a call containing caller line identification. However, this occurs only if you do not first manually change the setting. (It does not change automatically if you manually change the first ring setting even once.)

### 10.13 Default Settings

Parameter	Default Value
Ring Volume	Level 3
Ring Tone	Ring 1
Earpiece Volume	Level 3
Speaker Volume	Level 3
Key Beep	On
Display Language	English

Parameter	Default Value
Wallpaper	Wallpaper 1
Color Theme	Color 1
Display Contrast	Level 3
Backlight Time	20 Seconds
Auto Hang-Up	On
Handset Name	Philips
Time/Date Format	MM/DD 12hrs
Time/Date	00:00 01/01/2008
Set Alarm	Off
Alarm Tone	Melody 1
Dial Mode	Tone
PIN Code	0000
Call Barring	Off
Call Barring Number	Cleared
XHD Sound	On
Easy Call	Off
Easy Call Number	Cleared
Auto Prefix	Cleared
Set First Ring	Country group dependent
Phonebook Memory	After a reset, phonebook is maintained as it was just before the reset
Redial Memory	Cleared
CLI Memory	Cleared
Auto Conference	On







## 11 Network Service

The network service function provides a convenient way for you to access some network provider service. A subscription is required in order to benefit from this service. Contact your network provider for details. Depending on your subscribed network, this service and menus described in this chapter may not be available in your SE655.


### 11.1 Voice Mail

Use this function to access your voice mail account.

 


#### 11.1.1 Access Voice Mail


 

 

- 1 Press  in idle mode, scroll  to **Netw. Services**, and press  **Select**.
- 2 Scroll  to **Voice Mail** and press  **Select**.
- 3 You are now at the **Voice Mail** menu and **Call** is highlighted. Press  **Select** to connect to the voice mail account number.


#### **Note**

You can also access your voice mail number by long-pressing .

#### 11.1.2 Set Voice Mail Number

- 1 Press  in idle mode, scroll  to **Netw. Services**, and press  **Select**.

- 2 Scroll  to **Voice Mail** and press  **Select**.
- 3 Scroll  to **Settings** and press  **Select**.
- 4 Enter the voice mail account number (maximum 14 digits) and press  **OK**.
  - A confirmation tone will sound and the display will return to the **Voice Mail** screen.

machine functions. Those procedures are covered below. There is also a menu to set the answering machine options. The telephone answering machine is ON by default. To switch the answering machine between on and off, press  on your base station. Alternatively, you may switch the answering machine on and off via your handset (see section 12.6.2).

 

 

## 12 Telephone answering machine (TAM)

Your phone features an answering machine that records unanswered calls when it is activated. The answering machine can store up to 59 messages. The maximum recording time is 3 minutes per message, or 30 minutes for all messages. The maximum length of an outgoing message is 1 minute. You can use the control keys on the base station to perform the basic functions of the answering machine such as message playback, deleting messages and adjustment of volume on the base station. For a description of each function of the control keys on the base station, please see "Overview of the base station" (section 5.4) for more details. You can also use the answering machine menu on the handset to access the answering

### 12.1 Playing Messages

#### 12.1.1 Playback of messages via handset

The answering machine message counter blinks when there are new messages and display the number of new messages. The most recent recorded message is played first via the loudspeaker. When all new messages have been played, the answering machine will stop and the message counter will stop blinking.

- 1 Press the  key in idle mode, scroll  to **Answer Machine**, and press  **Select**.
- 2 **Play** is highlighted. Press  **Select** to start playing new messages.
  - The handset displays **New** and the number of new messages in the format **1/4**, where **1** is the number of the message being played and **4** is the number of new messages.
  - If there are no new messages, the handset displays the number of

old messages in the same format (however 'New' is not displayed.) and plays the old messages.

### 12.1.2 Functions available during playback

During playback, you can enable the following functions by pressing **Option**. Use to scroll between the functions and press **OK** to confirm.

Repeat	Replay the current message
Next	Listen to the next message.
Previous	Listen to the previous message.
Delete	Delete the message currently playing.

### 12.2 Delete all messages

#### **Warning**

Deleted messages cannot be recovered.

#### **Note**

Unplayed messages will not be deleted.

- 1 Press the key in idle mode, scroll to **Answer Machine**, and press **Select**.
- 2 Scroll to **Delete All** and press **Select**.
- 3 **Delete All?** is displayed on the screen. Press **OK** to confirm deletion of all your messages.
  - **Waiting...** is displayed while the messages are deleted; then, **Deleted** is displayed for 2 seconds, and the display returns to the **Answer Machine** menu.

### 12.3 Turn the Answering Machine On/Off

You can turn the answering machine on or off from the handset as follows.

- 1 Press the key in idle mode, scroll to **Answer Machine**, and press **Select**.
- 2 Scroll to **Answer On/Off** and press **Select**.
- 3 Scroll to select **On** or **Off** and press **Select**.
  - A validation tone is emitted and the screen returns to previous menu.

### 12.4 Play, Record, or Delete an Outgoing Message

You can record a personalized message to be played when the answering machine picks up an incoming call.

#### **Note**

The maximum length of an outgoing message is 1 minute.







 
- 1 Press the key in idle mode, scroll to **Answer Machine**, and press **Select**.
- 2 Scroll to **Record OGM** and press **Select**.
- 3 Scroll to select **Answer & Rec.** or **Answer Only** and press **Select**.
- 4 Scroll to select **Play, Record Message, or Delete** and press **Select**.
  - If **Play** is selected, the current outgoing message is played.
  - If **Record Message** is selected, a beep sounds and the handset

starts automatically recording a message.

- If **Delete** is selected and a personal outgoing message was previously recorded, **Deleted** is displayed. The predefined OGM is reinstated automatically.

## 12.5 Set the Answer mode

There are 2 answer modes available: Answer Only and Answer & Record. By default, the answer mode is Answer & Record, which lets your caller leave a message on the answering machine. This can be changed to Answer Only mode, which does not allow your caller to leave any messages on the answering machine.

- 1 Press the  key in idle mode, scroll  to **Answer Machine**, and press  **Select**.
- 2 Scroll  to **Answer Mode** and press  **Select**.
- 3 Scroll  to select **Answer & Rec.** or **Answer Only** and press  **Select**.
  - A validation tone is emitted and the screen returns to previous menu.

### Note

Depending on the answer mode you have selected, the appropriate default outgoing message is played once the answering machine picks up an incoming call.

 





 
 
### Tip

You can set the answering machine to play a personalized outgoing message. See 12.4 above.

## 12.6 Answering Machine Settings

### 12.6.1 Ring Delay

This is the number of rings before the answering machine answers and starts playing your greeting message. You can set the answering machine to start playing your greeting message after 3 to 8 rings or the "Economy" option. The default ring delay is 5.

- 1 Press the  key in idle mode, scroll  to **Answer Machine**, and press  **Select**.
- 2 Scroll  to **Settings** and press  **Select**.
- 3 **Ring Delay** is highlighted. Press  **Select**, then scroll  to select from **3 to 8** or **Economy**.
- 4 Press  **Select** to confirm.
  - A validation tone is emitted and the display returns to the **Settings** menu.

### Note

If **Economy** is selected, the ring delay depends on the answering machine's condition.

- If there are new messages in the answering machine, it will pick up the line after 2 rings.
- If there are no new messages in the answering machine, it will pick up the line after 6 rings.
- If the answering machine is full, it will pick up the line after 10 rings. The Answer Only outgoing message will be played.

## 12.6.2 Remote Access

You can check the messages on your answering machine by calling in from an outside line and entering the remote access code\*. The keypad on the phone you use to dial in acts like the functions on your answering machine.

### Note

This feature is deactivated by default.

\* The remote access code (which is the same as your PIN code) prevents any unauthorised remote access of your answering machine.

- 2 Press # key and enter the remote access code (same as your PIN code).
  - If the access code is incorrect, an error tone will be emitted. Then enter the PIN code again. If the PIN code is still incorrect, the answering machine will drop the line immediately.
  - If the remote access code is correct, a short validation tone will be heard.

### Note



 

 




Operation is cancelled if the PIN code is not entered within 10 seconds.

If the answering machine is off, the phone will enter into the remote access mode after 10 rings. A beep will then sound, prompting you to enter the PIN code. Enter the PIN (default is 0000) to activate the remote access feature. You can then turn ON the answering machine and play the recorded messages.

The following table indicates how to access the functions of the answering machine using the telephone keypad.

Key	Action
1	Go to previous message.
2	Play the message.
3	Skip to the next message.
6	Delete the playing message.
7	Turn on the answering machine.
8	Stop message playback.
9	Turn off the answering machine.

### 12.6.2.1 Activate/Deactivate Remote Access

- 1 Press the  key in idle mode, scroll  to **Answer Machine**, and press  **Select**.
- 2 Scroll  to **Settings** and press  **Select**. Then, scroll  to **Remote Access** and press  **Select**.
- 3 Scroll  to select **Activate** or **Deactivate** and press  **Select**.
  - A validation tone is emitted and the screen returns to previous menu.

 

### 12.6.2.2 Controlling the Answering Machine from an external call

- 1 From your external phone, dial home.
  - The answering machine answers and starts playing your greeting message.

**Note**



 



 

 
When Remote Access is deactivated, you can activate it from an external call by allowing the telephone to ring 10 times. The answering machine picks up automatically and sounds a beep. After the beep, press # key and enter the remote access code (PIN) to activate remote access.

**12.6.3 Handset Screening**

When Handset call screening is set to **On**, you can press  **Screen** to start call screening for incoming messages. If you decide to pick up the call, press . Once you pick up, the recording will stop automatically.

**Note**









 
If you have multiple handsets, only one handset can enable handset call screening for each call.

- 1** Press the  key in idle mode, scroll  to **Answer Machine**, and press  **Select**.
- 2** Scroll  to **Settings** and press  **Select**. Then, scroll  to **HS Screening** and press  **Select**.
- 3** Scroll  to select **On** or **Off** and press  **Select**.
  - A validation tone is emitted and the screen returns to previous menu.

**12.6.4 Setting the Outgoing Message Language**

The language of the default outgoing messages is originally set to English.

However you can change the language of the default outgoing messages as follows.

- 1** Press the  key in idle mode, scroll  to **Answer Machine**, and press  **Select**.
- 2** Scroll  to **Settings** and press  **Select**. Then, scroll  to **Voice Language** and press  **Select**.
- 3** Scroll  to select the language and press  **Select**.
  - A validation tone is emitted and the screen returns to previous menu.

**13 Technical data****Display**

- 1.33 inch color LCD with backlight (98 × 67 pixels)
- Selectable wallpaper
- Selectable colour theme

**General telephone features**

- Caller name & number identification
- 5 standard +10 polyphonic ringer melodies
- Wideband synthesis for receiver and loudspeaker

**Phonebook list, Redial list and Call log**

- Phonebook list with 200 entries
- Redial list with 10 entries
- Call log with 50 entries



**Battery**

- 2 × AAA, 600mAh batteries

**Weight and dimensions****Base:**

- 189.5 grams
- 77mm × 115mm × 131mm  
(H × D × W)

**Handset:**

- 128.5 grams
- 162mm × 31.5mm × 48mm  
(H × D × W)

**Temperature range**

- Operation: Between 0 and 35°C  
(32 to 95°F).
- Storage: Between -20 and 70°C  
(-4 to 158°F).

**Relative humidity**



- Operation: Up to 95% at 40°C
- Storage: Up to 95% at 40°C

## 14 Frequently asked questions

[www.philips.com/support](http://www.philips.com/support)


In this chapter, you will find the most frequently asked questions and answers about your phone.

**14.1 Connection****The handset does not switch on!**

- Charge the batteries: Put the handset on the base station to charge. After a few moments, the phone will switch on.
- Make sure you are holding the  key long enough. You must press and hold  for at least 5 seconds to switch the power on/off.

**The handset does not charge!**

- Check charger connections.

** icon is not blinking during charge!**

- Battery is full: There is no need to charge the battery.
- Bad battery contact: Adjust the handset slightly.
- Dirty contact: Clean the batteries contact with a cloth moistened with alcohol.

**Communication is lost during a call!**

- Charge the battery
- Move closer to the base station.

**The phone is “Out of range”!**

- Move closer to the base station.


**14.2 Set-up****Searching... is displayed on handset and  icon is blinking!**

- Move closer to the base station.


- Make sure that your base station is on.
- Reset your unit and restart handset registration.

#### 14.3 Sound

##### Handset does not ring!

Check that the **Ring Volume** is not set to no bars (Ringer Off), and make sure the  icon is not displayed on the screen (see "Set the Ring Volume" on page 39).

##### Caller does not hear me!

Microphone may be muted: During a call, press .

##### There's no dialling tone!

- No power: Check the connections.
- Batteries are empty: Charge the batteries.
- Move closer to the base station.
- Wrong line cable used: Use the line cable provided.
- Line adaptor is required: Connect the line adaptor to the line cord.

##### Caller does not hear me clearly!


- Move closer to the base station.
- Move the base station at least one metre away from any electronic appliances.

##### Frequent noise interference on my radio or television!

- Move the base station as far away as possible from the electrical appliances.

#### 14.4 Product behaviour

##### Keypad does not work!

- Unlock your keypad: Long press  in idle mode.

##### The handset warms up when making a long call and when it is on the base station!

- This is a normal behavior. The handset consumes energy while calling and charging.

##### The handset cannot be registered to the base station!

- Maximum number of handsets (5) has been reached. To register a new handset, unregister an existing handset.
- Remove and replace the handset batteries.
- Try again by disconnecting and connecting the base station power supply and follow the procedure to register a handset (see section 10.6).

##### Caller number is not displayed!

- Service is not activated: Check your subscription with your network operator.

##### My handset keeps going into idle mode!

- If there are no key presses for 30 seconds, the handset will automatically return to idle mode. It will also return to idle mode automatically when you place the

handset back on the base station (if auto hang-up feature is on).

**Phonebook entry cannot be stored and Memory Full is displayed!**

- Delete an entry to free memory before saving your contact again.

**The PIN code is wrong!**

- The default PIN is 0000.
- Reset the handset to revert to the default PIN code if it has been changed before (see "Reset Unit" - Section 10.8).

**The answering machine does not record calls.**

- Make sure the answering machine is connected to the power adaptor, and the power adaptor is plugged into mains supply which is switched on.
- Check if the answer machine is off, or Answer only mode is selected.
- Check to see if the answering machine is memory full. If so, delete some or all messages.
- Try switching off the power at the mains socket, and then turn it on again after 1 minute.

**Unable to perform remote operation**

- Make sure the remote access is on (see Section 12.6.2).
- Make sure you entered the correct remote access code.
- Use a touch-tone phone.

**Note**

If the above solutions do not help, remove the power from both the handset and the base. Wait for 1 minute and try again.

## 15 INDEX

### A

Access phonebook 31  
 Access Redial list 34  
 Access the Call log 35  
 Activate/Deactivate loudspeaker mode 30  
 Activate/Deactivate Remote Access 52  
 Adjust earpiece or speaker volume 30  
 Advanced settings 42  
 Advanced Settings menu tree 25  
 Answer a call 28  
 Answer an external call during intercom 37  
 Answer Machine menu tree 26  
 Answering Machine Settings 51  
 Auto Conference 43  
 Auto hang-up 41  
 Auto Prefix 46

### B

Backlight timing 41  
 Base station 18  
 Batteries 20

### C

Call Barring 43  
 Call from redial list 27  
 Call from the call log 27  
 Call from the phonebook 28  
 Call using Direct Access Memory 28  
 Change PIN 44  
 Change the Dial Mode 47  
 Change the Display Language 40  
 Change the Handset Name 39  
 Charge battery 21

Clock and Alarm menu tree 24  
 Clock and Alarm settings 38  
 Color themes 41  
 Connect the base station 19  
 Contrast 41

### D

Deactivate/Activate Auto Hang-Up 41  
 Default PIN code 44  
 Default settings 47  
 Delete a call list entry 36  
 Delete a phonebook entry 32  
 Delete a redial number 34  
 Delete all call list entries 36  
 Delete all messages 50  
 Delete all phonebook entries 33  
 Delete all redial numbers 34  
 Delete Direct Access Memory 33  
 Dial mode 47  
 Direct Access Memory 33  
 Direct dialling 27  
 Display icons and Messages 17  
 Display languages 40

### E

Easy Call 42  
 End a call 29  
 Establish a three-party conference call 37

### F

Frequently asked questions 54  
 Functions available during playback 50

### G

Getting started 19

**H**

Handset name 39  
Handset Screening 53  
Handset Tones 39  
Handsfree answering 29

**I**

Install battery 20  
Install your phone 20  
Intercom 36

**K**

Key Beep 40  
Keypad lock/unlock 30

**M**

Make a call 27  
Menu structure 22  
Modify a phonebook entry 31  
Mute/Unmute microphone 30

**N**

Network Service 48  
Network Services menu tree 26

**O**

Overview of the base station 18  
Overview of your phone 15

**P**

Paging 37  
Personal settings 39  
Personal Settings menu tree 23  
Personalized message 50  
Phonebook menu tree 22  
PIN 44  
Play, Record, or Delete an Outgoing Message 50  
Playback of messages via handset 49

Playing Messages 49  
Power requirements 6  
Predialling 27

**R**

Registration 44  
Remote Access 52  
Reset Unit 45  
Ring Delay 51  
Ring tones 40  
Ring Volume 39

**S**

Save a redial number 34  
Save call list entry 35  
Select phonebook melody 32  
Select the Color Theme 41  
Select the Display Wallpaper 41  
Set a Call Barring number 43  
Set Alarm 38  
Set Alarm Tone 39  
Set Auto Prefix 46  
Set Call Barring Mode 43  
Set Date and Time 38  
Set Date Format 38  
Set Easy Call number 42  
Set Easy Call to On or Off 42  
Set First Ring Detection 47  
Set the Answer mode 51  
Set the Backlight Time 41  
Set the Display Contrast 41  
Set the Ring Tones 40  
Set the Ring Volume 39  
Set Time Format 38  
Set Voice Mail Number 48  
Setting the Outgoing Message Language 53  
Store a contact in the phonebook 31

Switch between an internal and external call 37  
Switch the handset on/off 30

**T**

Technical data 53  
Telephone answering machine 49  
Text or number entry 30  
The call log 35  
Transfer an external call 37  
Turn the Answering Machine On/Off 50

**U**

Unregister 45  
Using the Call log 35  
Using the Intercom 36  
Using the Redial list 33  
Using your phone 27  
Using your Phonebook 31

**V**

Voice Mail 48

**W**

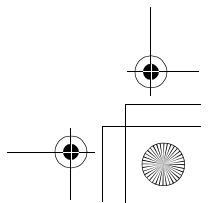 
 
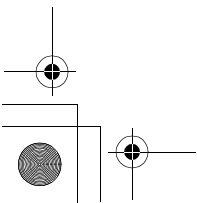 
 
 
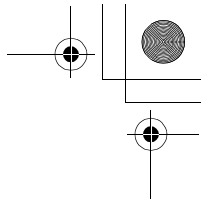 
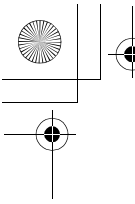 
Wallpaper images 41  
What's in the box 14

 
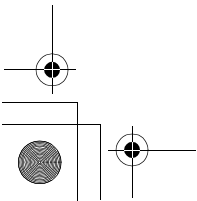 
 
 
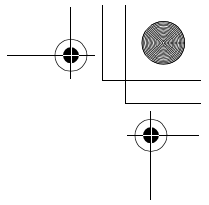 
 
**X**

XHD Sound 44

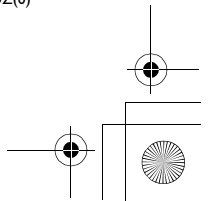 
**Y**

Your phone 14





UCZZ01937UZ(0)







©2008 Koninklijke Philips Electronics N.V.

All rights reserved

Reproduction in whole or in part is prohibited without the written consent of the copyright owner

Document order number: 3111 285 47021 (US-EN)



Printed in China