 


3 Your phone

 
3.1 What's in the box




Handset

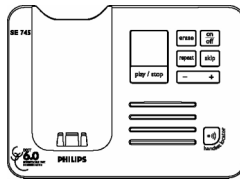

Base station




Battery door

 

Base support



 
**2 AAA rechargeable
NiMH batteries**



Power supply



 Line cord*

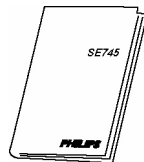

User manual



Guarantee



 
Quick Start Guide

Note

*You may find in the box the line adaptor delivered separately from the line cable. In this case, you have to connect the line adaptor to the line cord first before plugging the line cord to the line socket.

In multihandset packs, you will find one or more additional handsets, chargers with power supply units and additional rechargeable batteries.

3.2 Overview of your phone

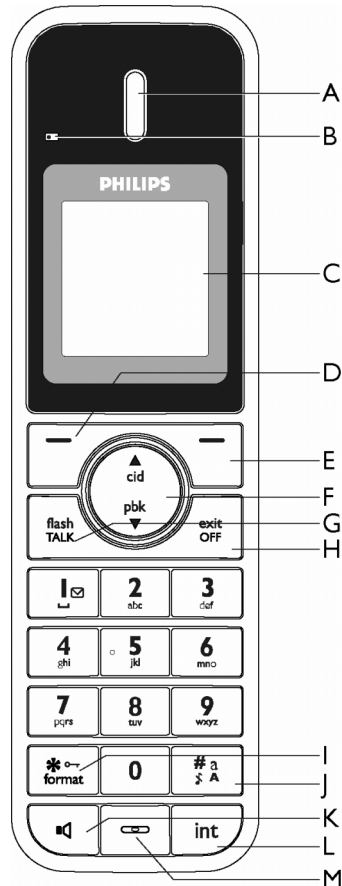

A Earpiece

B Event LED

Blinks when there is a new missed call or Voicemail or answering machine message.

Note

If you have not subscribed to Caller Line Identification service, there will not be any alerts for new events except for new messages recorded on the answering machine. Hence, the event LED will not blink when there is a new call, or voicemail.

C Display

See page 10 for an overview of the display icons.

D Left Softkey

In idle mode: Go to the main menu.

In other modes: Select the function displayed on the handset screen directly above it.

During a call: Mute/unmute the handset microphone.

Switch on the backlight.

E Right Softkey

In idle mode: Access the Redial list.

In other modes: Select the function displayed on the handset screen directly above it.

During a call: Initiate a second call, consult phonebook, transfer a call or activate/deactivate XHD Sound mode.

Switch on the backlight.

F Navigation keys

In idle mode: Scroll up to access the Call log and scroll down to access the Phonebook.

During a call: Scroll up/down to increase or decrease earpiece and speaker volume.

In editing mode: Scroll up/down to go to the previous character or next character.

In other modes: Scroll up/down a menu list or go to the previous or next record in the Phonebook, Redial list or Call log.

G Talk key

In idle mode: Answer an incoming external or internal call.

During a call: Activate the recall function.

In other modes: Dial the selected number in the Phonebook, Redial list or Call log.

H Hang-up key

In idle mode: *Long press* to switch off the handset, *Short press* to switch on the handset.

During a call: Hang up a call.

In other modes: Return to idle mode.

I Keypad lock key

In idle mode: Insert *. *Long press* to lock/unlock the keypad.

During a call: Insert *.

 
 
J Ringer on/off key &

Pause key


In idle mode: Insert #. *Long press* to turn the ringer on/off.

During a call: Insert #. *Long press* to insert a pause.

In editing mode: *Long press* to switch between

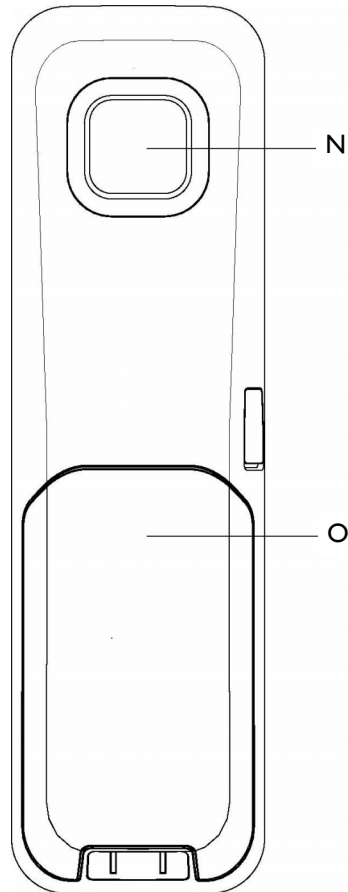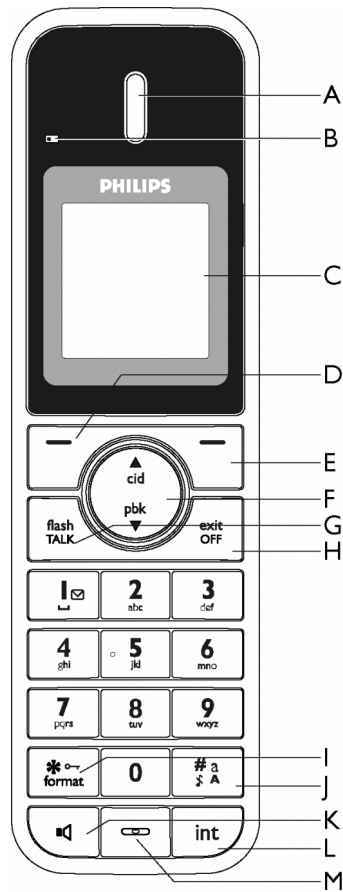

upper and lower case.

K Loudspeaker key 

In idle mode: Turn on the loudspeaker and dial the number. Answer an incoming call using handsfree mode.

During a call: Toggle the loudspeaker on/off.

L Call transfer key & Intercom key 

In idle mode: Initiate an internal call.

During a call: Hold the line and page another handset.

M Microphone

N Loudspeaker

O Battery door

Danger

Handsfree activation can suddenly increase the volume in the earpiece to a very high level. Make sure the handset is not too close to your ear.



3.3 Display icons



Indicates that the battery is fully charged. Icon blinks during charge and when the battery is low.



Indicates that there is an external incoming call, an external call is connected or an external call is held. Icon blinks during intercom mode.



Appears when the alarm clock is activated.



Appears when the loudspeaker is activated.



Appears when Silence is activated.



Indicates that the handset is registered and within range of the base station. Icon blinks when the handset is out of range or is searching for a base.



Indicates that the keypad is locked.



Indicates that **XHD Sound** mode is activated.



Indicates that **Do not Disturb** mode is activated.



Indicates that the telephone answering machine is activated. Icon blinks when the memory for answering machine messages is full.

When there are new events such as new missed calls, voicemail or answering machine messages received, the following icons together with the number of occurrences are displayed in the middle of the handset screen.



There are new missed calls. The number of new missed calls is also displayed on the left of the icon.



There are new voicemail messages received. The number of new voicemail messages received is also displayed on the left of the icon..

 


There are new answering machine messages received. The number of new messages received is also displayed on the left of the icon.

Note

If you have not subscribed to Caller Line Identification service, there will not be any alerts for the new events except for new messages recorded on the answering machine. Hence, no missed call or voicemail event icons will appear in the middle of the handset screen.

3.4 Overview of the base station

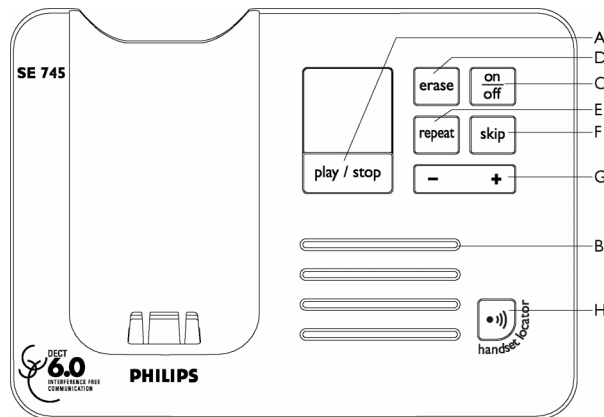

A Play/Stop key

Play phone messages (the first recorded will be played first).


Stop message playback.

B LED indicator

Blinking: Indicates number of new messages.

Steady: Indicates number of old messages.

2 bars flashing: Indicates that there is no more memory left.

Indicates the volume level (L0 - L9) when  is pressed.

Indicates the current message number during playback.

C On/Off key

In idle mode, *short press* to switch on/off the answering machine. During message playback, *long press* to switch off the answering machine.

D Erase key

Delete current message during message playback.

Long press to delete all messages when the answering machine is in idle mode (unread messages will not be deleted).

E Repeat key

Go to previous message if pressed within 1 second of current message playback.

Replay current message if pressed after 1 second of current message playback.

F Skip key

Skip to the next message during message playback.

G Volume keys

Increase/Decrease speaker volume during message playback.

There are 9 volume levels.

H Handset locator key

Locate the handset.

Long press to start registration procedure.