 
 


Register your product and get support at

[www.philips.com/welcome](http://www.philips.com/welcome)

XL 665



---

## US EN Telephone Answering Machine

 
---




### Warning









Use only rechargeable batteries.

Charge the handset for 24 hours before use.



**PHILIPS**

 

 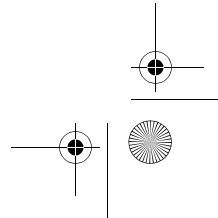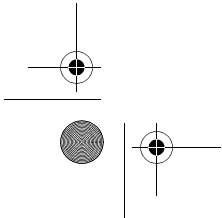     

## Table of contents

<b>1</b>	<b>Important Safety Instructions</b>	<b>4</b>	4.7	Checking the signal strength	15
<b>2</b>	<b>Important</b>	<b>7</b>	4.8	Missing handset(s)	16
2.1	Power requirements	7	4.9	Menu structure	17
2.2	Conformity	8	<b>5</b>	<b>Call</b>	<b>18</b>
2.3	Environmental	8	5.1	Making a call	18
2.4	Recycling & disposal	9	5.2	Ending a call	18
2.5	Electric, Magnetic and Electromagnetic Fields ("EMF")	9	5.3	Answering a call	19
<b>3</b>	<b>Your phone</b>	<b>10</b>	5.4	During a call	19
3.1	What's in the box	10	5.5	Using handsfree	19
3.2	Overview of your phone	11	5.6	Using quick dial	19
3.3	Overview of the base station	12	<b>6</b>	<b>Intercom and Conference Calls</b>	<b>21</b>
3.4	Display icons	13	6.1	Calling another handset	21
3.5	The menus	13	6.2	Transferring a call	21
<b>4</b>	<b>Getting started</b>	<b>14</b>	6.3	Making a conference call	21
4.1	Connect the base station	14	<b>7</b>	<b>Text and Numbers</b>	<b>23</b>
4.2	Connect your charger	14	7.1	Entering text and numbers	23
4.3	Install your handset	14	<b>8</b>	<b>Phonebook</b>	<b>24</b>
4.4	Checking the battery level	15	8.1	Viewing the phonebook	24
4.5	Setting the clock	15	8.2	Calling from the phonebook	24
4.6	What is standby mode?	15	8.3	Adding a record	24

## Table of contents

8.4	Editing a record	25	<b>11 Custom Options</b>	<b>29</b>
8.5	Deleting a record	25	11.1	Personalizing your phone's display 29
8.6	Deleting all records	25	11.2	Personalizing your phone's sounds 29
<b>9</b>	<b>Call log</b>	<b>26</b>	11.3	Auto conference 29
9.1	Viewing the call records	26	<b>12 Advanced Settings</b>	<b>30</b>
9.2	Editing the caller's number before returning a call	26	12.1	ECO mode 30
9.3	Returning a call	26	12.2	Registering handset(s) 30
9.4	Saving a call record to your phonebook	27	12.3	Flash selection 31
9.5	Deleting a call record	27	12.4	Dial mode 31
9.6	Deleting all call records	27	12.5	Area code management 31
<b>10</b>	<b>Redial List</b>	<b>28</b>	12.6	Carrier code 31
10.1	Viewing the redial records	28	12.7	Restoring default settings 32
10.2	Redialing a call	28	<b>13 The Answering Machine</b>	<b>33</b>
10.3	Saving a redial record to your phonebook	28	13.1	Turning the answering machine on or off 33
10.4	Deleting a redial record	28	13.2	Greeting message 33
10.5	Deleting all redial records	28	13.3	Incoming messages (ICM) 34

## Table of contents

13.4	Call screening	35	17.11	Terminal Equipment	42
13.5	Setting the ring delay	35	17.12	Radio Equipment	43
13.6	Setting the answering machine language	35	17.13	Do not attempt to repair or modify this equipment	43
<b>14</b>	<b>Default (pre-programmed) settings</b>	<b>36</b>	17.14	The RBRC® seal	43
<b>15</b>	<b>Technical Data</b>	<b>37</b>	<b>18</b>	<b>Index</b>	<b>44</b>
<b>16</b>	<b>Frequently asked questions</b>	<b>38</b>			
<b>17</b>	<b>Appendix</b>	<b>40</b>			
17.1	Equipment approval Information	40			
17.2	Notification to the local telephone company	40			
17.3	Notes	40			
17.4	Rights of the Phone Company	40			
17.5	Interference Information	41			
17.6	Noise	42			
17.7	FCC RF Radiation Exposure Statement	42			
17.8	Hearing Aid Compatibility (HAC)	42			
17.9	Privacy	42			
17.10	Additional Information	42			



## 1 Important Safety Instructions

Some of the following information may not apply to your particular product; however, when using telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Telephones should not be used while you are in a bathtub, shower or pool. Immersion of the telephone or handset in water could cause an electrical shock.
5. Slots and openings in the cabinet back or bottom are provided for ventilation, to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on the bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation unless proper ventilation is provided.
6. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
7. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be abused by persons walking on it.
8. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
9. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
10. To reduce the risk of electric shock, do not disassemble this product, but take it to a qualified service personnel when service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
11. Do not expose the product to extreme temperatures such as areas near a hot radiator or stove or in a hot car.
12. Do not place lighted candles, cigarettes, cigars, etc., on the telephone.
13. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
14. Never install or modify telephone wiring during a lightning storm.
15. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.



16. Use caution when installing or modifying telephone lines to prevent electrical shock and/or fire.
17. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - A. When the power supply cord or plug is damaged or frayed.
  - B. If the product has been exposed to rain or water.
  - C. If the product does not operate normally by following the operating instructions.
  - D. If the product's cabinet has been damaged.
  - E. If the product exhibits a distinct change in performance.
18. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
19. Do not use the telephone to report a gas leak in the vicinity of the leak.
20. Do not place this product on an unstable cart, stand or table. The product may fall, causing serious damage to the product.
3. Do not open or mutilate the battery(ies). Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
4. Exercise care in handling battery(ies) in order not to short out the battery(ies) with conducting materials such as rings, bracelets, and keys. The battery(ies) or conductor may overheat and cause burns.
5. Do not attempt to recharge the battery(ies) provided with or identified for use with this product that are not intended to be charged. The battery(ies) may leak corrosive electrolyte or explode.
6. Do not attempt to rejuvenate the battery(ies) provided with or identified for use with this product by heating them. Sudden release of the battery(ies) electrolyte may occur causing burns or irritation to eyes or skin.
7. When replacing battery(ies), all batteries should be replaced at the same time. Mixing fresh and discharged batteries could increase internal cell pressure and rupture the discharged battery(ies). (Applies to products employing more than one separately replaceable primary battery.)
8. When inserting battery(ies) into this product, the proper polarity or direction must be observed. Reverse insertion of battery(ies) can cause charging, and that may result in leakage or explosion.

 
 
**IF YOUR PRODUCT UTILIZES BATTERIES, THE FOLLOWING ADDITIONAL PRECAUTIONS SHOULD BE OBSERVED:**

1. Use only the type and size of battery(ies) specified in the user manual.
2. Do not dispose of the battery(ies) in fire. They may explode. Check with local codes for possible special disposal instructions.

Important Safety Instructions



9. Remove battery(ies) from this product if storing over 30 days because the battery(ies) could leak and damage the product.
10. Discard "dead" battery(ies) as soon as possible since "dead" batteries are more likely to leak in a product.
11. Do not store this product, or the battery(ies) provided with or identified for use with this product, in high-temperature areas. Batteries that are stored in a freezer or refrigerator for the purpose of extending shelf life should be protected from condensation during storage and defrosting. Batteries should be stabilized at room temperature prior to use after cold storage.
12. If your product uses rechargeable battery(ies), charge the battery(ies) only in accordance with the instructions and limitation specified in the User Manual.



**SAVE THESE INSTRUCTIONS**





## 2 Important

This product is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.

### **Warning**

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### **2.1 Power requirements**

- This product requires an electrical supply of 100-240 volts, single-phase alternating current, excluding IT installations defined in standard UL 60950.
  - The electrical network is classified as dangerous according to criteria in the standard UL 60950. The only way to power down this product is by unplugging the power supply from the electrical outlet. Ensure the electrical outlet is located close to the apparatus and is always easily accessible.
  - The voltage on the network is classified as TNV-3 (Telecommunication Network Voltages, as defined in the standard UL 60950). Following a power cut, the call in progress, as well as the date and time settings will be lost.
  - Use only Class 2 Power Source or Limited Power Source (L.P.S.), rated of 5 V dc, 500 mA for Model XL665XY/ZZ; rated of 5 V dc, 210 mA for Model XL665C.
- **Warning**
    - Do not allow the handset to come into contact with liquids or moisture.
    - Do not open the handset, base station or charger. This could expose you to high voltages.
    - Do not allow the charging contacts or the battery to come into contact with conductive materials.
    - There is a slight chance that your product could be damaged by an electrical storm. We recommend that you unplug the product from the power supply and telephone socket during a storm.
    - Do not use the handset in an explosive hazard area such as where there is gas leaking.
    - It is recommended that this product is not used near intensive care medical equipment or by persons with pacemakers.
    - This product can interfere with electrical equipment such as answering machines, television, radio, and computers if placed too close. We recommend that you position the base station at least one meter from such appliances.
    - Use only the main adapter supplied with this equipment. Incorrect adapter polarity or voltage can seriously damage the unit.

Important

7

**Base adapter:**

Philips S005CU0500050  
Input: 100-240VAC/150mA, 50/60 Hz  
Output: 5 VDC, 500mA

**Charger adapter:**

Philips S002CU0500021  
Input: 100-240VAC/100mA, 50/60 Hz  
Output: 5 VDC, 210mA

- CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. Use only with Philips, type no.: Multi-Life 600mAh (2x 1.2V AAA 600mAh Ni-MH) rechargeable battery. Use only the recommended type supplied with this product. Dispose of used batteries according to the instructions.

**Recommended type:**

Philips 1.2V 600mAh AAA re-chargeable batteries, Multi-Life 600mAh

- Handsfree activation could suddenly increase the volume in the earpiece to a very high level: make sure the handset is not too close to your ear.
- This equipment is not designed to make emergency calls when the power fails. An alternative has to be made available to allow emergency calls.
- Do not expose the phone to excessive heat caused by heating equipment or direct sunlight.
- Do not drop your phone or allow objects to fall on your phone.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the set.

- Do not use the product in places where there are explosive hazards.
- Do not let small metal objects come into contact with the product. This can deteriorate audio quality and damage the product.
- Active mobile phones in the vicinity may cause interference.

About operating and storage temperatures:

- Operate in a place where temperature is always between 0 and 35° C.
- Store in a place where temperature is always between -20 and 45° C.
- Battery life may be shortened in low temperature conditions.

**Warning**

Metallic objects may be retained if placed near or on the handset receiver.

**2.2 Conformity**

We, Philips declare that the product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. This product can only be connected to the analogue telephone networks of the countries mentioned on the packaging. You can find the Declaration of Conformity on [www.p4c.philips.com](http://www.p4c.philips.com).

**2.3 Environmental**

Remember to observe local regulations regarding the disposal of your packaging materials, exhausted batteries and old equipment. Promote their recycling where possible.

#### 2.4 Recycling & disposal


Disposal instructions for batteries:


Batteries should not be disposed of with general household waste.



Packaging information:

Philips has marked the packaging with standard symbols designed to promote the recycling and appropriate disposal of your eventual waste.

 A financial contribution has been paid to the associated national recovery & recycling system.

 The labelled packaging material is recyclable.

- Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.
- Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardisation for early integration in its products.

#### 2.5 Electric, Magnetic and Electromagnetic Fields ("EMF")

- Philips Royal Electronics manufactures and sells many consumer oriented products which usually, as with any electronic apparatus, have the ability to emit and receive electro magnetic signals.
- One of Philips' leading Business Principles is to take all necessary health and safety precautions for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.
- Philips is committed to develop, produce and market products that cause no adverse health effects.


Important

### 3 Your phone

Congratulations on your purchase and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

#### 3.1 What's in the box

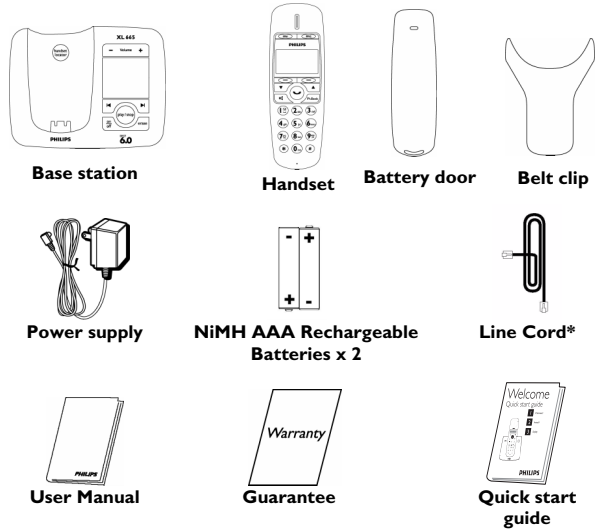


**Note**

\*The line adapter may not be attached to the line cord. You may find the line adapter in the box. In this case, you have to connect the line adapter to the line cord first before plugging the line cord to the line socket.

In multi-handset packs, you will find one or more additional handsets, chargers with power supply units and additional rechargeable batteries.


### 3.2 Overview of your phone

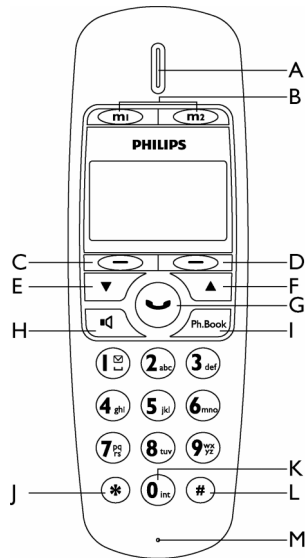

- A Earpiece**
- B Memory keys**   
Quick dial your stored phone numbers
- C Left Softkey**   
Select the function displayed on the handset screen directly above it.  
Enter received calls and redial lists  
Mute/unmute microphone
- D Right Softkey**   
Select the function displayed on the handset screen directly above it.  
Access main menu  
Exit menu / operation


- E Down key**   
Scroll down menu  
Decrease earpiece and loudspeaker volume
- F Up key**   
Scroll up menu  
Increase earpiece and loudspeaker volume
- G Talk / End key**   
Make and receive calls  
End call
- H Speaker key**  
Turn speaker on / off
- I Phonebook key**   
Enter phonebook
- J Star / Format key**   
Dial \*  
Edit caller's number in call log review
- K Intercom / Conference key**   
Dial 0  
Make intercom call  
Make conference call
- L Pause key**   
Dial # and enter pause
- M Microphone**

Your phone

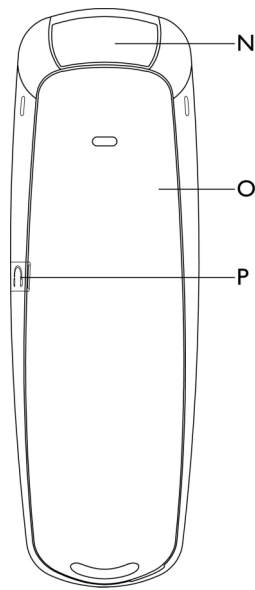

- N Loudspeaker**
- O Battery door**
- P Headset jack**

### 3.3 Overview of the base station

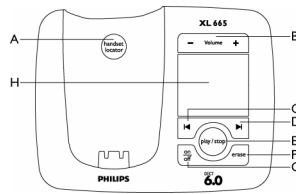

- A Handset locator key**
  - Find handset(s)
  - Enter registration mode
- B Volume up/down**
  - Increase/Decrease speaker volume
- C Repeat key**
  - Skip backward during playback
- D Skip key**
  - Skip forward during playback
- E Play/Stop key**
  - Play messages
  - Stop message playback
- F Erase key**
  - Delete messages
- G On/Off key**
  - Turn the answering machine on/off
- H Message counter**
  - Display message number
  - Display answering machine operation

### 3.4 Display icons



Each icon gives you a visual message of what is happening on your handset.

- Battery is fully charged
- Battery is fully discharged
- Call in progress
- Voicemail indicator
- Call log
- Speaker on
- Ringer off
- Answering machine
- Signal strength
- ECO mode\*

\*When the ECO mode is activated, this icon will replace the icon in the display.

### 3.5 The menus

Your phone offers a variety of features and functions grouped in the menus.

#### 3.5.1 Browsing the menus

The main menu includes the Date & Time, Ring Tones, Language, Key Beep, Conference and Answering Machine menus.

From standby mode, you can,

- Press the right softkey **MENU** to enter the main menu.
- Press the left softkey **CALLS** to enter the received calls and redial lists.
- Press to enter the phonebook.

**Tip**

Use or to navigate the menus.


**Tip**

**Exit to previous menu.** Press the right softkey **BACK** to exit to the previous menu. All unconfirmed changes will not be saved.

## 4 Getting started


### 4.1 Connect the base station

- 1 Connect the power adapter jack to the socket on the bottom of the base station.

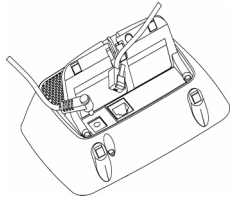


- 2 Connect the mains adapter to a standard wall outlet.

- 3 Connect the telephone line cord to the phone socket at the bottom of the base station and the wall phone socket.

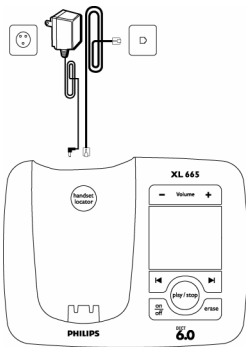

### 4.2 Connect your charger (For multi-pack models only)

- 1 Connect the AC power adapter to a standard wall outlet.

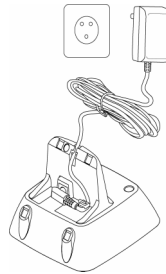

### 4.3 Install your handset

#### ⚠ Warning

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. Use only with Philips, type no.: Multi-Life 600mAh (2x 1.2V AAA 600mAh Ni-MH) rechargeable battery. Use only the recommended type supplied with this product. Dispose of used batteries according to the instructions.

#### 📌 Note

Charge the handset(s) for 24 hours before initial use!

- 1 The batteries are pre-installed in your handset. Before charging, remove the insulation foil by pulling the tab off your handset.





- 2 Place the handset on the base.



**Note**

Handset may get warm during initial charging. This is normal. The handset may take a few seconds to power up.

**4.4 Checking the battery level**

The battery icon displays the current battery level.

	Battery full
	Battery empty. Require charging.

Your handset may power down shortly if it is not charged after the battery is empty. If you are on the phone when the battery is nearly empty, you will hear warning tones. Your call may be cut off shortly after the warning.

**4.5 Setting the clock**

Your phone has a digital clock. Set the clock before initial use of the phone.

**4.5.1 Setting the date and time**

- 1 Press **MENU**.
- 2 Select **DATE & TIME**. Press **OK** to enter **SET DATE** mode.
- 3 Use the digit keys to enter the date.
- 4 Press **OK**.
  - The handset displays the time editing screen.
- 5 Use digit keys to enter the time. Press the right softkey to select **AM** or **PM**.
- 6 Press **OK**.
  - The setting is saved.

**4.6 What is standby mode?**

Your phone is in standby mode when it is idle. The standby screen displays the handset name, the handset number, the signal icon, and the battery icon.

**Note**

When the phone is idle for a few seconds, the backlight of your phone will go off. If the phone is left idle for the next 20 seconds, it will switch to **SCREENSAVER** mode displaying the time in digital clock format.

**4.7 Checking the signal strength**

The signal icon displays the link status between your handset and the base station. A steady icon means your handset and the base station are linked. A flashing icon means your handset and the base station are not linked.



If you move too far away from the base station while you are on the phone, you will hear warning tones notifying you that your handset is almost out of range - lost link. Take your handset closer to the base station or your call may be cut off shortly after the warning.



 **Note**

 
 
 
 
 
If your handset has lost link, you will not be able to make or receive any calls. You will also not be able to carry out many of the phone's functions and features.

**4.8 Missing handset(s)**

- 1** Press  on the base station.
  - *All the handsets connected to this base station ring.*
- 2** Press  on the base station again to stop handset locating.
  - *All the handsets stop ringing*

**OR**

Press any key on the handset to stop the handset locating for all handsets (except if you press **SILENT**, it will only stop handset locating for that handset).




#### 4.9 Menu structure

The table below describes the menu tree of your phone. From standby mode, you can:

- Press the right softkey **MENU** to enter the main menu.
- Press the left softkey **CALLS** to enter the received calls and redial lists.
- Press **Phonebook** to enter the phonebook.

Use the **Up** or **Down** keys to navigate within the menus and press left softkey **OK** to enter each option.

To exit the menu or operation, press the right softkey **BACK**.

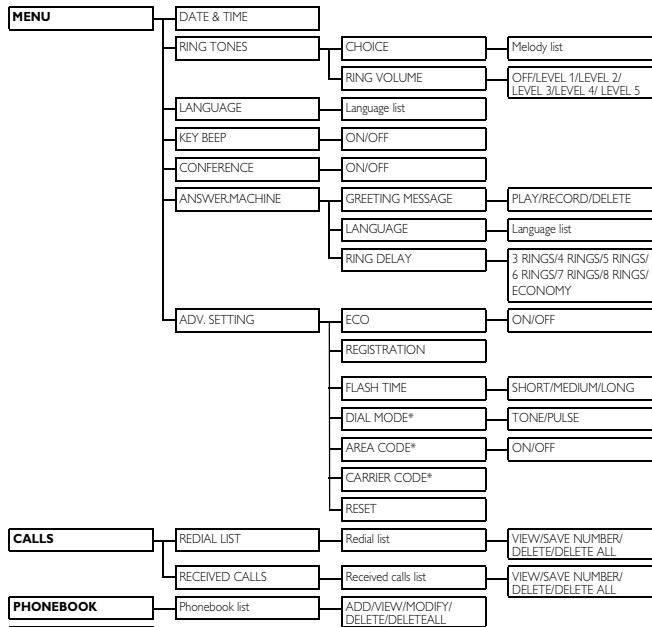

\*This menu item is country-dependent

## 5 Call

### Note


**Emergency Call.** This telephone is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.

### 5.1 Making a call

This section describes the different ways to make a call.

#### Note

**Signal Strength.** Check the signal strength before making a call and during a call. For details, see "Checking the signal strength" on page 15.

- 1 Press .
- 2 Dial the phone number. The number displays on the screen and is dialed out.

#### Note

**Call Timer.** The call timer displays the talk time of your current call.


#### Note

**Low Battery.** During a call, you will hear warning tones if your handset is almost out of battery. Charge your handset or your call may soon be cut off. For details, see "Checking the battery level" on page 15.


#### 5.1.1 Pre-dialing

Pre-dialing lets you view and edit the number before making the call.


- 1 Enter the phone number. The number displays on the screen. You can make changes before dialing out.

- 2 Press  to dial out the call.

#### \* Tip



Press **CLEAR** to erase a digit. Press and hold  to enter a pause. P displays on the screen.

#### 5.1.2 Calling from the redial list

- 1 Press **CALLS**.
- 2 Select **REDIAL LIST**. Press **OK**.
- 3 Select the record you want to call.
- 4 Press  to dial out the call.


#### 5.1.3 Calling from the phonebook

For details on the phonebook, see "Phonebook" on page 24.

- 1 Press  to access the phonebook.
- 2 Select the phonebook record you want to call.
- 3 Press  to dial out the call.

#### 5.1.4 Calling from the call log

You can return a call from the incoming (received or missed) call log. For details, see "Call log" on page 26.

- 1 Press **CALLS**.
- 2 Select **RECEIVED CALLS**. Press **OK**.
- 3 Select the call record you want to call.
- 4 Press  to dial out the call.

### 5.2 Ending a call

- 1 Press .

#### \* Tip

**Auto hang up.** Place the handset on the base or charging cradle to end the call automatically.

### 5.3 Answering a call

When you receive a call, your phone rings and the LED blinks. Press to answer the call.

#### **Warning**

When the handset rings during an incoming call, do not put the handset too close to your ear as the ringer volume may damage your hearing.

#### **Note**

**Caller ID Service.** Subscribe from your service provider.

#### **Tip**

**Missed Call Alert.** When a call is missed, your handset displays a notification message. The icon flashes.

### 5.3.1 Turning off the ringer

You can turn off the ringer for all incoming calls.

- 1 For details on the ringer setting, see "Personalizing your phone's sounds" on page 29.

#### **Tip**

**Silent Ringer.** When the phone is ringing, press **SILENT** to turn off the ringer for the current call.

### 5.4 During a call

This section describes the features that are available during a call.

#### 5.4.1 Adjusting the earpiece or loudspeaker volume

- 1 Press or to adjust the volume during a call.
  - *The volume is adjusted and the phone goes back to the call screen.*

Call

### 5.4.2 Muting the microphone

The mute feature allows you to speak to someone in the house privately.

- 1 Press **MUTE** during a call to mute the microphone.
  - *The caller cannot hear you, but you can still hear his voice.*
- 2 Press **UNMUTE** to un-mute the microphone.
  - *You can now communicate with the caller.*

### 5.5 Using handsfree

- 1 Press to turn on/off the speaker.

#### **Note**

 
**Handsfree.** Handsfree activation can suddenly increase the earpiece volume to a very high level. Make sure the handset is not too close to your ear.

### 5.6 Using quick dial

You can store up to 2 direct access memories in your phone. A long press on the keys or will store the number displayed on the phone as your quick dial number.

#### **Note**

**Replace memory.** If the selected memory is already assigned with a number, a confirmation message will be displayed when you attempt to store a new number. Press **YES** to replace the current memory with the new number.




---

### 5.6.1 Viewing quick dial number

**1** Press **m1** or **m2**.


- The stored number is displayed.

 **Note**

 
 
Press  to dial out the viewing number.

---


### 5.6.2 Calling from quick dial

**1** Press .


**2** Press **m1** or **m2** to dial out the call.



20

 

Call

 




 
## 6 Intercom and Conference Calls

An intercom call is a call to another handset that shares the same base station. A conference call involves a conversation between another handset and outside caller(s).

### 6.1 Calling another handset

#### Note

If the base station only has 2 handsets (yours and another handset) registered to it, you can press  to call the other handset instantly.


- 1 Press and hold  for more than 2 seconds. The handset(s) available for intercom is displayed.
- 2 Select or press the desired handset number. Press **OK**.
  - *The desired handset rings.*
- 3 Press  on the desired handset.
  - *The intercom is established.*
- 4 Press  to cancel or end the intercom call.

#### Note

You will hear busy tone if the handset you are calling is not available.

 
### 6.1.1 While you are on the phone

While talking on the phone, you can call another handset.


 
- 1 Press and hold  for more than 2 seconds during the call.
  - *The external caller is automatically being put on hold.*

- 2 Select or press the desired handset number. Press **OK**.
- 3 Wait for the called handset to answer your call.

### 6.1.2 To toggle between the calls

- 1 Press  to switch between the outside call and the intercom call.

### 6.2 Transferring a call

- 1 Press and hold  during a call.
- 2 Select or press the desired handset number. Press **OK**.
- 3 Press  after the called handset answers your call.
  - *The outside call is now transferred to the other handset.*


 
### 6.3 Making a conference call

A 3-way conference call is a call between you, outside caller(s), and another handset user in your house.

#### Note

A 3-way conference call requires 2 handsets that share the same base station.


#### During an external call,

- 1 Press and hold  for more than 2 seconds to initiate an internal call. The handset(s) available for intercom is displayed.
  - *The external caller is automatically being placed on hold.*
- 2 Select or press the desired handset number. Press **OK**.
  - *Your desired handset rings.*
- 3 Press  on the desired handset.
  - *The intercom is established.*



- 4 Press **CONF** to enter conference mode.
  - *You are now on a 3-way conference call with the external call and the desired handset.*
- 5 Press **INT** to end the conference call and return to intercom mode.

 **Tip**

 
 
 
**Auto Conference.** You can join an ongoing external call with another handset by pressing . See "Auto conference" on page 29.

**During the conference call,**

- 1 Press **INT** to put the external call on hold and go back to the internal call.
  - *The external call is put on hold automatically.*

 **Note**

Any handset hangs up during a conference call will leave the other handset still in connection with the external call.





## 7 Text and Numbers

You can enter text and numbers for handset name, phonebook records, and other menu items.


 
Example to write "PAUL"

Press 7 once: P  
 Press 2 once: A  
 Press 8 two times: U  
 Press 5 three times: L

### 7.1 Entering text and numbers

- 1 Find the key with the character you want.
- 2 Press it as many times as needed for the character you want.

**\* Tip**

**Editing.** Use **CLEAR** to delete and  to move the cursor.  
 or  to move the cursor.

#### Input table

Key	Characters (Upper case)
0	. 0 , / : ; " ' ! ; ? ; * + - %   ^ ~
1	Space 1 @ _ # = < > ( ) & € £ \$ ¥ [ ] { } ¨ § ...
2	A B C 2 Å Ä Æ Á Â Ã Ä Å Æ Ç Ć Ć
3	D E F 3 Đ Đ É Ê Ë Ì Í Î Ï Ð
4	G H I 4 Ğ Ĩ Ī Ĵ Ķ
5	J K L 5 Æ Ĺ Ļ
6	M N O 6 Ń Ņ Ň Ő Ó Ô Õ Ö
7	P Q R S 7 Ŕ Ŗ Ř Ś ś Ŝ ŝ Þ Æ Ø Σ
8	T U V 8 Ţ Ť Ů Ű Ų ų Ŵ ŵ
9	W X Y Z 9 Ÿ Ž ž Ž Ğ Ø Ω ≡ Ψ

## 8 Phonebook

Your phone has a phonebook that can store up to 100 records. You can access the phonebook from your handset. Each record can have a name up to 14 characters long and a number up to 24 digits long.

### 8.1 Viewing the phonebook

#### Note

Only one handset can view the phonebook at one time.

- 1 Press .
- 2 Select the contact you want to view.

#### Tip

**Options Menu.** While viewing the phonebook, you can press **OPTION** to access the phonebook options menu.

### 8.1.1 Searching a record

You can search the phonebook by scrolling or by searching the first character.

#### 8.1.1.1 Searching by scrolling


- 1 While in the phonebook, press  or  to scroll.

#### 8.1.1.2 Searching by the first character

- 1 While in the phonebook, press the digit key that contains the character you want to search by.

### 8.1.2 During a call

You can access the phonebook and view your records during a call.

- 1 Press  during a call.
- 2 Select the contact you want to view.

### 8.2 Calling from the phonebook

See "Calling from the phonebook" on page 18.

### 8.3 Adding a record

#### Note

**Memory Full.** If your phonebook is full, the handset displays a notification message. Delete some records before adding new ones.

- 1 Press .
- 2 Press **OPTION**. Select **ADD**. Press **OK**.

#### Note


**Text and Number Editing.** See "Text and Numbers" on page 23.

- 3 Enter the name. Press **OK**.
- 4 Enter the number.

#### Note

**Duplicate Record.** Contacts with identical number cannot be saved.

#### Tip


**Pause.** Press and hold  to insert a pause.

- 5 Press **SAVE** to confirm.
  - *Your new record is saved.*




---

#### 8.4 Editing a record

- 1 Press .
- 2 Select the contact you want to edit. Press **OPTION**. Select **MODIFY**. Press **OK**.
- 3 Edit the name if necessary. Press **OK**.
- 4 Edit the number if necessary. Press **SAVE** to confirm.
  - *The record is saved.*


---

 
 
 
#### 8.5 Deleting a record

- 1 Press .
- 2 Select the contact you want to delete. Press **OPTION**. Select **DELETE**. Press **OK**.
  - *The record is deleted.*

---


#### 8.6 Deleting all records

- 1 Press .
- 2 Press **OPTION**. Select **DELETE ALL**. Press **OK**.
  - *The handset displays a confirmation request.*
- 3 Press **OK** to confirm.
  - *All records are deleted.*



## 9 Call log

The call log stores the call history of all incoming (missed or received) calls. The incoming call history includes the caller name, number, call time and date. This feature is available if you have registered to the Caller ID service (CLI) with your service provider.

Your phone can store up to 20 call records. The call log icon  will blink to remind you of any unanswered received calls. If the identity of the caller is not withheld, the name (or number) of the caller will be displayed. The call records are displayed in chronological order with the most recent received call at the top of the list.

### Note


Call back from the call list may not work for all received numbers if the received number is not a valid number (e.g. Private).

### 9.1 Viewing the call records




- 1 Press **VIEW**. (or press **CALLS** if all calls have already been viewed before)
- 2 Select **RECEIVED CALLS**, and then press **OK** to enter the incoming call log.
- 3 Select the record you want to view. Press **OPTION**. Select **VIEW**. Press **OK**.

 
### 9.2 Editing the caller's number before returning a call

You must choose the correct format to dial the area code and number of the call log record chosen. The original incoming number from the call log will appear as a 7, 10 or 11-digit number. If it is a long distance call, the prefix digit 1 will automatically appear in front of the 10-digit local calls.

- 1 Enter the call list.
- 2 Select the record you want while browsing the log.
- 3 Press  at the number screen repeatedly until you change the number to the desired format.

For example, if the call log number appears as "1-234-567-8901".

- Press  once to display "567-8901".
- Press  twice to display "1-567-8901".
- Press  3 times to display "234-567-8901".

- 4 Press  to dial the current displayed number. The call is initiated.

### Note

When saving the call list entry to phonebook, the original incoming number will be saved instead of the current displayed number.

### 9.3 Returning a call

To call from the incoming call log, see "Calling from the call log" on page 18.



---

#### 9.4 Saving a call record to your phonebook

- 1 Enter the **RECEIVED CALLS** list.
- 2 Select the record you want while browsing the log. Press **OPTION**.
- 3 Select **SAVE NUMBER**. Press **OK**.
- 4 Enter and edit the name if necessary. Press **OK**.
- 5 Enter and edit the number if necessary. Press **SAVE**.
  - *The record is saved.*

---

 
 
#### 9.5 Deleting a call record

- 1 Enter the **RECEIVED CALLS** list.
- 2 Select the record you want while browsing the log. Press **OPTION**.
- 3 Select **DELETE**. Press **OK**.
  - *The record is deleted.*

---


#### 9.6 Deleting all call records

- 1 Enter the **RECEIVED CALLS** list.
- 2 Press **OPTION** to enter the options menu while browsing the log.
- 3 Select **DELETE ALL**. Press **OK**.
  - *The handset displays a confirmation request.*
- 4 Press **OK** to confirm.
  - *All records are deleted.*



Call log

 27



## 10 Redial List

The redial list stores call history of dialed calls. The dialed call history includes the name and number called. Your phone can store up to 10 redial records.

### 10.1 Viewing the redial records

- 1 Press **CALLS**.
- 2 Select **REDIAL LIST**, and then press **OK** to enter the redial list.
- 3 Select the record you want to view. Press **OPTION**. Select **VIEW**. Press **OK**.

### 10.2 Redialing a call

To call from the redial list, see "Calling from the redial list" on page 18.

### 10.3 Saving a redial record to your phonebook

- 1 Enter the **REDIAL LIST**.
- 2 Select the record you want while browsing the list. Press **OPTION**.
- 3 Select **SAVE NUMBER**. Press **OK**.
- 4 Enter and edit the name if necessary. Press **OK**.
- 5 Enter and edit the number if necessary. Press **SAVE**.
  - *The record is saved.*

### 10.4 Deleting a redial record

- 1 Enter the **REDIAL LIST**.
- 2 Select the record you want while browsing the list. Press **OPTION**.

- 3 Select **DELETE**. Press **OK**.
  - *The record is deleted.*

### 10.5 Deleting all redial records

- 1 Enter the **REDIAL LIST**.
- 2 Press **OPTION** to enter the options menu while browsing the list.
- 3 Select **DELETE ALL**. Press **OK**.
  - *The handset displays a confirmation request.*
- 4 Press **OK** to confirm.
  - *All records are deleted.*

## 11 Custom Options

Make this your phone - change the look and sound of the handset to suit your needs and preference.

### 11.1 Personalizing your phone's display

#### 11.1.1 Setting the display language

This feature only applies to model(s) with multiple-language support.

##### Note

Available languages for selection vary with different countries.

- 1 Press **MENU**.
- 2 Select **LANGUAGE**. Press **OK**.
- 3 Select the new setting. Press **OK**.
  - *The setting is saved.*

### 11.2 Personalizing your phone's sounds

#### 11.2.1 Setting your handset's ringer melody

You can choose from 10 polyphonic ring melodies and 5 standard ring melodies.

- 1 Press **MENU**.
- 2 Select **RING TONES > CHOICE**. Press **OK**.
- 3 Select the new setting. Press **OK**.
  - *The setting is saved.*

#### 11.2.2 Setting your handset's ringer volume

There are 6 ringer volume levels (including ringer off).

- 1 Press **MENU**.
- 2 Select **RING TONES > RING VOLUME**. Press **OK**.
- 3 Select the new setting. Press **OK**.
  - *The setting is saved.*

#### 11.2.3 Setting the key tone

Key tone is the sound you hear when you press a key on your handset.

- 1 Press **MENU**.
- 2 Select **KEY BEEP**. Press **OK**.
- 3 Select the new setting. Press **OK**.
  - *The setting is saved.*

### 11.3 Auto conference

Auto conference lets you join an external call with another handset by simply pressing ☺.

#### 11.3.1 Activating/Deactivating auto conference

- 1 Press **MENU**.
- 2 Select **CONFERENCE**. Press **OK**.
- 3 Select the new setting. Press **OK**.
  - *The setting is saved.*

## 12 Advanced Settings

Discover and explore the additional settings your phone offers! Find out how these features can benefit you and help you make the most of your phone.

### 12.1 ECO mode

You can set your phone to operate in ECO mode to save battery power.

- 1 Press **MENU**.
- 2 Select **ADV. SETTING > ECO**. Press **OK**.
- 3 Select the new setting. Press **OK**.
  - *The setting is saved.*

### 12.2 Registering handset(s)

The procedures described below are the procedures you will find in your handset. The procedures may vary according to the handset you want to register. In this case, refer to the manufacturer's instruction of the additional handset. Additional handsets must be registered to the base station before you can use them. Your base station can register up to 5 handsets. The system PIN may be required for registering or unregistering handsets.


#### 12.2.1 Auto registration

- 1 Place the handset on the base station. The handset will detect the base and start to register automatically.

- *Registration shall be completed in less than 2 minutes. The base automatically assigns a handset number to the handset.*

#### 12.2.2 Manual registration

If the base station is of a different make from XL665, the handset and base linking may not be achieved during auto registration mode. Follow the instructions below to register your handset manually to the base station.

- 1 Press **MENU**.
- 2 Select **ADV. SETTING > REGISTRATION**. Press **OK**.
  - *The display shows **PRESS LOCATOR KEY FOR 5 SEC.***
- 3 Press **OK** to continue.
- 4 On the base station, press and hold  for approximately 5 seconds.
- 5 Enter the system PIN (Pre-set: 0000). Use **CLEAR** to make corrections.
- 6 Press **OK** to confirm the PIN.
  - *Registration shall be completed in less than 2 minutes. The base automatically assigns a handset number to the handset.*

#### Note

If the PIN is incorrect or no base is found within a certain period, your handset displays a notification message. Repeat the above procedure if registration failed.

#### Note

The pre-set system PIN code is 0000 and it cannot be changed.



### 12.3 Flash selection

Flash is a signal that needs to be sent to the network when making or answering a second call. Your phone shall already be set up for use in your country. For details, consult your service provider.

#### 12.3.1 Setting the flash duration

There are 3 flash time options: Short, Medium, and Long. The number of available options varies with different countries.

- 1 Press **MENU**.
- 2 Select **ADV. SETTING > FLASH TIME**. Press **OK**.
- 3 Select the new setting. Press **OK**.
  - *The setting is saved.*


### 12.4 Dial mode

This feature only applies to model(s) that support both tone and pulse dialing. Dial mode is the telephone signal used in your country. Your phone supports tone (DTMF) and pulse (rotary) dialing. Your phone shall already be set up for use in your country. For details, consult your service provider.

#### 12.4.1 Setting the dial mode

- 1 Press **MENU**.
- 2 Select **ADV. SETTING > DIAL MODE**. Press **OK**.
- 3 Select the new setting. Press **OK**.
  - *The setting is saved.*

#### \* Tip

**Temporary Tone.** If your phone is in pulse dialing, press and hold  during a call for

temporary tone mode. 'd' displays. Digits entered after 'd' are sent out as tone signals (for this call only).

### 12.5 Area code management

This feature only applies to model(s) with area code support.

This feature automatically removes the area code of an incoming call. You can define an area code (up to 5 digits) you want to remove. The phone number will be saved in the call log without the area code.

#### 12.5.1 Activating area code removal

- 1 Press **MENU**.
- 2 Select **ADV. SETTING > AREA CODE**. Press **OK**.
- 3 Enter the area code. Press **OK**.
  - *The setting is saved.*

#### 12.5.2 Deactivating area code removal

- 1 Press **MENU**.
- 2 Select **ADV. SETTING > AREA CODE**. Press **OK**.
- 3 Use **CLEAR** to delete all the digits. Press **OK**.
  - *The setting is saved.*

### 12.6 Carrier code

This feature only applies to model(s) with carrier code support.

For some telephone service providers, you may need to add the carrier code when making a call outside of your local area. This feature automatically helps you

decide if the carrier code is needed when you are returning a call from the incoming call log.

You only have to program the carrier code of your service provider, and your phone will do the rest for you.

 **Note**

**Carrier Code.** It is a 2 or 3-digit code that represents a service provider. Consult your service provider to find out its code.

 **Note**

After reset, your handset's power switches off. It will switch back on in a few seconds after updating all the settings. All handsets return to the standby mode after reset.

To see a list of default setting, see "Default (pre-programmed) settings" on page 36.

---

#### 12.6.1 Activating carrier code

- 1 Press **MENU**.
- 2 Select **ADV. SETTING > CARRIER CODE**. Press **OK**.
- 3 Enter the carrier code. Press **OK**.
  - *The setting is saved.*

---

#### 12.6.2 Deactivating carrier code

- 1 Press **MENU**.
- 2 Select **ADV. SETTING > CARRIER CODE**. Press **OK**.
- 3 Use **CLEAR** to delete all the digits. Press **OK**.
  - *The setting is saved.*

---

#### 12.7 Restoring default settings

You can reset your phone settings to the original factory settings.

- 1 Press **MENU**.
- 2 Select **ADV. SETTING > RESET**. Press **OK**.
  - *The handset displays a confirmation request.*
- 3 Press **OK** to confirm.
  - *All settings have been reset.*

## 13 The Answering Machine

Your phone includes a telephone answering machine that records unanswered calls when it is on. Once switched on, your answering machine is ready to be used.


The LED message counter (two digits 7-segment display) on the base will show the number of the new messages when the answering machine is on.

--.	Memory full
AA.	The answering machine is being accessed remotely (on the handset or a touch tone phone)
[ 3 ]	Recording
00.	The 2-digit number shows: - The volume level during adjustment, or - The number of new messages received
.	There are no new messages.

You can use the answering machine menu on the handset to change the settings of the answering machine.

### 13.1 Turning the answering machine on or off

**Through the base,**

- 1 Press  to turn the answering machine on or off.

### Note

Once switched on, your answering machine will answer incoming calls after a certain number of rings depending on the ring delay setting. See "Setting the ring delay" on page 35.

### 13.2 Greeting message

The greeting message is the message your caller hears when the answering machine picks up the call. Your answering machine comes with a pre-recorded greeting message. You can record your personal greeting message to replace the one in your answering machine.

#### 13.2.1 Recording the greeting message

The maximum length of the greeting message is 3 minutes. After recording, your new greeting message will automatically replace the old one.

- 1 Press **MENU**.
- 2 Select **ANSWER.MACHINE > GREETING MESSAGE > RECORD**. Press **OK**.
- 3 Start recording after the beep.
- 4 Press **SAVE** to stop recording or recording will stop after 3 minutes.
  - *The recorded greeting message will play back automatically for review.*

### Tip

**Restore Pre-recorded greeting message.** If you want to restore the pre-recorded greeting message, simply delete your current greeting message.

### 13.2.2 Listening to the current greeting message

- 1 Press **MENU**.
- 2 Select **ANSWER.MACHINE > GREETING MESSAGE > PLAY**. Press **OK**.
  - The handset plays the current greeting message.

### 13.2.3 Deleting the greeting message

- 1 Press **MENU**.
- 2 Select **ANSWER.MACHINE > GREETING MESSAGE > DELETE**. Press **OK**.
  - The handset displays a confirmation request.
- 3 Press **OK** to confirm.
  - The pre-recorded greeting message is restored.

#### Note

The pre-recorded greeting message cannot be deleted.

### 13.3 Incoming messages (ICM)

Each message can be up to 3 minutes long. When you have received new messages on your answering machine, the LED message counter on the base will show the number and the handset will display a notification message. If you pick up the phone when the caller is leaving a message, the recording will stop and you can talk to the caller directly.

#### Note

**Memory Full.** The answering machine will not be able to take in new messages. Delete some messages to allow room for new messages.

34

### 13.3.1 Playing incoming messages

Incoming messages will be played back in the sequence they were recorded.

#### From the base

- 1 Press to start or stop message playback.
  - **Adjust the volume.** Press to increase or to decrease the speaker's volume.
  - **Skip backward.**
    - During message playback, press to replay the message from the beginning.
    - During the first second of the current message, press to play the previous message.
  - **Skip forward.** Press to skip to the next message.
  - **Stop playback.** Press .
  - **Delete current message.** Press .

#### Note

Deleted message(s) cannot be recovered.

### 13.3.2 Deleting an incoming message

#### From the base

- 1 Press during message playback.
  - The current message is deleted.

### 13.3.3 Deleting all old incoming messages

#### From the base

- 1 Press and hold during standby.
  - All old messages are permanently deleted.

The Answering Machine

 **Note**

Unread message(s) cannot be deleted, and deleted message(s) cannot be recovered.

**13.4 Call screening**

Call screening allows you to hear the caller while he is leaving a message. You can then decide if you want to talk to the caller directly.

**From the base**

You can use  to adjust the speaker's volume during call screening. The lowest volume level turns call screening off.

**13.5 Setting the ring delay**

Ring delay is the number of times your phone will ring before the answering machine picks up the call. This setting only applies when your answering machine is switched on. You can change this setting from 3 - 8 rings or economy.

- 1** Press **MENU**.
- 2** Select **ANSWER.MACHINE > RING DELAY**. Press **OK**.
- 3** Select the new setting. Press **OK**.
  - *The setting is saved.*

 **Tip**

**Economy.** This is a cost effective way to manage your messages when accessing your answering machine remotely. When economy is selected, your answering machine will pick up the call after 3 rings if you have new messages or 5 rings if you do not have any messages.

**13.6 Setting the answering machine language**

This feature only applies to model(s) with multiple-language support.

The answering machine language is the language for the pre-recorded OGM announced by the answering machine.

- 1** Press **MENU**.
- 2** Select **ANSWER.MACHINE > LANGUAGE**. Press **OK**.
- 3** Select the new setting. Press **OK**.
  - *The setting is saved.*

## 14 Default (pre-programmed) settings

Language	Country dependent
Handset Name	PHILIPS
Date	01/01/09
Date Format	MM/DD
Time	00:00
Time Format	12-hour
Phonebook List	Unchanged
Auto Hang Up	On
Flash Time	Country dependent
Area Code	[Empty]
Carrier Code	[Empty]
Handset Speaker Volume	Level 3
Conference	Country dependent
Receiver Volume	Volume 3
Handset Ring Volume	Level 3
Handset Ring Melody	Melody 1
Handset Key Beep	On
Incoming Call Log	[Empty]
Redial List	[Empty]
Dial Mode*	Country dependent

\* Country dependent features

### Answering Machine

Ans Machine Status	On
Base Call Screening	On
Greeting message memory	Pre-recorded greeting message
Incoming message memory	[Empty]
Voice Language	Country-dependent
Ring Delay	Economy
Base Speaker Volume	Level 3



---

## 15 Technical Data

---

### Display

- White LCD backlight

### General telephone features

- Dual mode caller name & number identification
- 10 polyphonic ring melodies and 5 standard ring melodies
- Conference call and voicemails
- Intercom

### Phonebook list, Redial list and Call log

- Phonebook list with 100 entries
- Redial list with 10 entries
- Call log with 20 entries

### Battery

- 2 x AAA NiMH Rechargeable 600mAh batteries

### Power consumption

- Power consumption at idle mode: around 600mW

### Weight and dimensions

 
 
 
 
- Handset: 138.4 grams  
174.0 x 56.3 x 30.0 mm (H x D x W)
- Base: 170.7 grams  
129.5 x 101.0 x 69.0 mm (H x D x W)

### Temperature range

- Operation: 0°C to +35°C (32°F to 95°F).
- Storage: -20°C to +45°C (-4°F to 113°F).

### Relative humidity

- Operation: Up to 95% at 40°C
- Storage: Up to 95% at 40°C





## 16 Frequently asked questions

[www.philips.com/support](http://www.philips.com/support)

In this chapter, you will find the most frequently asked questions and answers about your phone.

### Connection

#### Signal icon flashing

- The handset may be out of range. Move closer.
- If the handset displays **REGISTER YOUR HANDSET**, register the handset. See page 30.

### Set-up

#### Registration fails continuously

- Your base memory may be full. Delete an un-used handset and try again. See page 30.

### Sound

#### No dialing tone

- Check your phone connections.
- The handset may be out of range. Move closer.

#### No parking tone

- The handset may not be placed properly on the cradle. Try again.
- Charging contacts may be dirty. Disconnect the power supply first and then clean contacts with a damp cloth.

### Product behaviour

#### I cannot change the settings of my voice mail

- Operator voice mail is managed by your operator and not the phone itself. Please contact your operator should you want to change the settings.

#### Handset on the charger does not charge

 
 
- Check that the batteries are inserted correctly.
- Make sure the handset is placed properly on the charger. The battery icon animates while charging.
- Batteries may be defective. Purchase new ones from your dealer.

#### No display

- Check that the batteries are charged.
- Check the power and phone connections.

#### Bad audio (crackles, echo, etc.)

- The handset may be nearly out of range. Move closer to the base.
- The phone may be receiving interference from nearby electrical appliances. Move the base.







- The phone may be at a location with thick walls. Move the base.

**Handset does not ring**

 
- Check that the handset ringer is turned on. See page 29.

**Caller ID does not display**

- Service may not be activated. Check with your service provider.
- The caller's information may be withheld or is unavailable.



**Cannot make / answer a 2nd call**

- Service may not be activated. Check with your service provider.
- Check that the flash selection is correct. See page 31.



 **Note**

  If the above solutions do not help, remove the power from both the handset and the base. Wait for 1 minute and try again.



## 17 Appendix

### 17.1 Equipment approval Information

Your telephone equipment is approved for connection to the public switched telephone network and is in compliance with parts 15 and 68, FCC Rules and Regulations and the Technical Requirements for Telephone Terminal Equipment published by ACTA.

### 17.2 Notification to the local telephone company

On the bottom of this equipment is a label indicating, among other information, the US number and Ringer Equivalence Number (REN) for the equipment. You must, upon request, provide this information to your telephone company. The REN is useful in determining the number of devices you may connect to your telephone line and still have all of these devices ring when your telephone number is called. In most (but not all) areas, the sum of the RENs of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company. A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is

designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details. An applicable certification jacks Universal Service Order Codes (USOC) for the equipment is provided (i.e., RJ11C) in the packaging with each piece of approved terminal equipment.

### 17.3 Notes

- This equipment may not be used on coin service provided by the telephone company.
- Party lines are subject to state tariffs, and therefore, you may not be able to use your own telephone equipment if you are on a party line. Check with your local telephone company.
- Notice must be given to the telephone company upon permanent disconnection of your telephone from your line.
- If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this product does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

### 17.4 Rights of the Phone Company

Should your equipment cause trouble on your line which may harm the telephone network, the telephone company shall, where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately. In case of such

temporary discontinuance, the telephone company must:

(1) promptly notify you of such temporary discontinuance; (2) afford you the opportunity to correct the situation; and (3) inform you of your right to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68, FCC Rules and Regulations. The telephone company may make changes in its communications facilities, equipment, operations or procedures where such action is required in the operation of its business and not inconsistent with FCC rules and Regulations. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company must give you adequate notice, in writing, to allow you to maintain uninterrupted service.

#### 17.5 Interference Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference; and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is receiving the interference).
- Reorient or relocate and increase the separation between the telecommunications equipment and receiving antenna.
- Connect the telecommunications equipment into an outlet on a circuit different from that to which the receiving antenna is connected.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio/TV Interference Problems". This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402.

Please specify stock number 004-000-00345-4 when ordering copies.



---

### 17.6 Noise

Electrical pulse noise is present at one time or another. This is most intense during electrical storms. Certain kinds of electrical equipment, such as light dimmers, fluorescent bulbs, motors, fans, etc., also generate pulse noise. Because radio frequencies are susceptible to this, you may on occasion hear pulse noise through the receiver. This is usually only a minor annoyance and should not be interpreted as a defect of the unit.

---

### 17.7 FCC RF Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. For hand held operation, this phone has been tested and meets the FCC RF exposure guidelines. For Body-worn operation, use only with the belt clip. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

---

### 17.8 Hearing Aid Compatibility (HAC)

This telephone system meets FCC and Industry Canada standards for Hearing Aid Compatibility.

---

### 17.9 Privacy

Privacy of communications may not be ensured when using this telephone.

---

### 17.10 Additional Information

I.C. Notice

---

### 17.11 Terminal Equipment

 
 
 
#### Note

This equipment meets the applicable Industry Canada Terminal Equipment Technical Specifications.

This is confirmed by the registration number. The abbreviation, IC, before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment.

#### Note

The Ringer Equivalence Number (REN) for this terminal equipment is marked on the equipment itself. The REN assigned to each terminal equipment provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed five.





**17.12 Radio Equipment**

The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications RSS-213 and ICES-003 were met. This Class B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

**17.13 Do not attempt to repair or modify this equipment**

Repairs to certified equipment should be made by an authorized maintenance facility designated by the supplier. Any repairs or alterations made by the user to the equipment may render the equipment void in product warranty and compliance. This could also void the user's authority to operate the equipment.

**US / Canada Service Center**

Philips Accessories & Computer Peripherals  
North America  
1881 Route 46 West  
Ledgewood, NJ 07852  
Phone: (800) 233-8413

 
 
 
**17.14 The RBRC® seal**



The RBRC® Seal on the nickel metal hydride battery indicates that Philips Royal Electronics is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States and Canada. The RBRC® program provides a convenient alternative to placing used nickel metal hydride batteries into the trash or municipal waste, which may be illegal in your area.

Philips's participation in RBRC® makes it easy for you to drop off the spent battery at local retailers participating in the RBRC® program or at authorized Philips product service centers. Please call 1-800-8-BATTERY for information on Ni-MH battery recycling and disposal bans/restrictions in your area. Philips's involvement in this program is part of its commitment to protecting our environment and conserving natural resources.

RBRC® is a registered trademark of Rechargeable Battery Recycling Corporation.



## 17 Index

### **A**

Accessories 10  
Advanced Settings 30  
Answering a call 19  
Answering Machine 33  
Area code 31  
Auto conference 29  
Auto prefix 31

### **C**

Call 18  
Call barring 31  
Call log 26  
Call screening 35  
Calling from the call log 18  
Calling from the phonebook 18, 24  
Carrier code 31  
Clock and alarm 24  
Conference Calls 21  
Conformity 8  
Connect the base station 14

### **D**

Default settings 36  
Deleting a record 25  
Deleting all records 25  
Dial mode 31  
Display icons 13  
Display language 29

### **E**

Ending a call 18  
Entering text and numbers 23

### **F**

Flash selection 31  
Frequently asked questions 38

### **G**

Greeting message 33

### **H**

Handset locator 16  
Handsfree 19

44

### **I**

Intercom 21

### **K**

Key tone 29

### **M**

Making a call 18  
Making a conference call 21  
Menu structure 17  
Muting the microphone 19

### **O**

Overview of the base 12  
Overview of the handset 11

### **P**

Personalizing your phone's display 29  
Personalizing your phone's sounds 29  
Phonebook 24  
Power requirements 7  
Pre-dialing 18

### **R**

Recycling & disposal 9  
Redial List 28  
Redialing a call 28  
Registering handset 30  
Restoring default settings 32  
Ringer melody 29  
Ringer volume 29

### **S**

Setting the clock 15  
Setting the ring delay 35

 
 
 
 
 
 
### **T**

Transferring a call 21


### **W**



Wall mounting 14

Index



UFZZ01219UZ(0)

 

  

© 2008 Koninklijke Philips Electronics N.V.  
All rights reserved  
Reproduction in whole or in part is prohibited without the  
written consent of the copyright owner

Document number: 01219UZ(0)



Please Recycle

Printed in Vietnam

