 


User Manual

P9

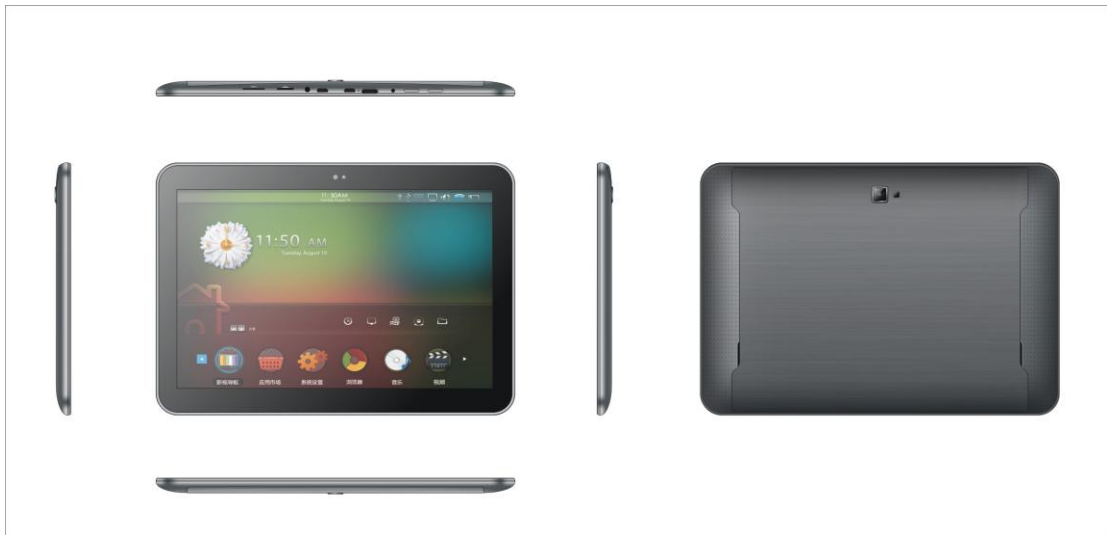

Contents

| | |
|--|----|
| Welcome..... | 3 |
| Important Notices..... | 3 |
| Keys and Functions..... | 4 |
| I. Getting Started..... | 5 |
| 1.1 Turn on/off..... | 5 |
| 1.1.1 Turn on..... | 5 |
| 1.1.2 Turn off..... | 5 |
| 1.1.3 Launcher & PIPO launcher..... | 5 |
| 1.2 Lock/unlock the screen (sleep mode)..... | 7 |
| 1.3 Connect to computer..... | 7 |
| II. Your Home Screen..... | 7 |
| 2.1 Change wallpaper:..... | 8 |
| 2.2 Add/delete applications on home screen:..... | 8 |
| 2.3 Add widgets to home screen:..... | 9 |
| III. Network Connection..... | 9 |
| 3.1 Wi-Fi..... | 9 |
| 3.1.1 Turn on Wi-Fi..... | 9 |
| 3.1.2 Turn off Wi-Fi..... | 9 |
| 3.1.3 Add a Wi-Fi network..... | 10 |
| 3.2 3G Network..... | 10 |
| 3.2.1 External 3G Network..... | 10 |
| 3.2.2 Internal 3G support (optional)..... | 10 |
| IV. Internet Browsing..... | 11 |
| 4.1 Internet Browsing..... | 11 |
| V. Install and Manage Apps..... | 11 |
| 5.1 Install Apps..... | 11 |
| 5.2 Manage Apps..... | 12 |
| VI. Multi-media Functions..... | 12 |
| 6.1 Music..... | 12 |
| 6.2 Video..... | 13 |
| 6.2.1 HDMI output..... | 14 |
| 6.3 Gallery..... | 14 |
| 6.4 Camera..... | 15 |
| 6.5 E-book reader..... | 15 |
| 6.6 Sign function..... | 16 |
| 6.7 Incstage Apps..... | 17 |
| VII. Settings..... | 21 |
| VIII. Battery..... | 23 |
| IX .Firmware Upgrading Procedures..... | 24 |
| Troubleshooting..... | 28 |

Welcome

Thank you for purchasing this tablet.

It brings you much convenience for your business (supports Word, Excel, send & receive e-mails...) and entertainment (supports 3D game, chatting, movie playback, eBooks.....).

 
Running on **Android 4.2**, with a 1.6GHz processor and highly responsive capacitive touch screen, it brings you wonderful user experience.

Before beginning, please refer to this user manual carefully.

Important Notices

- ⊙ While using the earphone, if the volume is excessively high it may cause hearing damage. So please adjust the volume of the player to a moderate level and balance the time of using.
- ⊙ Do not disconnect the tablet suddenly when formatting or uploading and downloading, which can lead to program errors.
- ⊙ Do not dismantle the tablet by yourself, and do not use alcohol, thinner or benzene to clean its surface.
- ⊙ The tablet does not support USB charge. If you want to charge the tablet, please use the AC adaptor supplied. Please use the original accessories.
- ⊙ Read this User Manual carefully, Make sure you know how to upgrade the tablet, otherwise do not upgrade it by yourself.

Keys and Functions

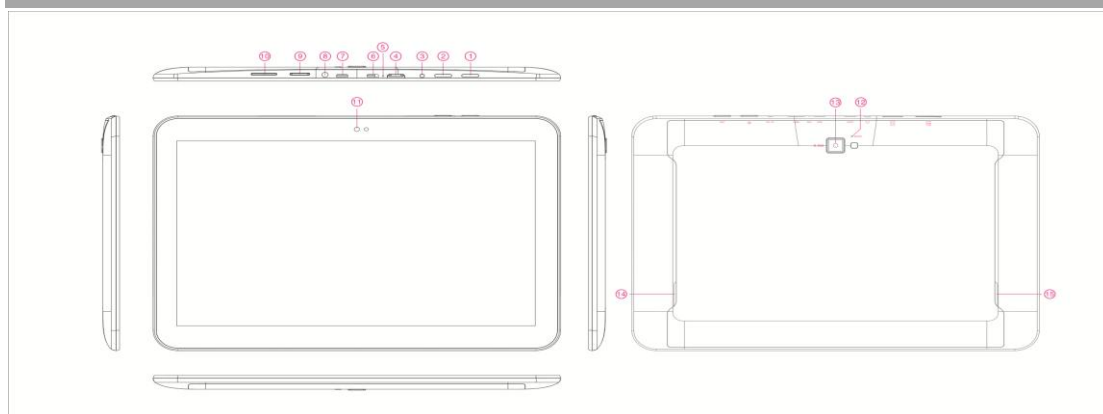


| | |
|--------------------------|--|
| 1. ESC Key | Tap to return to the previous screen/ page. |
| 2. Power and lock key | Hold and press to turn on or turn off this unit. Briefly press to turn on or turn off the screen. |
| 3. Power jack (DC input) | Connect to a 5V 2.5A output adaptor as included in the accessories |
| 4. HDMI | Connect to TV output via a HDMI cable |
| 5. MIC | Microphone for recording voice |
| 6. USB port | Connect to a computer to transfer data (e.g., music, videos, photos, files). |
| 7. HOST port | USB OTG, supports mouse, keyboard, USB flash disk, etc, with a converting cable |
| 8. Earphone jack | To connect your earphone |
| 9. TF card slot | To insert your TF card |
| 10. SIM card slot | To insert your SIM card (Data only, only 3G version is with this card slot) |
| 11. Front Camera | 2M pixels camera |
| 12. Light Sensor | Improve your photo quality |
| 13. Rear Camera | 5M pixels auto focus |
| 14. Speaker | AAC speaker |
| 15. Speaker | AAC speaker |

I. Getting Started

1.1 Turn on/off

1.1.1 Turn on

 To start your tablet, press and hold the power key at the right side of your tablet for a while. Tap and drag the lock out of the circle to unlock.

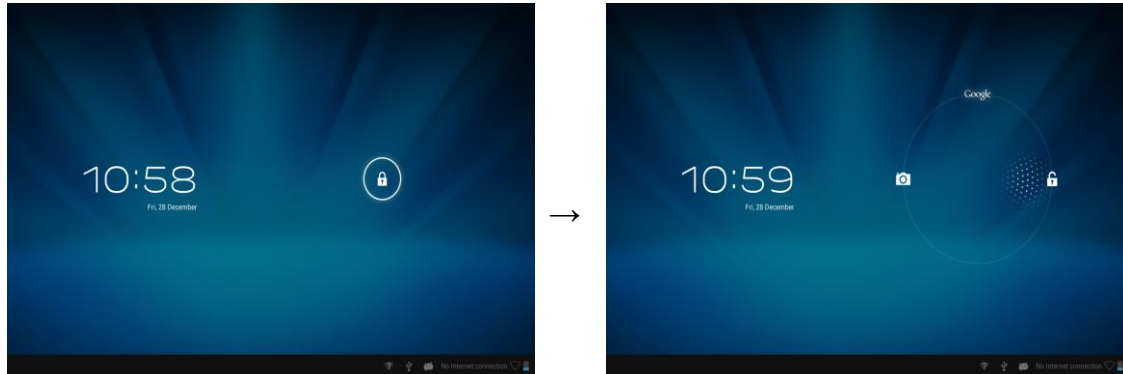

Tap and drag the lock  out of the circle to unlock.

 
Drag the lock to right: you will go to the home screen.

 
Drag the lock to left: you will go to camera directly.

1.1.2 Turn off

To power off your tablet, press and hold the power button until the “Would you like to shut down?” dialog appears and tap “OK” to power it off.

1.1.3 Launcher & PIPO launcher

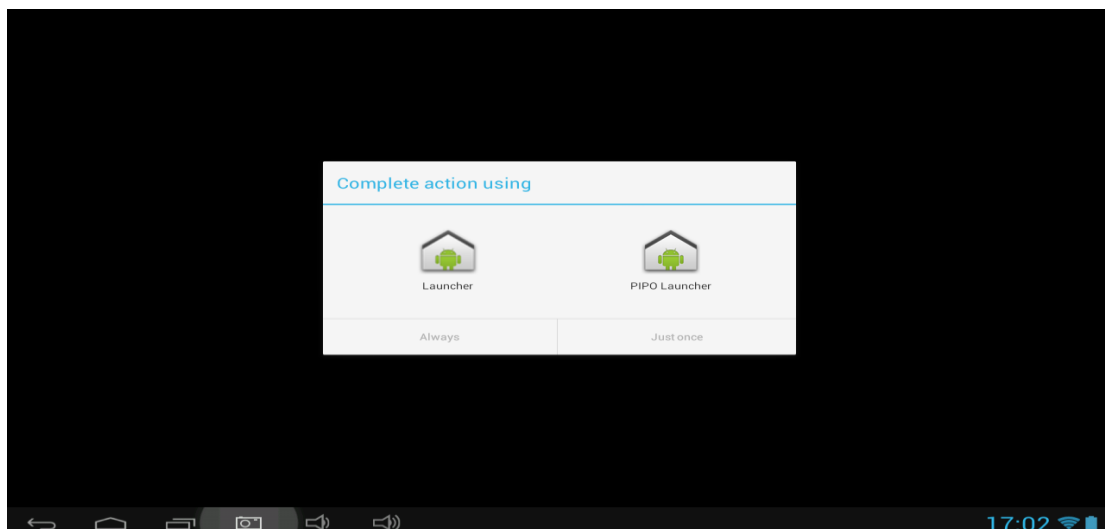

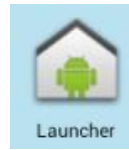


There are two kinds of launcher available, click "Launcher" , you will go to the regular PIPO interface.



Click "PIPO Launcher" , you will go to the special interface.

 Like this:

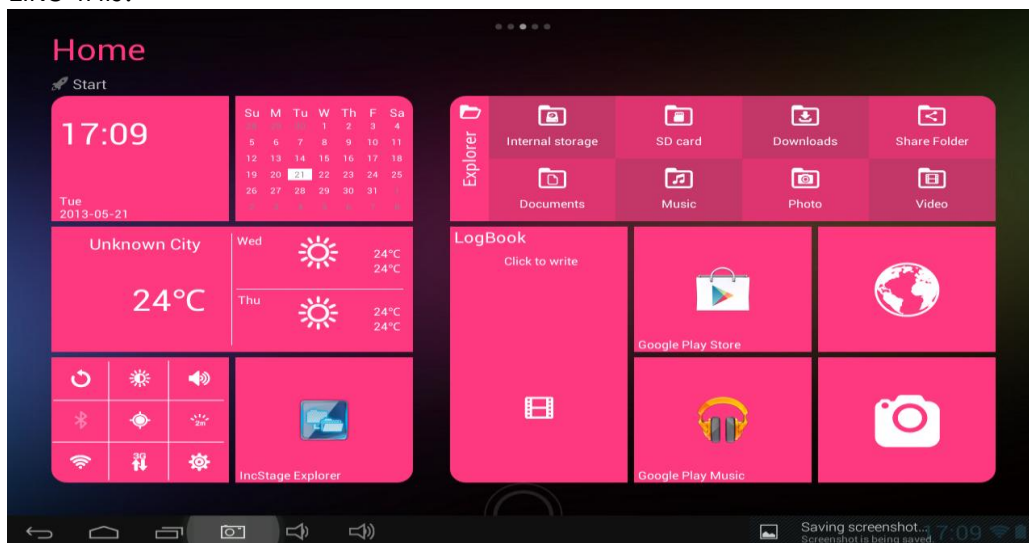

1.2 Lock/unlock the screen (sleep mode)

 
To save battery, you should put your tablet in sleep mode by turning off the LCD display. To do this, shortly press the power key. Press it again to wake up the screen.

1.3 Connect to computer

You can connect your tablet to your computer with the supplied USB cable so you can transfer media files.


If your computer is XP system, please install a Windows Media Player 11 for your computer before transfer media files as android 4.1 system needs Windows Media Player 11 support.


II. Your Home Screen

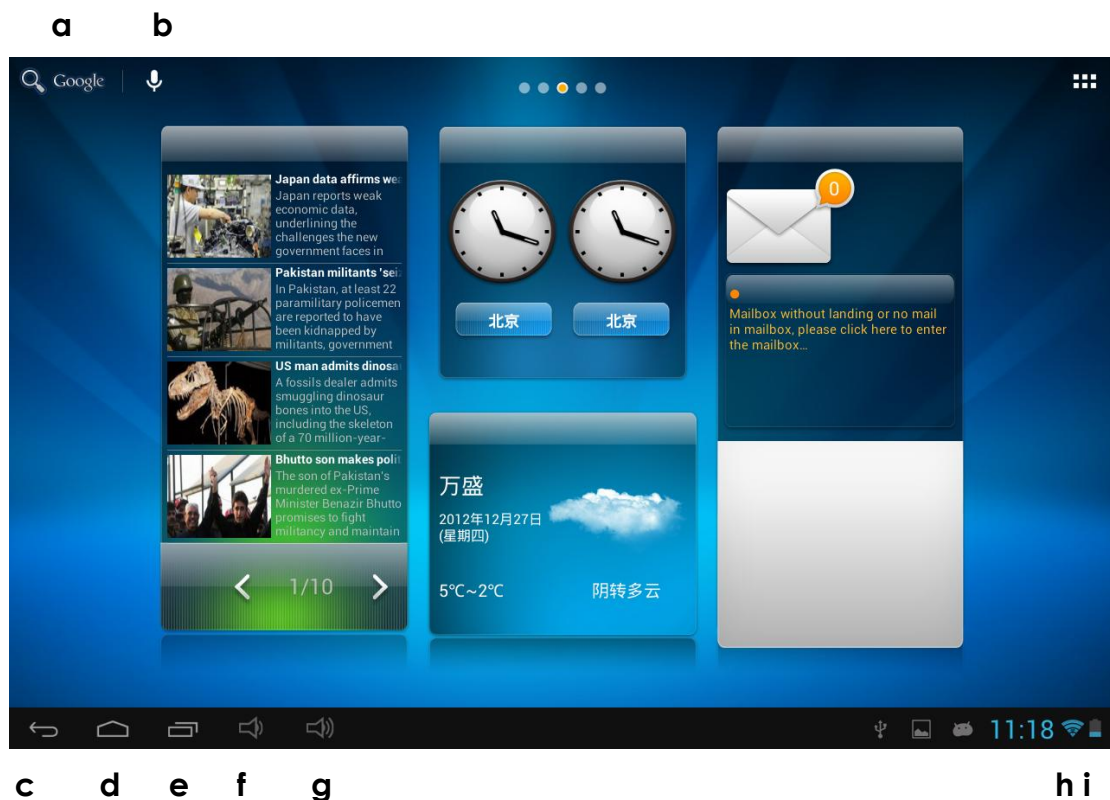

| | |
|----------------------|---|
| a. Google search | Tap to enter Google search page |
| b. Voice search | Tap to open voice search |
| c. ESC key | Tap to return to the previous screen/ page. |
| d. Home | Tap to return to your home page |
| e. Recent operations | Tap to show your recent operations |
| f. Volume - | Tap to lower the volume |

| | |
|-------------------|---|
| g. Volume + | Tap to upper the volume |
| h. WIFI Signal | There will be WIFI signal when WIFI connected |
| i. Battery status | Show battery status |

 Tap  (All Apps launcher) on the upper right corner to enter into all apps panel:

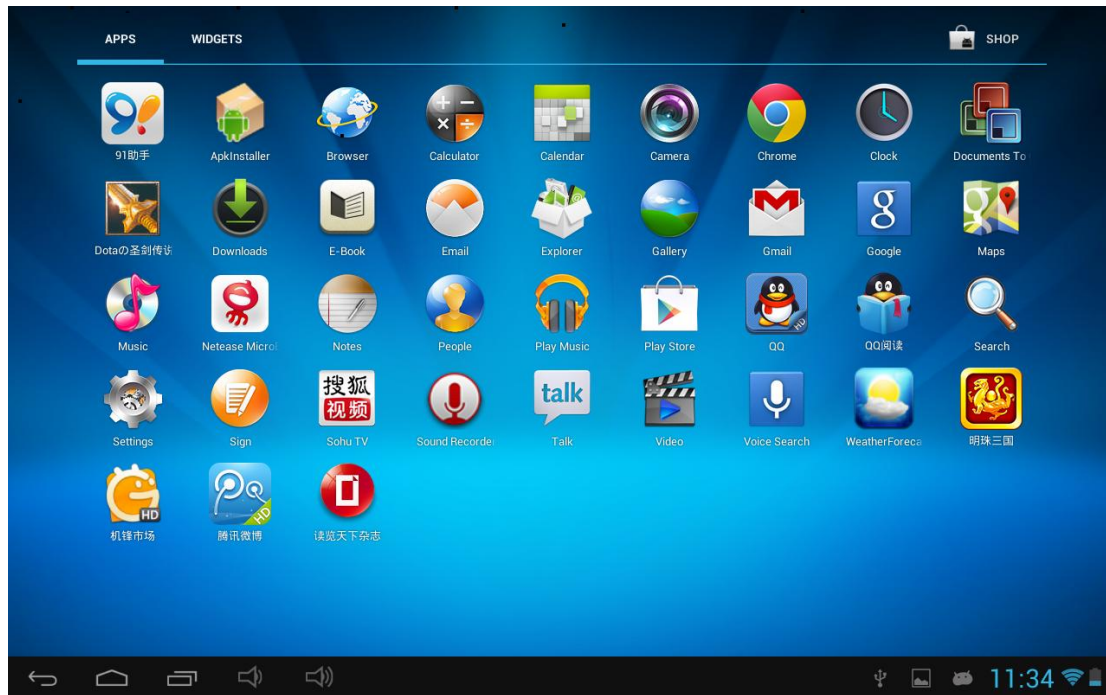


2.1 Change wallpaper:

Tap the “Settings” icon on the all apps panel, you will see a pop-up options; Enter into “Display” interface, you can choose wallpaper from Gallery, live Wallpapers or Wallpapers.

2.2 Add/delete applications on home screen:

There are several apps in the home screen, you can also add more frequently-used app icons in this home page and delete some less frequently-used ones.

Tap the app launcher in the top right corner to go to all apps panel, tap and move the app you want to the home screen.

To delete an app from home screen, tap and hold it, and then move it to the remove icon .

2.3 Add widgets to home screen:

Tap all Apps launcher→Tap WIDGETS. There are Analog clock, bookmarks, calendar, Email, and lots of other widgets. Drag the widget you want to the home screen.

Tips: Besides your home screen, you can access to other four panels by sliding left or right in your home screen. You can also customize these panels.

 
III. Network Connection


3.1 Wi-Fi

Wi-Fi can only be used when it connects with home Wi-Fi Access Point (AP) or a free unsecured Wi-Fi hotspot. Under “Wireless & networks”, tap “Wi-Fi” to turn it on. After a moment, your Wi-Fi networks list should populate. If you need to rescan for available networks, tap "scan"

3.1.1 Turn on Wi-Fi


Within the App Panel, tap “Settings” → “Wi-Fi” to turn on wifi.

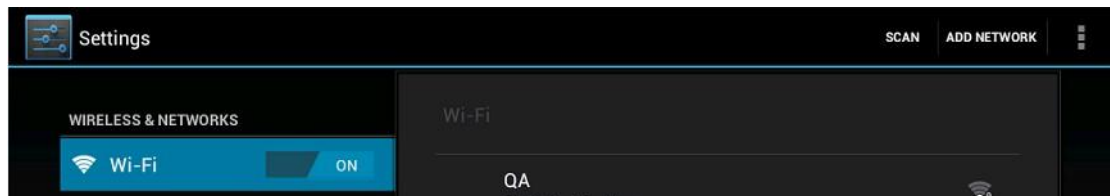


Your tablet lists the networks it finds within range. Tap a network to connect. If necessary, enter Network SSID, Security, and Wireless password, and tap “Connect”. When your tablet is connected to the network, the wireless indicator  appears in the status bar. Waves indicate connection strength.


3.1.2 Turn off Wi-Fi

 Please turn off Wi-Fi if you're not using it to save the battery. To turn off Wi-Fi, Tap it again.

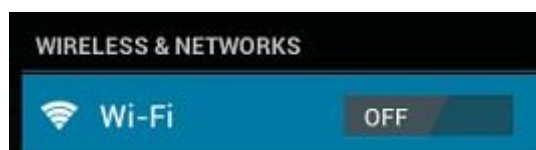

3.1.3 Add a Wi-Fi network

Users may also add a Wi-Fi network under “ settings”. In “settings”, tap “” on the upper right corner. Enter the SSID (name) of the network. If necessary, enter security or other network configuration details. Touch Save.

Note: Network status icons turn yellow  if you have a Google Account added to your tablet and the tablet is connected to Google services, for syncing your Gmail, Calendar events, contacts, for backing up your settings, and so on.

3.2 3G Network

3.2.1 External 3G Network

A 3G network is a mobile network that allows high-speed data access and advanced network capacity.

This tablet supports external 3G network by a 3G dongle. You can connect the 3G dongle to **HOST** port via the OTG convertor cable (the shorter one). You can find the convertor cable in the accessories. However, this tablet supports some 3G dongles, but not all dongles. If you need a special dongles to support, please check with the shop before you buy it.

3.2.2 Internal 3G support (optional)

Internal 3G is an optional function. If you purchase this tablet with a SIM card slot, you can access to the Internet via your 3G SIM card while Wi-Fi network is not available. Please insert your 3G card into the SIM card slot of the tablet, and the tablet will obtain 3G signal automatically.

Frequency: This tablet support WCDMA SIM card

HSPA/WCDMA: 2100/900MHz

GSM/GPRS/EDGE Quad band: 850/900/1800/1900

3G download speed maximum 7.2M bit/s, upload maximum: 5.76M bit/s

 
IV. Internet Browsing


4.1 Internet Browsing

Before using your browser, make sure Wi-Fi or internet is connected.

In your app panel, Tap the browser  icon to open your browser.

Tap the address bar, the Android keyboard will appear for your entry of keywords or URL.

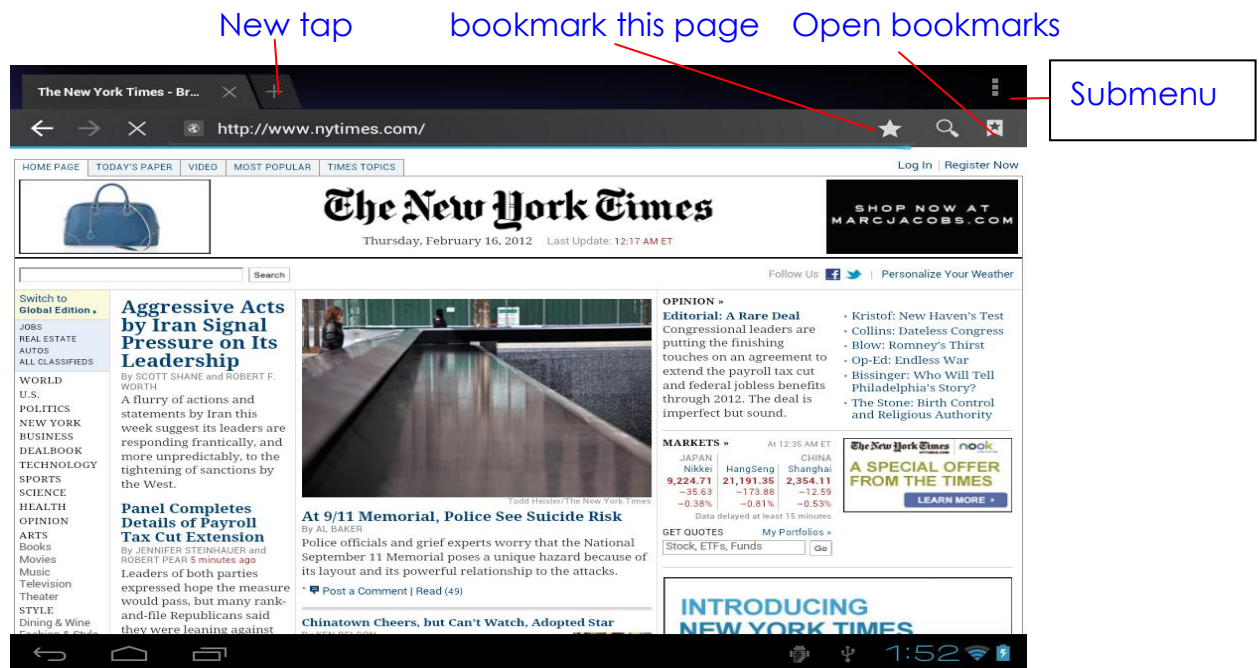

Tap the  icon in the top corner of the browser page to open the submenu.

V. Install and Manage Apps

5.1 Install Apps

Go to the "Apk Installer"  to install and manage your apps. To install an application, follow below steps:

 
1. Tap to open the 'APKInstaller' → 'Install' → then tap "Internal Memory" or "TF Card". Available APK files will appear at the right side. Touch the required one to install it.

Note: Make sure the APK file is workable on android 4.1 and the suffix is .apk. e.g. "angrybirds.apk".

In some cases, there may be no icon on the Apps Panel after an .apk file is installed. Possible reasons may be that this app is not compatible with your OS or the downloaded .apk file is a broken one so you may need to download a full version.

5.2 Manage Apps


Tap to open the 'APKInstaller' → 'Manage'. Tap the app and then you can launch, export, and uninstall it.

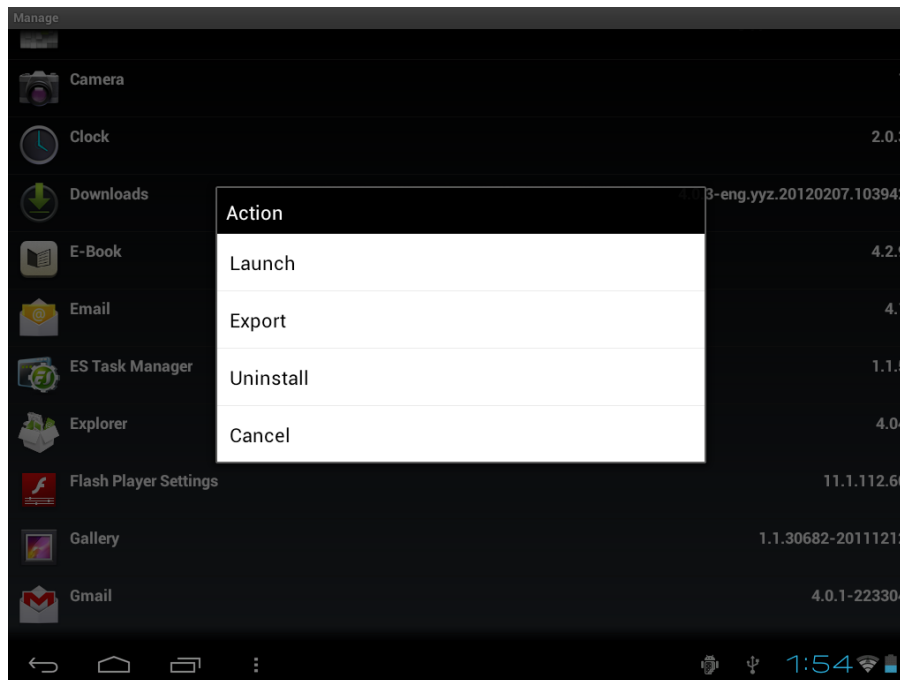



You can also go to "AppS" under "Settings" to manage apps.

VI. Multi-media Functions

6.1 Music

 After loading your music into your tablet, tap the music icon  to open the music player. You can select songs by Artist, Albums, songs or Play lists. Tap to select. The media player allows you to shuffle, skip, or pause your current selection and even displays the album artwork when available.

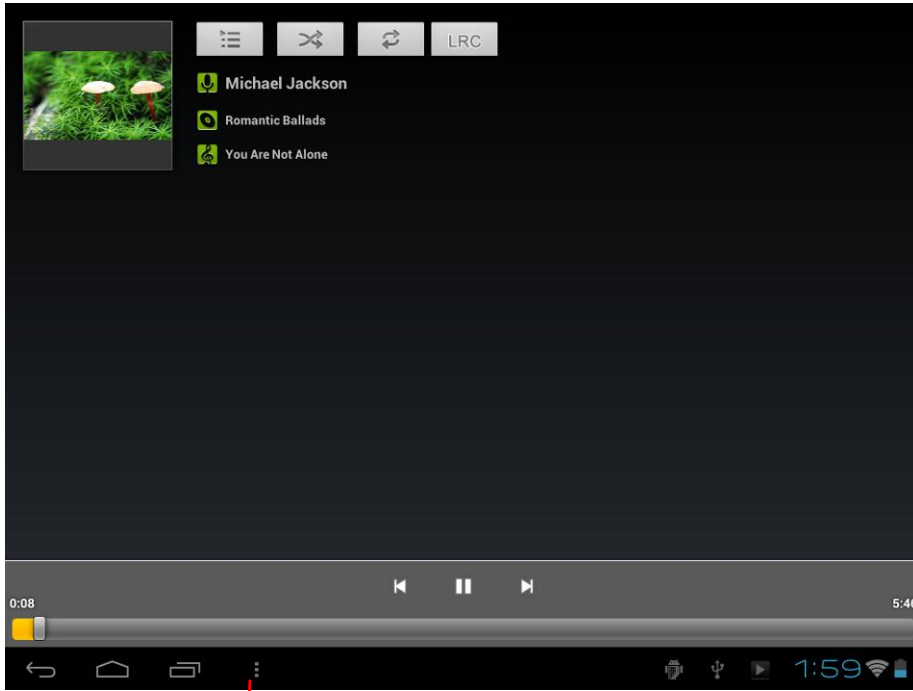


Tap  in the bottom line to open a submenu in music playing page.


6.2 Video

You can play videos saved in your tablet or TF card. To play, tap Video

  icon to launch the video player:

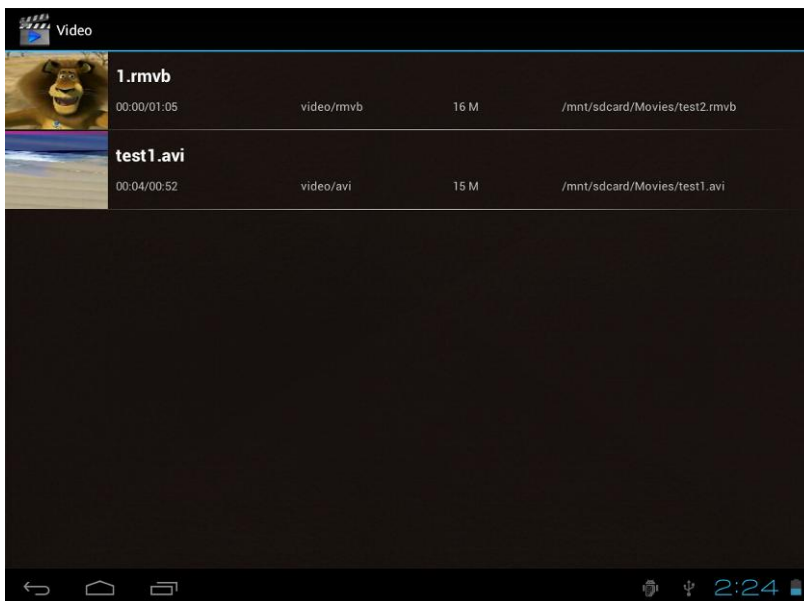

 Tap the video you would like to play. Tap the screen to show the video tool bar. You can play back, fast forward, pause your video here. You can also add bookmark for your video, adjust brightness, or set screen ratio here. Here is the toolbar:

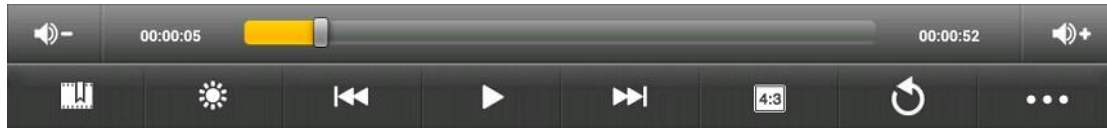

With the Wi-Fi on, you are also able to view an on-line video.

6.2.1 HDMI output

 
- a. Tap 'Video player' or other video players and play a required movie.
- b. Adjust your TV set and select “HDMI” output
- c. Connect the tablet to your TV via HDMI cable, and wait for a few seconds for your TV set to receive signal.

You can also operate on your tablet while HDMI connected..

6.3 Gallery

You can view, show off, and even edit your digital pictures on the tablet's full color, high-resolution display. After loading your media, tap

Gallery  to display your pictures:

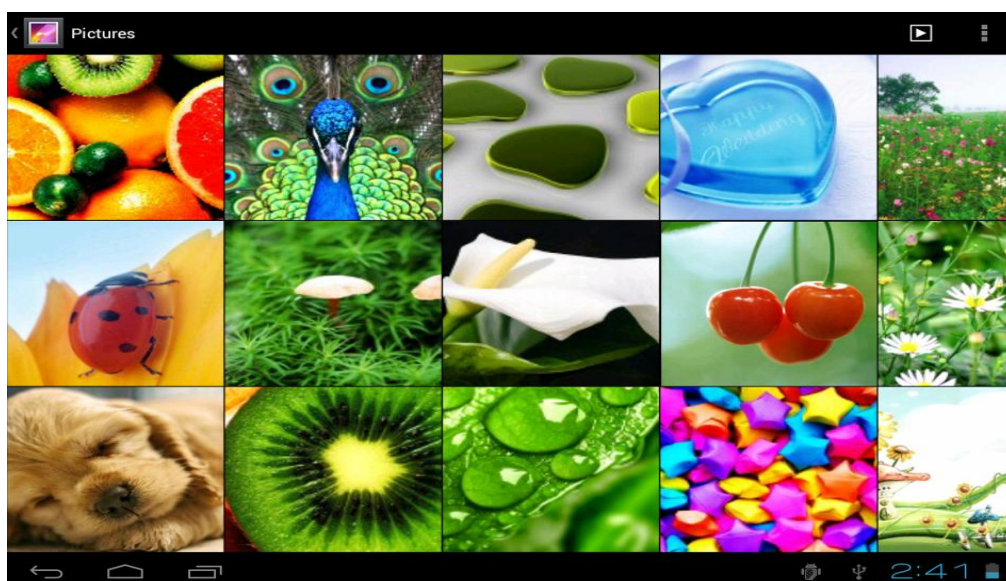


Tap the picture you want to display it, and slide right or left to show other pictures.

Tap the menu icon, you can edit, rotate, crop, or set it as wallpaper.

 
6.4 Camera



Tap the  icon to open camera. Your tablet is built in 2M front camera and 5M rear camera. You can take a photo, or a video both by front camera and rear camera.

Note: After you power on your tablet, you can go to camera directly by drag the lock to left.

Note: Auto Focus function, tap anywhere on the camera screen, the camera will focus on the spot you are tapping to. As the picture shows.

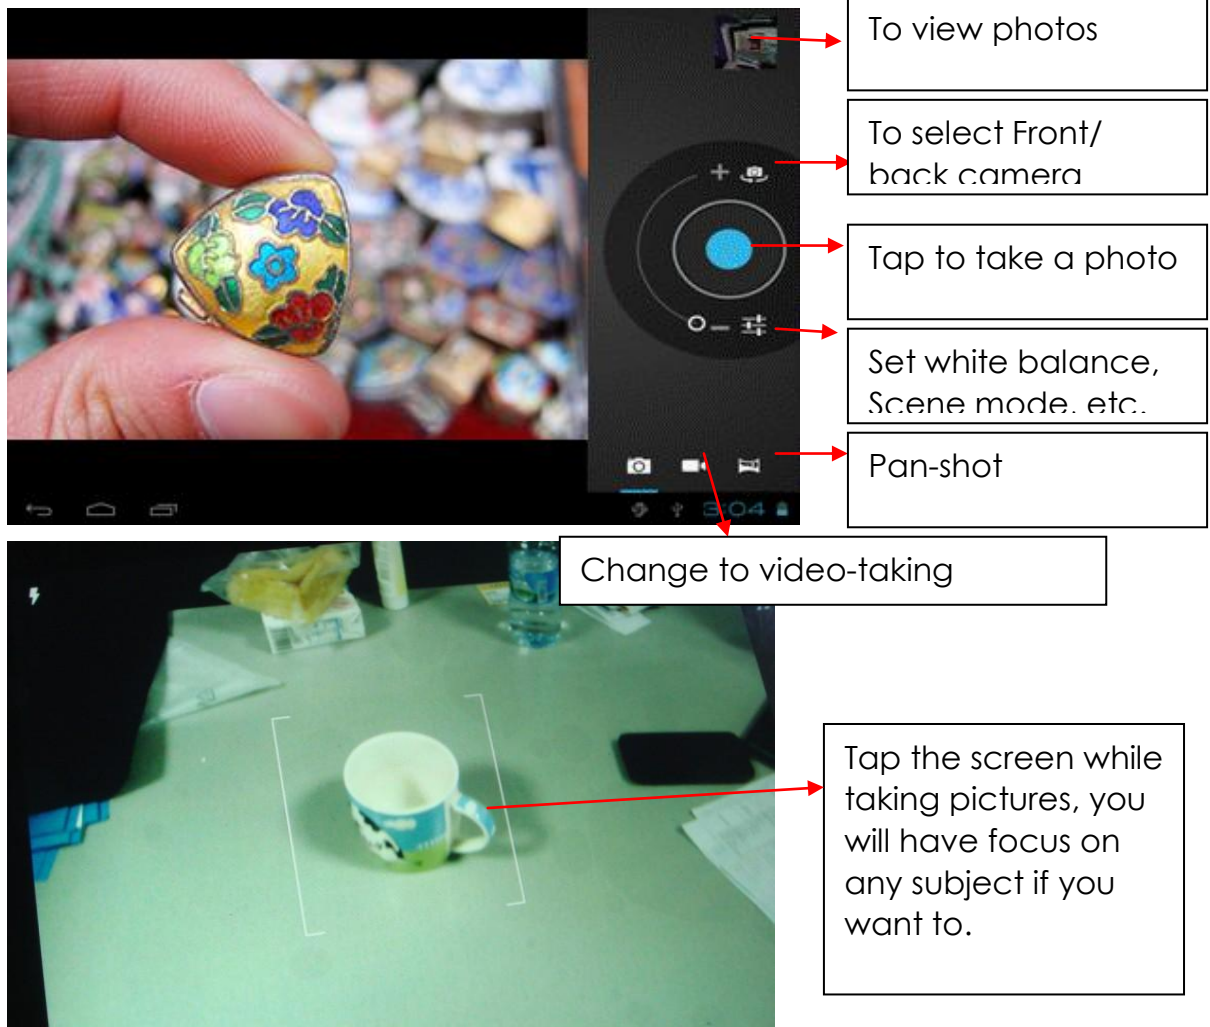


6.5 E-book reader

The tablet supports many eBook formats like PDF, Text, E-Pub, FB2....



 Tap the “e-book” icon to open e-book shelves. Tap an e-book to open the book and read.

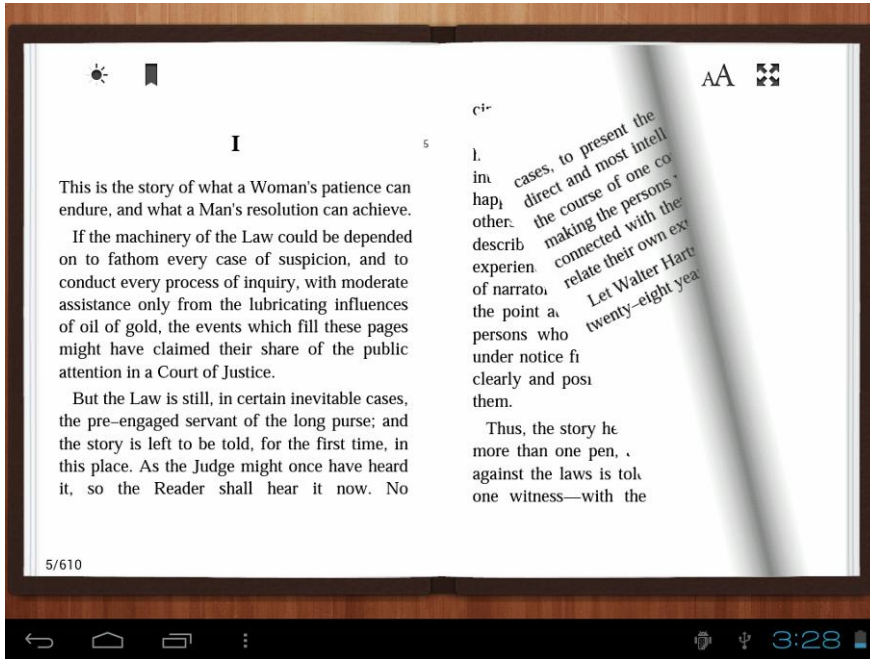

You can page up or page down by sliding your finger right or left.

 


Tap the menu icon to check the sub-menus. You can set the font size, Go to Page jump; check your bookmarks, set the auto flip time, etc.

6.6 Sign function



Tap the “sign” icon to open this.

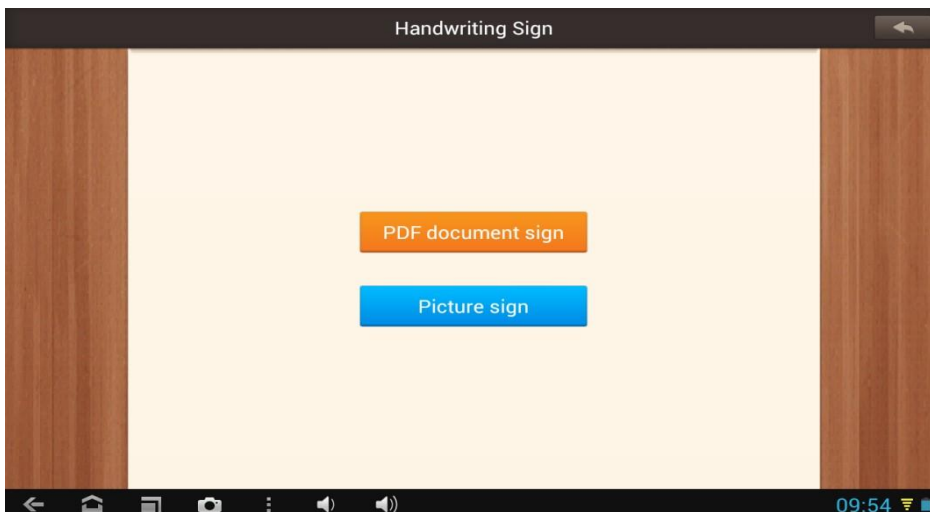

You can make notes and sign your signature on PDF, Picture file.

Just tap **PDF document sign** to choose the PDF file from your tablets, make sure you have those files in your tablets.

If you want to make note or want to sign on pictures, Please tap

Picture sign. You may edit the documents and pictures as you want.



 
6.7 Incstage Apps

Incstage Photo, Incstage Presenter, Incstage Reader, Incstage share for sharing and displaying synchronization.

6.7 .1 Incstage photo



Tap Incstage Photo  , enter into the App,

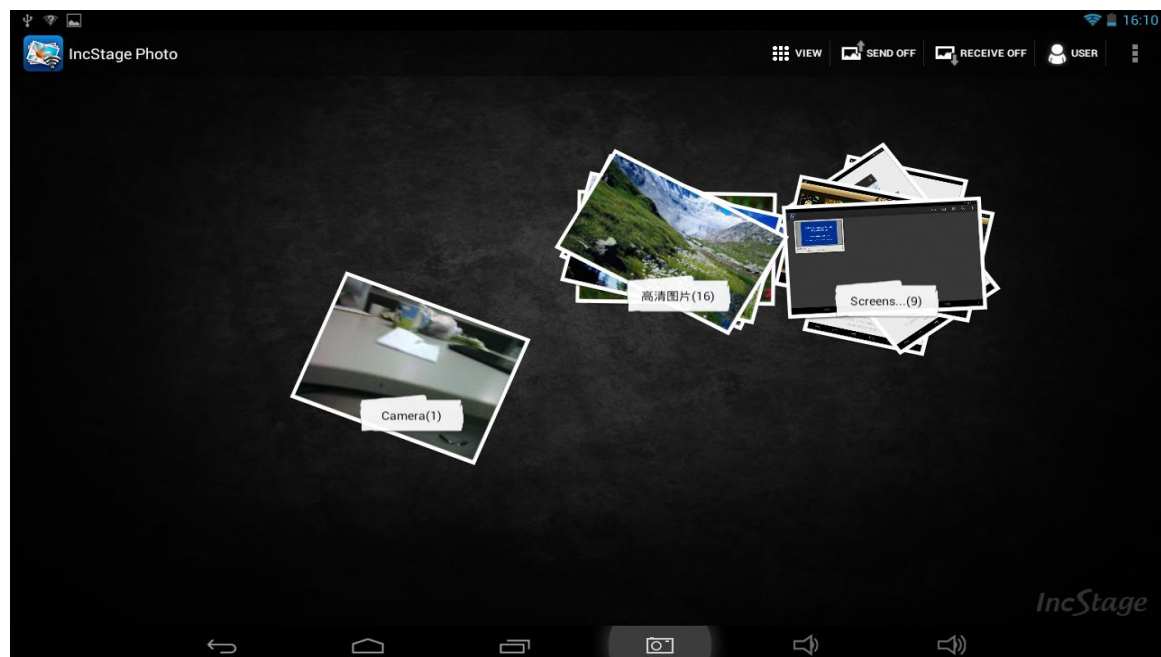



Turn on "send on/off", "receive on/off", you pictures on your PIPO could be displayed on another Device. Make sure that all Incstage photo apps in different PIPO Device are opened at the same time, and you connect all Device to the same WIFI.

6.7 .2 Incstage presenter



 
Incstage Presenter



Enter into the App, tap" import" to import PPT into this App. If



you want to share your PPT with another Device, tap "share" on the top right corner, to invite another PIPO tablet, to achieve displaying synchronization. Make sure that all Incstage presenter apps in different PIPO Device are opened at the same time, and you connect all Device to the same WIFI.

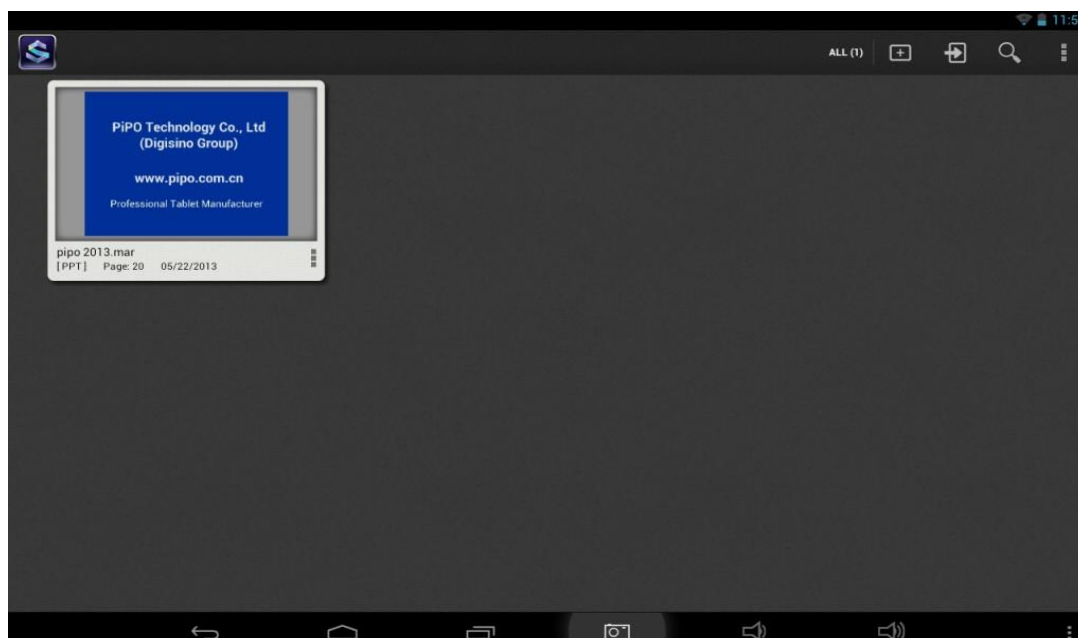


6.7 .3 Incstage Reader




Tap the icon of Incstage Reader , enter into the App, tap the

 menu  to import e-books.

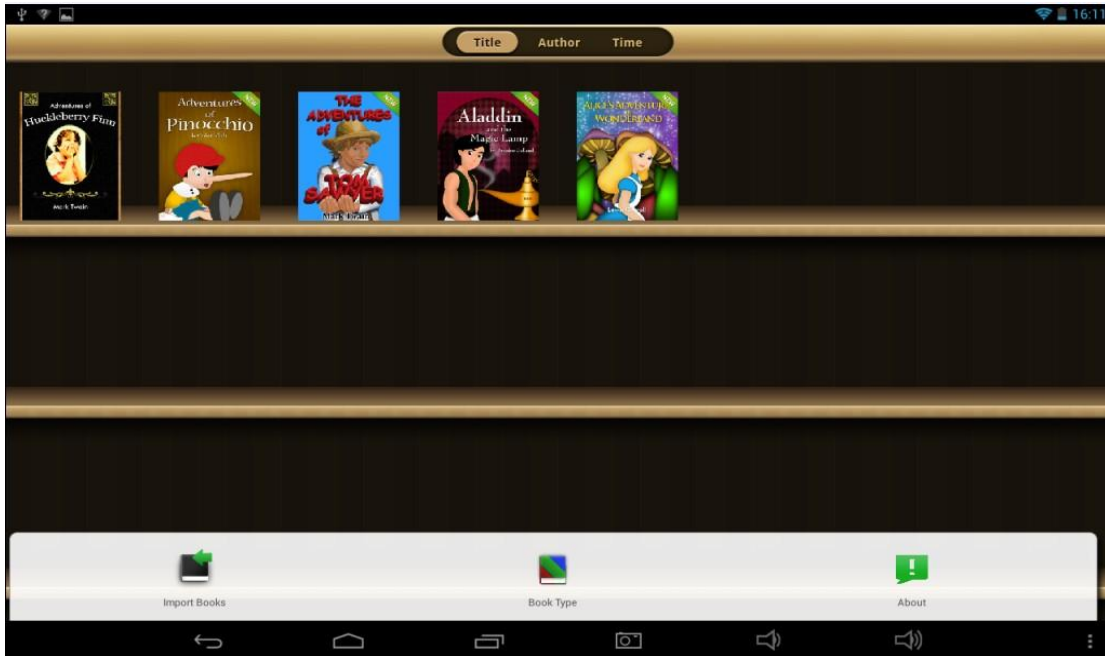


Select the book you want to share with another PIPO Device, and tap



share icon  to invite other PIPO tablets. Make sure that all Incstage Reader apps in different PIPO Device are opened at the same time, and you connect all Device to the same WIFI.




Then the images on your PIPO Device you control will be displayed to other PIPO tablets invited. Check the bellowing synchronization displaying.

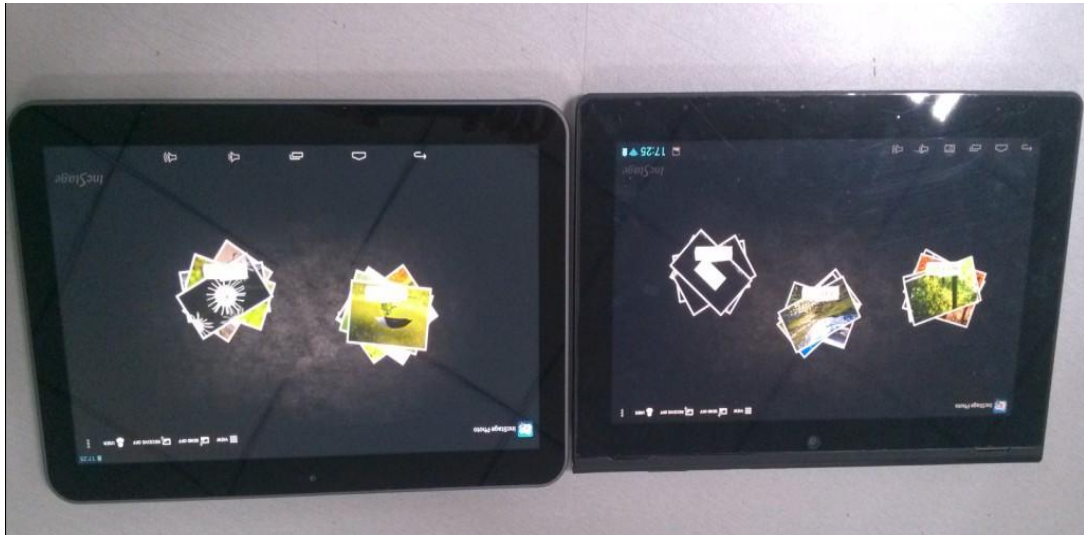 

6.7 .4 Incstage Share Center.



This is the share center , you will achieve remote control function via a PIPO TV dongle. Connect PIPO TV dongle to HDMI port of your TV set, (PIPO TV dongle

 


Then enter into "Instage Share Ceter", videos, images on your Device will be sent to TV display synchronously.

VII. Settings




Tap the “Settings” icon to go to settings. You can check and set wireless&networks, sound, display, storage, Battery, Accounts &sync, security, language, date&time, about tablet, etc.

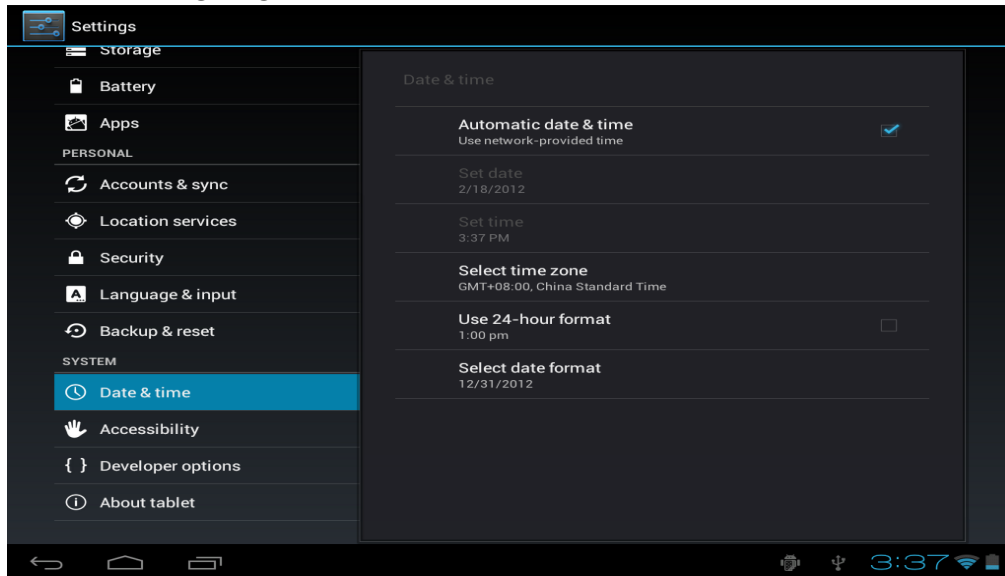


Wi-Fi: tap “Settings” → “Wireless & networks” to turn on wifi and scan. It will show a list of Wi-Fi networks scanned in range. Choose a strong Wi-Fi network to connect. (You may need to input the password).

Data usage:

 
VPN: First, set a locked screen before adding VPN profile,

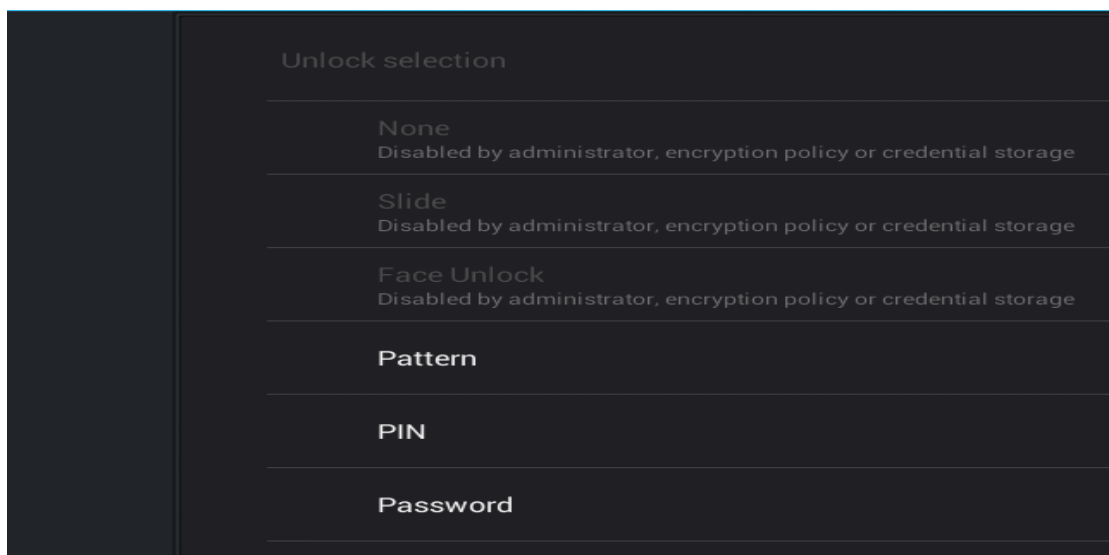

 You may choose what ever screen lock you like, pattern, PIN, password. Bellowing I select Pattern as an example.

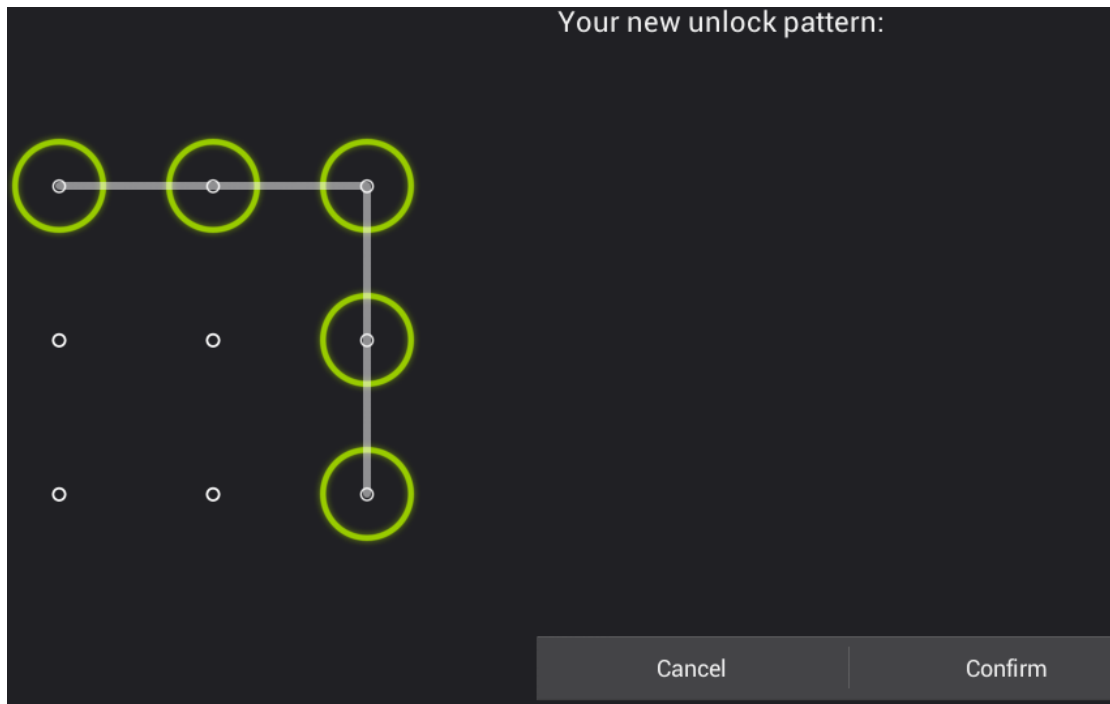

 
Secondly, after setting the screen lock, you could add A new VPN. Create your VPN name, input the server address, and then click “save” [Input What ever name you want to show on the VPN]

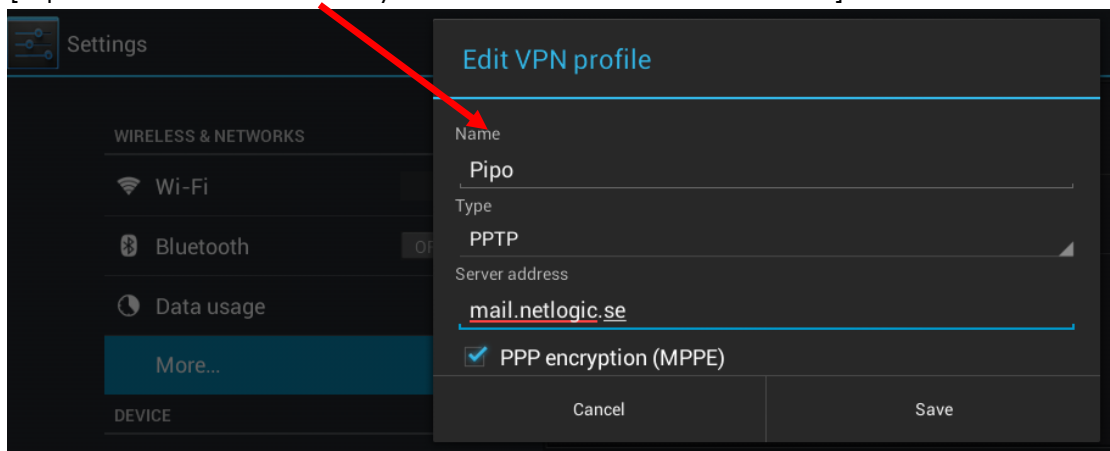

And then input your VPN account and password


And , finally, VPN settled.

 Portable hotspot: turn on Wi-Fi and turn on hotspot by ticking the square.

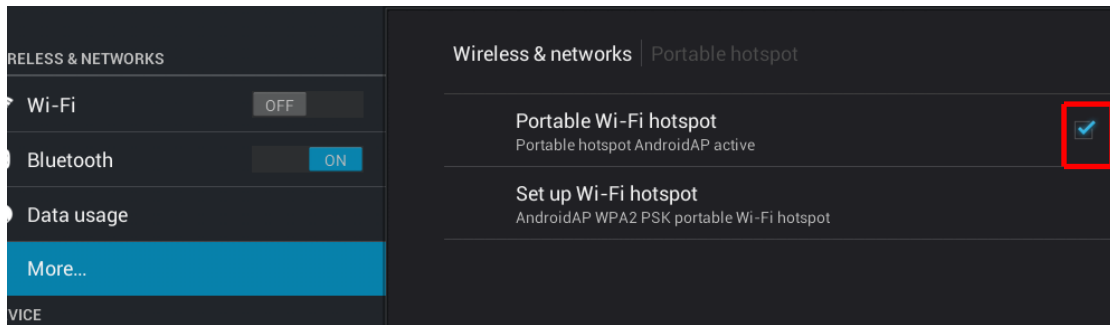

And then create hotspot. Set up network ID, select the security type.

 When hotspot is set up, there will be an icon appearing, like this, the Wi-Fi signal is surrounded by a white square:



Ethernet: Turn on Ethernet, connect to HOST port via the OTG cable which is included in accessories, and then connect this OTG cable to the Ethernet cable.

Mobile networks: Turn on "Mobile Networks" → "Data enabled" whether you use a 3G dongle or SIM card, it's required to turn on "Data enabled" for mobile data transmission.

Sound: turn off touch sound by tapping "sound"—"touch sounds"

Display: To set Brightness, Wallpaper, Sleep time-out, Font size here.

Screenshot: Tap "Screenshot", tick the option "show screenshot button on the status bar". There will be a screenshot button on the bar.

Storage: Check internal storage here. If you insert a Micro SD card, or USB disk, you can check the total and available space for your Micro SD card or USB disk. Please unmount it to safely remove it.

Battery: Check the Battery status here.

Language & input: to set language and keyboard input.

Backup & reset: to go to submenu "back up my data" and "Factory data reset". If you choose factory data reset, all data from your tablet's internal storage will be erased. Choose this option carefully.

About Tablet: To check information about your tablet, such as Model number, android version, etc.

VIII. Battery




Very Low Battery

Full Battery

Charging Battery



'' indicates that the power of Battery is full. When the battery level becomes too low, a prompt comes up to note you to charge your tablet.

While charging, you can check the charging status in the lock screen:



It takes around 5 hours to charge your tablet to full battery. Please only use a 5V /2.5A adaptor included in the gift box to charge it.

IX .Firmware Upgrading Procedures

9.1 warnings before upgrading

 
1. Please read the below carefully when you try to upgrade your tablet.
2. Please make sure that the firmware matches your tablet.
3. Please backup your data before upgrading, the storage will be formatted when upgrading, data will be lost and unrecoverable.
4. Please do not touch any buttons on the tablets while it is upgrading.
5. Make sure that your tablet is with enough power, you'd better charge the tablet before upgrading, in case of upgrading failure due to low battery.
6. Please proceed in accordant with the instructions strictly.


9.2 Preparations work before upgrading


Please download the "upgrade tool" from this PIPO website,
http://www.pipo.cn/En/index.php?m=About&a=gujian_show&id=70
Please download the corresponding firmware from PIPO website,
<http://www.pipo.cn/En/index.php?m=About&a=gujian>

9.3 How to upgrade

1. Decompress the upgrade tool, double click the "RK batch Tool" icon, as the bellowing

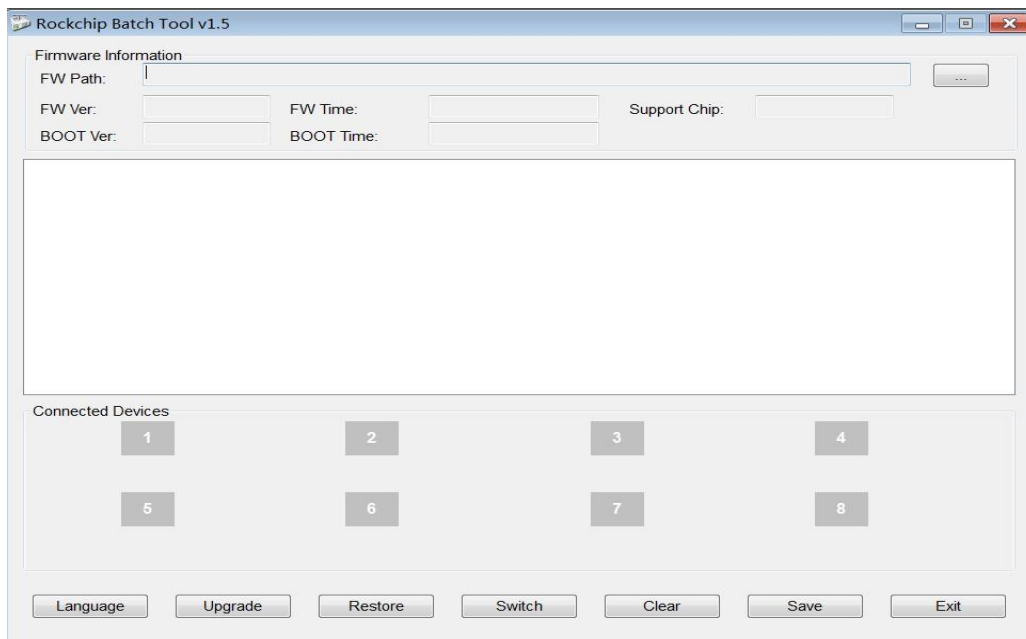


 
2. Click , choose the firmware downloaded. Then charge your tablet with power adapter, and USB cable connects tablet and PC.

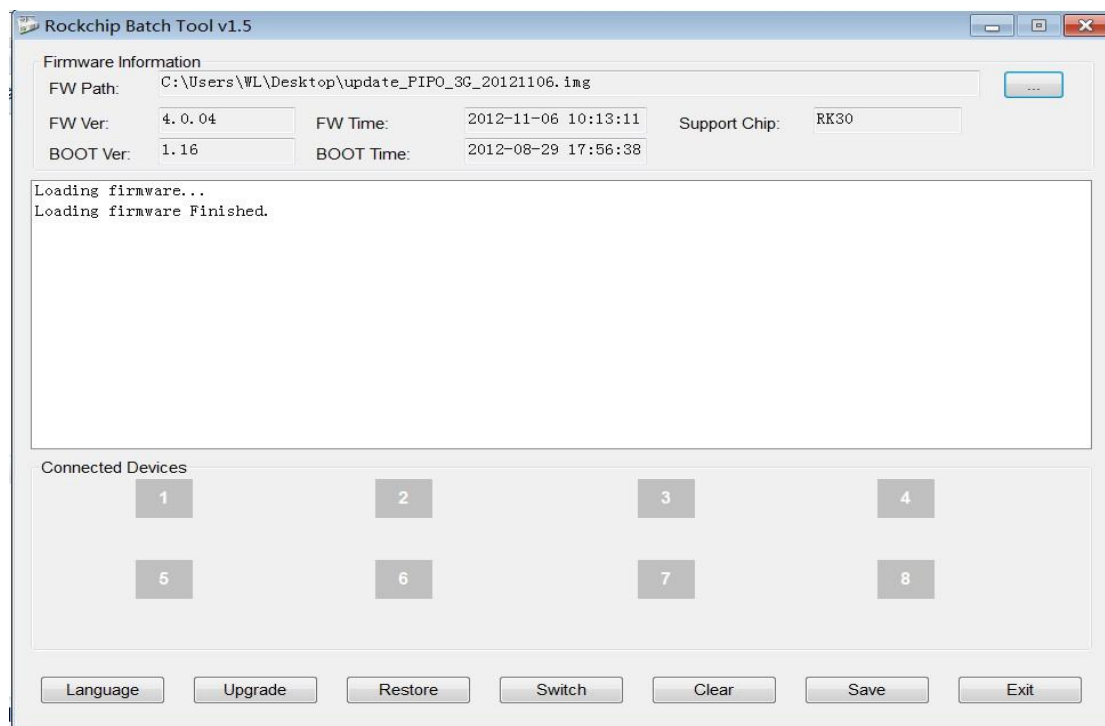


press the ESC key for a few seconds, at the same time press "reset", release ESC until the tool finds your tablet, if "reset" and "esc" fail, hold "ESC" and "power" button, make you tablet set into upgrading mode.

 
3. After the PC finding out the tablet, and the device icon turns green, click “upgrade” for upgrading.

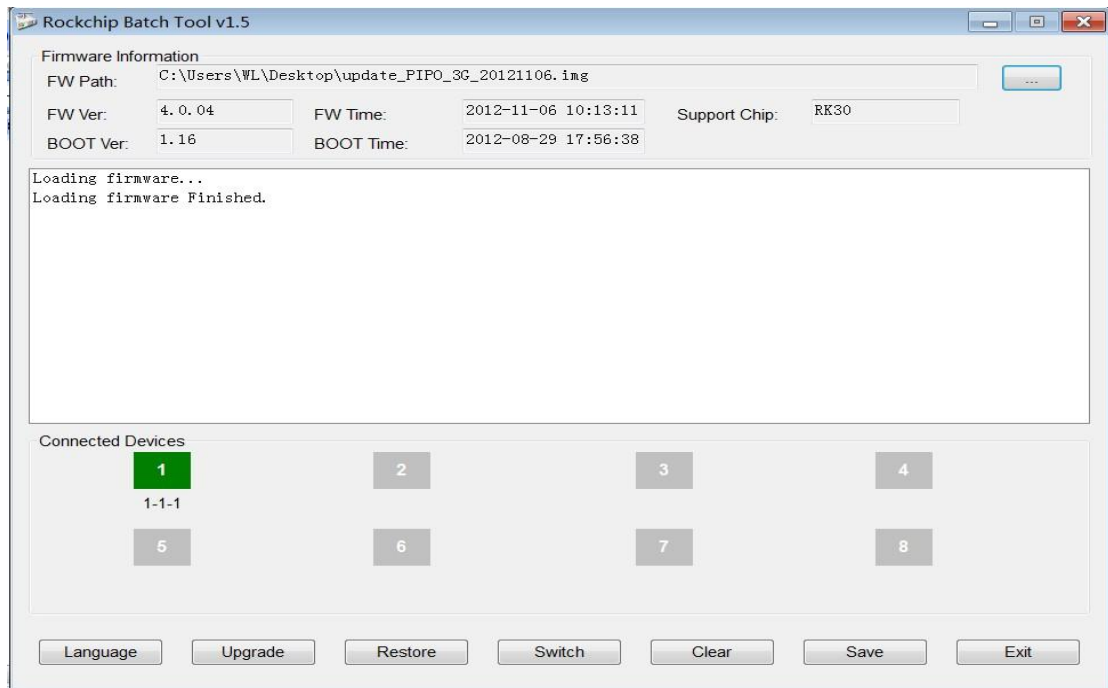

 
Note: If the device detected under the status of Pink , please click “Switch”, the upgrading status will switch to Green (standby status)

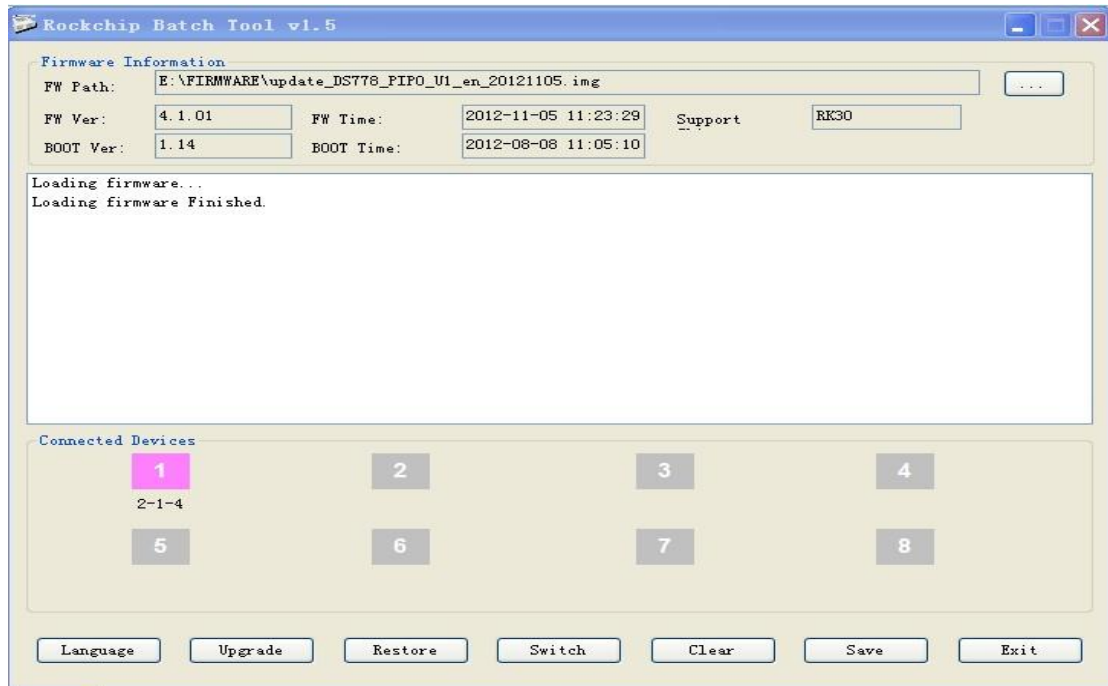

The tablet is upgrading the firmware

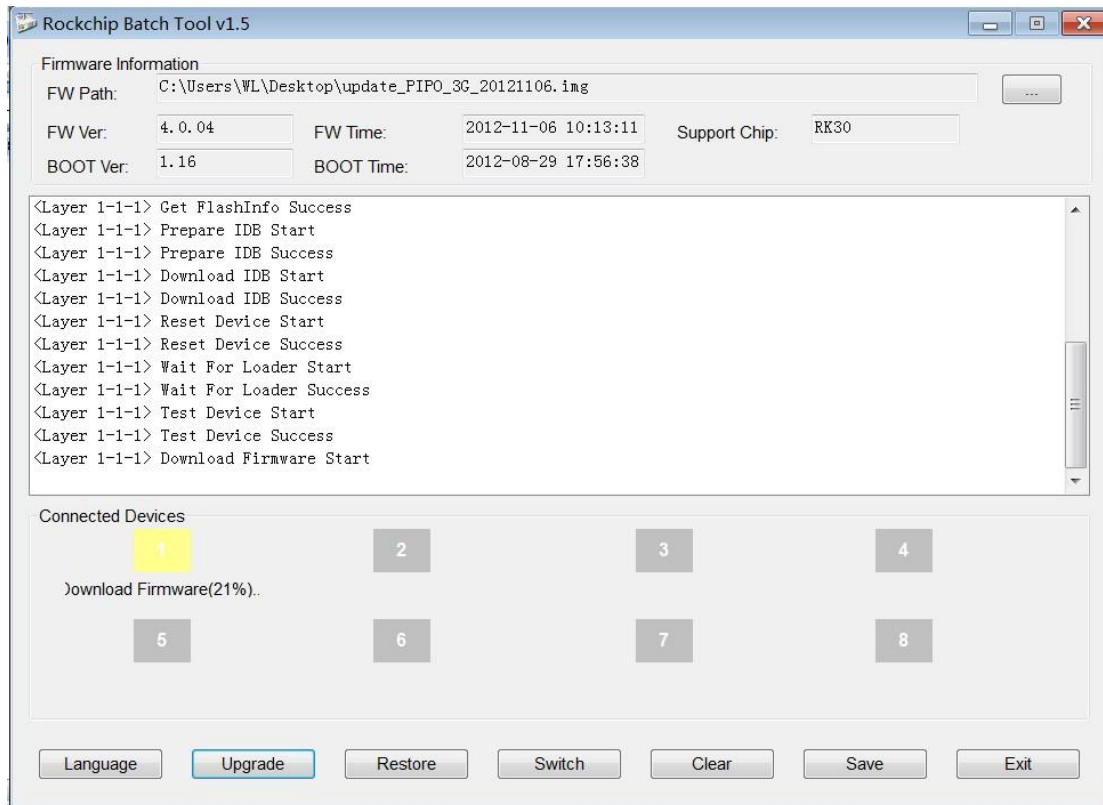 

 The tablet will turn on automatically, now you could disconnect the tablet to the PC.

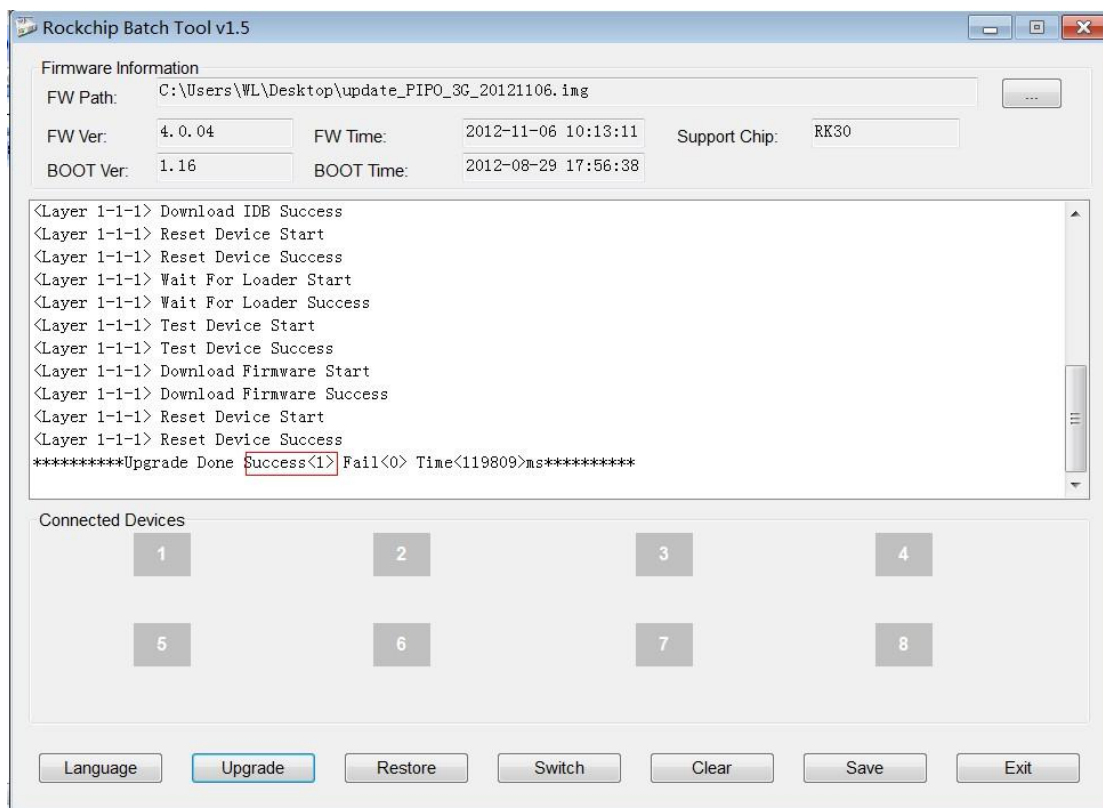

9.4 Instructions of Installing Rock chip USB driver

If you do the upgrading for the first time, please install the Rock chip USB driver in accordance with the following instructions.

If you are upgrading via your PC for the first time, it requires your PC to install Rock chip USB driver, after your tablet enters into upgrading mode, it will pop out a guide advising you that the PC finds new hardware. Select manually install and then click "next"

Select the USB driver in accordance with your PC system, the driver is included in the "RK batch tool". Then the PC will install the USB driver automatically. After finishing USB installing, go back to upgrading mode.
Note

If your PC is with Win7 or Vista system, it will not pop out the guide leading you to install the driver, you get to install the driver in "My Computer".

1. Right click "My Computer", select "Device Manager"
2. There will be an "Unknown Device" with an exclamation mark appears
3. Right click the "Unknown Device", select "renew driver software"
4. Load the USB driver included in the "RK batch tool" to install the USB driver.

Note: Do not turn on "USB Debugging" in the setting when upgrading firmware.

5. When you finish the driver installation, you can come back to upgrading procedures.

Troubleshooting

1. Can not turn on the tablet

Check the tablet's power level; please charge it before starting it. In case your tablet still cannot be turned on, you may try to reset it

2. No sound from earphone

Check if volume is set to '0'. Or earphone may be broken, please change for another one.

3. Big noise

Check if there is dust in the earphone or speaker. Check if the file is broken.

4. Screen drift or unresponsive screen

To pin the reset button to reset your tablet and power it on again.

5. Application not workable

Possible reasons may be that this app is not compatible with your OS or the downloaded .apk file is broken so you may need to download a full version.

6. How to delete a Google account?

If an account is added, the account is shown in “Accounts & sync” of “Settings”, where you may also add another account. To delete an undesired account, go to “Settings” → “Privacy settings” → “Factory data reset”. Your tablet’s internal storage, downloaded apps, etc. will also be deleted, except the info in your flash memory. Be careful before you carry out this operation.

7.USB unmounted, SD card unmounted

Some times after inserting SD card or USB, it will show on the tablet that “unmounted”, do the factory reset by “setting” – “backup & factory reset”, and then turn off and turn on tablet once again. If fail, you have to upgrade the firmware.

FCC Warning

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.