

PocketBook®

**User Manual**  
**PocketBook A10**

## **Thank you for purchasing PocketBook A10!**

Before you start using this PocketBook A10 please read this Manual carefully. You will learn how to ensure your own safety and extend service life of your device.

If any of the following safety measures have not been complied with or defects/faults are observed please contact the authorized service center to check your device. Failure to comply with this requirement may cause the device to malfunction.

## Table of Contents

<b>Safety Precautions</b> .....	<b>5</b>
<b>Technical Characteristics</b> .....	<b>8</b>
<b>Appearance and Controls</b> .....	<b>9</b>
Front view .....	9
Controls and indicators .....	10
<b>Getting Started</b> .....	<b>11</b>
<b>Controls and Navigation</b> .....	<b>13</b>
Finger Gestures .....	13
Menus .....	14
Home Screen.....	14
Using the On-Screen Keyboard .....	17
<b>Software</b> .....	<b>18</b>
Application Management.....	19
Library.....	20
Loading Books to the Memory.....	22
Loading Protected Books (DRM).....	22
Reading Mode .....	24
Panel of Basic Commands .....	25
Linking Inside the Book .....	27
Quick Menu.....	27
Closing the book.....	33
Dictionary.....	34
Office Applications .....	35
Multimedia Content Management .....	35
FM Radio .....	36
Internet .....	37
Browser.....	37
Email.....	40

File Manager.....	41
Google Services.....	44
<b>Settings.....</b>	<b>45</b>
Wireless & networks.....	45
Sounds .....	48
Display .....	48
Location and Security.....	48
Applications .....	49
Accounts & sync .....	49
Privacy.....	50
Language & keyboard.....	50
Date and time .....	51
About device .....	51
<b>Customer Support.....</b>	<b>52</b>
<b>Firmware Update .....</b>	<b>53</b>
<b>Compliance with International Standards.....</b>	<b>55</b>

## Safety Precautions

Do not expose your device to excessively high or low temperatures. Avoid direct sunlight. Avoid heating or cooling the battery. An excessively hot battery may cause skin burns. Please note that the operating temperature range from 0°C to 40°C.

Avoid exposure to direct flame or smoke (cigarette, lighter, open fire etc.).

Avoid exposure to liquids or damp (do not use the device in the rain, in the street at higher humidity, near bodies of water etc.). Avoid penetration of liquids or moisture as this may cause short circuit and/or damage to the battery. If liquid does get into the device, remove the battery immediately and contact the authorized service center.

Do not leave the device for a long time in poorly ventilated environment, e.g. in a car or in closed tight boxes/packaging.

Avoid exposure to strong electromagnetic fields.

Neither drop nor try to bend the device. If the device is damaged contact the authorized service center.

Do not disassemble or modify the book reader. Only authorized personnel may conduct work on the device.

This device is not waterproof and must not be used under water. If your device has become wet contact the authorized center immediately.

Do not use the device with a damaged battery, charger (broken case, poor contact, broken feed cable) or SD card. If the battery is damaged (cracked case, leakage of electrolyte, off-shape etc.) it should be replaced.

**Do not replace the battery yourself. Use of home-made or modified batteries may cause an explosion and/or damage the device.**

**Warning!** Do not destroy the battery by burning it, to avoid the danger of explosion!

**Avoid any mechanical pressure on the screen. Protect the screen from objects that may scratch or damage it. To ensure adequate protection of the screen, we recommend storing the device in a protective and/or hard cover.**

**Do not use organic or inorganic solvents (e.g. benzol etc.) to clean the screen/case. Use a soft cloth to remove dust from the device's surface. To remove dirt apply a few drops of distilled water. To remove persistent dirt contact the authorized center.**

**Do not expose the screen to electrostatic charges or artificial sources of UV electromagnetic radiation.**

**Up to five faulty pixels are acceptable in the screen and do not constitute a warrantable defect of the screen.**

**Never leave cables near heat sources. Heated cables or their insulation may become deformed or damaged, which could lead to fire or electric shock.**

**Avoid any mechanical impacts onto connectors and keys of the device. This may affect their operation and cause malfunction.**



**Disposal of electric and electronic components (the Directive is applicable to the EU and other European countries where separate waste disposal systems exist).**

**In other countries dispose batteries accordingly to local laws.**

**Incorrect disposal of this device may have adverse impacts on the environment and public health. To prevent such consequences follow**

the device-specific disposal requirements. Recycling of these materials helps preserve natural resources. For more information regarding recycling issues please contact local municipal authorities, your domestic waste collection service, store where you purchased the device, or the authorized service center.

**Do not use wireless communication in places where it is prohibited. Please, do not use wireless communication onboard a plane and in hospitals – this may affect airborne avionics or medical equipment.**

**This book reader receives and transmits radio frequencies and may interfere with radio communications and other electronic equipment. If you use personal medical devices (e.g. a pacemaker or hearing aid) please contact your doctor or the manufacturer to learn whether or not such medical devices are protected against external RF signals.**

**By the end of product guarantee term, please contact the nearest authorized service facility for examination on the subject of security is maintained.**

**Keep away from children.**

 
## Technical Characteristics

<b>Display</b>	10" TFT 1024×768 touch screen, Multi touch
<b>CPU</b>	Ti3621 1000 MHz
<b>RAM</b>	512 MB
<b>Internal Storage</b>	4 GB
<b>Operating System</b>	Android™ 2.3
<b>Input/Output Ports</b>	1×micro USB, 3.5 mm earphone jack
<b>Card reader</b>	micro SD up to 32 GB
<b>Communications</b>	Wi-Fi (b/g/n), Bluetooth
<b>Camera</b>	2 Megapixels, 4× digital zoom
<b>Audio</b>	2×0.5 W speakers, microphone
<b>Accelerometer</b>	Yes
<b>Battery</b>	Li-Polymer, 6600 mAh, 3.7 V, up to 6 hrs video playback
<b>Dimensions</b>	207×244×15 mm
<b>Weight</b>	670 g
<b>Text Formats</b>	TXT, PDF, ePub, PDB, HTML, FB2, DOC, DOCX, PDF/ePub (DRM)
<b>Image Formats</b>	JPEG, PNG, GIF, BMP
<b>Audio Formats</b>	MP3, WMA, AAC
<b>Video Formats</b>	H-263,264;MPG4,VC1



## Appearance and Controls

### Front view

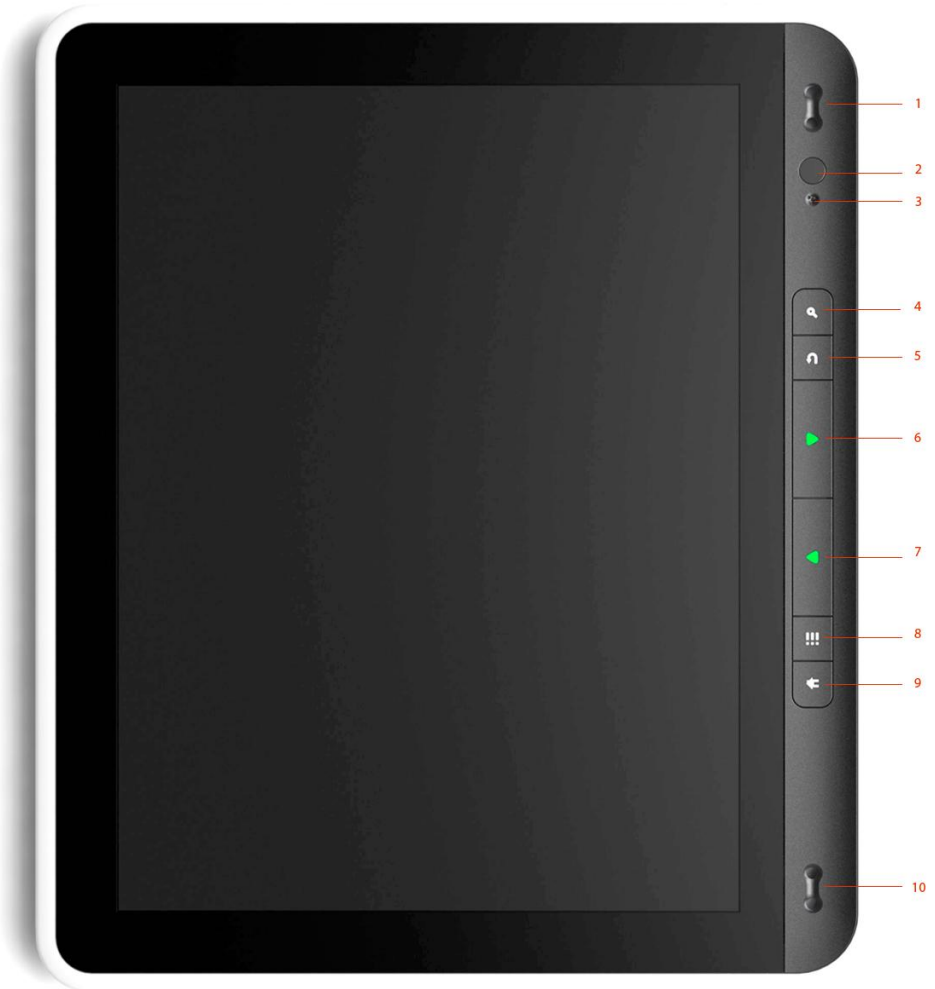

## Controls and indicators

1. Speakers
2. Camera
3. Microphone
4. **Search** button – bring up search menu
5. **Return** button – go to previous menu
6. **Backward** button – previous page
7. **Forward** button – next page
8. **Menu** button – open quick menu
9. **Home** button – Home screen
10. Speakers

## Getting Started

### STEP 1. CHARGING THE BATTERY

Charge your device for 8-12 hours for the first time. During the first charge, the device should be kept off. To charge the battery for the first time:

1. Make sure the device and its power indicator are off. If it is on, keep the 'On/Off' button pressed for a few seconds
2. Select 'Power Off' on the context menu, that appears
3. Connect your device to computer or power supply using the micro USB cable

***Note** It's not recommended to use the device during charging from computer, as power consumption in this case would be more, then charging*

4. LED indicator starts blinking green as soon as the charging process starts
5. When the battery is fully charged, the indicator turns solid green
6. Now you can disconnect the device from the power line, and turn it on for the first time.

### STEP 2. TURNING ON

Keep 'On/Off' pressed for about 2 seconds until startup logo will appear.

When the device is ready to operate, the lock screen appears. The lock screen can be unlocked in two ways: either by pressing the Menu button on the front panel or by



touching the lock icon in the screen and sliding your finger over the screen in the direction indicated by the arrow, till the screen becomes unlocked. After unlocking, Home Screen will be displayed.

### **STEP 3. INITIAL SETTINGS**

Follow the Wizard instructions to customize the main parameters. After finishing the customization, Home Screen will appear.

# Controls and Navigation

## Finger Gestures

### **TAP**

Short soft touch on an item (e.g. application or folder icon, menu item) opens it. If item can be opened with various applications, you will be asked to select an application to open with. You can set your choice as default one.

### **PRESS AND HOLD**

This gesture calls context menu with available options for an item. While you at Home Screen, it allows to move an item.

### **SLIDE**

Slide means move finger across the screen vertically or horizontally.

### **DRAG**

To drag an item, press and hold it until you reach final position.

### **FLICK**

Flicking is similar to sliding, but you need to move your finger more rapidly. It's used for scrolling through lists.

## PINCH

In particular applications (e.g. viewing images, maps) to zoom in or zoom out, you can 'pinch' the screen: move or push two fingers.

## Menus

Most applications have two types of menu: quick and context one. Quick menu is brought up by pressing 'Menu' hardware button on a front panel. Context menu is called by continuous touch on a screen or item, depending on application.

## Home Screen

Home screen consists of 5 desktops. To scroll the Home screen, move your finger across the screen or tip the counter icon in the left or right corner of the screen. Continuous touch on one of them brings up the thumbnails of all five desktops for quick switching between them.

Desktop may contain shortcuts, widgets and control panels. In the bottom of screen next starters are located:

- **Settings** – opens settings panel
- **Applications** – opens applications panel
- **Browser** – opens the web browser. If browser already opened, it will be opened in current state.

- **Recycle Bin** – starter is activated after continuo's touch on icon or widget. To delete element, drag-and-drop it to Recycle Bin and release after it highlights in red.

Context menu of the Home Screen allows you to customize interface to your own, adding shortcuts, widgets, folders and wallpapers to a desktop.

Initially next widgets are available:

- **Analog clock**
- **Calendar**
- **Continue Reading** – displays recently opened books
- **Google Search**
- **Home screen tips**
- **Latitude**
- **Market** – Android market widget
- **Music**
- **New & Weather**
- **Obreey widget** – displays new books at Obreey online bookstore
- **Picture frame** – crops an image to place it on a desktop

- **Power Control** – optimizing the power consumption of the device. Has such options:
  - Wi-Fi on/off
  - Bluetooth on/off
  - Synchronization – controls background synchronization (e.g. for email application)
  - Brightness – 3 levels of screen illumination
- **Rate places**
- **YouTube**

Quick menu contains such options:

- Add – adding elements to the desktop, similar to the context menu
- Manage apps – application manager
- Search
- Notification – system and email notifications
- Settings – general settings.

## **STATUS BAR**

The status bar, located at the top of the screen, displays:

- date and time
- battery status



- Wi-Fi status
- count of incoming messages
- external card icon
- USB connection status

Press the status bar and pull it down to view detailed information.

## Using the On-Screen Keyboard

To access the on-screen keyboard, touch any textbox.

The screen will display a standard keyboard. Enter your text by touching the keys of the on-screen keyboard.

To change input language, slide your finger over the Space button. You can customize input languages and other options in appropriate [Settings](#) section.

## Software

To access application list, press Applications starter on the bottom of Home screen.

This panel displays all installed applications. PocketBook A10 lets you install any programs designed for the Android™ operating system except those which utilize any modules or functions which are not available in the device.

The programs can be installed manually by copying the installation package to the device and running the installation wizard from File Manager.

You can create a shortcut to an application at any desktop. Scroll Home Screen to the desktop you need, then open application list. Touch and hold desired application icon until the desktop appears. After you release an icon, it appears on a desktop.

## Application Management

To access application manager, call quick menu at Home Screen (press **Menu** hardware button) and press 'Manage apps'. Application manager displays application in next categories:

- Downloaded
- All
- On SD card
- Running

To view application information, just touch its name. Application manager will display storage, cache and permissions information.

Application manager allows to stop, uninstall, move to SD card or to device storage, clear application data and cache.

## Library



This application used for displaying, managing and purchasing (via Obreey store) books on the device. To enter Library, tap the 'Books' icon on the Main panel.

**Note:** Files in media formats (i.e. music, video etc.) are not displayed in the Library. To access these files, use the [File Manager](#)









Library has 4 tabs:

- Library – displays all the books, stored on device
- History – recently opened books
- Favorites
- Online – Obreey online bookstore.

Books in Library can be represented in two modes: Shelves (by default) and Folders. In Shelves mode you can arrange books to your own, without changing their location in memory. Folders mode displays books as they stored.

## QUICK MENU

 Search	 Sorting	 Thumbnails
 Add Shelf	 Folders	 Downloads

- Search
- Sorting – by Title, by Author or by Date
- Thumbnails/Lists – toggles view
- Add Shelf
- Folders/Shelves – toggles presentation mode
- Downloads – books, downloaded from Obreey online store.

## CONTEXT MENU

Touch continuously on book icon to bring up context menu:

- Open
- Add to/Remove from Favorites
- Mark as read/unread
- Shelves – select shelves containing the book
- View Info – displays detailed info about the book.

## OBREEY ONLINE BOOKSTORE

You can purchase and download books from Obreey online store directly from Library, just press 'Online' tab to open Obreey website.

**Note** *To enter the bookstore, the device must have preconfigured Internet connection.*

## Loading Books to the Memory

Connect your device to PC via mini-USB cable. Internal memory and external SD card will be displayed in Windows Explorer or any file manager of another application. Copy books to the selected folder to the device memory or to the SD card.

## Loading Protected Books (DRM)

You can download protected books in two ways.

### LOADING BOOKS VIA .ACSM LINK

- Visit website [www.adobe.com](http://www.adobe.com) using your PC browser
- Enter (Products) section
- In alphabet list go to link 'Digital Editions'
- To enter library, go to 'Visit Sample eBook Library'
- Select book
- Press 'Download Item'

- Save .acsm file to your PC

**Note** You can follow similar instructions to download link to protected book from any online bookstore.

To open protected book, do the following:

- Copy book link (.acsm) file to external memory card.
- Find and open this file using the File Manager
- Activate your device following the on-screen instructions. Enter your [www.adobe.com](http://www.adobe.com) account information in 'Activation' form. After that you will be able to download book.

Full version of the book will be available for reading in Digital Edition folder.

Loaded book is protected and cannot be opened by unregistered user.

### LOADING BOOKS VIA PC

- Open application 'Adobe Digital Editions'

**Note** Application will ask you to activate the device after you connect it for the first time. Use your [www.adobe.com](http://www.adobe.com) account information to proceed.

- Switch to library view ('Go to Library View')
- Press 'All items'

- Find a book and copy it to the device (you can just drag-and-drop it to the device icon). To open it, use your account information on [www.adobe.com](http://www.adobe.com).

**Note** *You won't be able to copy book using 'Adobe Digital Editions' if your device is not activated.*

## Reading Mode

In reading mode, the corresponding viewing program opens the selected file. Main features:

- ✓ Paging
- ✓ Display rotation
- ✓ Zoom
- ✓ Switching to specified page
- ✓ Linking inside the book
- ✓ Bookmark managing
- ✓ Notes managing
- ✓ Switch to Structured Table of Contents
- ✓ Adding to Favorites
- ✓ Marking book as read/unread
- ✓ Viewing book info
- ✓ Display configuration.



## PAGING

 
To go to the next or previous page, slide your finger in direction, opposite to where you want to go. This movement is similar to page turning when you are reading a paper book.

Paging is also available in the main operation menu. To open main operation menu, tap on the status bar at the bottom of the screen, when you are reading a book.

When reading books in PDF and DJVU formats, if content does not fit the page, you can move the image. To move the image, press and hold your finger in the centre on the display and move the image.

## Panel of Basic Commands

To call the command panel, just touch the **Status bar**.

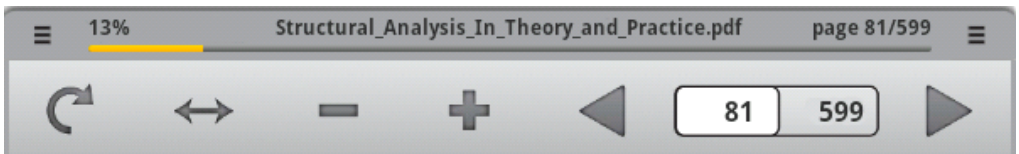

## LOCKING SCREEN ROTATION

Selecting this function, you can lock and unlock the current screen position, overcoming accelerometer.

## FIT TO WIDTH

For graphic format files. This function restores the book display scale using a page size equal to screen width.

## ZOOMING

You can zoom book, using the '+'/'-' buttons on the panel of basic commands.

## REFLOW

Zooming mode changes the font size. To enter this mode, bring up the context menu holding the finger in the center of the screen, and select 'Reflow' option. Change font size using command panel '+' and '-' buttons. To exit reflow mode, select 'Hard page' context menu option.

## CURRENT PAGE AND TURNING PAGES

The cells of right-hand side of the command panel display page-turning arrows, current page, and total number of pages. You can turn the pages by pressing the arrows.

To go to the specified page, press the cell with the current page number with your finger and then use the on-screen keyboard to enter the page number you want to go to in the opened textbox 'Go to page'.

**Note:** Scale changing or menu calling is accompanied by changes of the visible screen area and the reader recalculates the total number of pages in the book. This can take some time.

## Linking Inside the Book

 
Some book formats allow you to link inside a book. References in the text are highlighted. To go to the link, press and hold the required link.

The reference will open as a separate page. To return to the book, press the 'Return' button

## Quick Menu

To access the Quick Menu, click the "Menu" button on the device's front panel.

**Note** Some of quick menu features may not be supported in particular file types, such as EPUB or PDF, especially protected.

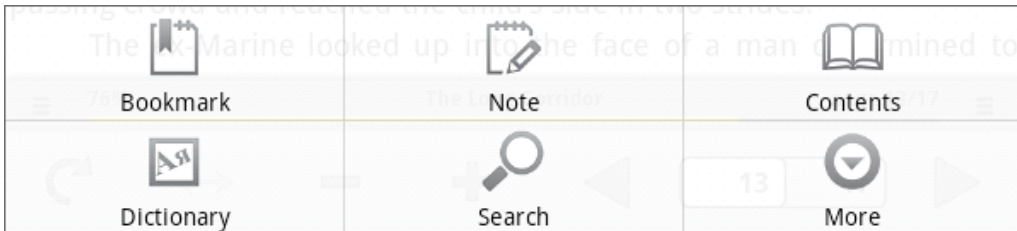

## BOOKMARK MANAGING

To create a bookmark, press and hold in the centre of the display. The quick menu will appear. Select 'Create bookmark'. To view bookmarks, open the main operation menu and select the 'Bookmark' icon. Select desired bookmark in the displayed list.

## NOTES MANAGING

From time to time you may find it useful to save a selected fragment to a separate notepad. To create a new note in the reading mode, bring up the Quick Menu by pressing the "Menu" button and clicking on the "Note" icon.

If a text format book is open, the notepad will show the editable page text for saving. You can add comments to the text or delete any unnecessary fragments, using the on-screen keyboard, before saving the note for further reference and usage.

If a graphic format book is open, the notepad will show a screenshot of the page fragment being viewed. Using drawing tools, you can make notes on a page screenshot and save it as an image for further reference and usage.

## SWITCHING TO STRUCTURED TABLE OF CONTENTS

The contents displays the names of chapters and sections of the book. To go to a selected chapter, press its name with your finger.

Contents can have hierarchical structure of chapters, sections and parts. Sections with hidden parts of the structure are designated by arrows. To expand a hidden branch, click the arrow.

## DICTIONARY

Touch the word you want to translate in a page with your finger or enter it using the on-screen keyboard.

Press '**Enter Word**' button to type a word for translation in the textbox by yourself.

## SEARCH

To find the desired words or parts of words in the text quickly, click the search button in the shortcut menu. Using the on-screen keyboard, enter the text to search for and click "Search". Search results will be highlighted in color.


The control panel search results appear at the bottom of the screen. Use the arrows to navigate through the pages of search results.

## TEXT TO SPEECH

The Text-to-speech function or TTS is used to transform text information into speaker voice sounds.

To enable the text-to-speech function, do the following:

Press and hold on the screen until the menu will appear, and select '**Text to speech**'.

 More

Add to Favorites

---

View Info

---

Text to Speech

---

Night Reading

---

Settings

The TTS control menu will be displayed at the bottom of the opened book.

Highlight a sentence in the text for playback.

- Press "Play" to start speech reproduction
- Use the fast forward and rewind buttons to select further sentences for playback
- Use the volume controls to adjust playback volume

from Meryton, denominated from that period Lucas Lodge, where he could think with pleasure of his own importance, and, unshackled by business, occupy himself solely in being civil to all the world. For, though elated by his rank, it did not render him supercilious; on the contrary, he was all attention to everybody. By nature inoffensive, friendly, and obliging, his presentation at St. James's had made him courteous.


Lady Lucas was a very good kind of woman, not too clever to be a valuable neighbour to Mrs. Bennet. They had several children. The eldest of them, a sensible, intelligent young woman, about twenty-seven, was Elizabeth's intimate friend.

That the Miss Lucases and the Miss Bennets should meet to talk over a ball was absolutely necessary; and the morning after the assembly brought



To select the playback language, press the tongue icon on the left of the TTS control panel.

Select the desired playback language from the list of available ones.

 Select language

German

English

Spanish

French


Italian

**Note** Some of the text-to-speech mode settings are available in the "[Settings](#)" section

**Note** The Text-to-Speech function becomes accessible for an opened book only after page calculation.

**Note** The currently reproduced sentence text is highlighted. Pages of the book reproduced by voice are flipped automatically.

## BOOK INFO

To view book info open the quick menu by pressing and holding the  or your finger in the centre of the display.

From the displayed list select 'View info' option. Information on the book is displayed, such as title, author, cover page, full path, and file size.



## NIGHT READING

Turns the night reading mode on/off. In this mode, book will be displayed as white text on a dark background. This will decrease scattered light from the device.

## CONFIGURATION

To open the Settings menu in reading mode, go to the extended option menu 'More' and select the 'Settings' option.

Here you can configure:

- **Panel menu lock** – locks/unlocks the main operation menu in current status (opened/ hidden), overcoming the accelerometer
- **Full screen** – turns full screen viewing mode on/off (hides menu panel)
- **Volume key scrolling** – activates/deactivates buttons '+' and '-' used for paging while reading;
- **Font size** –selects font size.

## Closing the book

To close a book press 'Return' or 'Home' button.

## Dictionary



Allows you to translate a word, selected in read mode or entered from keyboard, using available dictionaries. After launching the application, the onscreen keyboard will appear (see the '[Using onscreen keyboard](#)' section for detailed information on how to use the keyboard). Type in the required word and the application will find the translation. You can turn pages of the dictionary. If you have several dictionaries on your PocketBook A10, you can switch between dictionaries.

### Dictionary installation/uninstallation

To install dictionary, perform the following:

1. Copy dictionary file on the device
2. Open File Manager
3. Find dictionary file on the device
4. Launch file and confirm dictionary installation.

To remove dictionary, open section Settings > Applications > Manage packages.

Select package to remove and confirm uninstallation.

## Office Applications

- **Notes** – application for creation/edition text and graphic notes
- **Calendar**
- **Alarm clock** – supports several alarms depending on day of the week. After setup, alarm icon will be displayed in status bar
- **Calculator** – supports several engineering functions. To use additional functions, press ‘Menu’ button and select ‘Additional panel’

## Multimedia Content Management

- **Gallery** – application for image viewing. Also, this program supports next features: crop image, set as wallpaper, send by email and delete.
- **Music** – application for playing music. Program supports playlists creation and grouping tracks by artists and albums
- **Video** – application for playing video. Next video formats are supported recently: 3GP (codecs H.263, MPEG-4 SP), MP4 (codecs H.263, MPEG-4 SP, H.264 AVC (Baseline Profile (BP))).

## FM Radio

To listen to FM Radio you need to plug headset, which will operate as antenna. To set channel, you can move a slider across the screen or use playback control buttons.

You can save up to ten channels. To save channel, just touch a button with number of preconfigured channel. If you need to clear or change frequency, touch button continuously and select required action from context menu.

In Settings section you can configure next parameters:

- Audio Mode – auto, stereo, mono or switch mode
- Audio Path – selects audio output device : headset, speaker or none
- RDS Modes – toggles Radio Data System : displays information, related to radio translation. This info is transmitted by radio station
- Enable AF – alternative frequencies. This allows a receiver to re-tune to a different frequency providing the same station when the first signal becomes too weak (e.g., when moving out of range). This can be useful, for example, while moving in car

Advanced settings

- World Region
- Scan Step

- Live Polling
- Polling Interval
- Noise Floor Level Estimate

## **Internet**

### **Browser**



Browser supports several windows and zooming. To open zoom menu, touch and hold free part of web-page. Quick browser menu has following options:

- New window
- Bookmarks
- Windows – lists all opened browser windows or opens new one
- Refresh/Stop
- Forward
- More
  - Add bookmark
  - Find on page
  - Select text

- Page info
- Downloads
- Settings

**Note** Downloads are possible if external SD card inserted.

## BOOKMARKS

This section consists of 3 tabs:

- Bookmarks – list of bookmarked web-pages. Quick menu allows to add current page to bookmarks, and toggle between thumbnail and list view mode
- Most visited
- History – quick menu allows to clear history.

Also you can add page to bookmarks by clicking on star icon on the right side from web-page title in Most visited and History sections.

Depending on tab, next operations with page are available in context menu:

- Open
- Open in new window
- Add bookmark
- Change bookmark
- Add shortcut to Home

- Share link
- Copy link URL
- Delete bookmark
- Set as homepage

## **Browser Settings**

### **PAGE CONTENT SETTINGS**

- Text size
- Default zoom
- Open pages in overview – opens page on the screen width
- Text encoding
- Block pop-up windows
- Load images
- Auto-fit pages
- Landscape-only display – displays web-pages in landscape view only, overcoming the accelerometer
- Enable JavaScript
- Open in background
- Set homepage

## **PRIVACY SETTINGS**

- Clear cache
- Clear history
- Accept cookies
- Clear all cookie data
- Remember form data
- Enable location
- Clear location access

## **SECURITY SETTINGS**

- Remember passwords
- Clear passwords
- Show security warnings

## **ADVANCED SETTINGS**

- Website settings – view extra settings for particular web-pages (if available)
- Reset to default

## **Email**





Standard email application. At the first time, you will be suggested to enter your account information and set up incoming server settings. These settings should be provided by your email service.

**Note** *Incoming server settings for Gmail are preconfigured.*

Email client supports several accounts.

Account settings:

- Account name
- Your name – will be displayed in field 'From'
- Email check frequency
- Default account – sets selected account as default
- Email notification
- Select ringtone
- Vibrate
- Incoming/Outgoing server settings

## File Manager



Initially application has 3 tabs, displaying files and folders: Home, sdcard. To open folder or file, just tap its

icon. To go up one level, press ‘..’ string or press ‘Return’ button .

Context menu has next options:

- Open in new tab (for folders)
- Move
- Copy – in each folder ‘Copy here’ button will be displayed
- Rename
- Delete
- Open with proper application, depending on file type (e.g. Reader for books, Gallery for images etc.)

On the top located quick launch buttons:

- Favorites
- Home
- Up to one level
- Create folder
- Copy
- Search

You can select several files or folders by checking checkboxes on a left from file/folder name and press Copy

button. For multiple selections, next options available in context menu:

- Move
- Copy
- Delete
- Add to zip archive
- Cancel

Context menu of tab title has next options:

- Add to favorites  
***Note** File Manager favorites are not the same as Reader or Browser ones*
- Favorites
- Close Tab

File Manager quick menu:

- Favorites
- Close tab
- Search files
- New folder
- Settings
  - Show hidden files

## Google Services

Next client applications for Google services are pre-installed on the device:

- Android Market – official Android application store, where you can purchase and download various applications for your device (many of them are free)
- Google Search
- Google Maps – client application for Google Maps service.
- Gmail – email client, preconfigured for Gmail
- Google Talk – instant messaging from Google
- YouTube – application for watching YouTube videos
- Latitude – shares your and tracking your friends location, based on IP-address
- Google Calendar
- Google Contacts.

These applications require Internet connection.

## Settings

To access Settings, select icon in Home screen quick menu or in application panel. In this section:

- Set the interface language and font
- Activate and deactivate internal functions of the device
- Customize the power saving mode
- Manage the services and installed programs
- Browse the device, memory and operating system status and set the current time and date.

### Wireless & networks

- **Airplane mode** – This option disables all wireless connections
- **Wi-Fi** – start scanning for Wi-Fi networks
- **Wi-Fi settings**
  - Wi-Fi enable/disable
  - Network notification – notify on open network found
  - Add Wi-Fi network.

By checking the 'Network Notification' option you can make your device scan the air for available Wi-Fi access points. Your device will offer you a list of available networks.

If the 'Network Notification' option is disabled, you can scan the air by calling up the quick access menu in 'Wi-Fi Settings' and pressing the 'Search' button.

You can scan available Wi-Fi networks by bringing up the context menu and selecting 'Scan'.

To configure additional parameters, bring up quick menu and select 'Advanced'. Here you can find:

- Wi-Fi sleep policy. Selects conditions to switch Wi-Fi to standby mode
- MAC address. Shows MAC address of the device.
- IP address
- Use static IP – allows to configure network settings manually.

To connect to the network manually, click 'Add Wi-Fi network' option in 'Wi-Fi settings' sub-menu. In the opened window, click the 'Network SSID' box and enter network SSID name using the on-screen keyboard.

Below, you will find a drop-down list to select a network protection method. 'No Protection' option is set by default. Enter the access password using the on-screen keyboard in textbox pops-up after protection method selection.

To simplify entering the password, you can check the 'Display password' box – in this case entered characters will

not be automatically hidden. Be careful – outsiders will be able to see your password and use it for unauthorized access.

After setting up all the required settings, press the 'Save' button and the network with specified settings will be displayed in your list of networks. To connect to this network, find it in your list of networks, click it and select the 'Connect' option.

- Bluetooth
- Bluetooth settings
  - Bluetooth on/off
  - Device name
  - Discoverable
  - Scan for devices
- VPN settings

Here you can set up and manage Virtual Private Networks (VPNs).

PocketBook A10 allows you to use 4 types of VPN connections:

- PPTP
- L2TP
- L2TP/IPSec PSK

- L2TP/IPSec CRT.

## Sounds

- **Silent mode** – disables all sounds except media and alarms
- **Volume** – adjusts volume for media and alarm
- **Notification ringtone** – sound notifications on system events.

## Display

- **Orientation** – automatic screen rotation for reading with maximum comfort
- **Animation** – animation level in the device
- **Brightness** – adjusts the brightness of the screen
- **Screen timeout** – adjusts the delay before the screen automatically turns off.

## Location and Security

- Use wireless networks
- Set up screen lock
- Visible passwords
- Select device administrators



- Install from SD card
- Set password

## Applications

- **Unknown sources** – allows installation of applications obtained from any other sources beside Android Market.
- **Manage applications** – lists installed applications, displays their parameters and access rights, uninstalls applications and controls their operation (force quit)
- **Running services** – lists and manages currently running services
- **Manage packages** – lists dictionaries and text-to-speech packages, installed on a system.
- **Storage use**
- **Battery use**

## Accounts & sync

- **Background data** – allows applications to sync, send, and receive data at any time
- **Auto-sync** – allows applications to synchronize automatically
- **Add account** – adds an email account

## Privacy

- **Factory data reset** – returns the system to its initial state.

The following information will be erased:

- Your Google account settings
- System data and settings
- Downloaded and installed applications
- Action will not affect system software and data on SD card.

## Language & keyboard

- **Select locale** – changes the interface language; keyboard layout. Date, time and numbers formats are customized separately
- **Android keyboard**
  - Vibrate on keypress
  - Sound on keypress
  - Auto-capitalization
  - Input languages – select necessary input languages and press 'Return' button
  - Quick fixes
  - Show suggestions

- Auto-complete.
- User dictionary – adds/removes words from user dictionary for spellcheck.

## **Date and time**

- **Automatic**
- **Set date**
- **Select time zone**
- **Set time**
- **Use 24-hour format**
- **Select date format**

## **About device**

Here you can find detailed information about your device:

- **Model number**
- **Firmware version**
- **S/N** – device serial number.

## Customer Support

For detailed information about service centers in your country please visit the official website of PocketBook International: <http://www.pocketbook-int.com>.

## Firmware Update

To update firmware, download new firmware from [PocketBook](#) website. Go to 'Support' section and select 'PocketBook A10' model. Select last version from 'Firmware' section. Download firmware package and save it to microSD card. Then you can update firmware in two ways.

### UPDATING FIRMWARE FROM OPERATING SYSTEM (RECOMMENDED)

1. Go to **Settings > About device > Additional system updates > External microSD card**
2. In the list appeared, select firmware package you want to install and press 'Yes'
3. Your device will reboot and firmware installation will start

### UPDATING FIRMWARE USING ANDROID RECOVERY UTILITY

1. Turn off the device completely
2. Connect the device to power supply using the charger to avoid problems caused by battery discharge during update process
3. Press and hold **Volume +** and **On/Off** buttons simultaneously
4. After startup logo appears, you can release buttons
5. Android system recovery utility menu will be displayed

**6.** Using **Forward** and **Backward** buttons, select 'Apply update from sdcard'. Press **Menu** button to confirm your choice

**7.** Select firmware file and press **Menu** button. Firmware installation process will start

**8.** After installation completed, remove SD card from card reader, select 'Reboot system now' in utility menu and press **Menu** button.

# Compliance with International Standards

The EUT should be supplied by USB port from complied Limited Power Source of personal computer or notebook.

The EUT should be supplied by Adapter from complied Limited Power Source.

**AC Power:**

**Manufacturer:** Huntkey

**Model:** HKA00905015-ZC(Z can be 1,2,3,4,C,E)

**Rated output voltage:** DC 5V 1.5A

**Important:** Changes or modifications to this product not authorized could void the EMC and wireless compliance and negate your authority to operate the product. This product has demonstrated EMC compliance under conditions that included the use of compliant peripheral devices and shielded cables between system components. It is important that you use compliant peripheral devices and shielded cables between system components to reduce the possibility of causing interference to radios, televisions, and other electronic devices.

## FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The device was tested and complies to measurement standards and procedures specified in FCC OET Bulletin 65, Supplement C



## European Community Compliance Statement

**This equipment is marked with the 0984 symbol and can be used throughout the European community.**

This indicates compliance with the R&TTE Directive 1999/5/EC and meets the relevant parts of following technical specifications:

EN 300 328 – Electromagnetic compatibility and Radio spectrum Matters (ERM); Wideband Transmission Systems; Data transport equipment operating in the 2.4 GHz ISM band and using wide band modulation techniques; Harmonized EN covering essential requirements under article 3.2 of the R&TTE Directive

EN 301 489-1 - Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements

EN 301 489-17 - Electromagnetic compatibility and Radio spectrum Matters (ERM); EMC standard for radio equipment and services; Part 17: Specific conditions for 2.4 GHz wideband transmission systems and 5 GHz high performance RLAN equipment

EN 60950-1- Information technology equipment - Safety - Part 1: General requirements

EN 62311: 2008 - Assessment of electronic and electrical equipment related to human exposure restrictions for electromagnetic fields (0 Hz-300 GHz)

### **Marking by the symbol indicates that usage restrictions apply.**

France - 2.4GHz for Metropolitan France:

In all Metropolitan departments, wireless LAN frequencies can be used under the following conditions, either for public or private use:

Indoor use: maximum power (EIRP\*) of 100 mW for the entire 2400-2483.5 MHz frequency band



Outdoor use: maximum power (EIRP\*) of 100 mW for the 2400-2454 MHz band and with maximum power (EIRP\*) of 10 mW for the 2454-2483 MHz band

**Certification information (SAR) The device meets guidelines for exposure to radio waves**

Your device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The exposure guidelines for devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands.

This equipment complies with the European Council Recommendation of 12 July 1999 on the Limitation of Exposure of the General Public to Electromagnetic Fields [1999/519/EC].