

Overview



Your Home screen may look different if you rearrange its icons.

Accessories



DC charger



Soft jacket



Velocity Micro Electronics, Inc.
7510 Whitepine Road, Richmond, VA 23237
www.vmeonline.com

Cruz Tablet One Year Limited Warranty

Cruz Tablet obligations for this hardware product are limited to the terms forth herein. Cruz Tablet warrants this Cruz Tablet-branded hardware product against defects in materials and workmanship under normal use for a period of ONE (1) YEAR from the date of retail purchase by the original end-user purchaser ("Warranty Period"). If a hardware defect arises and a valid claim is received within the Warranty Period, at its option and to the extent permitted by law.

3A2518M00-G5T-G V1.0

Quick Start Guide



CRUZTM
t a b l e t

Cruz Tablet is a multi-task, touch screen tablet providing unlimited possibilities.

Cruz through ebooks, videos, games, and the Web, with one touch. With a user friendly Android™ interface, the Cruz Tablet contains all the functions you need for home or on the move. Explore this quick user guide to learn more.



Benefit of using Cruz Tablet

The Cruz Tablet is a portable, high performance touch screen tablet running the Android™ 2.0 interface. With a light weight and slim look, the Cruz Tablet is the perfect tool to streamline your operations for business, family and entertainment.


The Cruz Tablet has full Web browser support and provides a richer experience than traditional E-book readers. The Cruz Tablet provides a high quality audio and crisp bright screen for you to enjoy online shopping, movies, social media and E-books. It accesses to over 700,000 in store via its built E-book library portal application. The Cruz Tablet has an open portal for downloading apps, magazines, and videos from a broad array of content providers. It comes with upgrading storage of SD card, and up to 10 hours battery back-up, so you are able to enjoy continuous browsing.

The powerful CPU and large RAM capacity support the multi media touch screen performance of the Cruz Tablet and allow you to enjoy superfast data speeds on Wi-Fi connections.

Features and Applications

- Android™ Interface
- Online Book Store
- Video Playback
- Browser
- Email
- Photo Gallery
- Music
- OfficeSuite® Viewer
- ASTRO® File Manager
- eBuddy® Mobile Messenger
- Twidroyd®
- Dictionary
- Alarm Clock
- Calculator

Icons

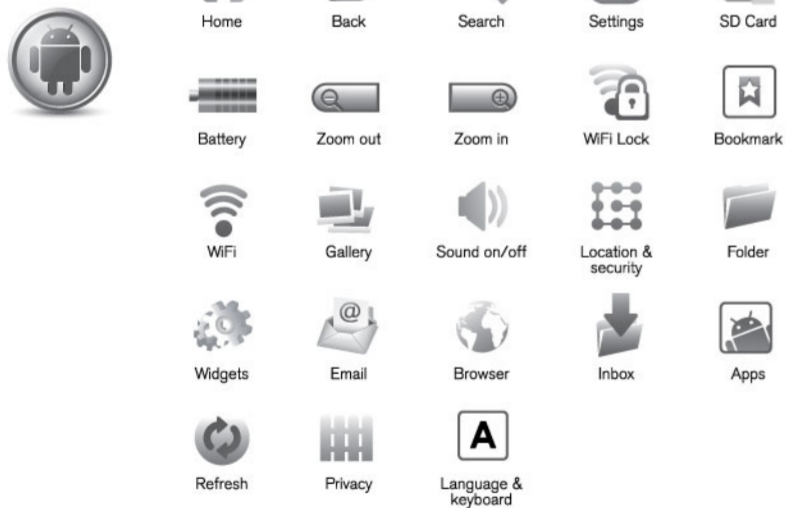

Wi-Fi

Activating Wi-Fi
Tap the screen, tap Settings icon shown in the menu. Cruz Tablet uses local Wi-Fi networks to connect to the Internet.

Join an existing network
Tap Turn Wi-Fi On or Off, wait a moment as Cruz Tablet detects networks in range, then select a network. If necessary, enter a password and tap Join. (Networks that require a password appear with a lock icon.)

Once you join a Wi-Fi network, Cruz Tablet automatically joins it whenever the network is in range. If more than one previous network is in range, Cruz Tablet joins the one most recently used. When Cruz Tablet joins a Wi-Fi network, the Wi-Fi icon in the screen shows at the top of the screen.

Create a new network
Choose Wi-Fi, then tap Turn Networks On or Off. Cruz Tablet displays a list of all the available Wi-Fi networks that you can choose from.

Turn Wi-Fi off to save power
If you know you're not going to be using Wi-Fi, you can turn it off to save battery. Go to Settings, tap Turn Wi-Fi On or Off.

Email

Email Set Up
Double-click the Email icon shown in the menu. Type in your email address and password and follow the email setup instructions.

Sending Email

- 1 Tap the Email icon shown in the menu.
- 2 Type a name or email address in the To field, or tap [+] to add a name from your contacts.
- 3 Tap Cc/Bcc/From if you want to copy the message to others, or change the account you send the message from. If you have more than one email account, you can tap the From field to change the account you're sending to.
- 4 Enter a subject, then your message.
- 5 Tap Send.

Adding photos	Choose a photo from the Gallery then tap Email Photo. You can also copy and paste photos. The photo is sent using your default email account.
Save a draft of a message	Tap Save. The message is saved in the drafts mailbox.
Reply to a message	Open a message and tap reply to the sender, type your message, then tap Send. Files or images attached to the initial message aren't sent back.
Forward a message	Open a message and tap Forward. Add one or more email addresses, type your message, and then tap Send. When you forward a message, you can include the files or images attached to the original message.
Unread messages	Tap a mailbox to see its messages. Unread messages are shown in red. When you open a mailbox, Mail loads the number of most recent messages specified in your Mail settings, if the messages haven't already been loaded automatically.
Read a message	Tap a mailbox, then tap a message. Within a message, tap or see the next or previous message. Double-tap the area to zoom in or zoom out.
Follow a link	Tap the link in blue, it can take you to a webpage, open a map, or photos. To return to Mail, press the Home button and tap Mail.
Save an attached photo to Gallery	Tap the photo, then tap Save Image.

ROM Upgrade

- 1 Insert SD card with updated software into Cruz Tablet at the top right hand corner.
- 2 Press volume-up key and hold, then press power key and hold for 3-5 seconds.
- 3 The Cruz Tablet screen shows boot-up logo **CRUZ**.
- 4 When the Cruz Tablet screen shows icon, it means SD card is updating.
- 5 After SD card updating, Cruz Tablet will re-bootup.

Battery

Battery Model
Cruz Tablet has an internal rechargeable battery. The battery icon in the upper-right corner of the status bar shows the battery level or charging status.

Battery Model
Cruz Tablet is using a Switching Adapter with the input of 100-240V, output of 5V. Keep your Cruz Tablet out of the Sun. Heat will degrade your battery's performance.

Care Instructions

Warning
Failure to follow these safety instructions could result in fire, electric shock, or other injury or damage.

Carrying and Handling Cruz Tablet
Cruz Tablet contains sensitive components. Do not drop, disassemble, open, crush, bend, puncture, shred, paint, or insert foreign objects into Cruz Tablet.

Glass Parts Handling
The outside cover of the Cruz Tablet screen is made of glass. This glass could break if Cruz Tablet is dropped on a hard surface or receives a substantial impact. If the glass chips or cracks, do not touch or attempt to remove the broken glass, contact Velocity Micro customer care. If the Cruz Tablet cracks due to misuse or abuse - it is not covered under the warranty.

Avoiding Water and Wetness
Do not use in rain, or near an open water source. If the Cruz Tablet gets wet, unplug all cables, and turn off before cleaning, and allow to dry before turning on again. Do not attempt to dry with external heat, such as microwave, oven, or hair dryer.

Repairing or Modifying Cruz Tablet
Never attempt to repair or modify Cruz Tablet yourself. Disassembling Cruz Tablet may cause damage that is not covered under the warranty.

Choking Hazards
Cruz Tablet contain small parts, which may present a choking hazard to children. Keep Cruz Tablet and its accessories away from children.

Keeping Cruz Tablet Within Acceptable Temperatures
Operate Cruz Tablet in a place where the temperature is between 0° and 35°C (32° to 95°F). Low or high temperature conditions might temporarily shorten battery life or cause Cruz Tablet to temporarily stop working properly.

FCC Authentication

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: the manufacturer is not responsible for any radio or tv interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Note: this equipment has been tested and found to comply with the limits for a class b digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1 Reorient or relocate the receiving antenna.
- 2 Increase the separation between the equipment and receiver.
- 3 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4 Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device is designed for hand-held operation only. The antenna(s) used for this transmitter must not be collocated or operating in conjunction with any other antenna or transmitter within a host device, except in accordance with FCC multi-transmitter product procedures.

Learn more

For complete instructions and important safety information, or to download a full users manual, please visit www.vmeonline.com. Service hotline: 800-296-4312