



FCC Authentication

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: the manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Note: this equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- 1 Reorient or relocate the receiving antenna.
- 2 Increase the separation between the equipment and receiver.
- 3 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4 Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device is designed for hand-held operation only. The antenna(s) used for this transmitter must not be collocated or operating in conjunction with any other antenna or transmitter within a host device, except in accordance with FCC multi-transmitter product procedures.

Overview

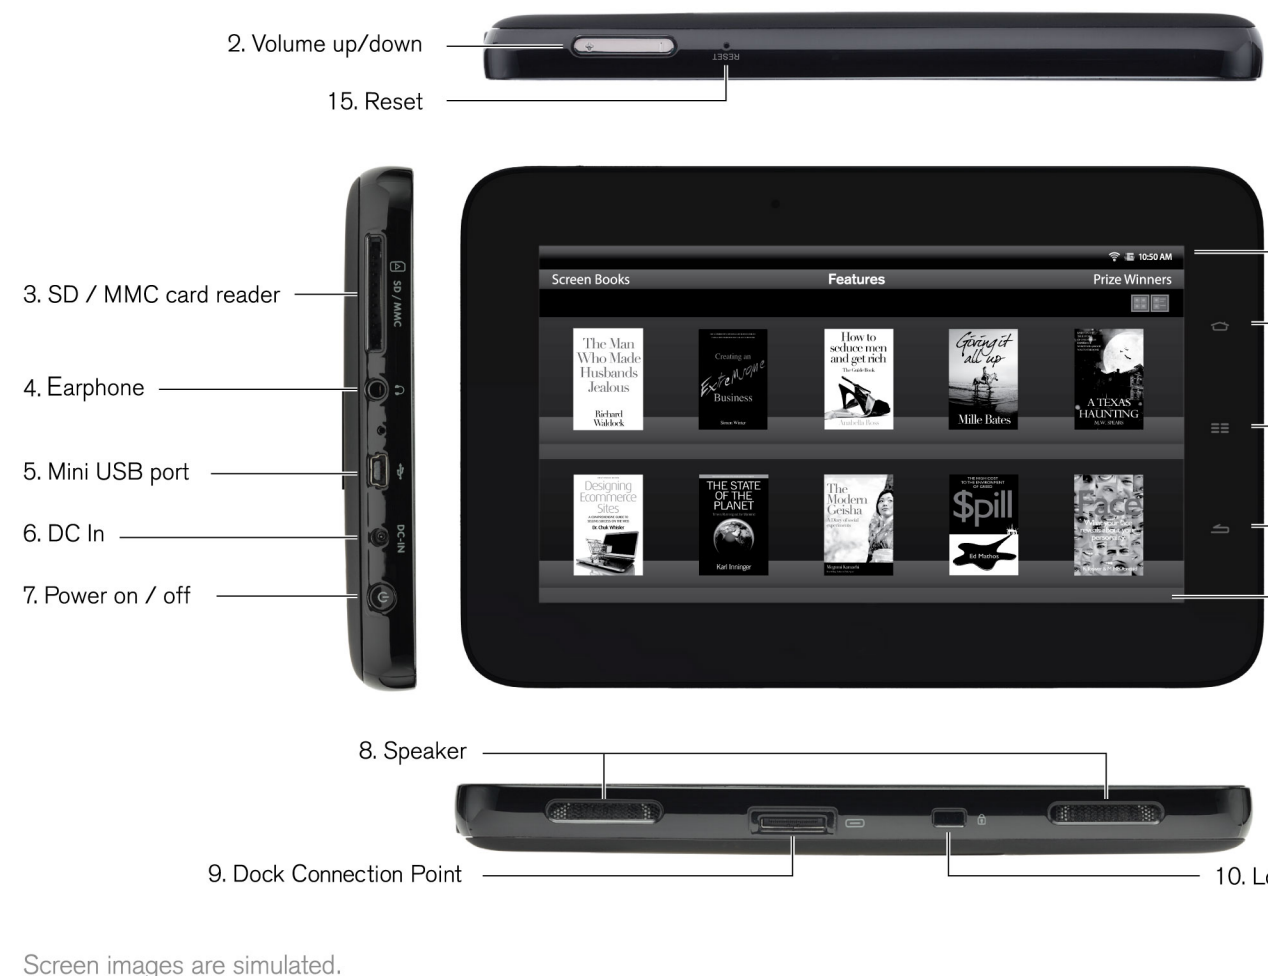

Accessories



USB cable




DC Power



Soft protective case



Icons

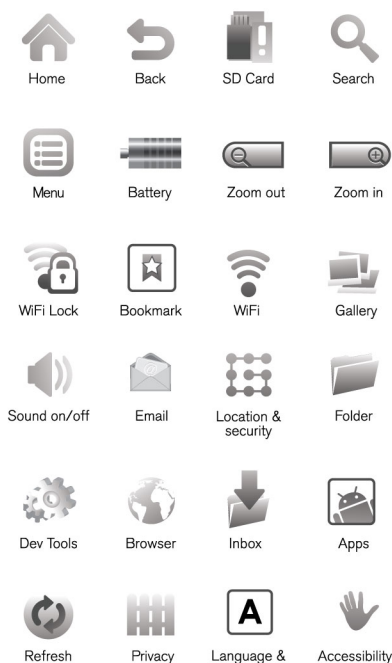

Home Screen



Note: your Home screen may appear different from the illustration on Page 2 if you have rearranged the icons. To reposition an icon, press and hold it down for a few seconds, then drag to its new location.

The Home screen displays:

- Google search bar
- Pull-out tab for Functions screen, which gives access to various functions enabling you to configure and personalize your Tablet.
- Icons -- to open any application, just tap its icon

Choose Wi-Fi, then tap Turn Networks On or Off. Cruz Tablet displays a list of all the available Wi-Fi networks that you can choose from.

Control Techniques



- To activate an application, tap the associated icon
- To scroll, slide your finger along the screen
- To move to the next in a series of screens (e.g. when viewing photos in the Gallery), tap the right side of the screen. To return to the previous screen, tap the left side of the screen.

Battery



Connect your Tablet to the supplied battery charger and ensure that the battery is fully charged before first use. The status bar indicates the battery charge level at top right – recharge the battery periodically whenever it runs low.

Setting Up



When first using your Cruz Tablet, use the Settings function to set the correct time and date, select your preferred language, choose between 12 and 24 hour time display, and personalize other features of your Tablet to your requirements.

On Screen Keyboard



The onscreen keyboard will pop up whenever an application that needs it (e.g. Google search) is selected.

SD Card



The built-in slot in your Tablet accepts a standard SD or HSDS card to provide additional data storage or to transfer data between your Tablet and other devices. For example, you can insert the card from your digital camera to view your photos onscreen.

Simply insert the card in the slot at left and it will be recognized automatically by your Tablet. You may need to wait a few minutes while the Tablet scans the contents of the card.

Email



Email Set Up

Double-click the Email icon shown in the menu. Type in your email address and password and follow the email setup instructions.

Sending Email

Tap the Email icon shown in the menu.

Type a name or email address in the To field, or tap [+] to add a name from your contacts.

Tap Cc/ Bcc/ From if you want to copy the message to others, or change the account you send the message from. If you have more than one email account, you can tap the From field to change the account you're sending to. Enter a subject, then your message.

Tap Send.

Adding photos	Choose a photo from the Gallery then tap Email Photo. You can also copy and paste photos. The photo is sent using your default email account.
Save a draft of a message	Tap Save. The message is saved in the drafts mailbox.
Reply to a message	Open a message and tap reply to the sender, type your message, then tap Send. Files or images attached to the initial message aren't sent back.
Forward a message	Open a message and tap Forward. Add one or more email addresses, type your message, and then tap Send. When you forward a message, you can include the files or images attached to the original message.
Share contact information	In Contacts, choose a contact, then tap Share. Add one or more email addresses, type your message, then tap Send.
Unread messages	Tap a mailbox to see its messages. Unread messages are shown in red. When you open a mailbox, Mail loads the number of most recent messages specified in your Mail settings, if the messages haven't already been loaded automatically.
Read a message	Tap a mailbox, then tap a message. Within a message, tap or to see the next or previous message. Double-tap the area to zoom in or zoom out.
Follow a link	Tap the link in blue, it can take you to a webpage, open a map, or photos. To return to Mail, press the Home button and tap Mail.
Save an attached photo to Gallery	Tap the photo, then tap Save Image.
Add an email recipient to contacts list	Tap the message and tap Details to see the recipients. Then tap a name or email address and tap Create New Contact or Add to Contact.

Wi-Fi



Activating Wi-Fi
In order to use Tablet functions that require connection to the Internet, you will need to connect to a Wi-Fi network. To do this, select Settings, then Wireless & networks.

Join an existing network

Tap Turn Wi-Fi On or Off, wait a moment as Cruz Tablet detects networks in range, then select a network. If necessary, enter a password and tap Join. (Networks that require a password appear with a lock icon.)

Once you join a Wi-Fi network, Cruz Tablet automatically joins it whenever the network is in range. If more than one previous network is in range, Cruz Tablet joins the one most recently used. When Cruz Tablet joins a Wi-Fi network, the Wi-Fi icon in the screen shows at the top of the screen.

Create a new network

Choose Wi-Fi, then tap Turn Networks On or Off. Cruz Tablet displays a list of all the available Wi-Fi networks that you can choose from.

Turn Wi-Fi off to save power

If you know you're not going to be using Wi-Fi, you can turn it off to save battery. Go to Settings, tap Turn Wi-Fi On or Off.

Care Instructions



Warning

Failure to follow these safety instructions could result in fire, electric shock, or other injury or damage.

General Care

Handle your Tablet with care, and do not drop it or subject to shocks. Take particular care not to scratch or break the glass screen. You are advised to keep the Tablet in its soft protective case (supplied) when not in use. Keep the Tablet dry, and do not use it in wet conditions such as in the rain. Do not insert anything into the ports except the appropriate equipment or device.

Cleaning

Your Tablet may be cleaned by wiping gently with a soft, very slightly moist, lint-free cloth. Turn off the Tablet and unplug all attached cables and devices before cleaning. Do not use aerosol sprays or excessively damp cloths which may damage the Tablet by getting moisture in openings. Avoid the use of household cleaning fluids, glass cleaner, or abrasives.

Choking Hazards

Cruz Tablet contain small parts, which may present a choking hazard to children. Keep Cruz Tablet and its accessories away from children. Do not leave the Tablet in direct sunlight.

In Case of Accident or Damage

If your Tablet gets wet, switch it off, unplug all attachments, dry off with a soft towel, and allow it to dry completely before attempting to use it again.

Do not attempt to open or disassemble your Cruz Tablet – this invalidates the Warranty and may be dangerous. In the event of damage or malfunction, take the tablet to your nearest authorized Cruz repair centre.

Left side panel
59.3mmW x 193.5mmH
Black and White

Front panel
293mmW x 193.5mmH
Black and White

Right side panel
59.3mmW x 193.5mmH
Black and White

Back panel
293mmW x 193.5mmH
Black and White